


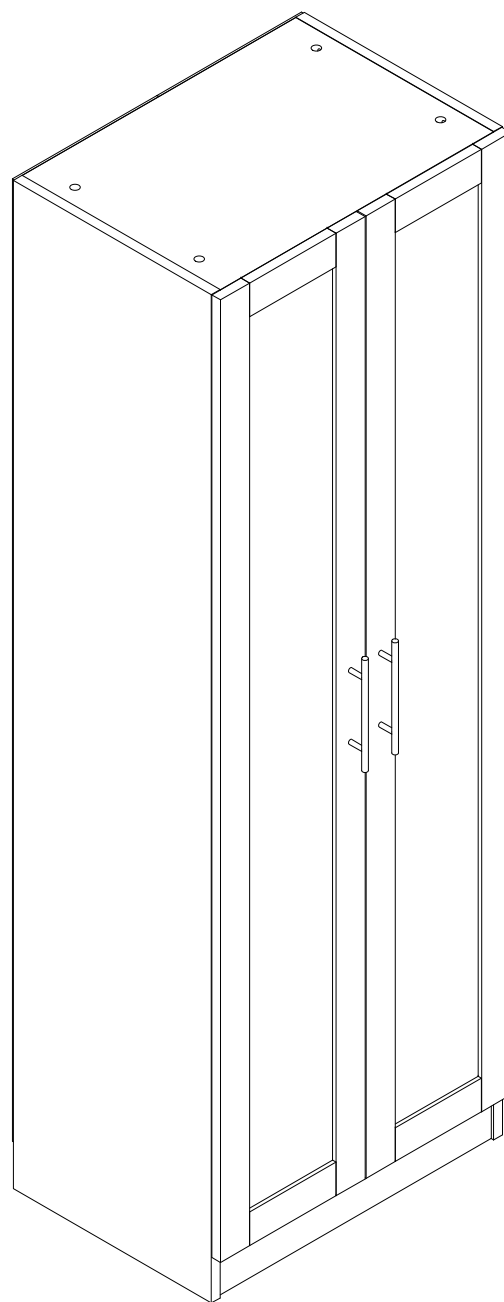
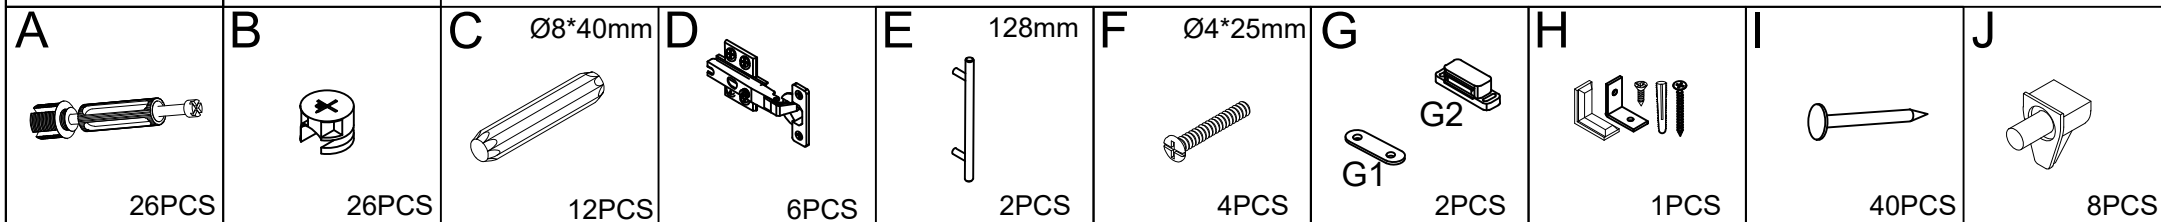
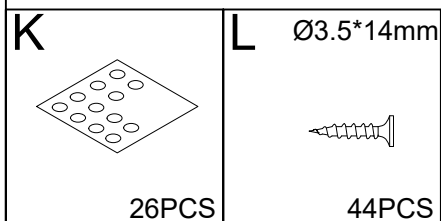
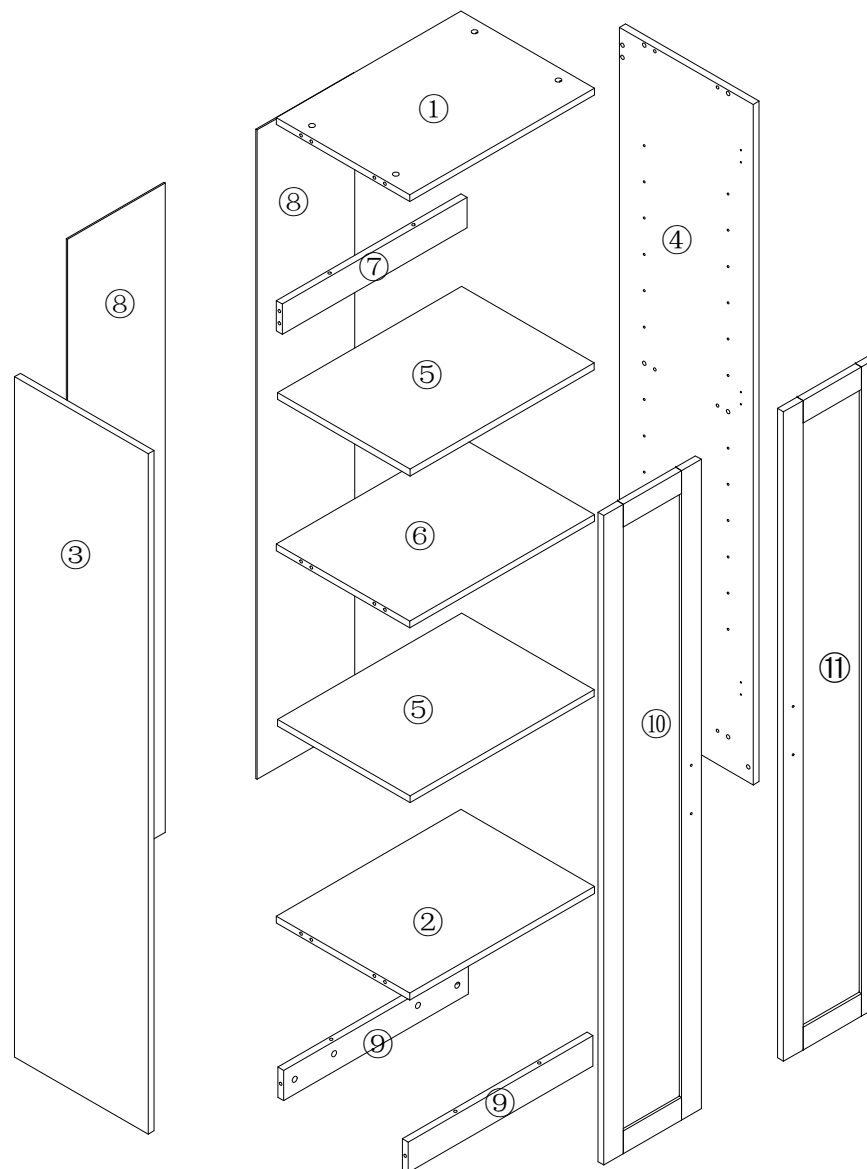
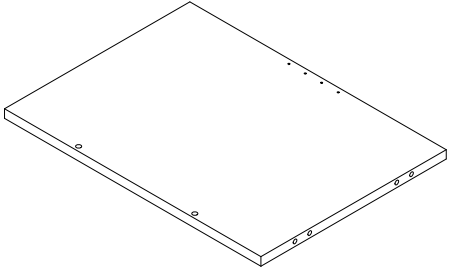
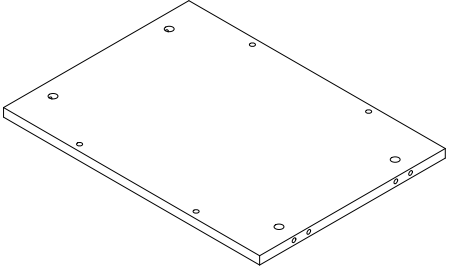
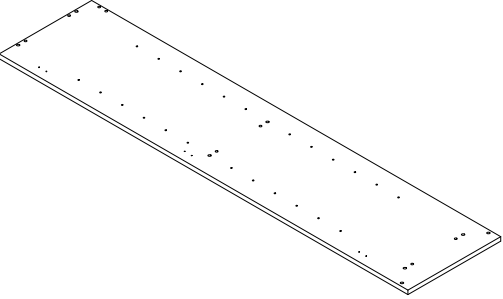
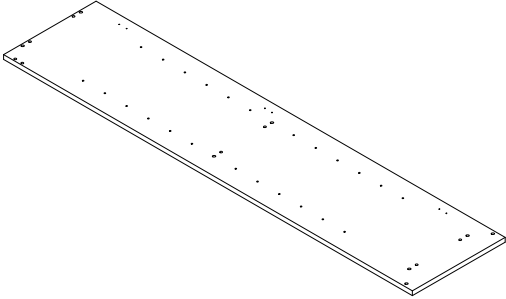
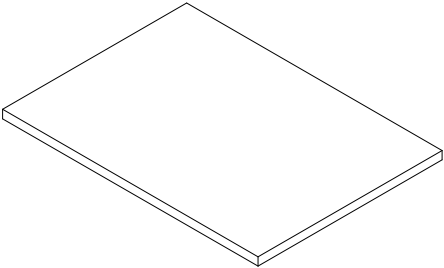
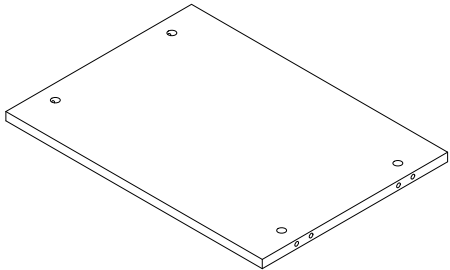
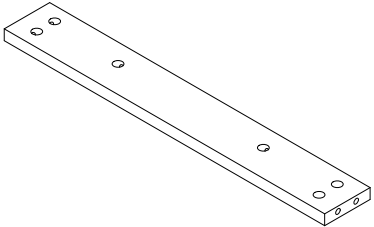
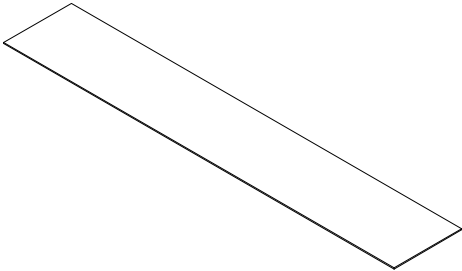


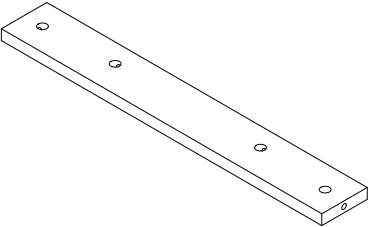

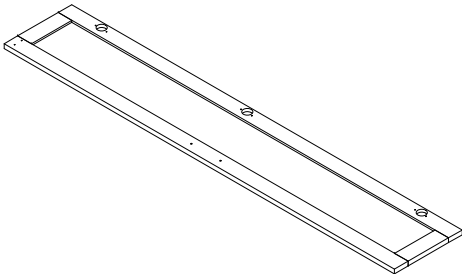


1	564*408	2	564*408	3	1800*408	4	1800*408
	1PCS		1PCS		1PCS		1PCS
5	562*405	6	564*408	7	564*80	8	1718*298
	2PCS		1PCS		1PCS		2PCS
9	564*80	10	1718*298	11	1718*298		
	2PCS		1PCS		1PCS		

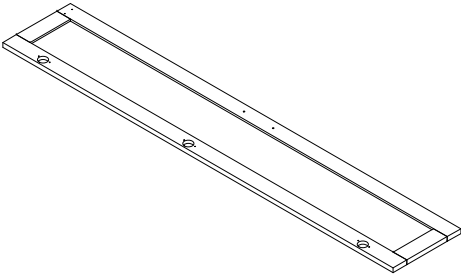


Hardware installation demonstration

NOTE: Please make sure "A" hardware tightened and can't be pulled out!


I

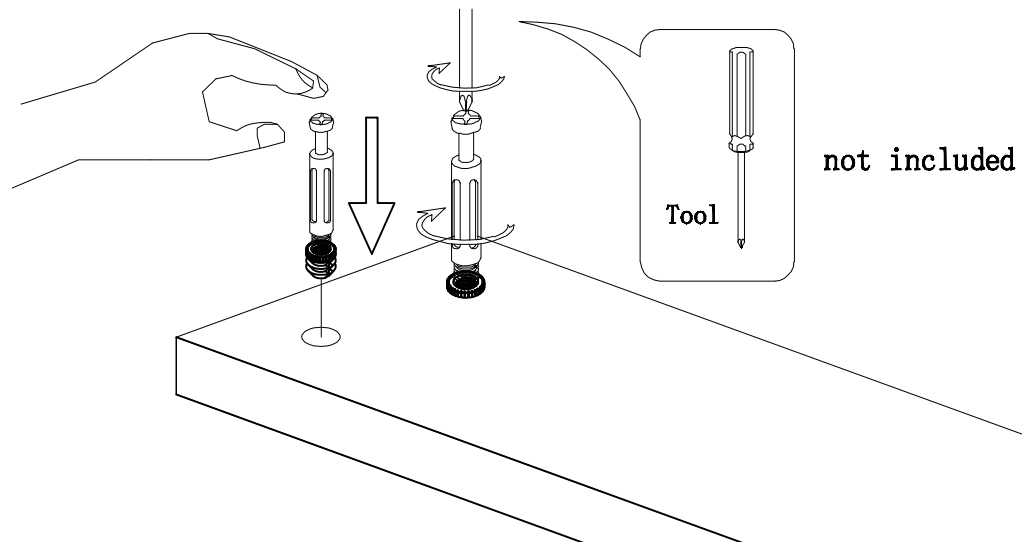


II

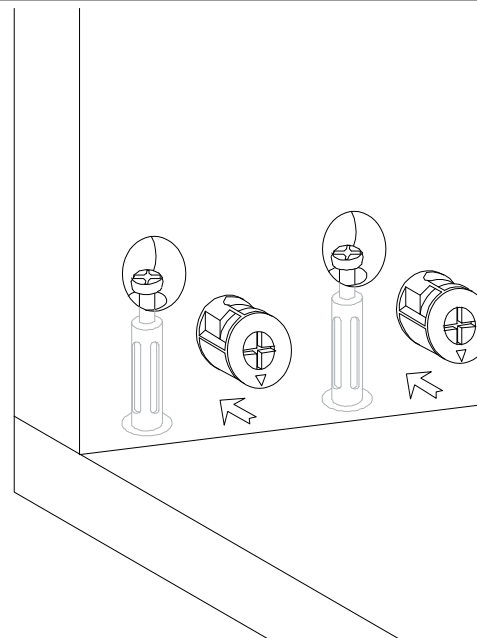

III

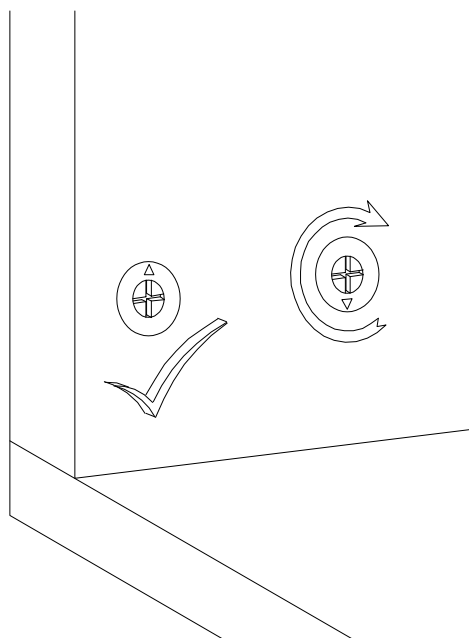


1

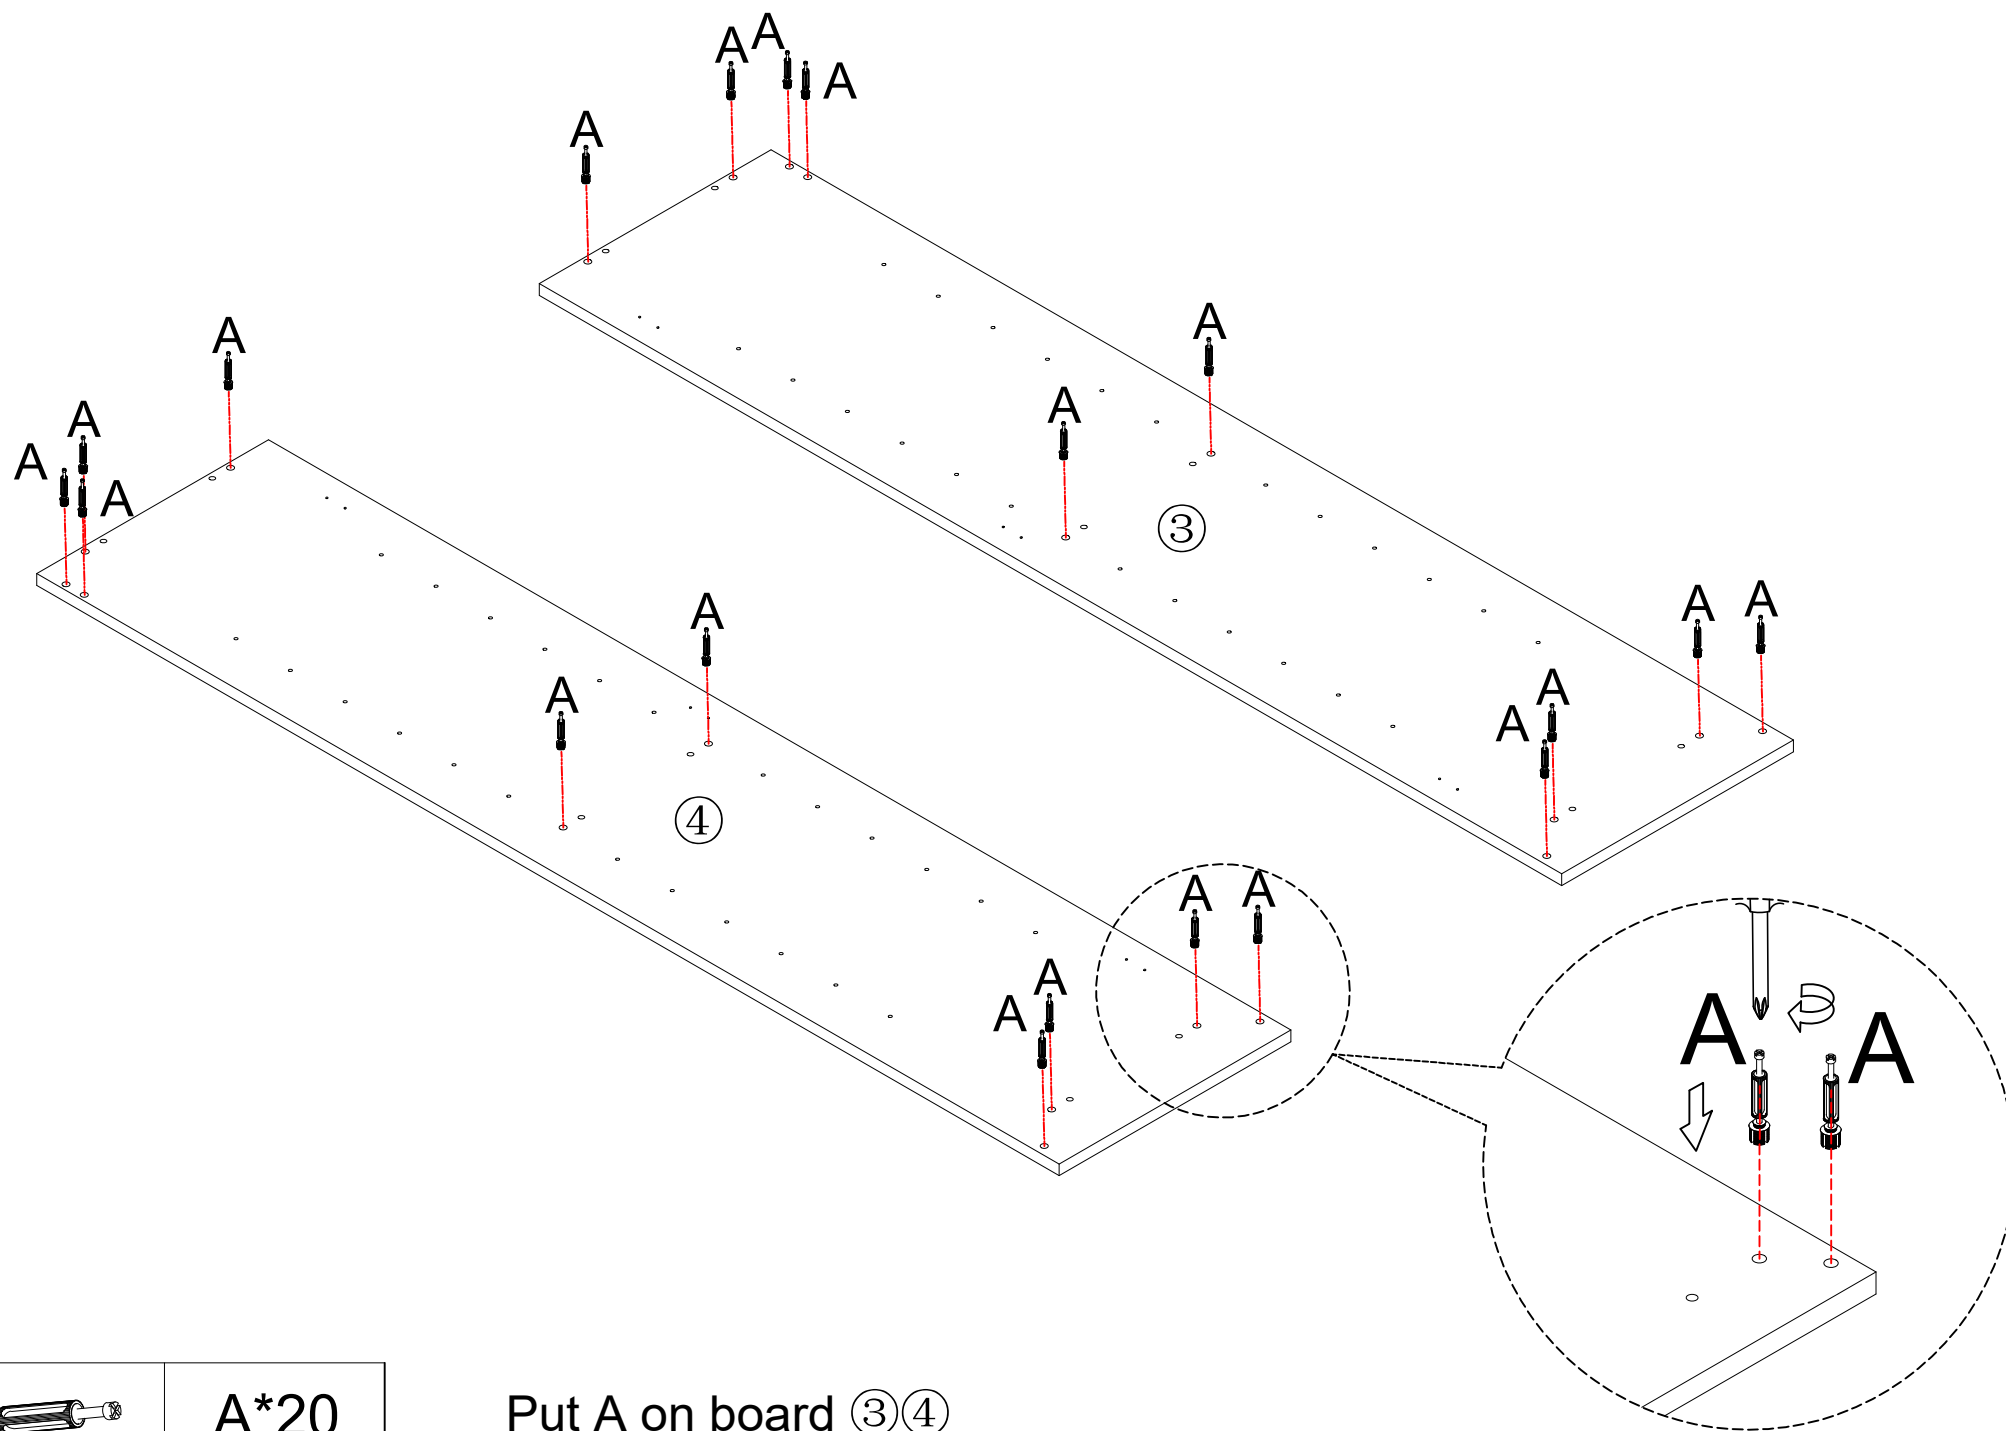

A*20

Put A on board ③④

2

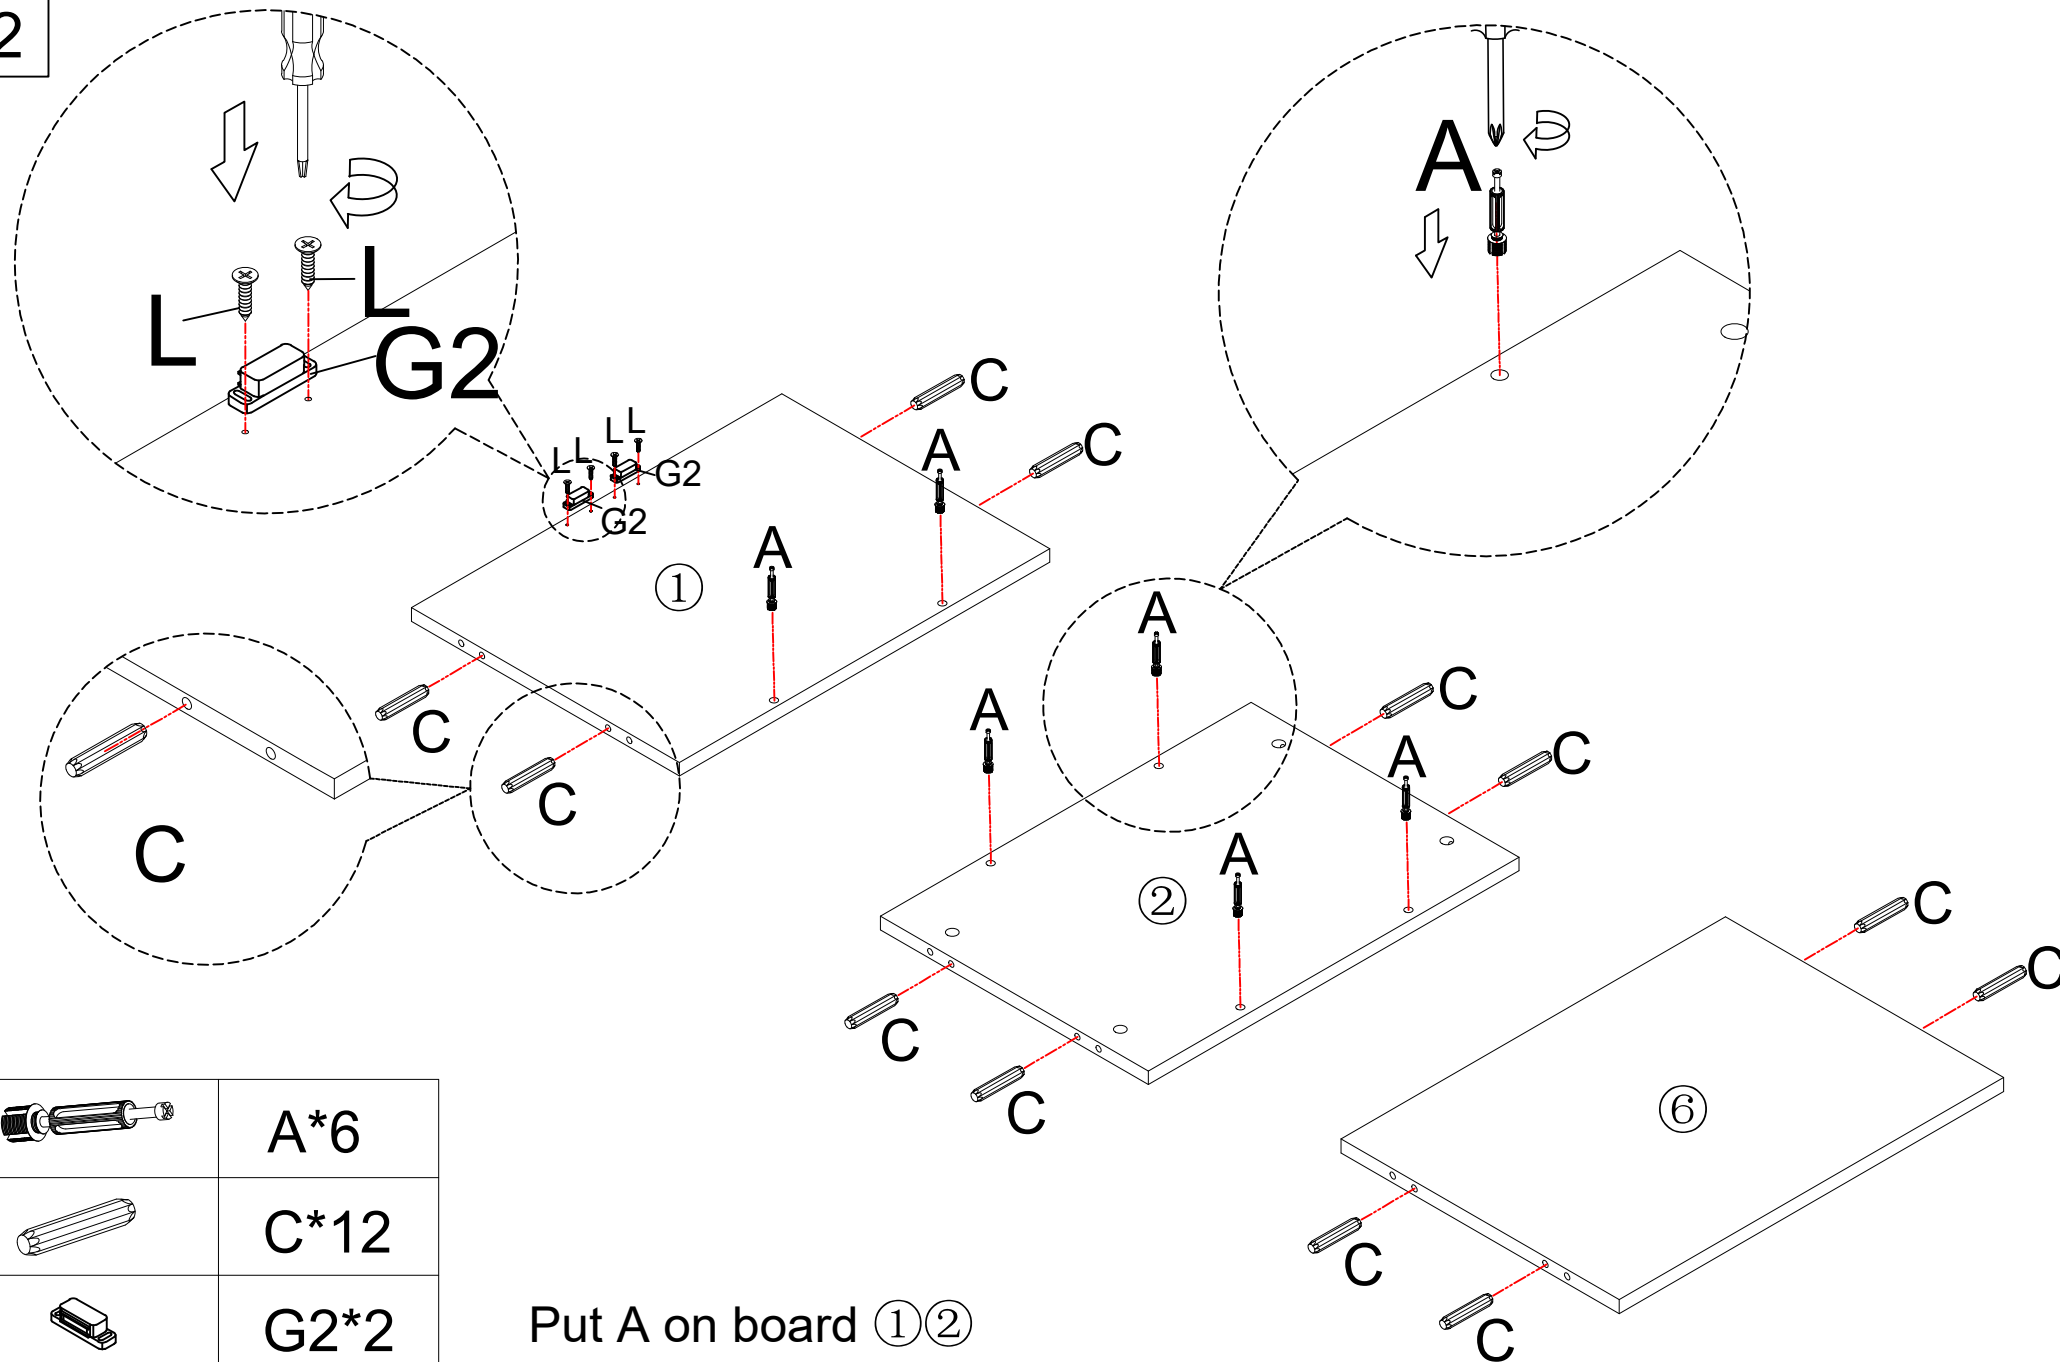

A*6



C*12



G2*2




L*4

Put A on board ①②

Put C on board ①②⑥

3


Make sure the arrow on the screw align to the hole on the side

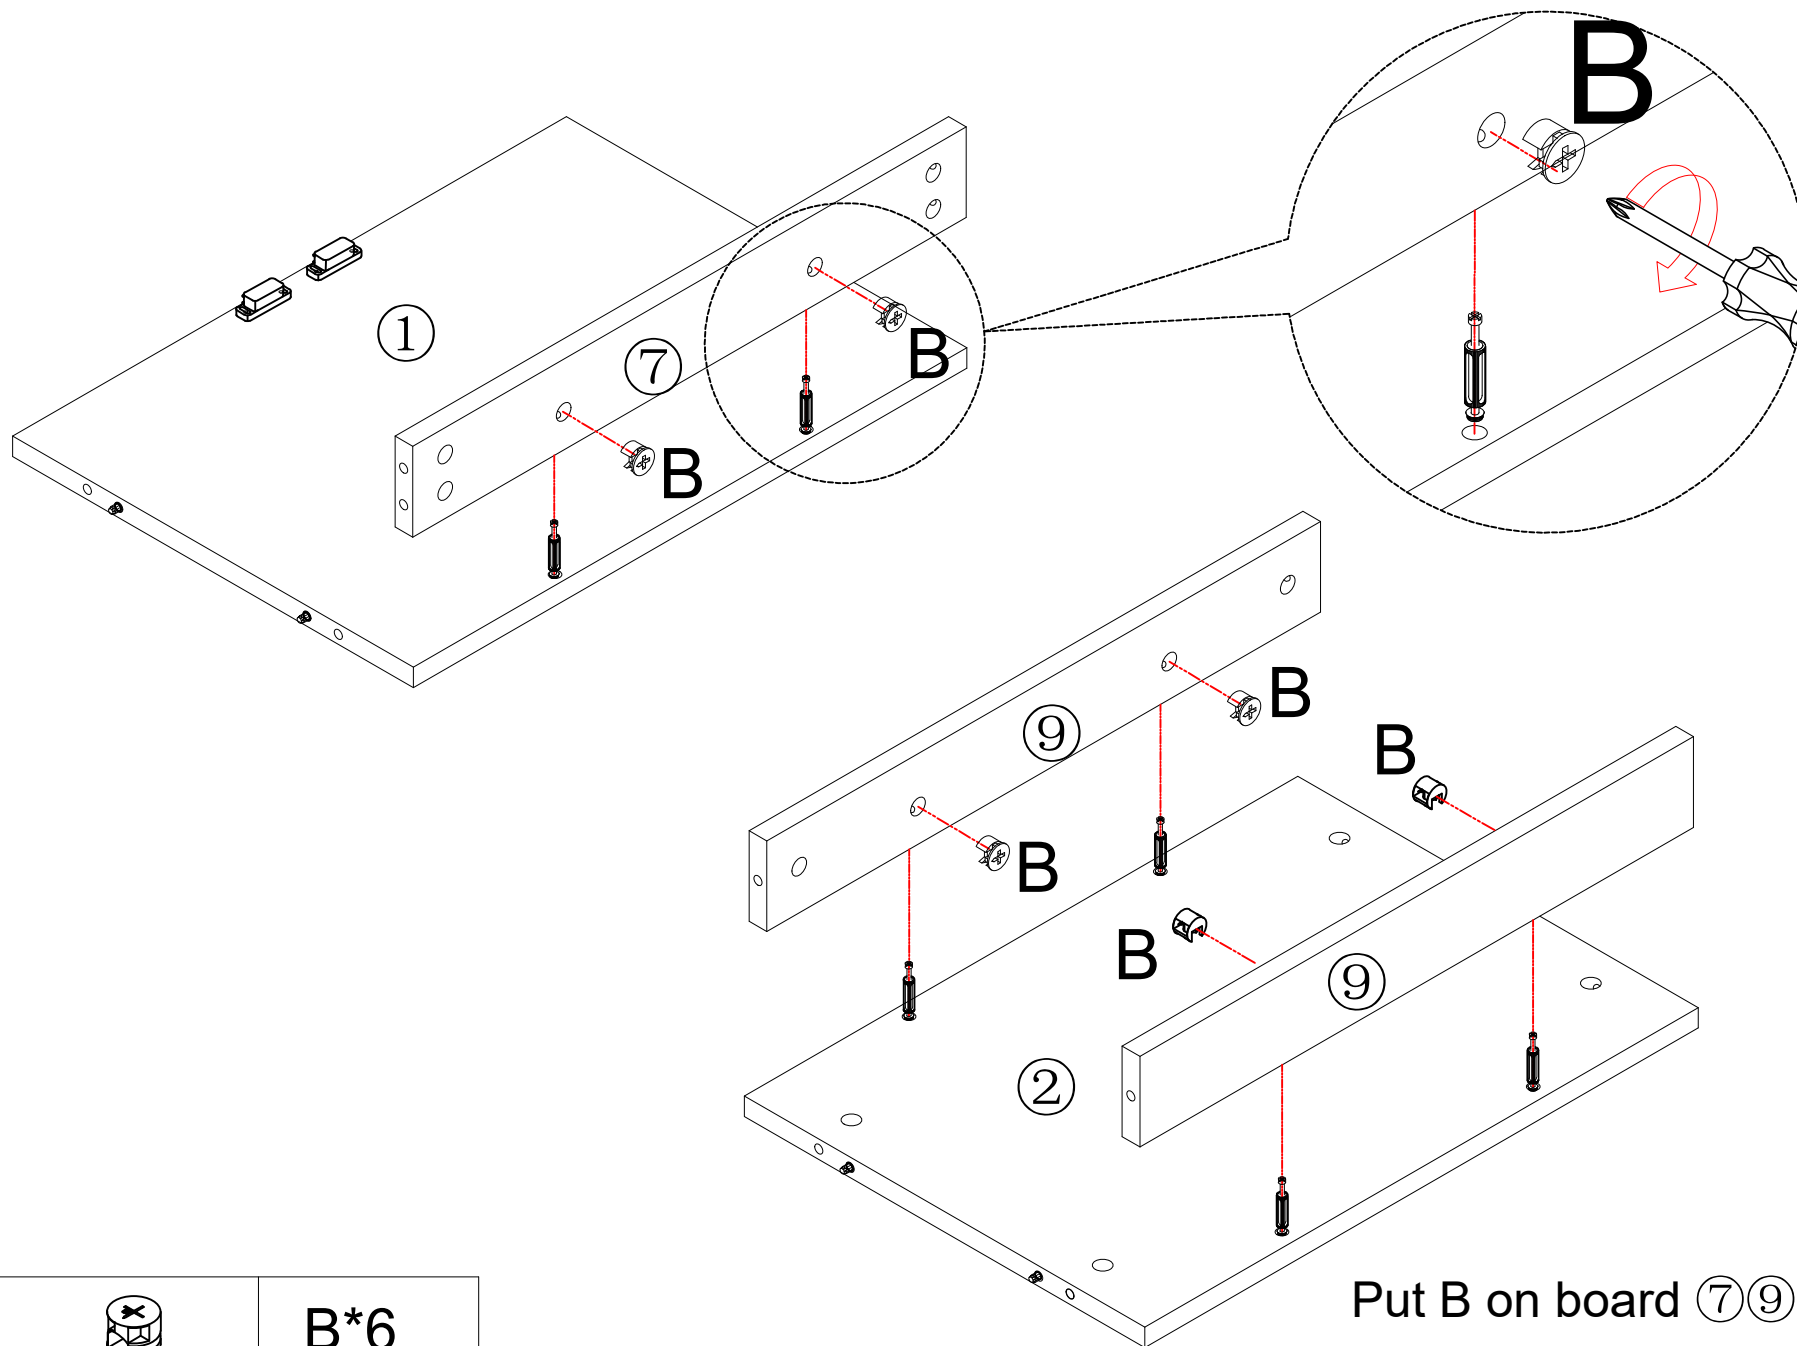

B*6

4

Make sure the arrow on the screw align to the hole on the side

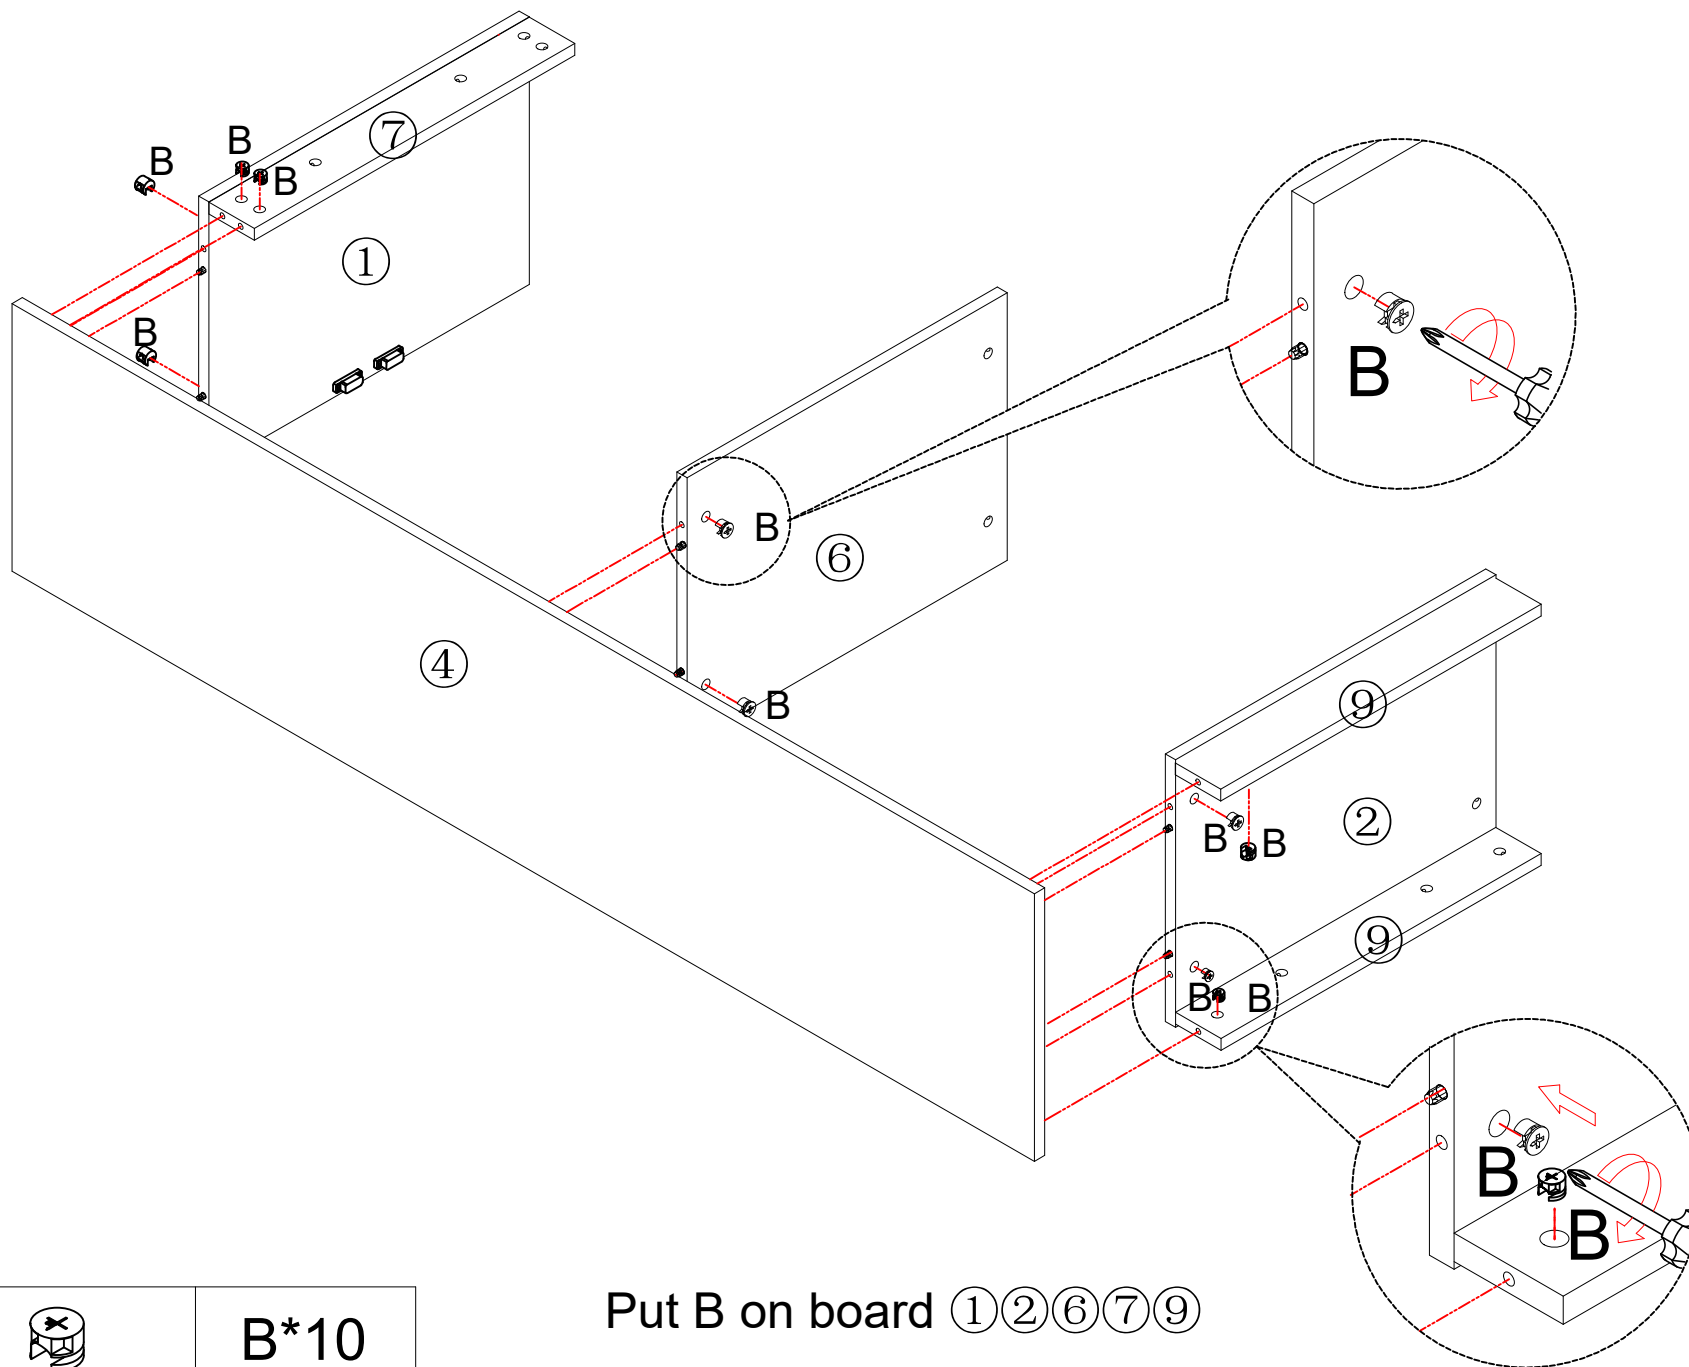


B*10

Put B on board ①②⑥⑦⑨

5


Make sure the arrow on the screw align to the hole on the side

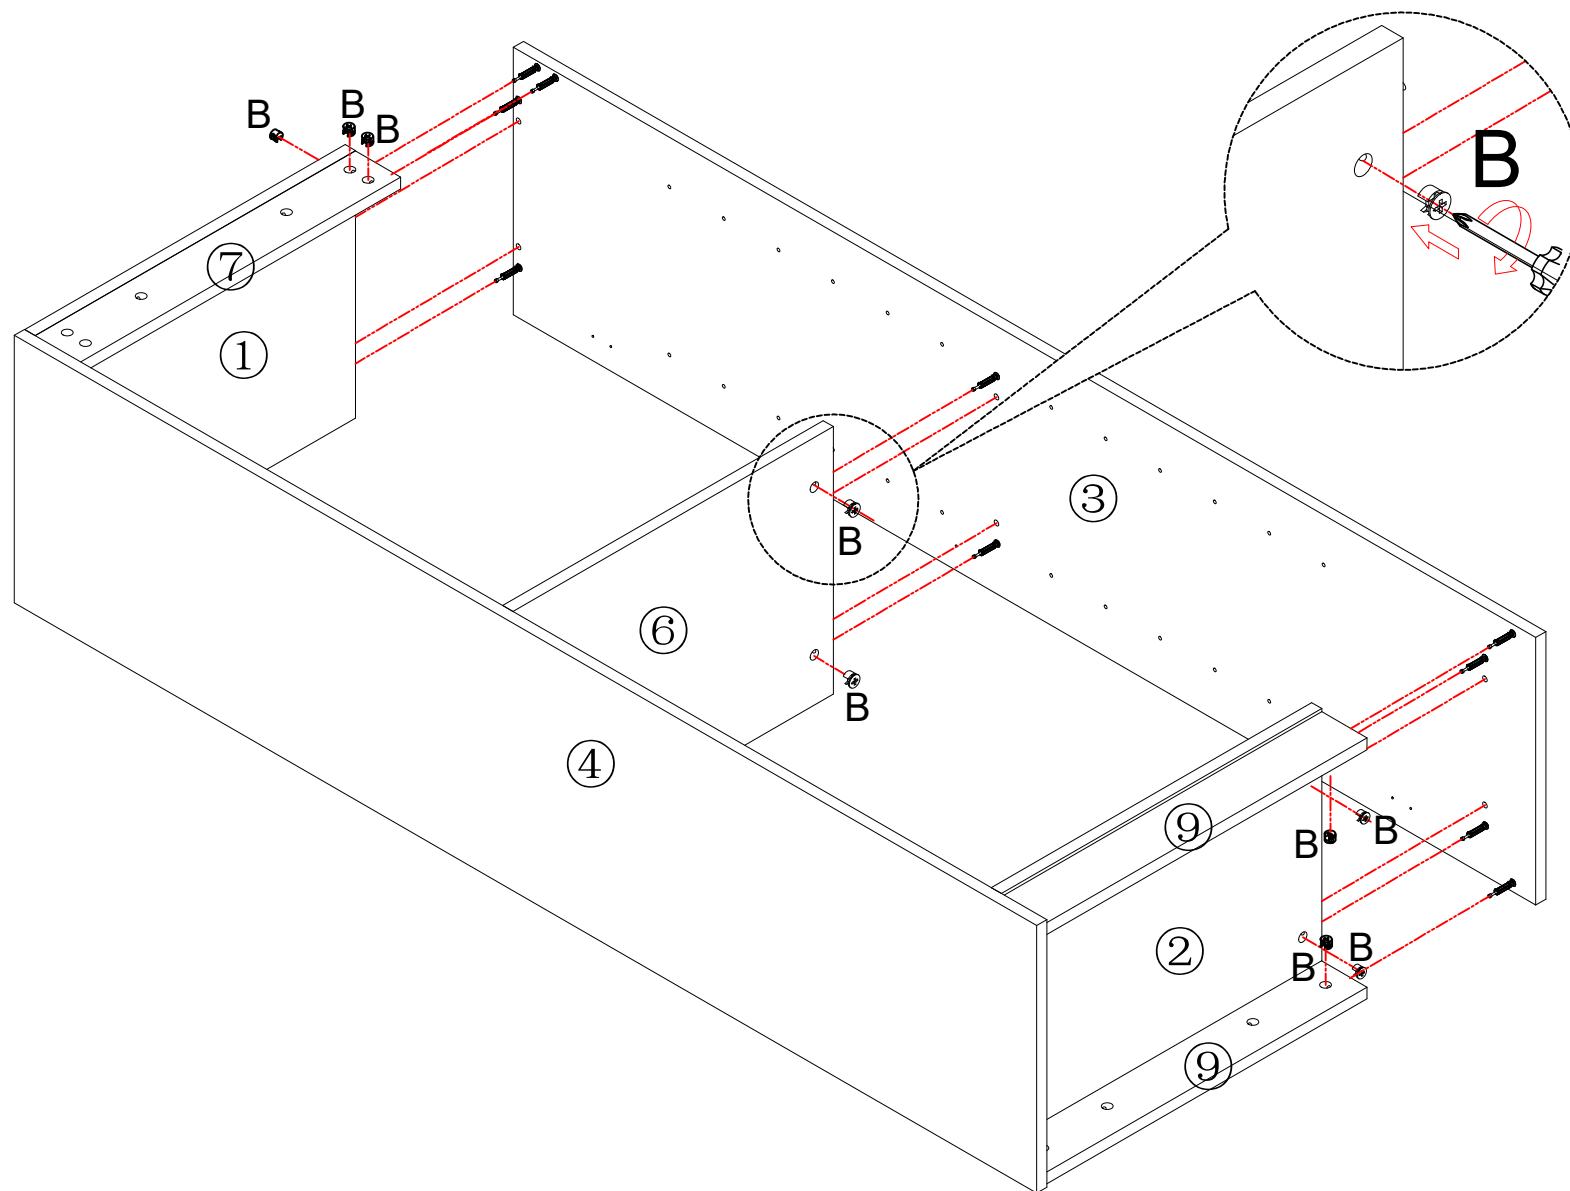

B*10



Put B on board ①②⑥⑦⑨

6

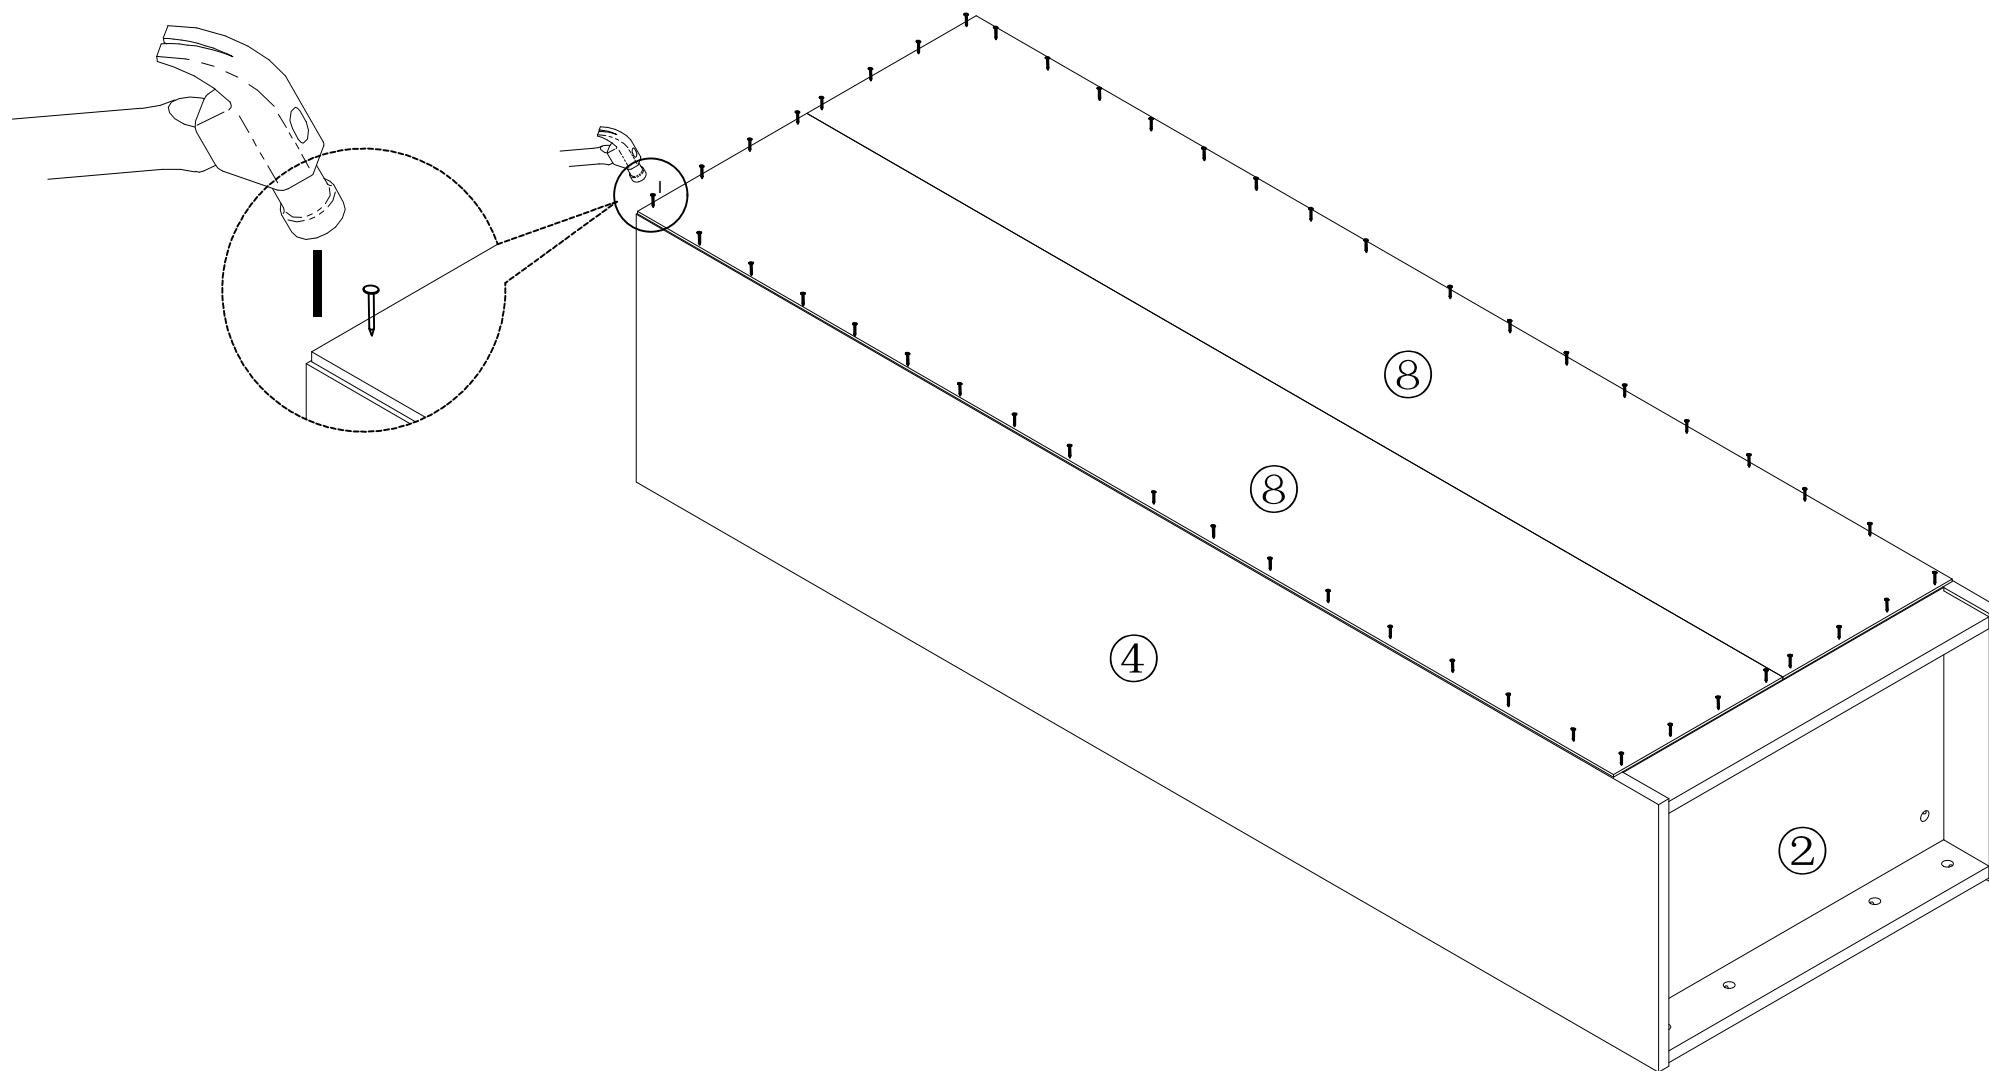

I*40


7

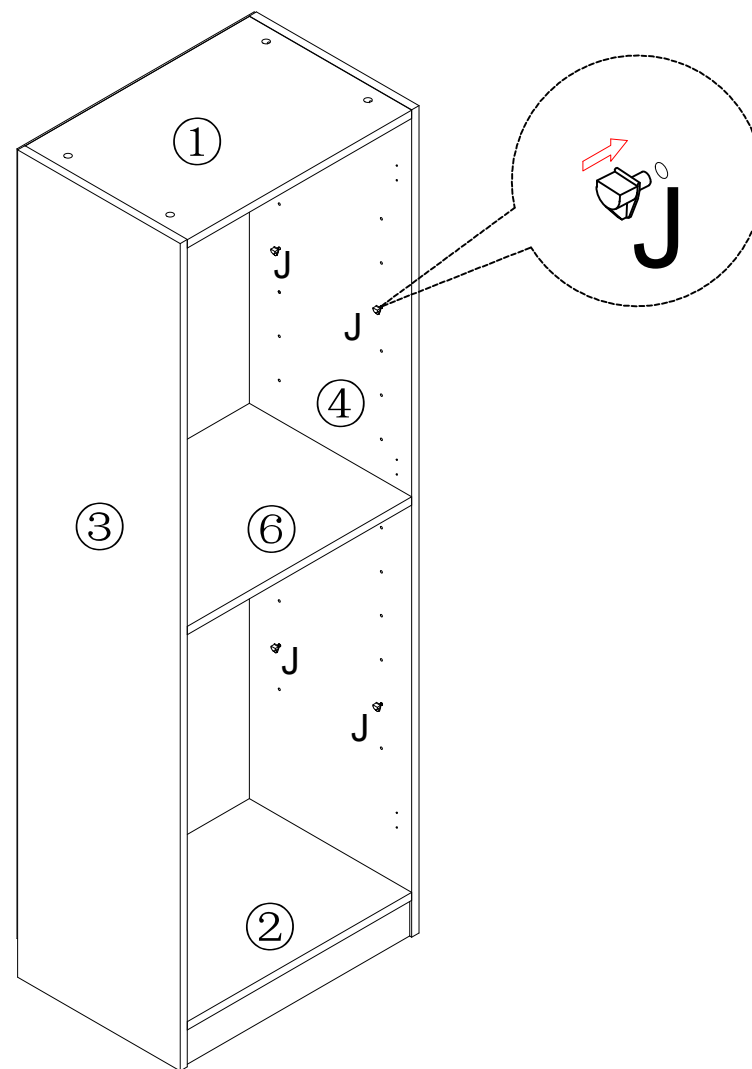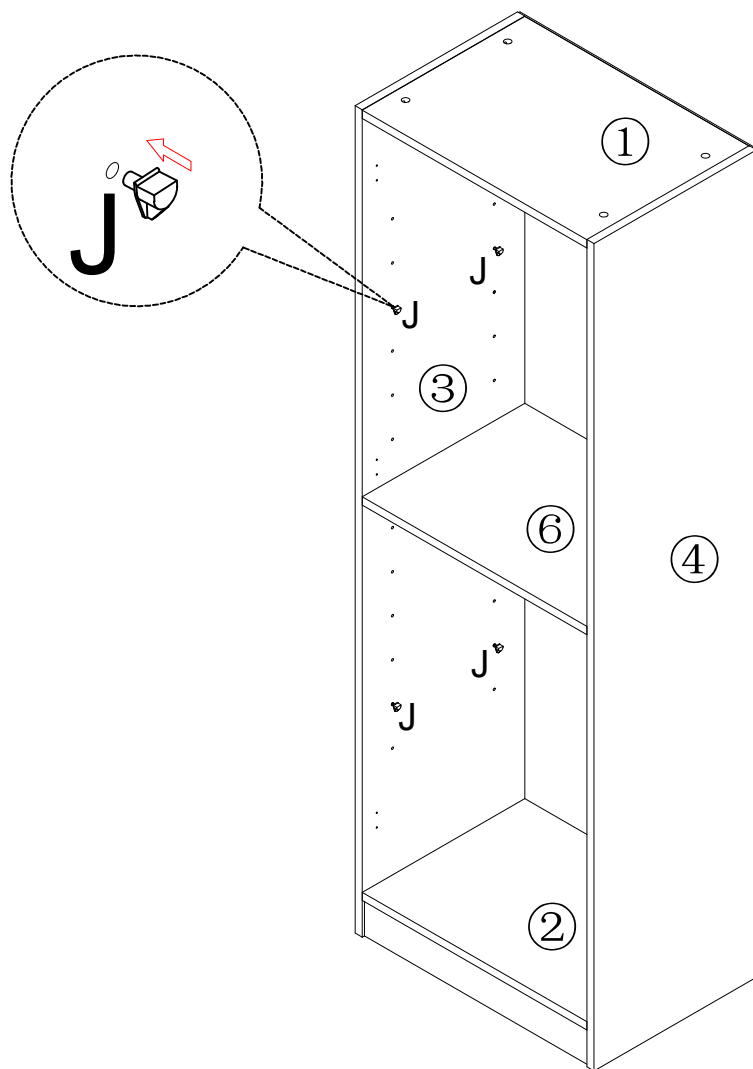


J*8

Put J on board ③④


8

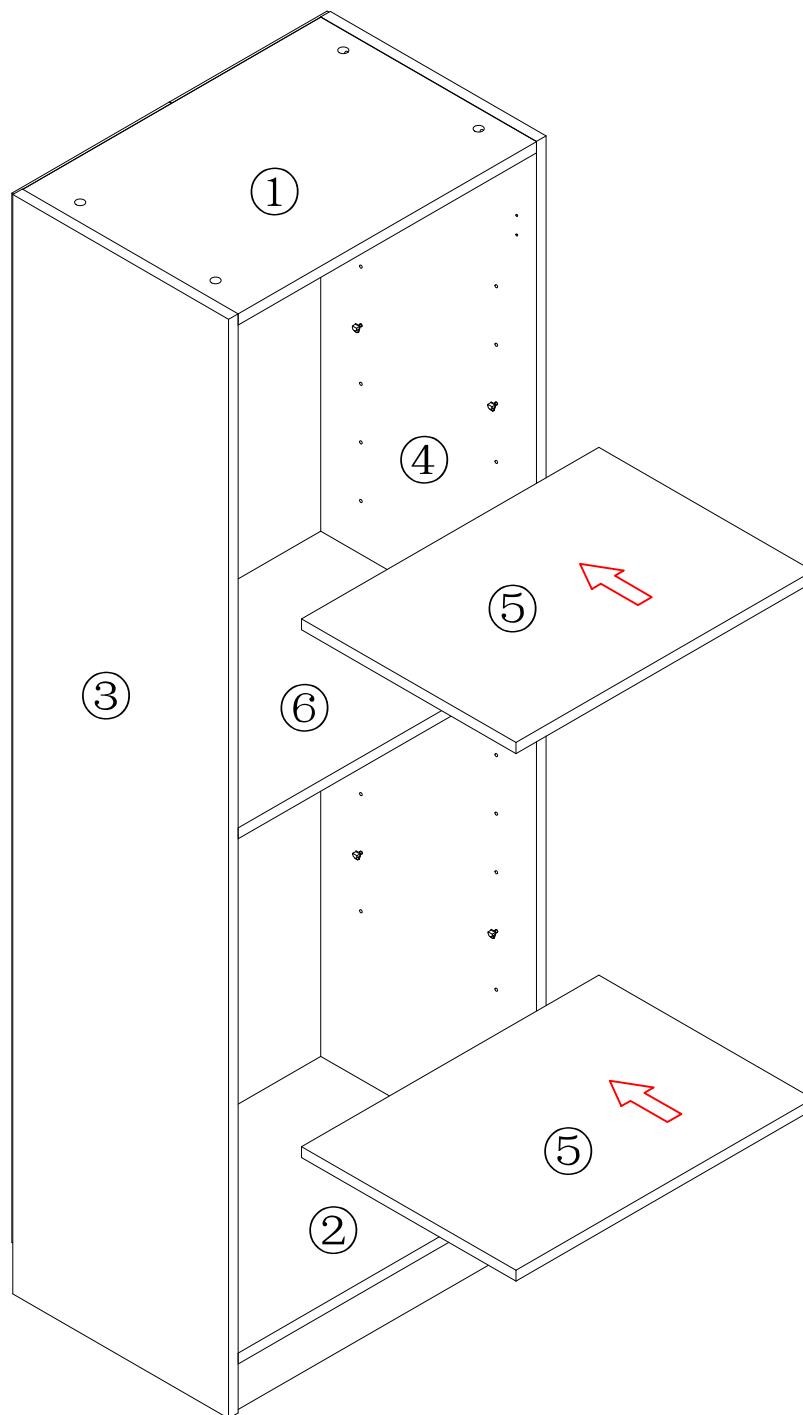



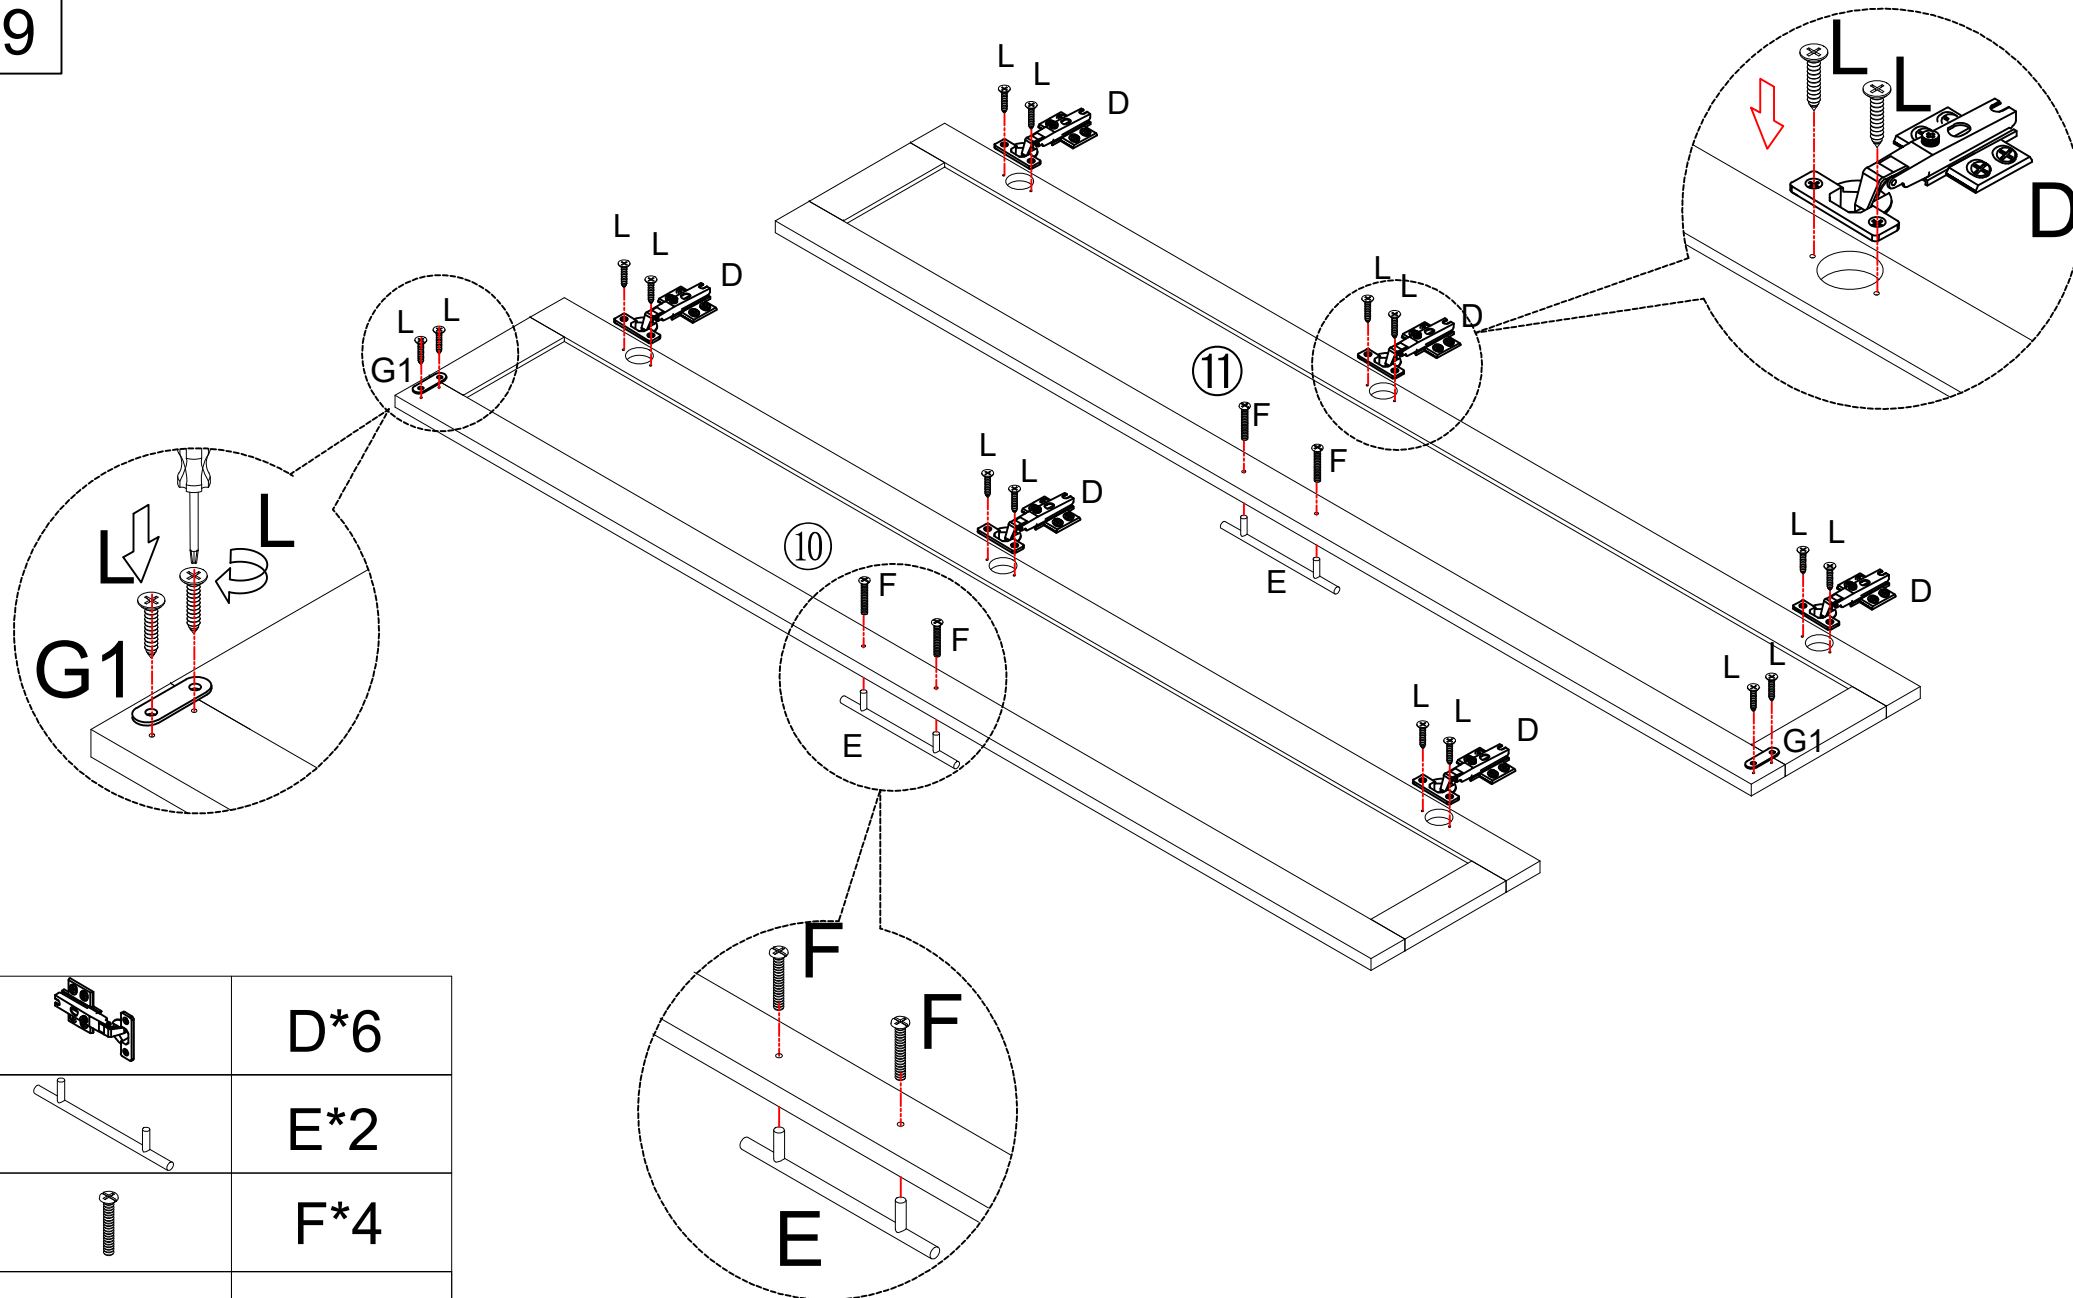


	D*6
	E*2
	F*4
	G1*2
	L*16

10


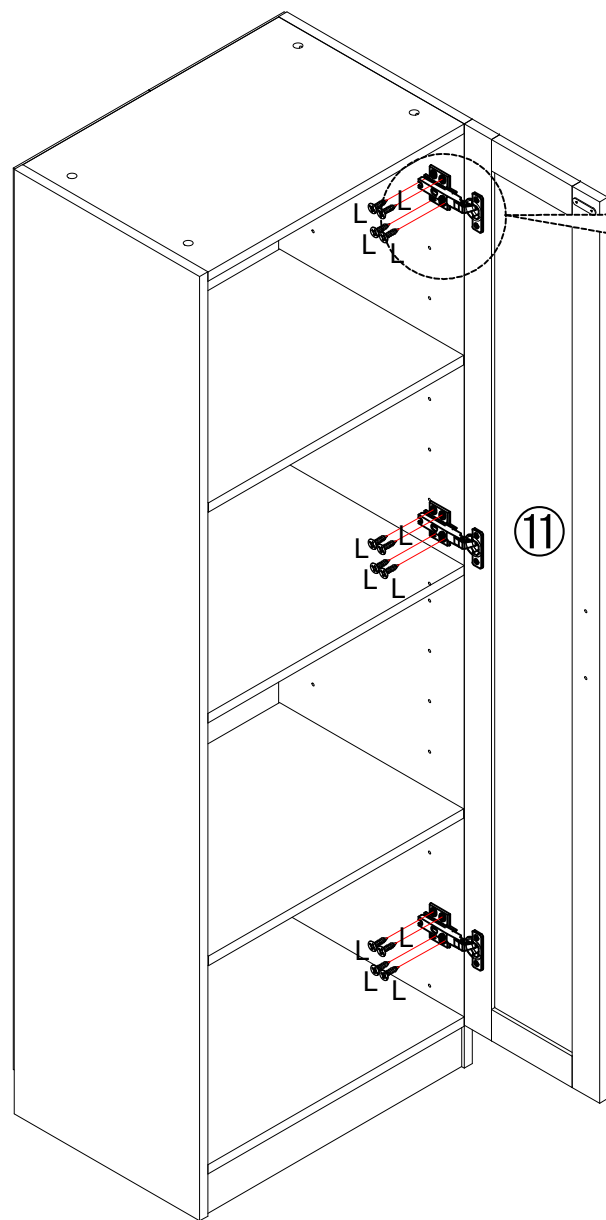


11




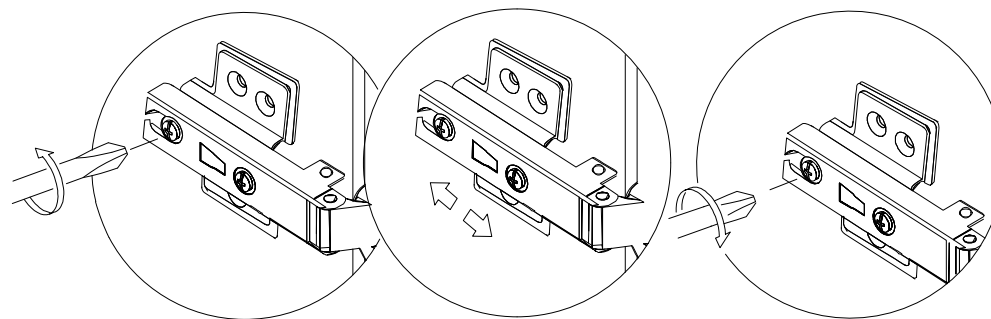
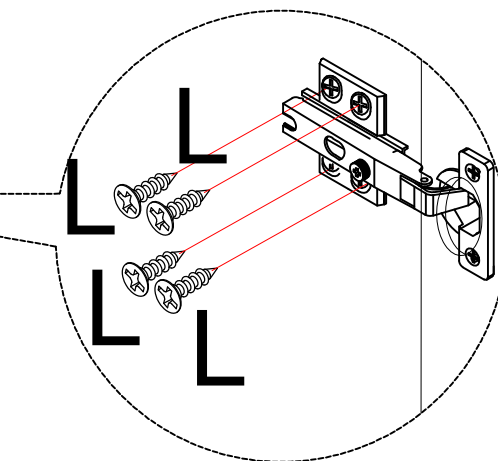


L*12

11

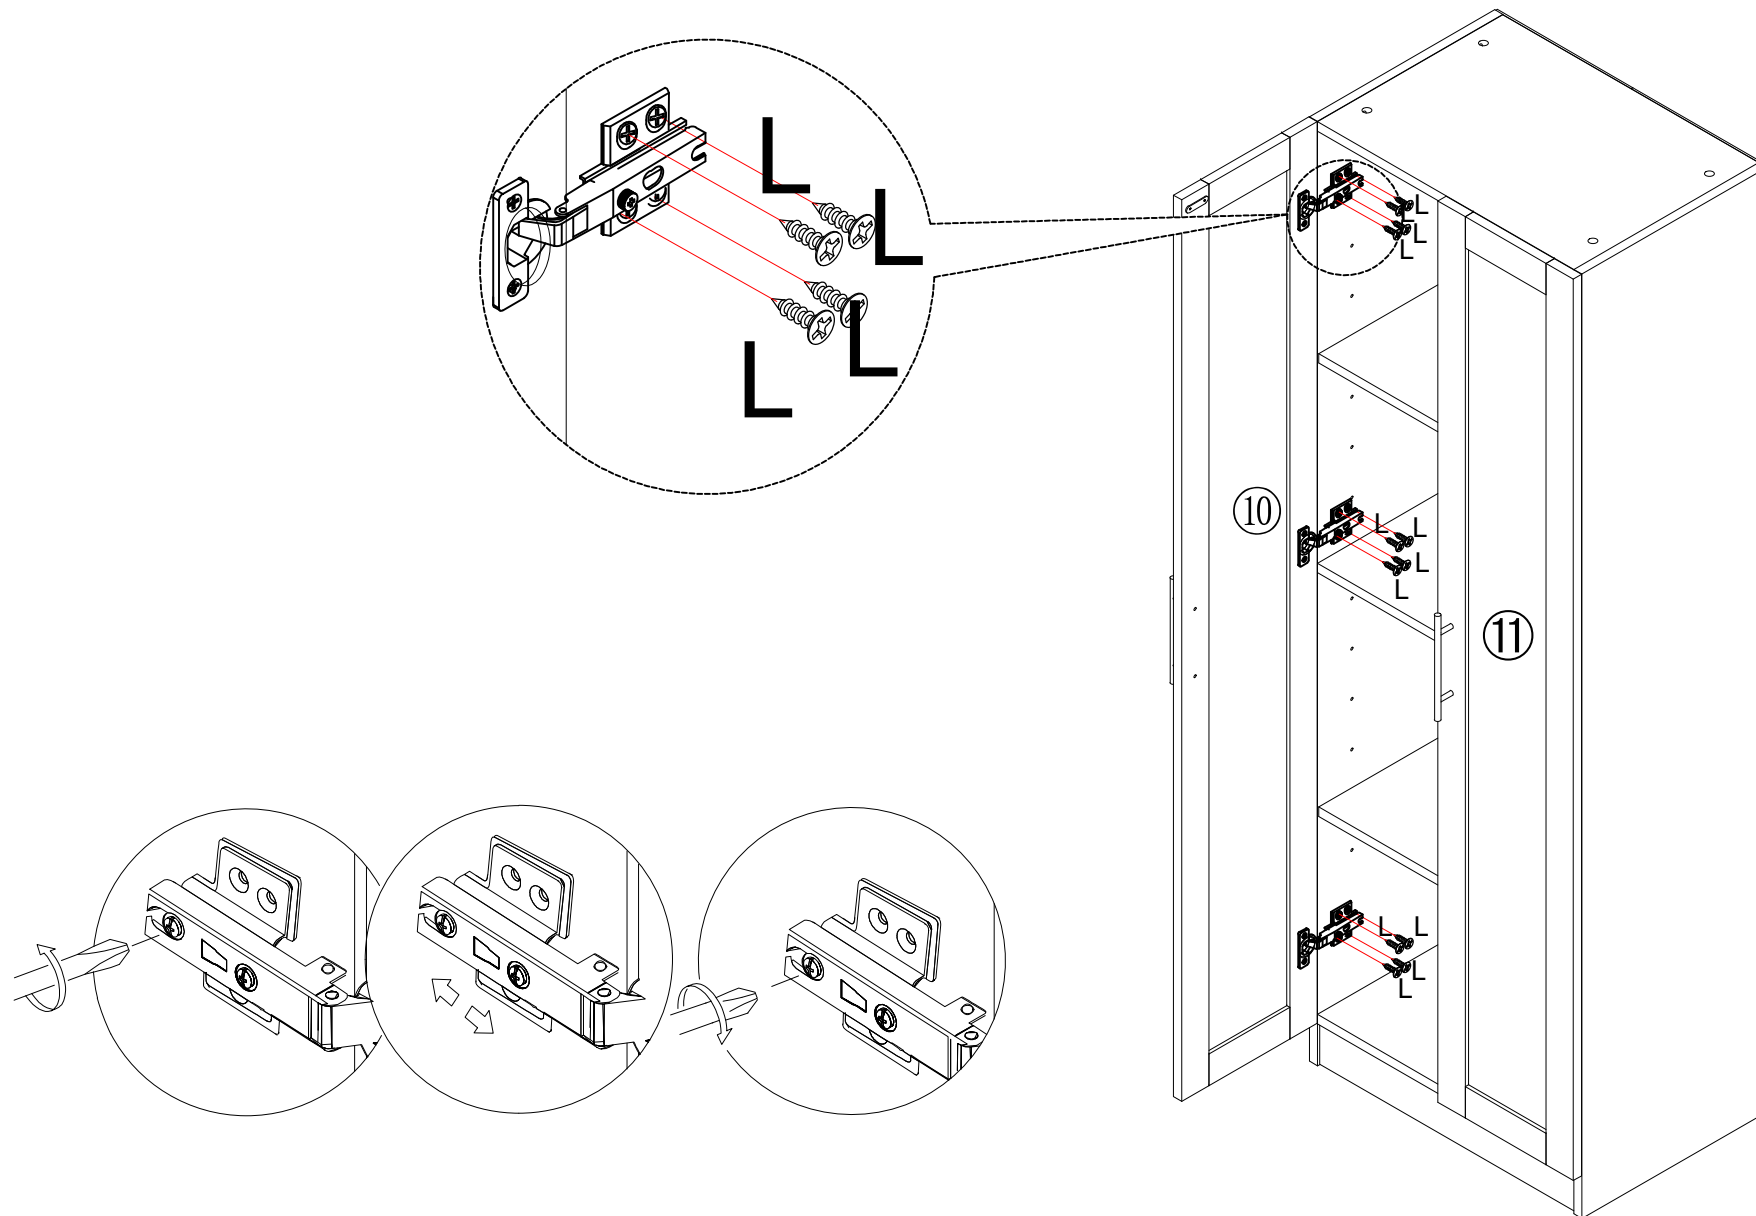

L*12

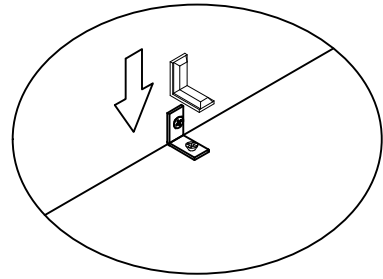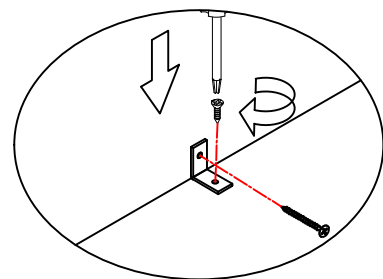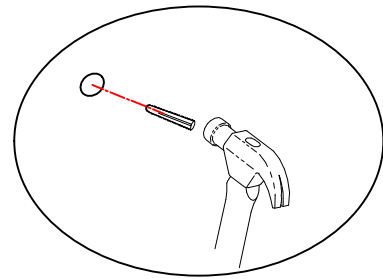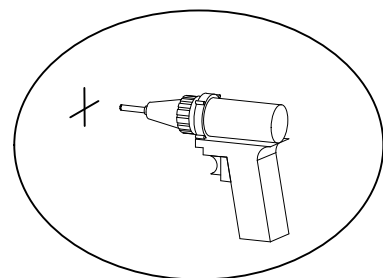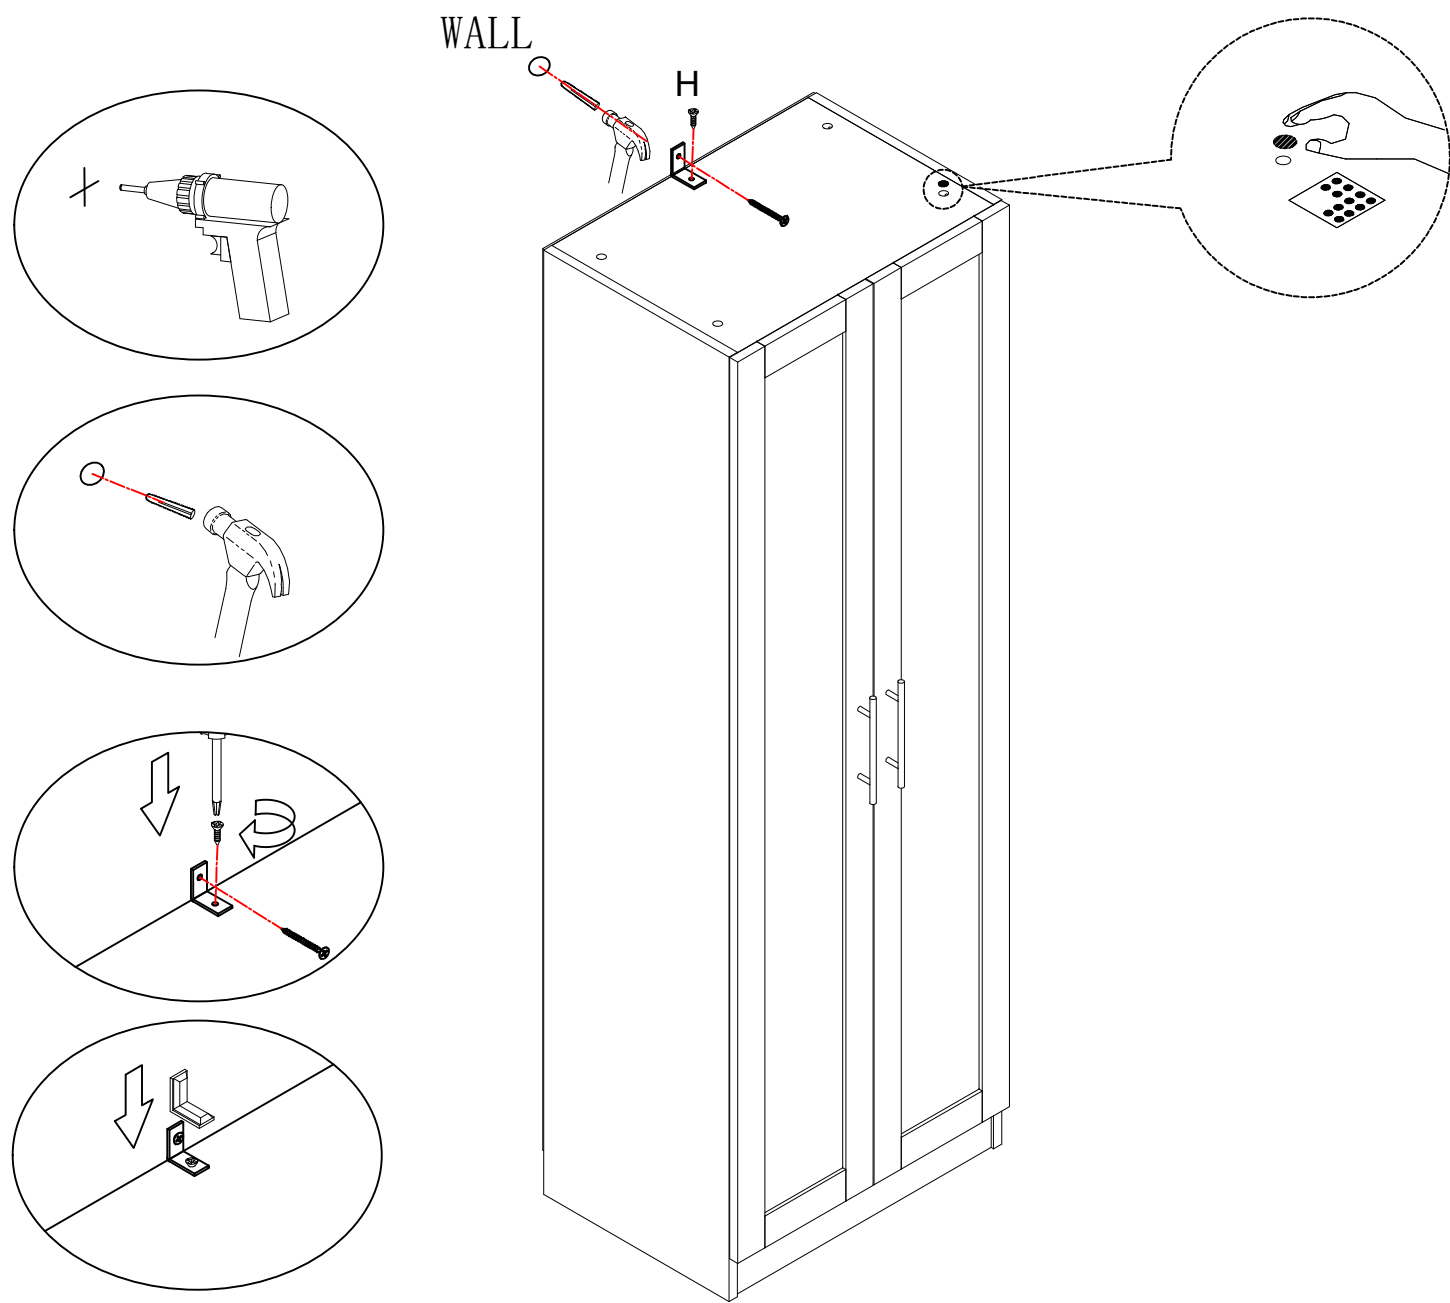

	H*1
	K*26