



BED FRAME

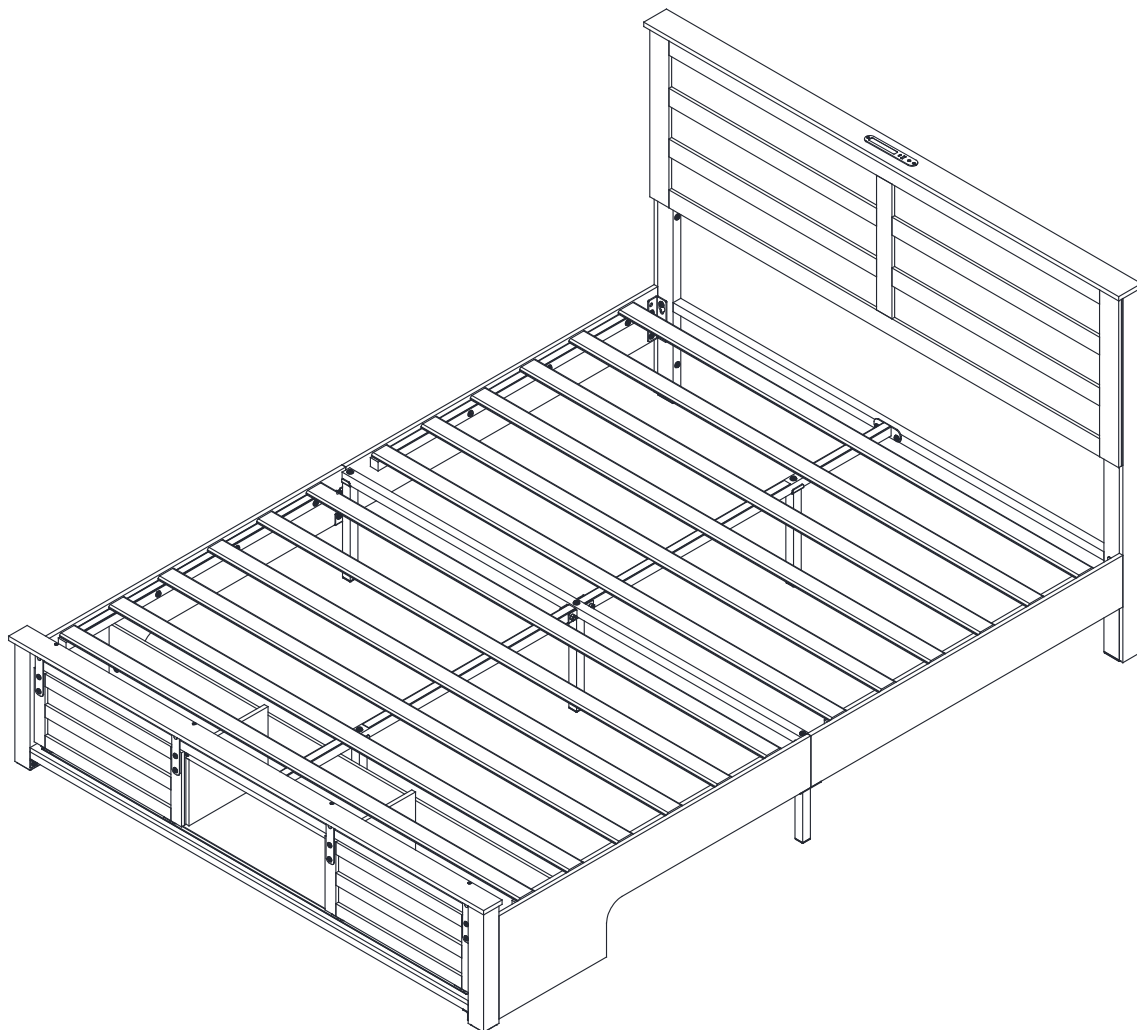

Thank you for choosing our products, please assemble and use it following the instructions.

Assembly Instruction




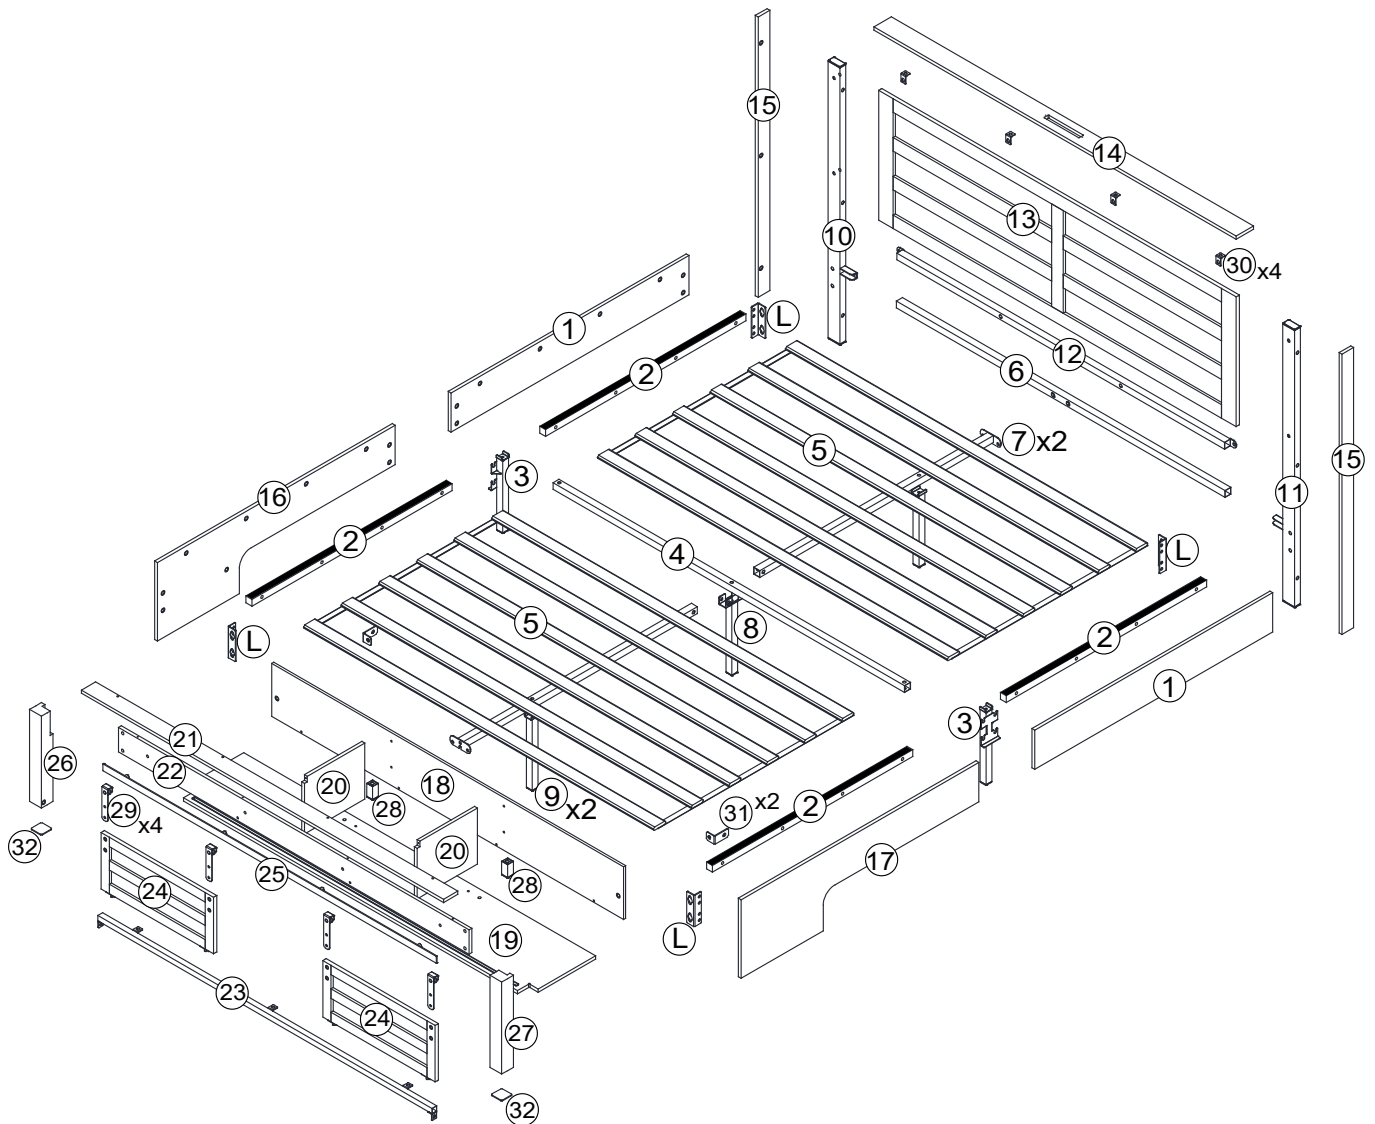


Important Note



HARDWARE NOTE :

1. Two or more people are required for assembly
2. Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.


Components

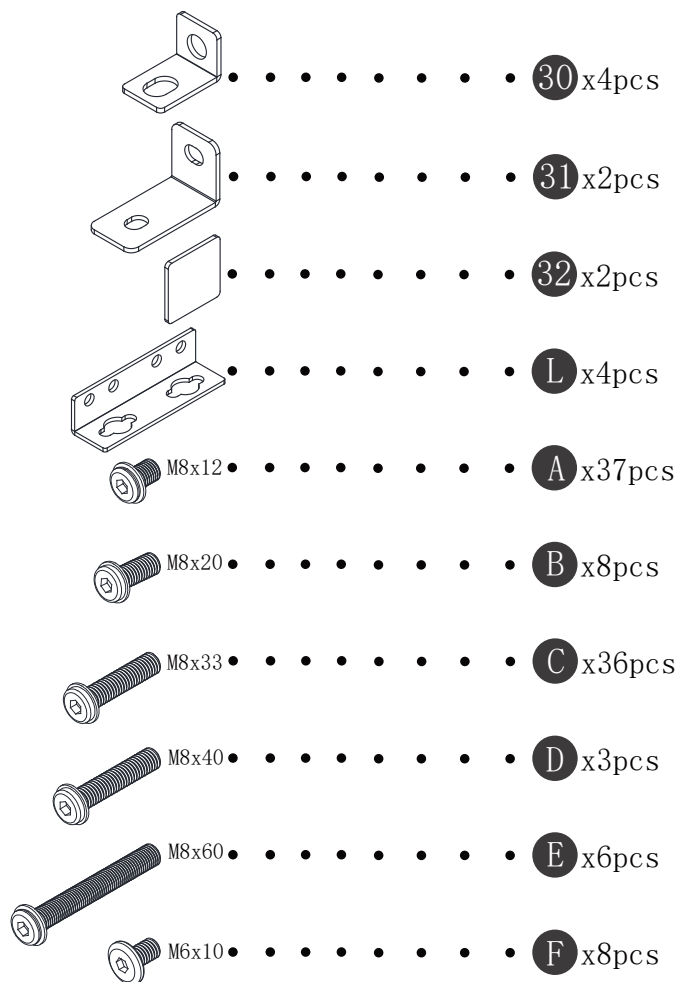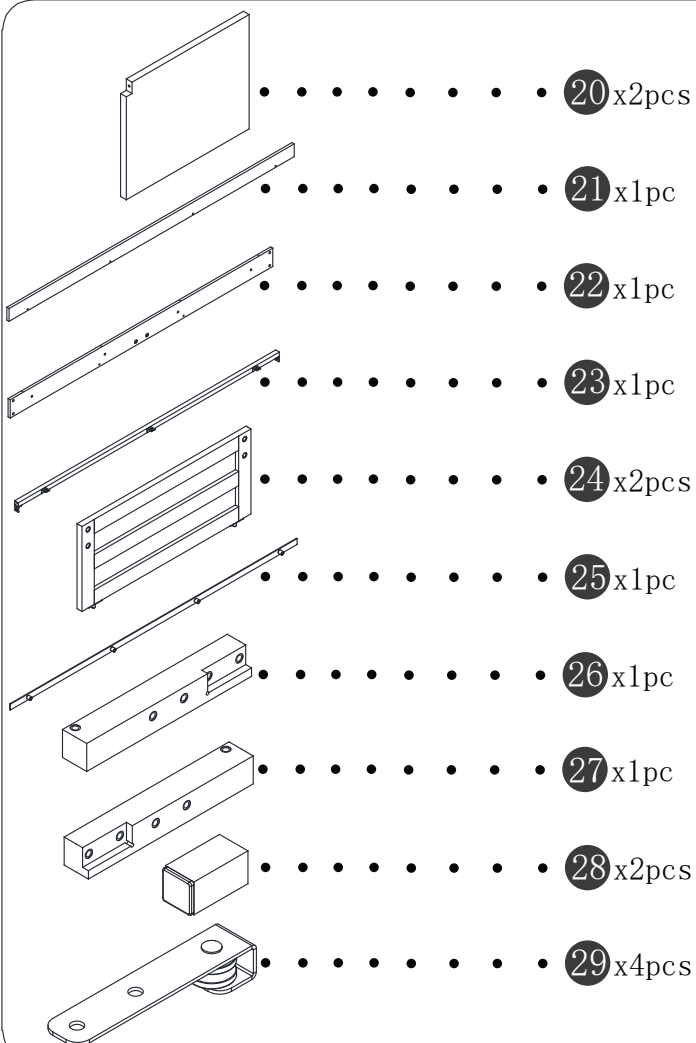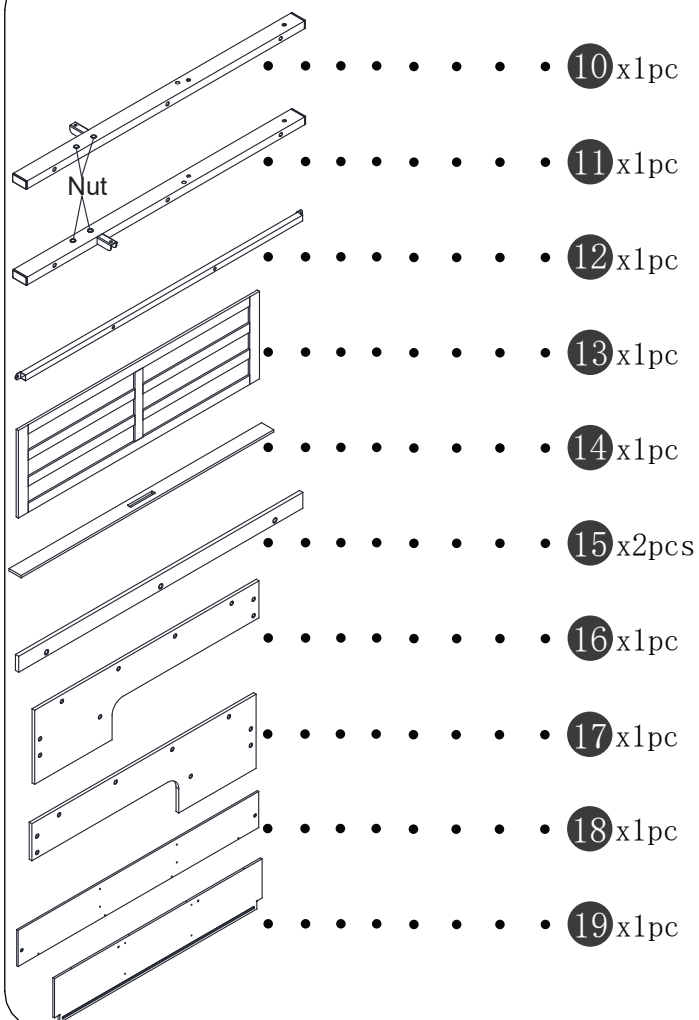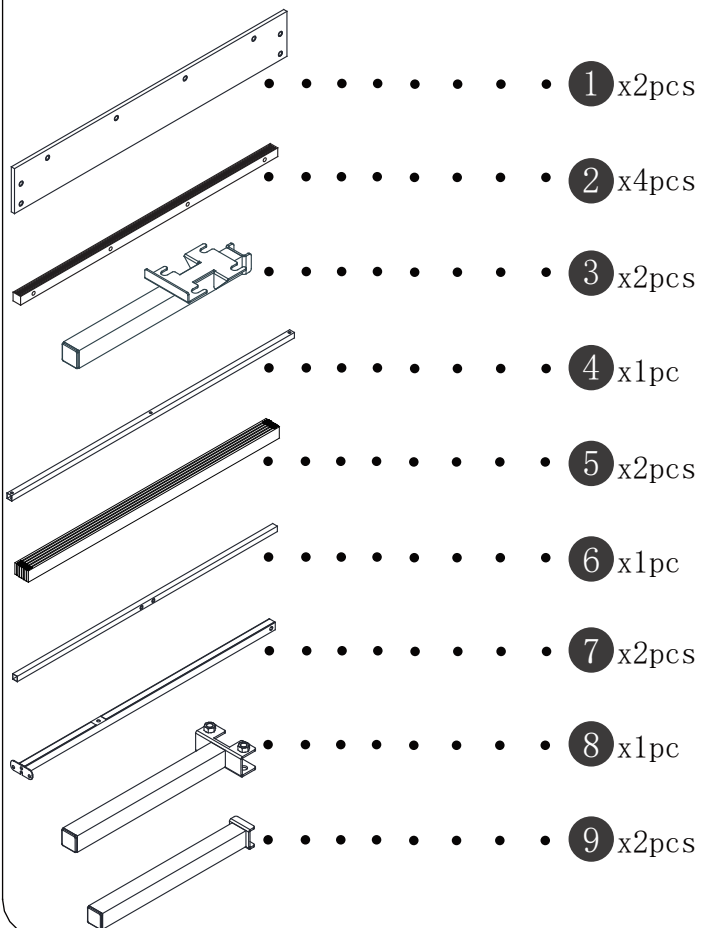


1

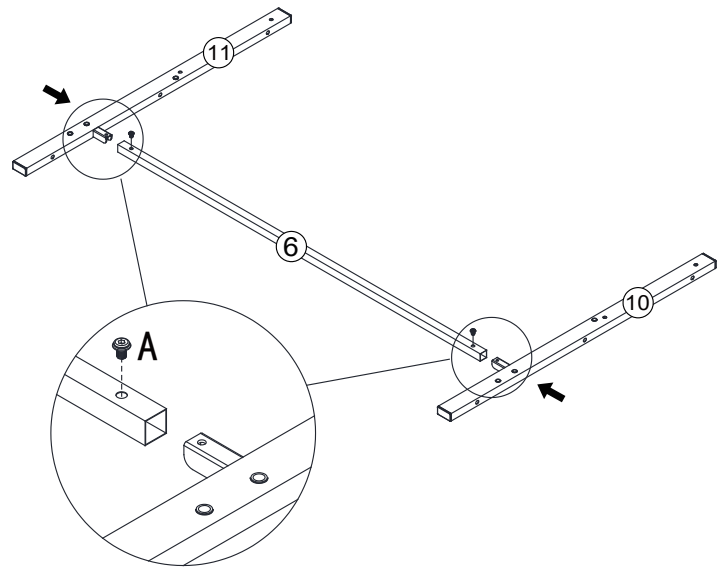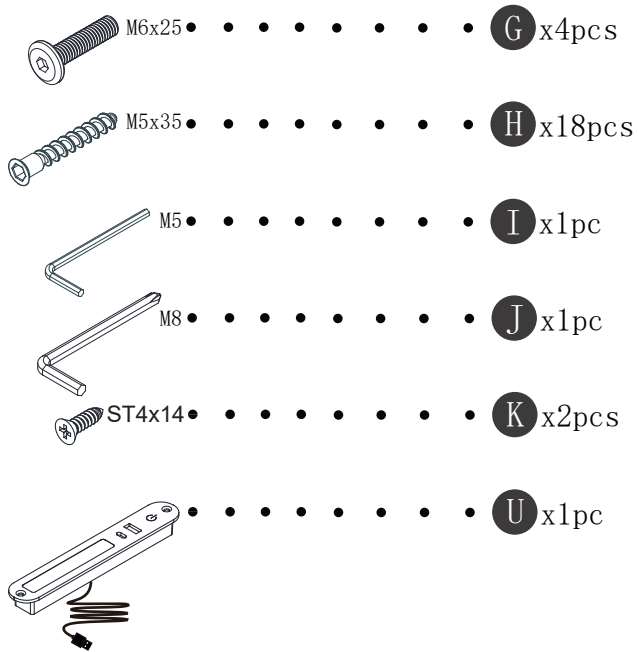


2

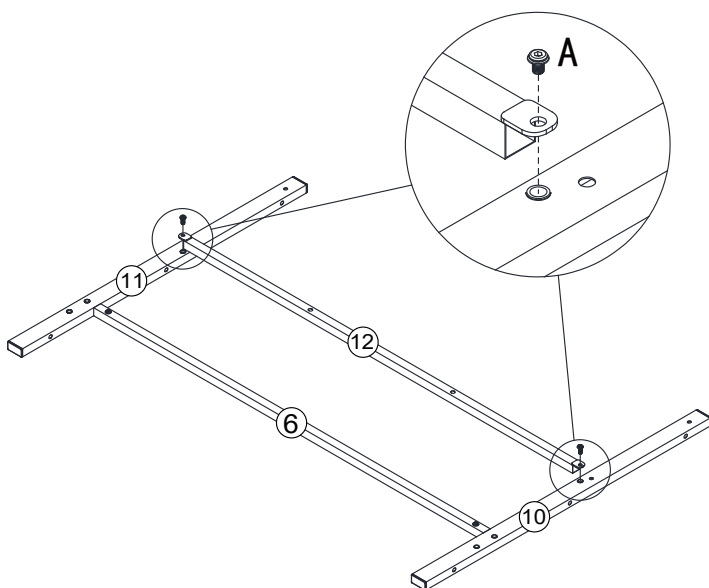


3

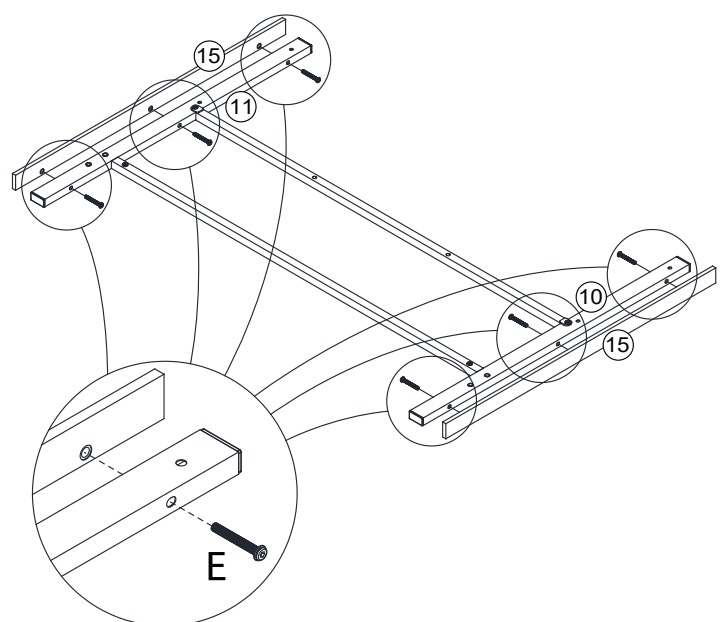

! Do not fully tighten the screws yet.




4

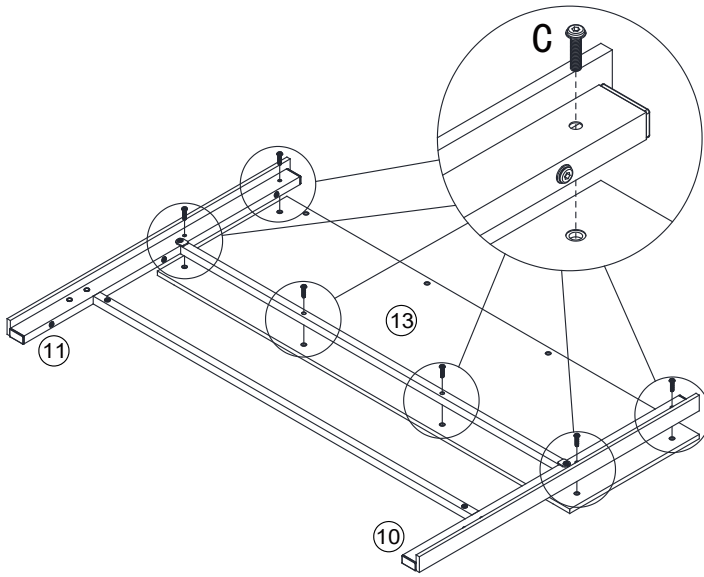

C		6pcs
	M8x33	

5

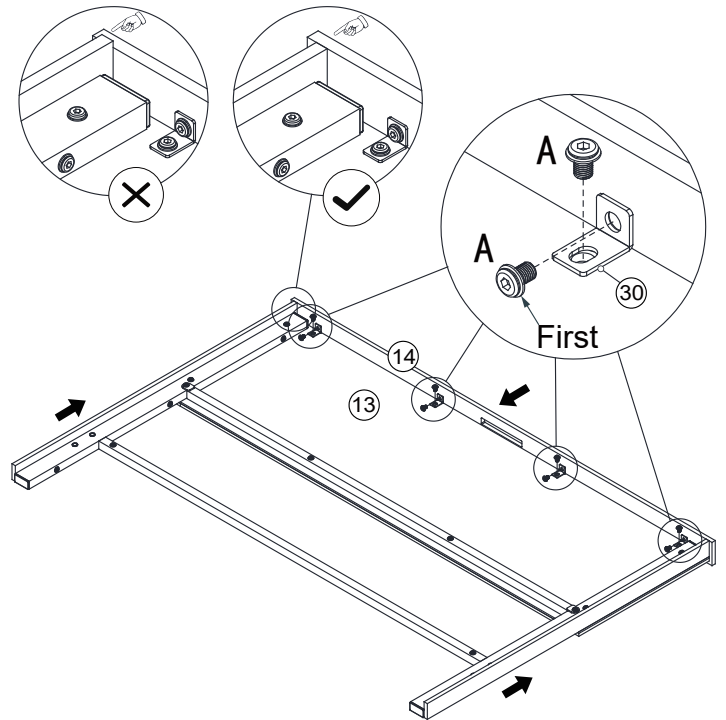


! Fully tighten all the screws.

A		8pcs
	M8x12	


6

x2

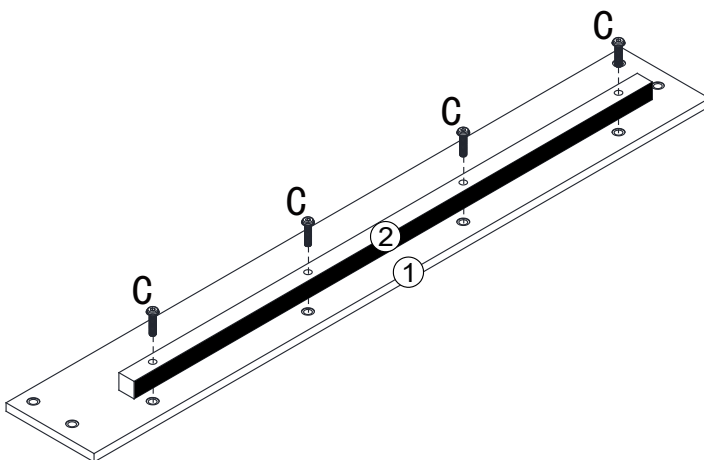


C		8pcs
	M8x33	

7

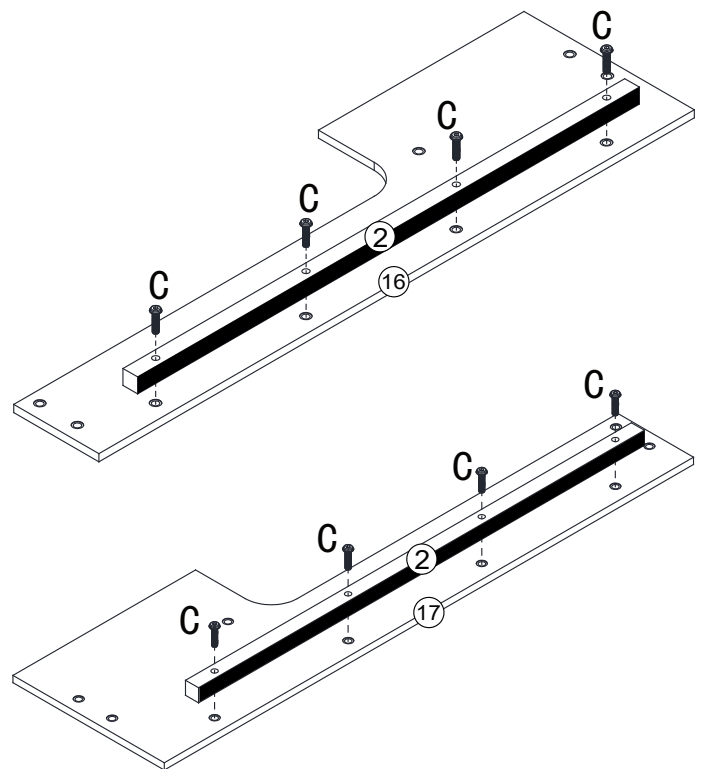


C		8pcs
	M8x33	


8

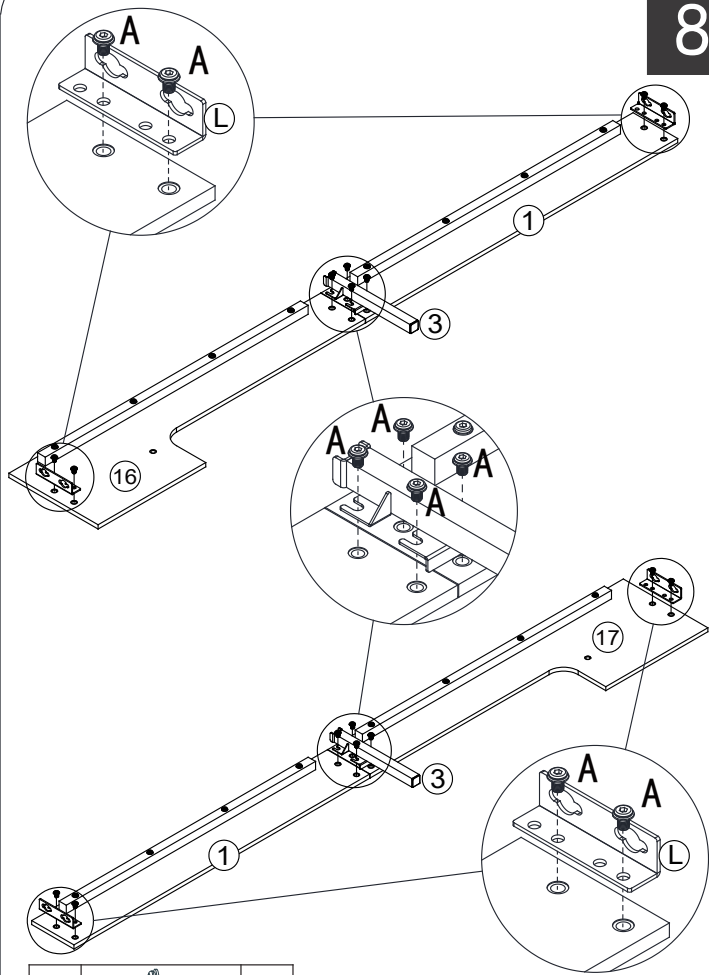


9

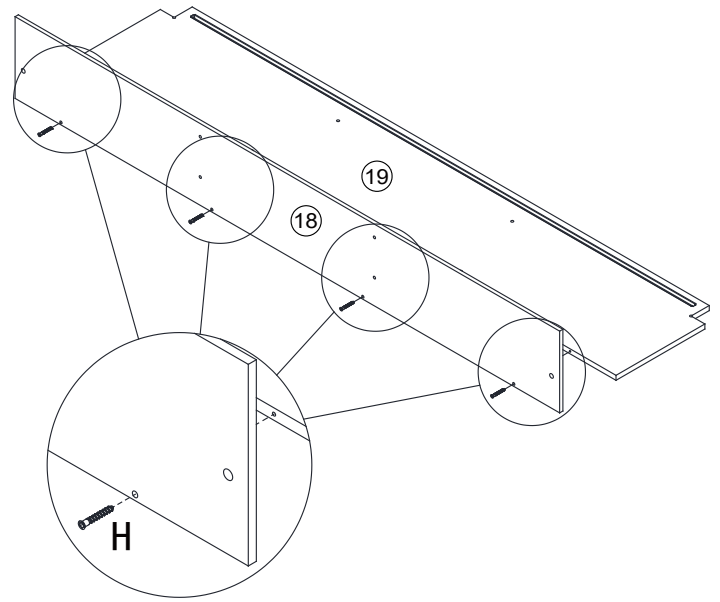


10

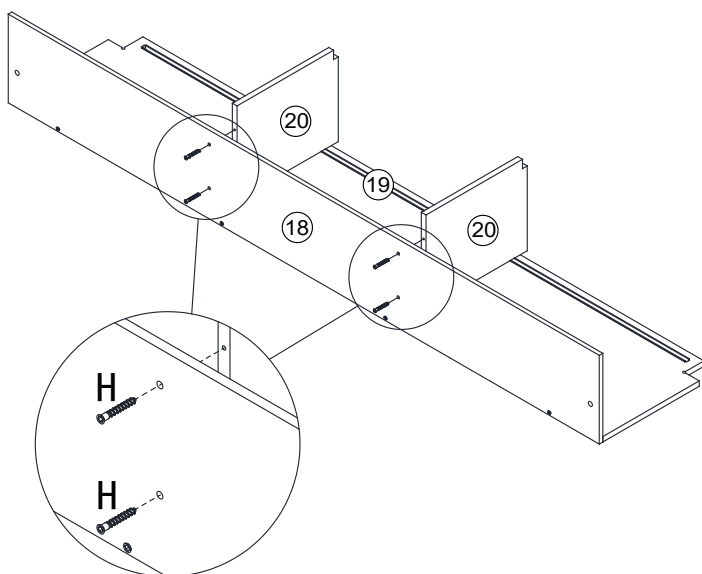

11

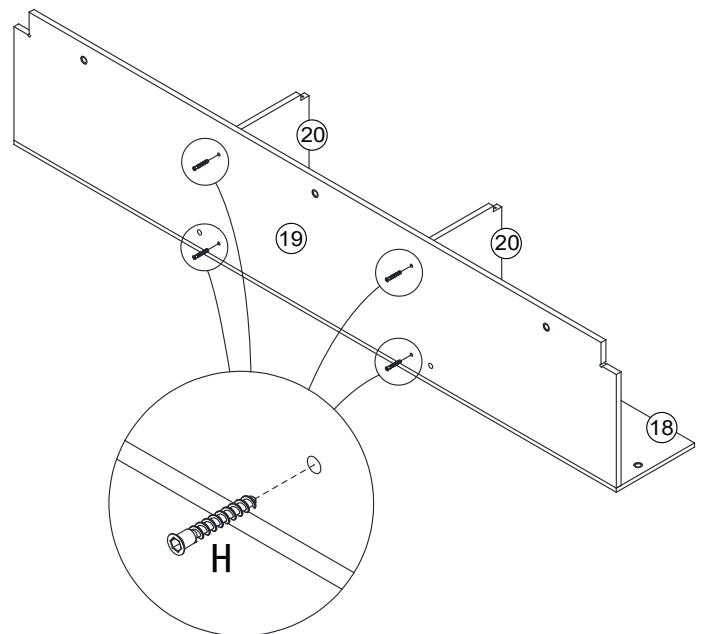


12

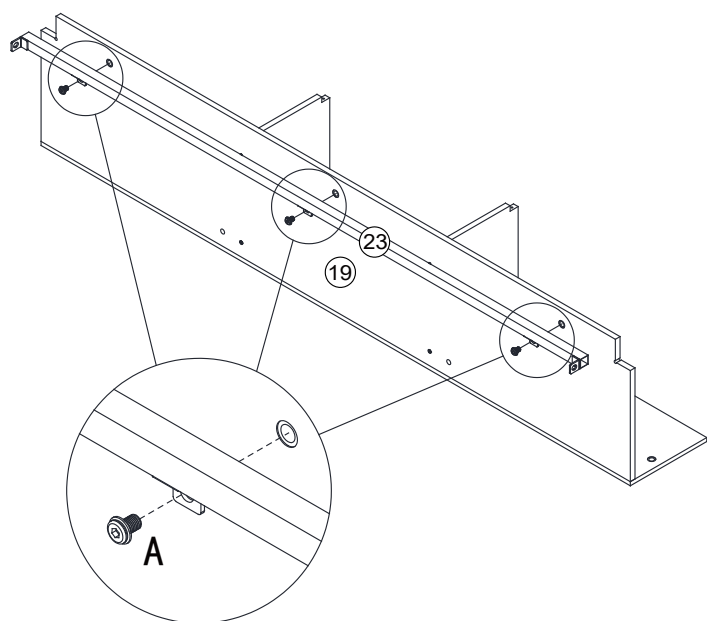

A		3pcs
---	---	------

M8x12


13

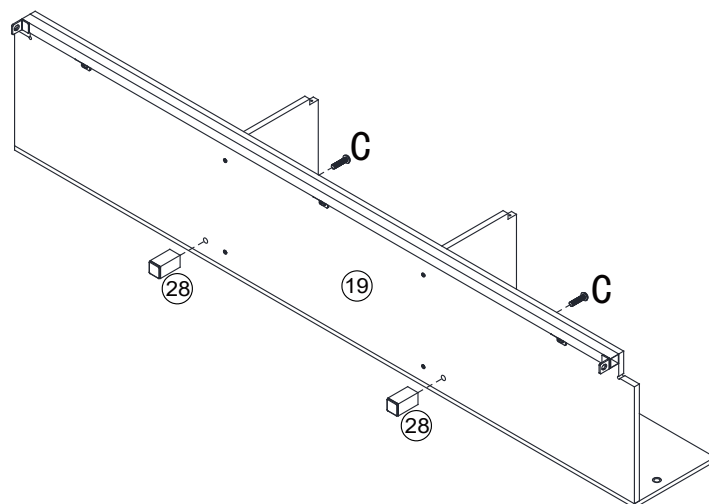

C		2pcs
---	---	------

M8x33

14

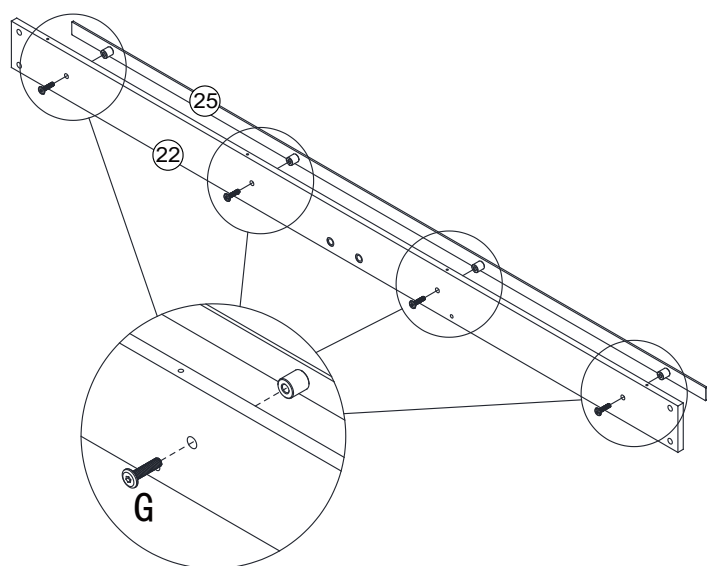


G		4pcs
---	---	------

M6x25

15


! Do not fully tighten the screws yet.

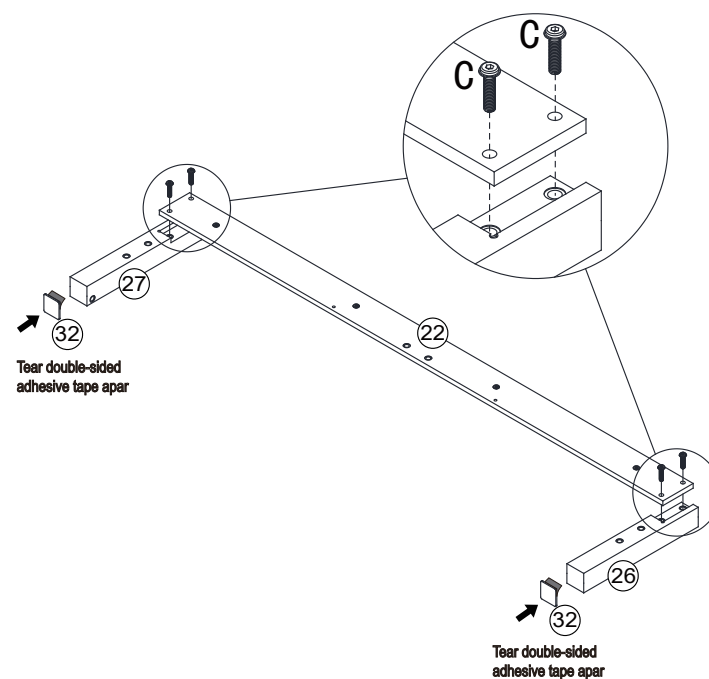

C		4pcs
---	---	------

M8x33


16

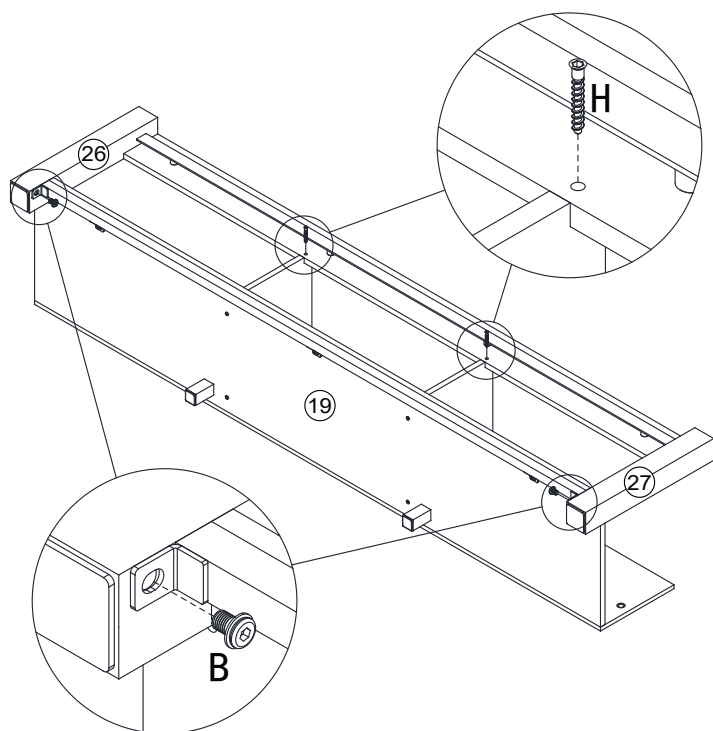

B		2pcs
H		2pcs
	M8x20	
	M5x35	


 Fully tighten all the screws.

17

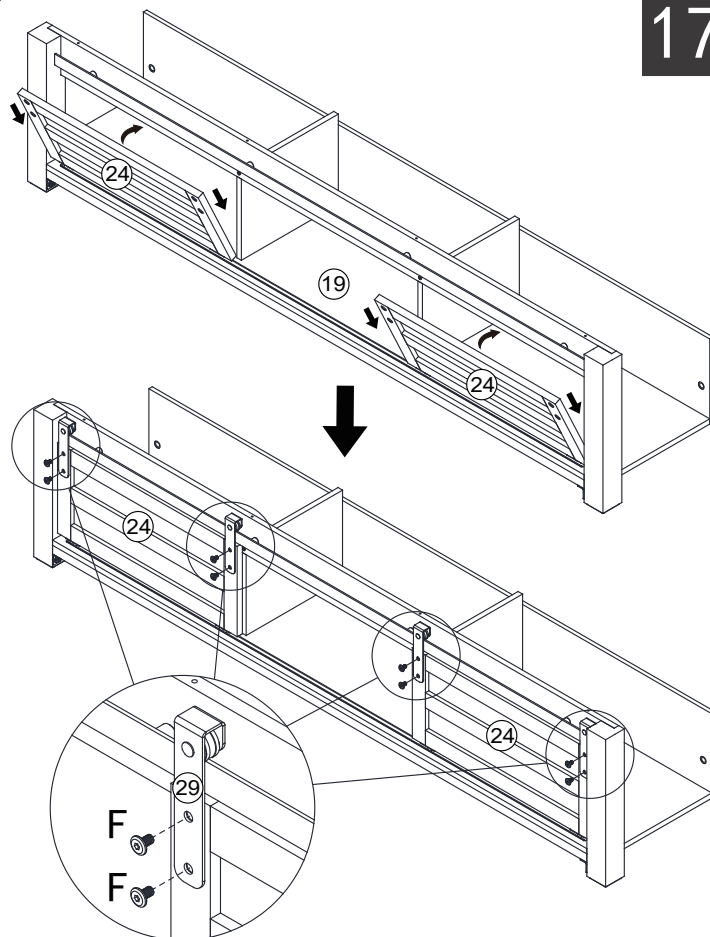


F		8pcs
	M6x10	

18

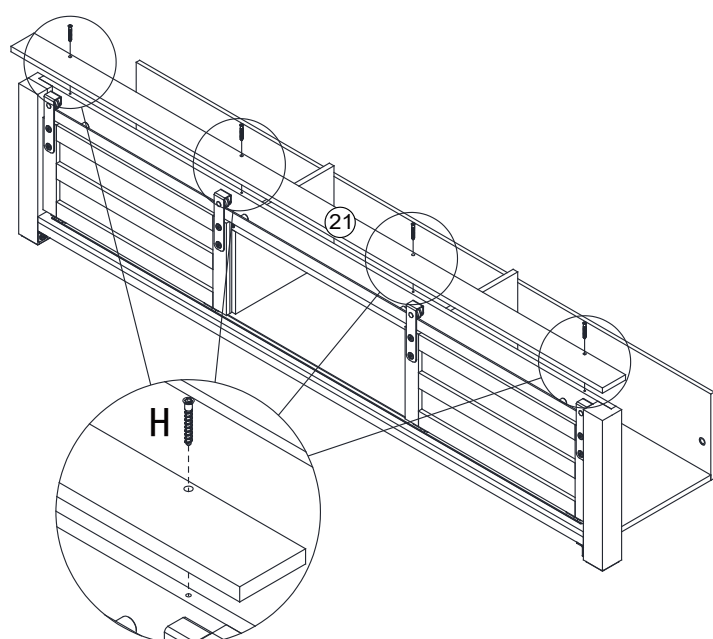

H		4pcs
	M5x35	

19

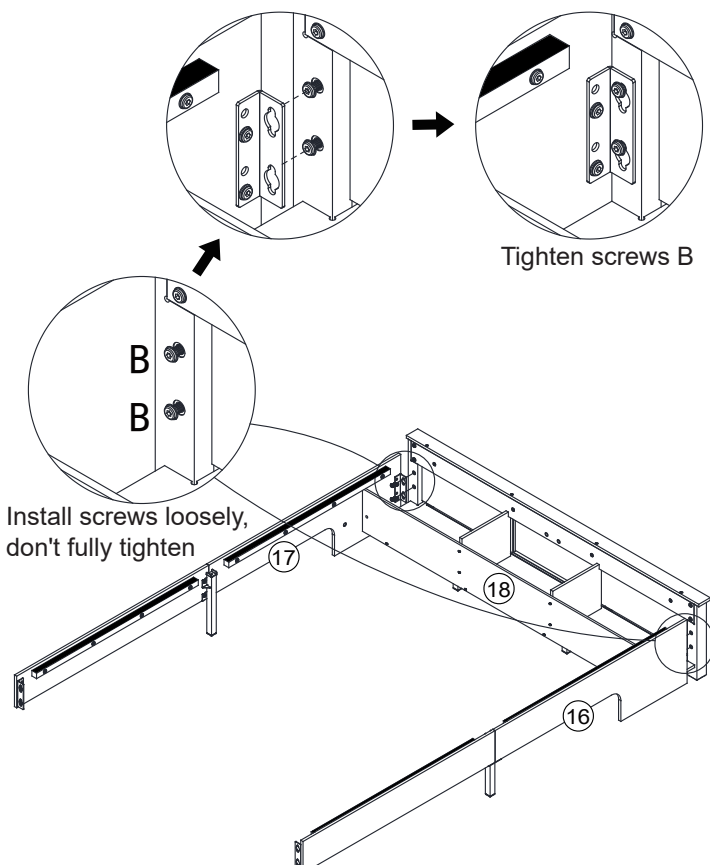


Install screws loosely,
don't fully tighten

Tighten screws B


B		4pcs
	M8x20	

20

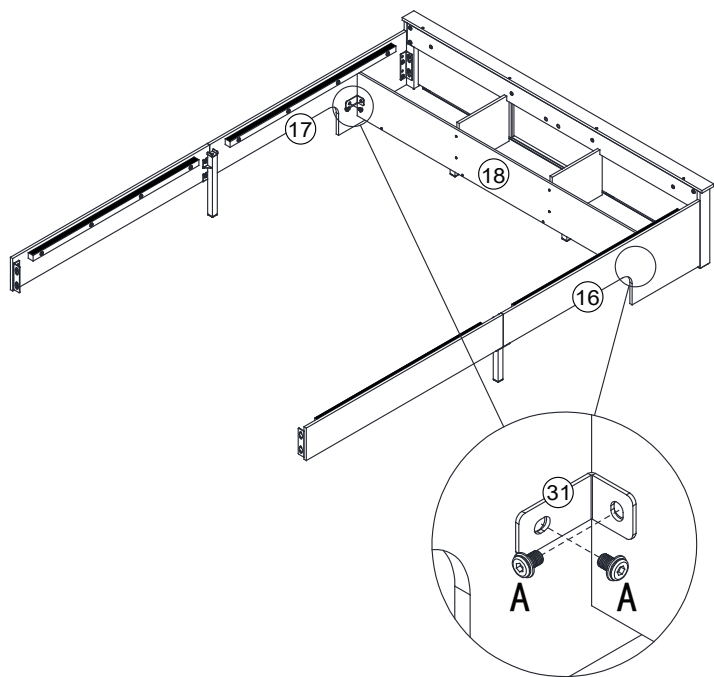


A		4pcs
---	---	------

21

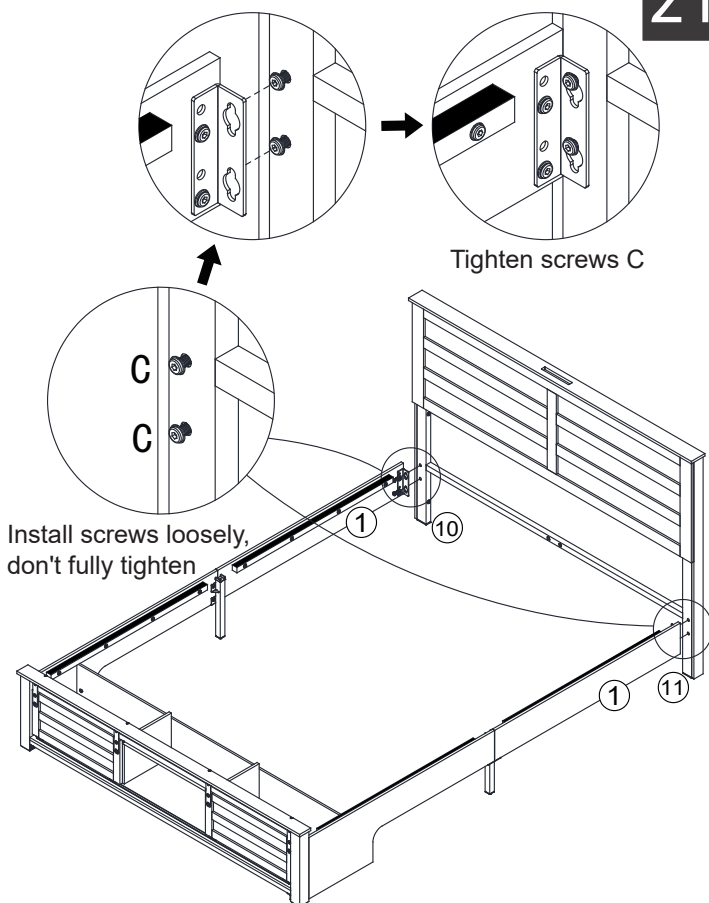

C		4pcs
---	---	------


22

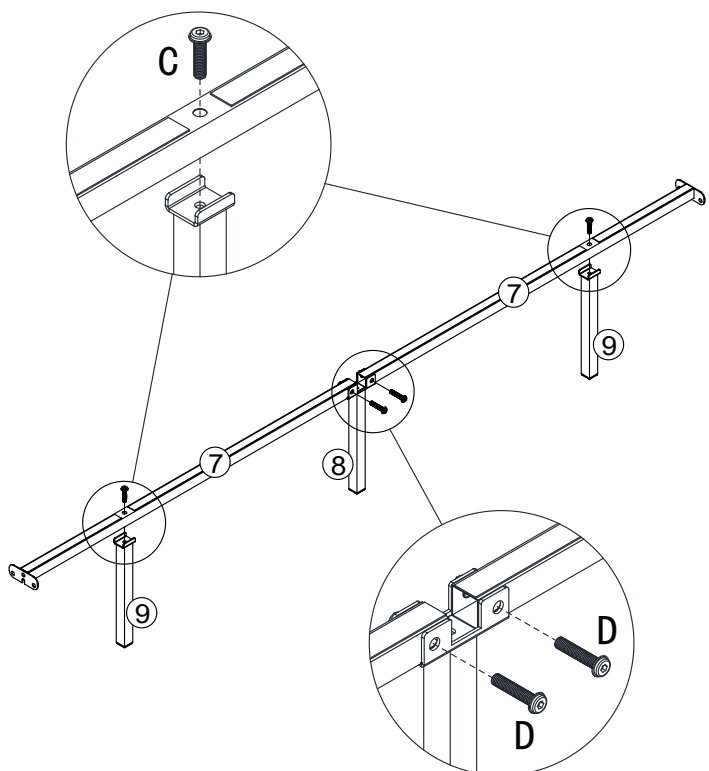

C		2pcs
D		2pcs

 Do not fully tighten the screws yet.


23

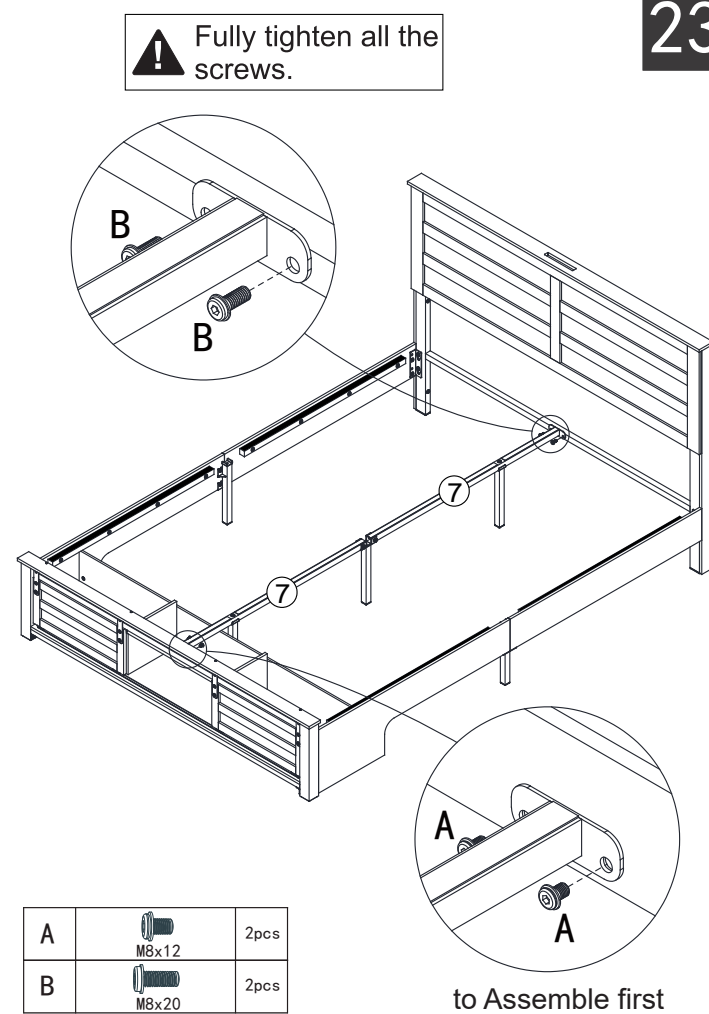

A		2pcs
B		2pcs


to Assemble first

24

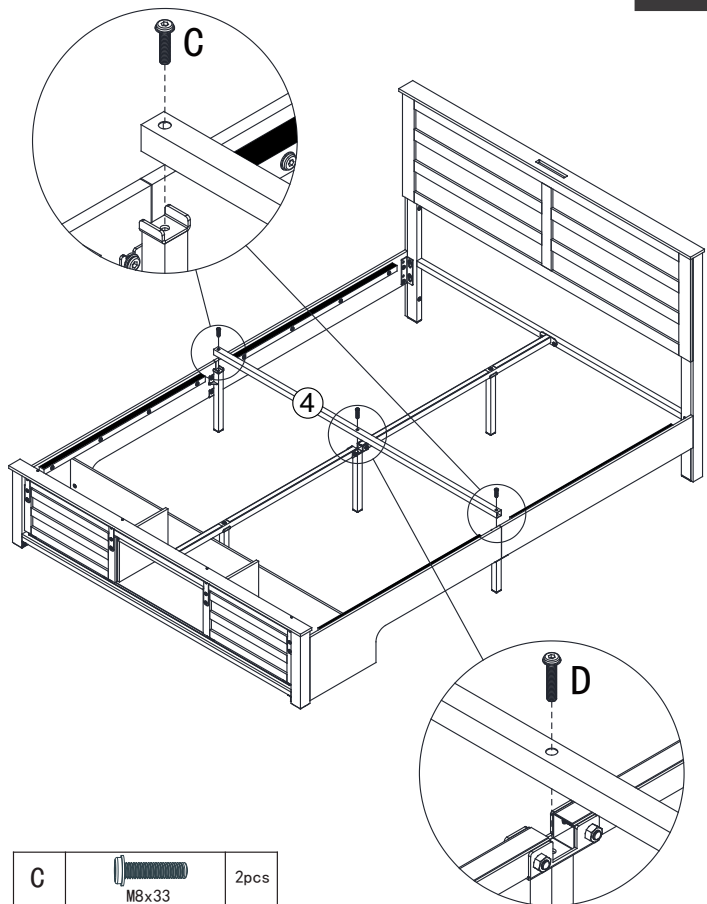

C	 M8x33	2pcs
D	 M8x40	1pc

25

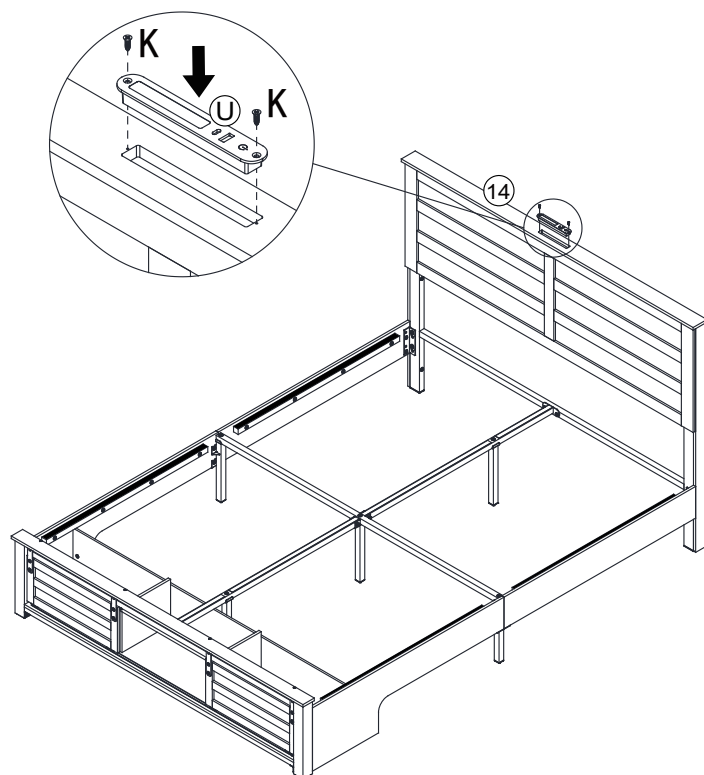

K	 ST4x14	2pcs
---	--	------

26

