




Product Installation Instructions

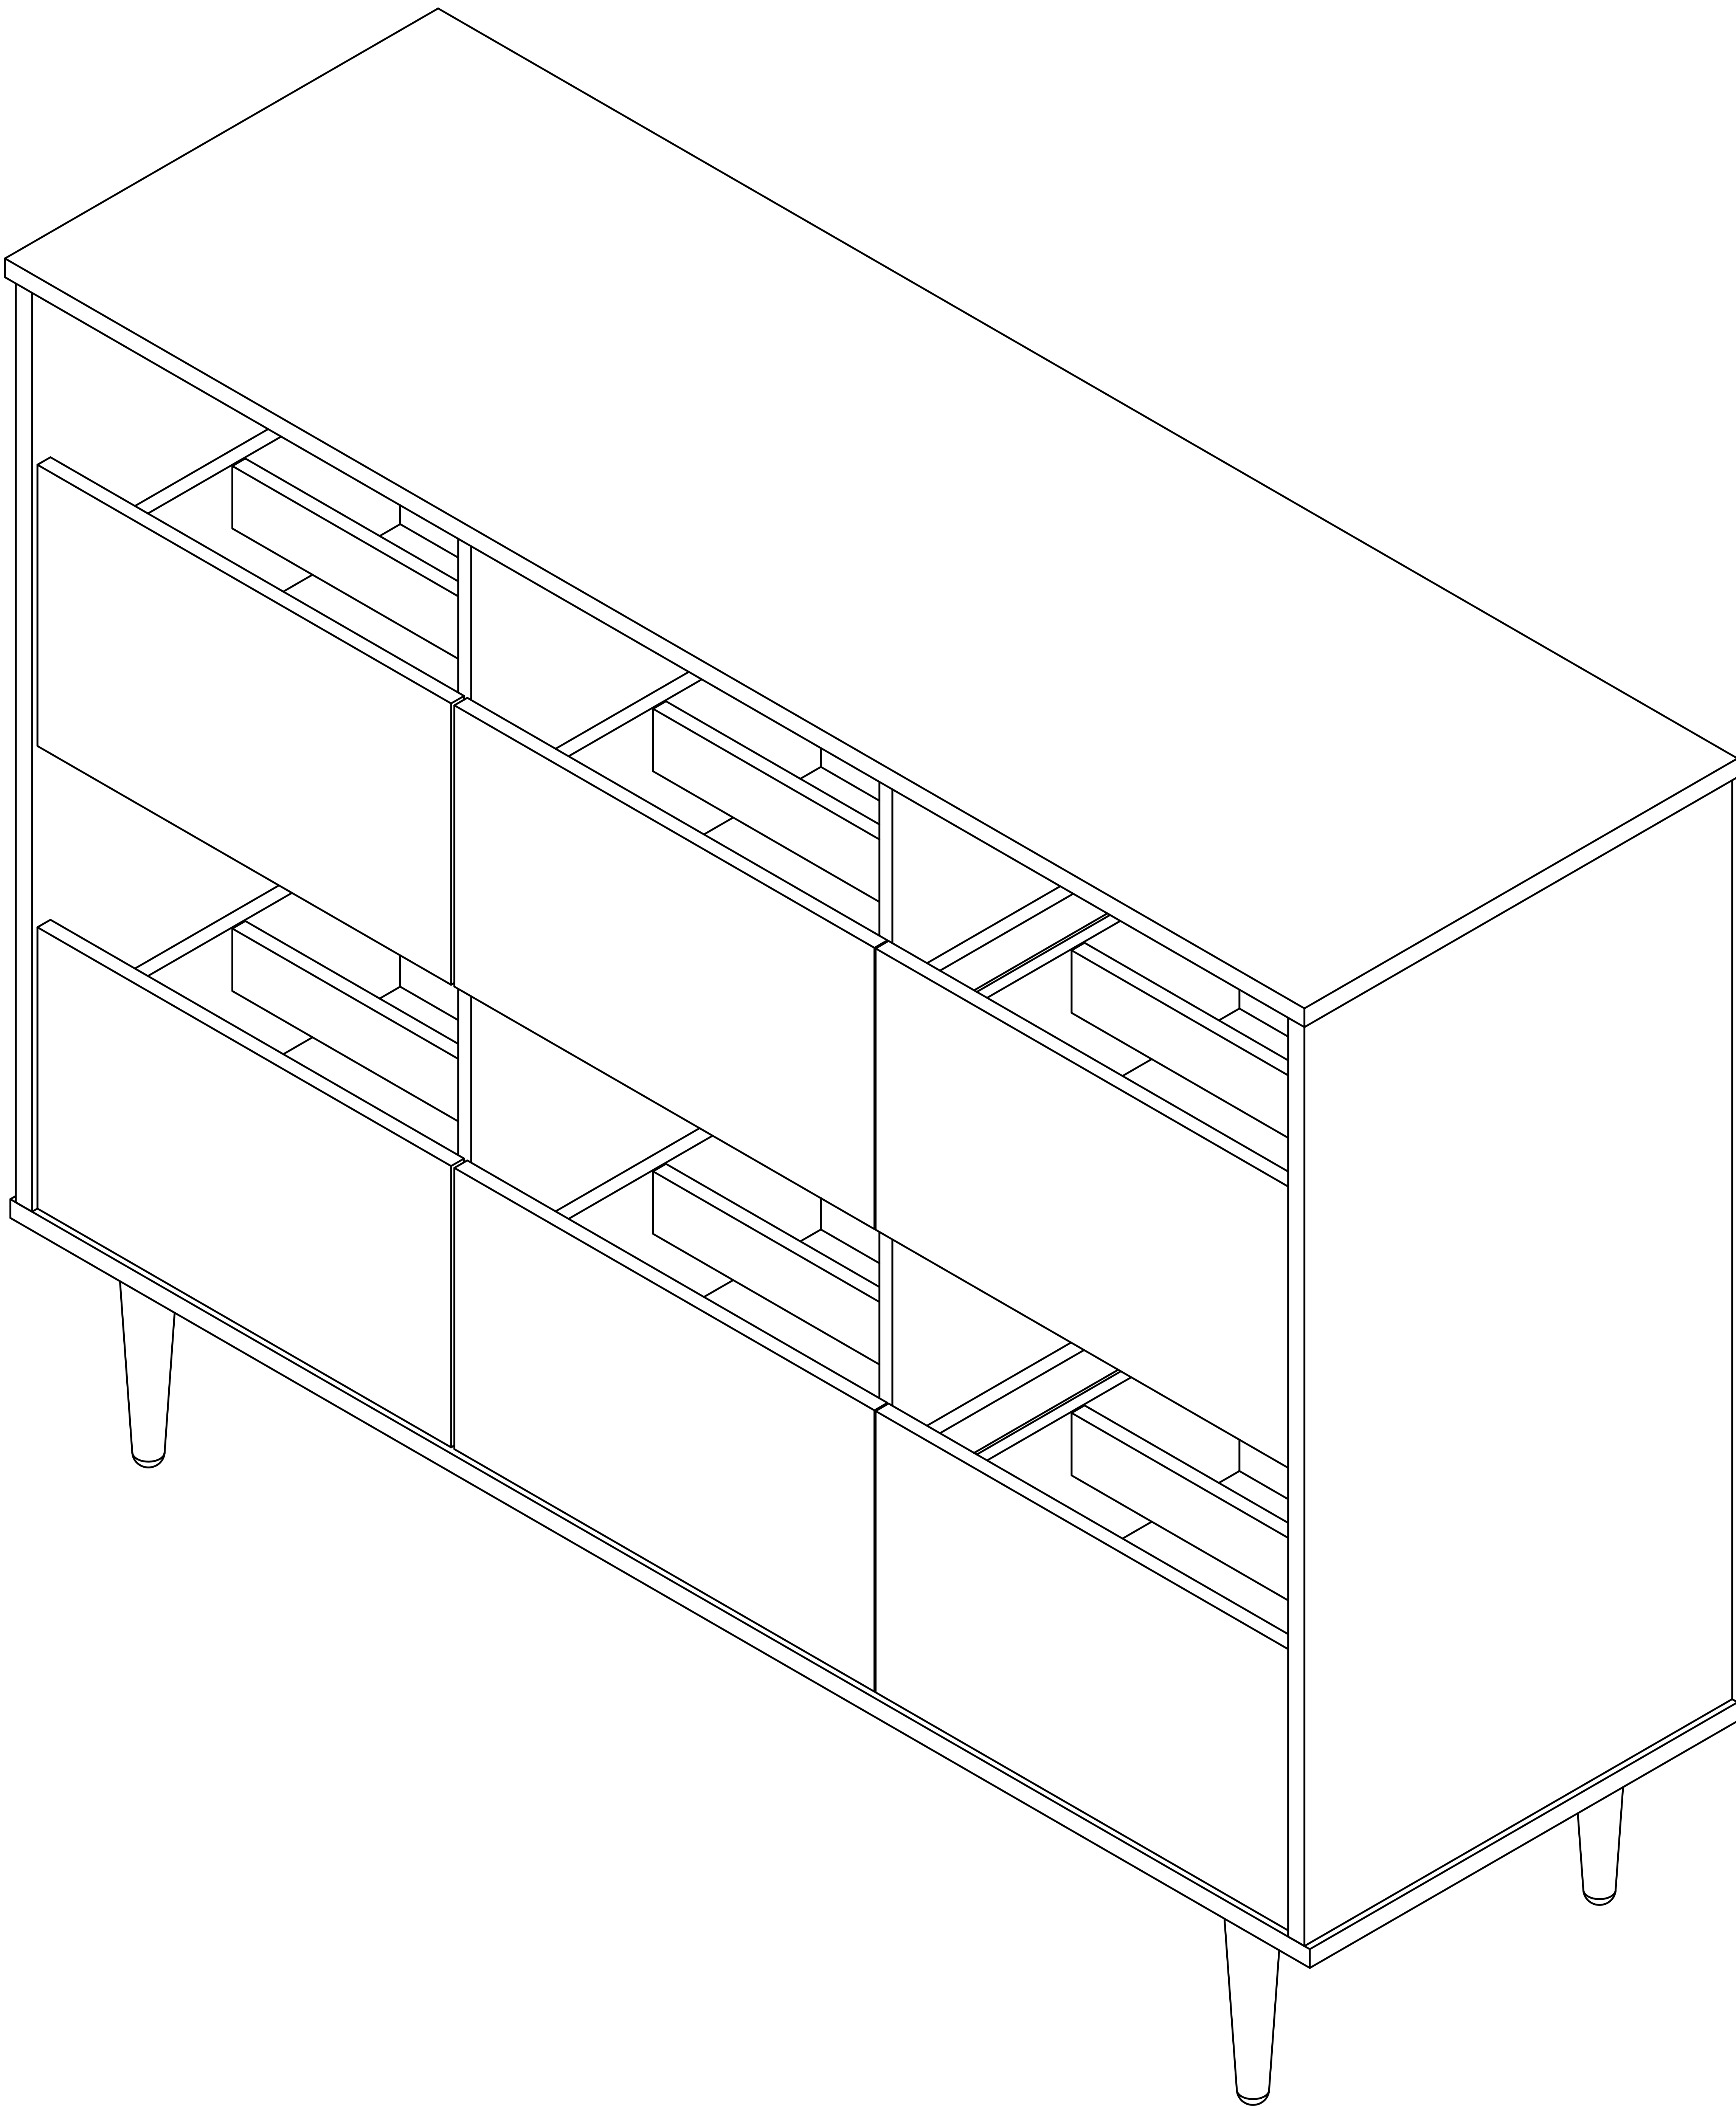


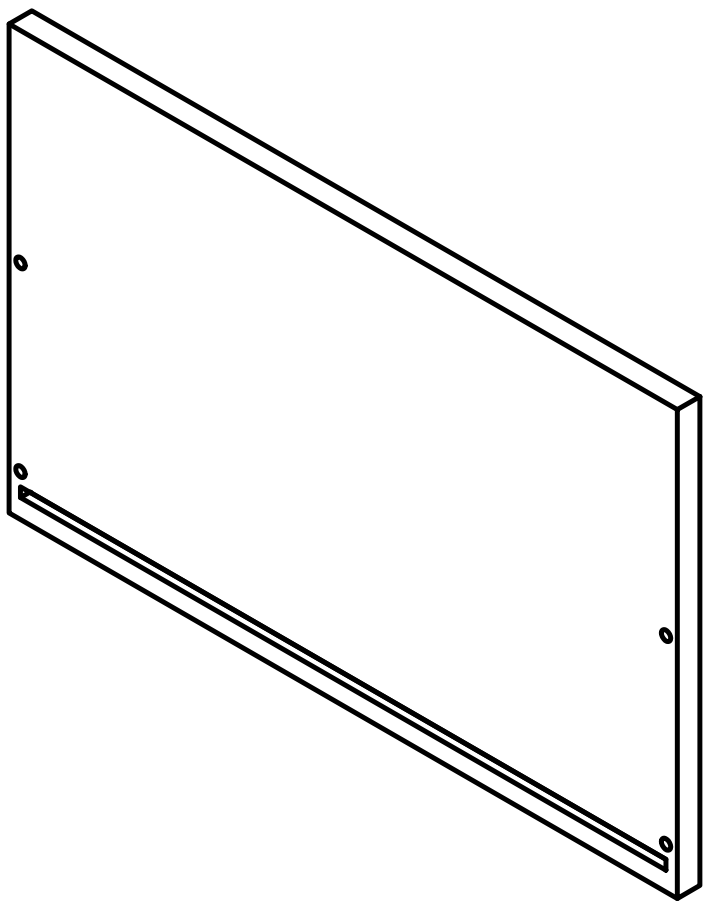


A x6

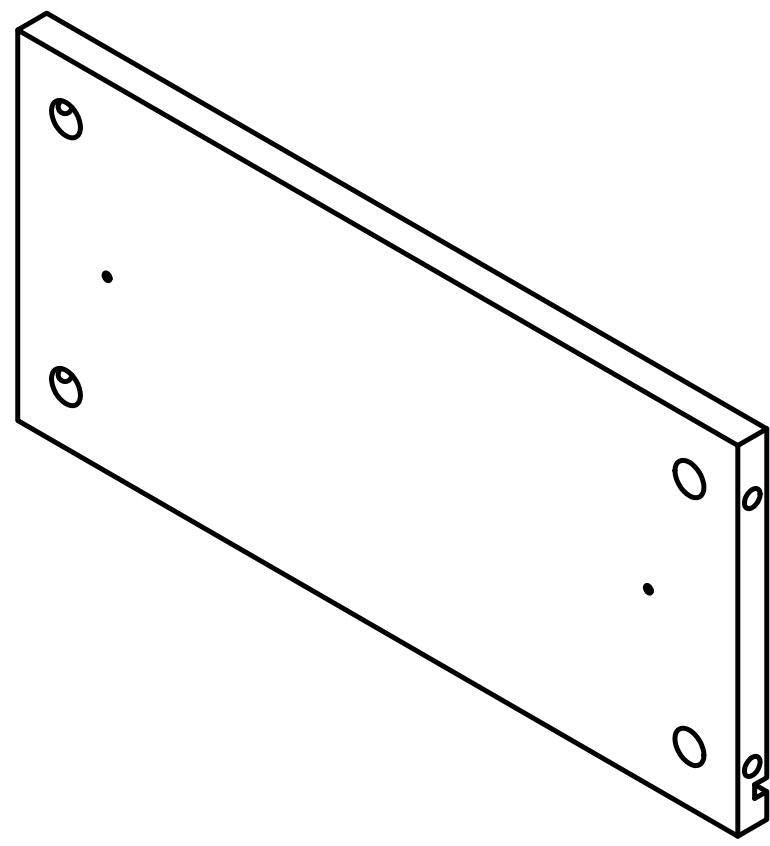


Bx12

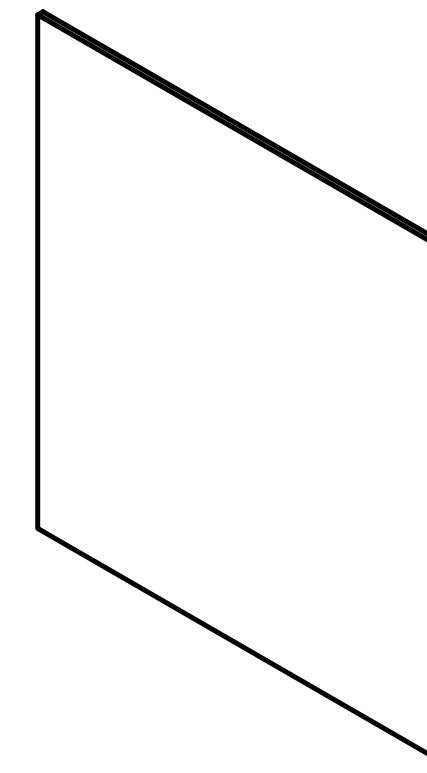


C x6

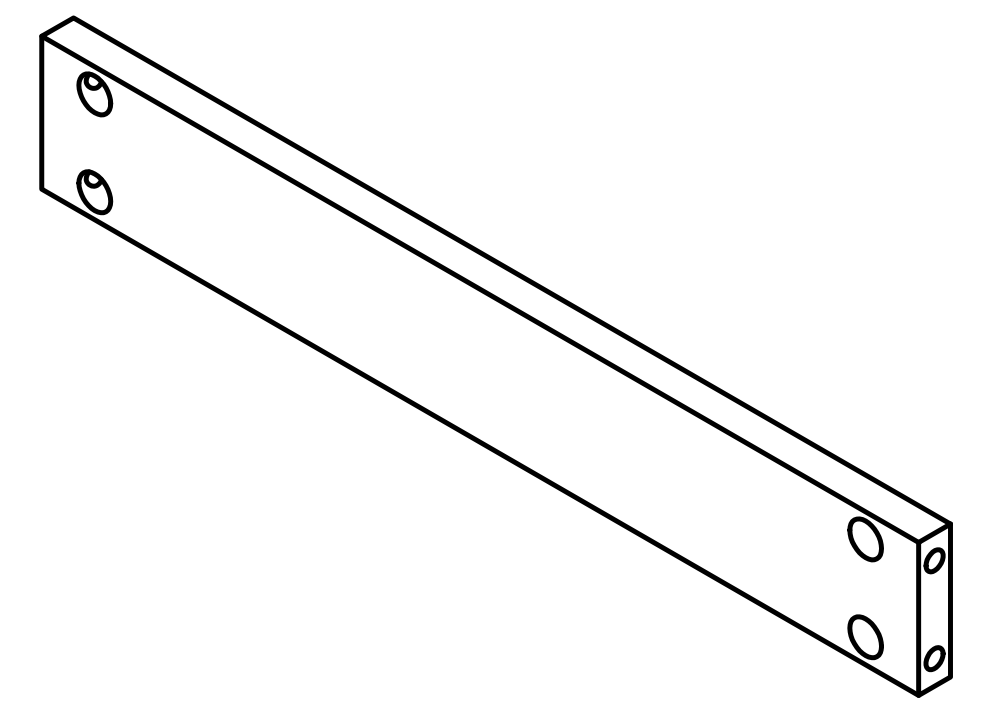


D x6

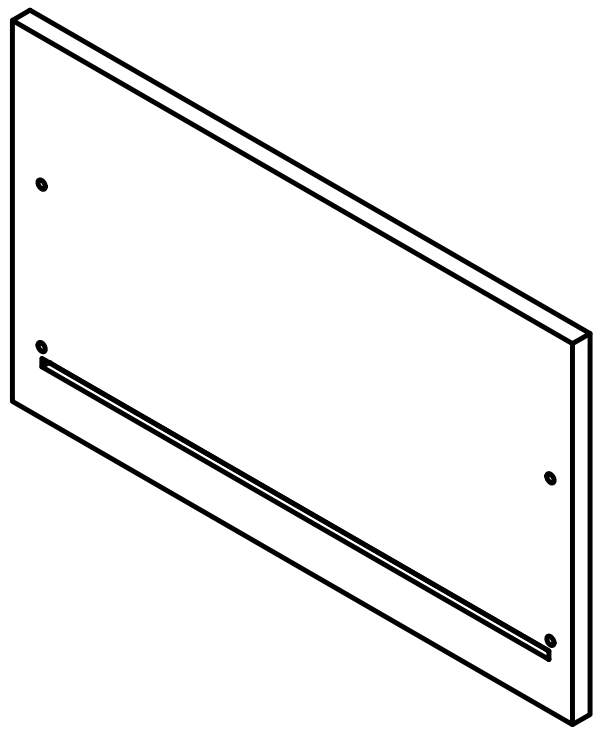


E x2

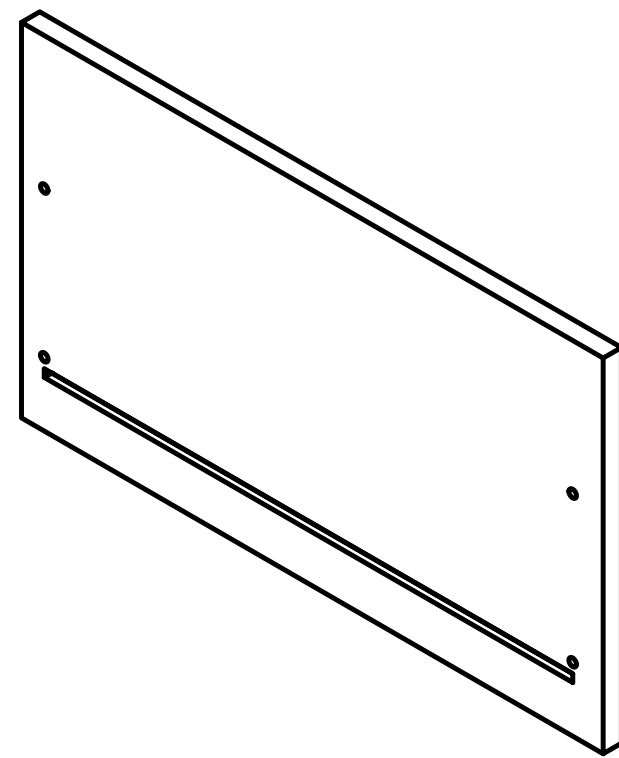


F x2

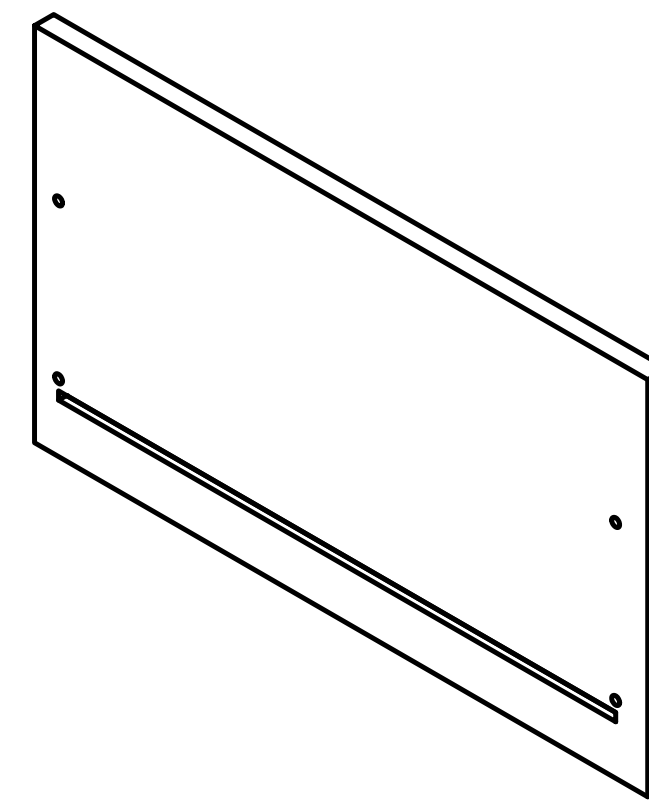


G x2

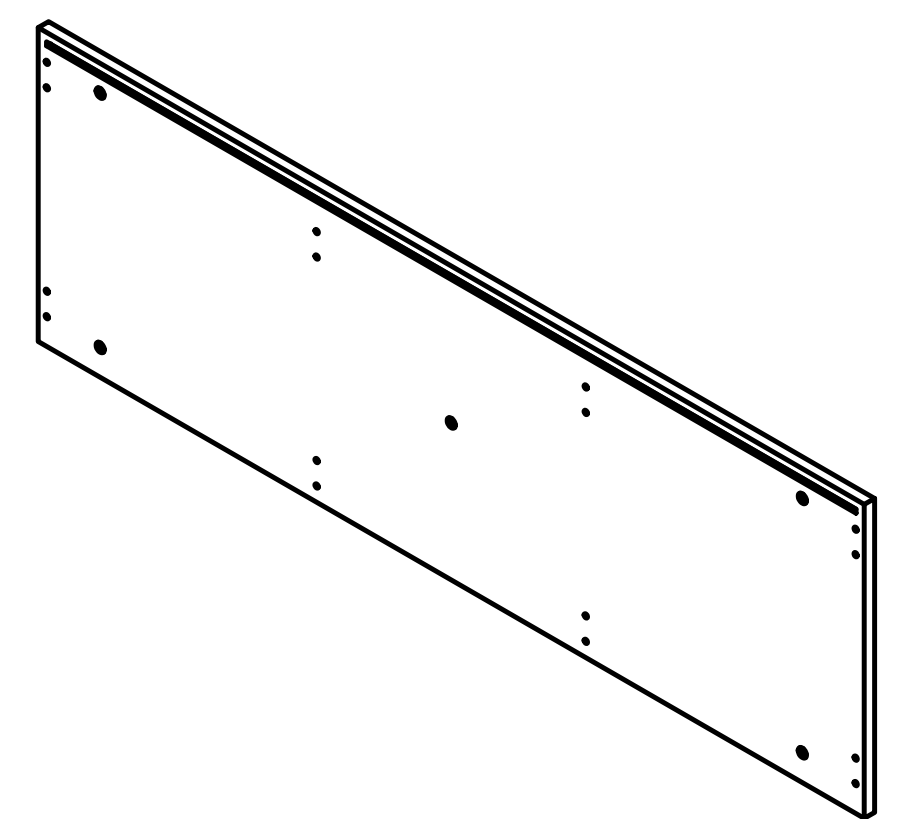


H x1

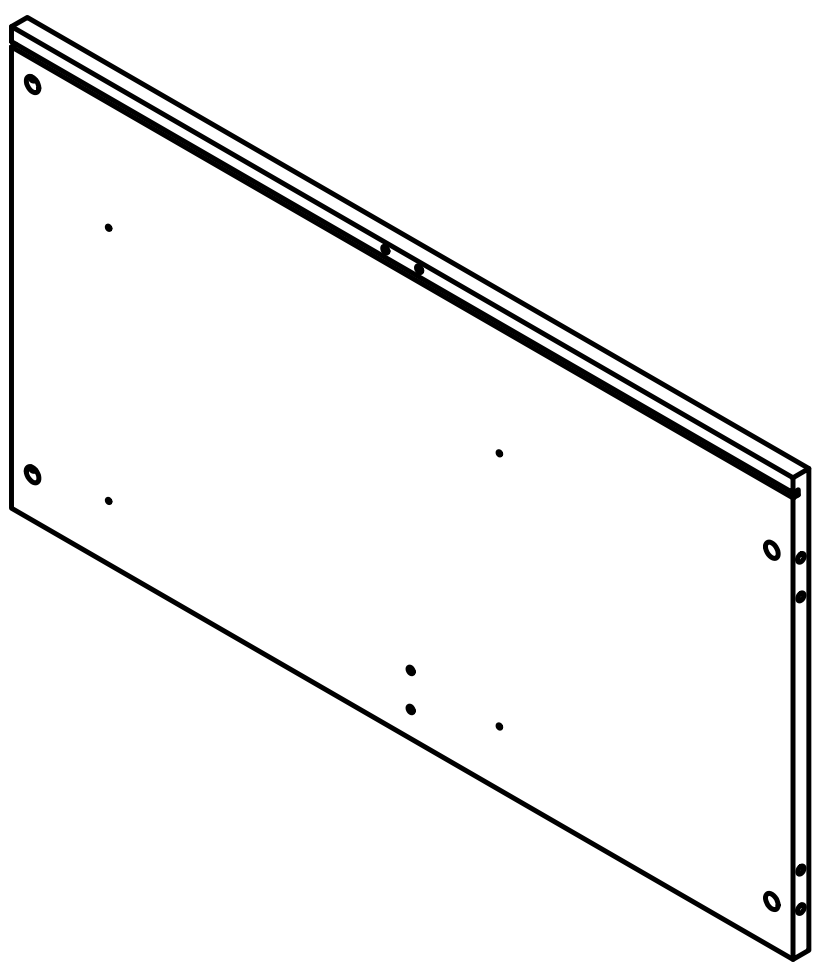


J x1

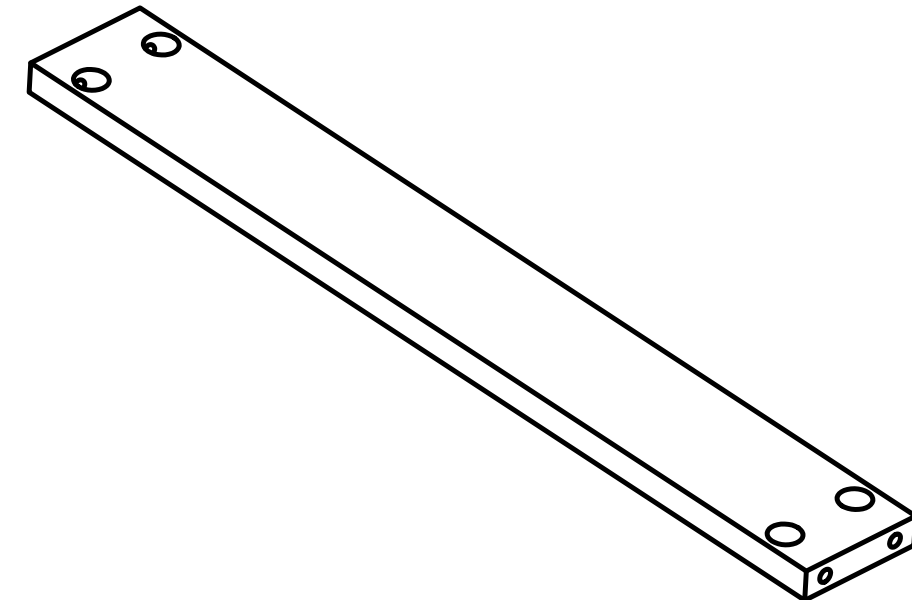


K x2

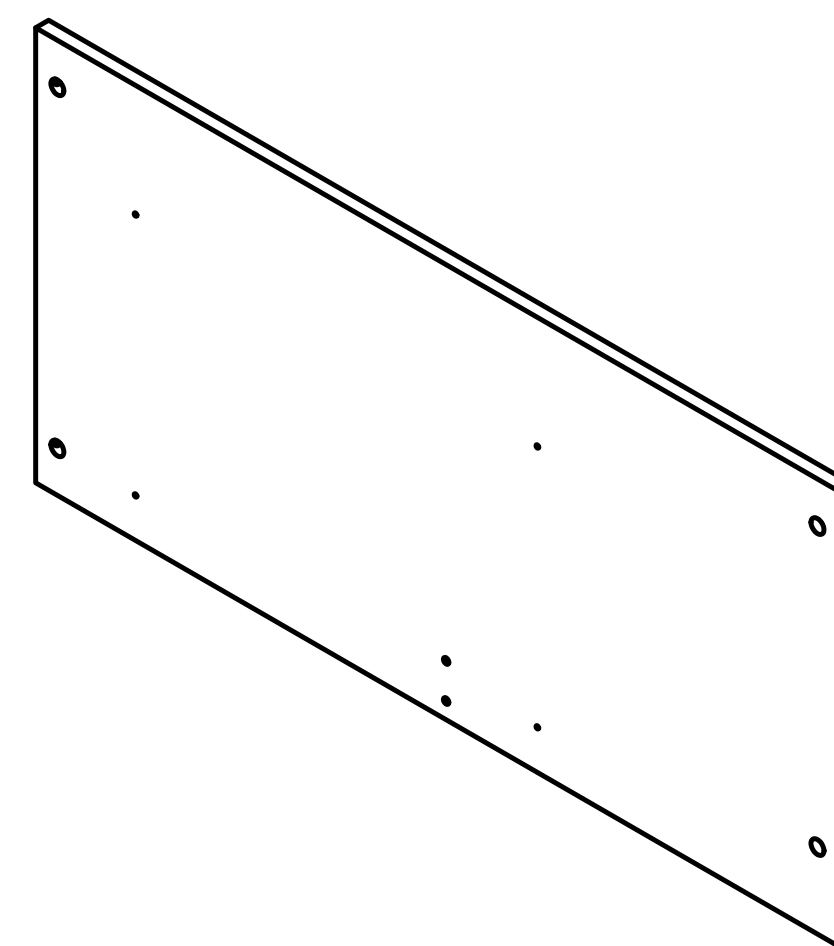


L x1

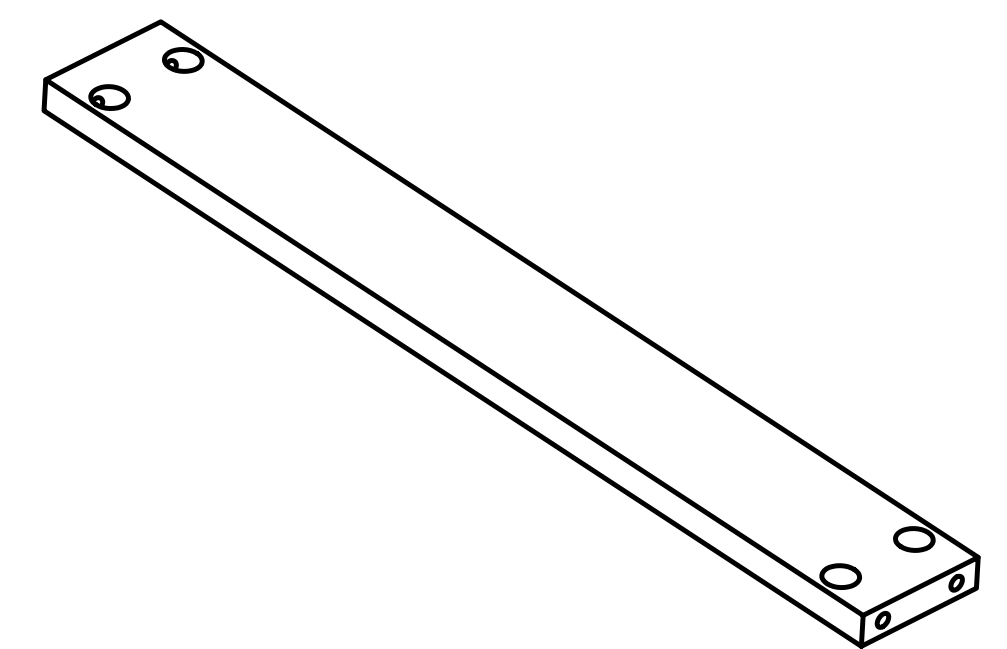


Mx1

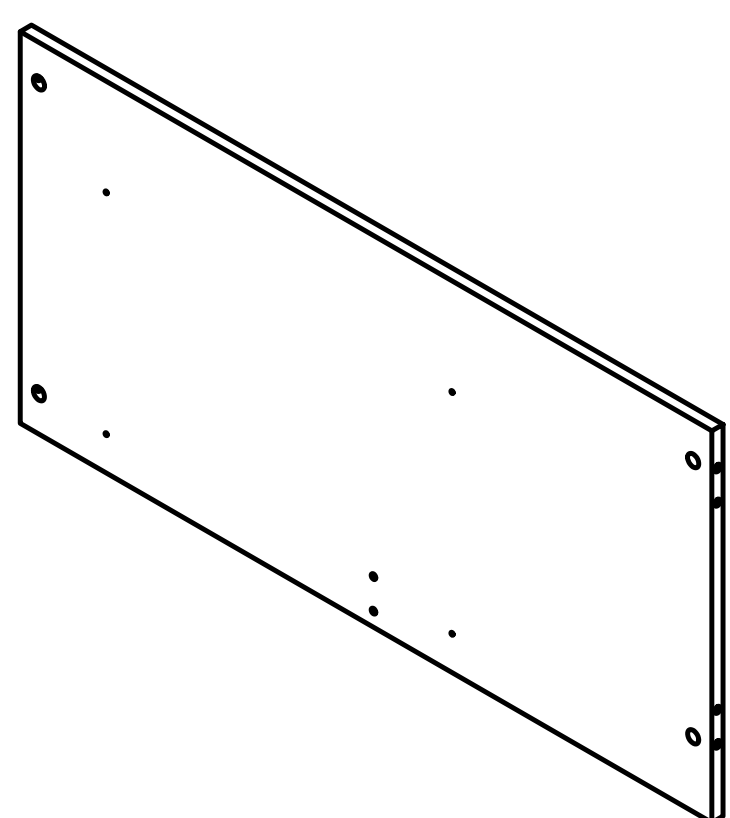


N x1

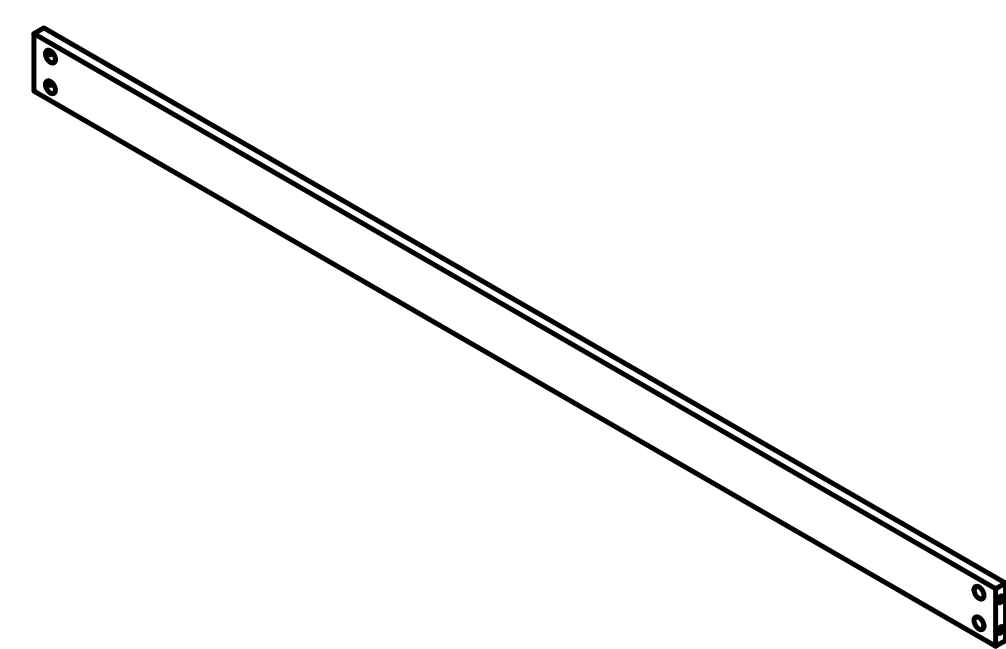


Ox1

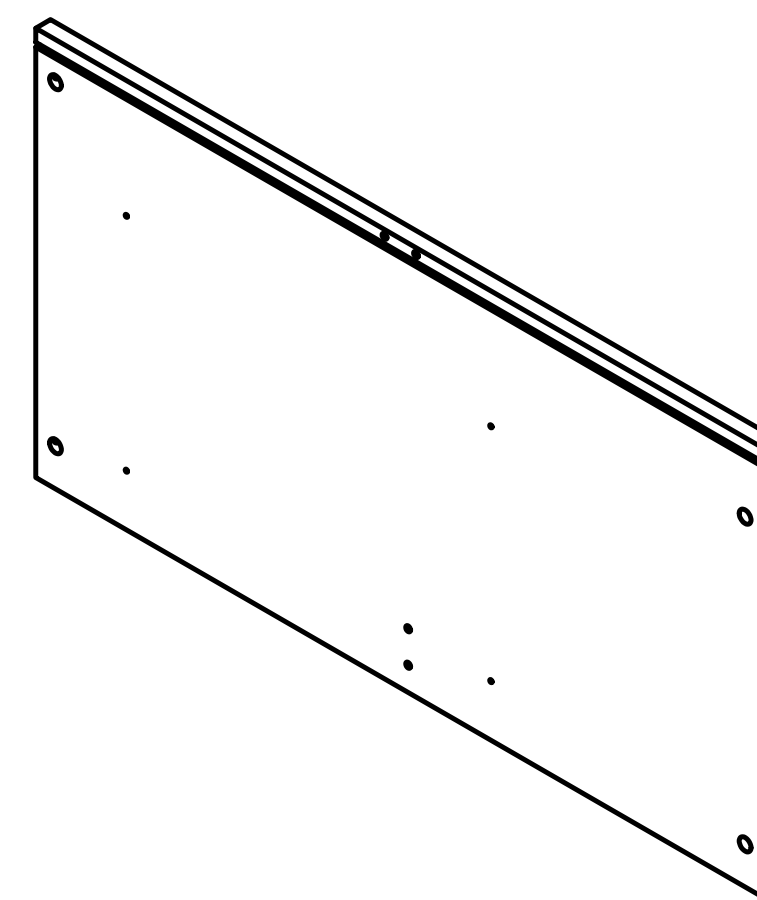


P x1











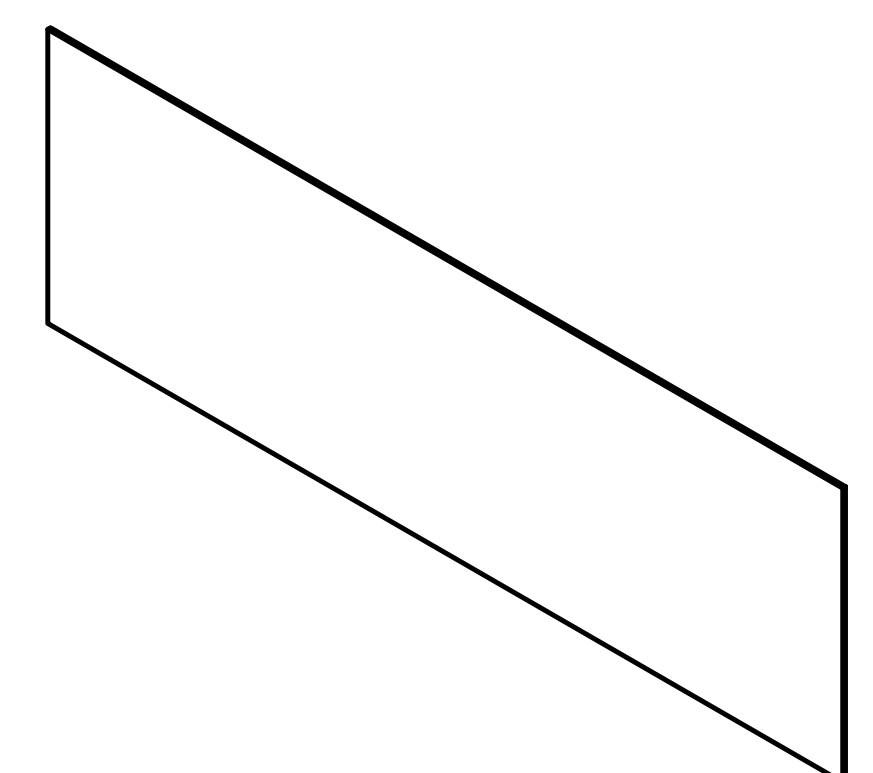


Qx2

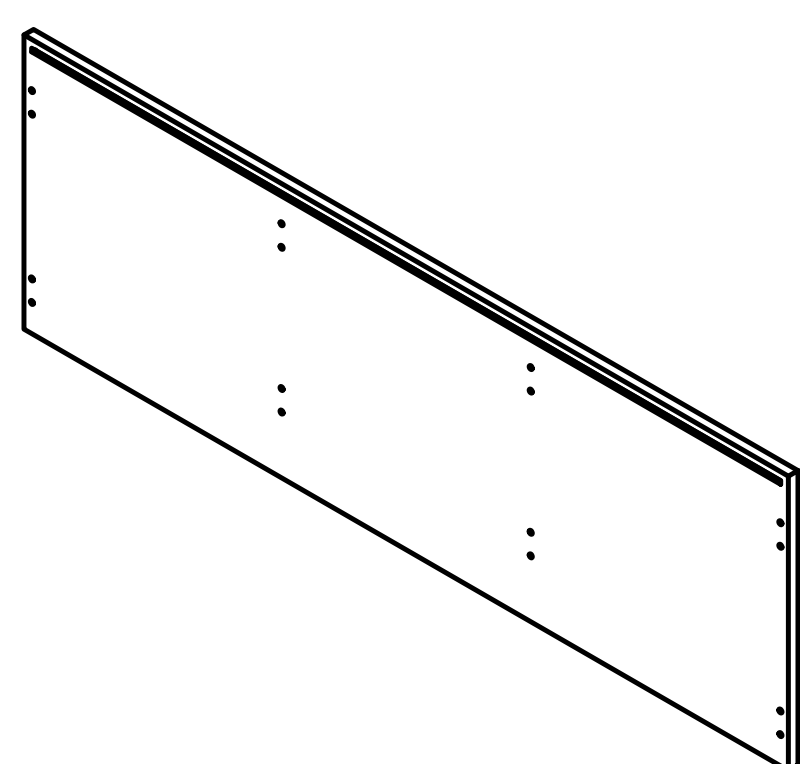


R x1

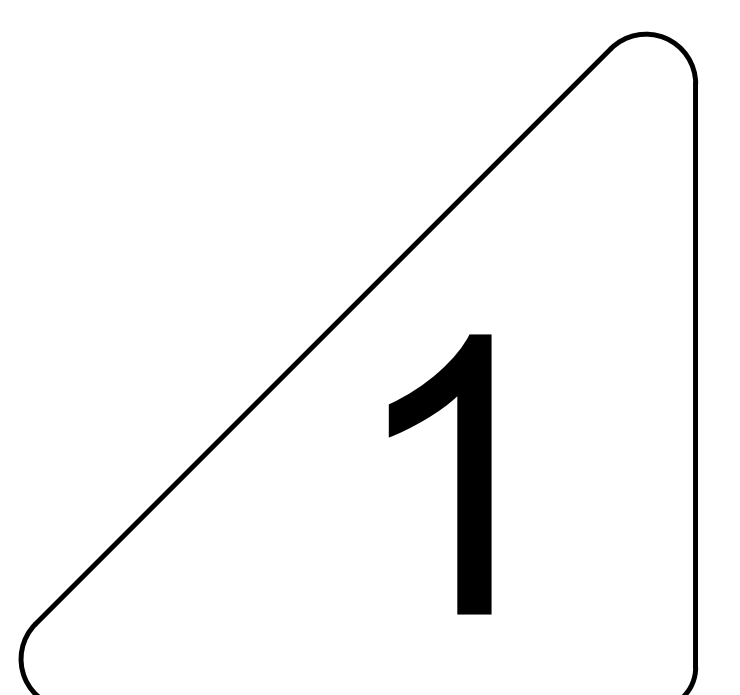

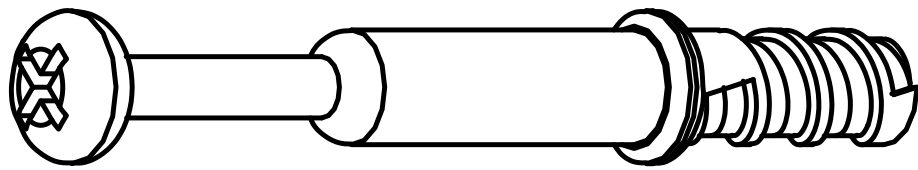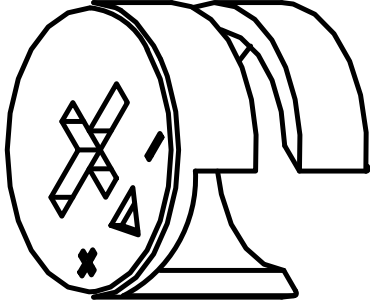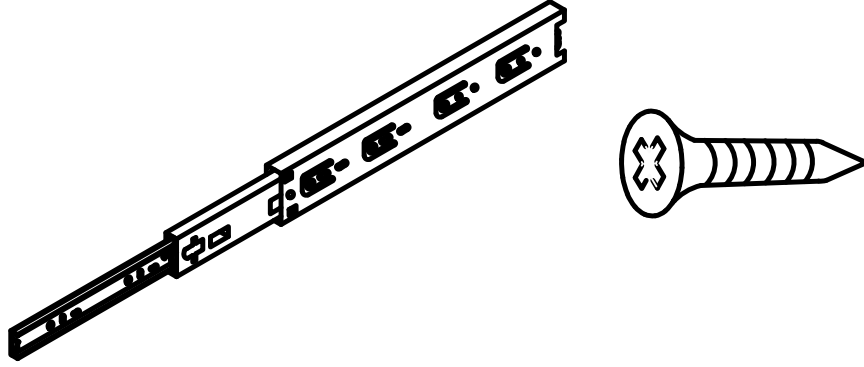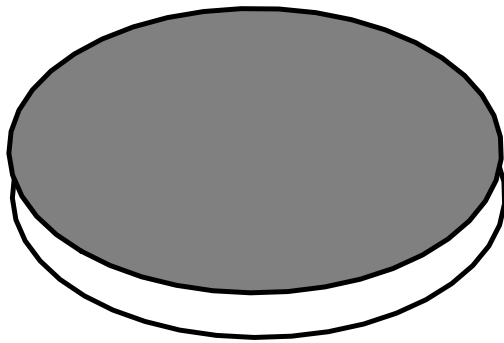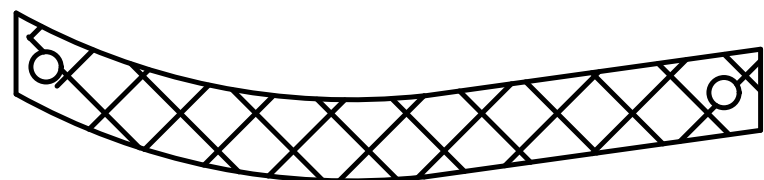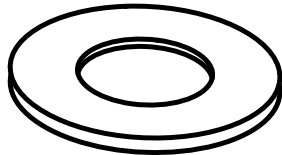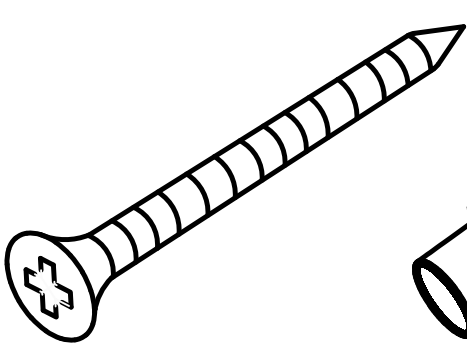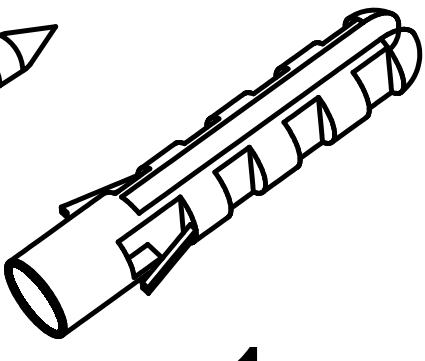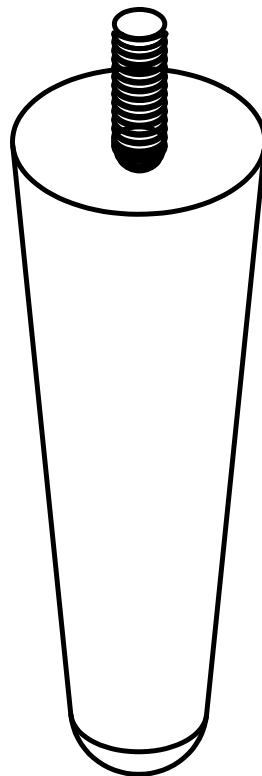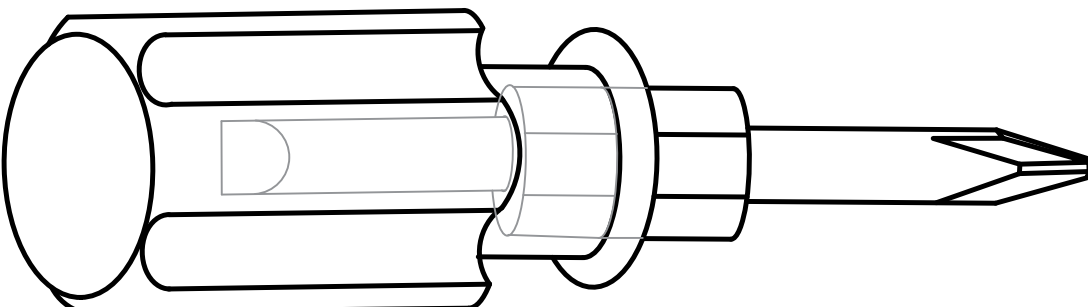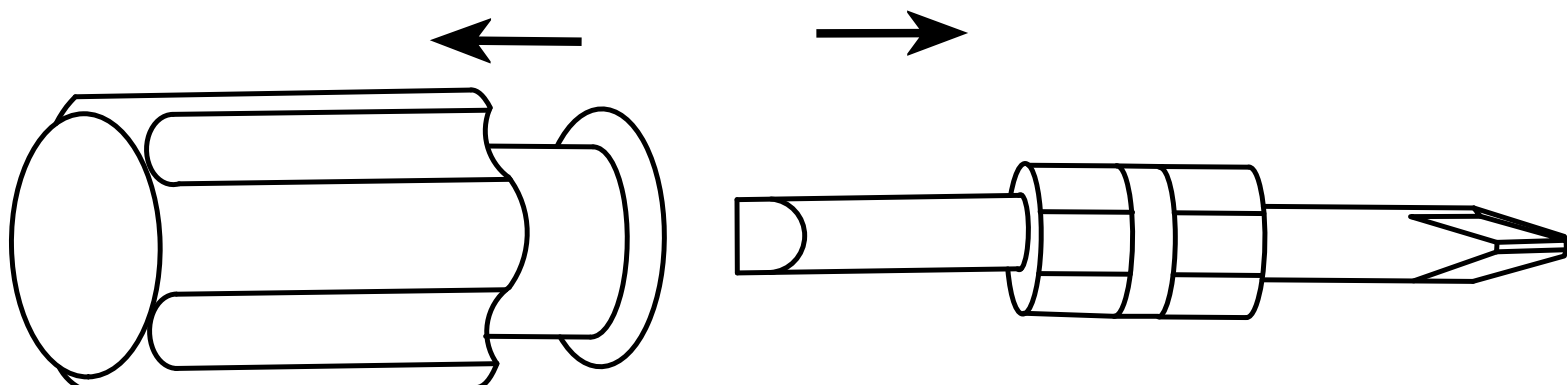
Accessories list			
1		Two In One Screw (6x28mm)	104pcs +10pcs
2		Two In One Nut (10x12mm)	104pcs +10pcs
3		Wood Chipping (6x30mm)	16pcs +3pcs
4		Guide rails & screws (3x12mm) 29cm	60pcs +12pcs 12pcs
5		Non-slip pads (φ12x2mm)	5pcs +1pcs
6		Fixing Clip & Screw (3x16mm)	12pcs +1pcs
7	 1pcs  1pcs  2pcs  1pcs  1pcs	anti-tipping tape Screw & gasket (3.5x12mm) Screw (4x45mm)	1pcs
I		wooden foot	6pcs
 1pcs  Double-head screwdriver, use as required 2			

Product structure decomposition

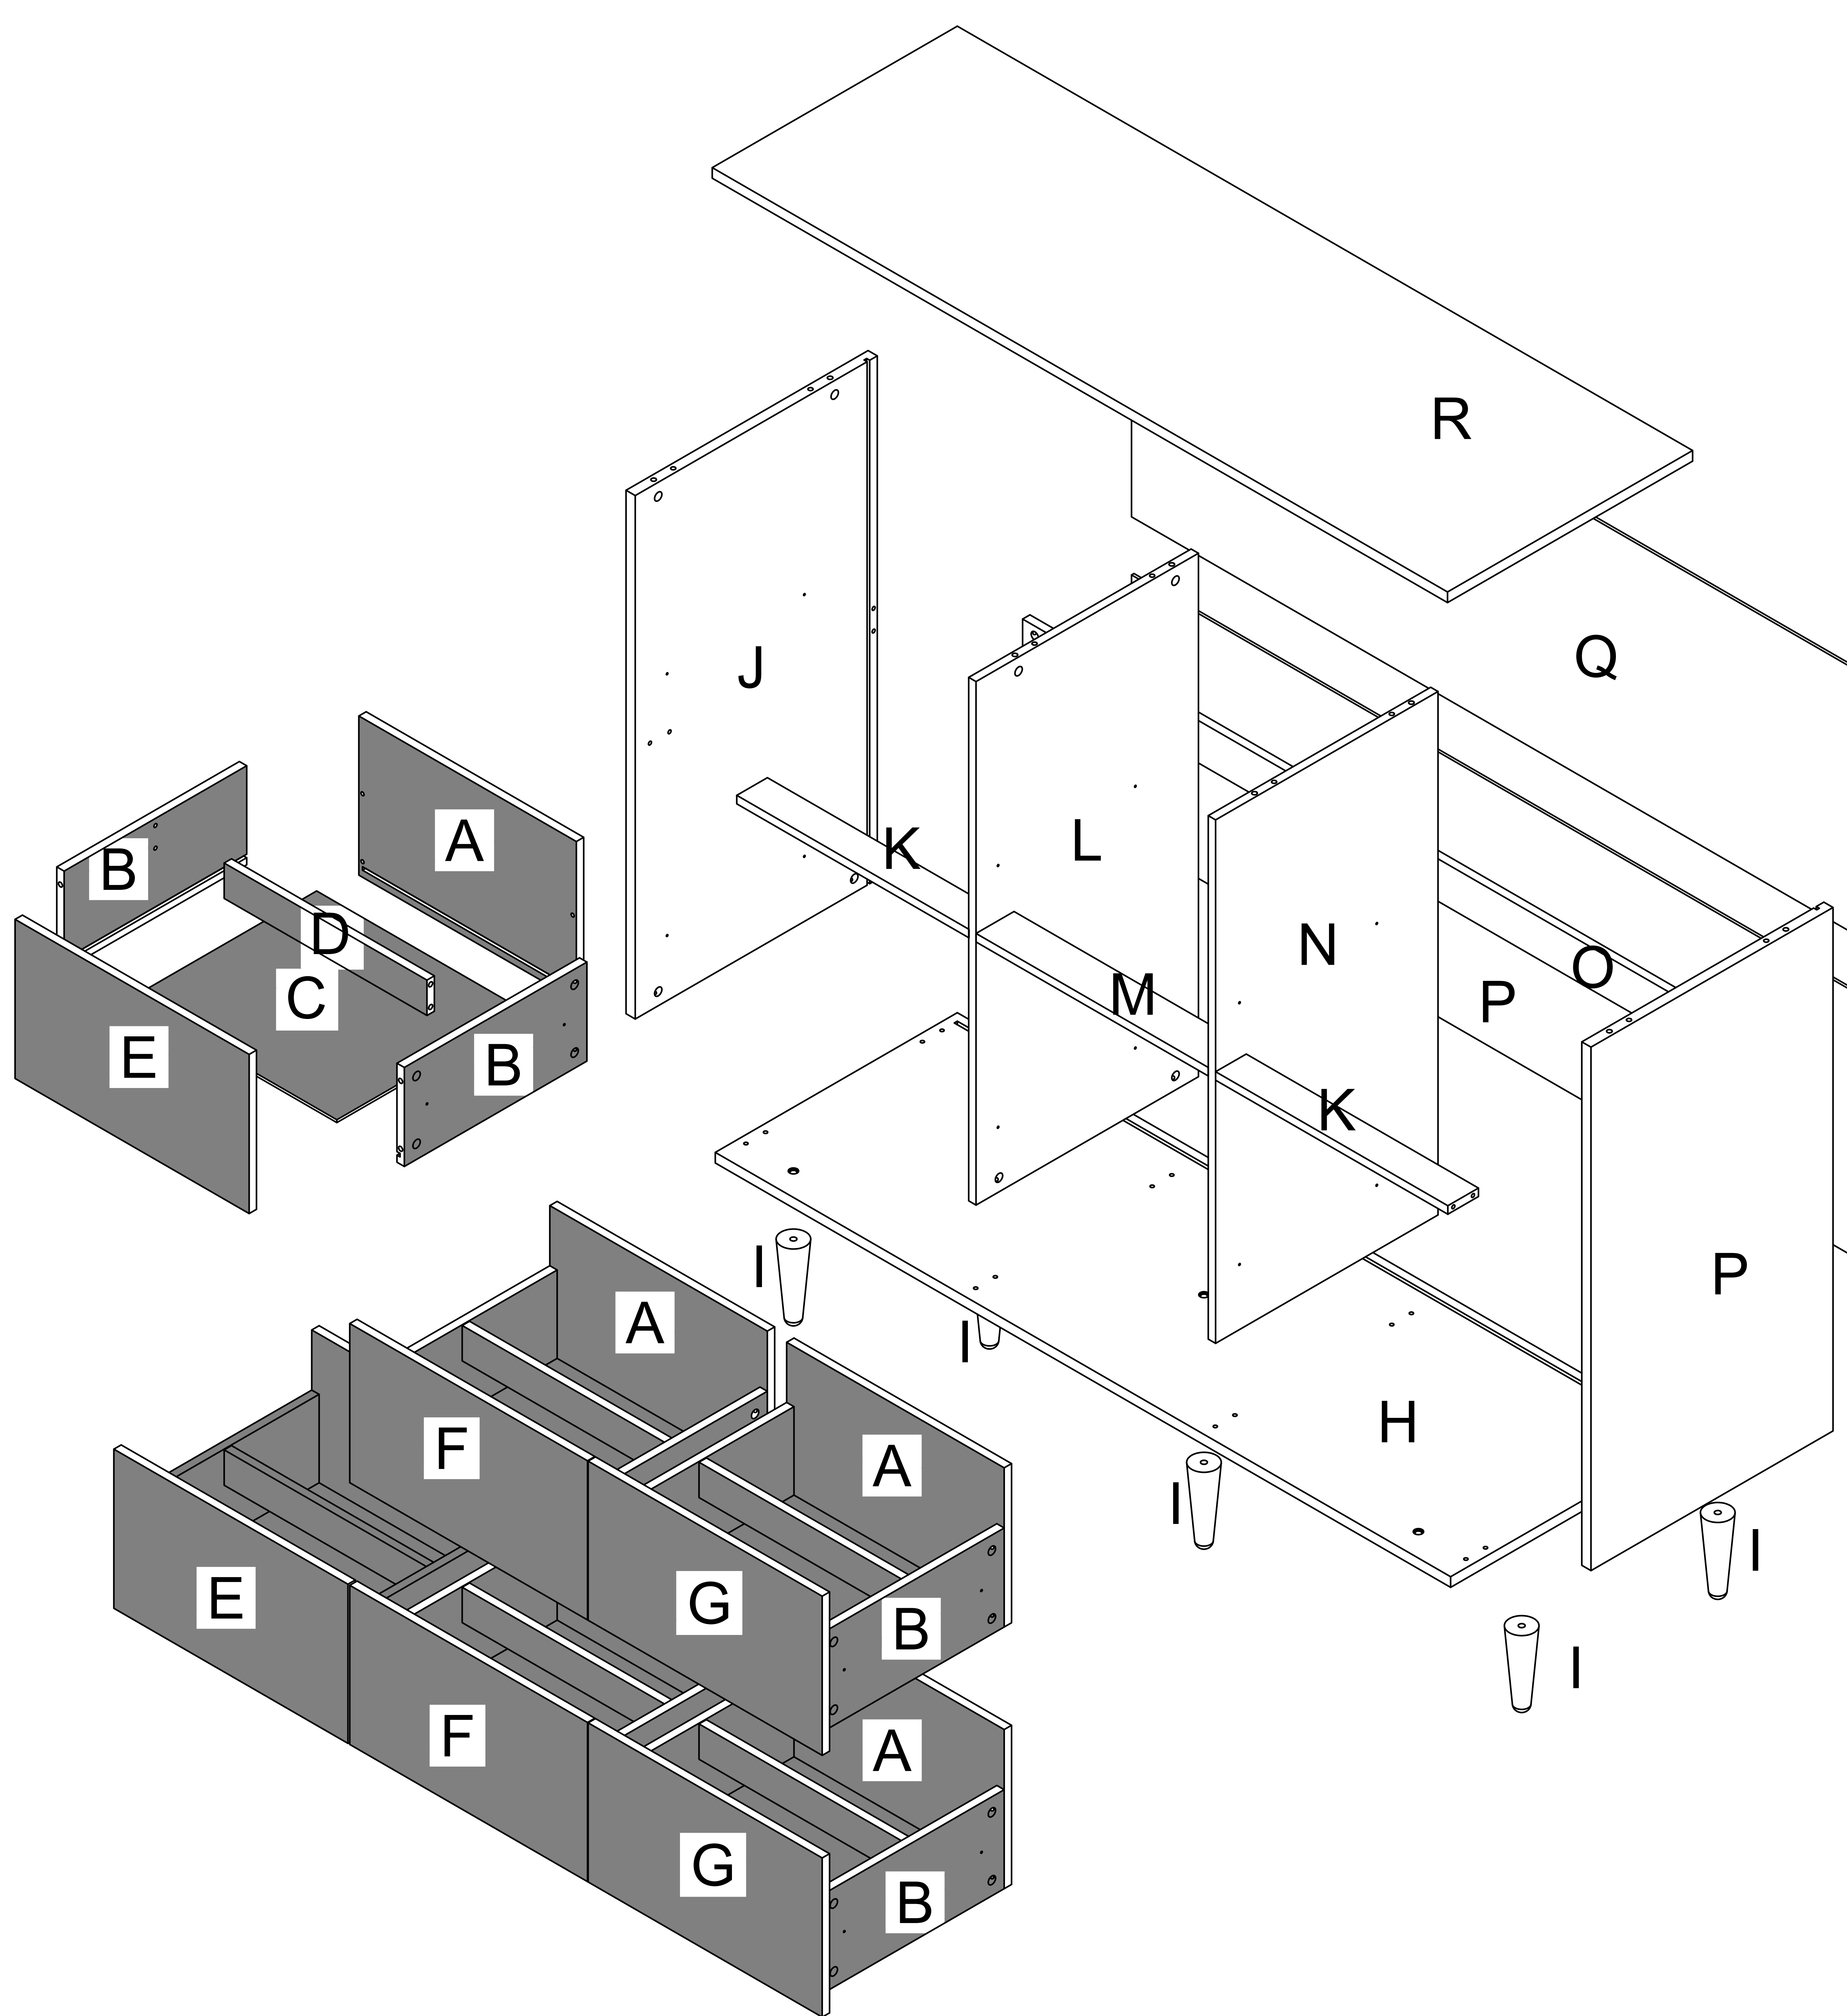


Use parts ① and ②




Step1

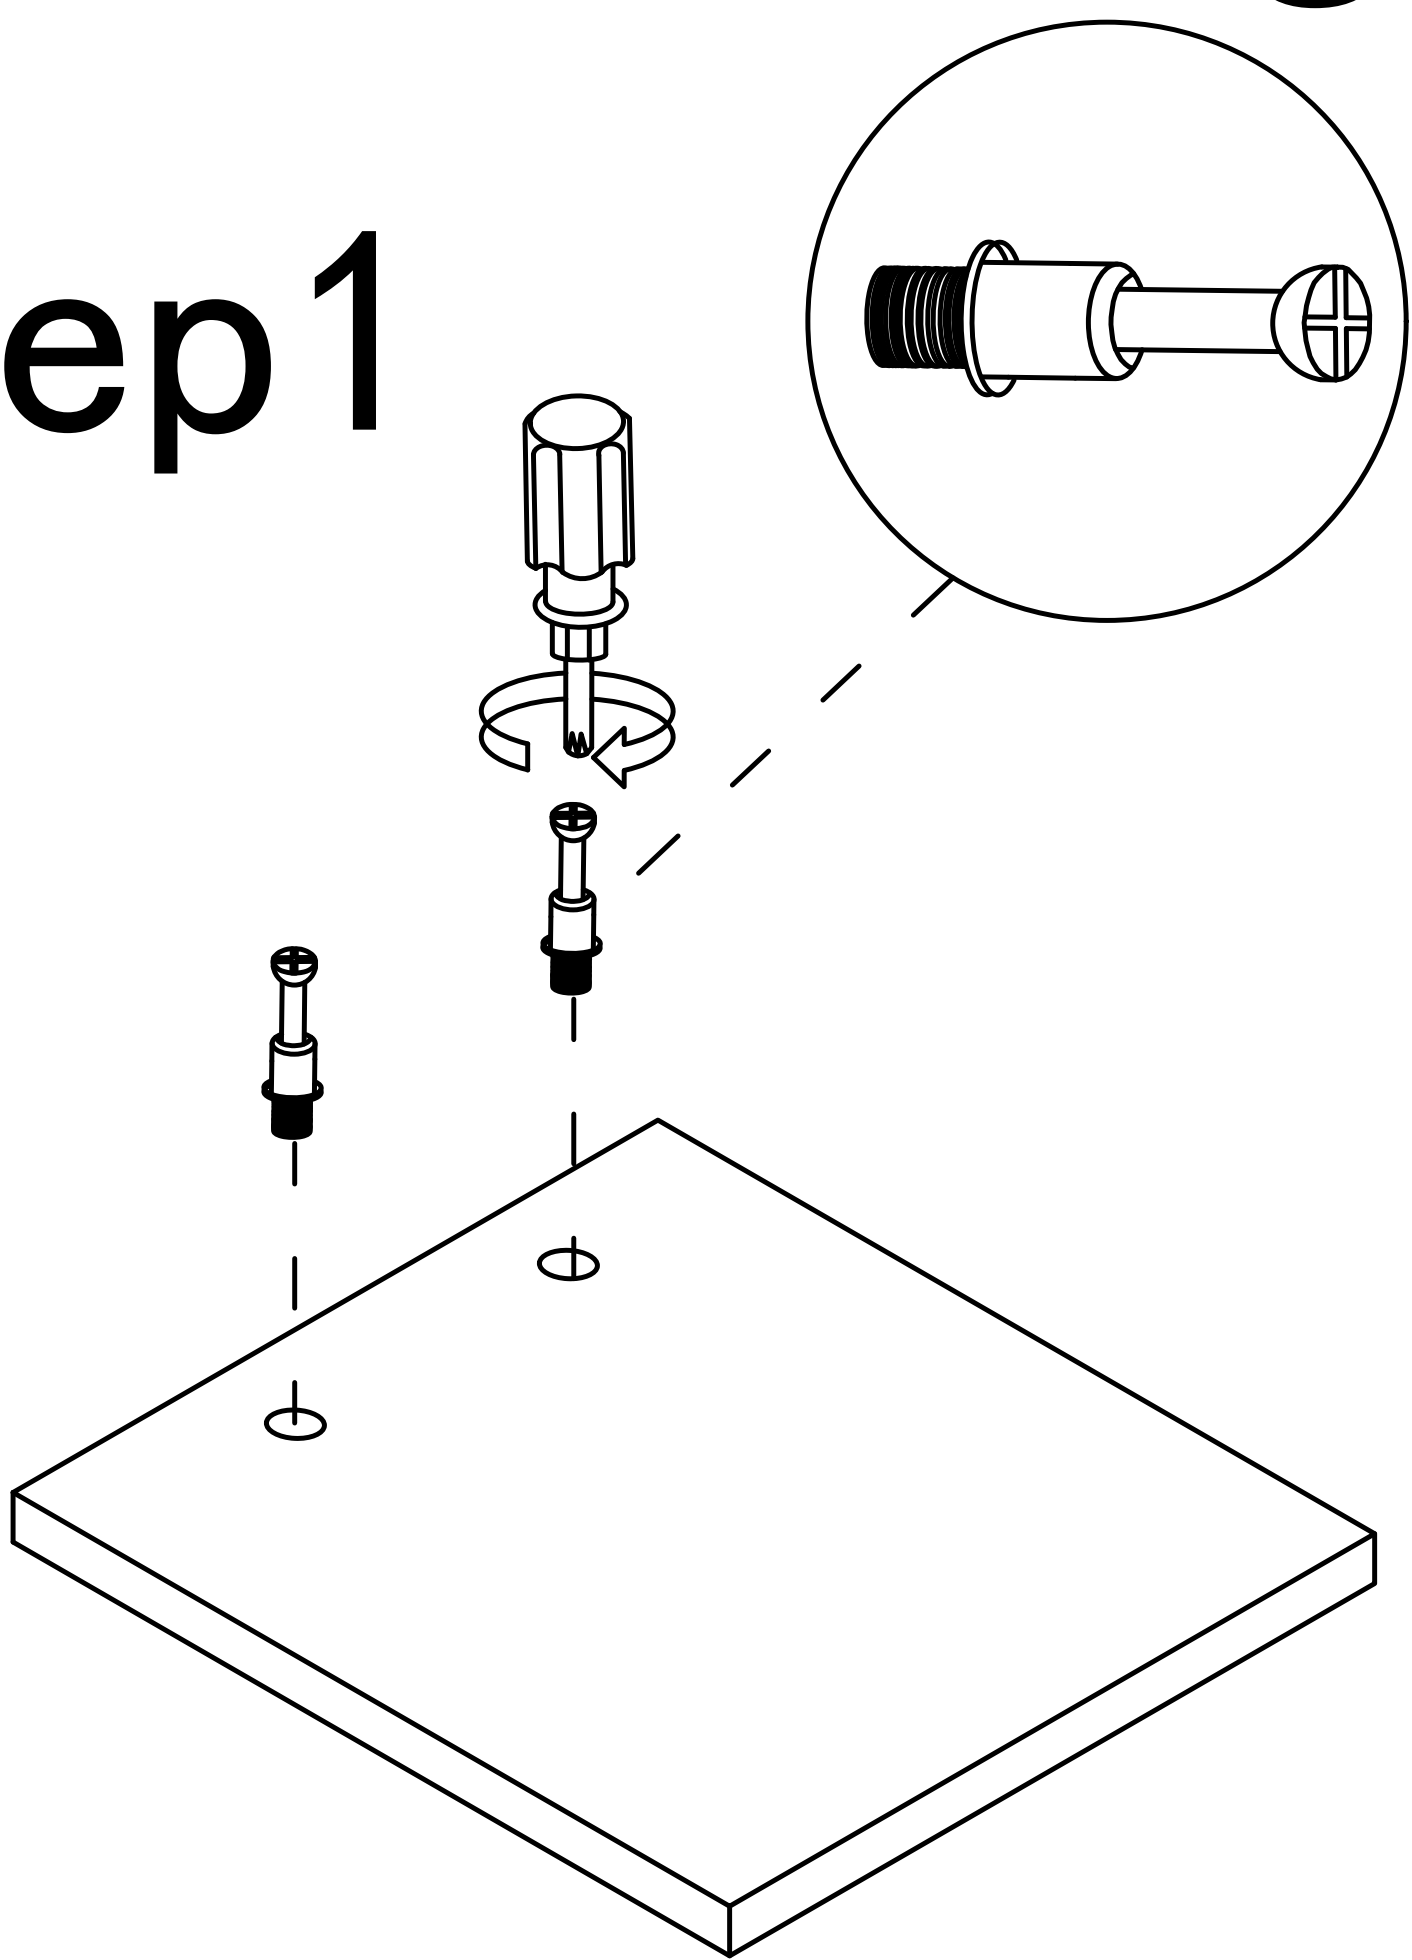

Step2

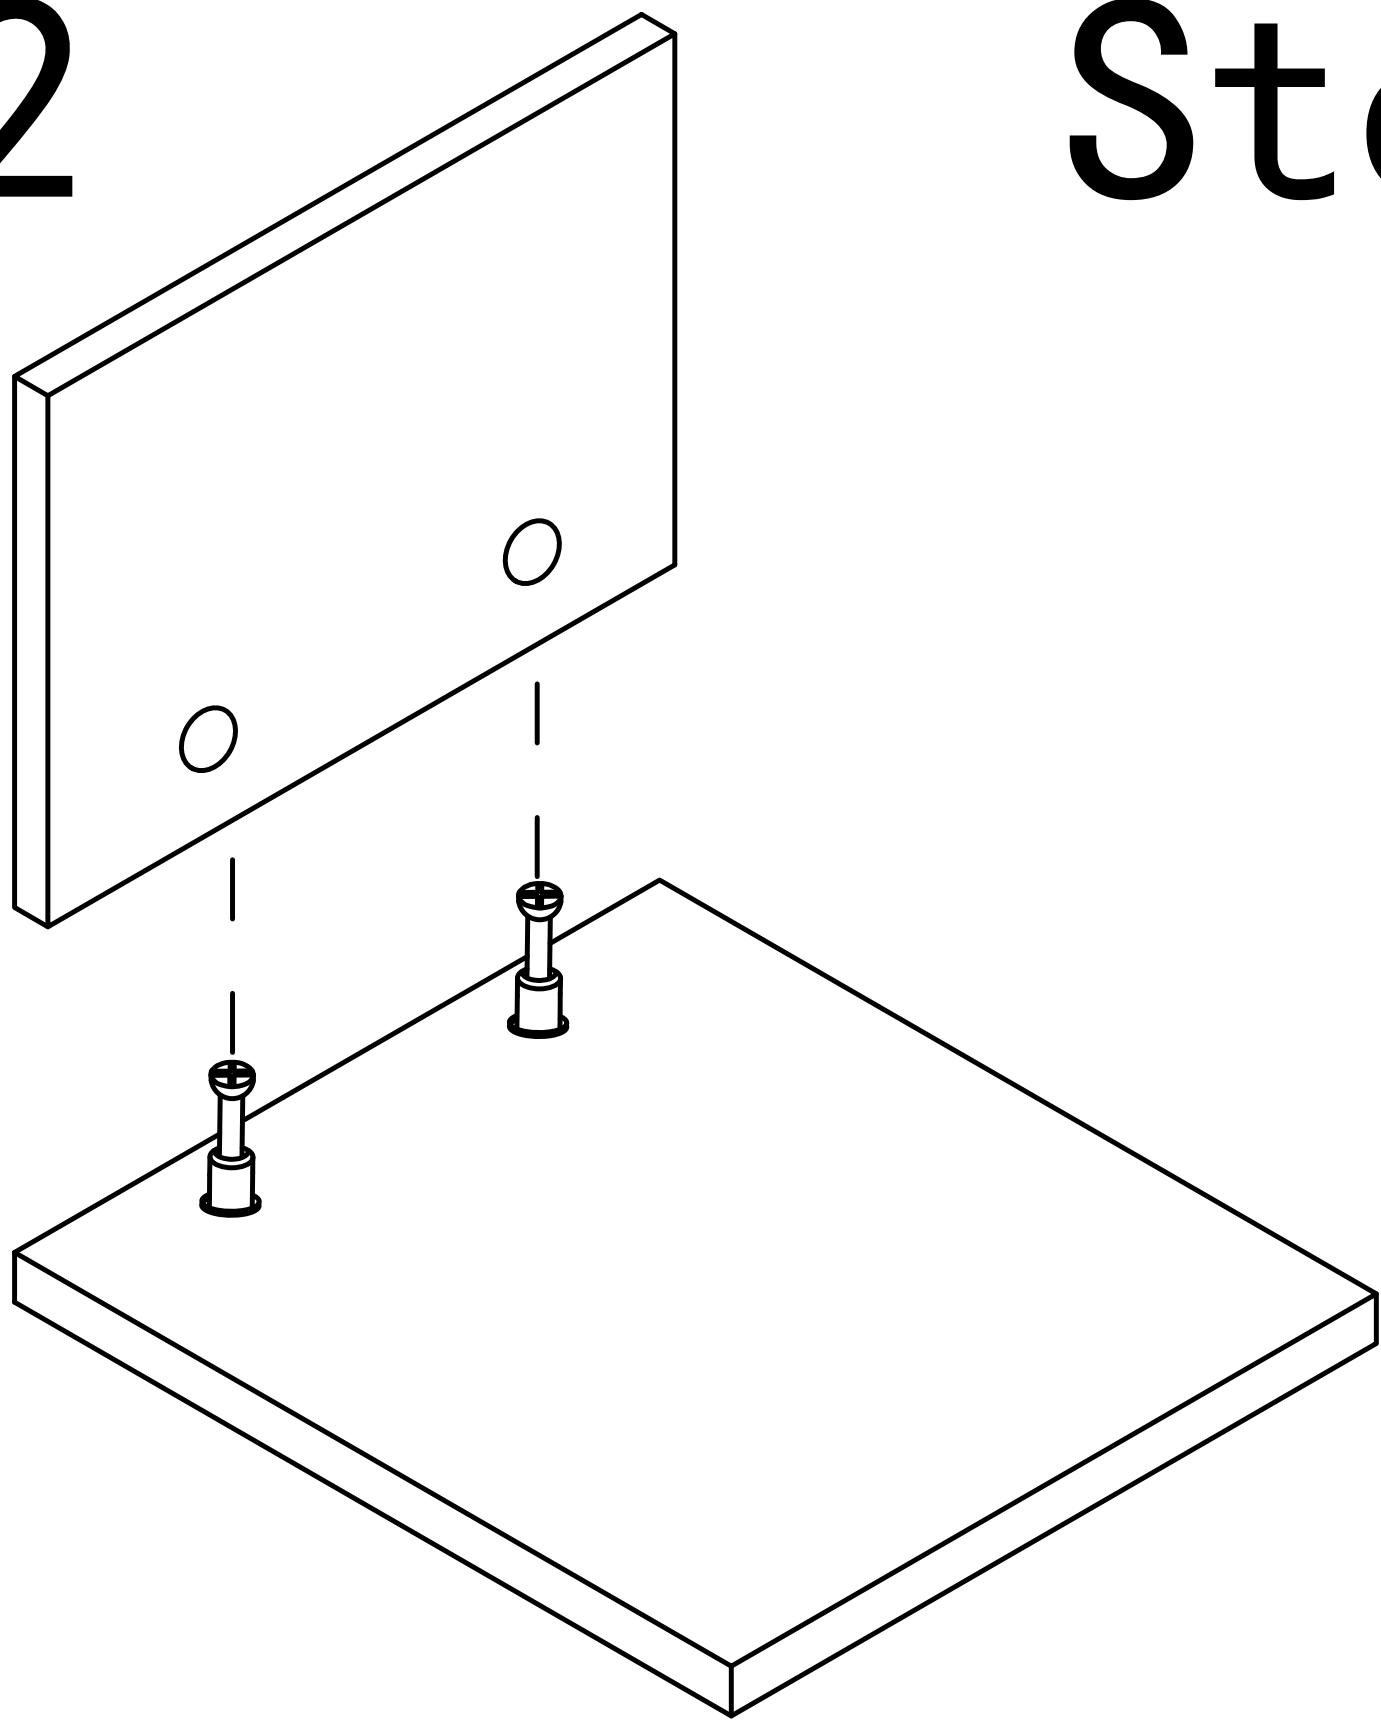



Step3

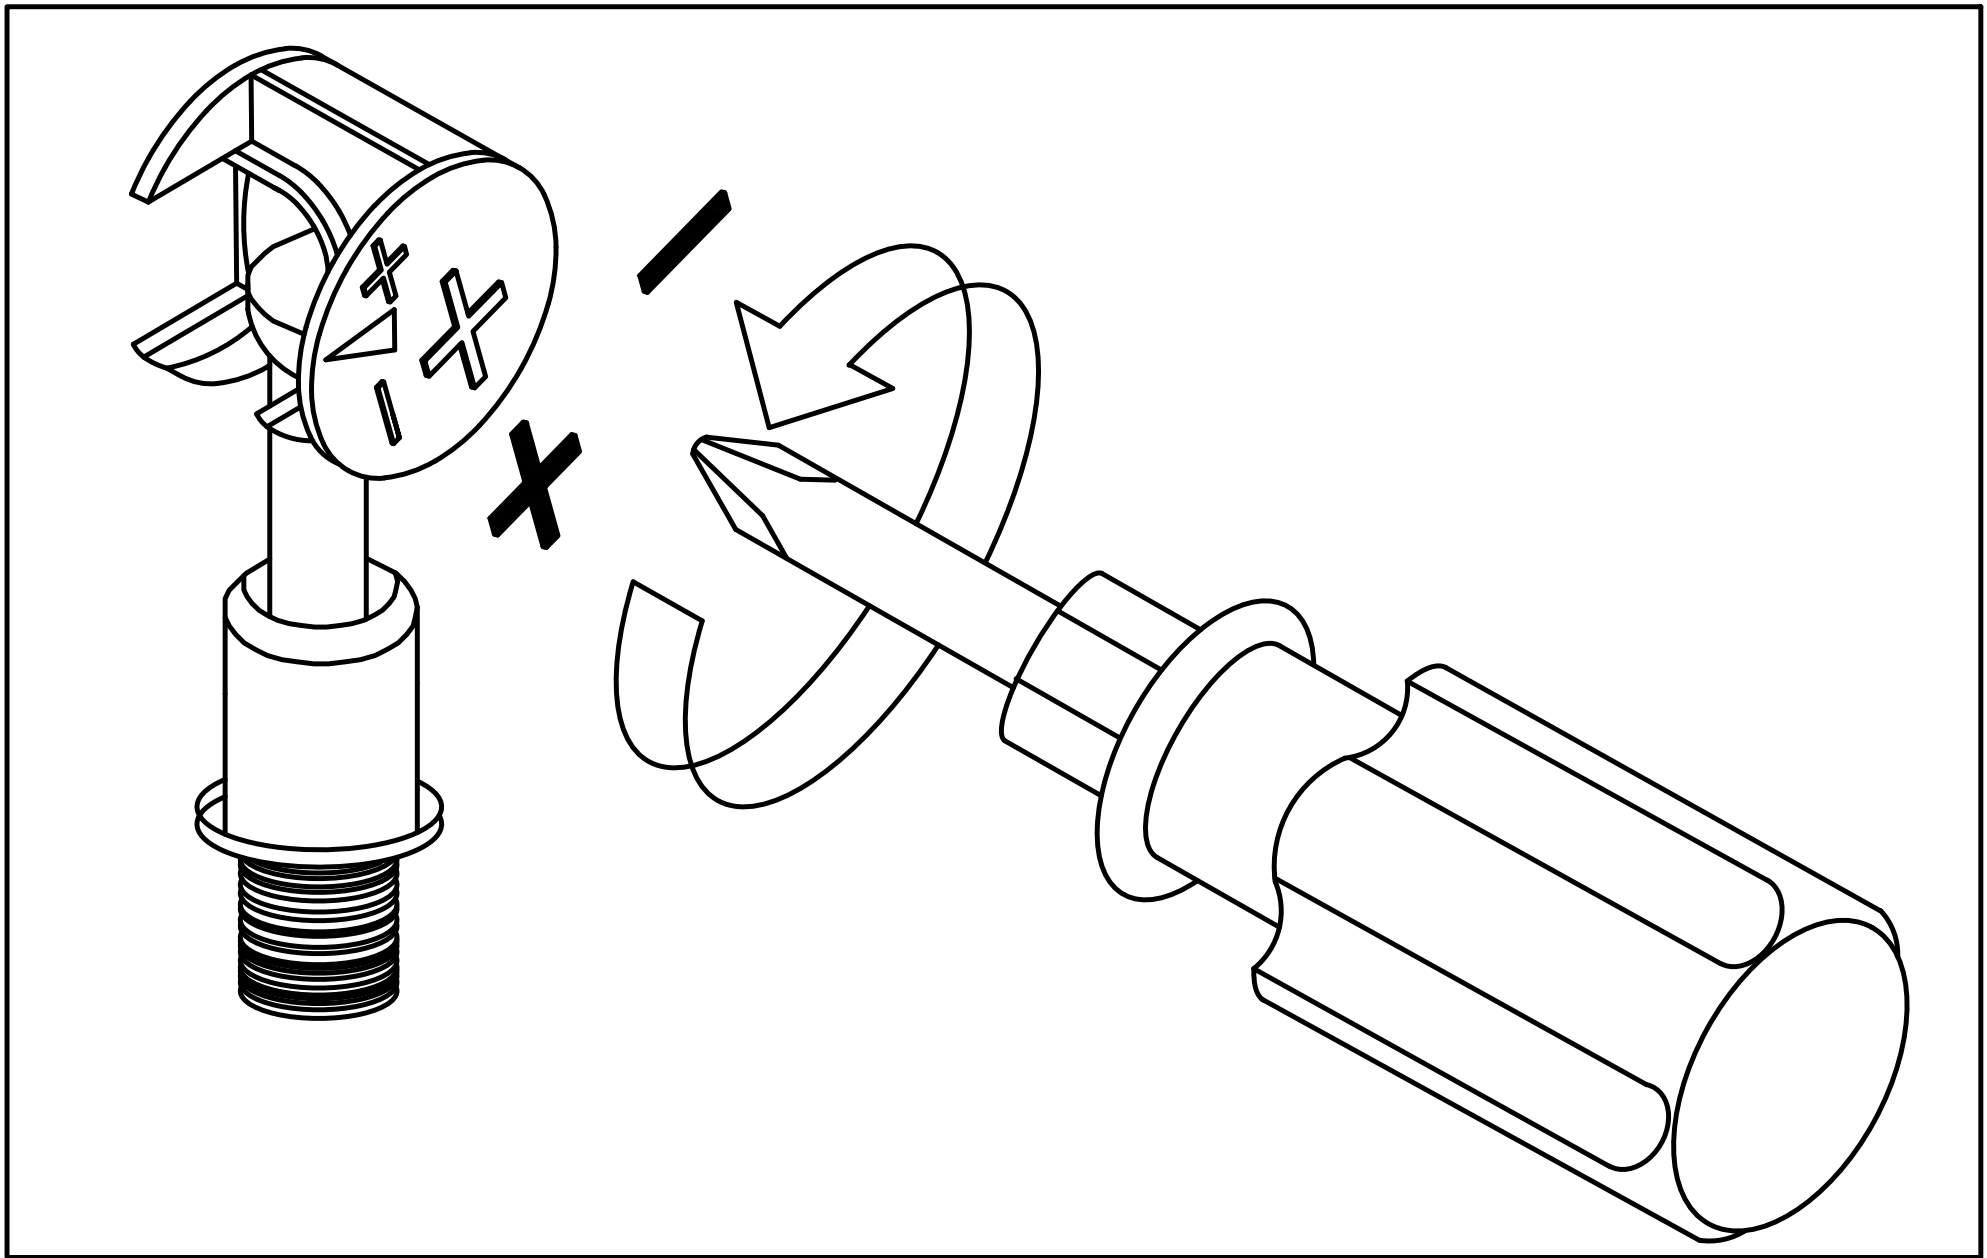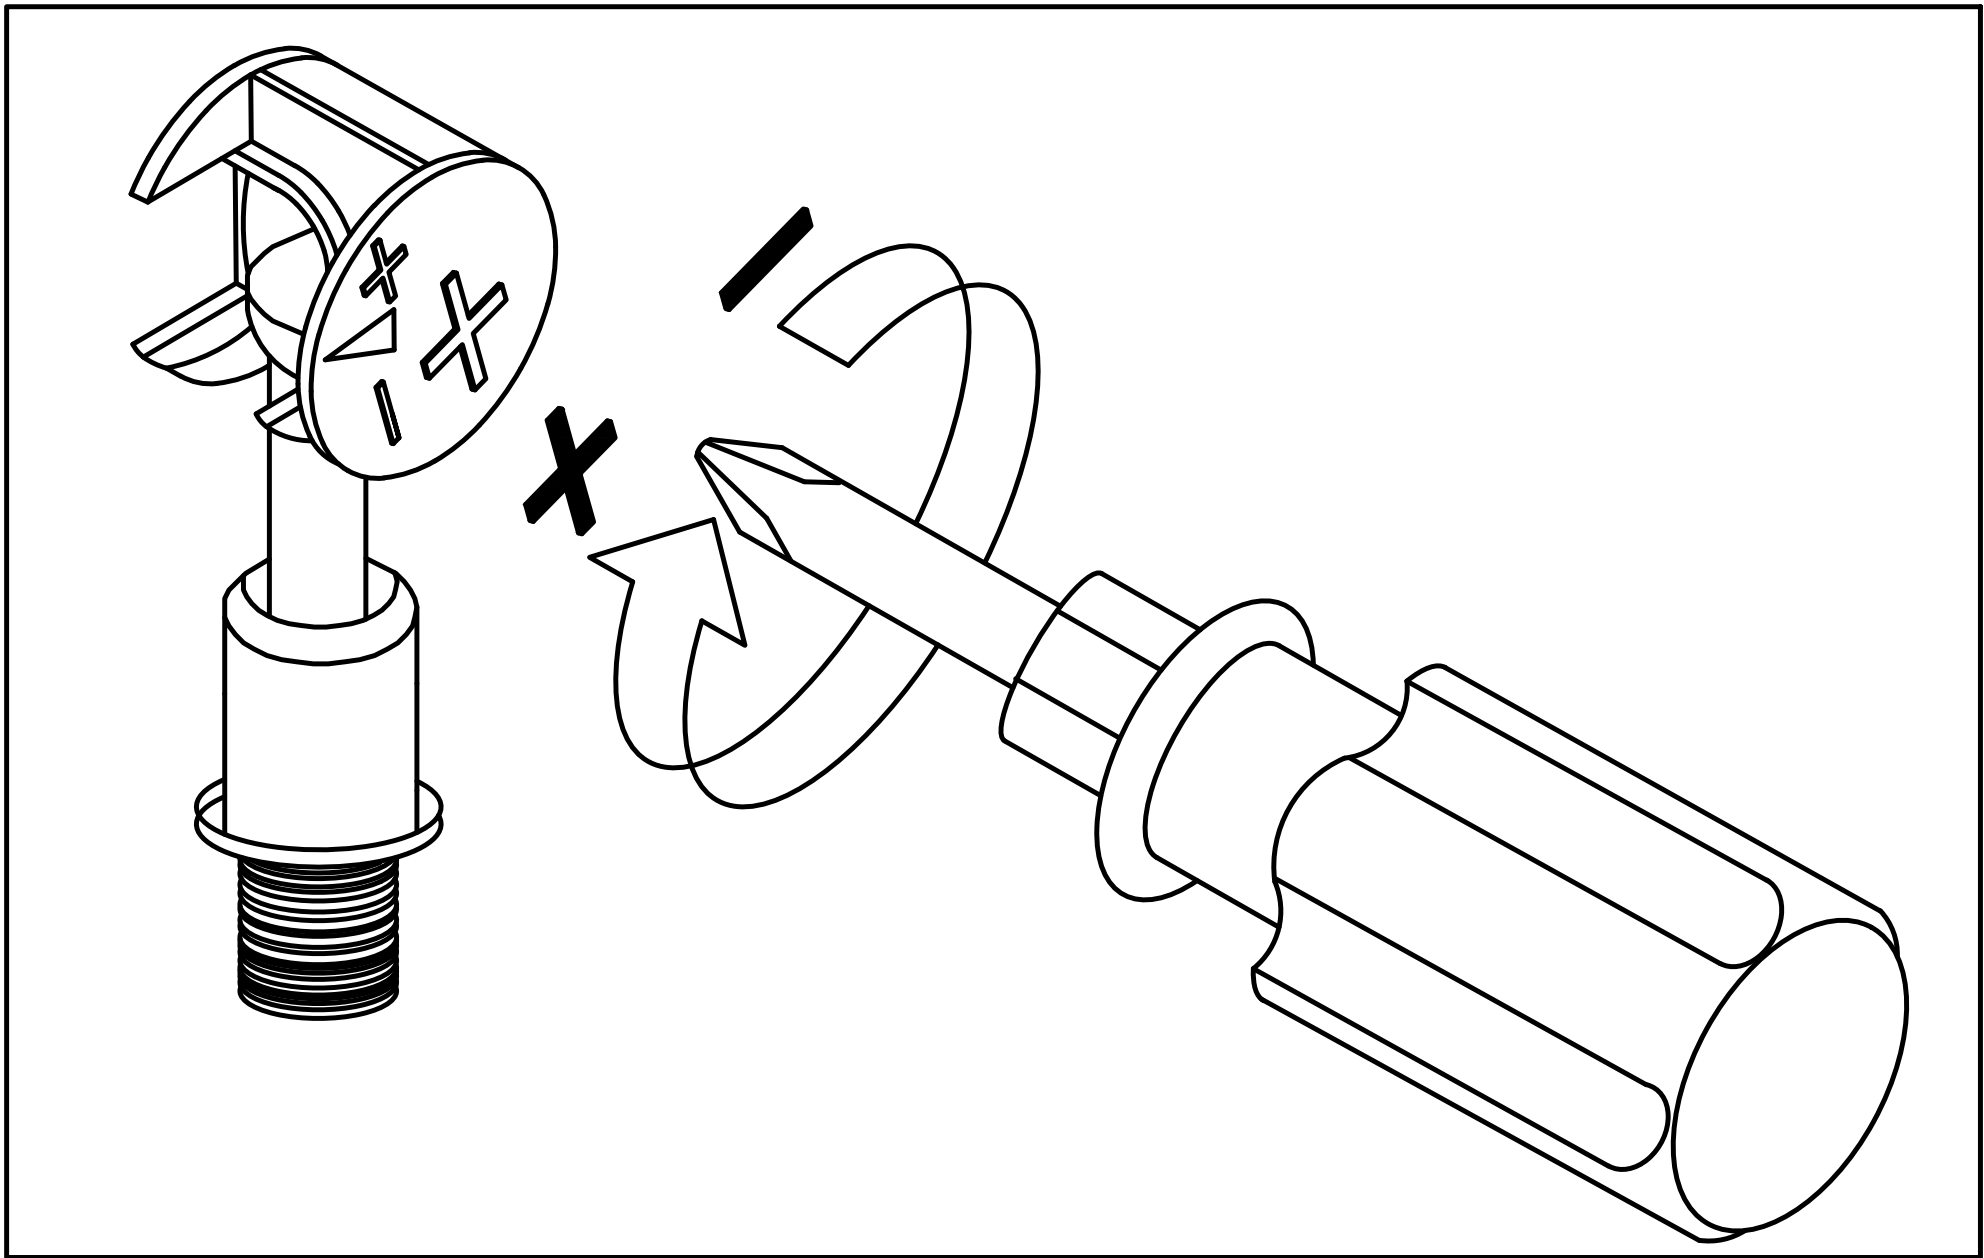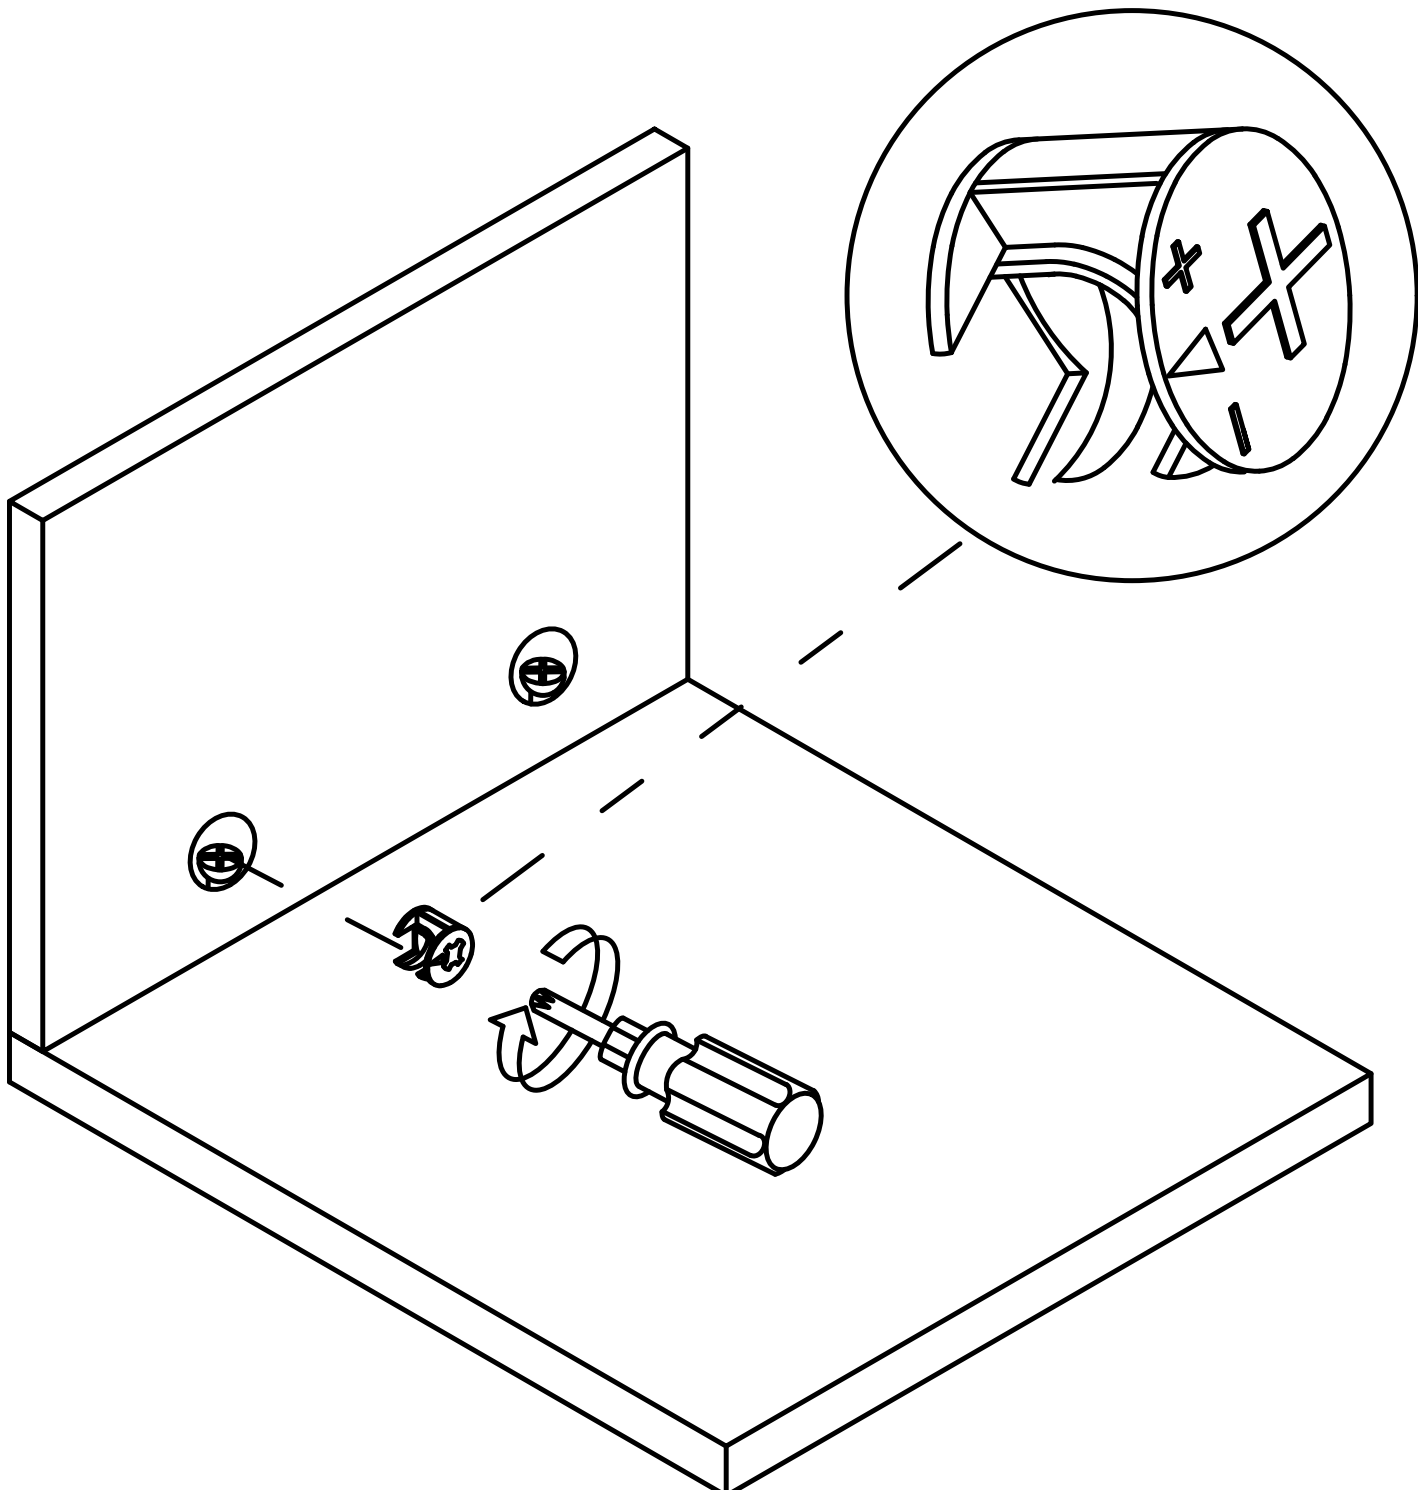



Use a screwdriver to lock in the direction of the "+" sign

Disassemble along the direction of "-" sign

Step 1

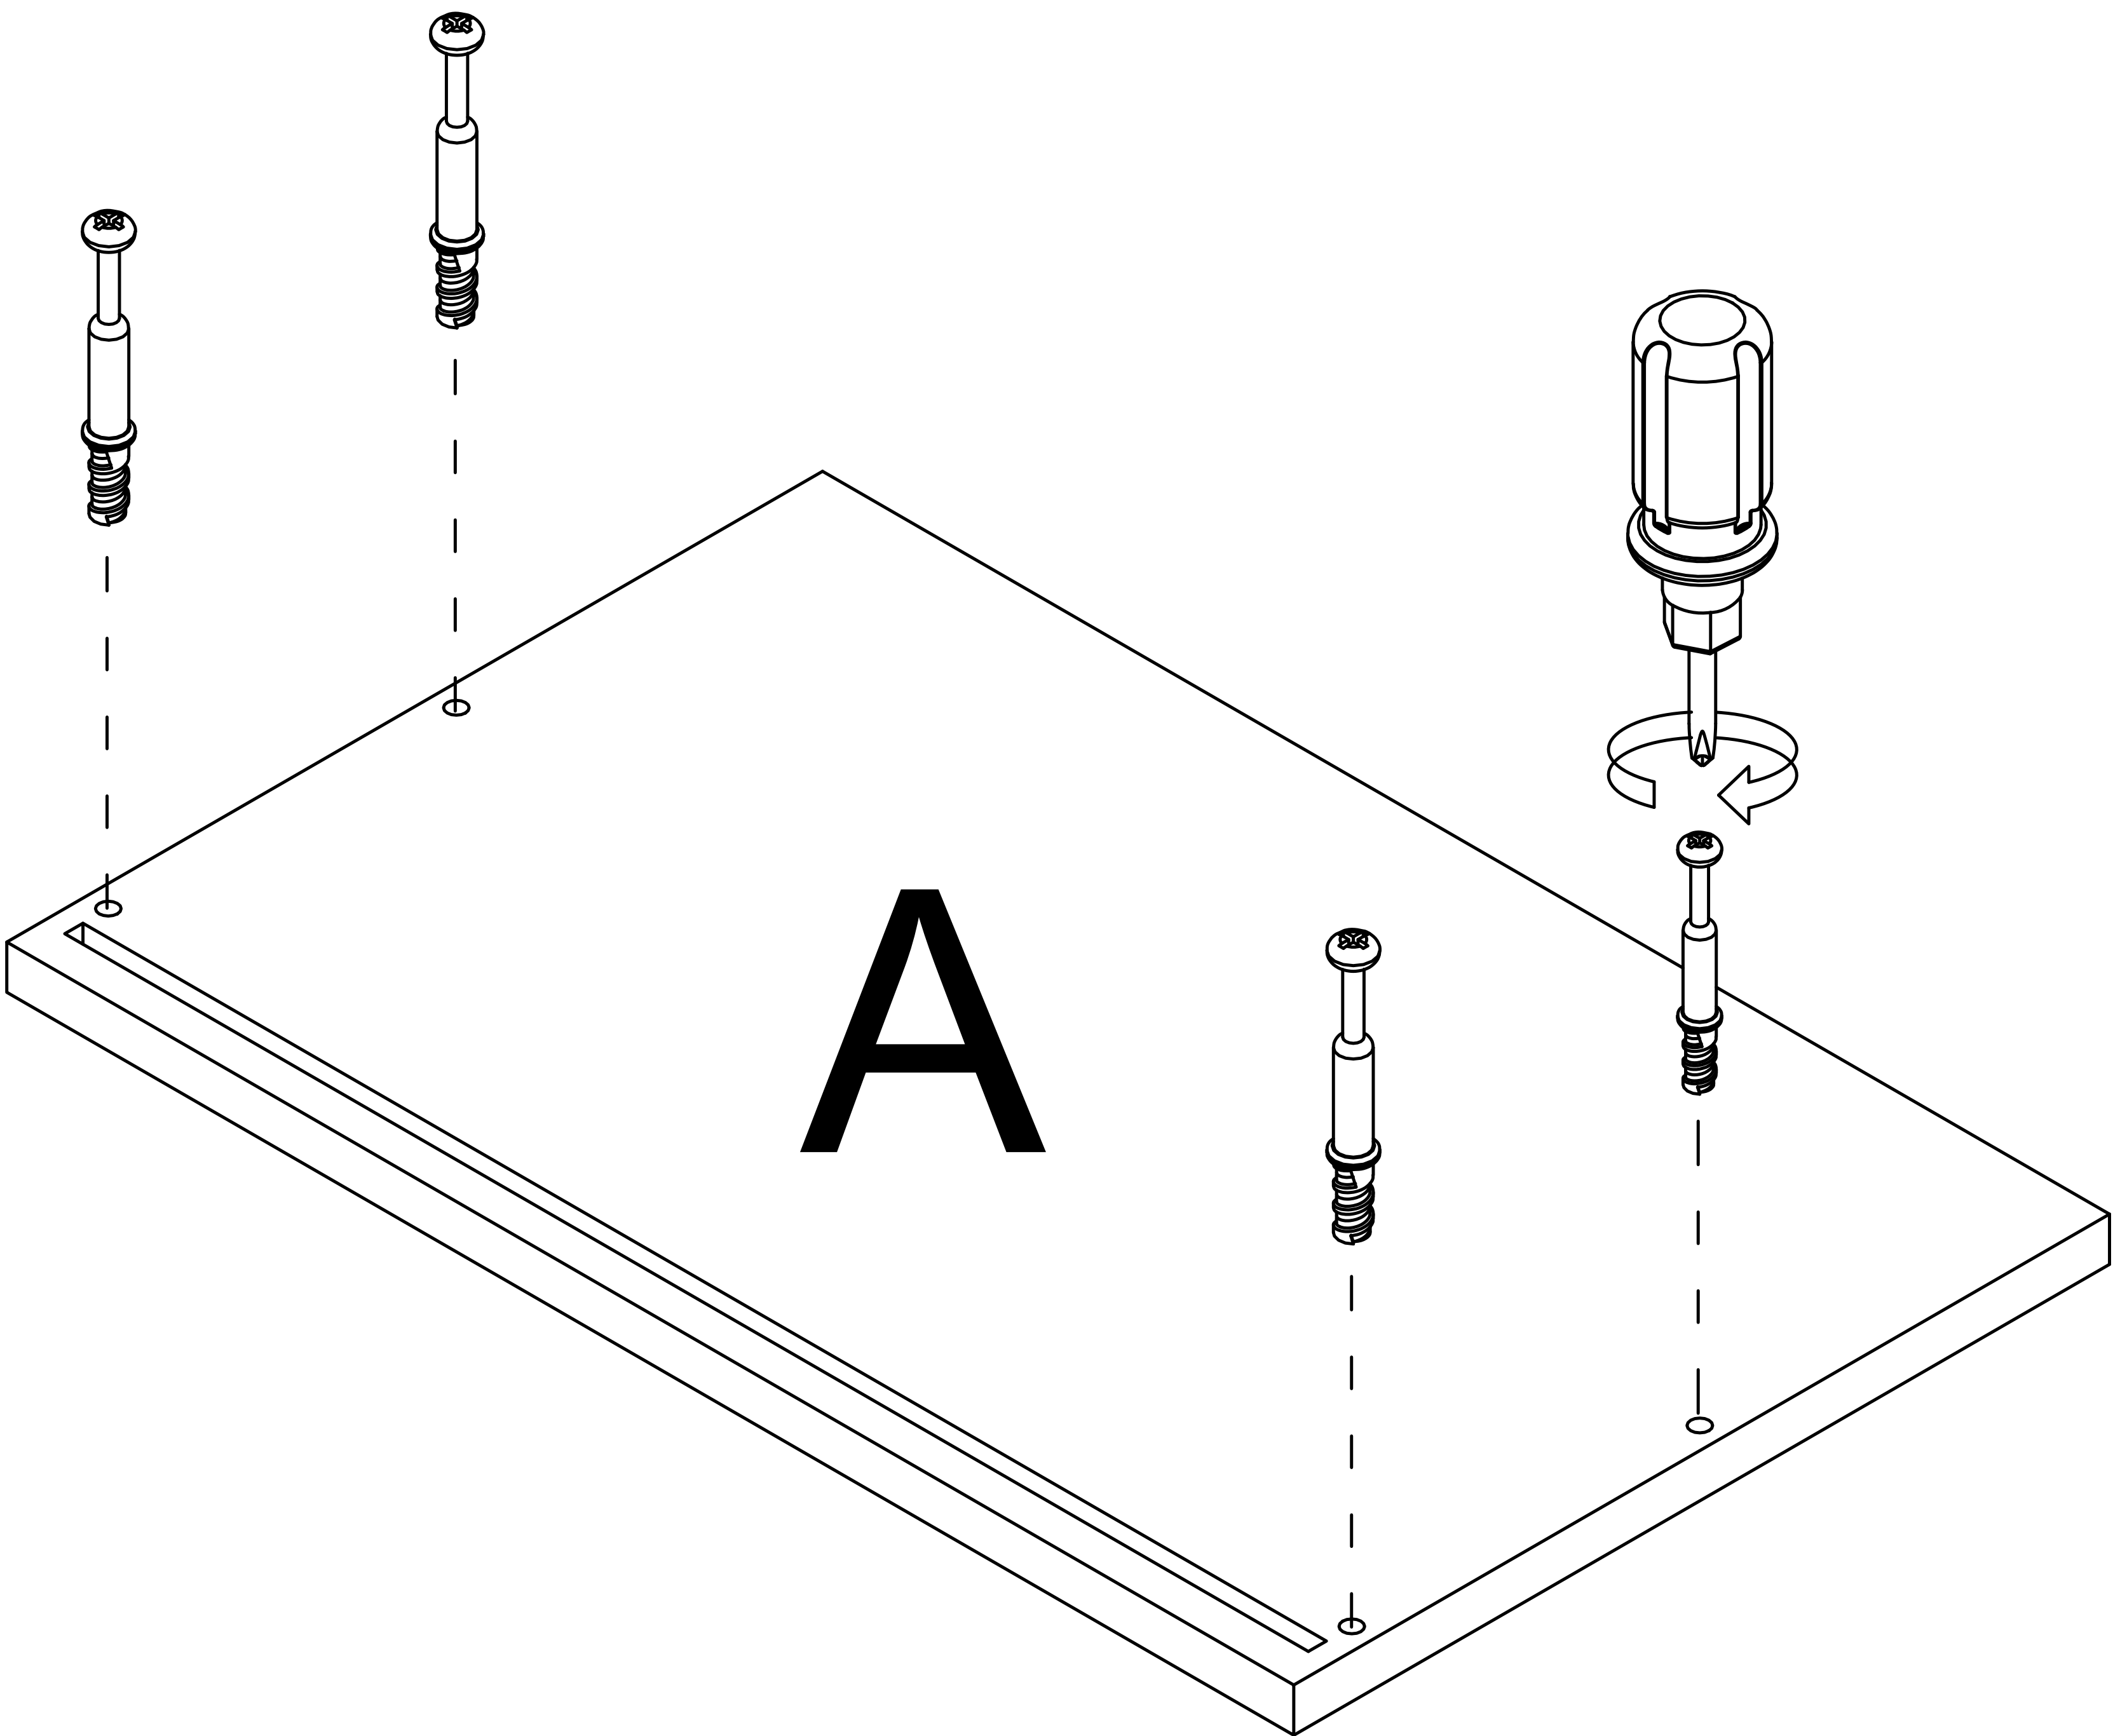
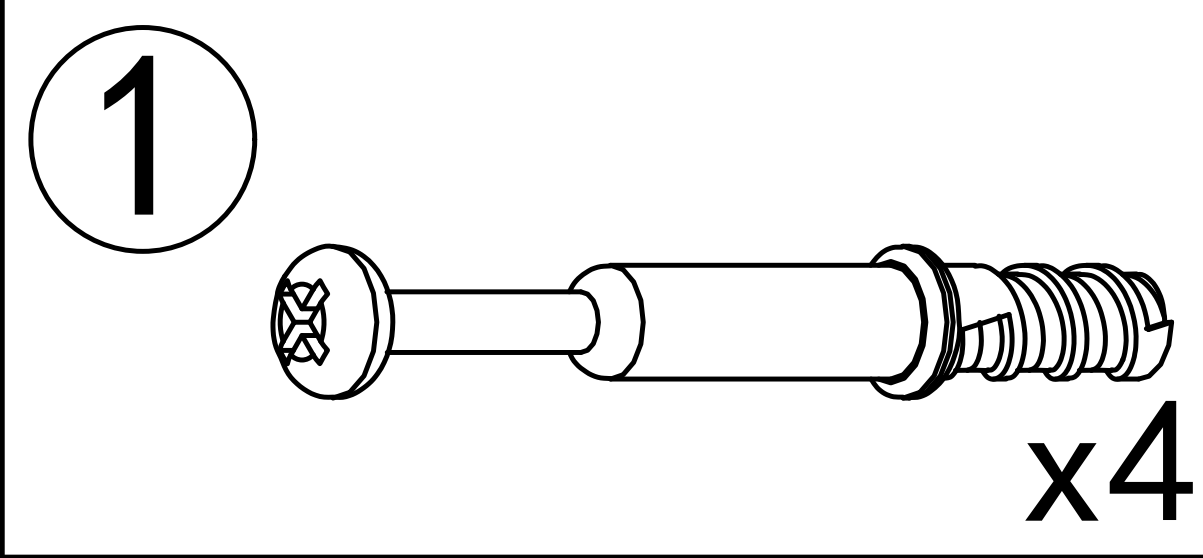


Step 2

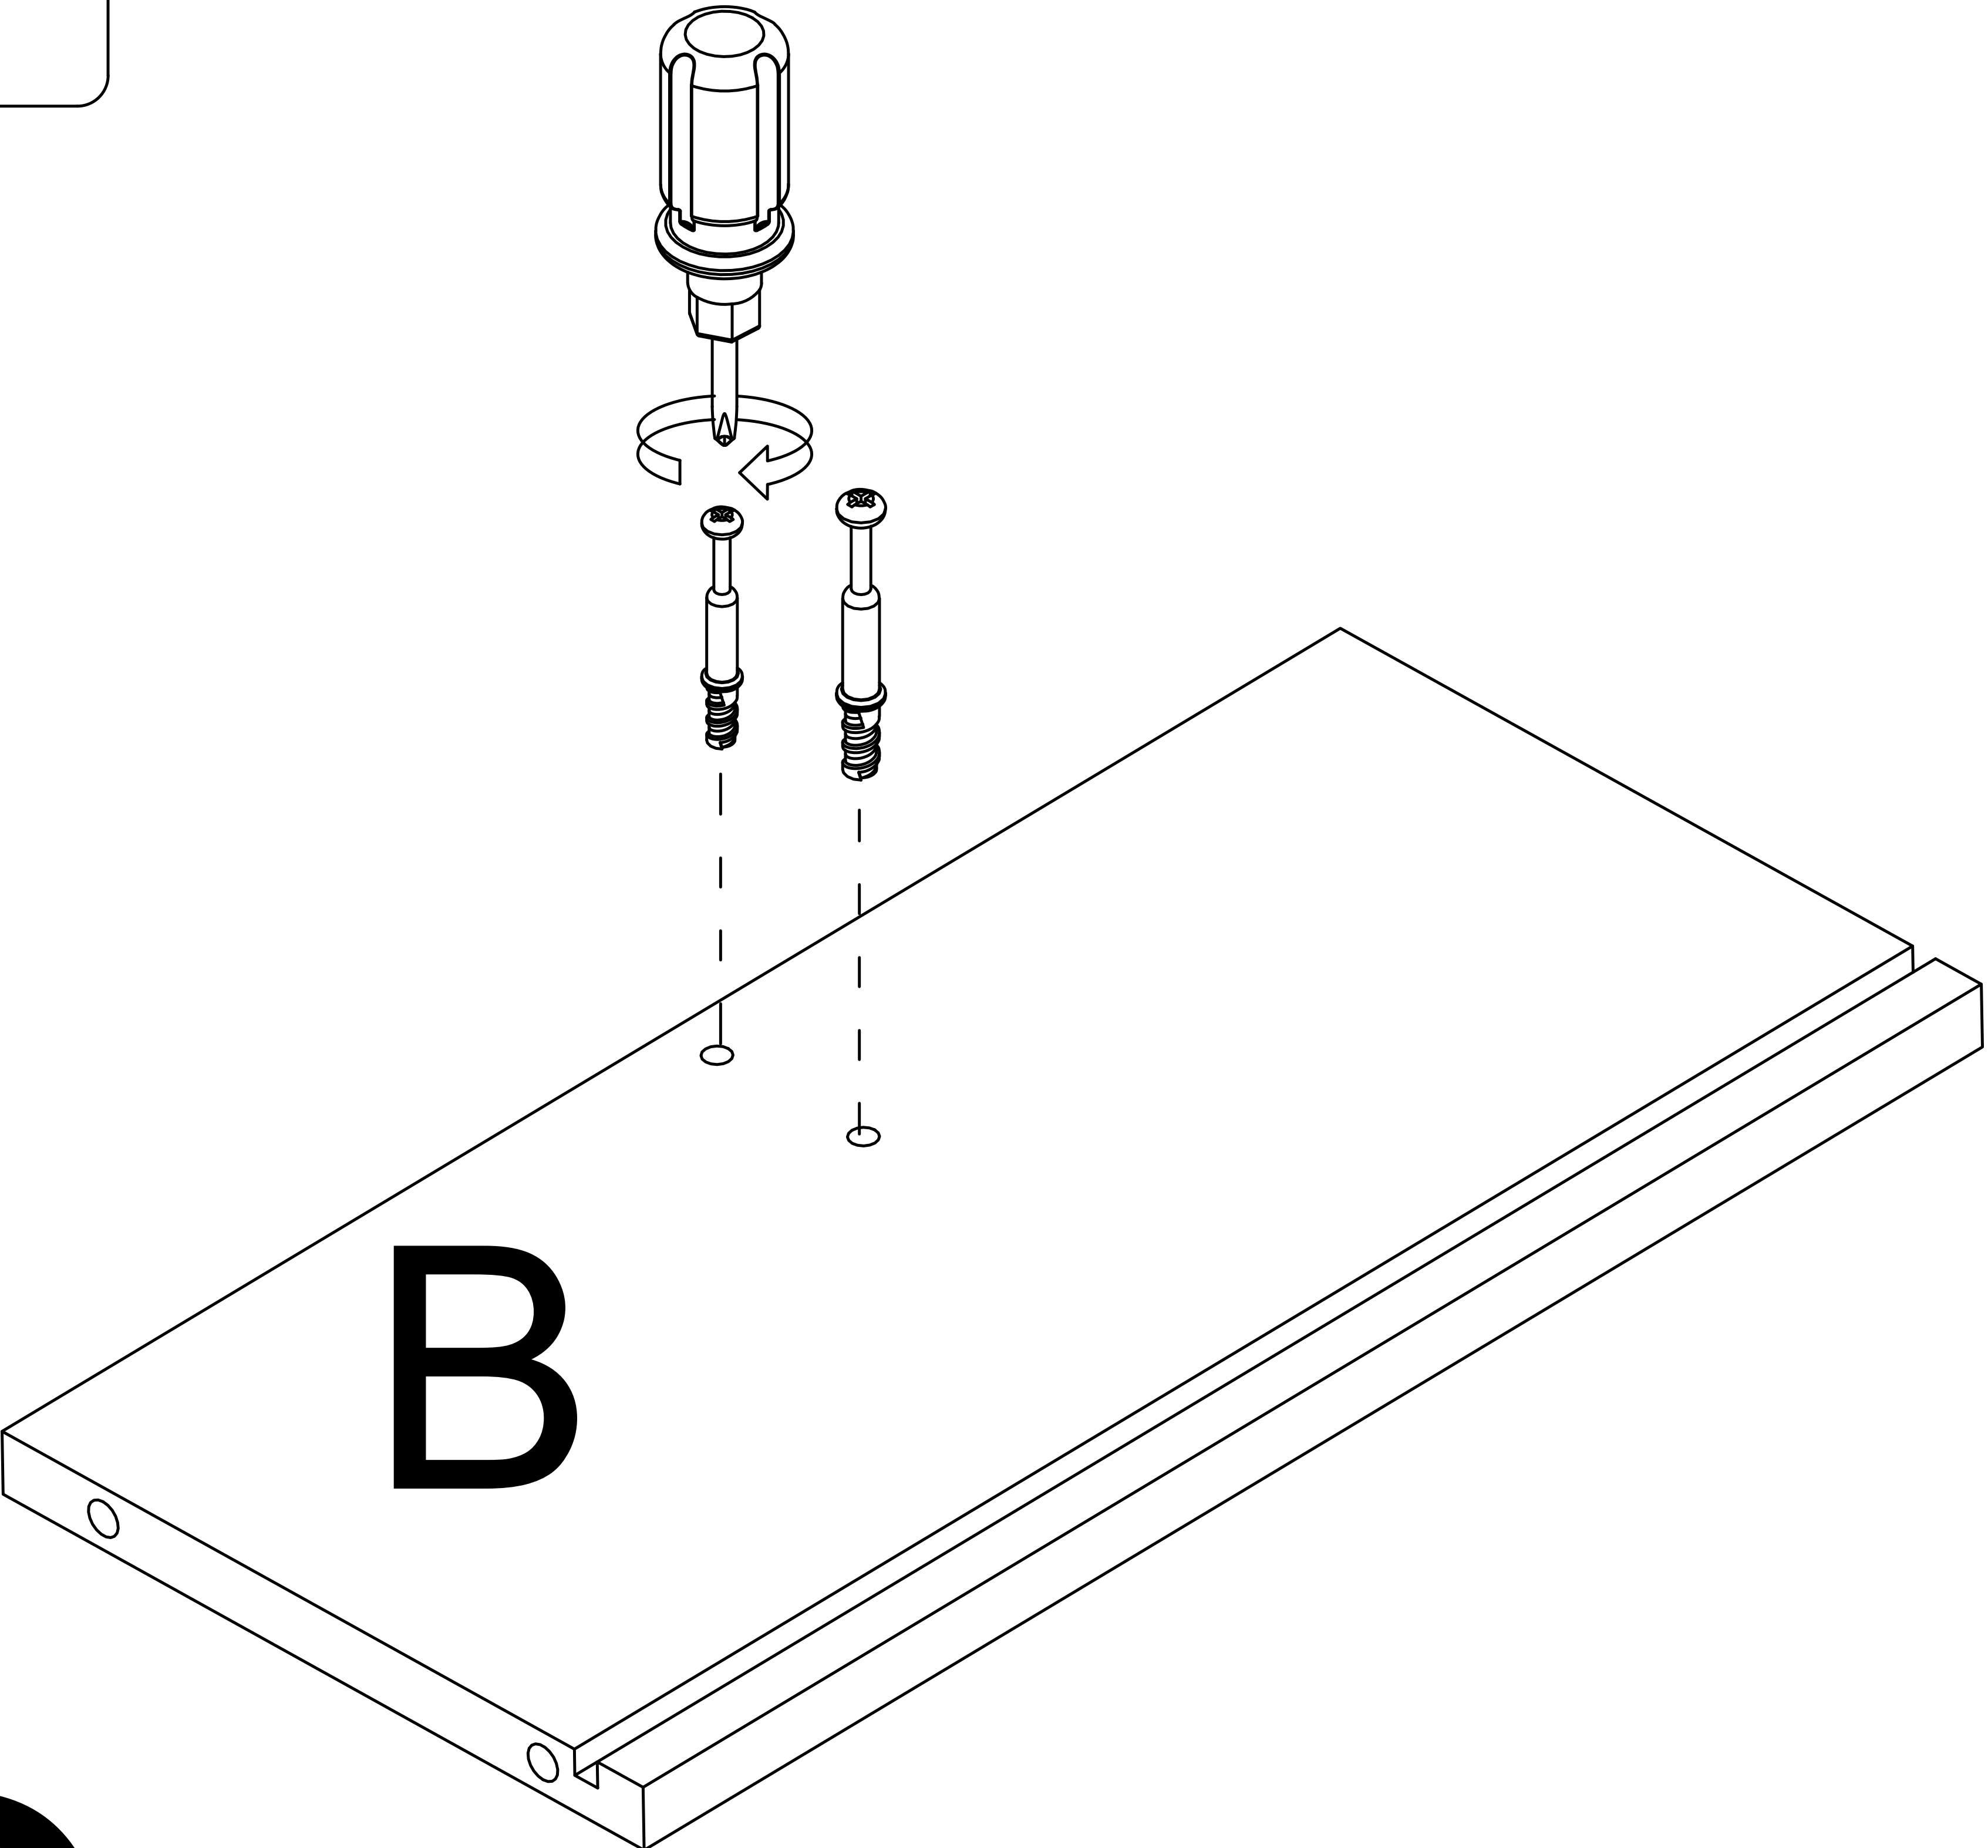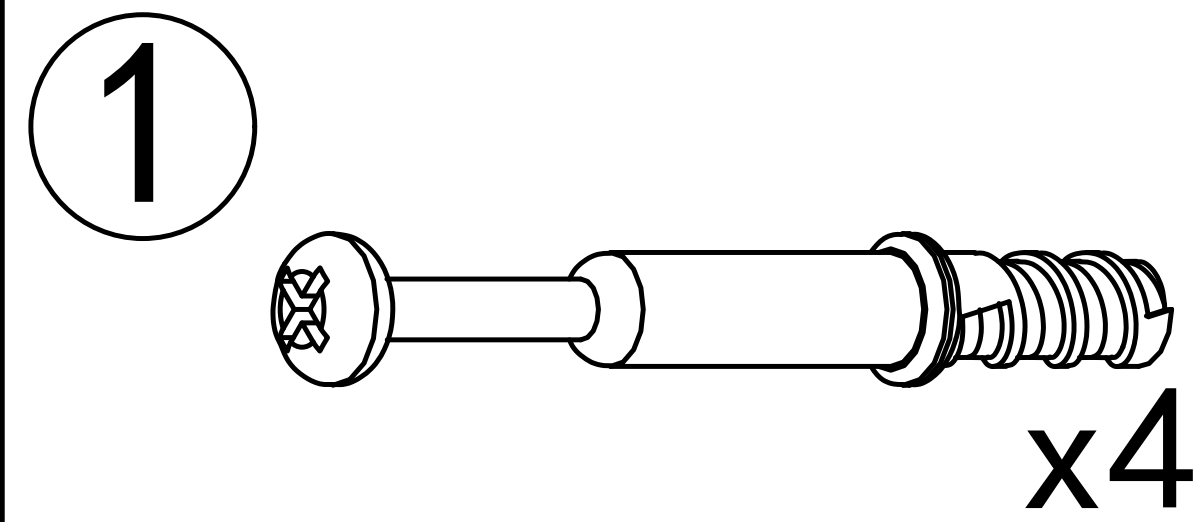


x 2



Step 3

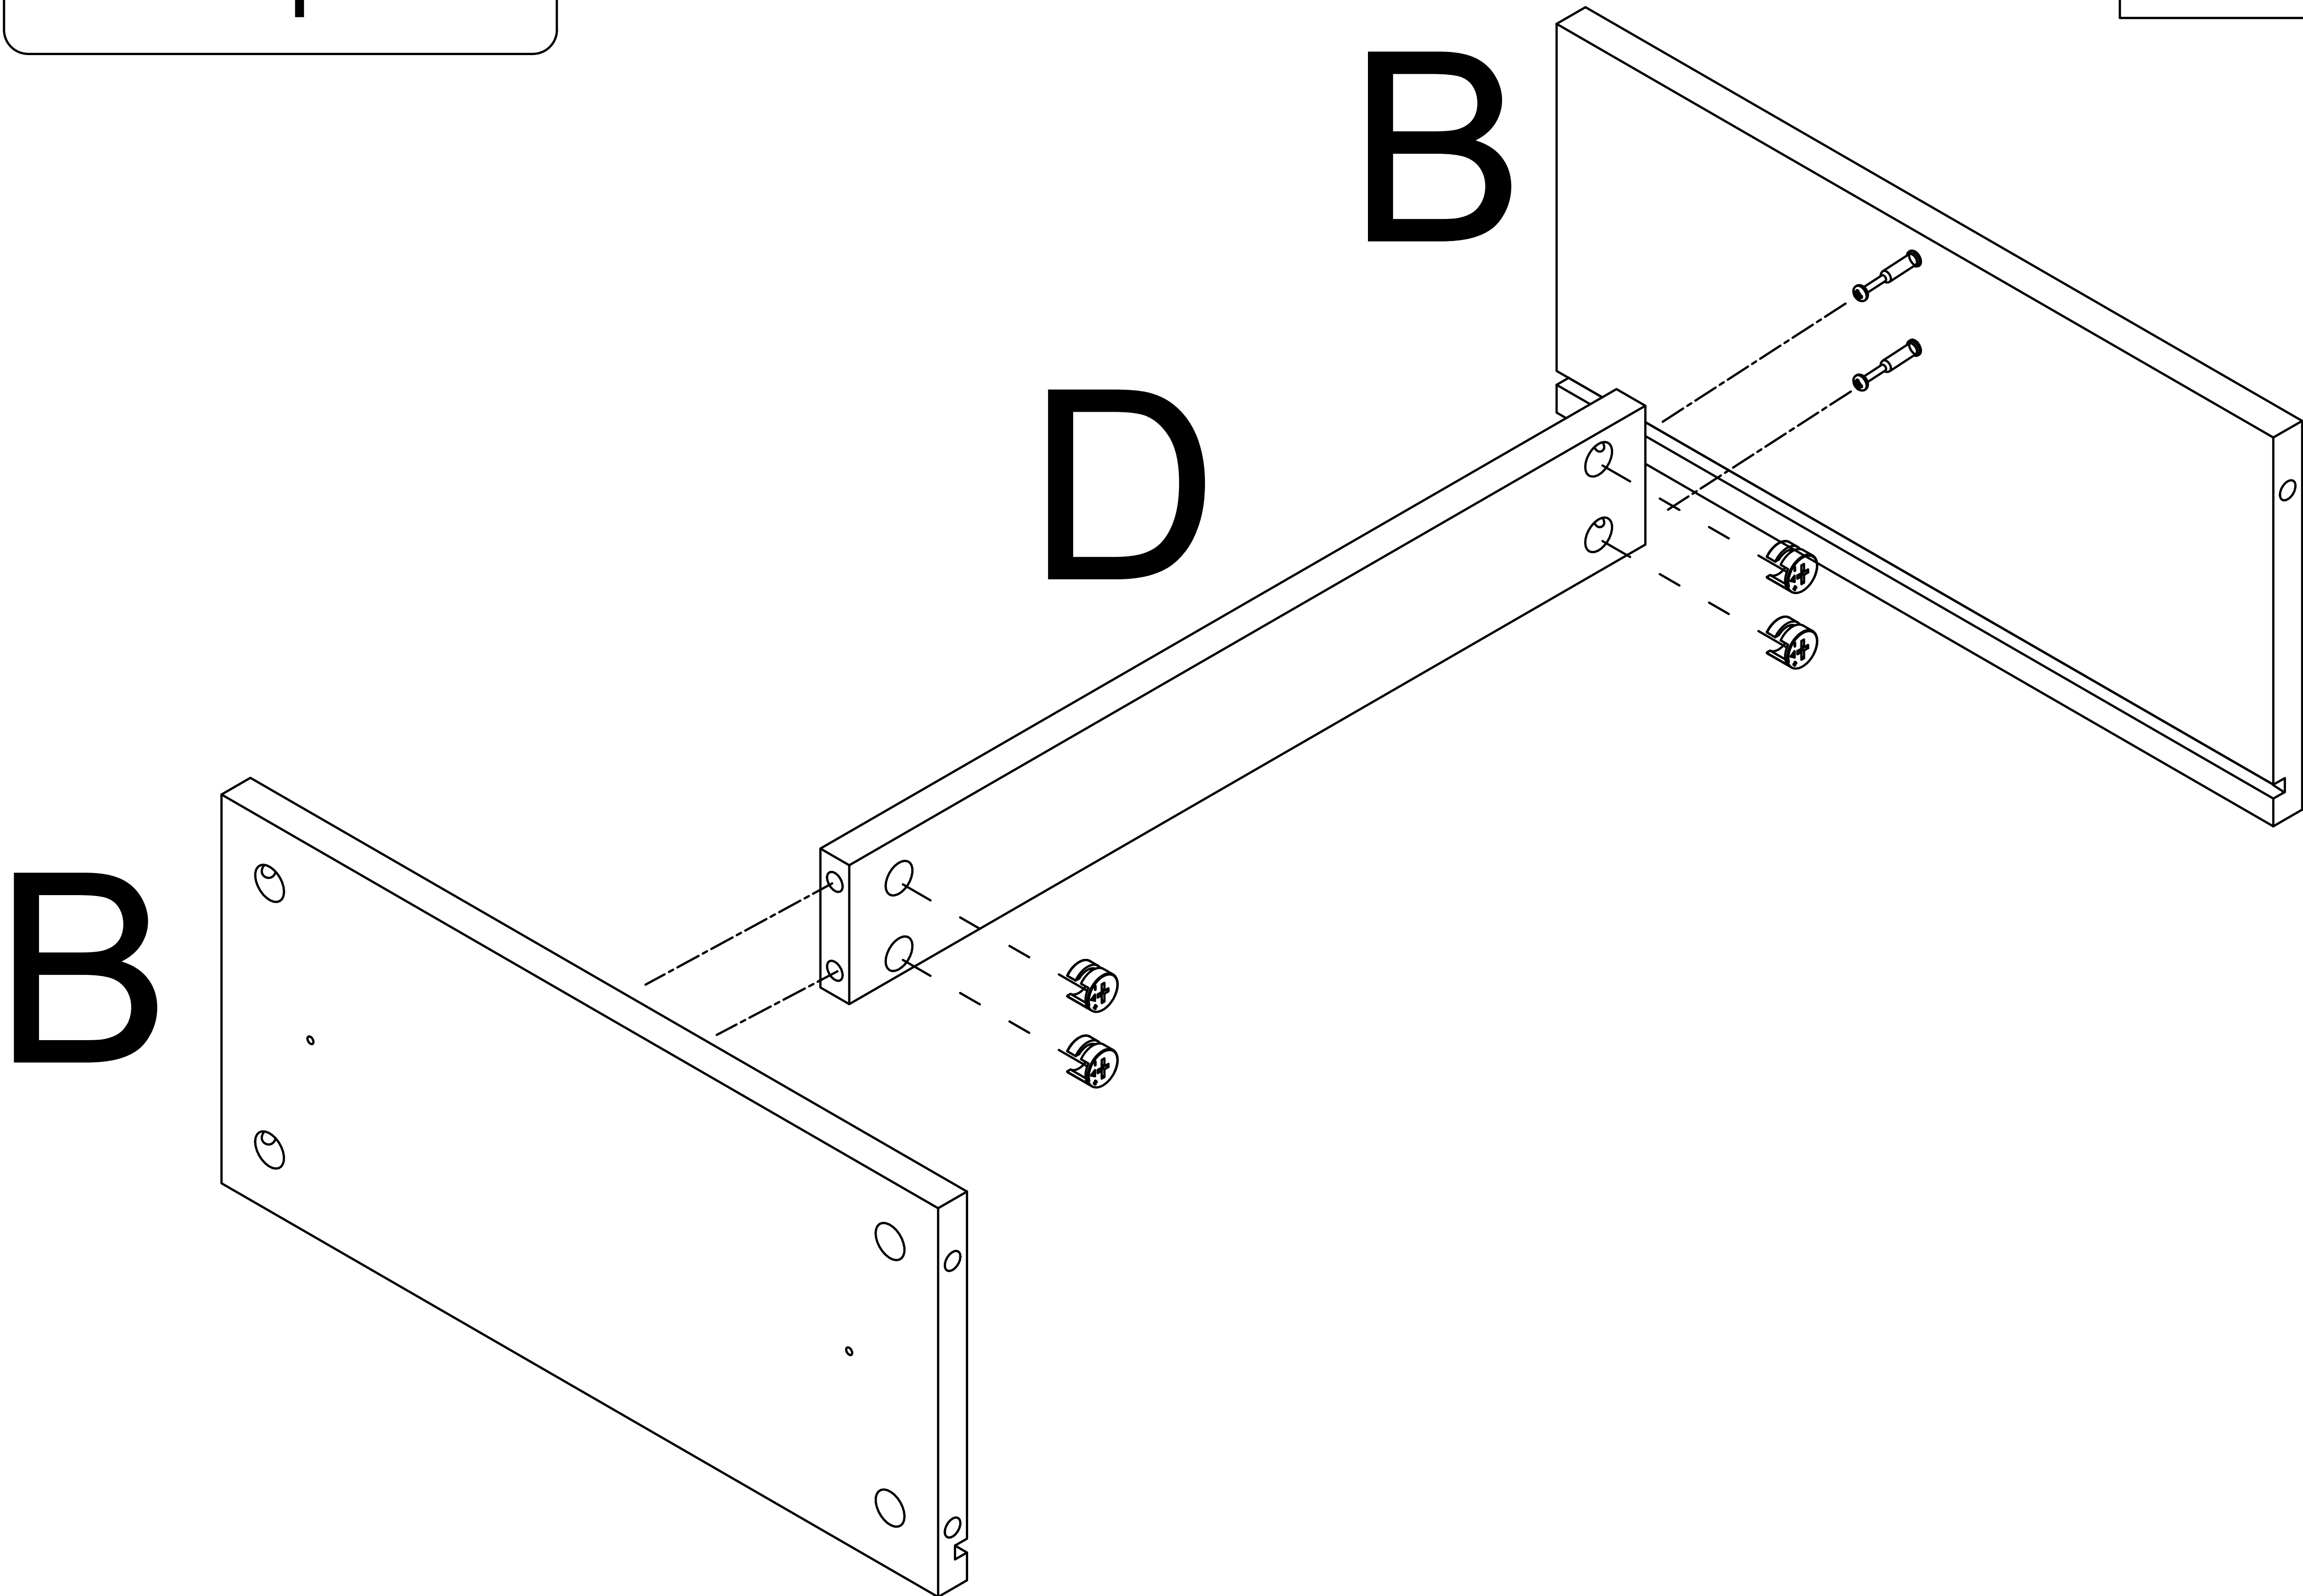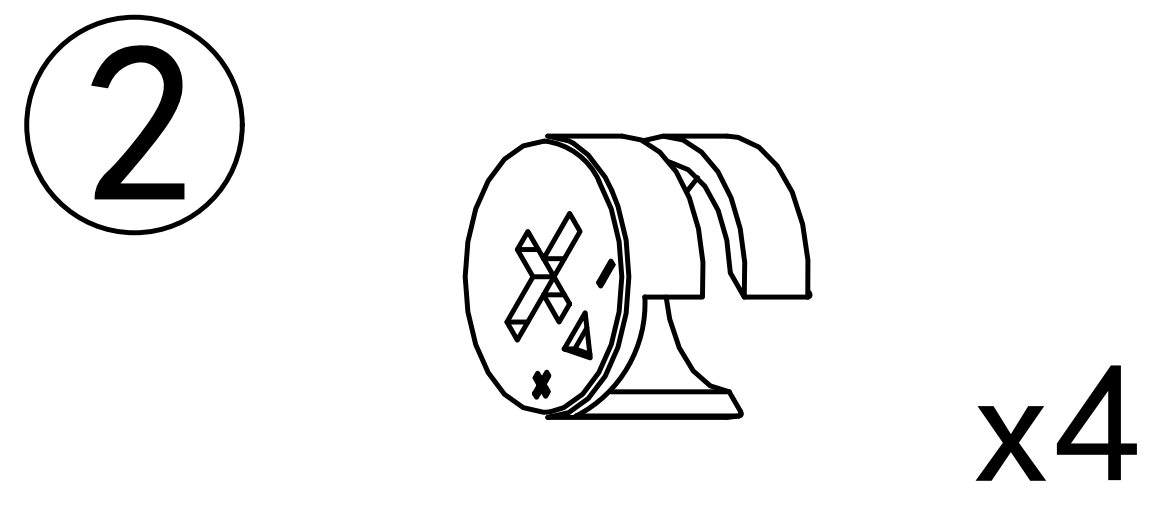


Step 4

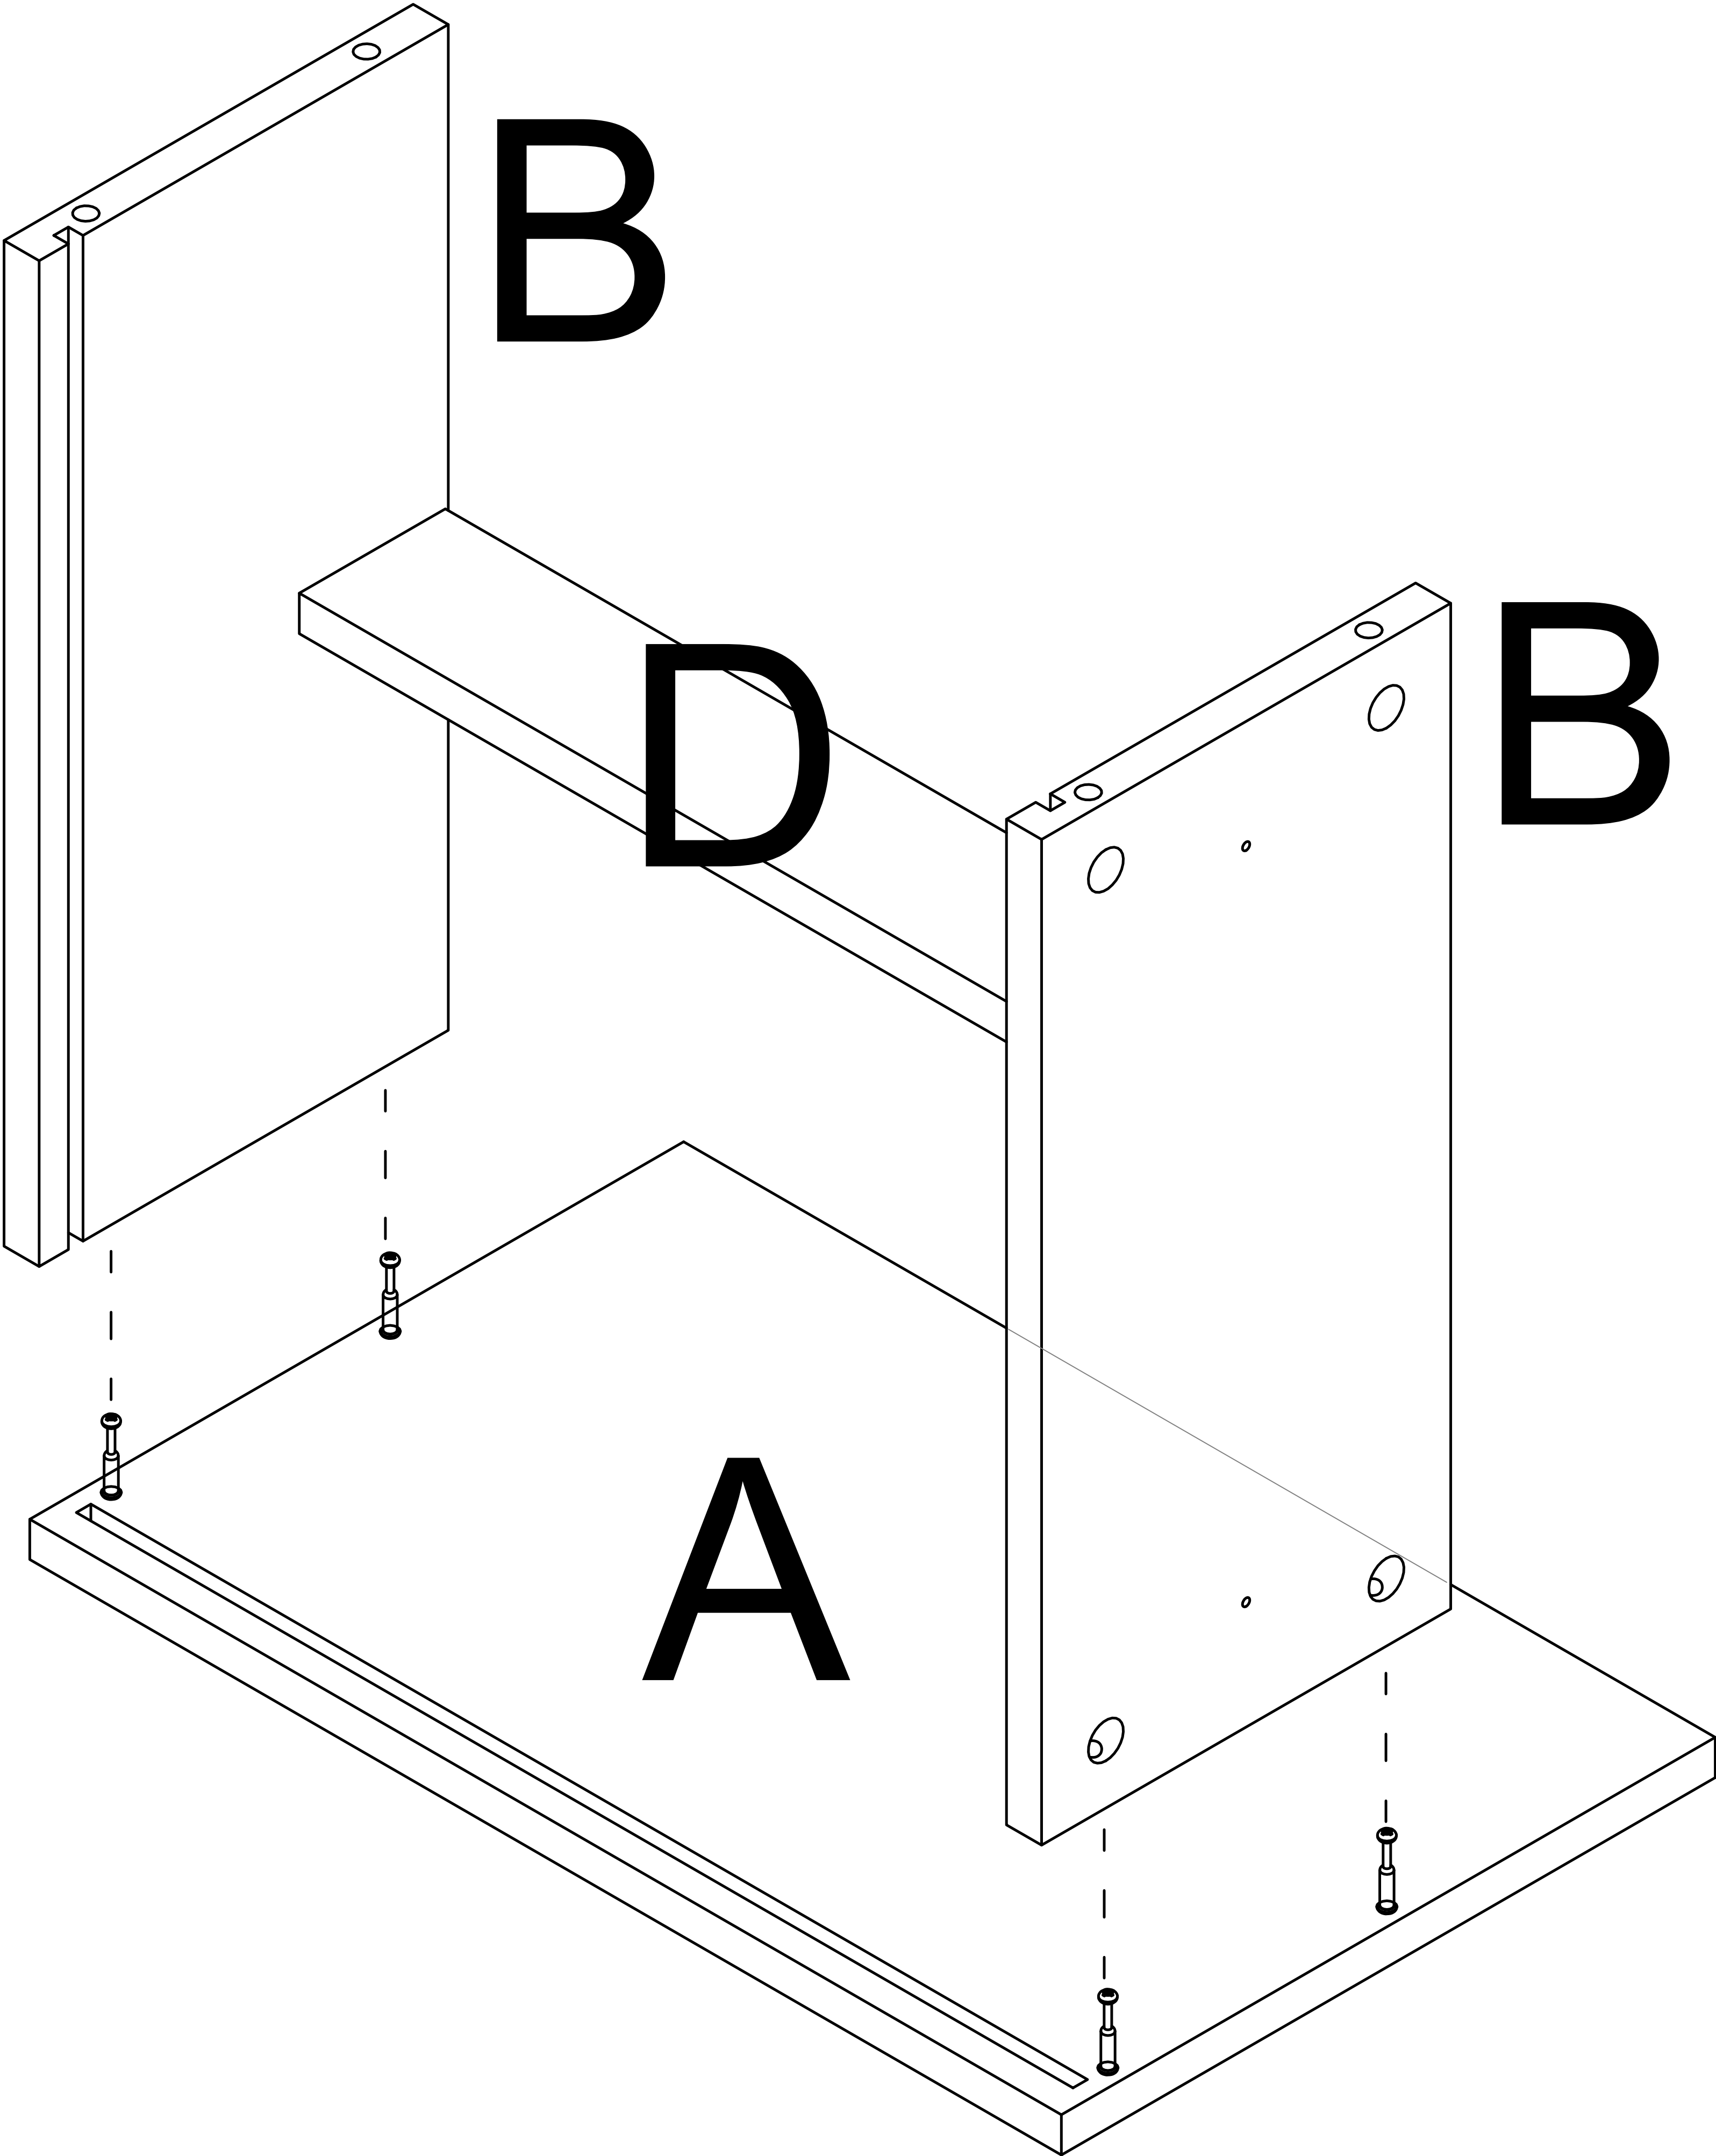

Step 5

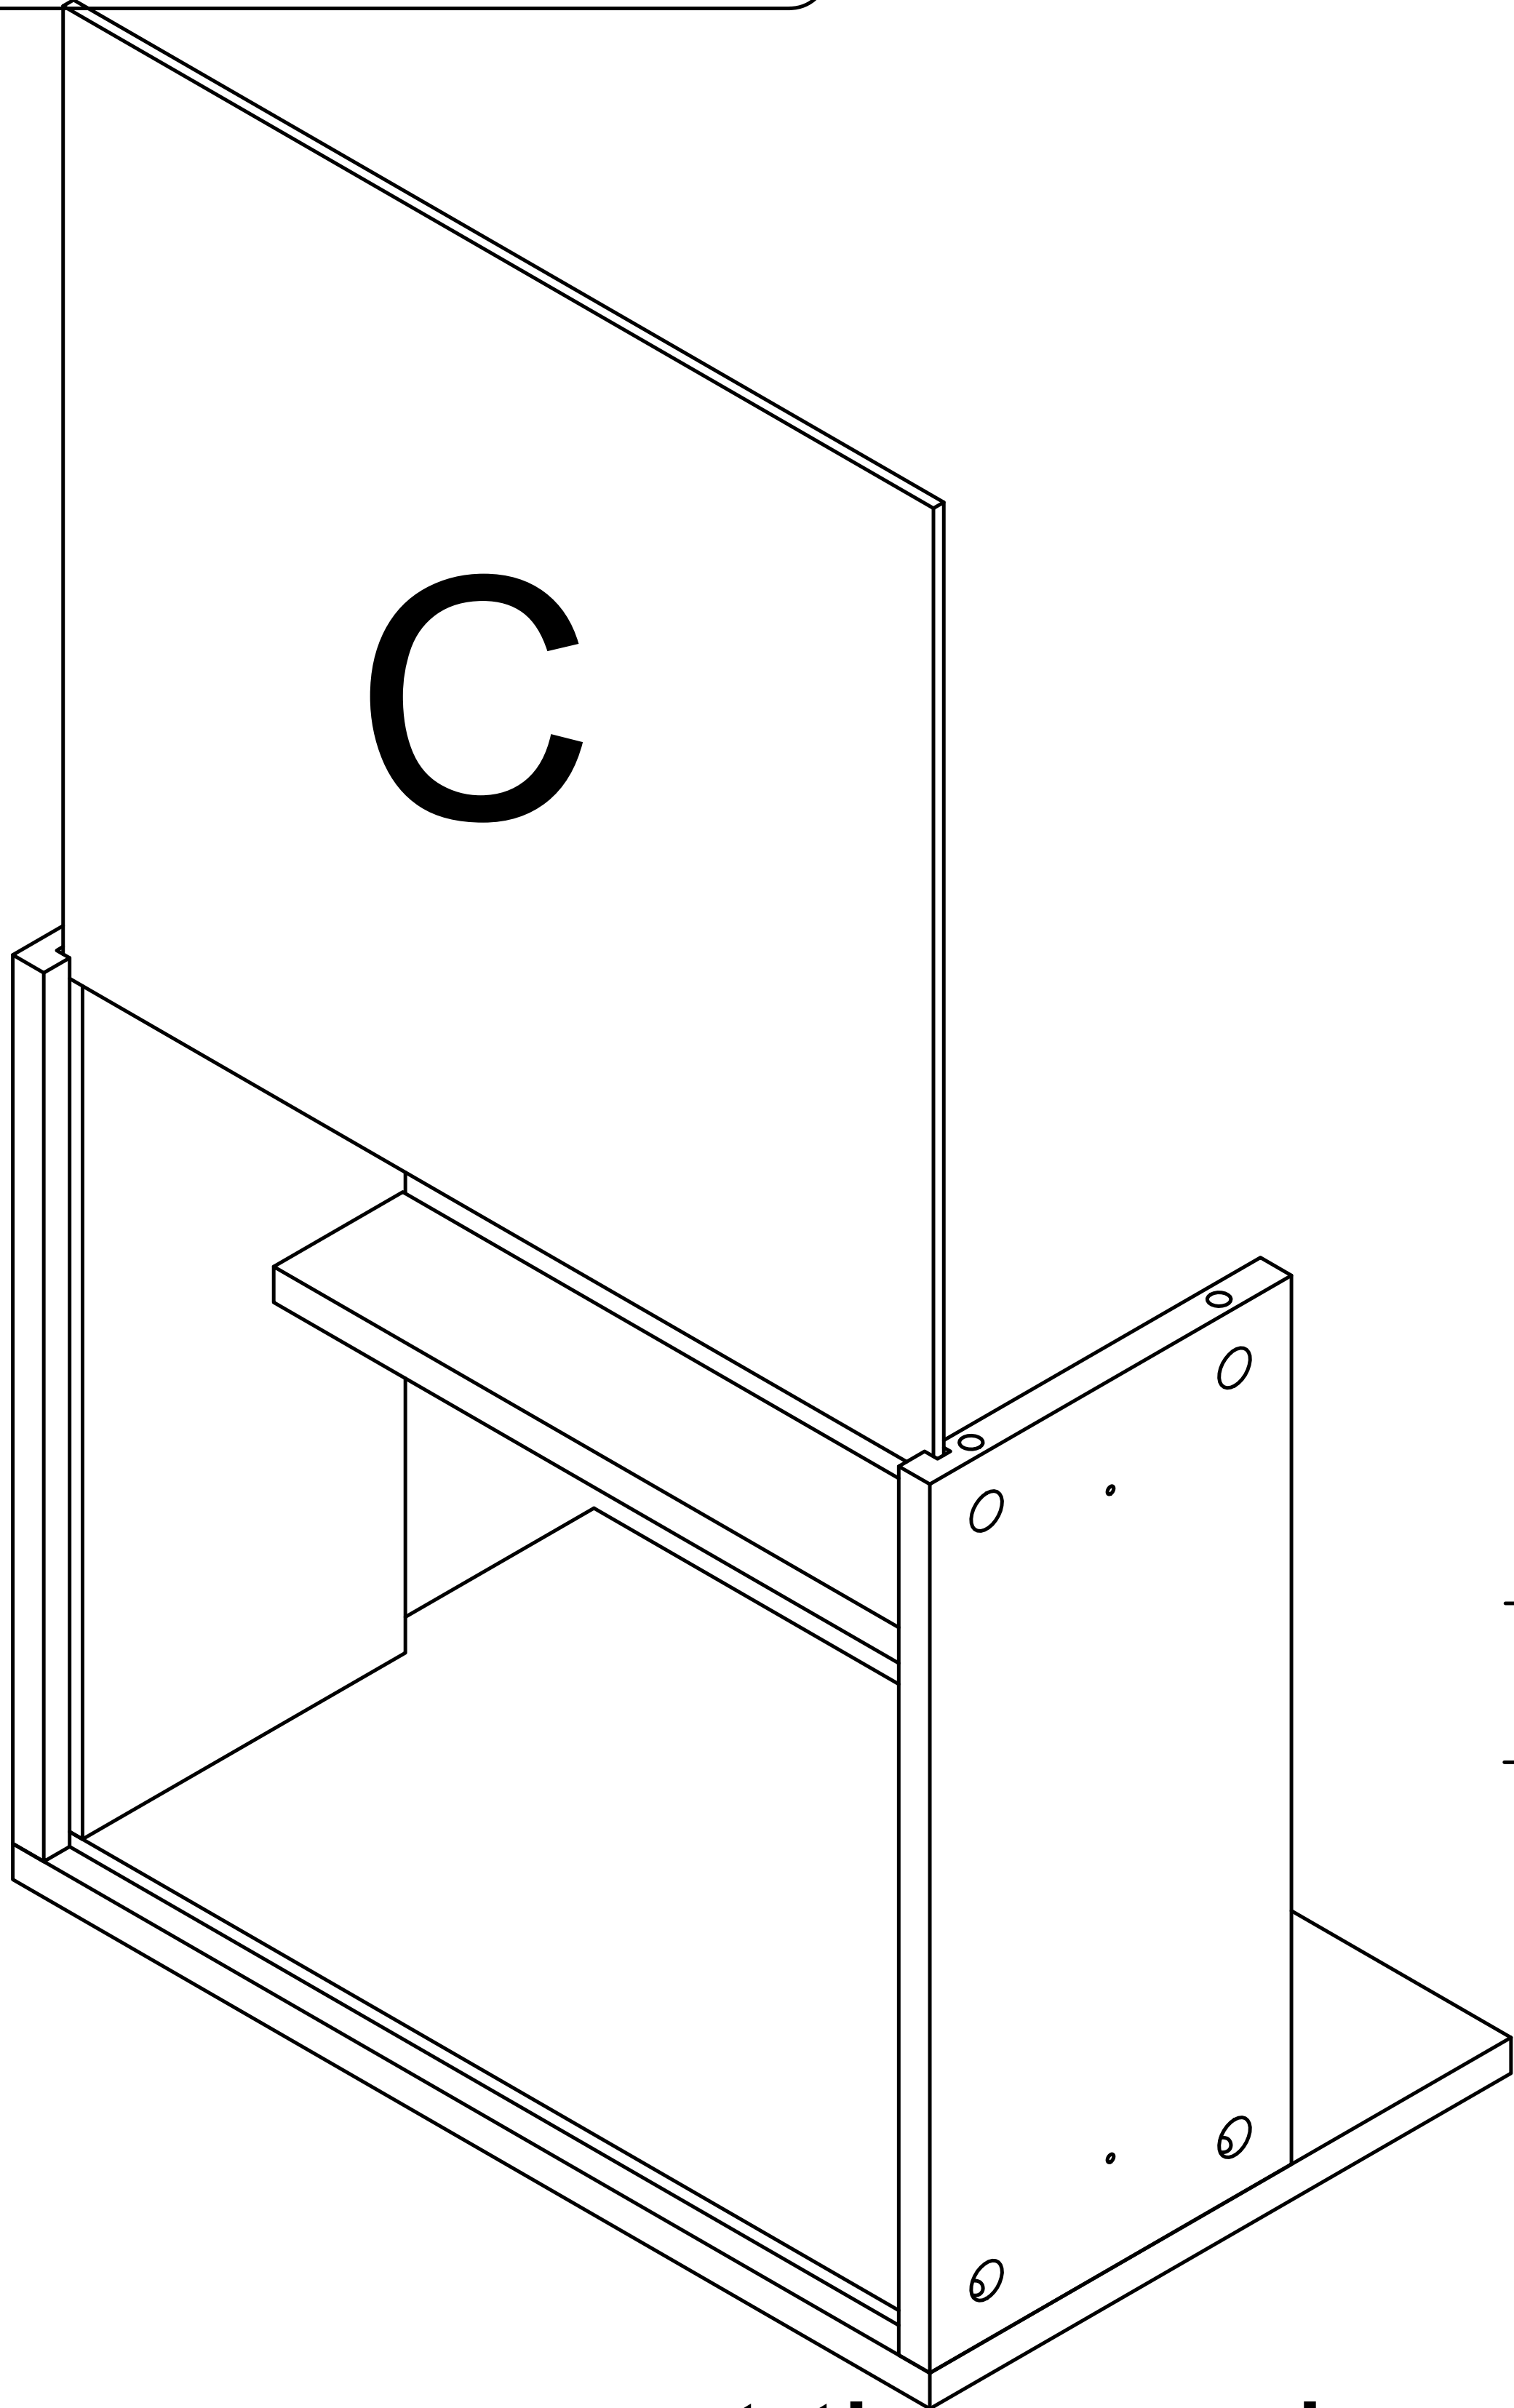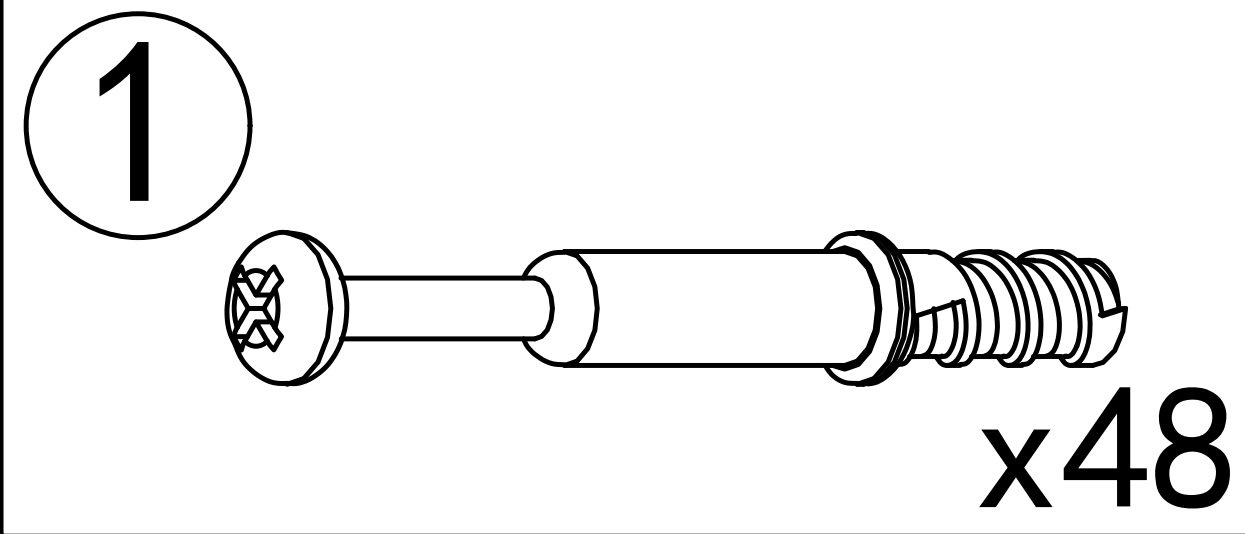


x6

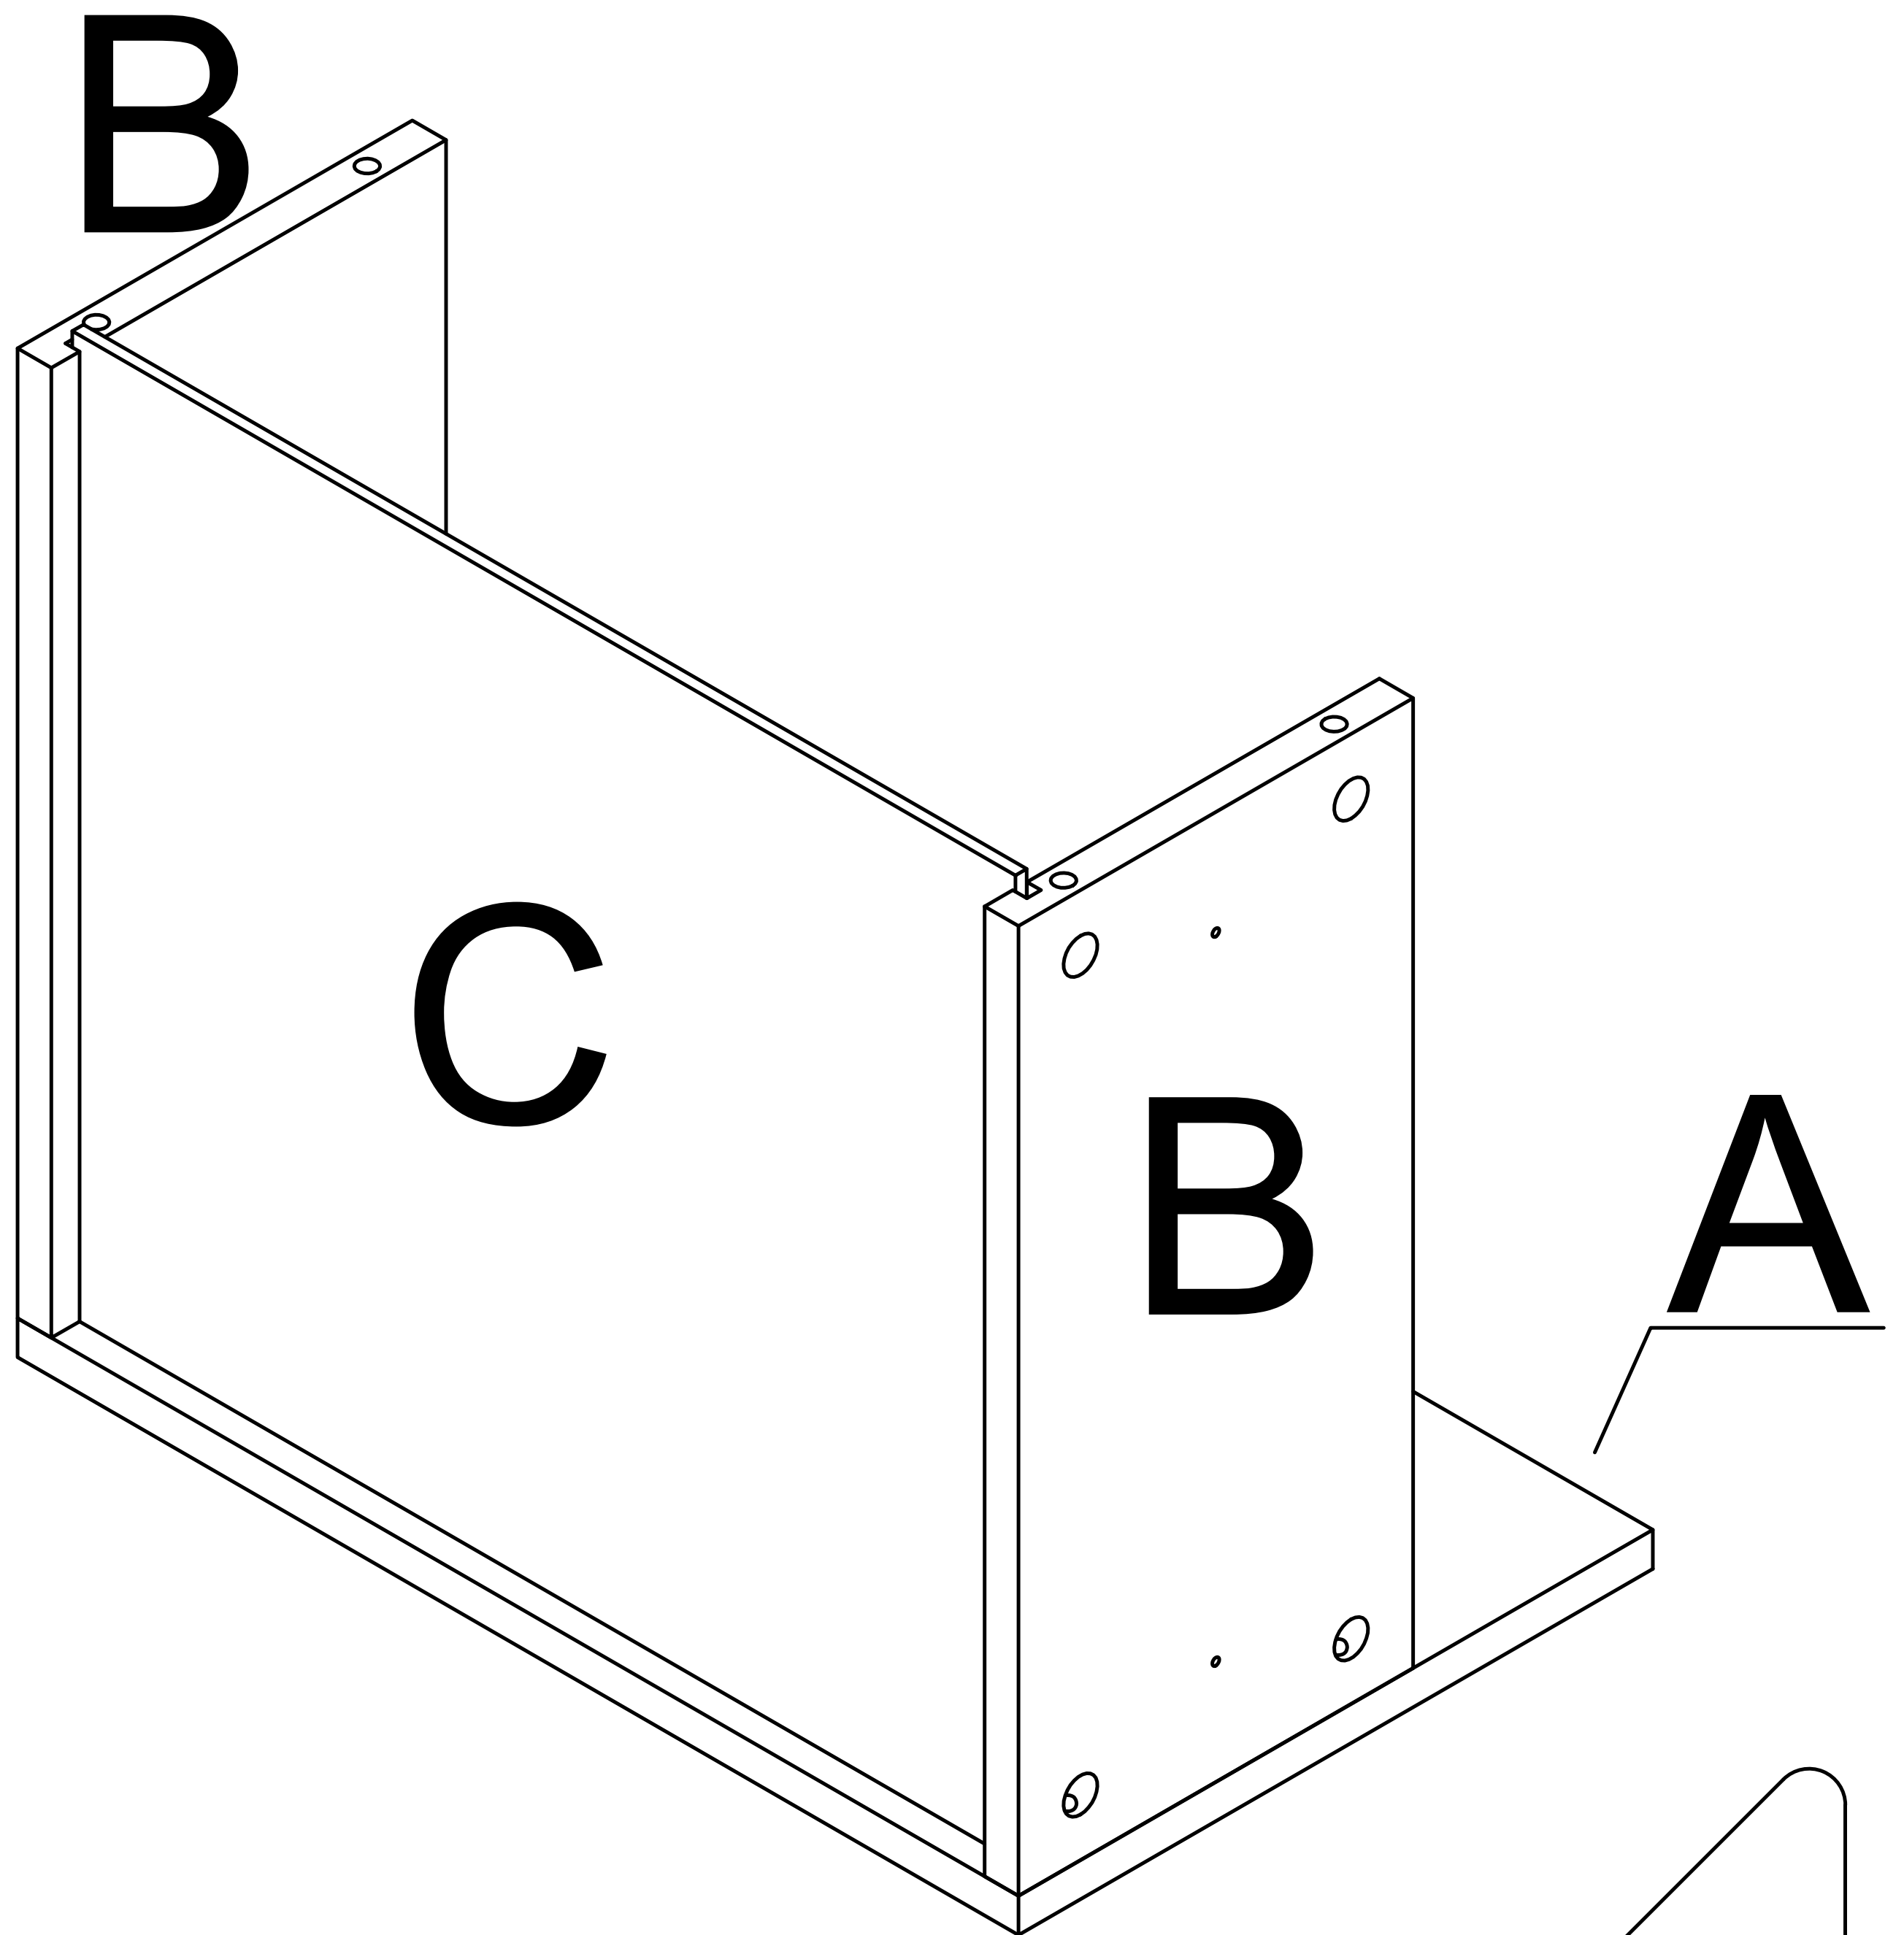

You can repeat the previous steps to obtain 6 identical drawers.

Step 6


1  x24

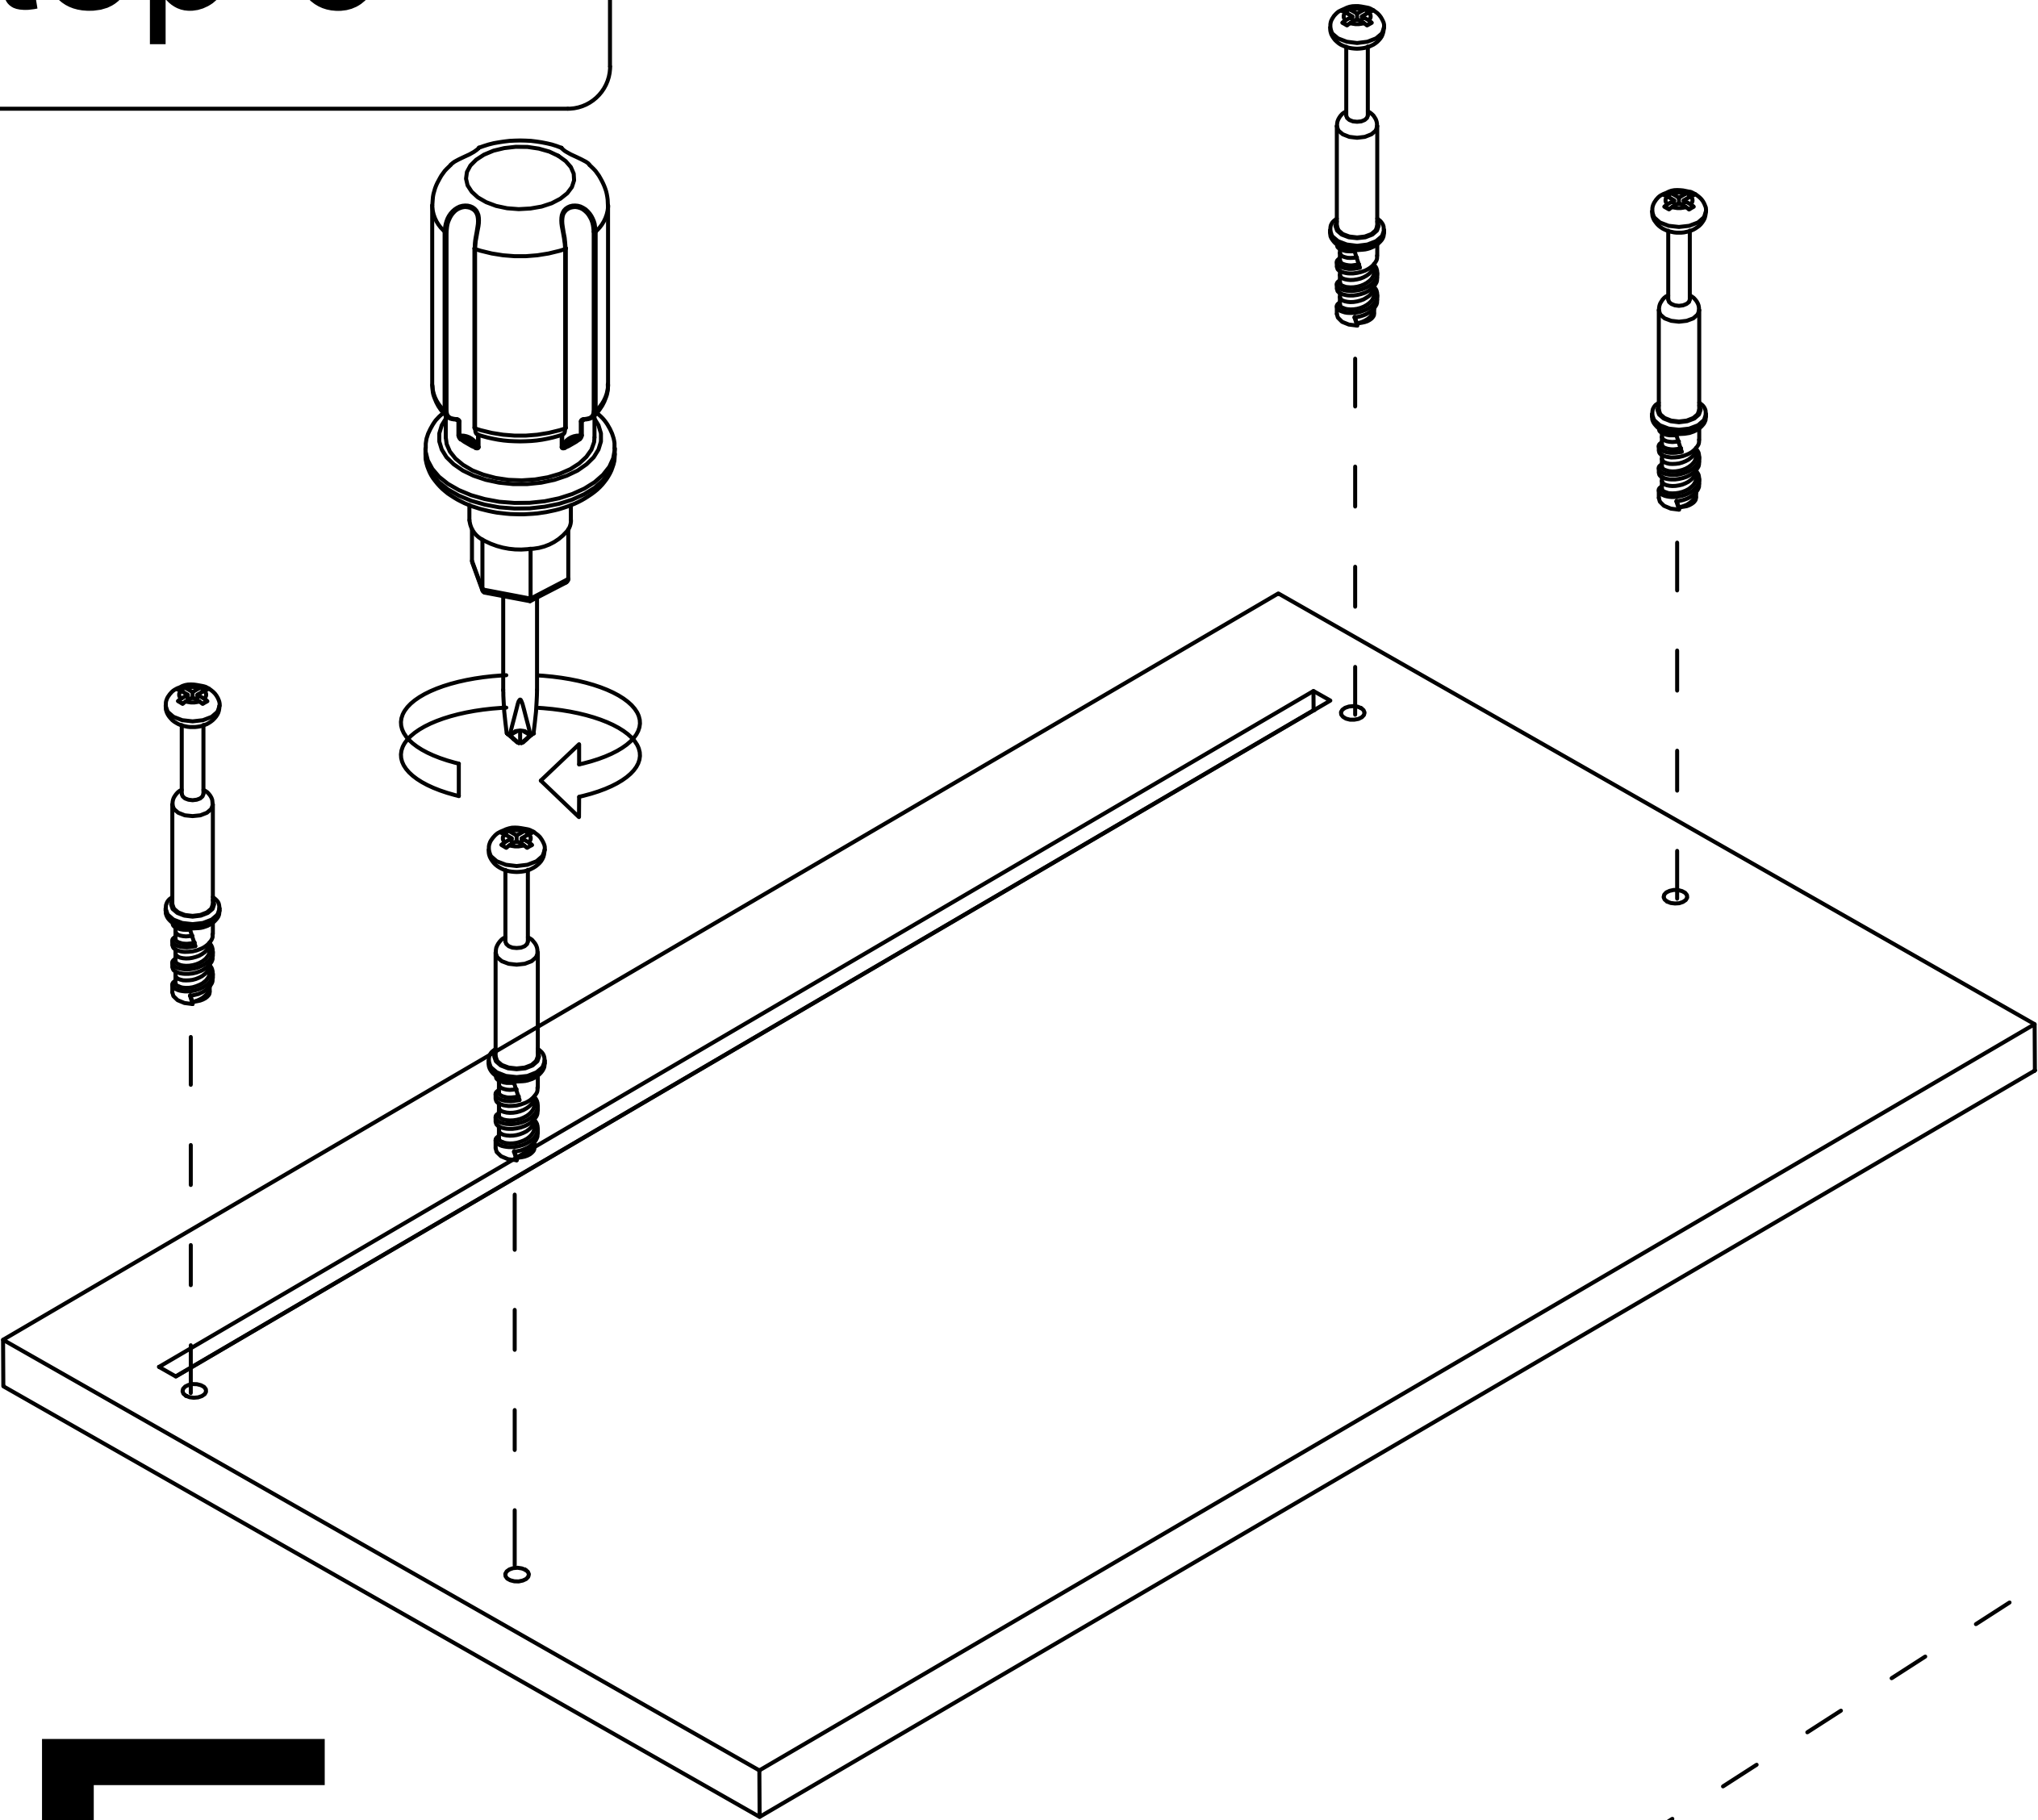


E

x2

F

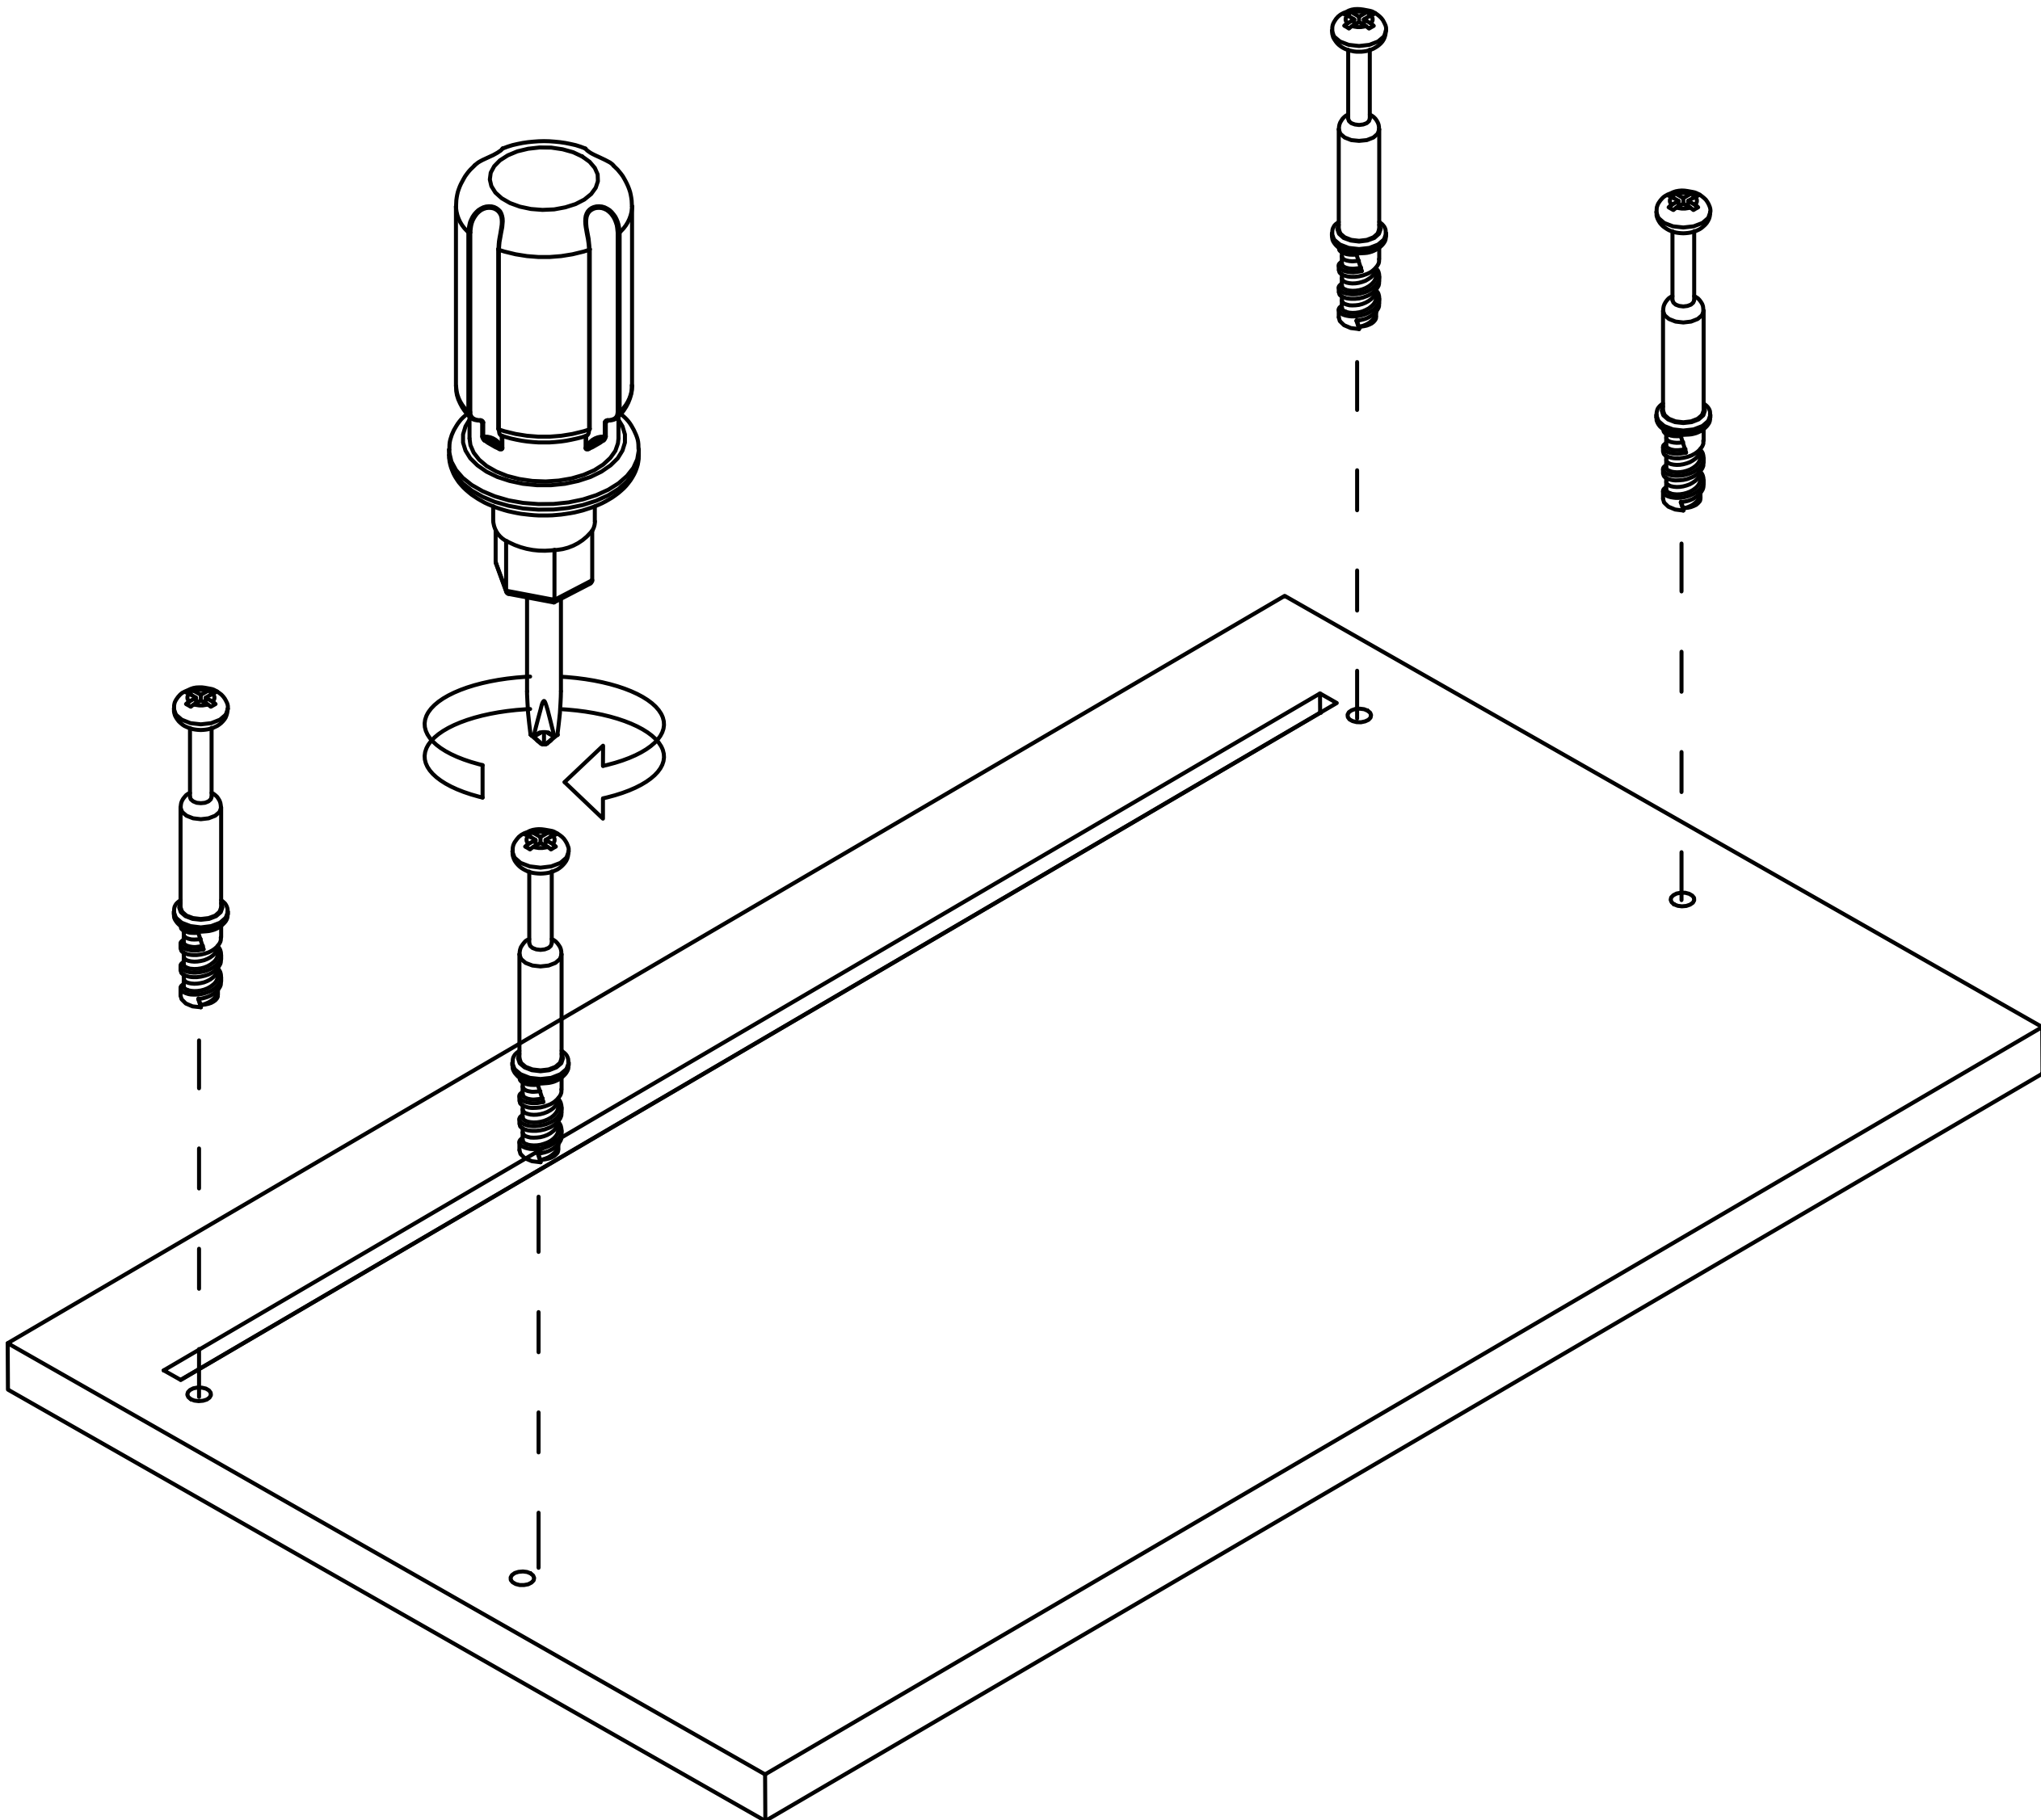


G

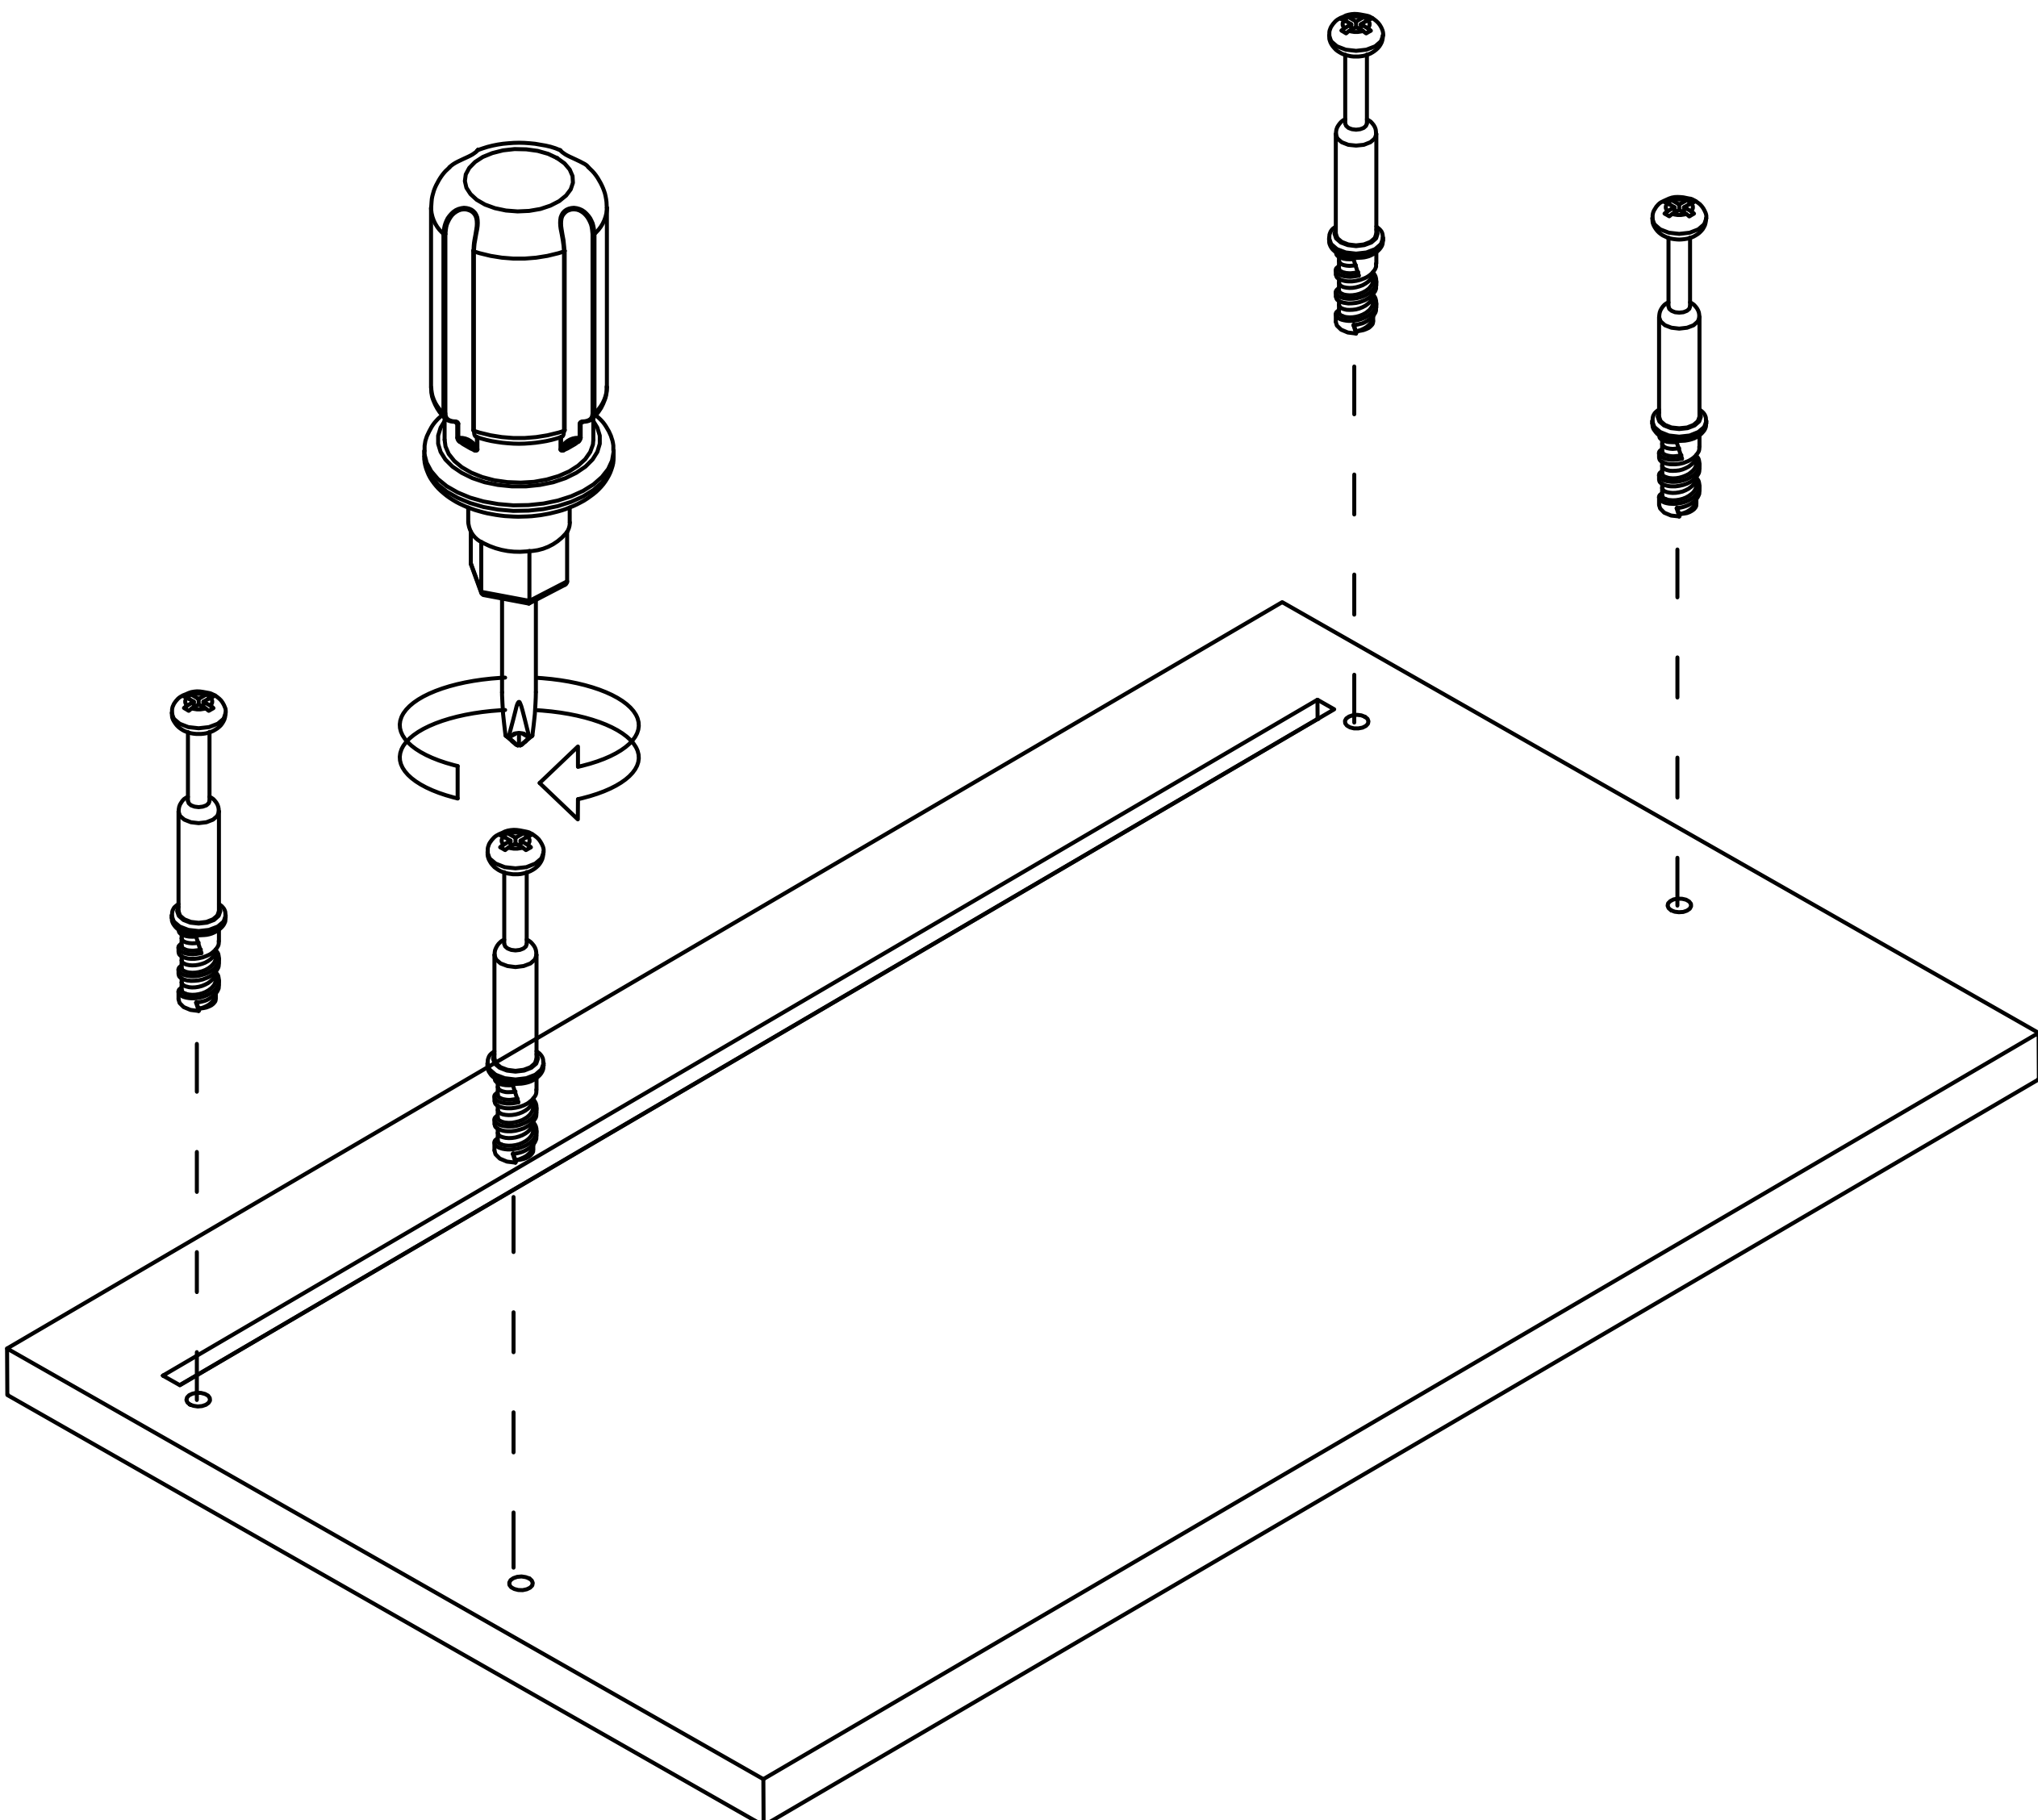


Step 7


2

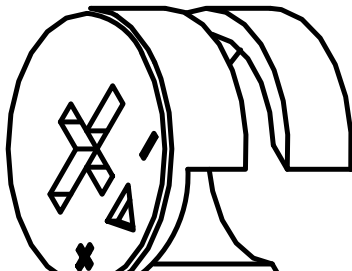

x68

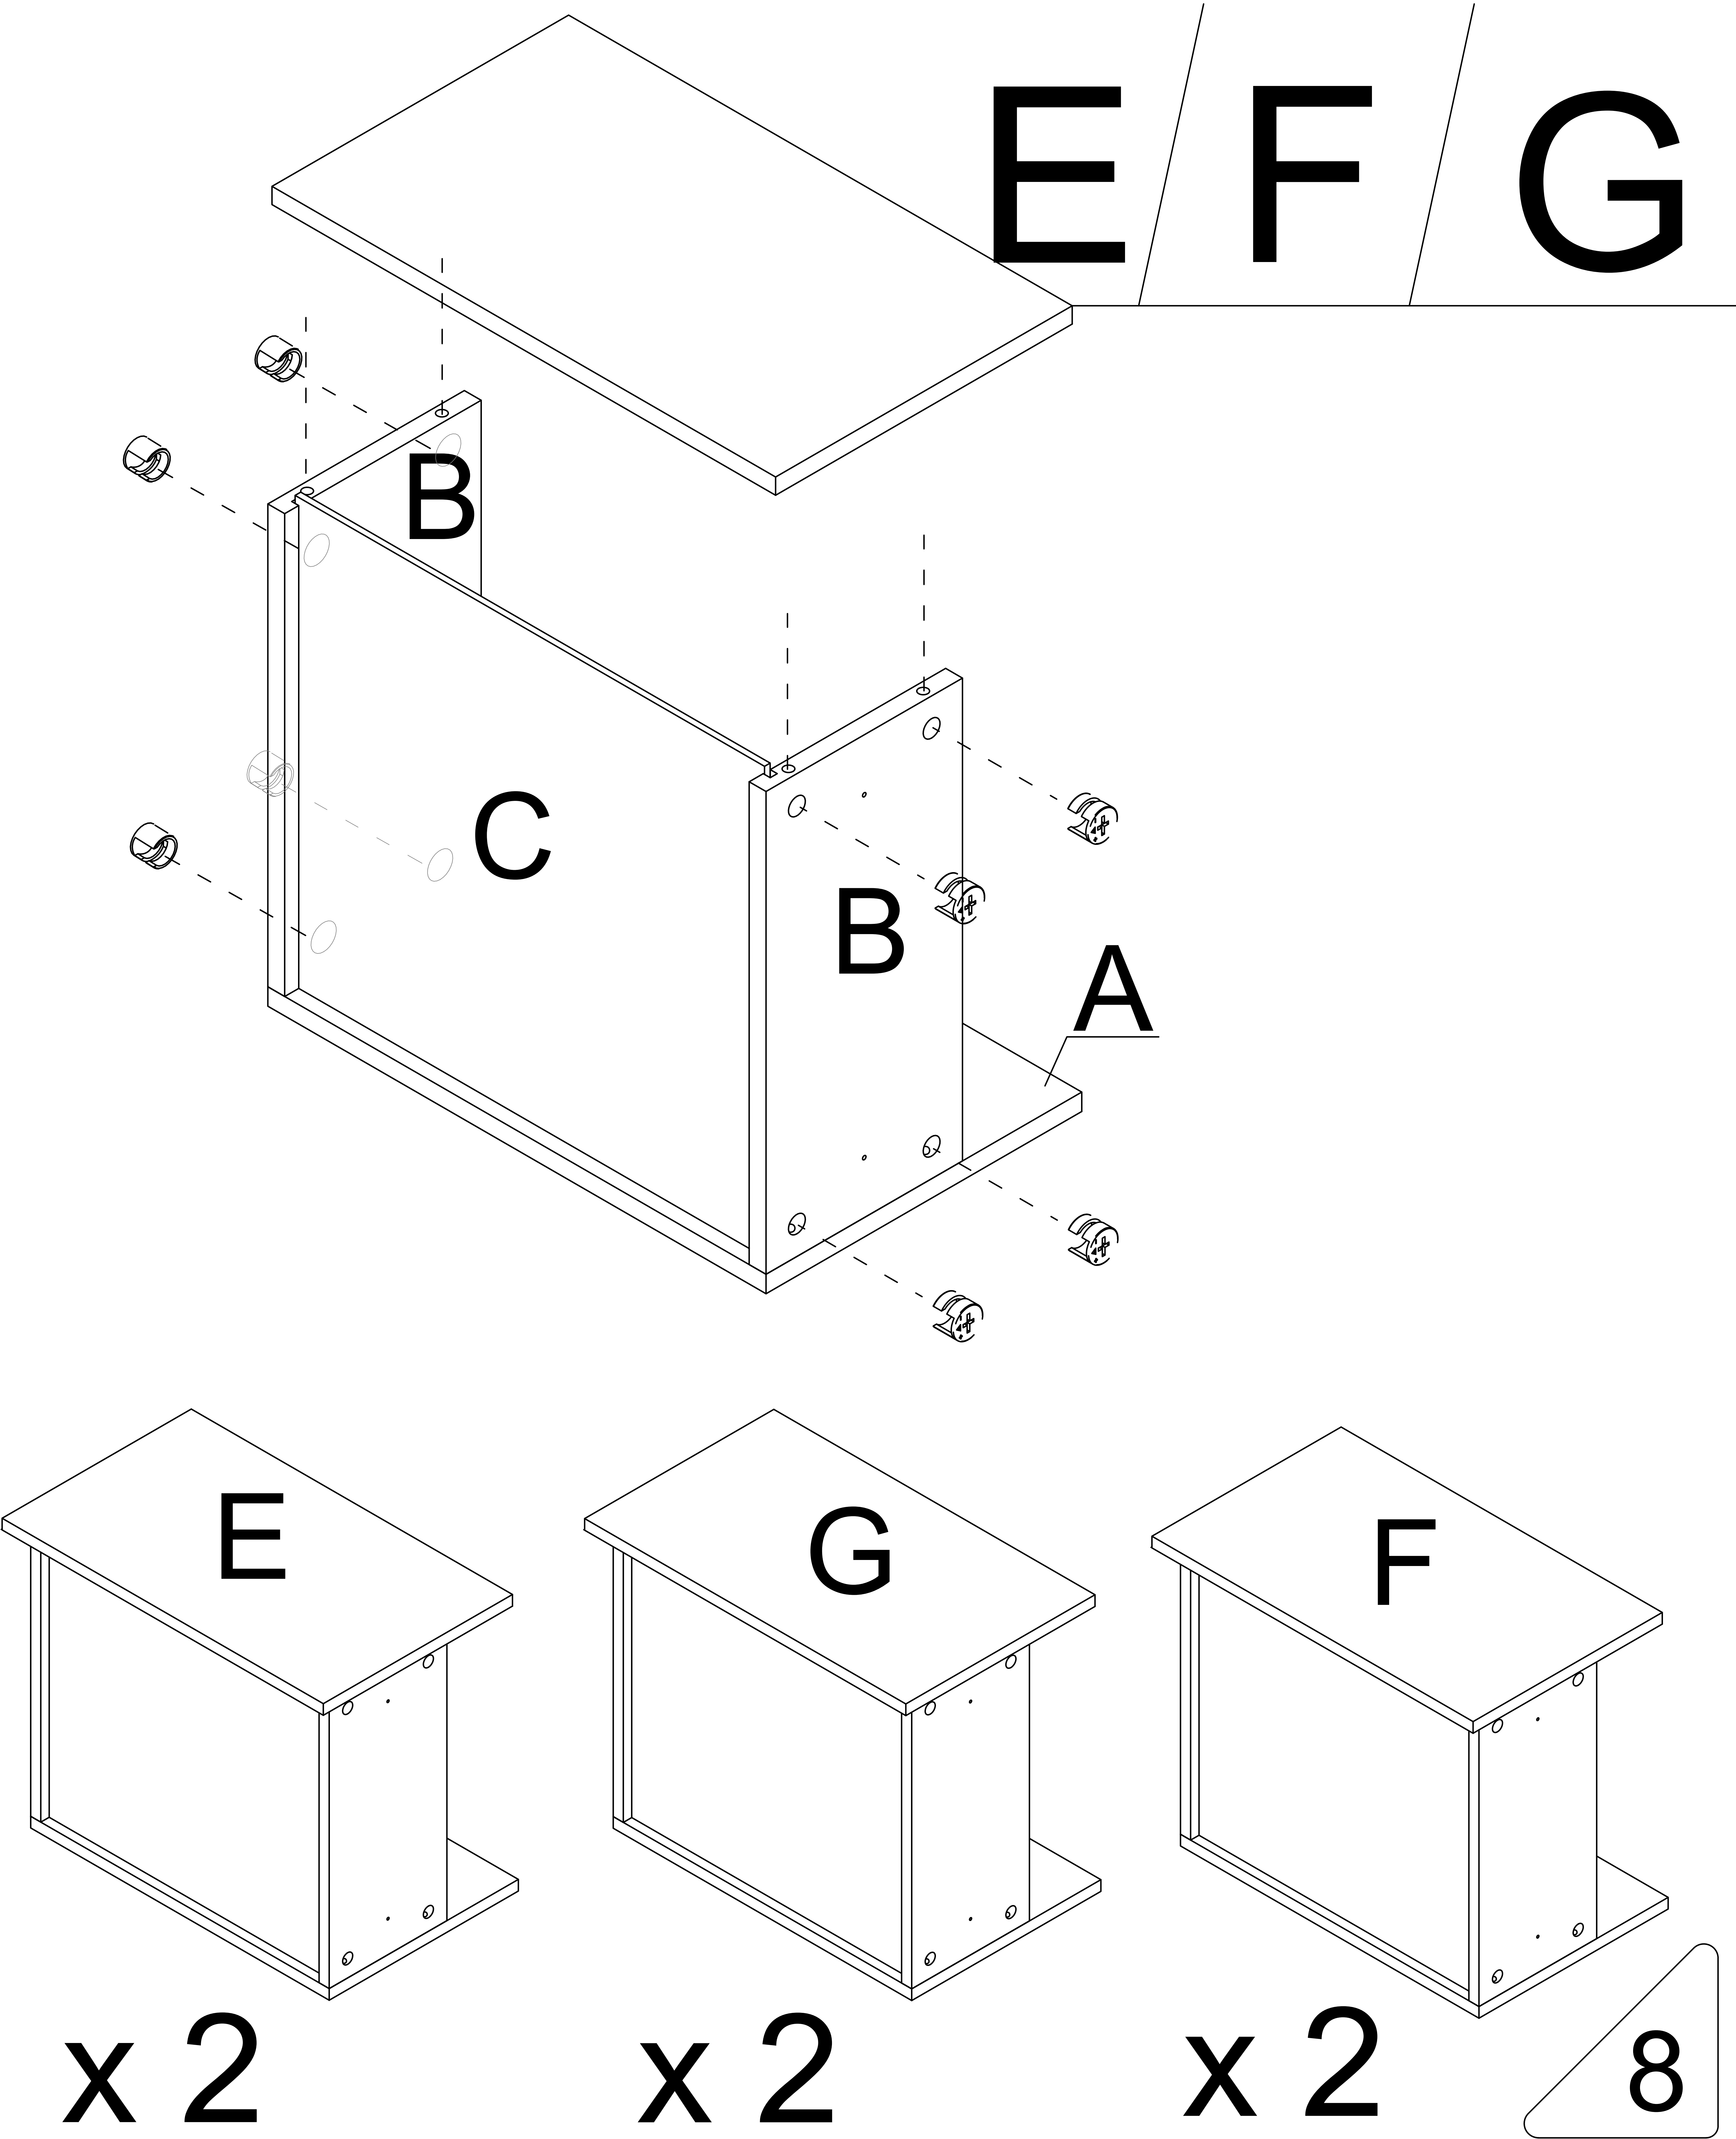


Drawer rail breakdown diagram

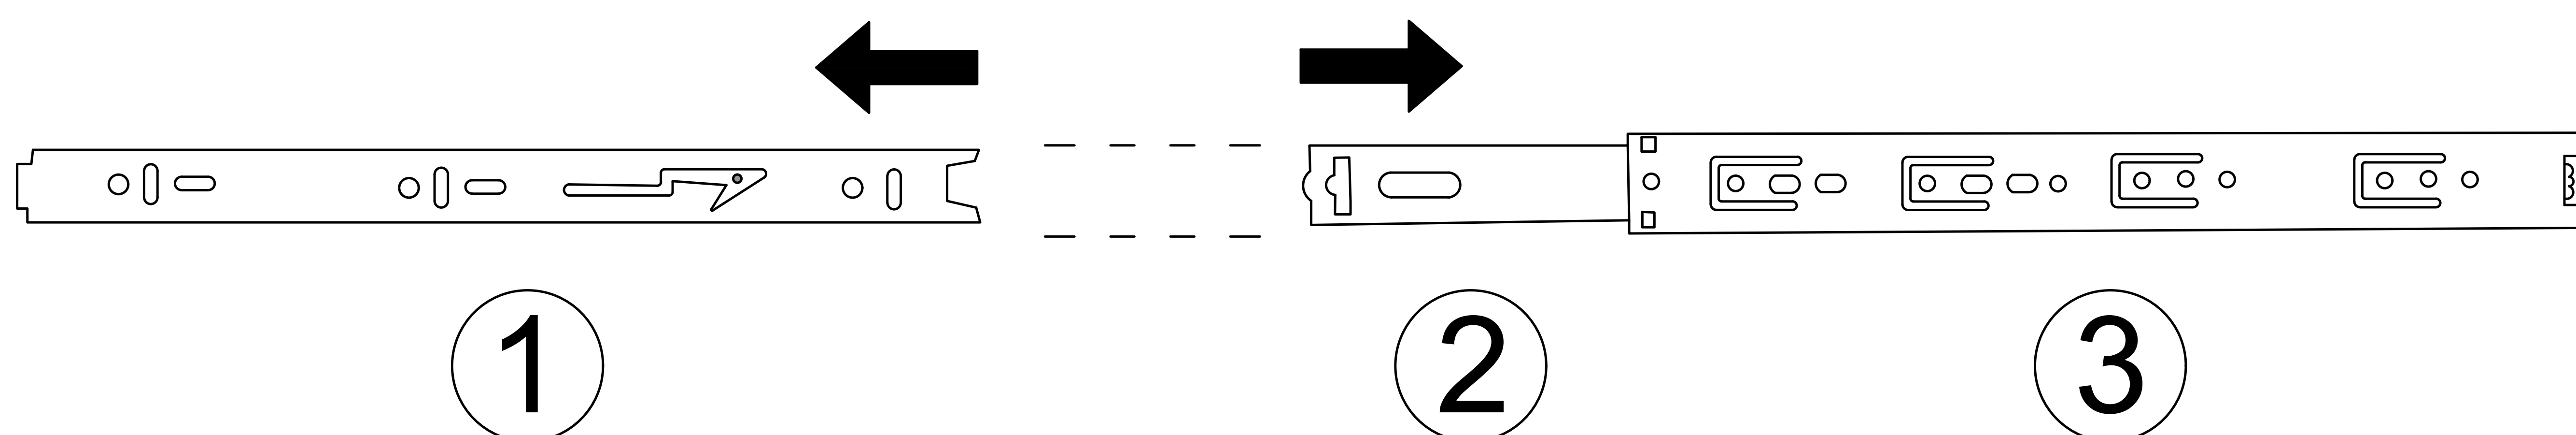



① Dismantle the schematic diagram

Step 1 : Pull the rails apart

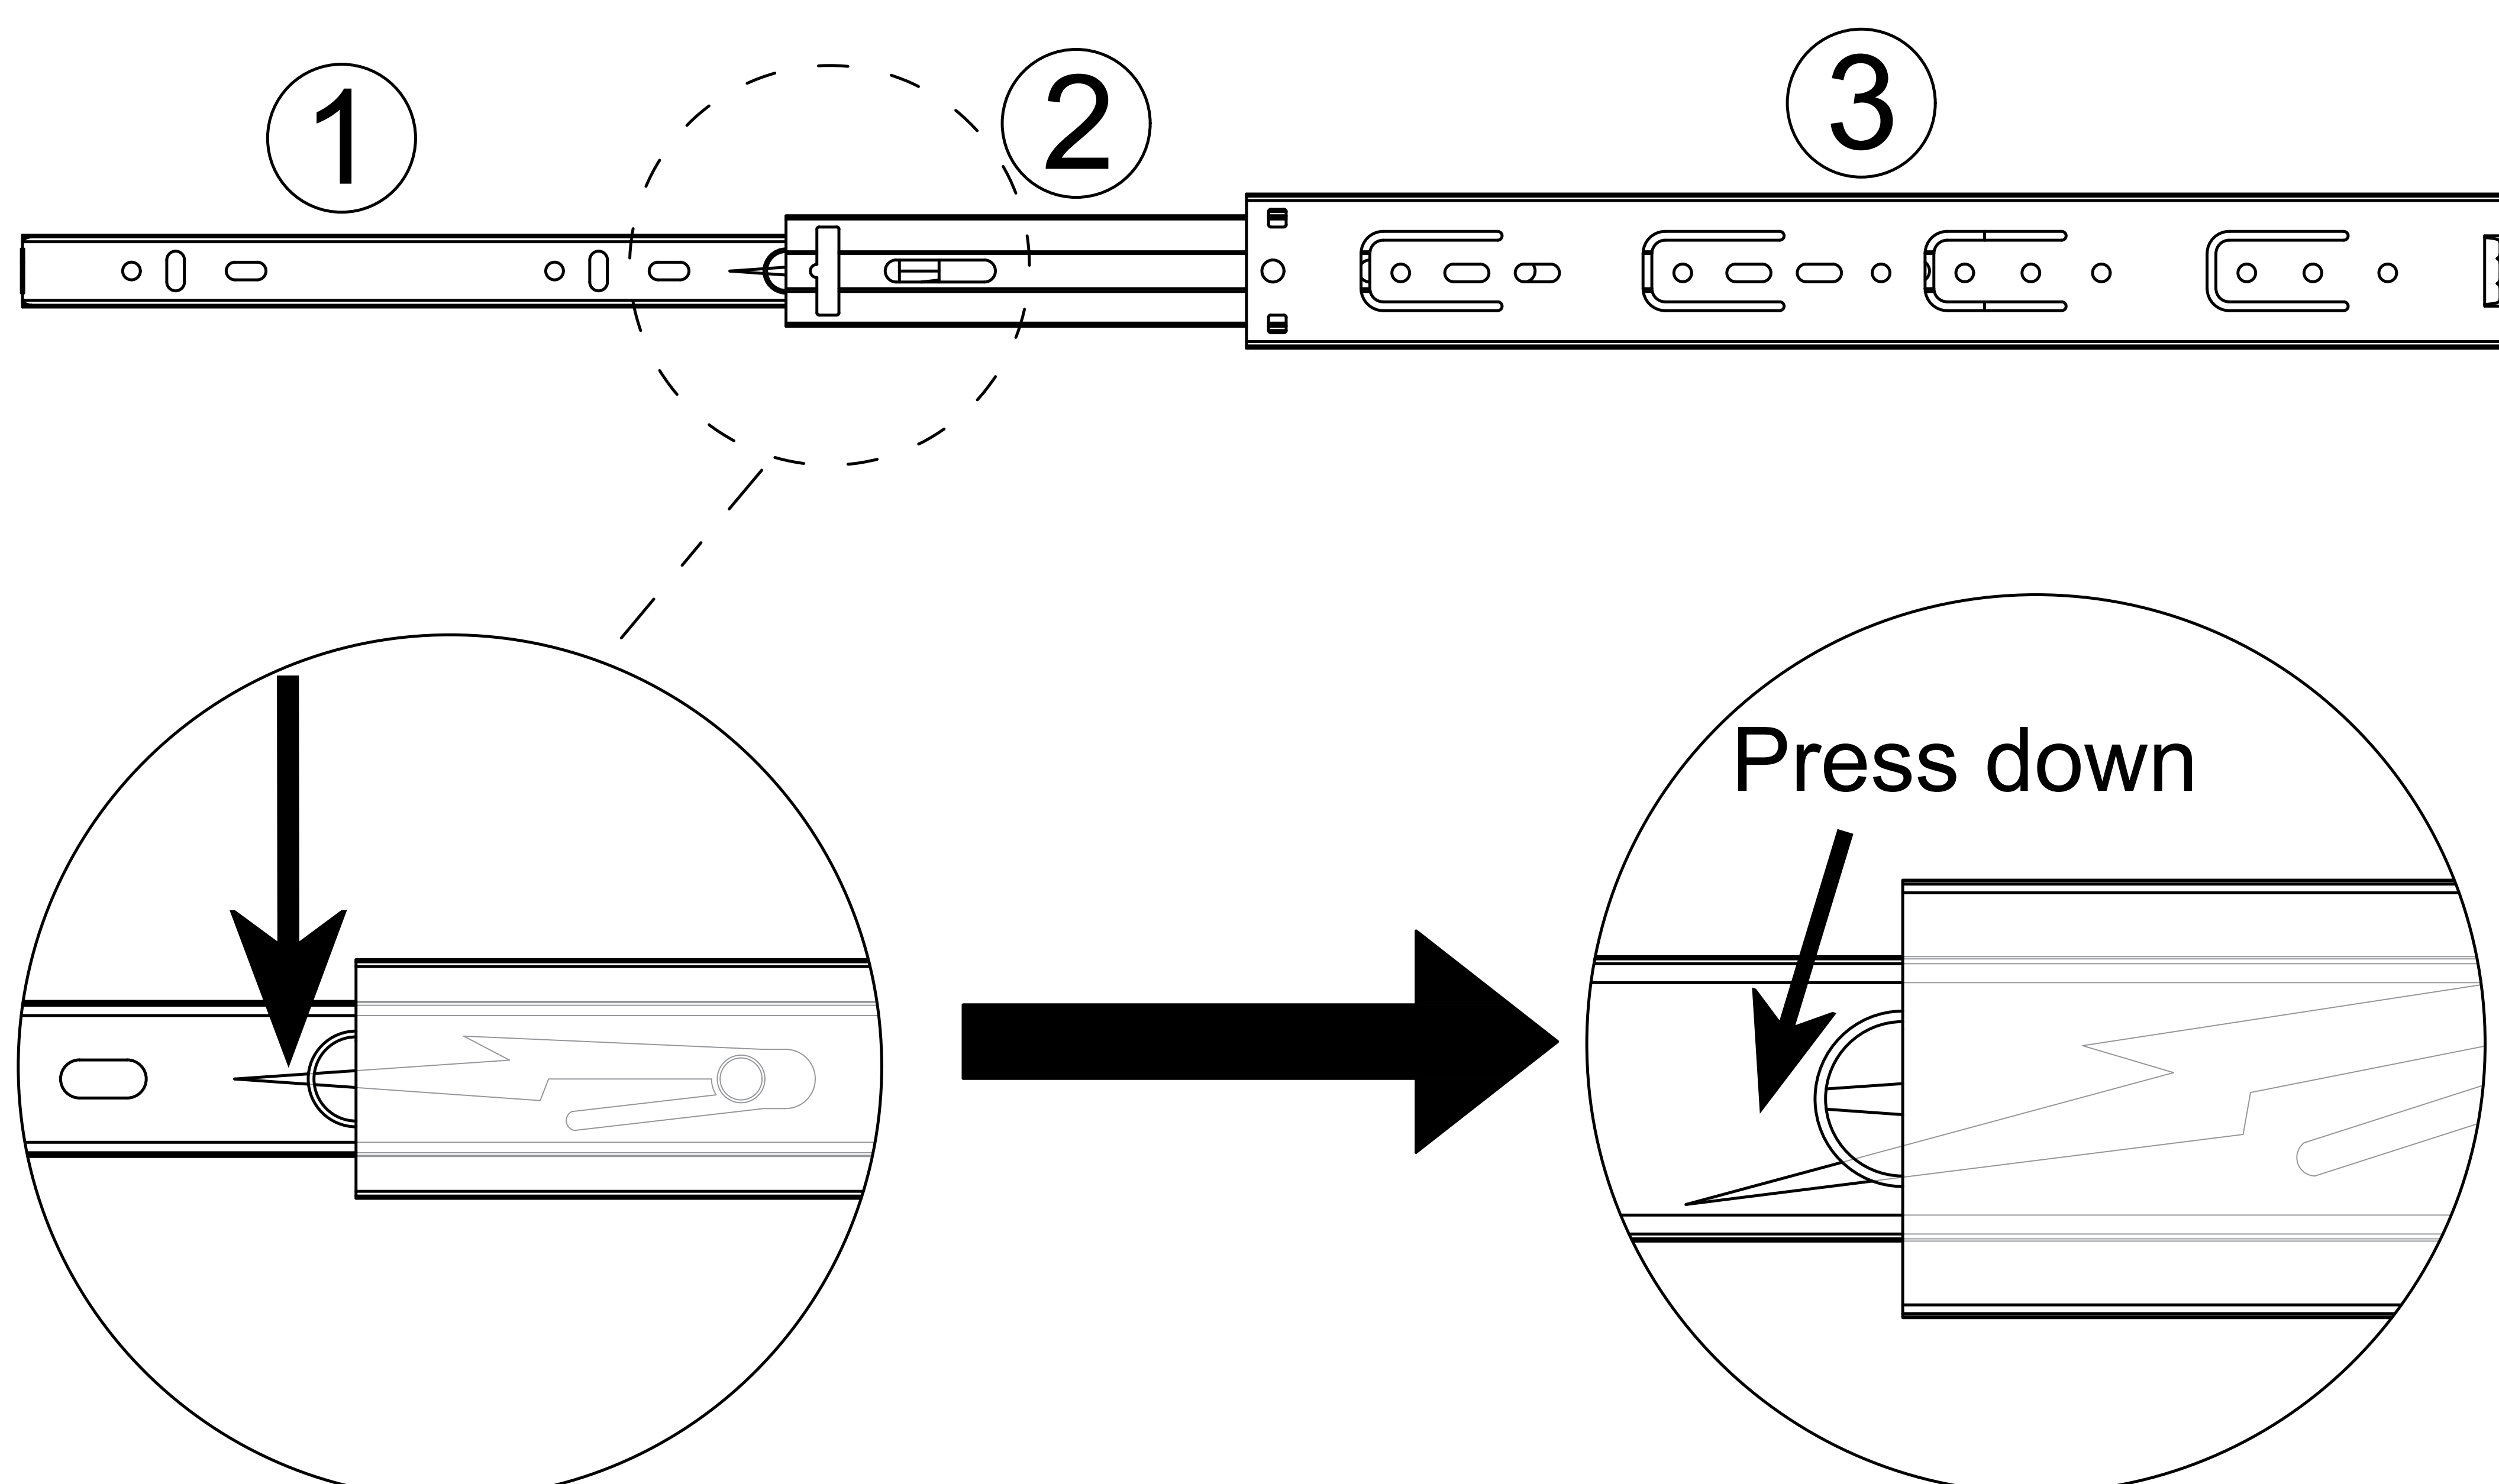


Step 2 : Press the nylon button and pull out ①.

Drawer rail decomposition completed schematic diagram

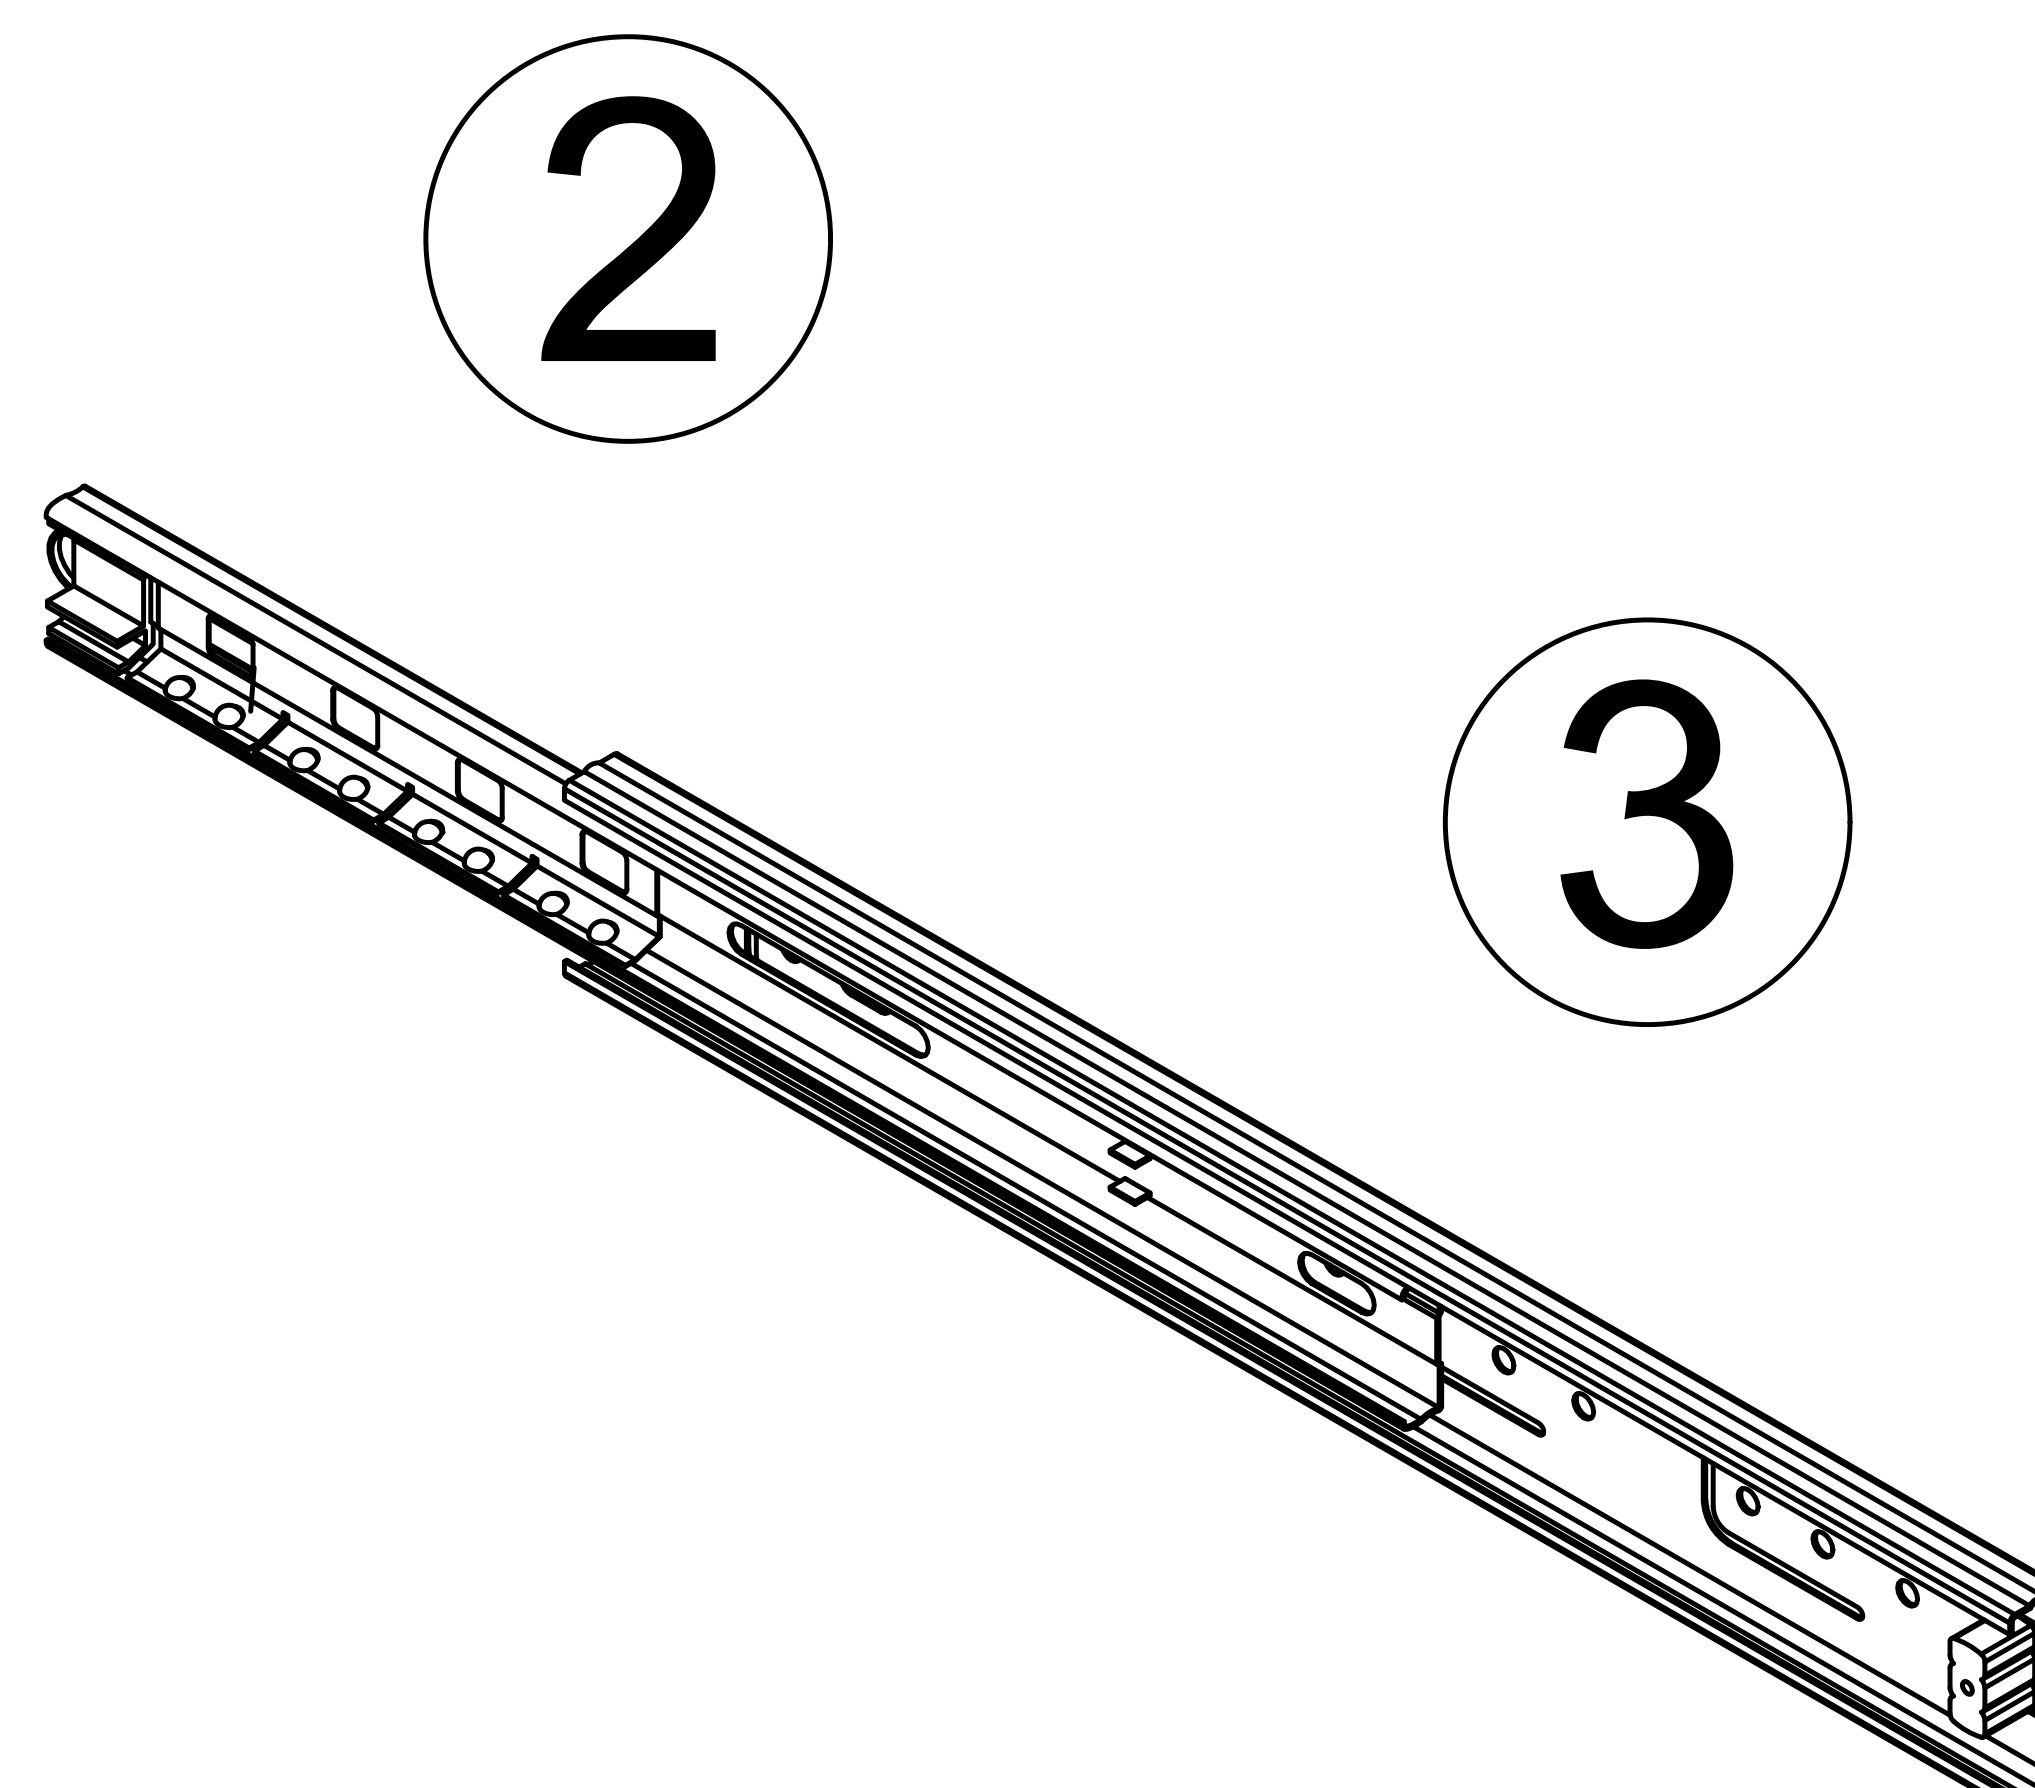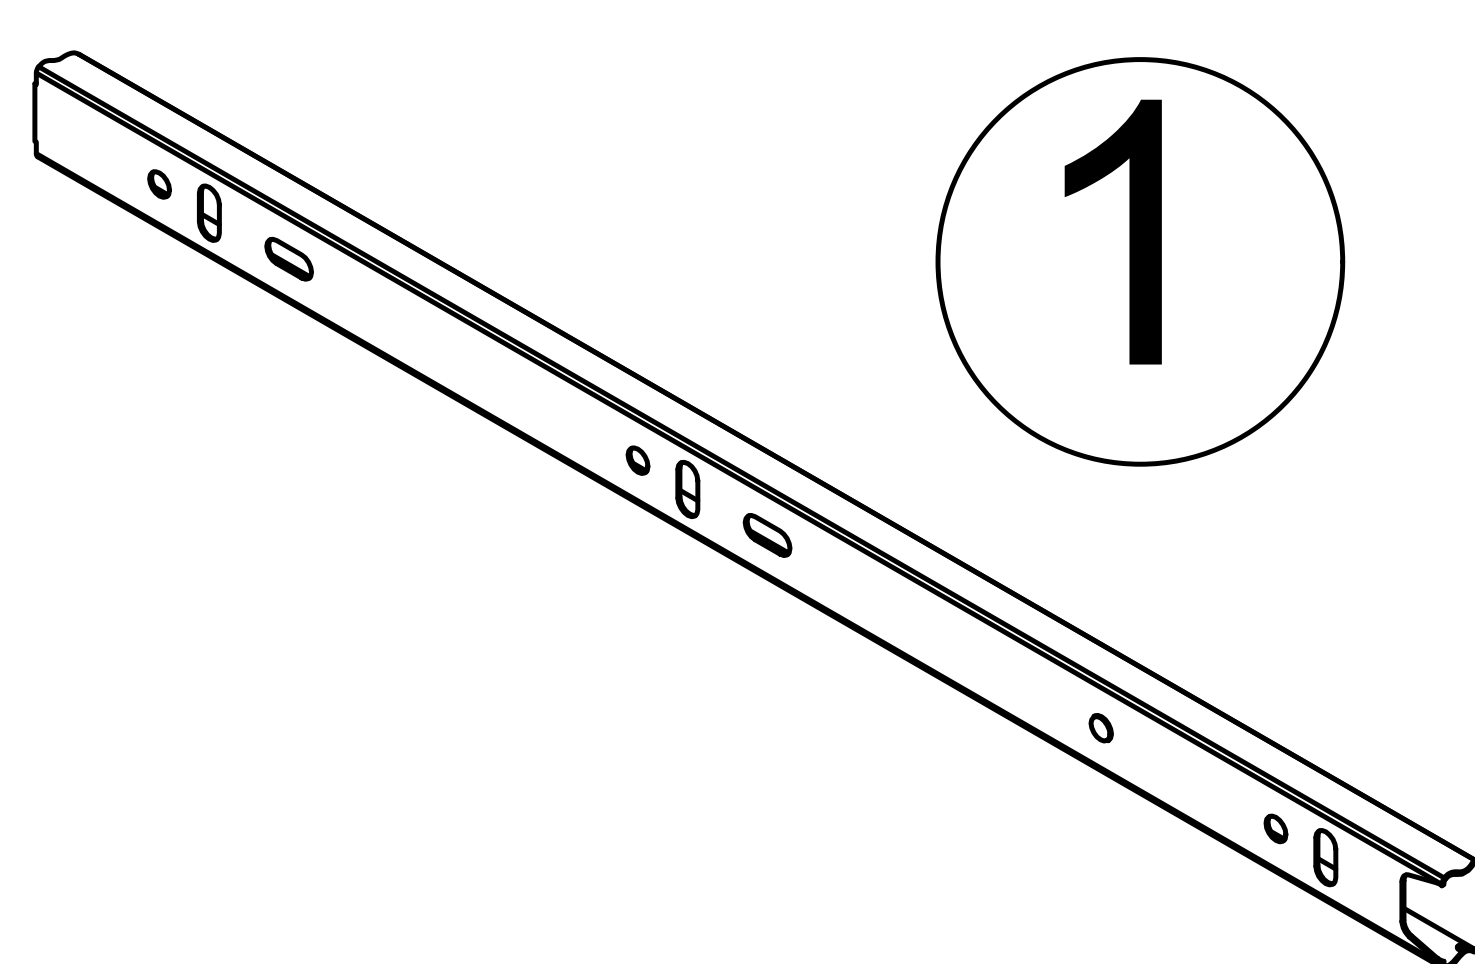



3

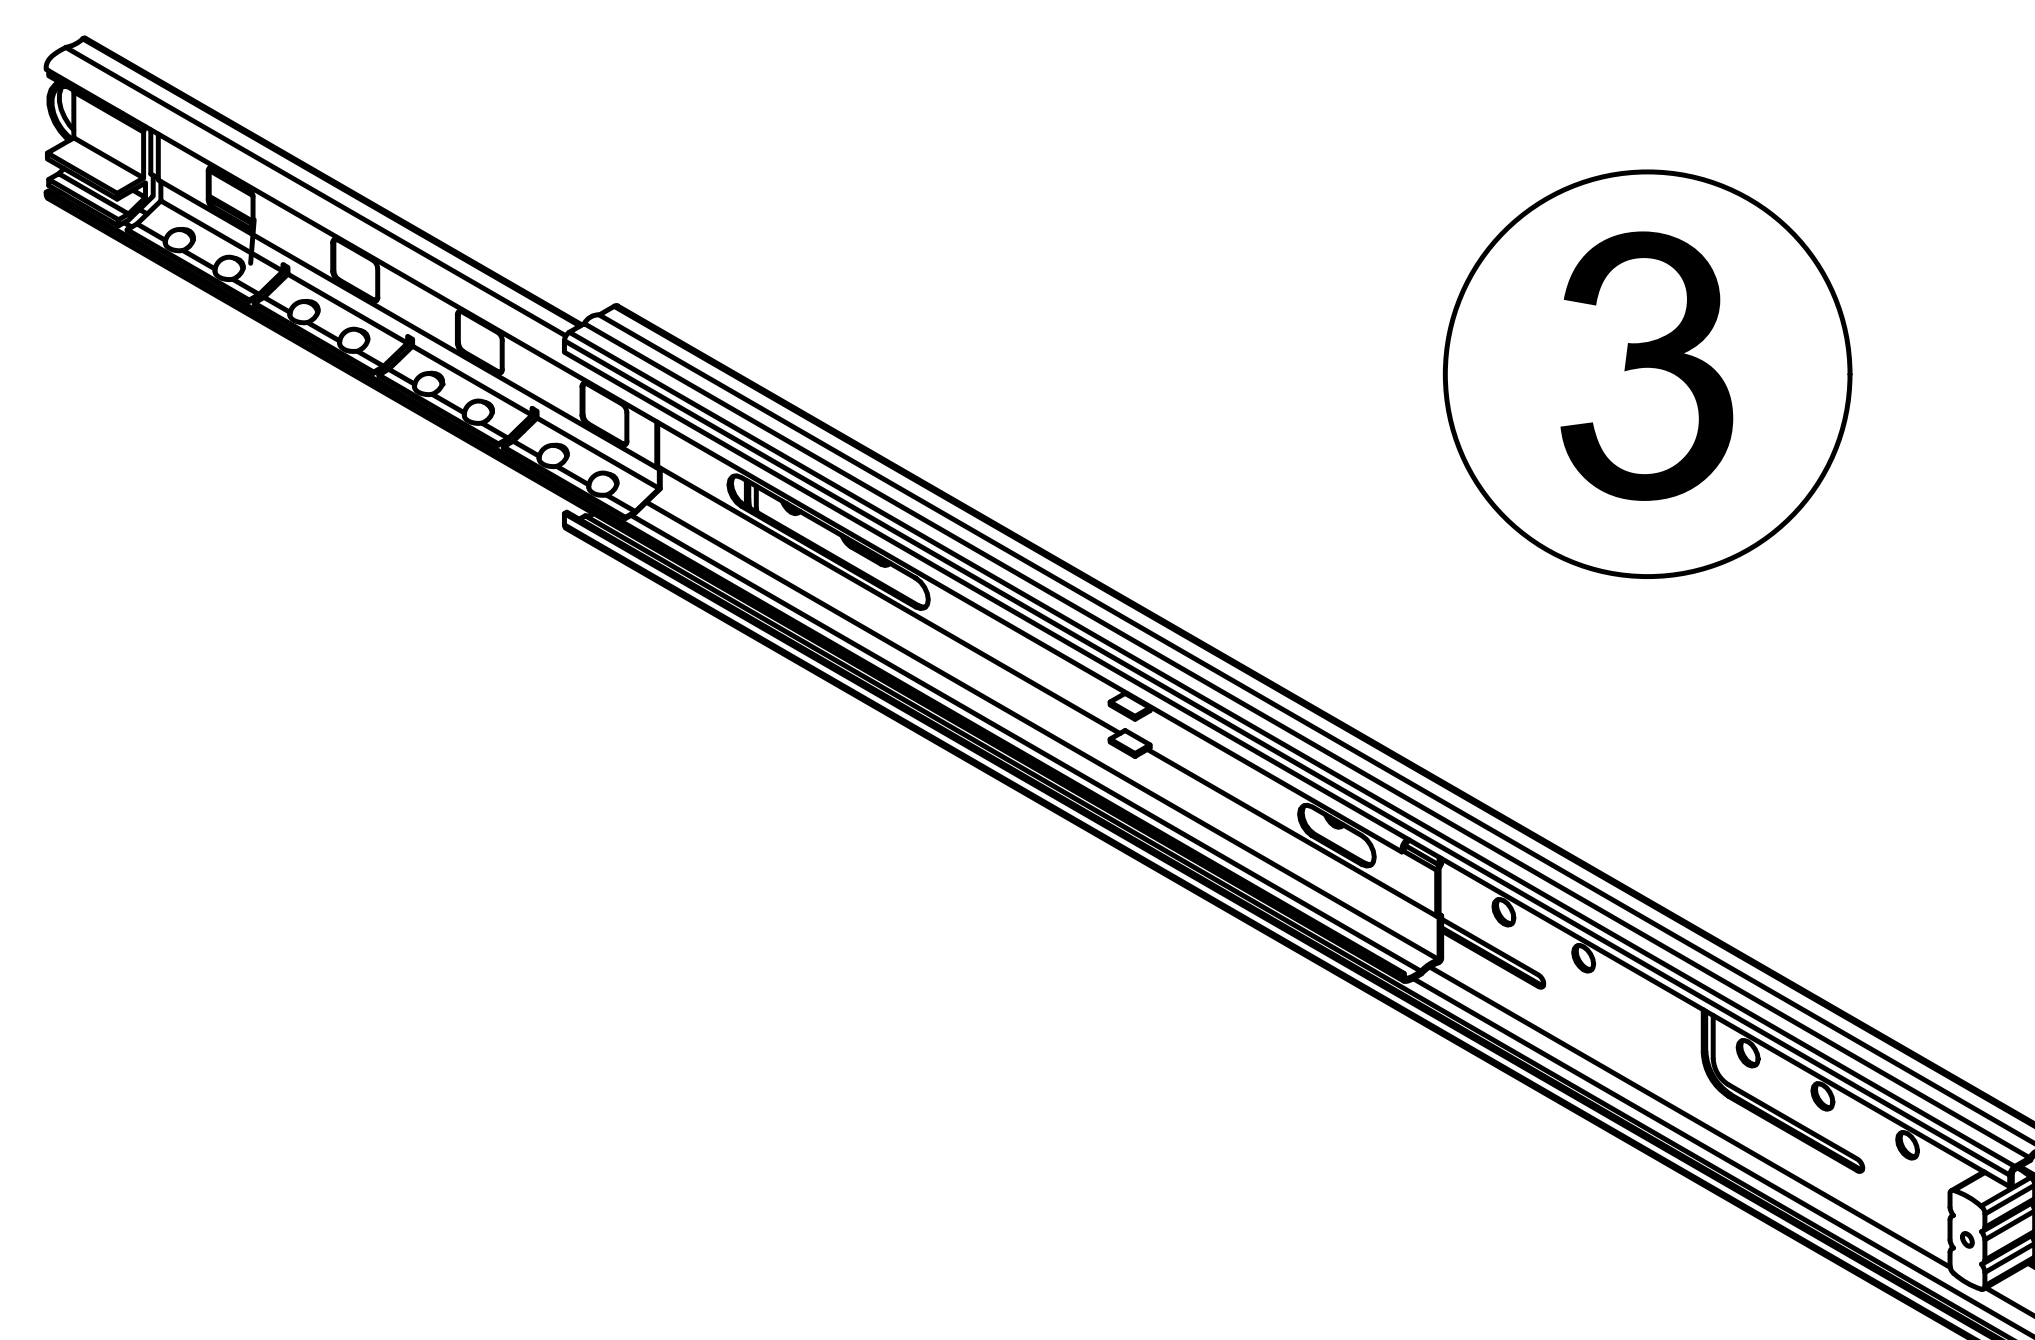



Step 8

4

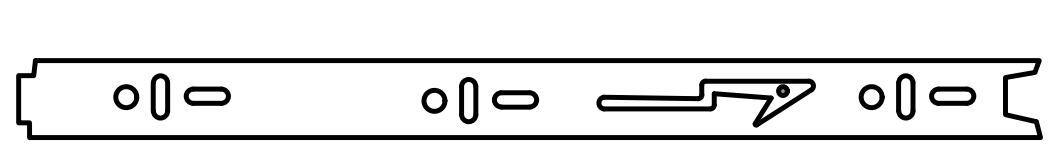 x12

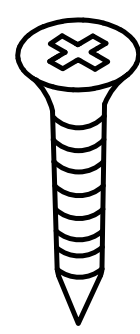


x24

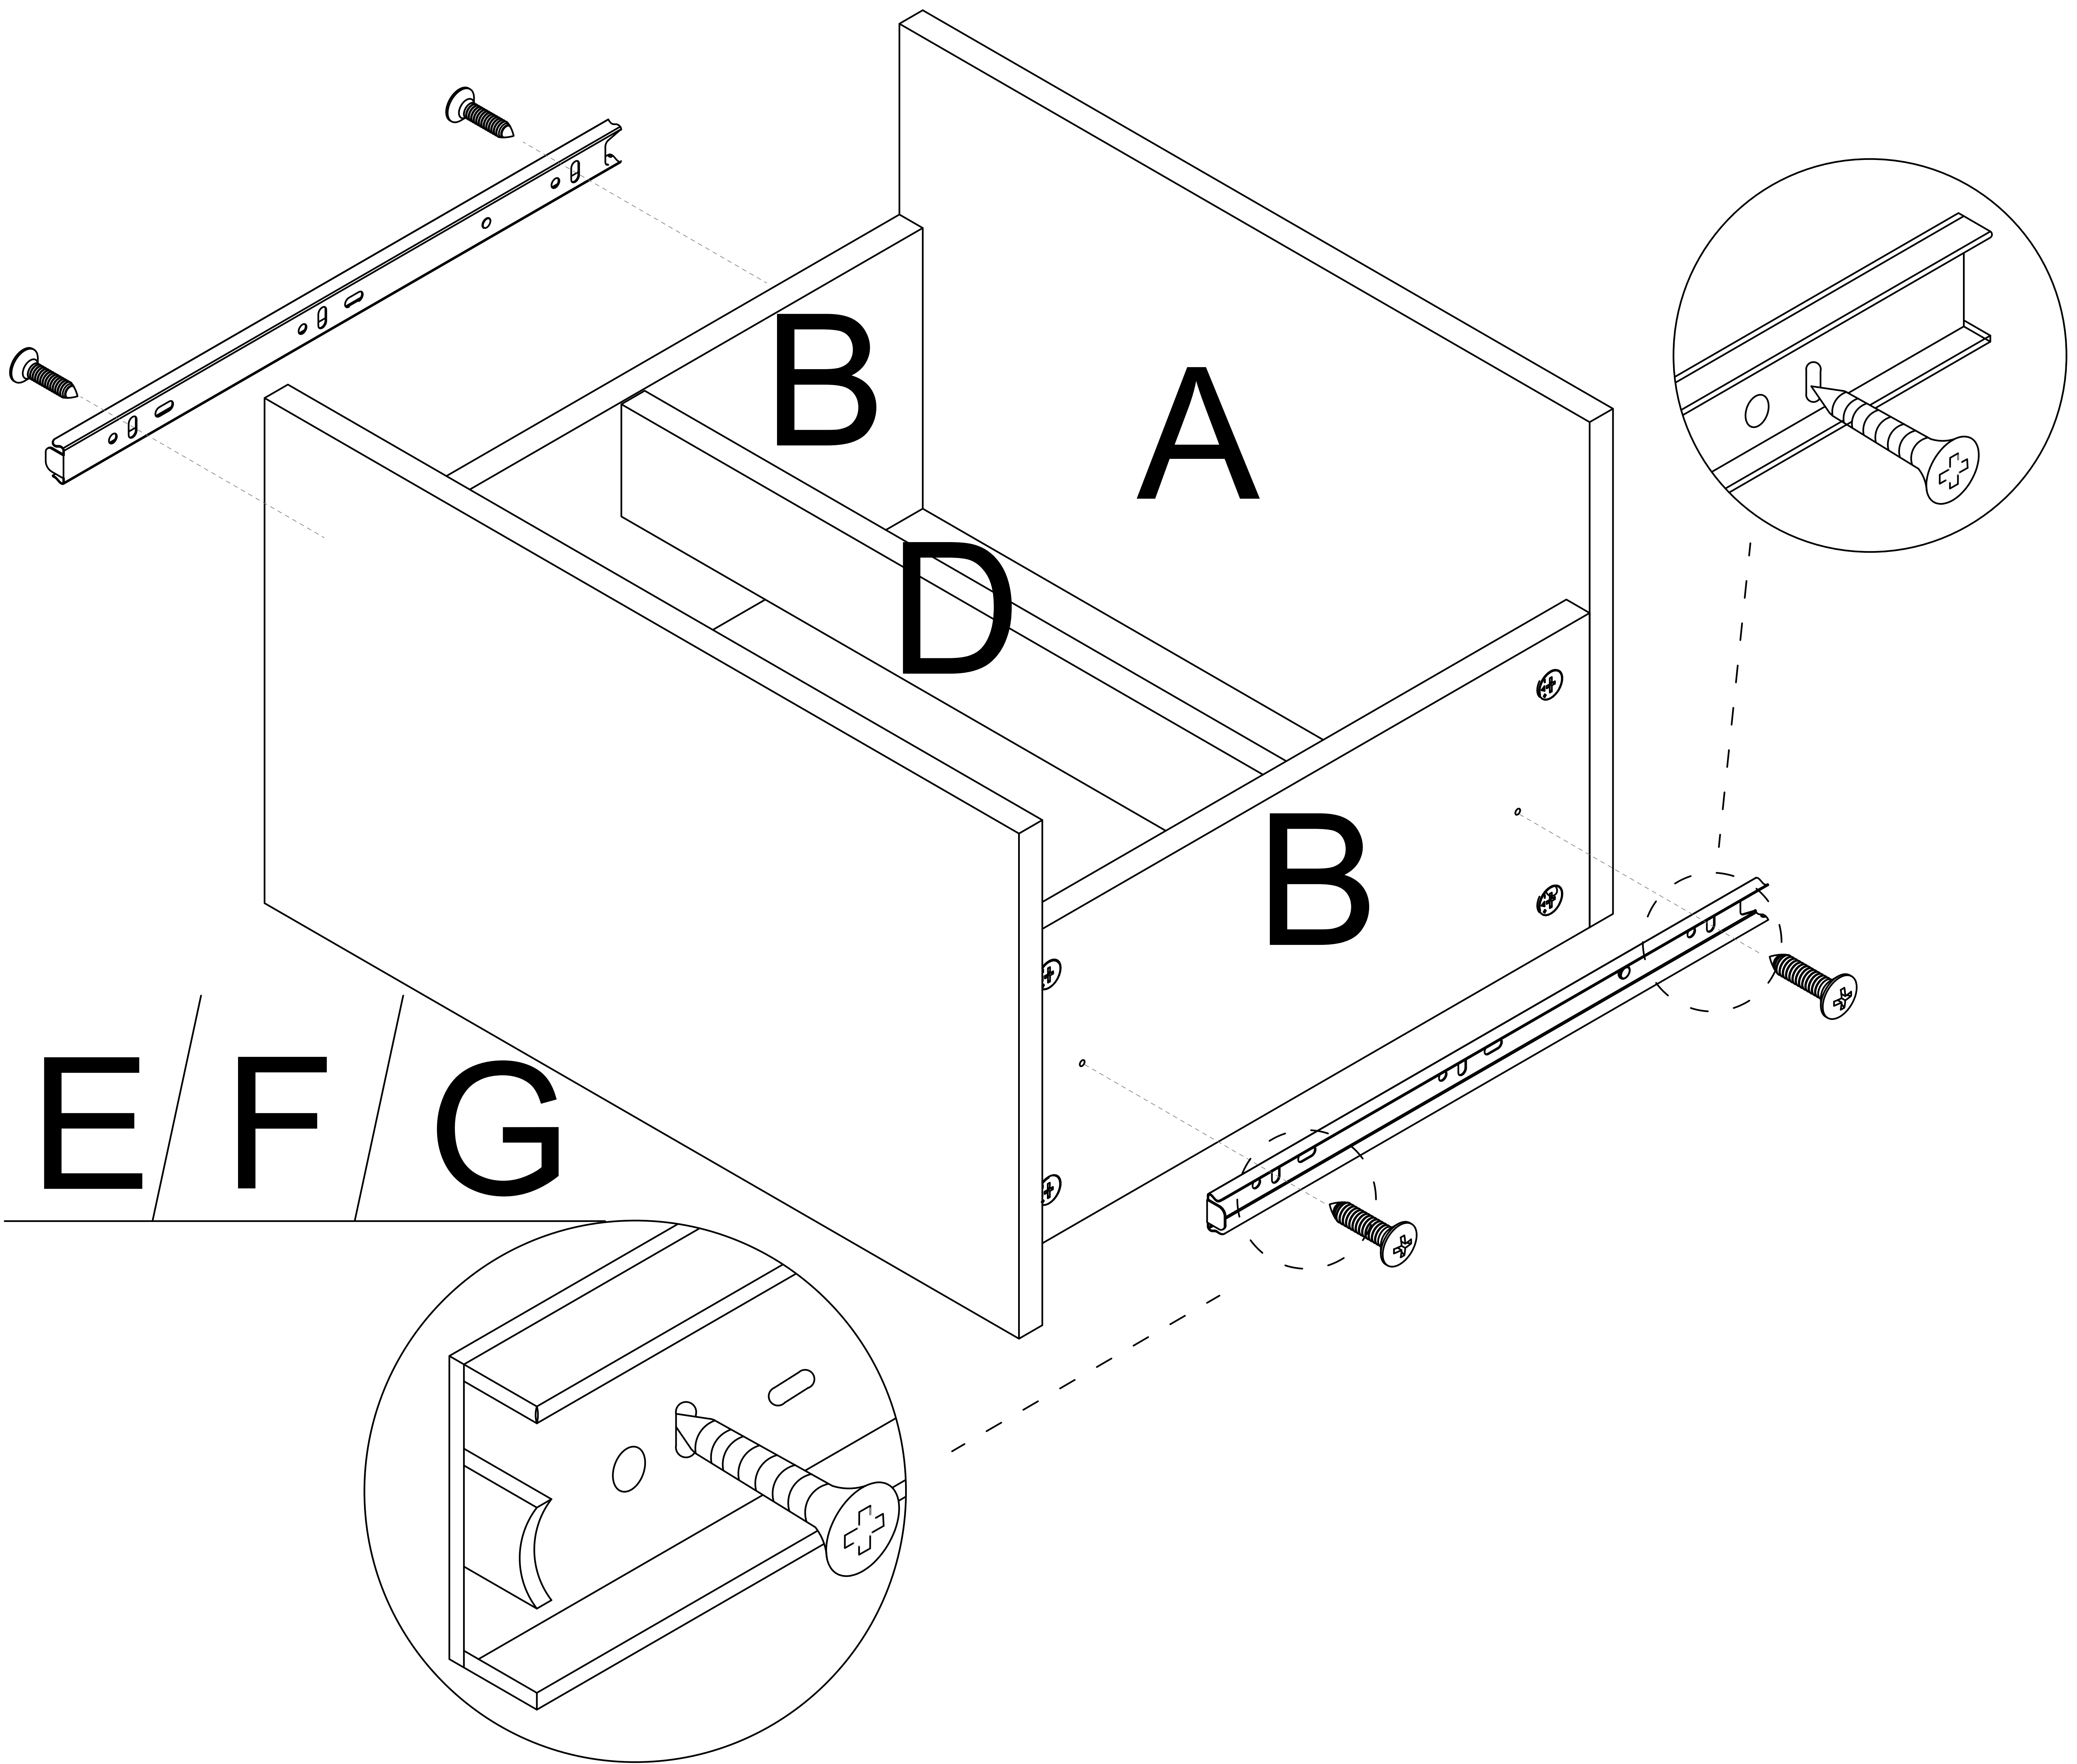
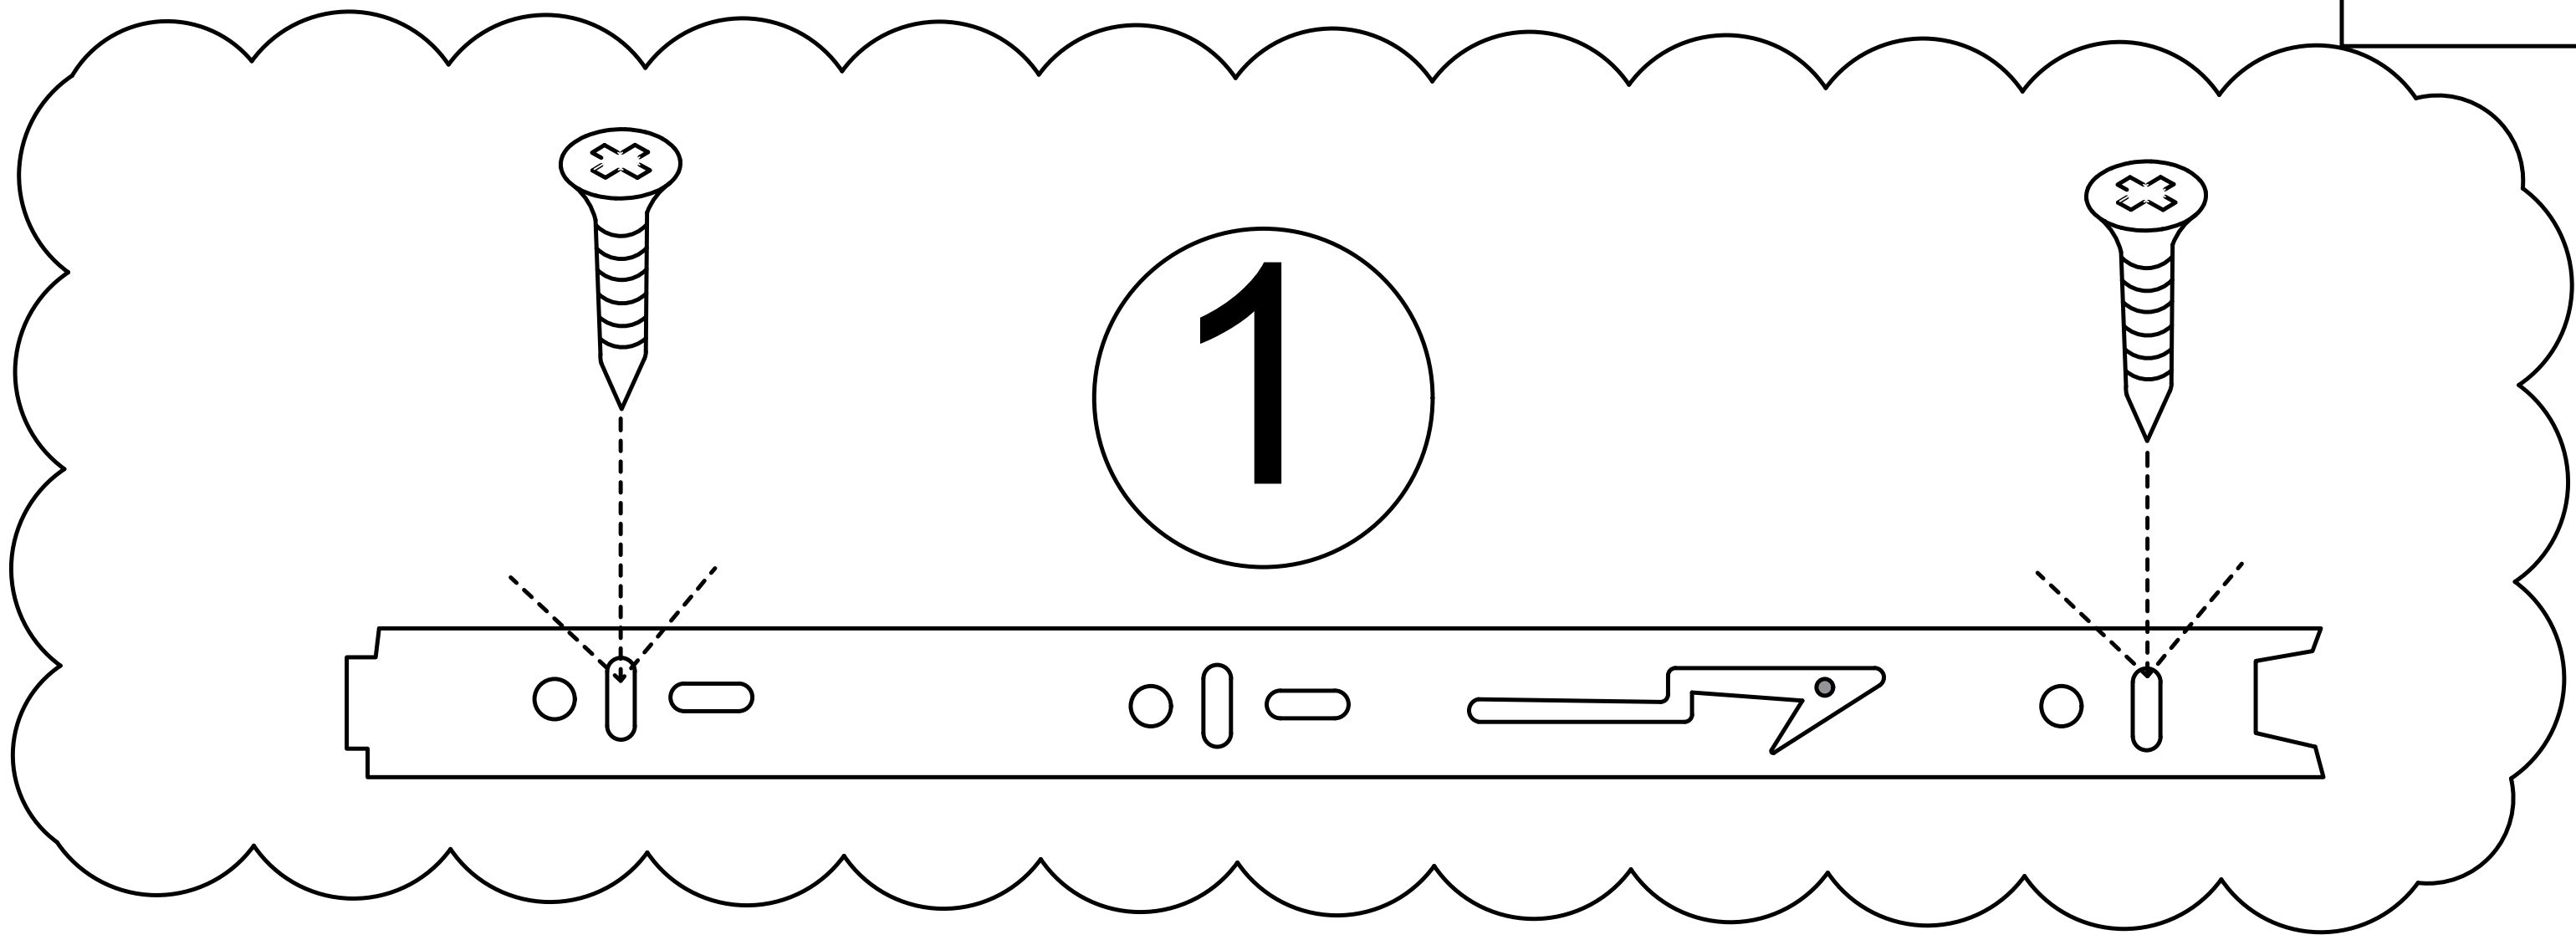


You can repeat the previous steps to obtain 6 identical drawers.

Product structure decomposition


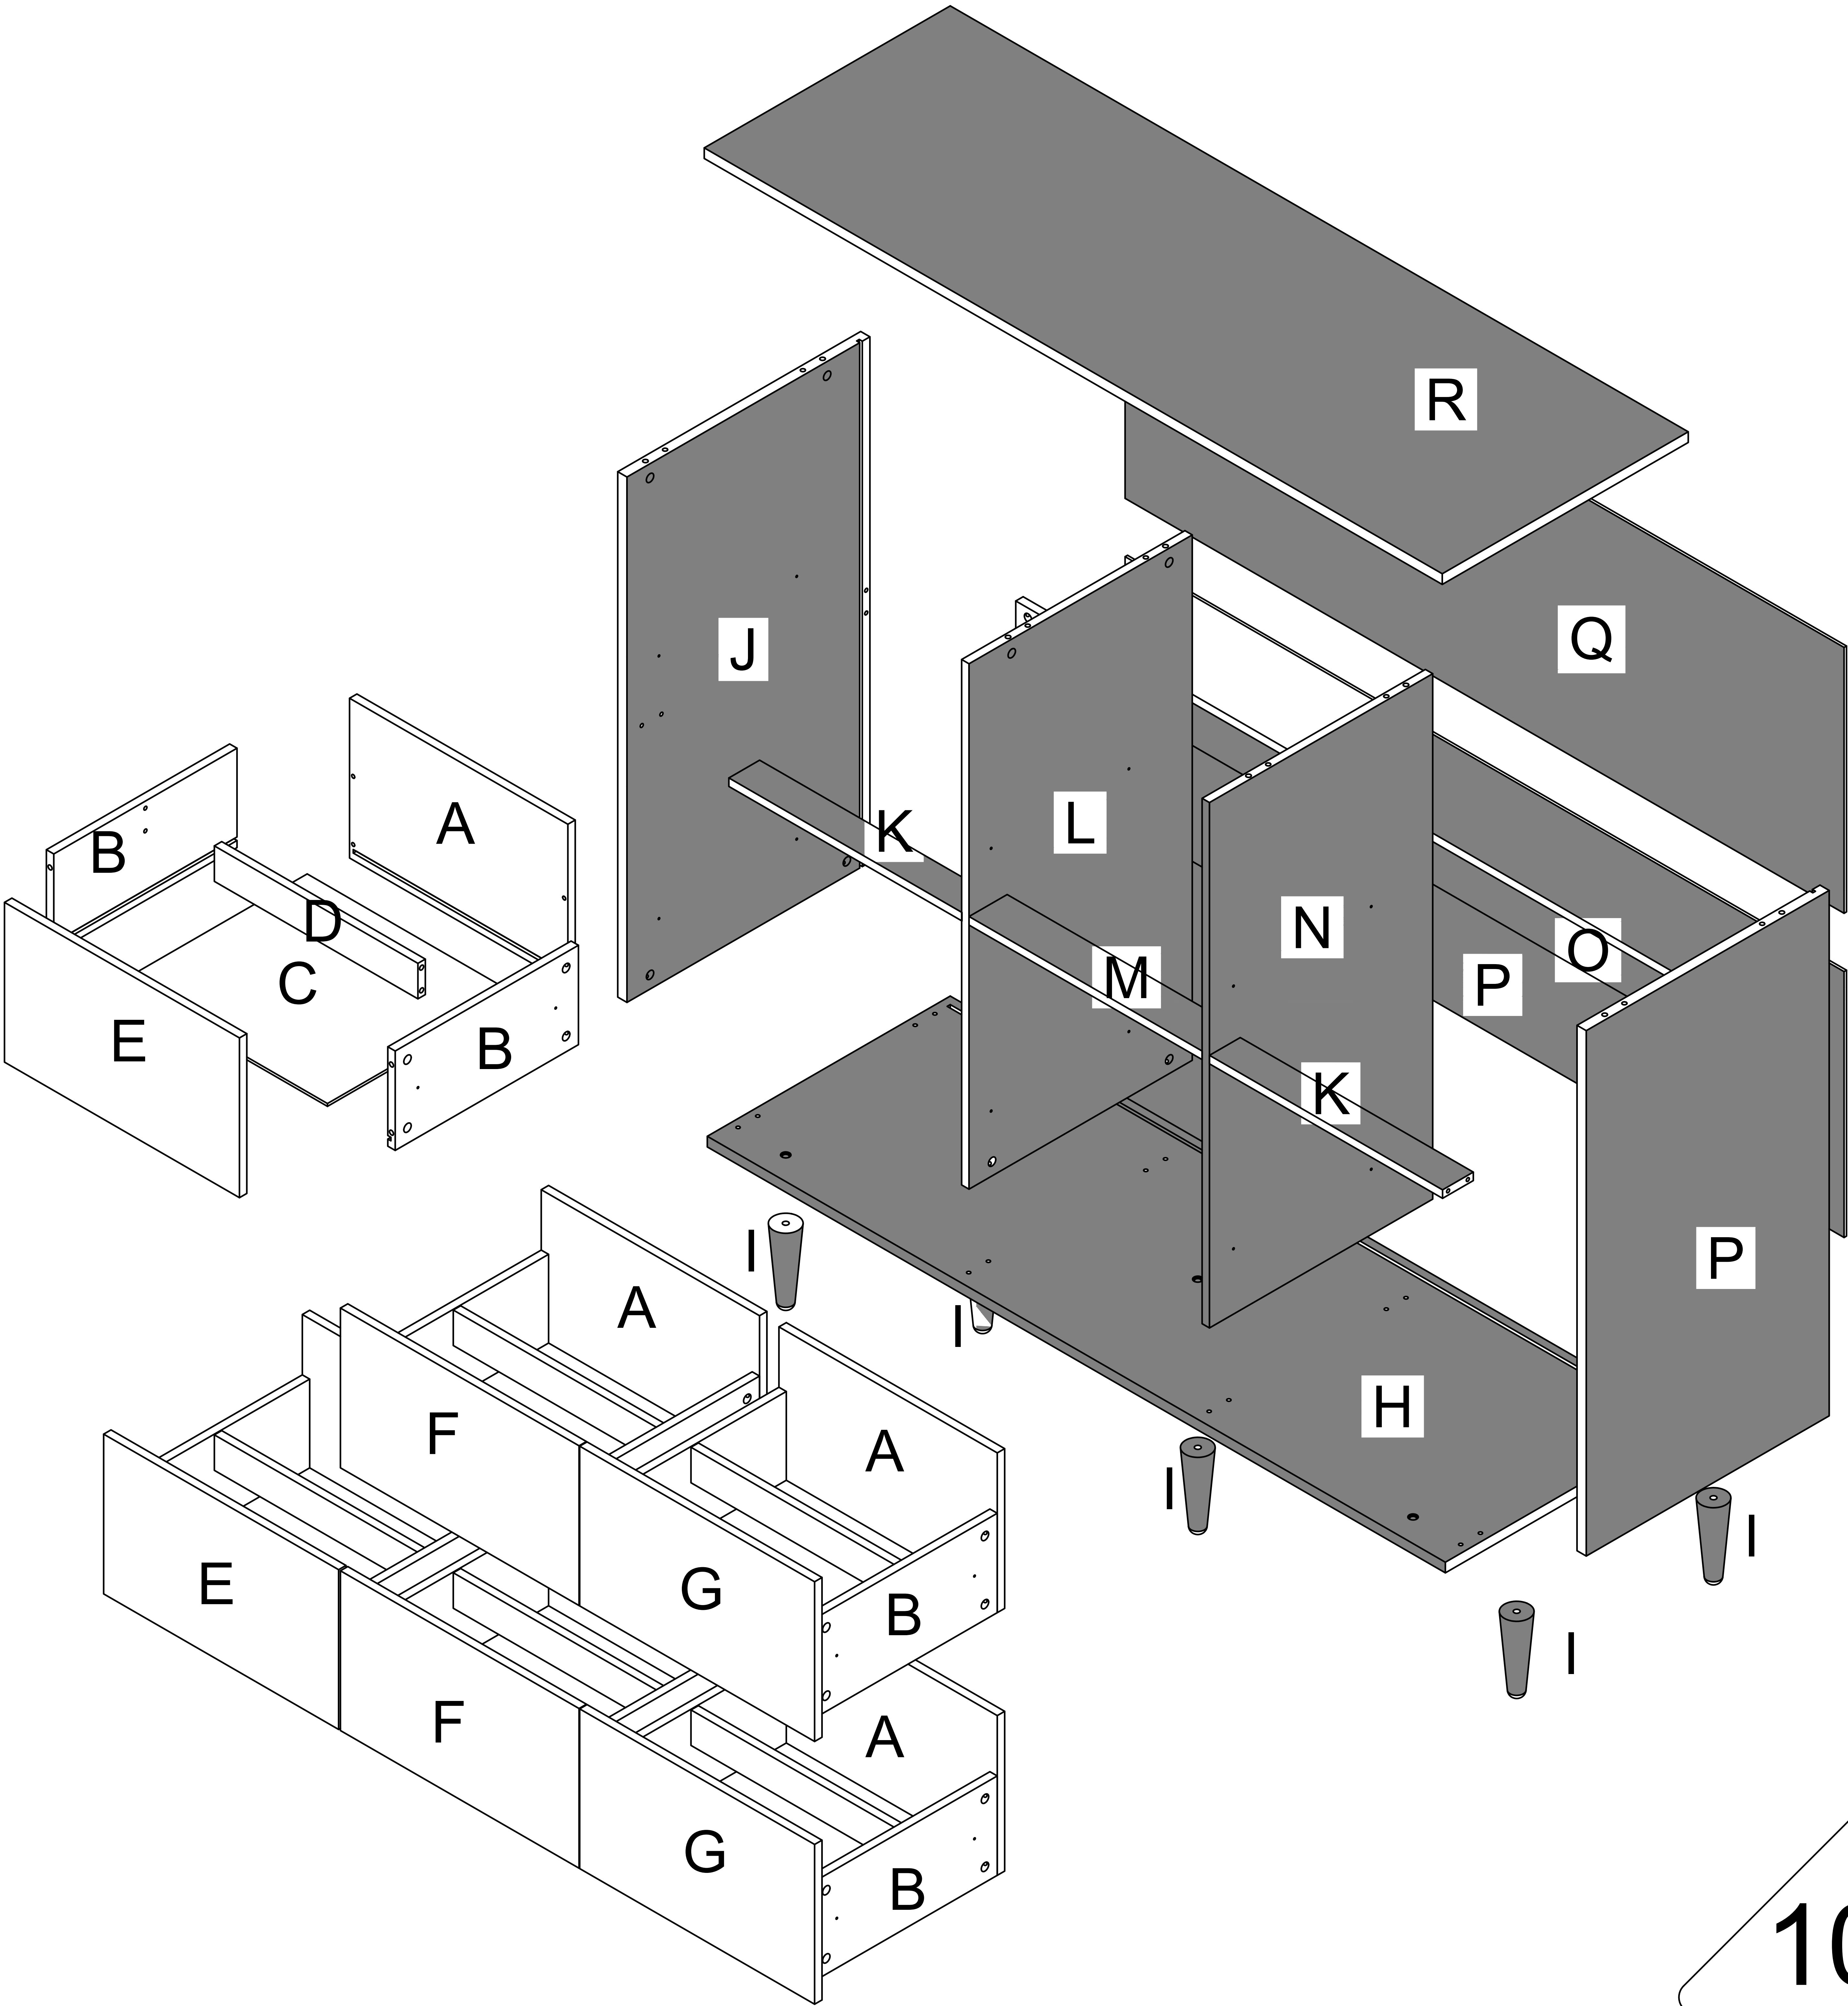


Step 9

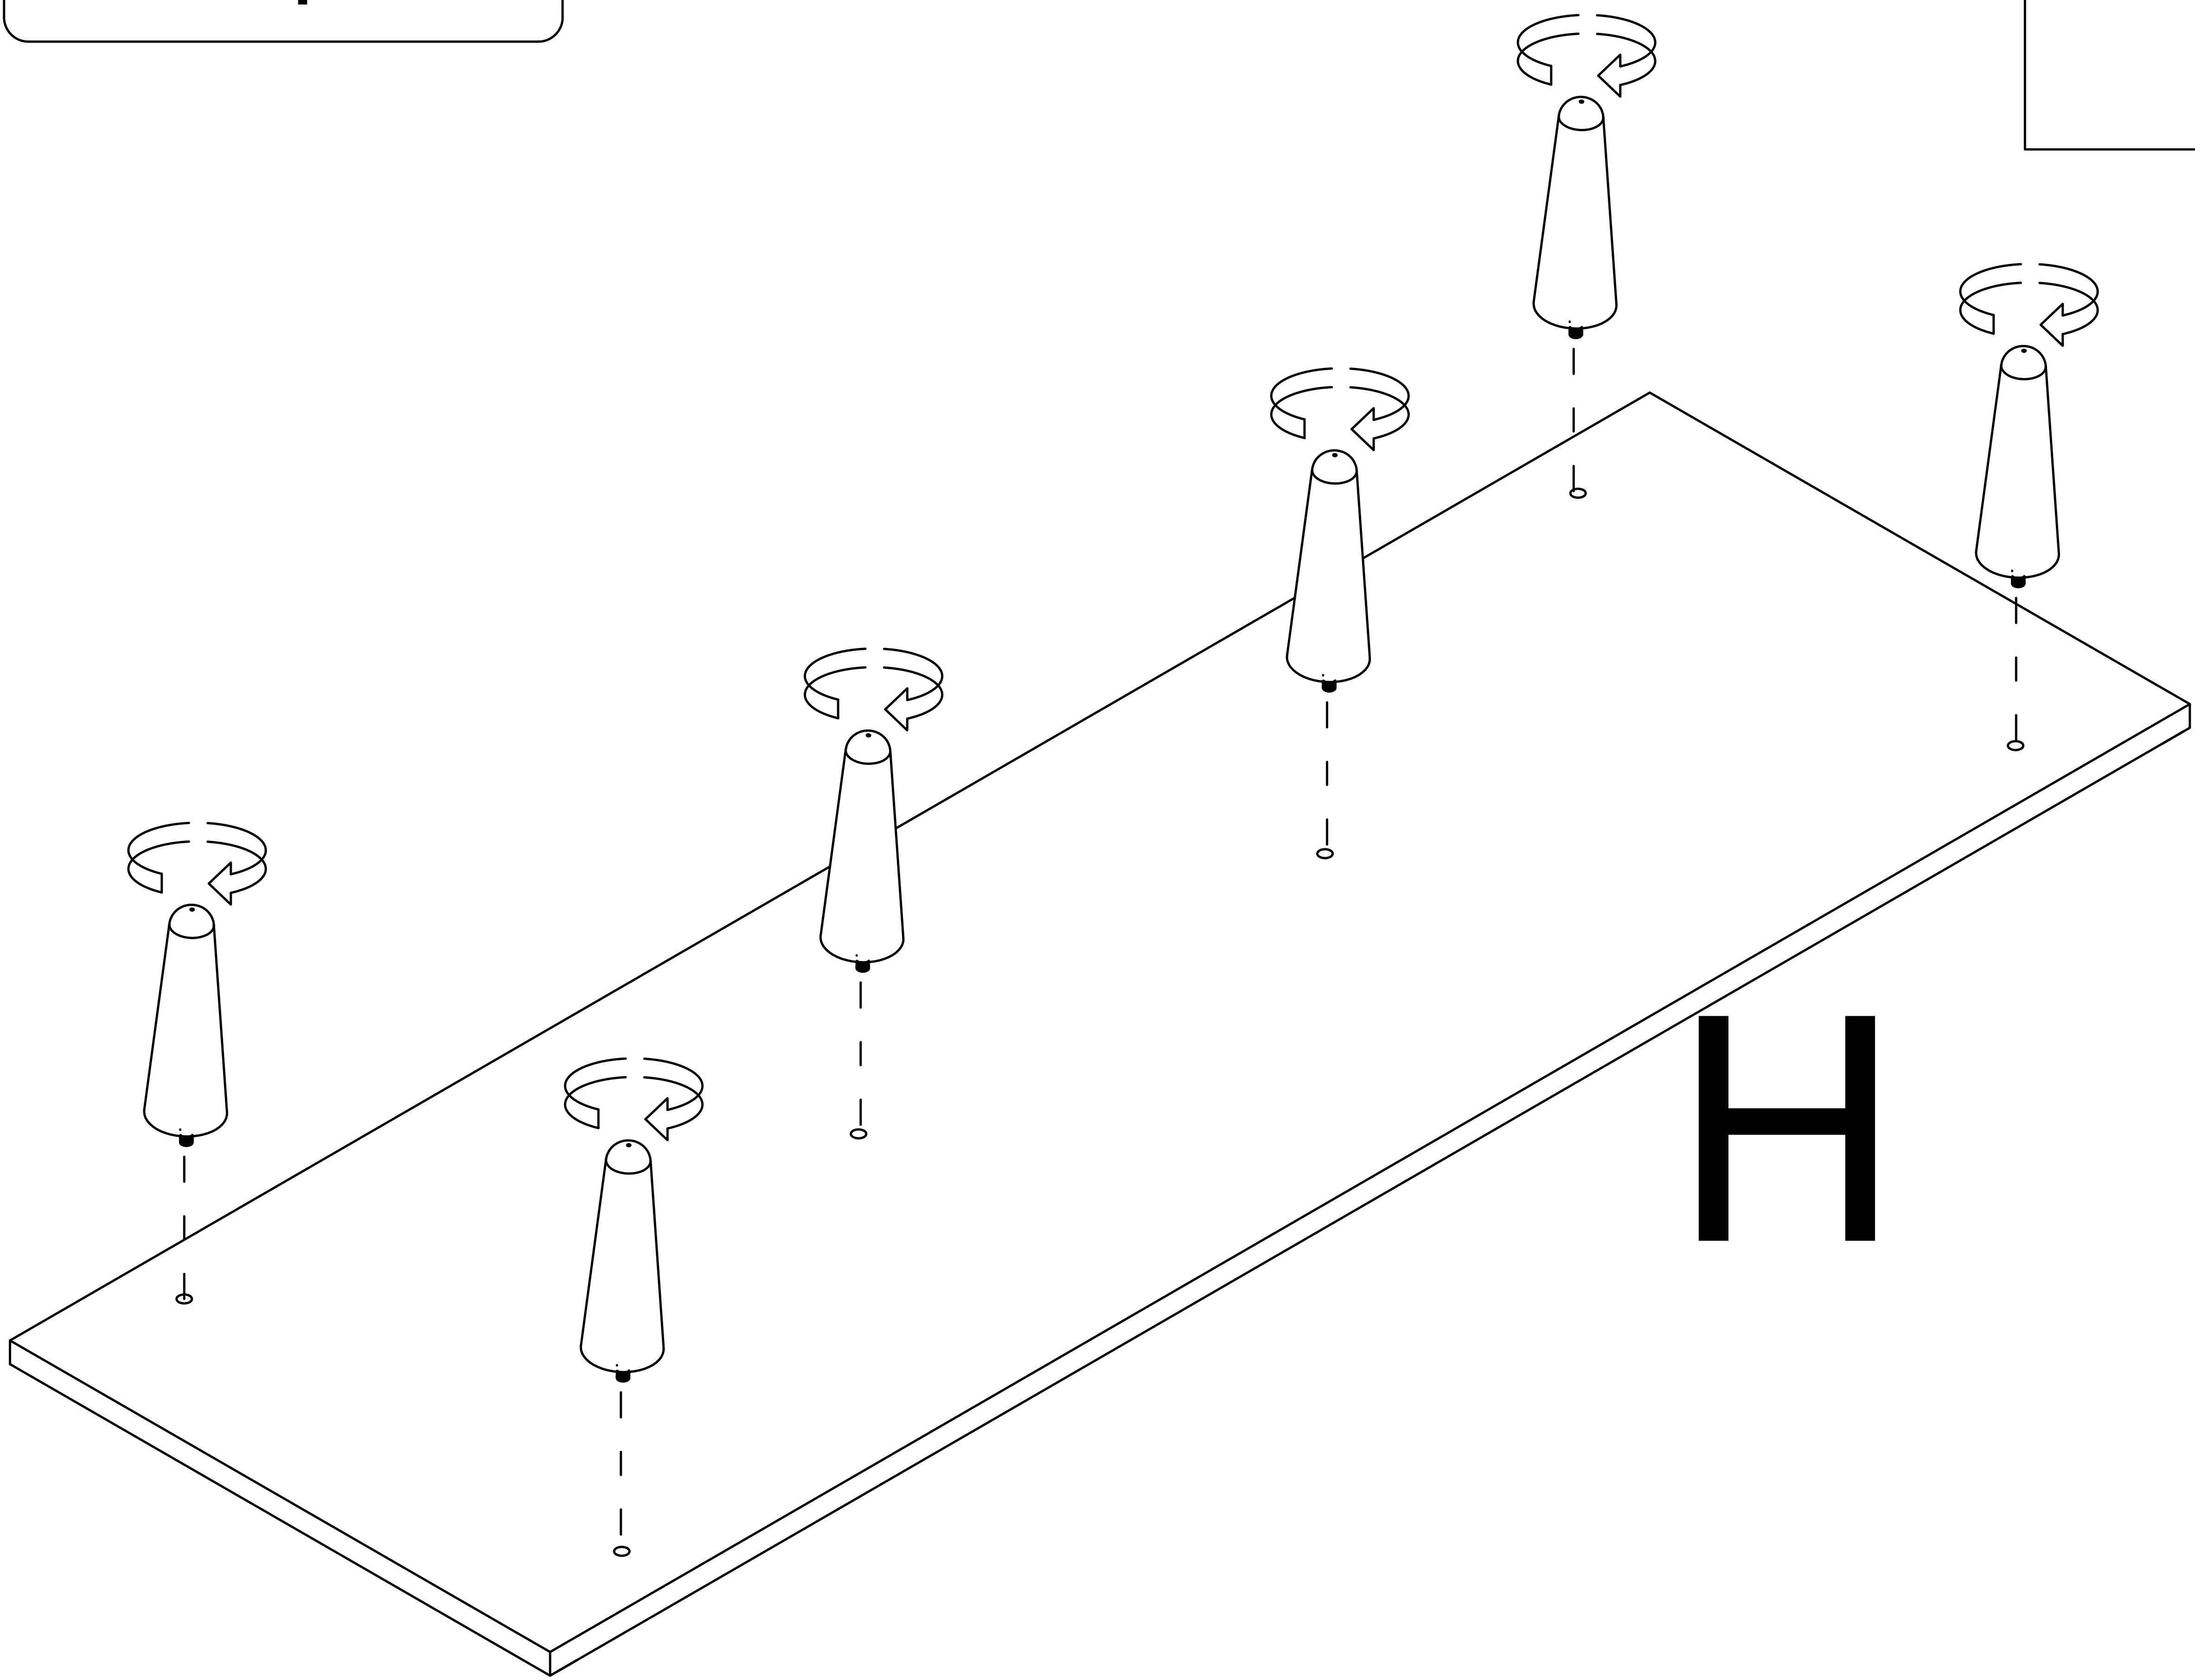
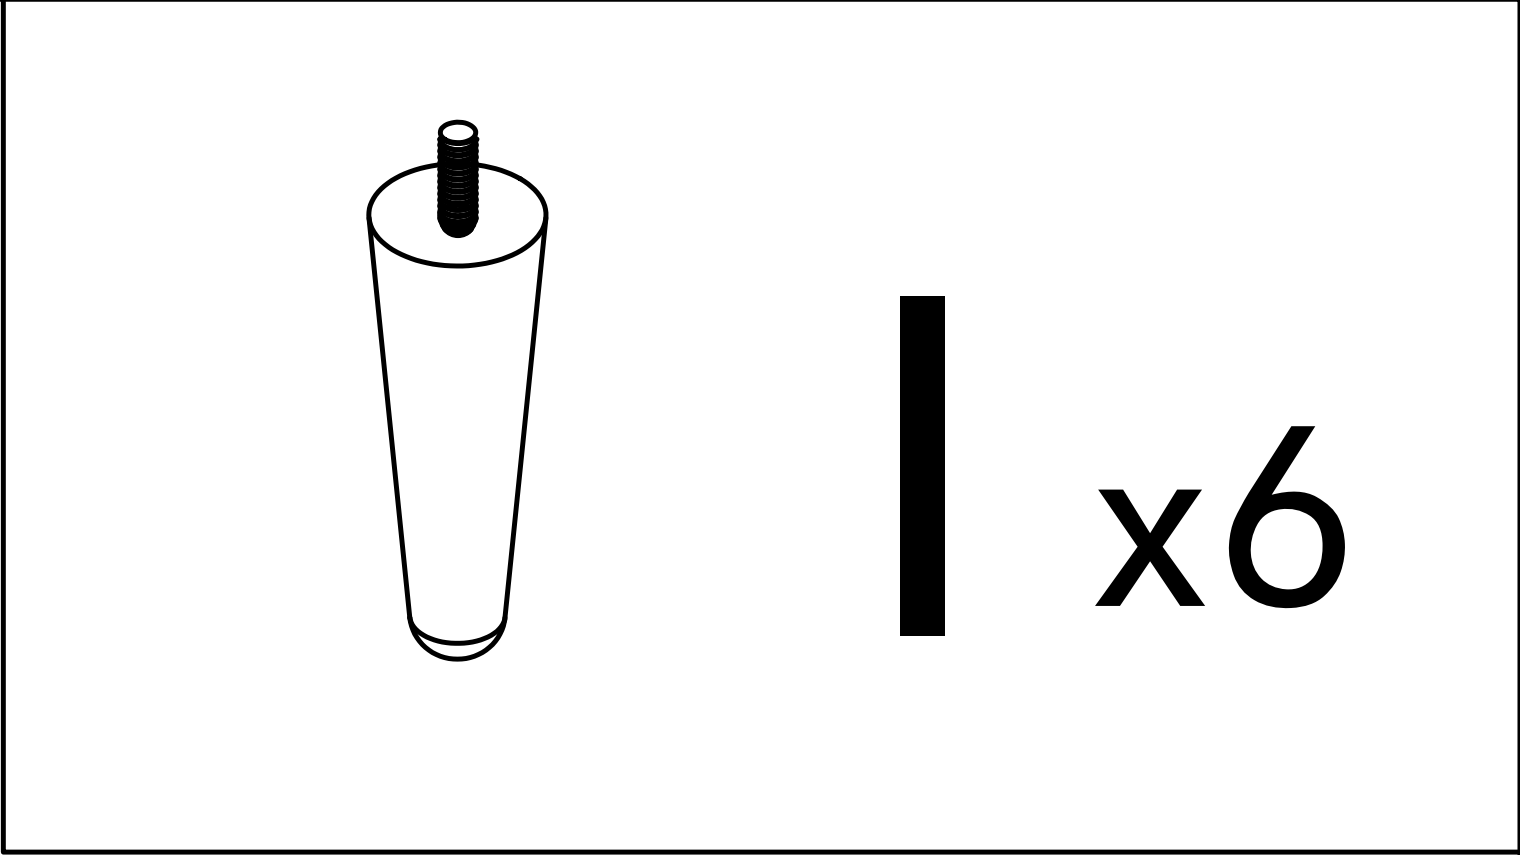


Step 10




Tear off release paper and stick the black foot pad on the board

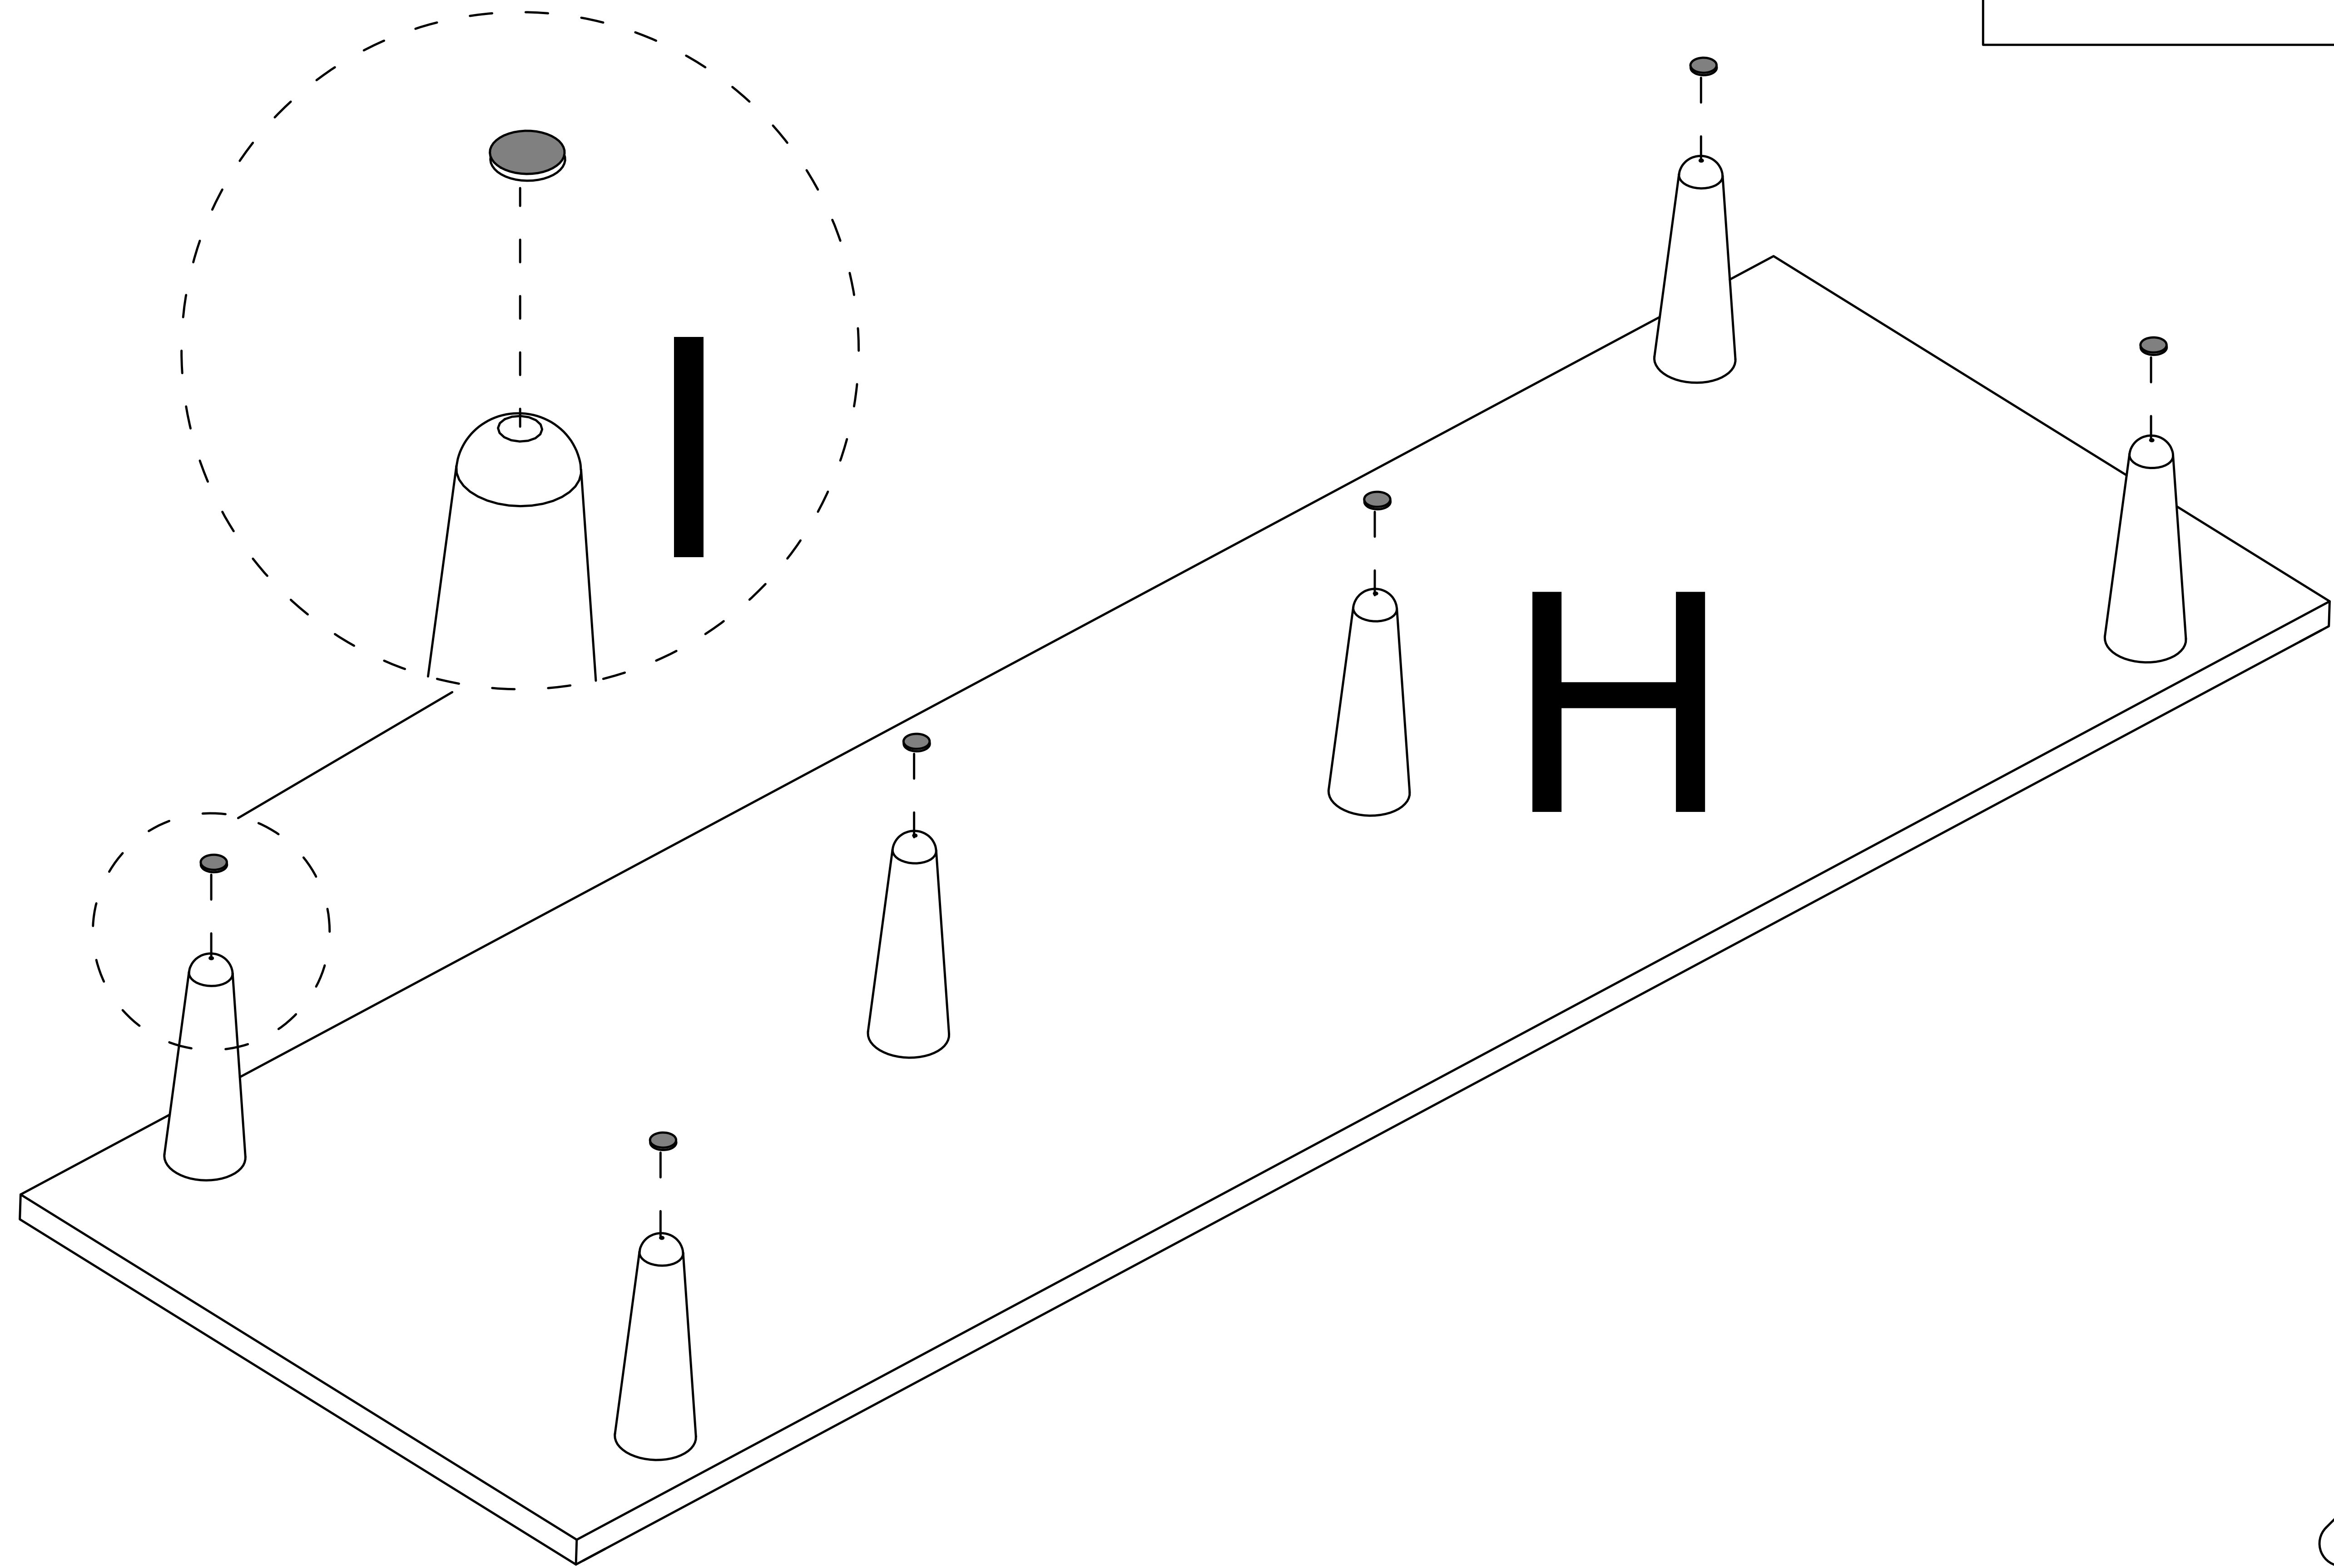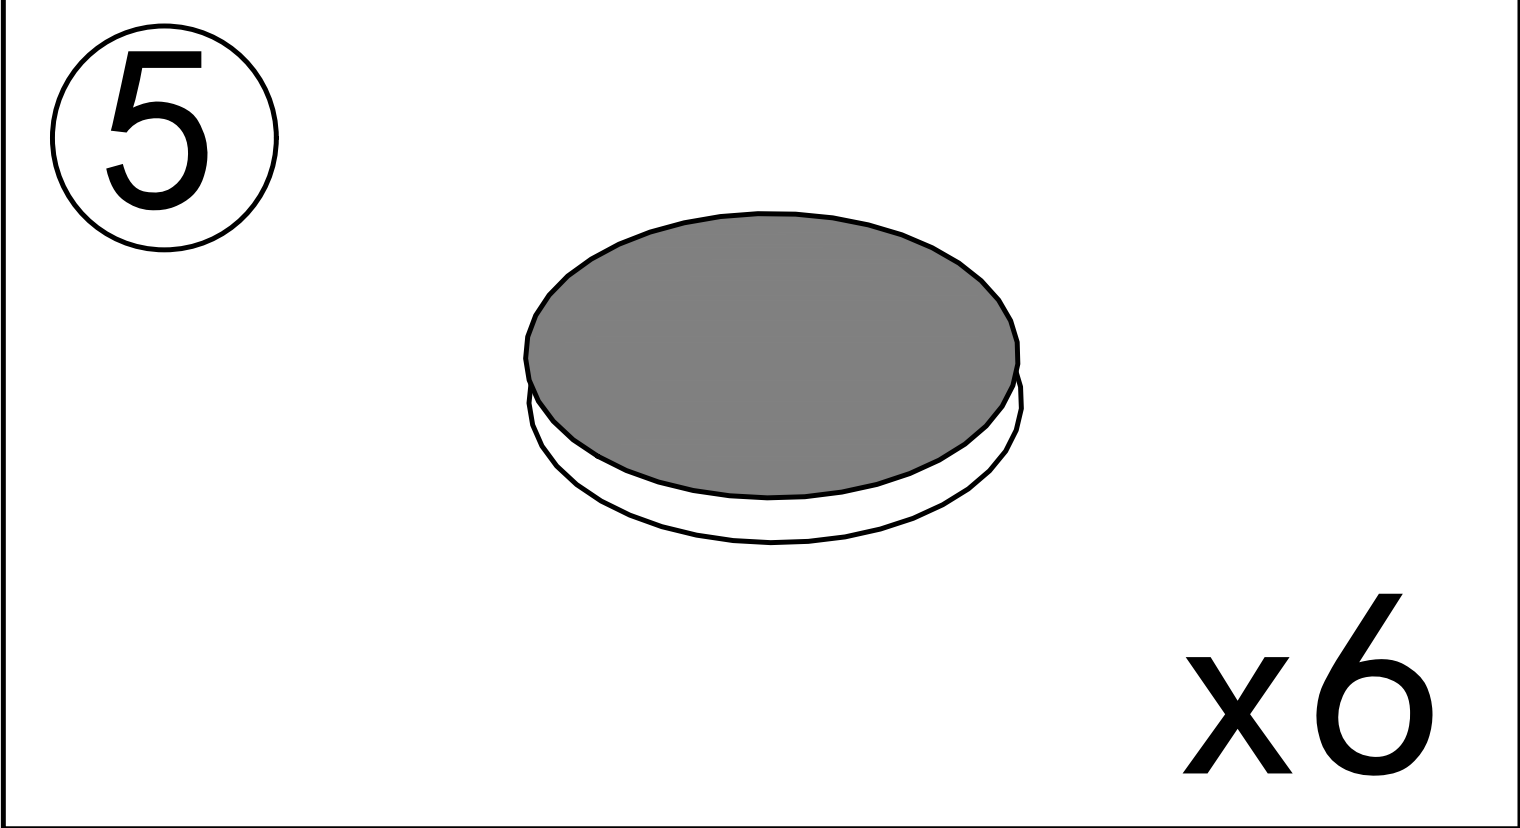


Step 11

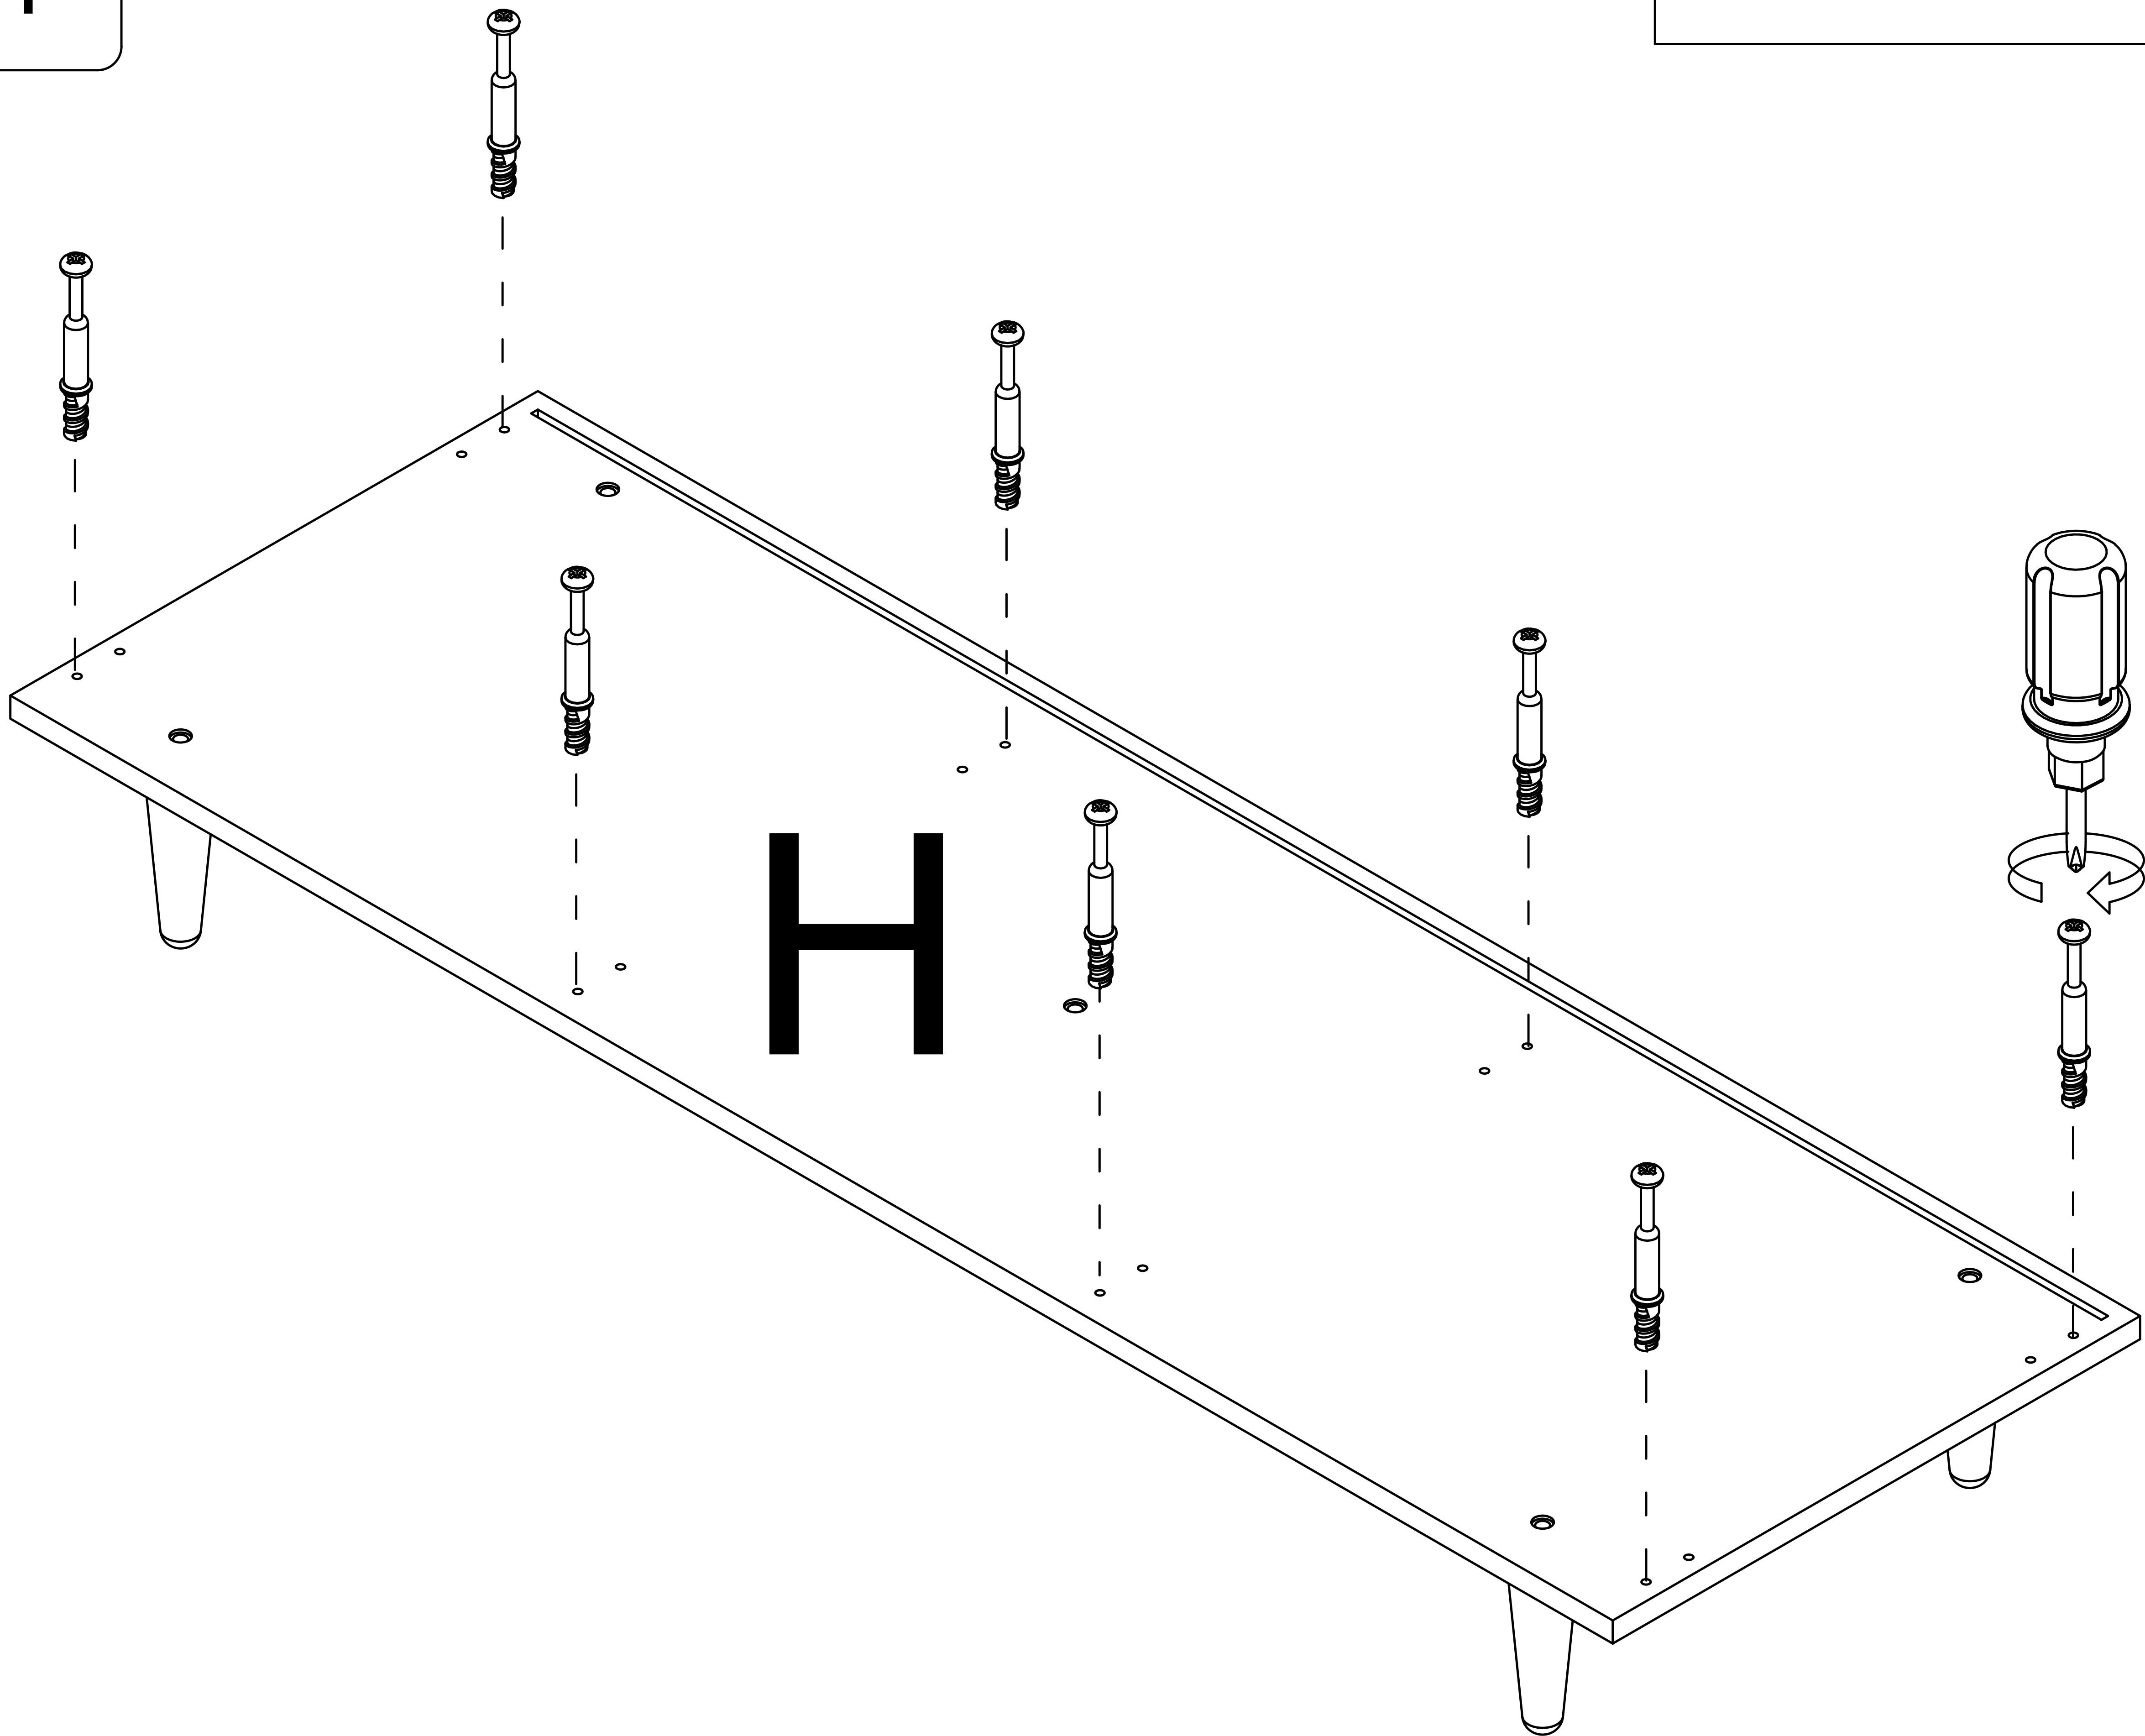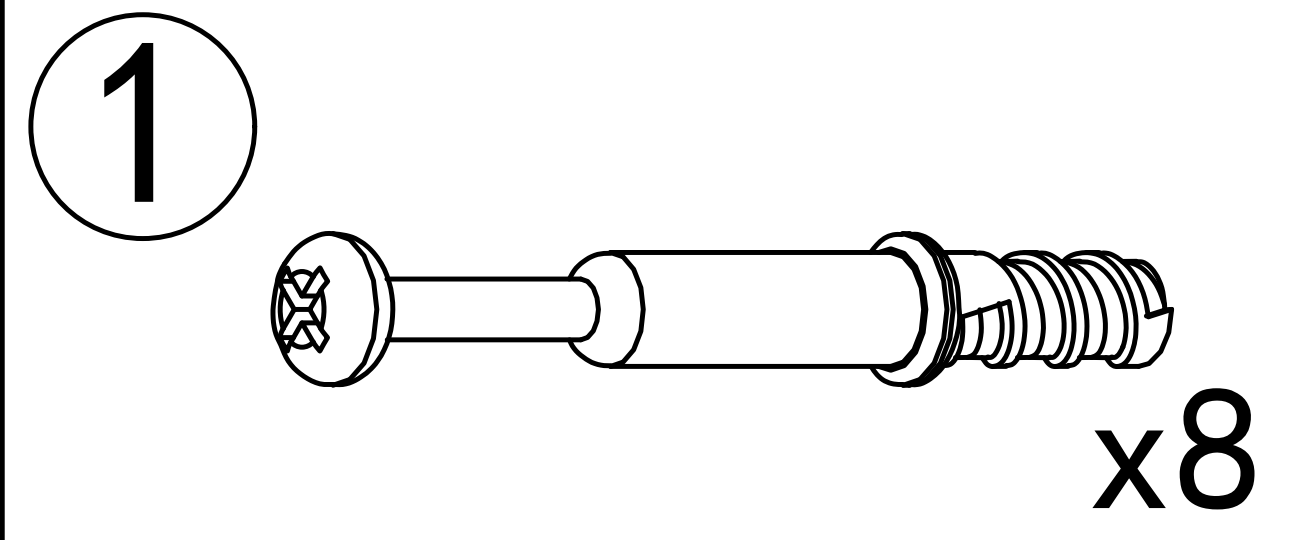



Step 12

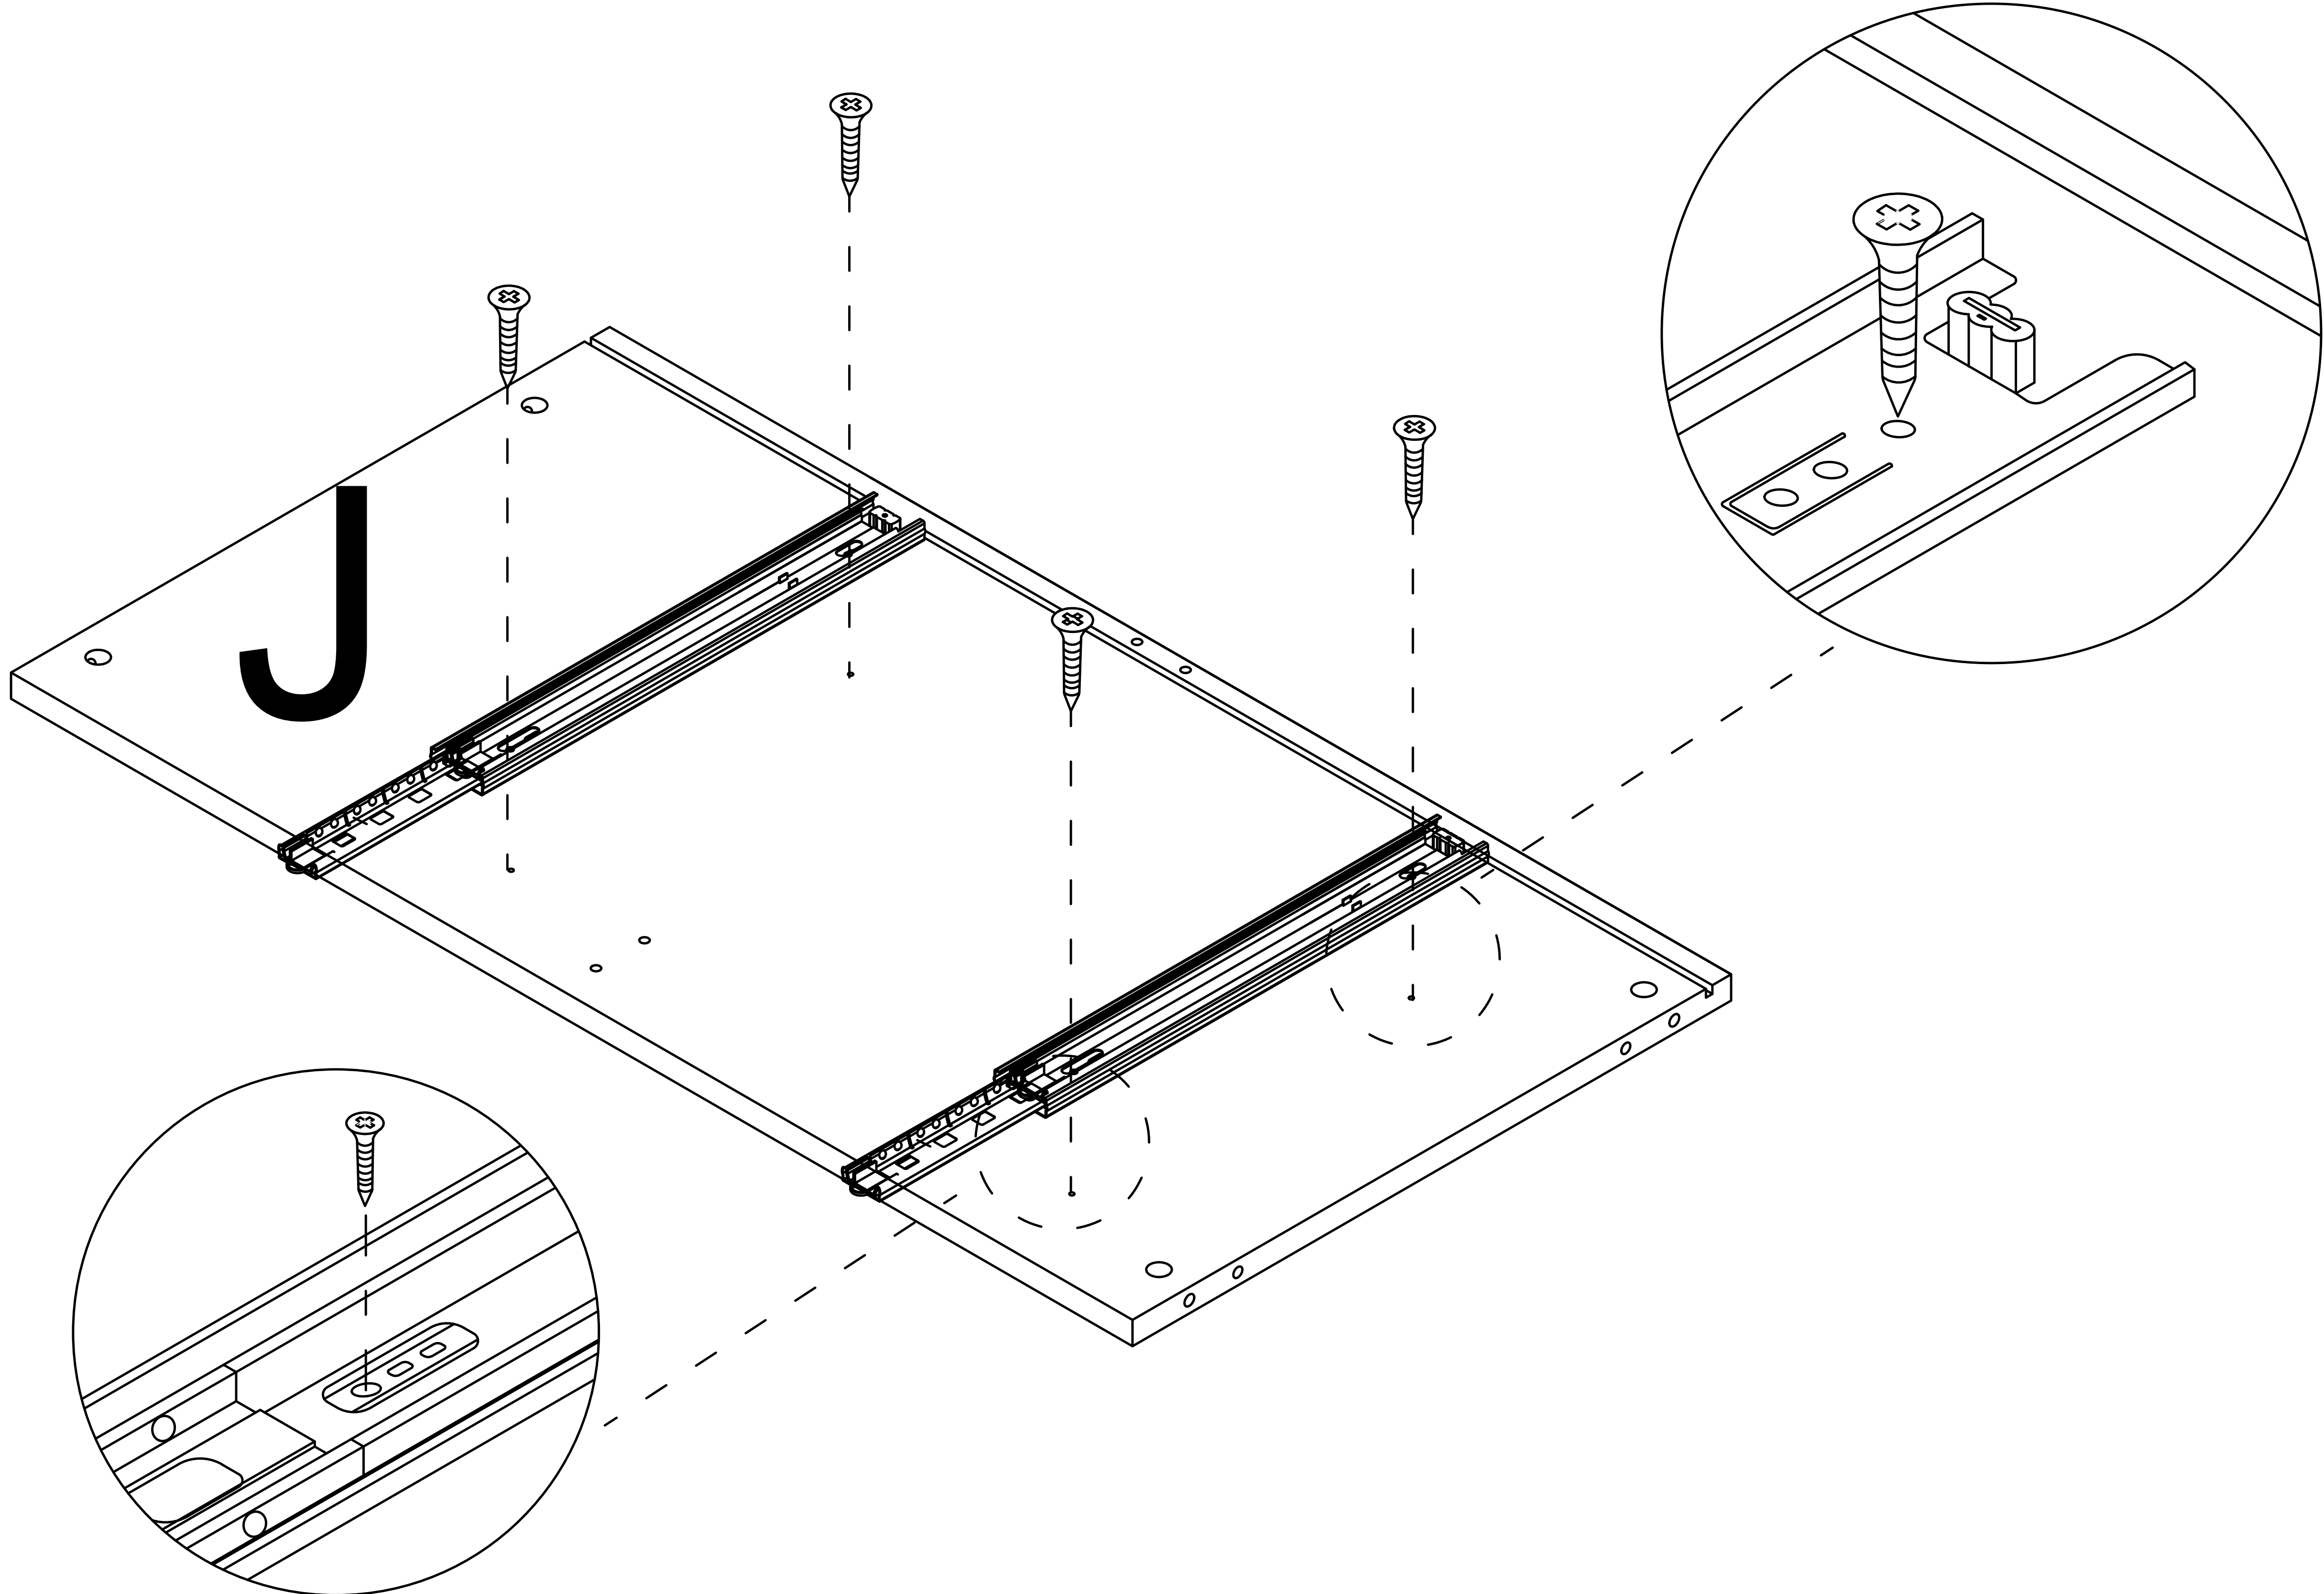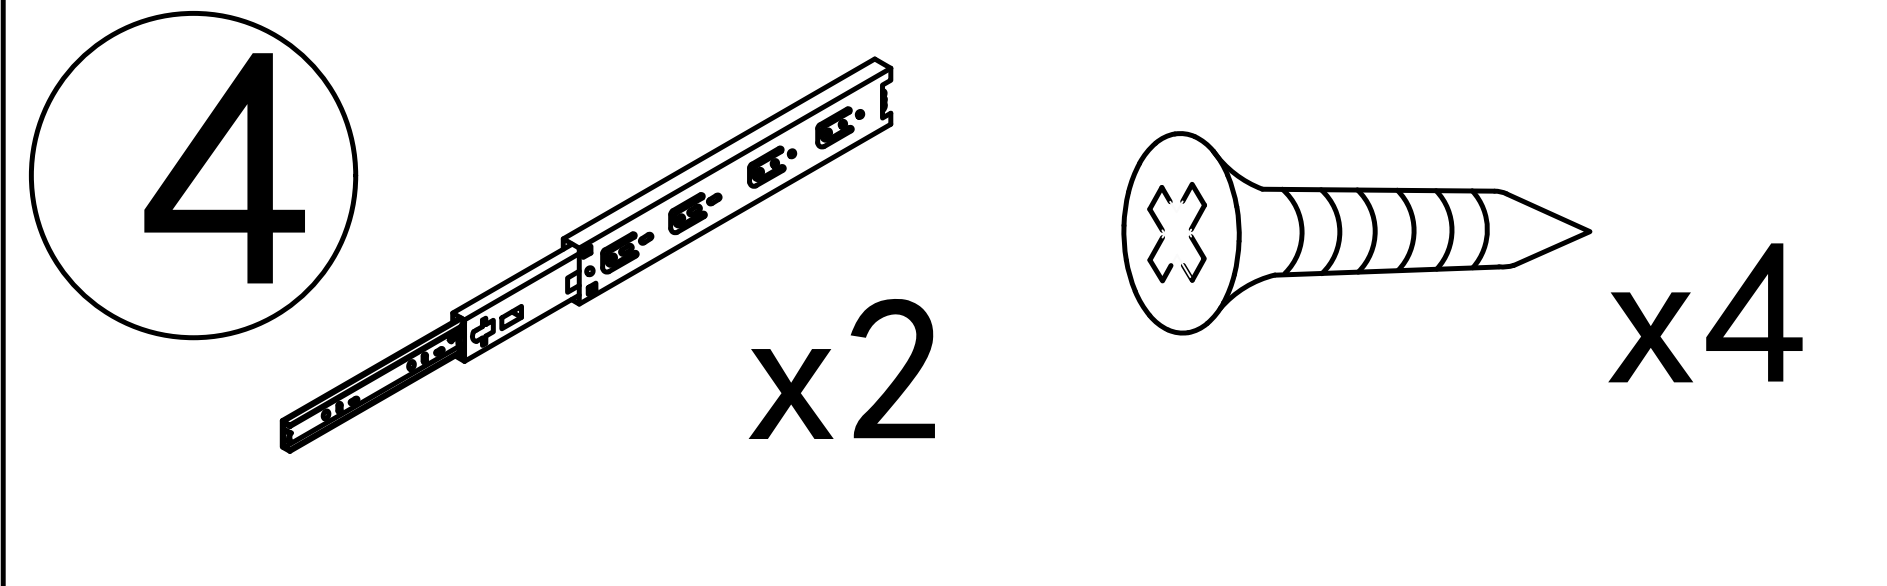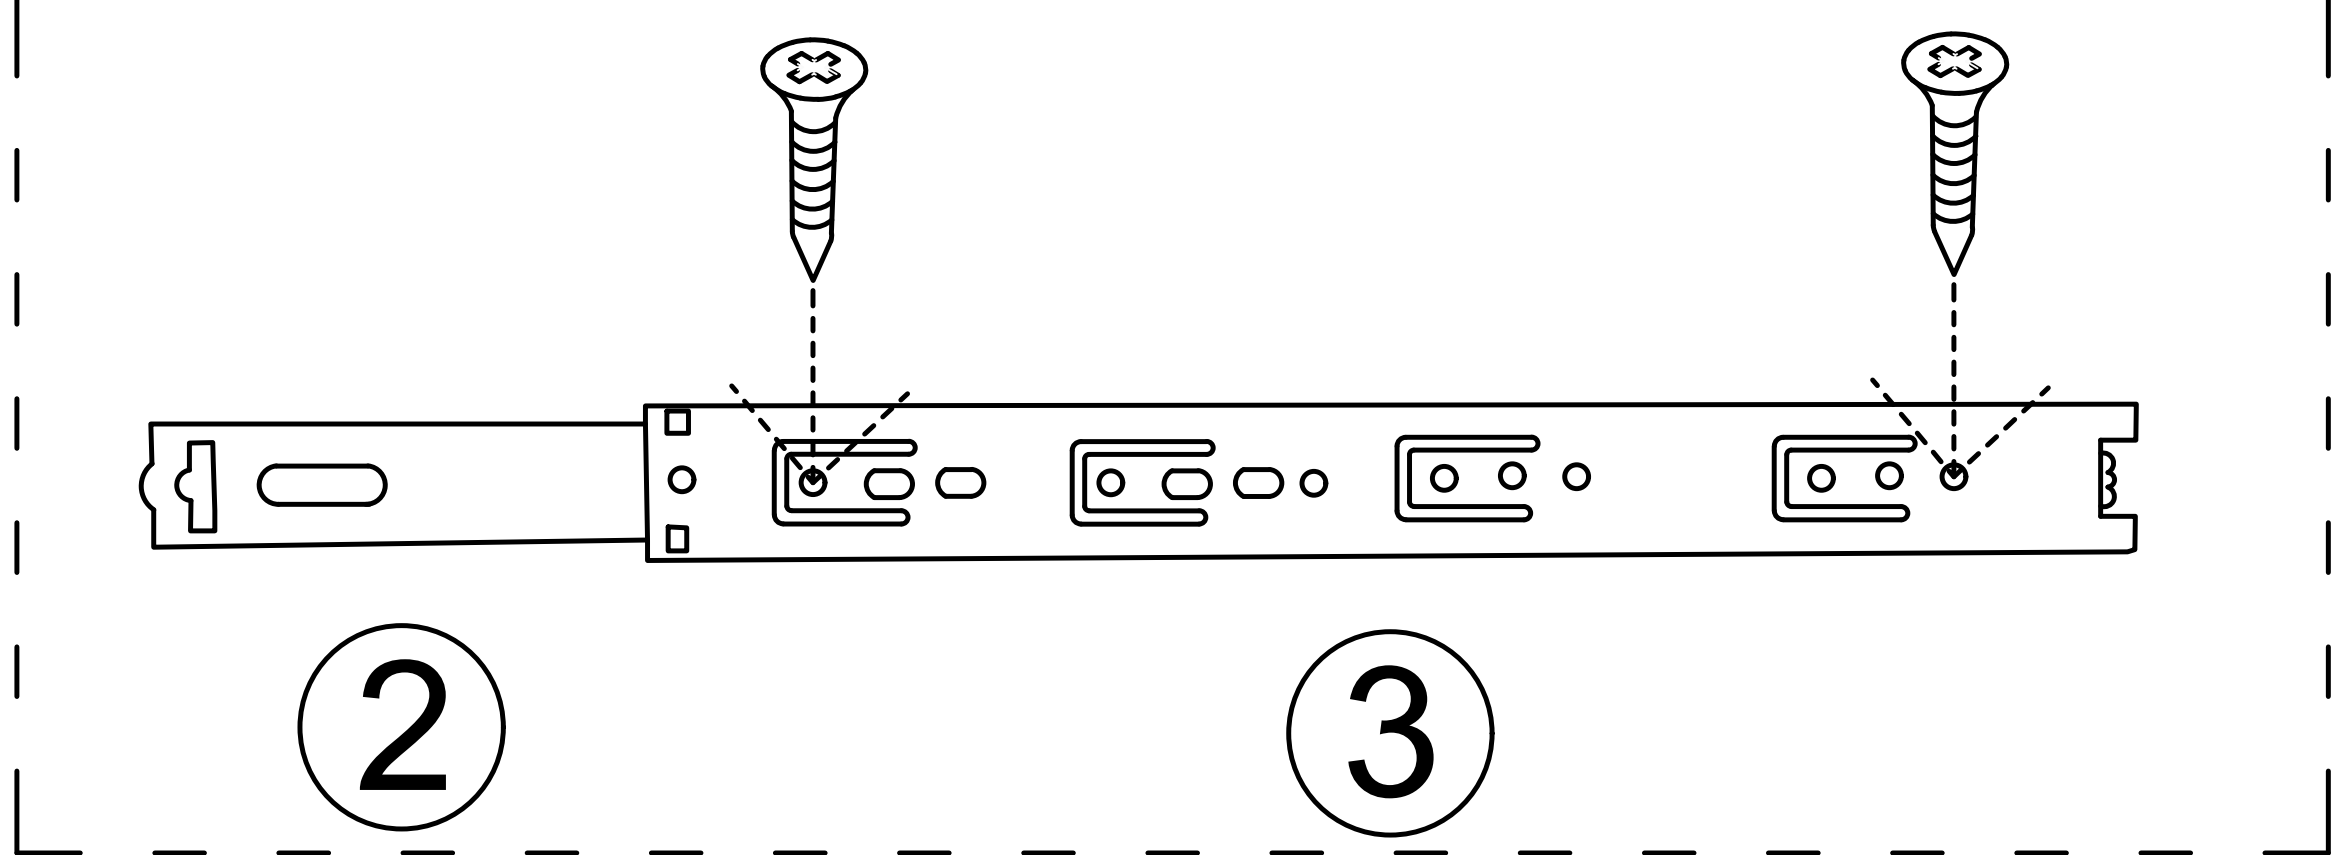

Step 13

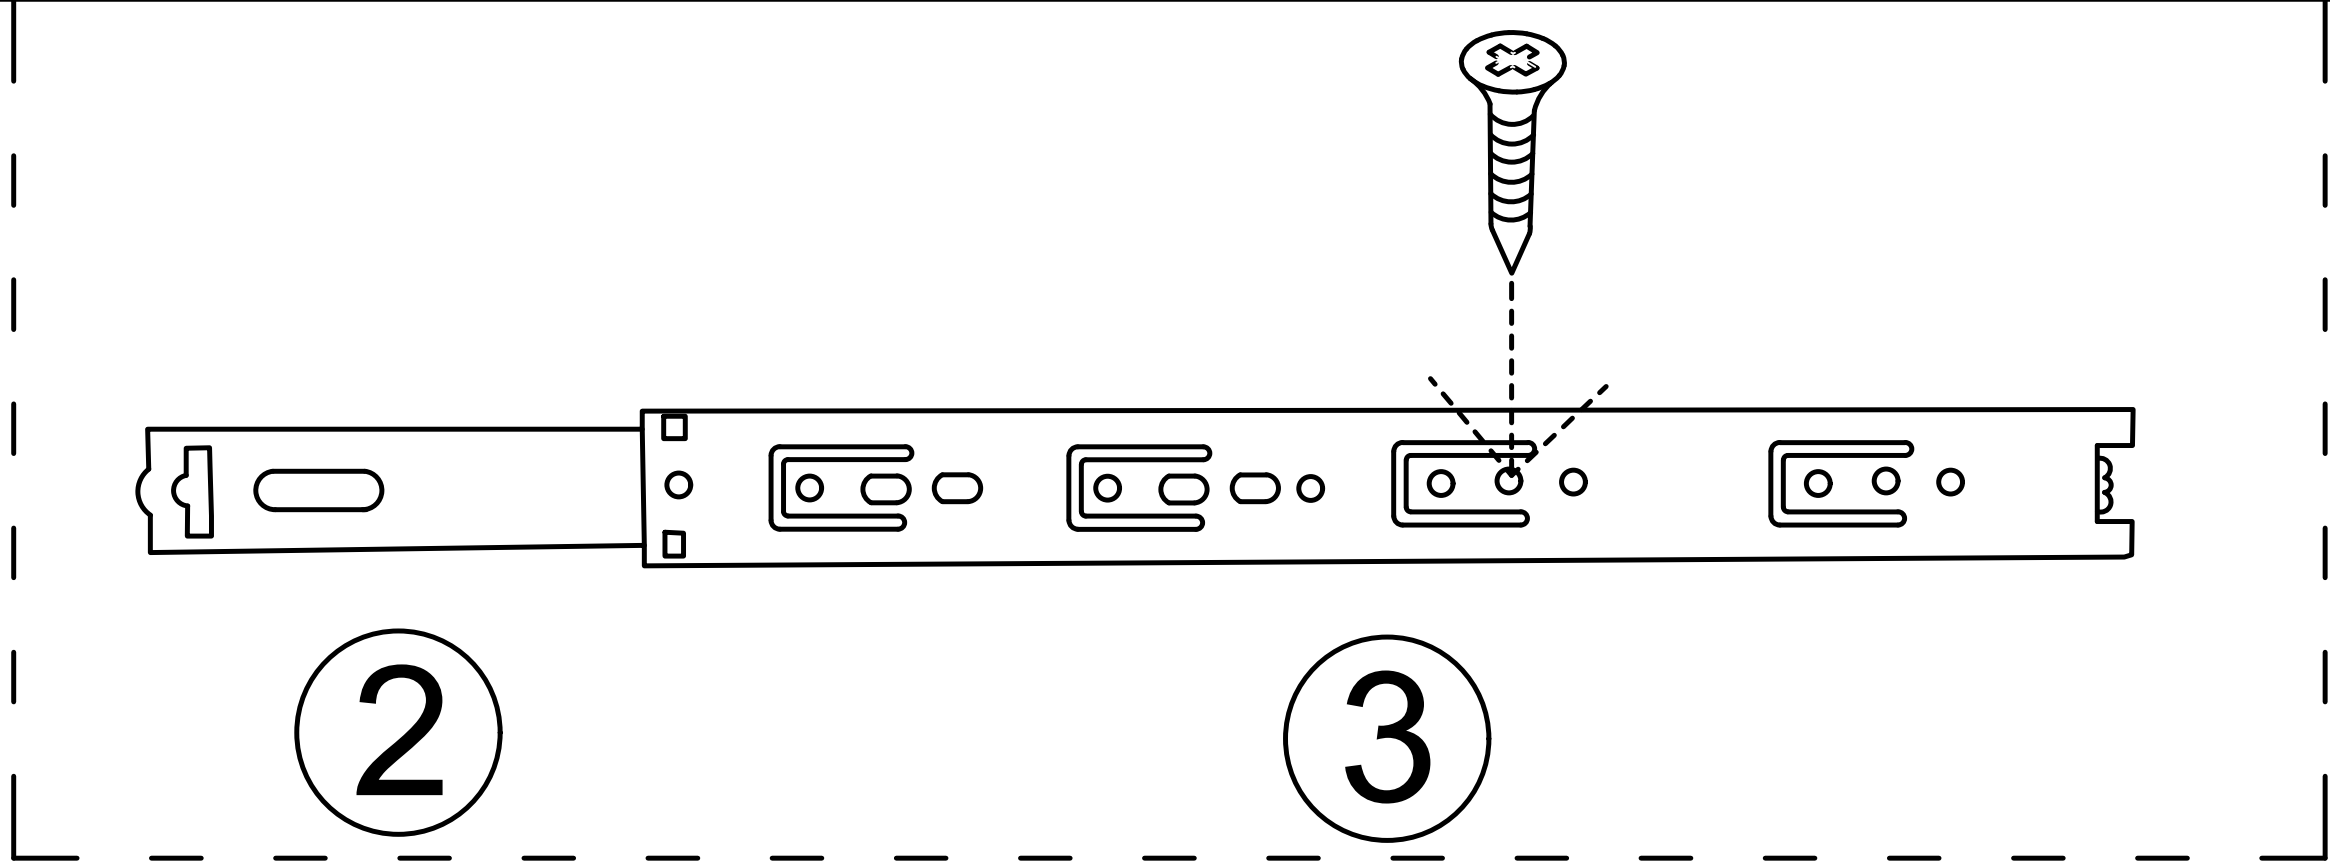



4

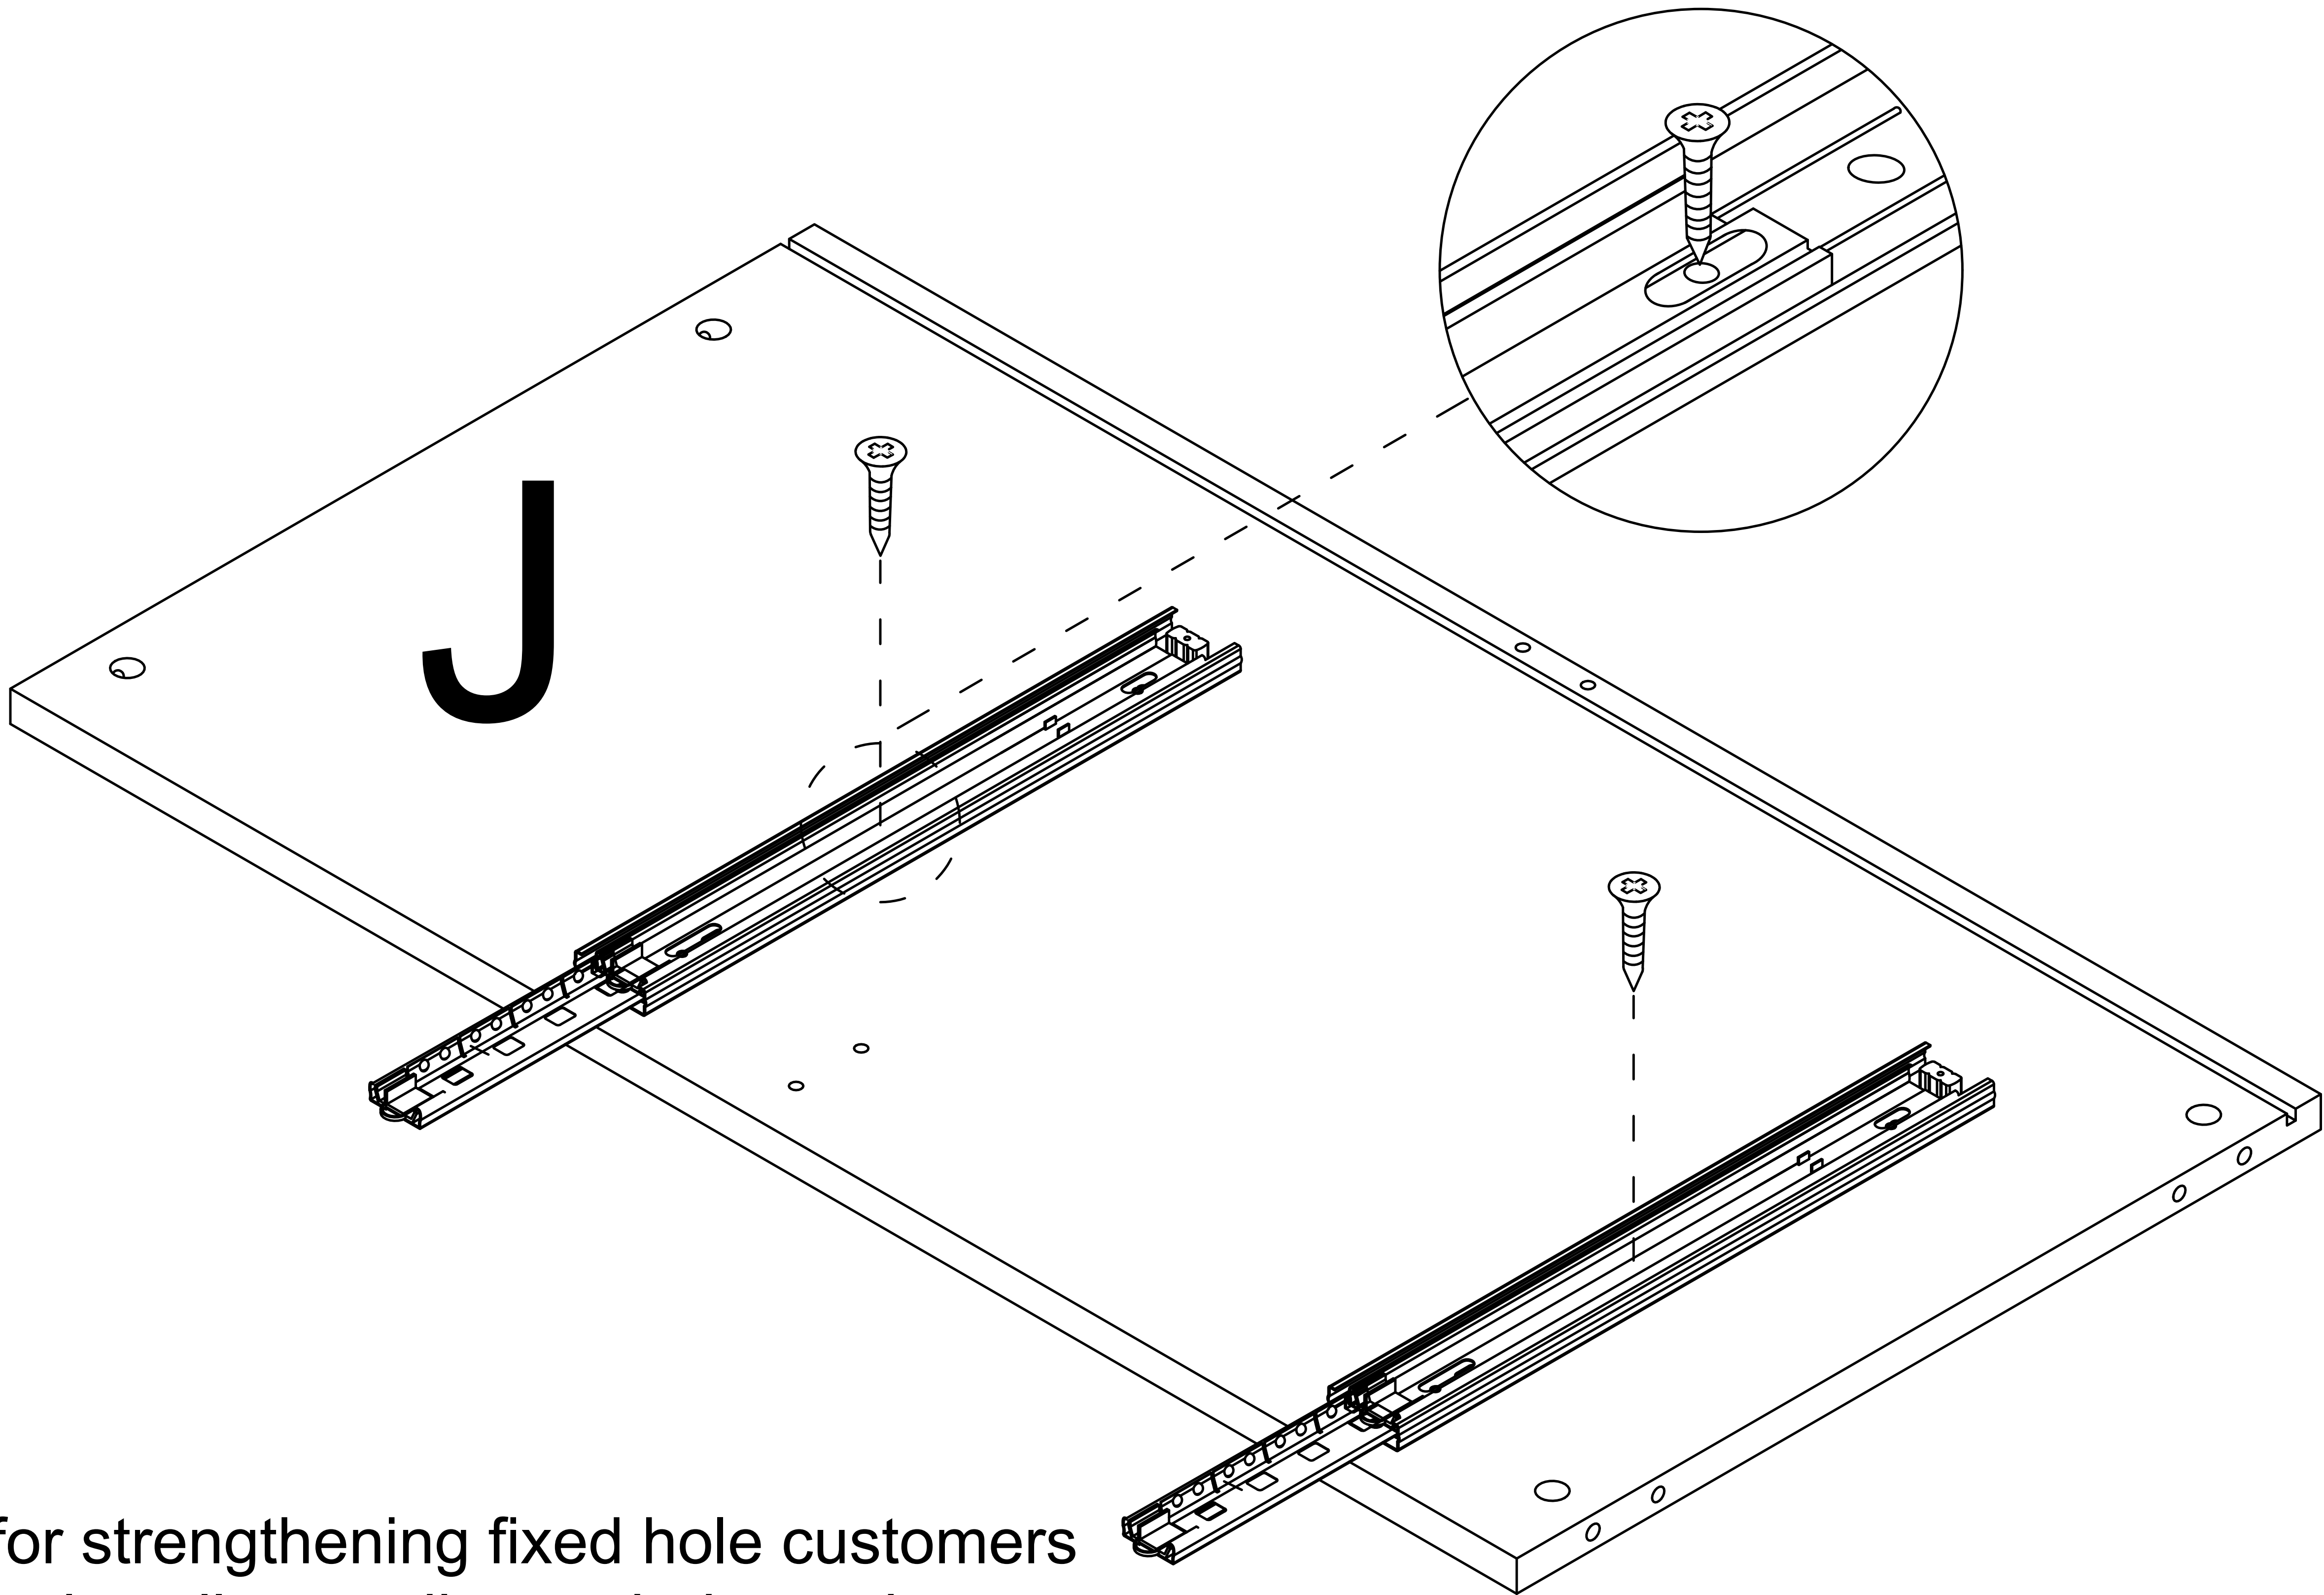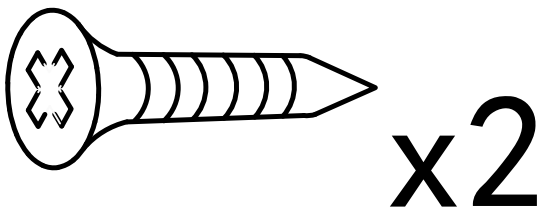

This hole is for strengthening fixed hole customers can choose to install according to their needs.


Step 14


1

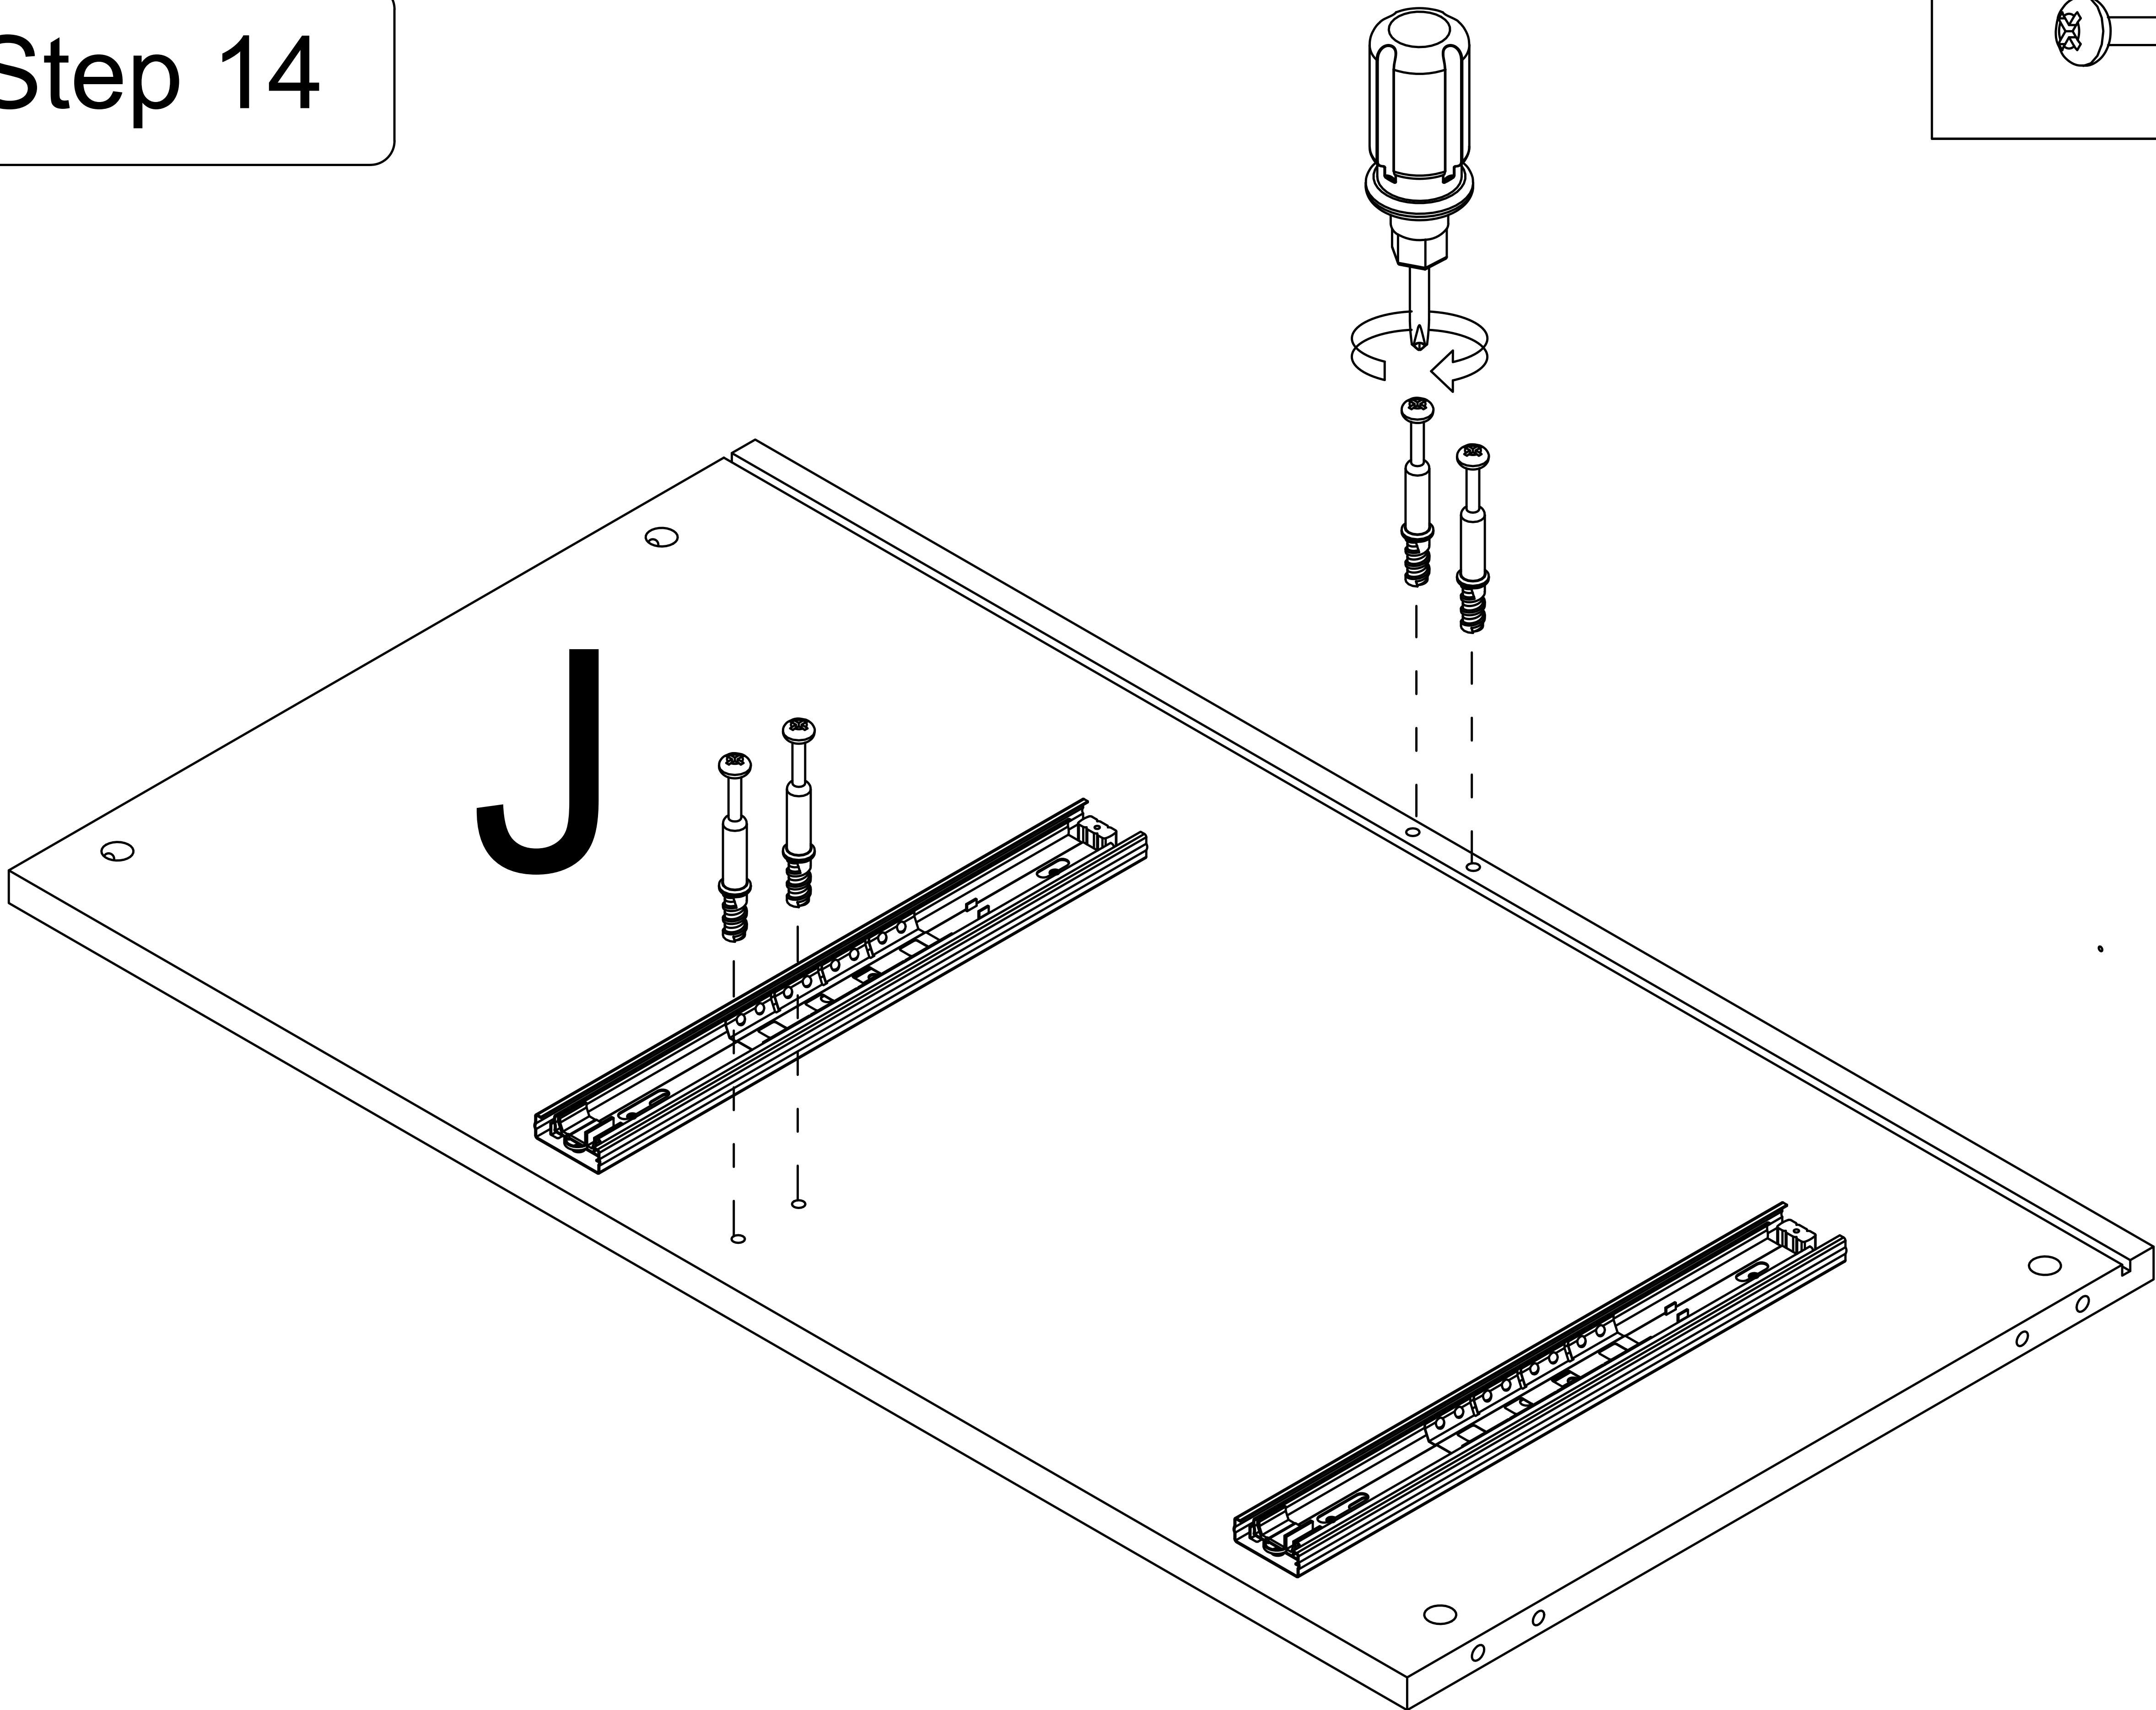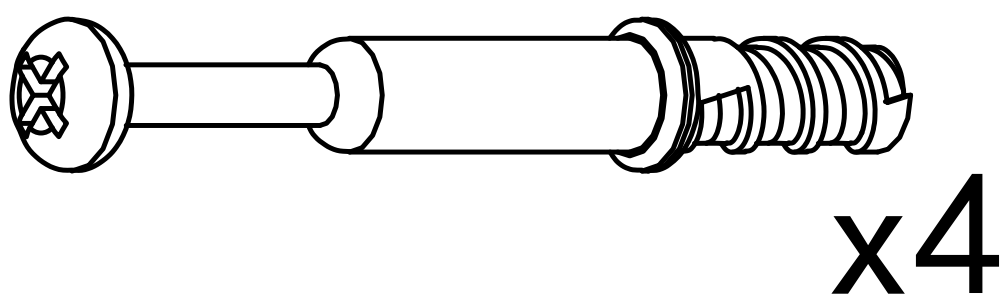

Step 15


2

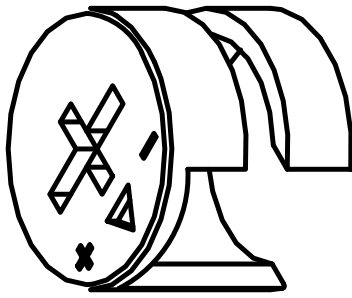
x2

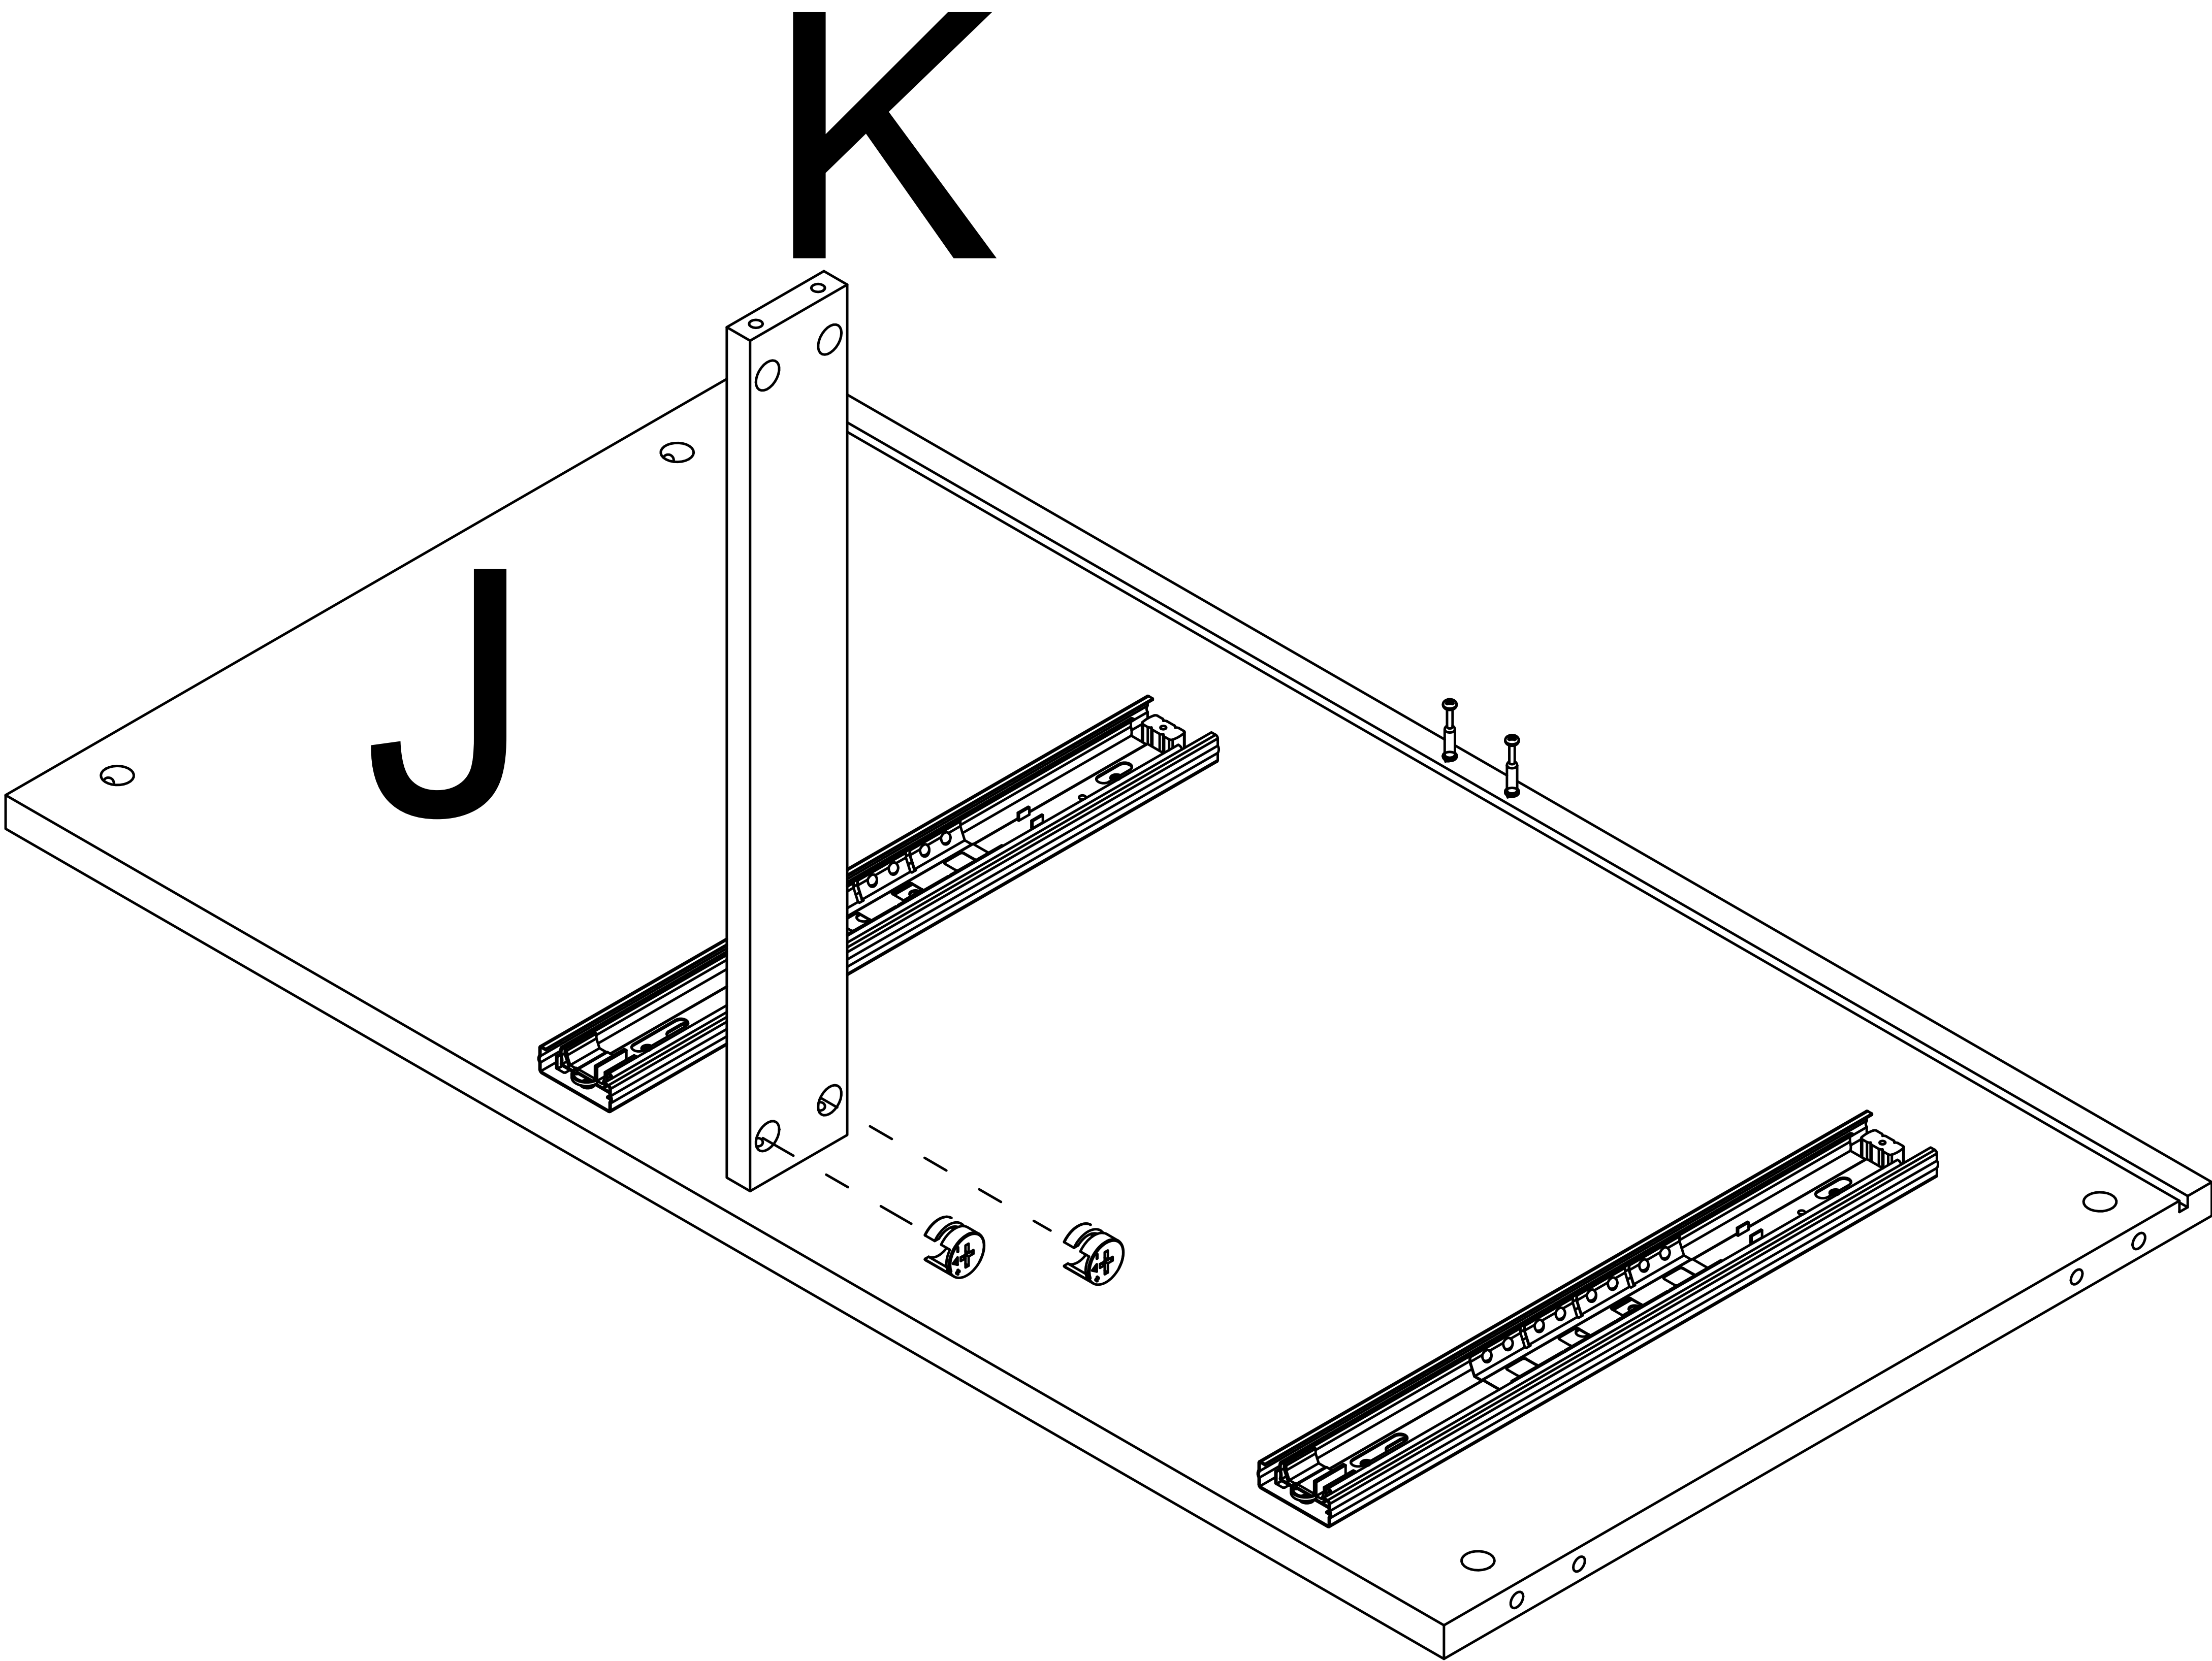


Step 16


2

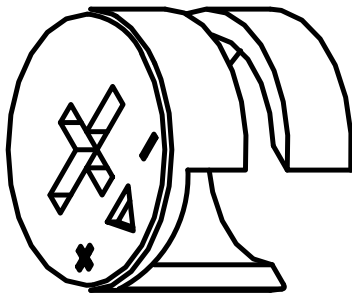x2

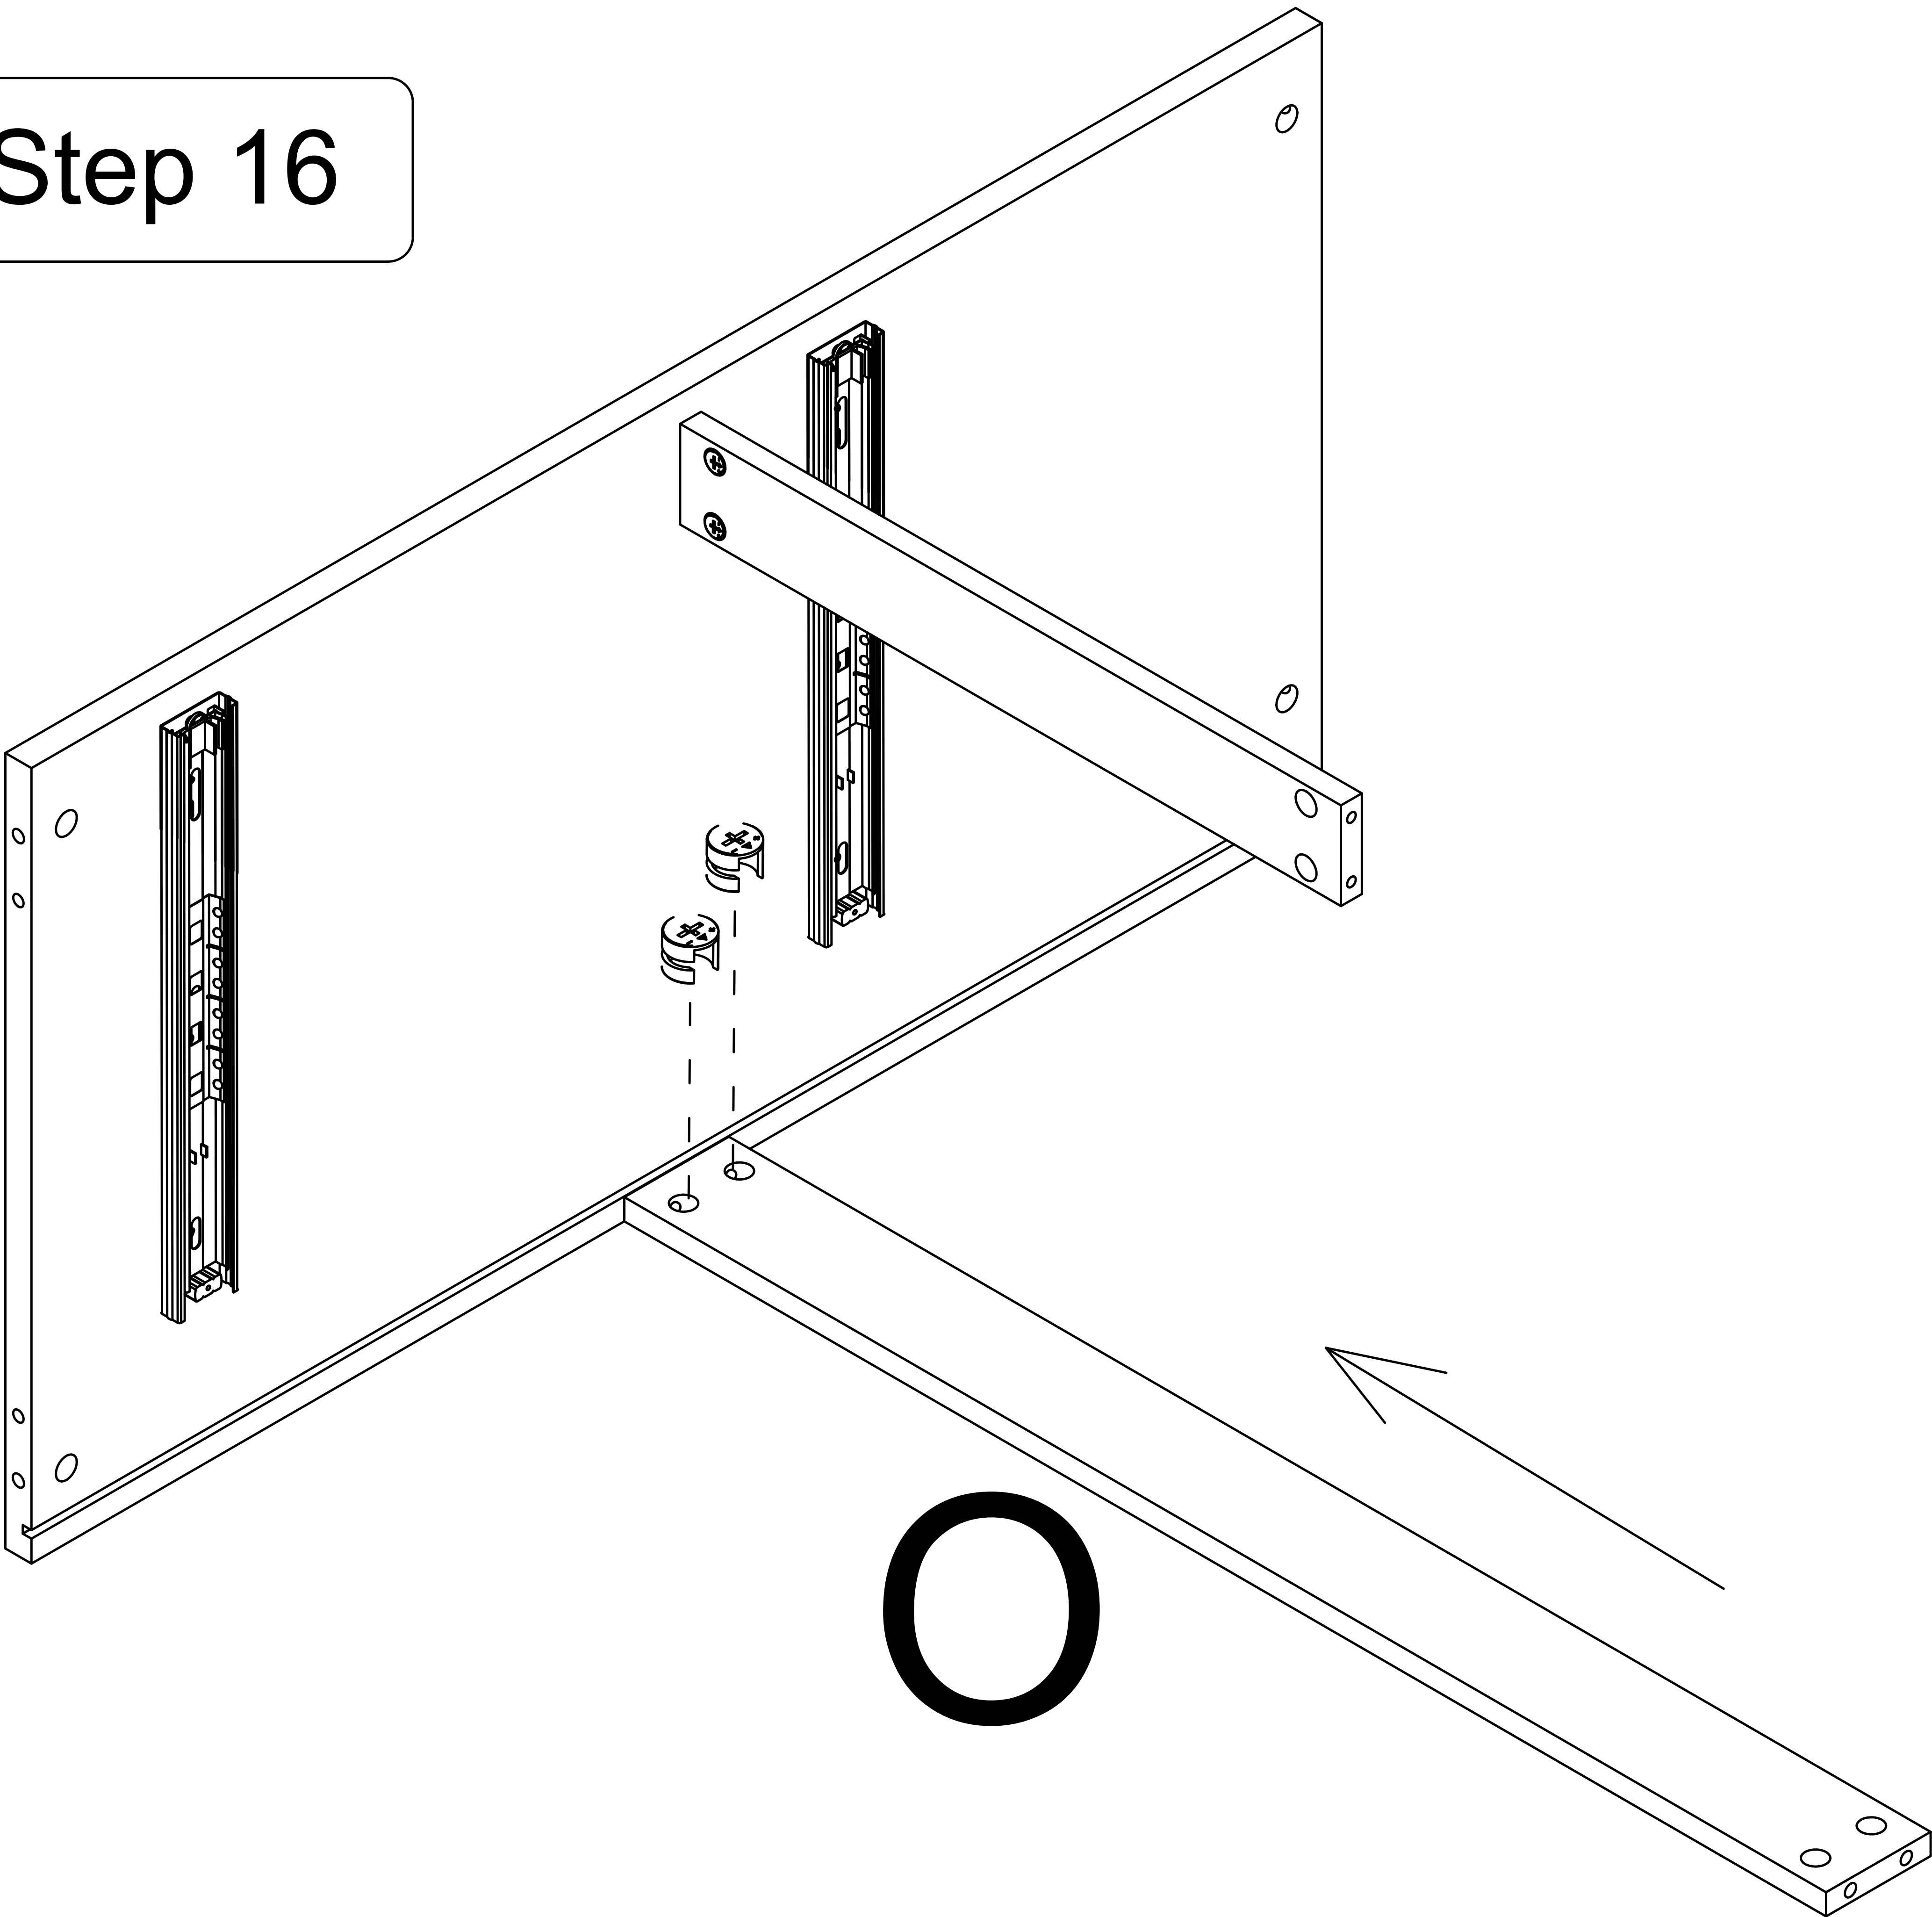


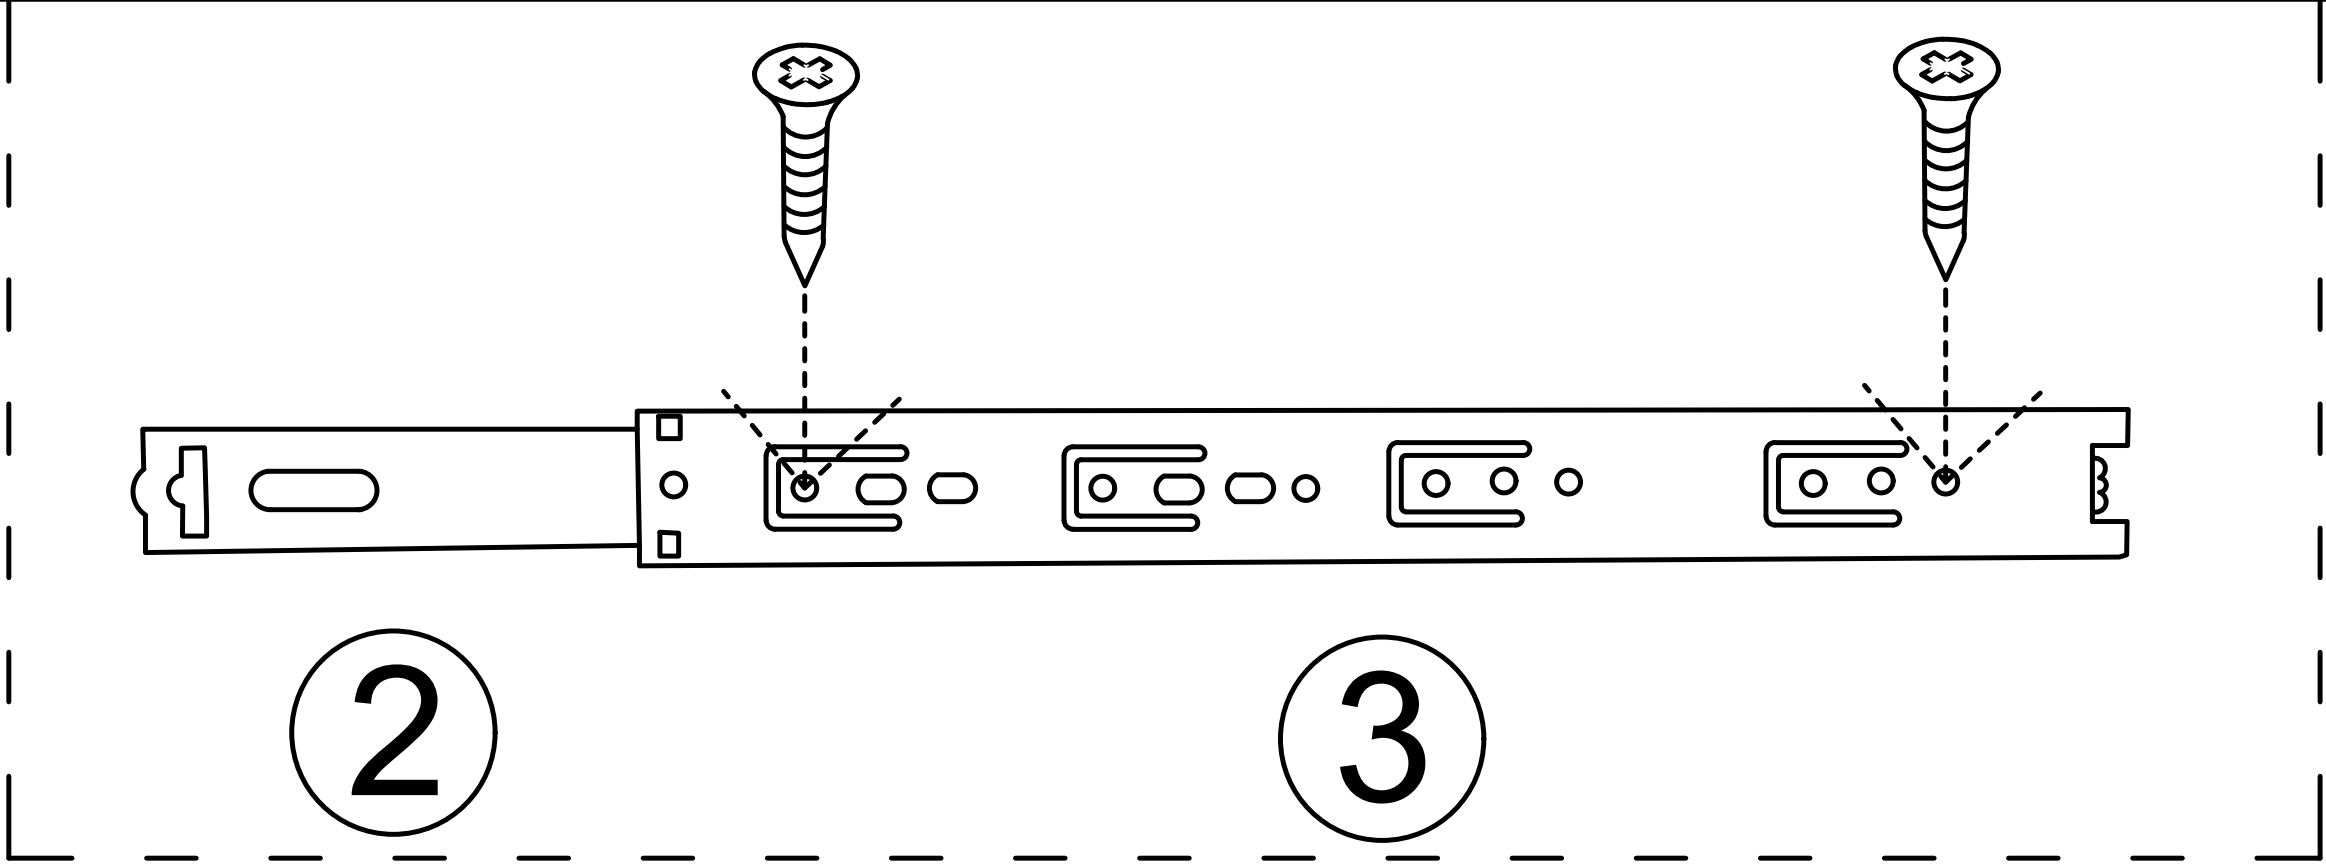



4

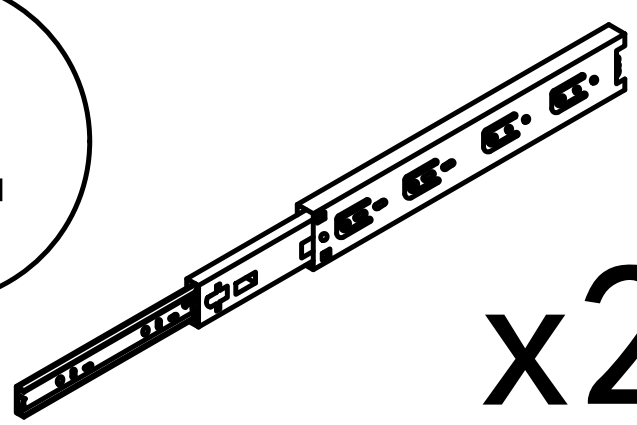


x2

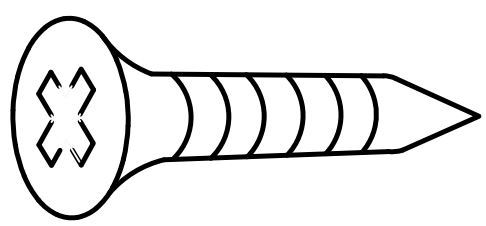


x4

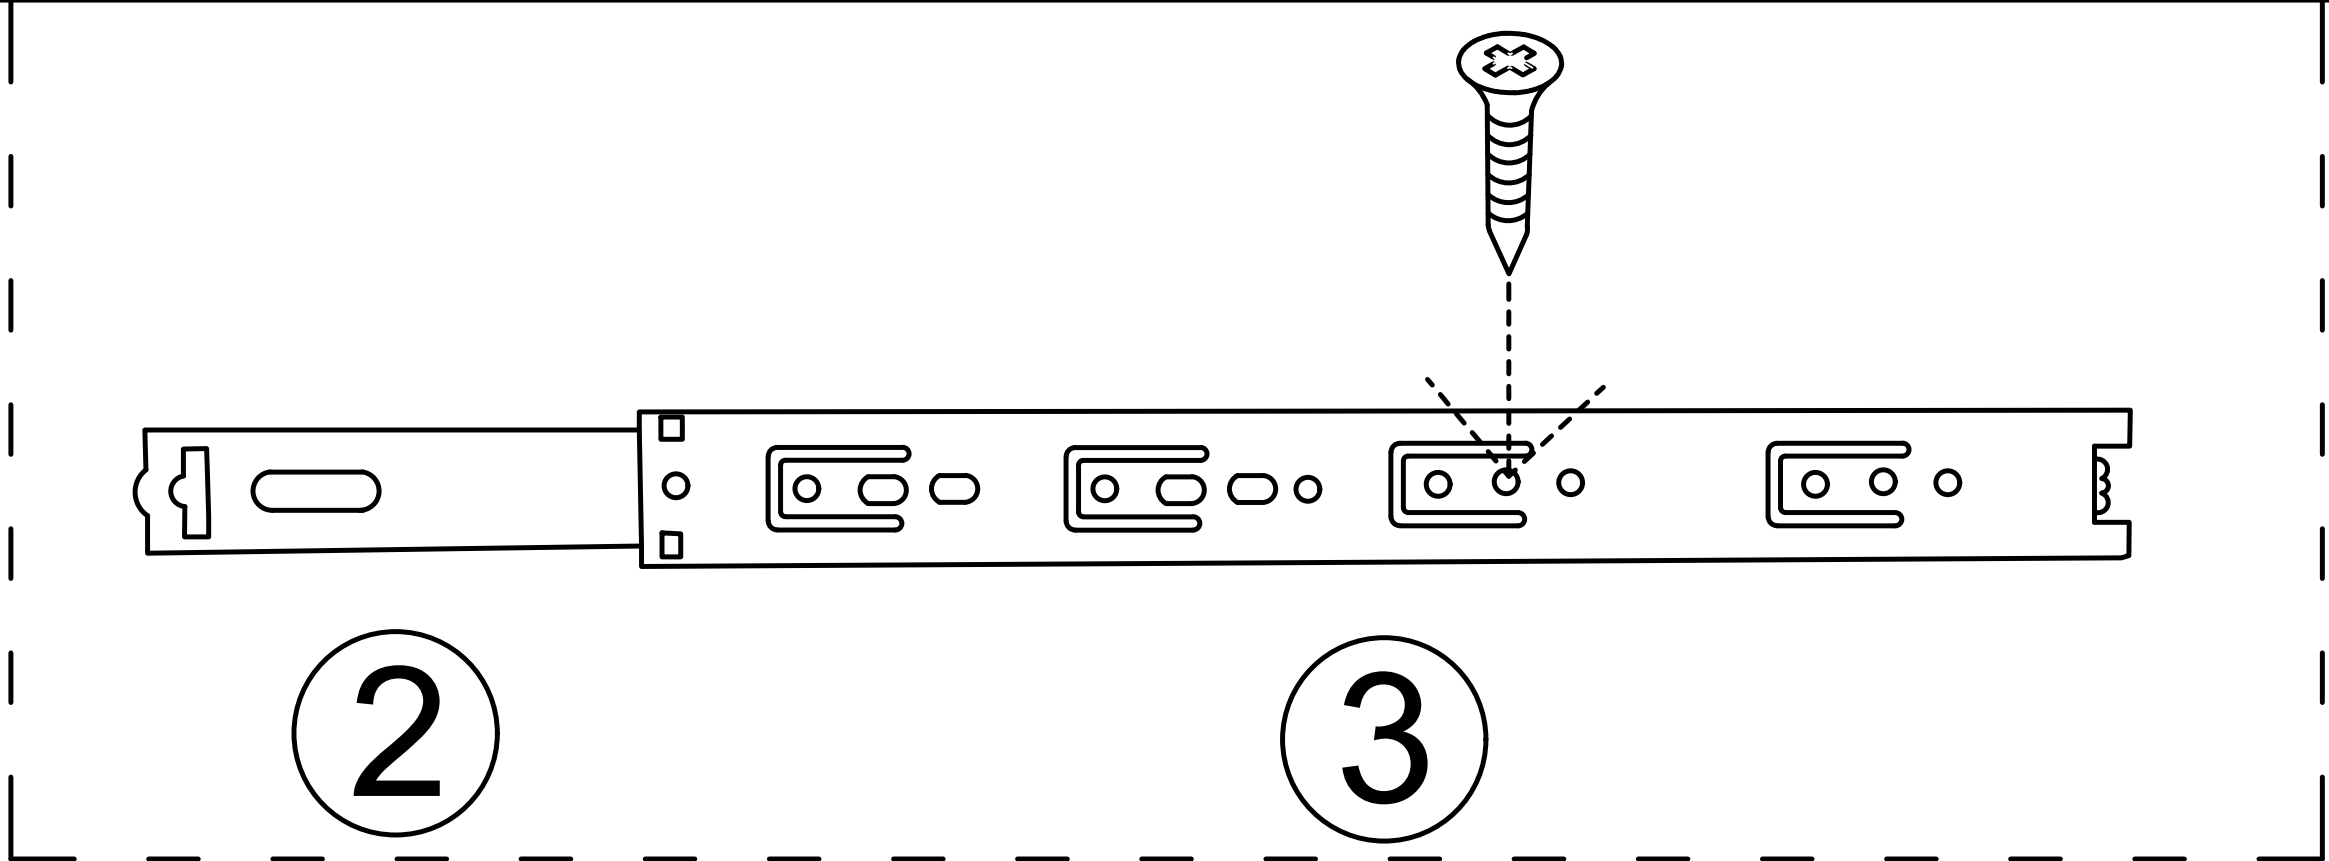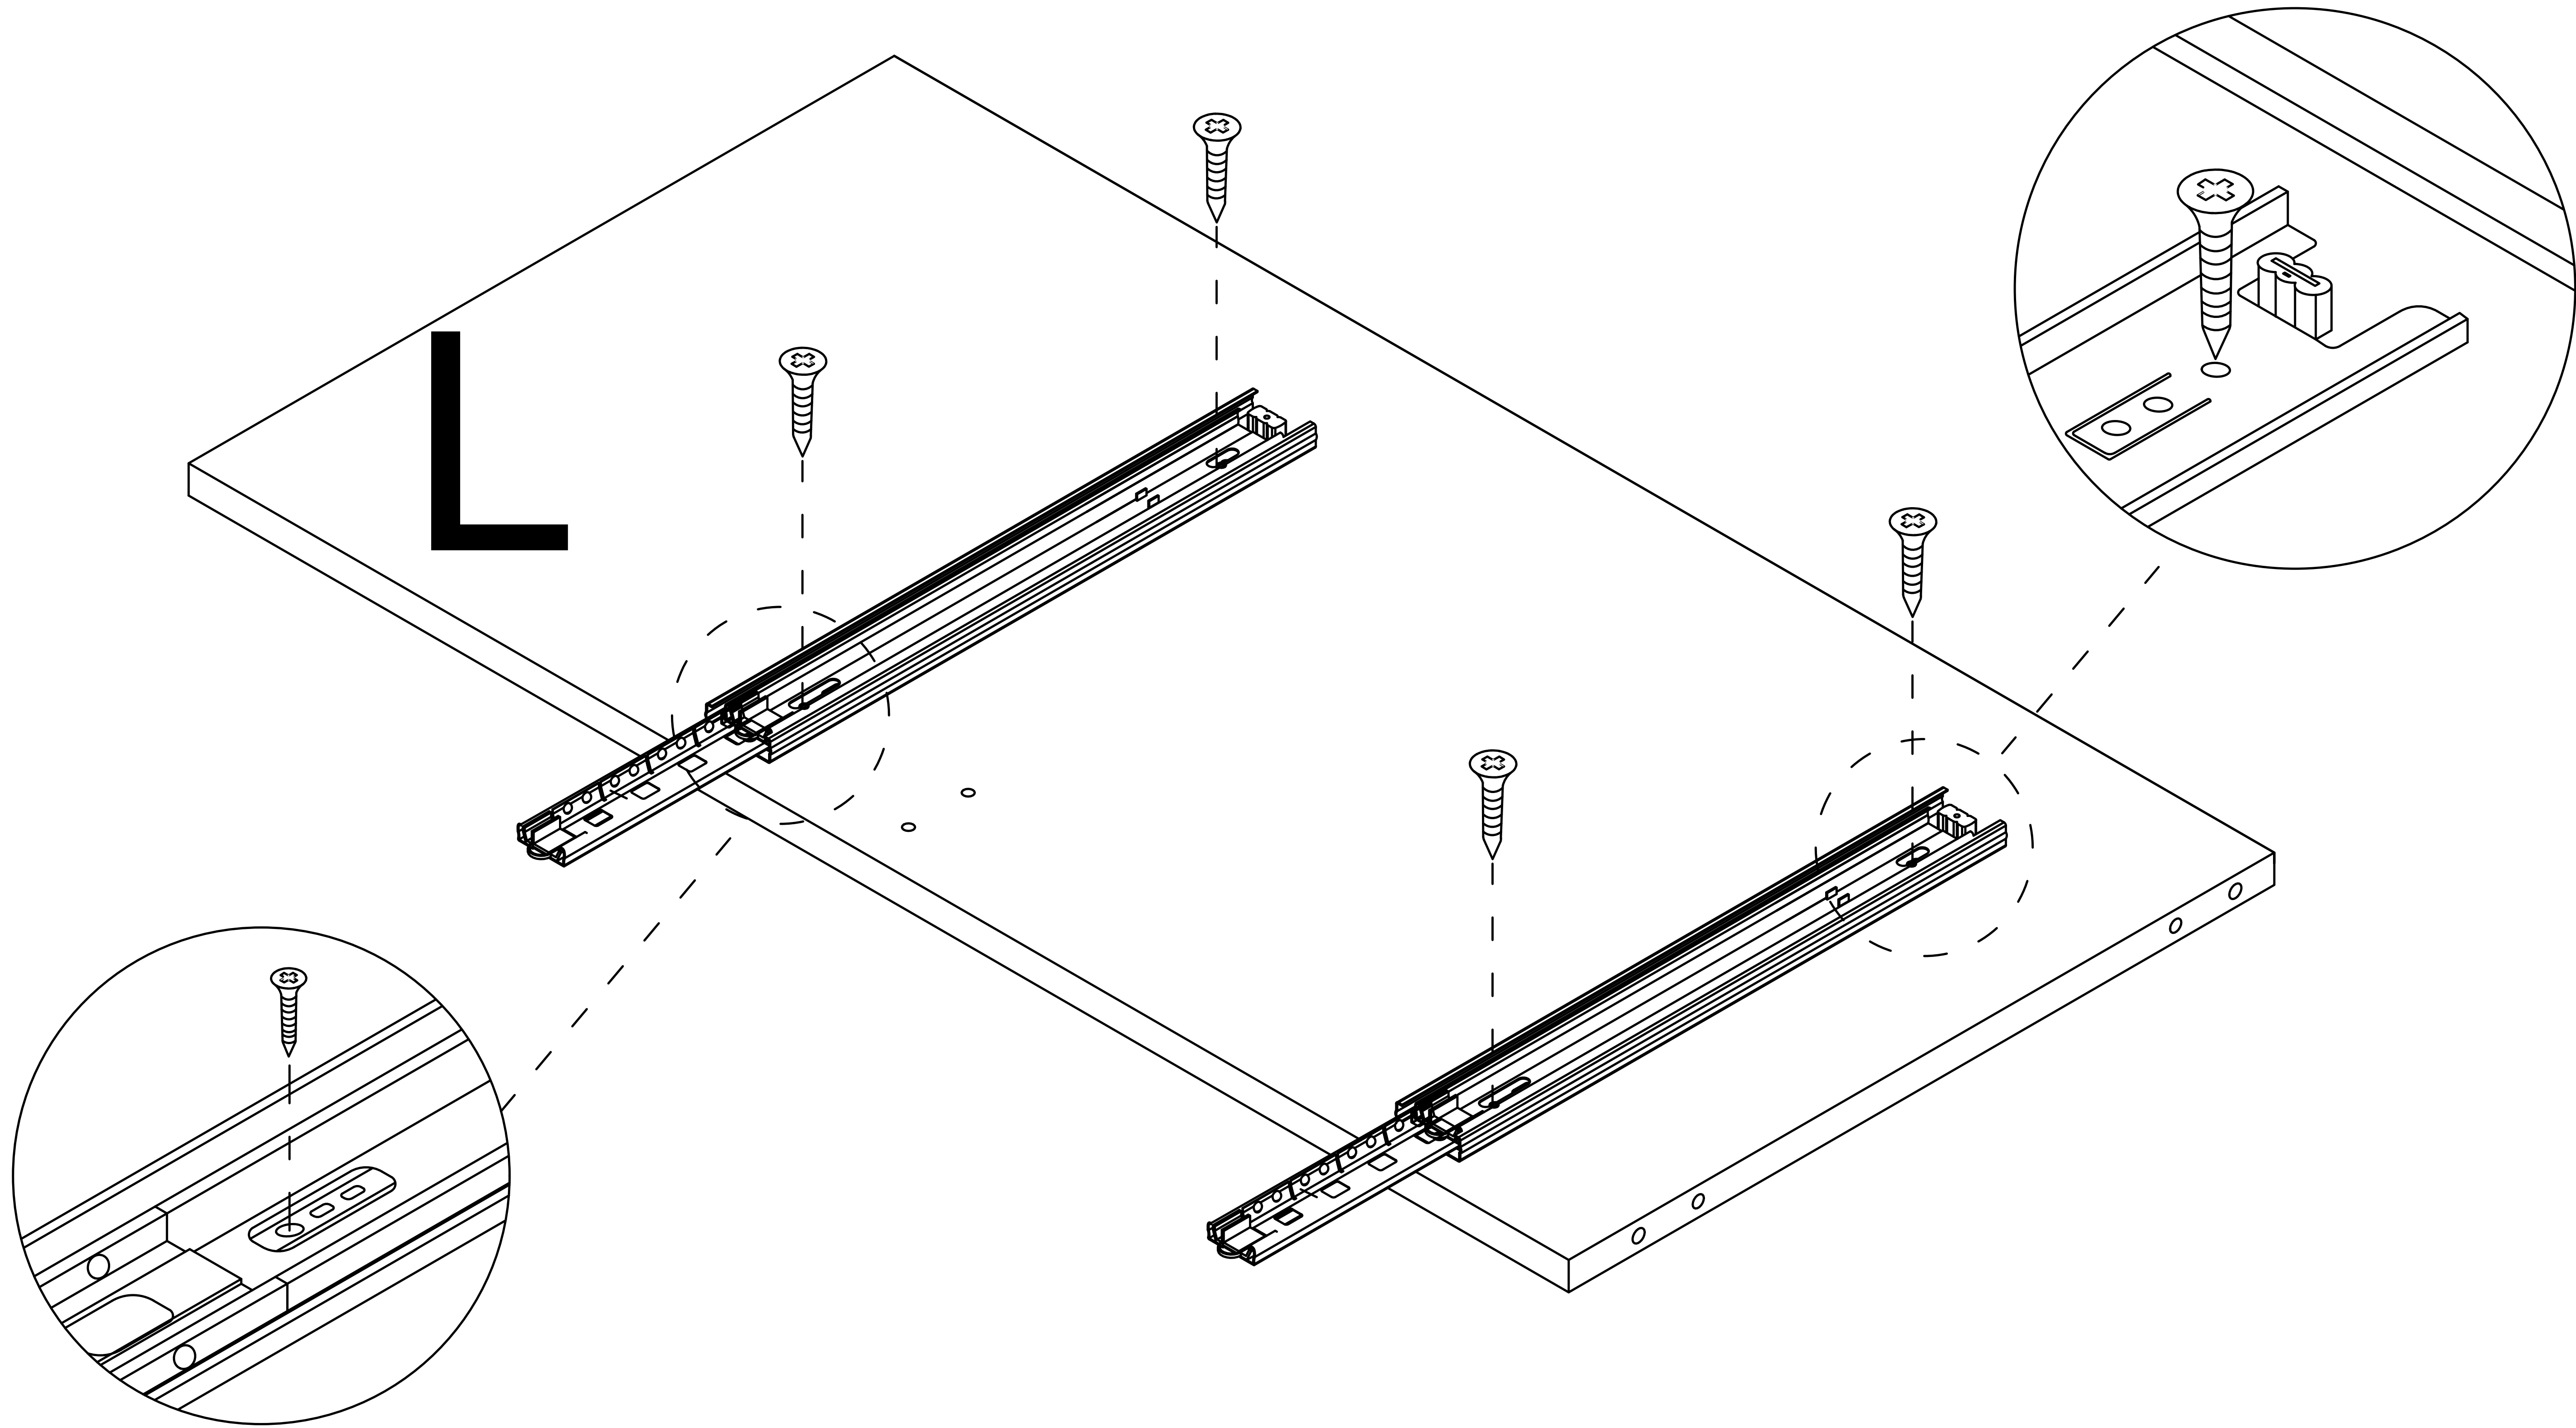




4

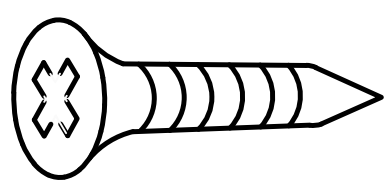




x2

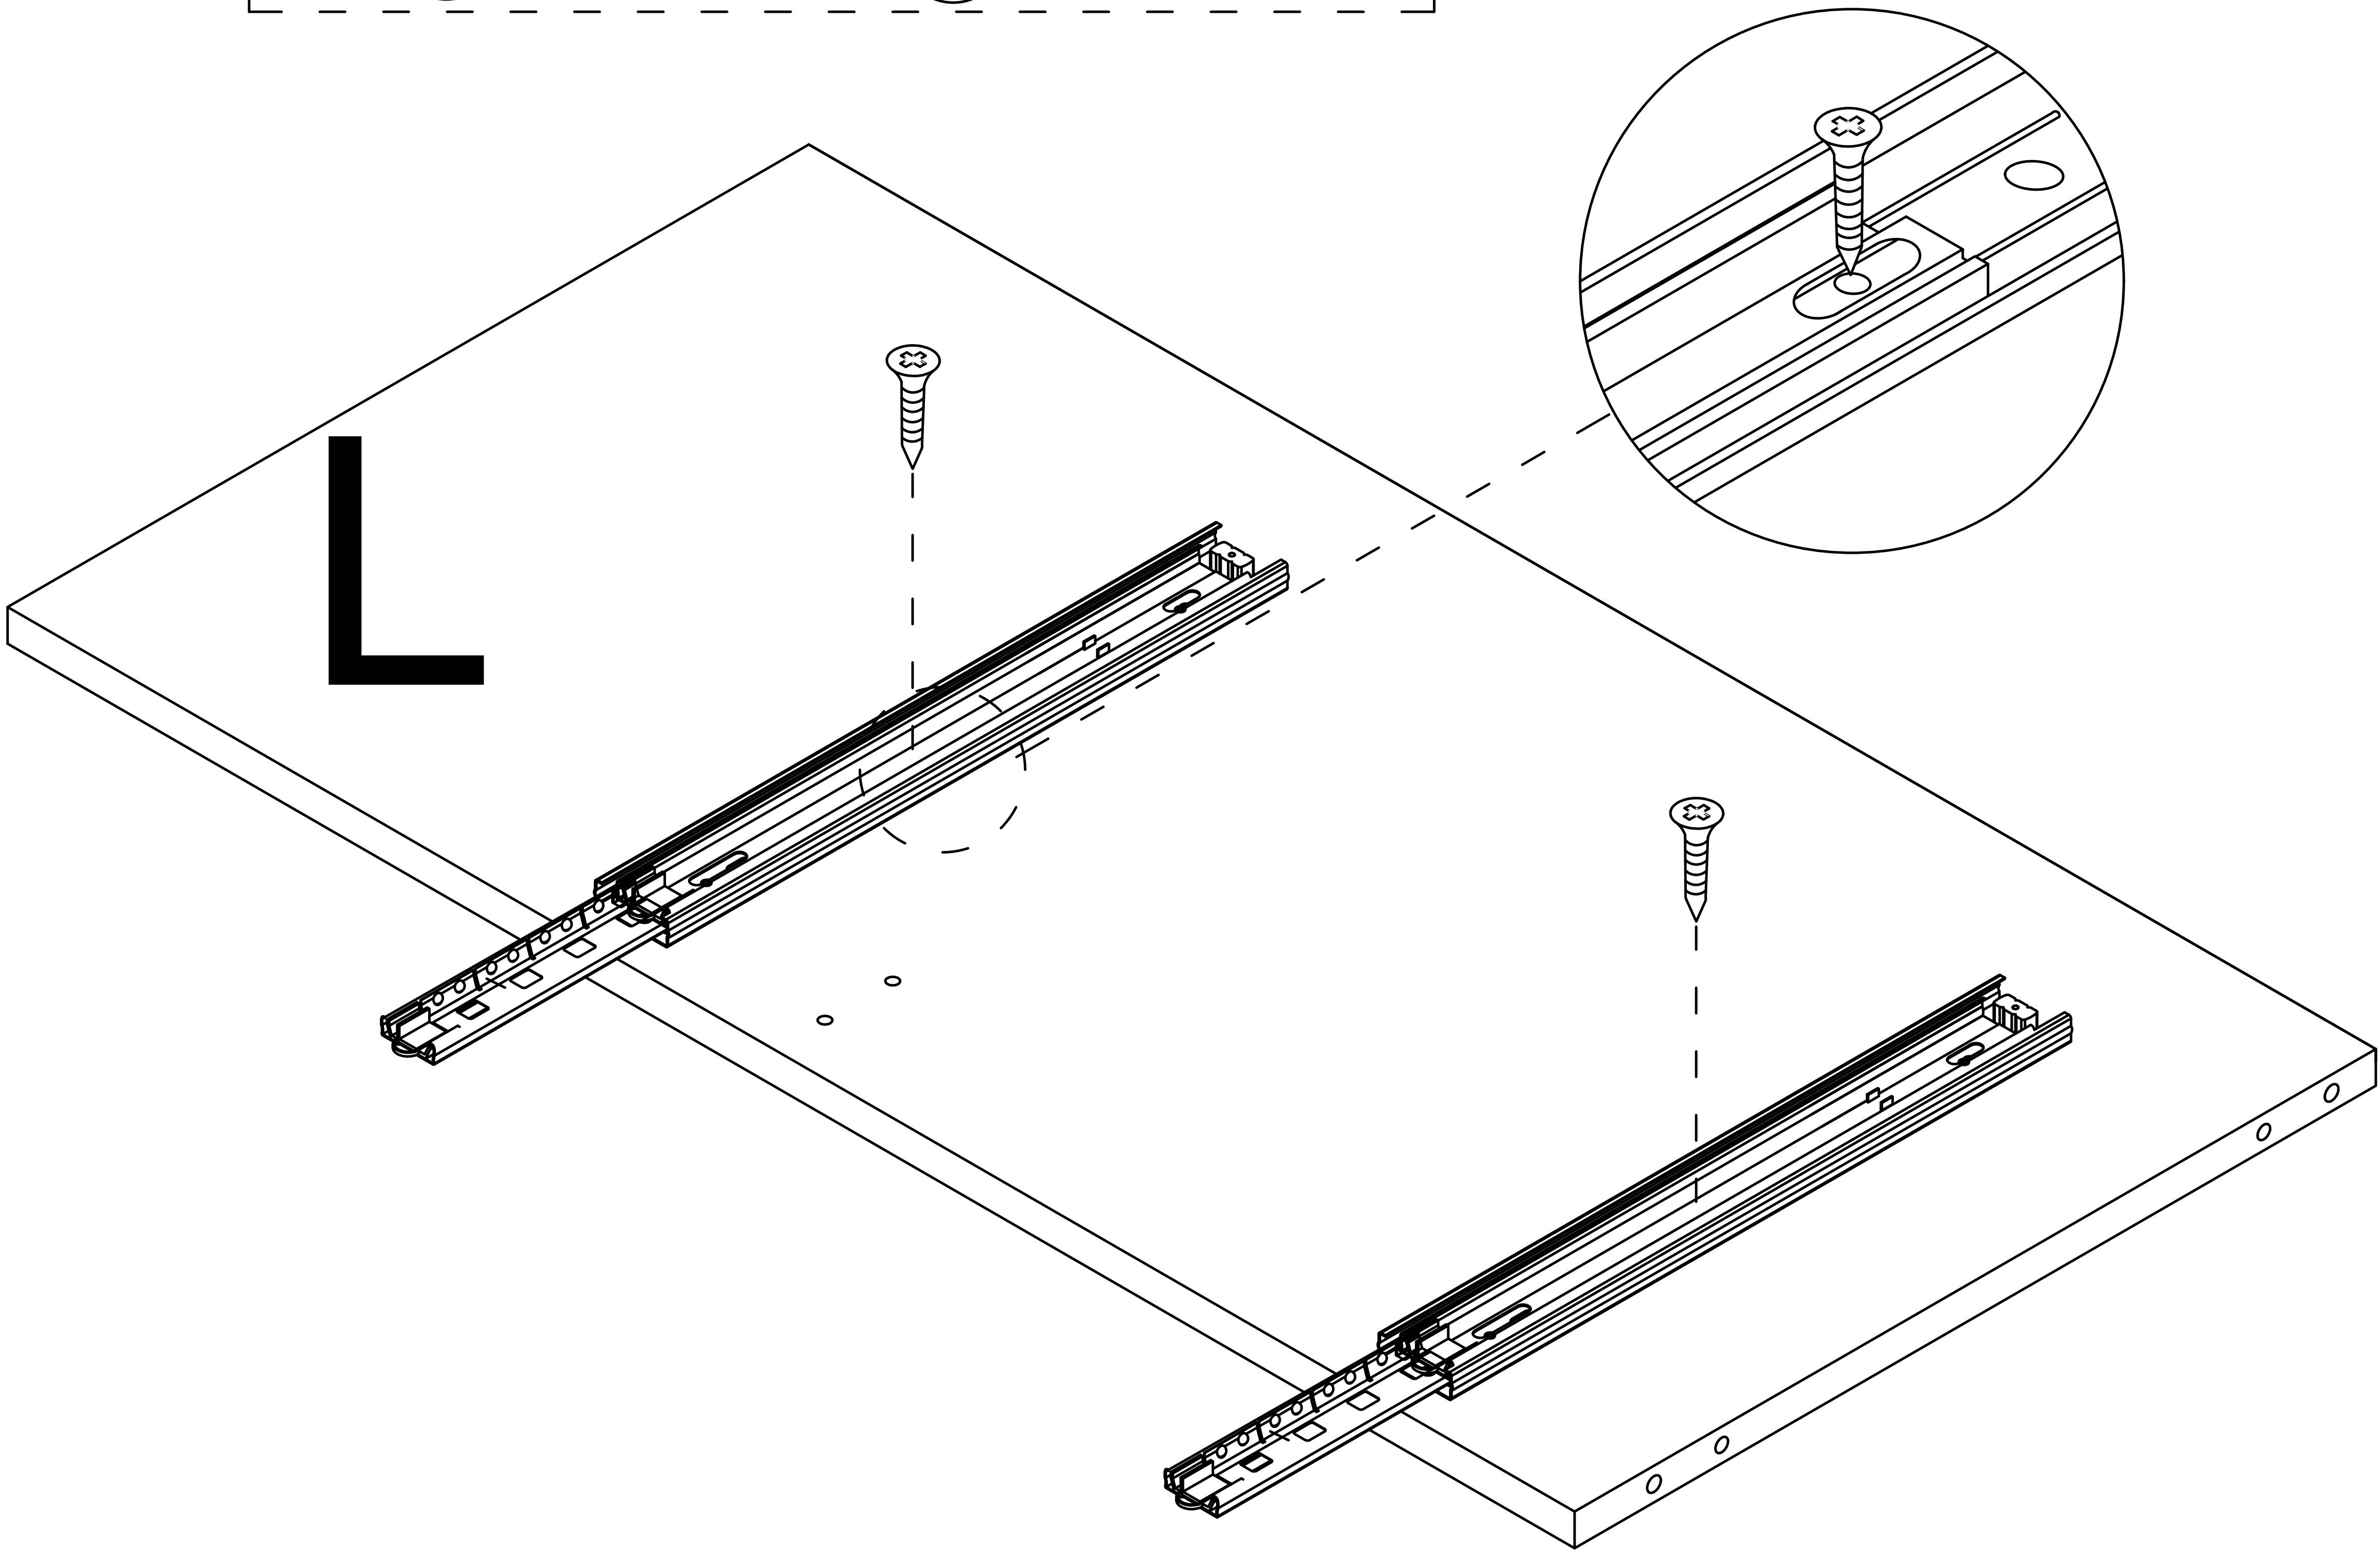

Step 17

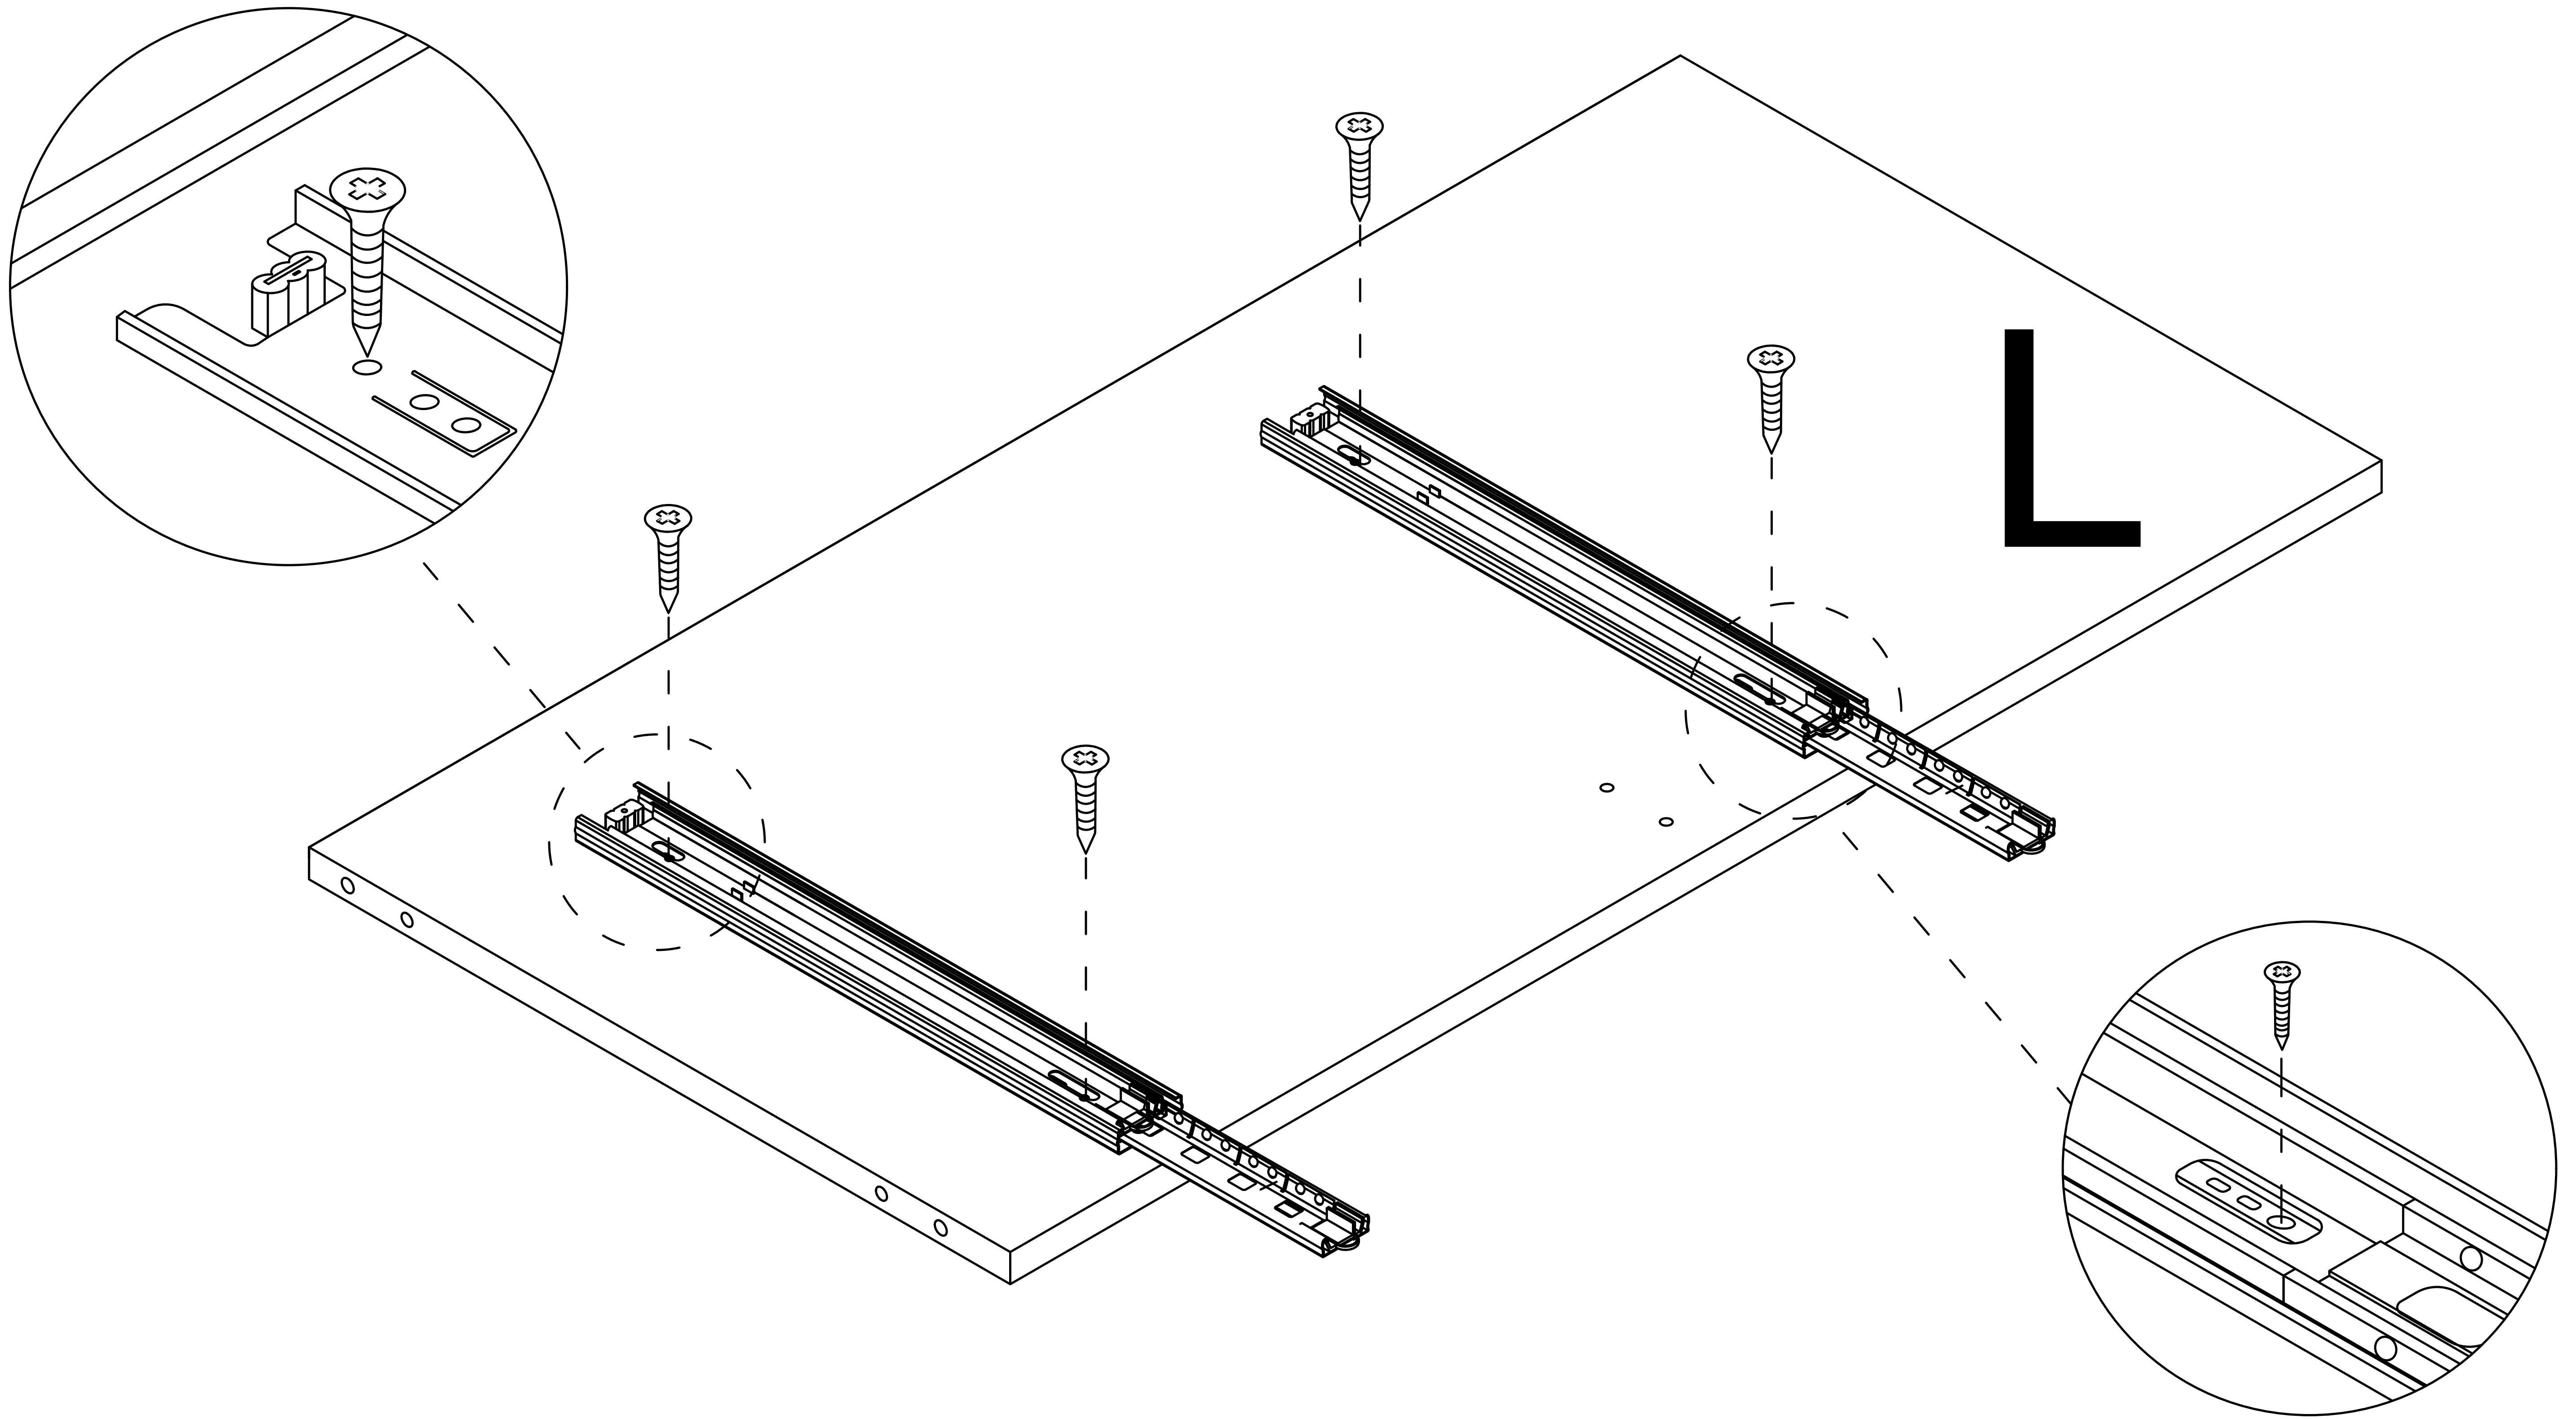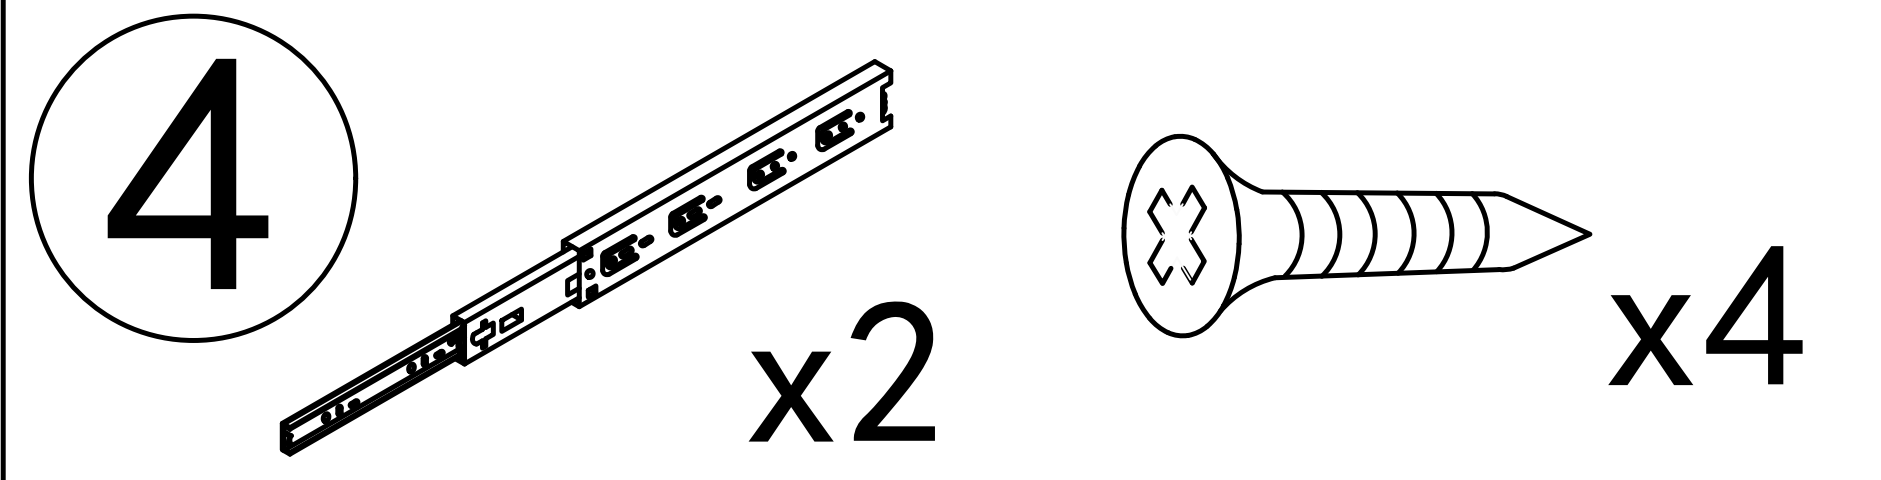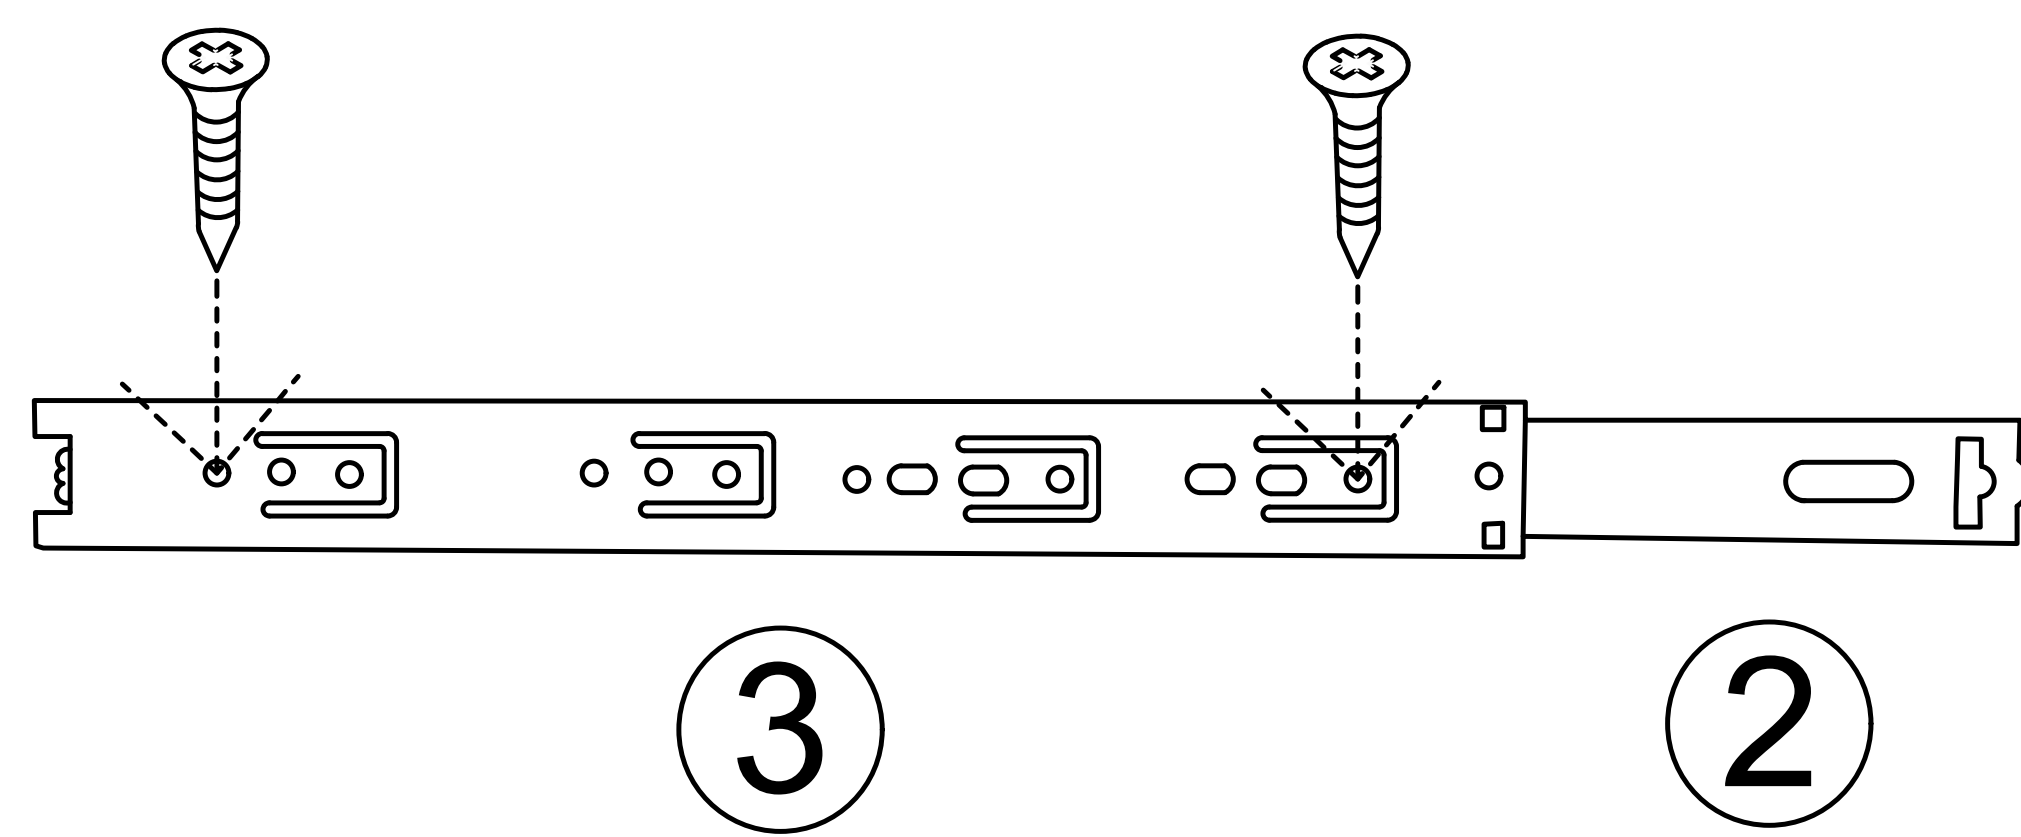



Step 18

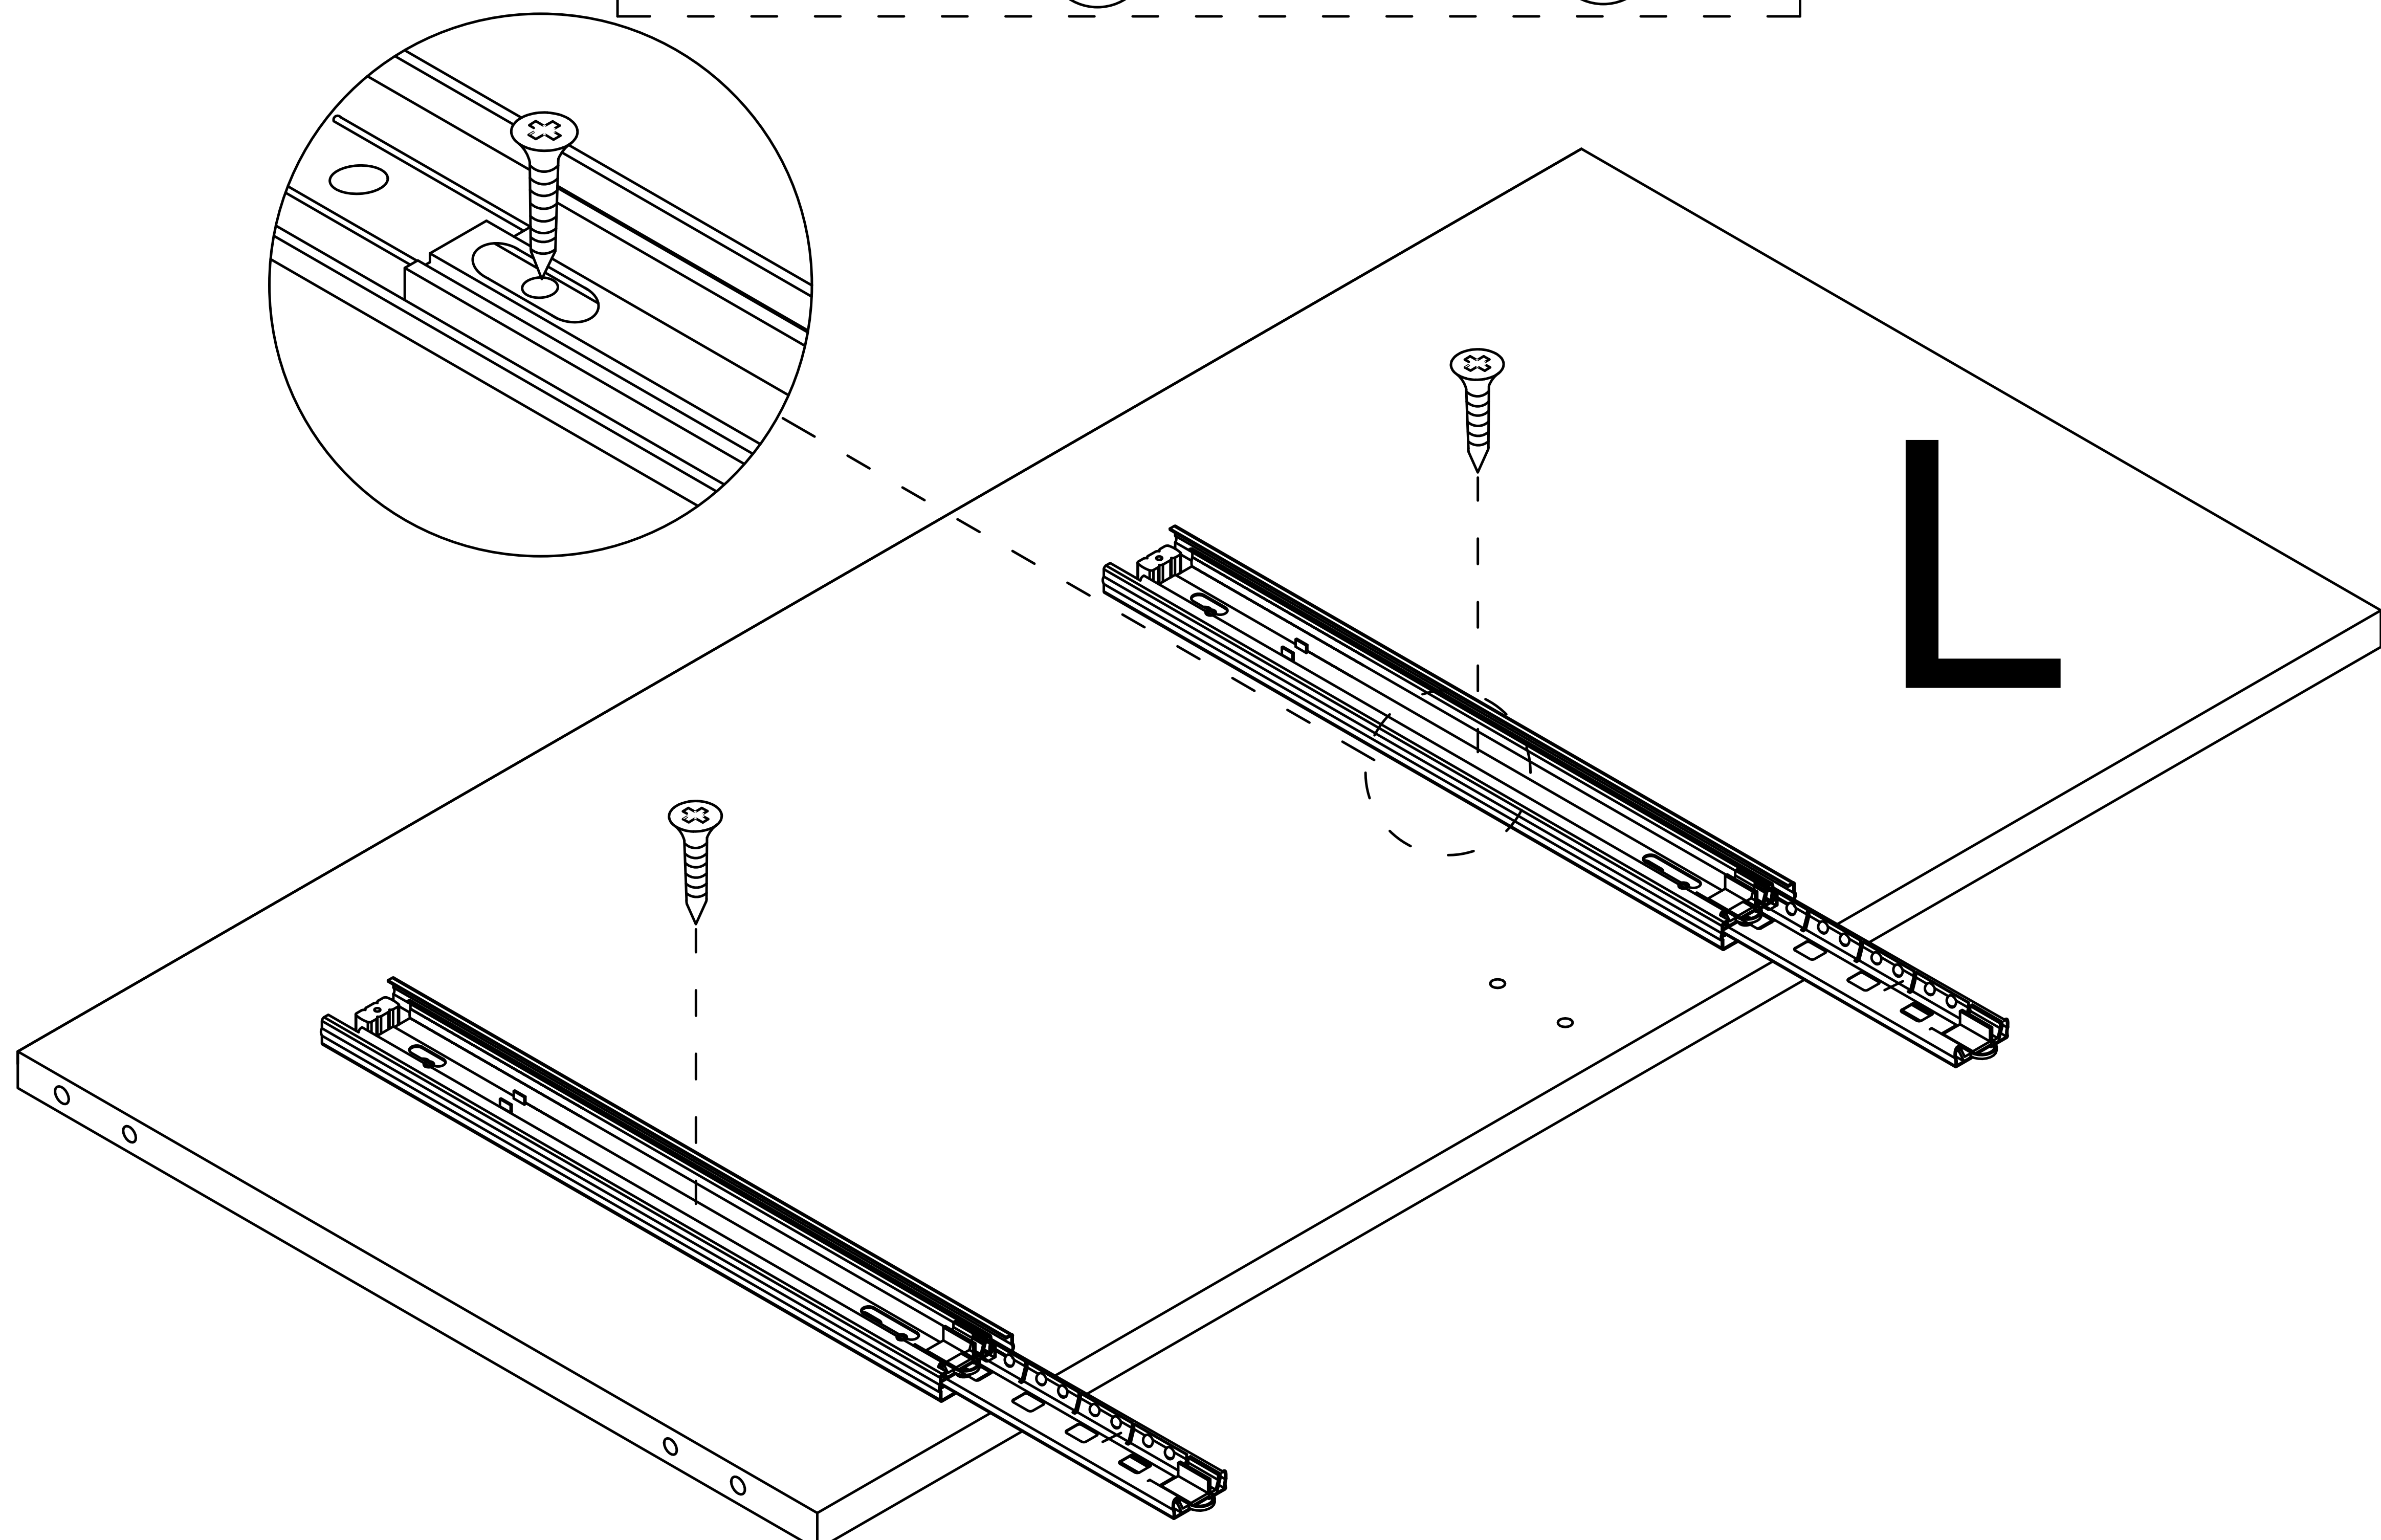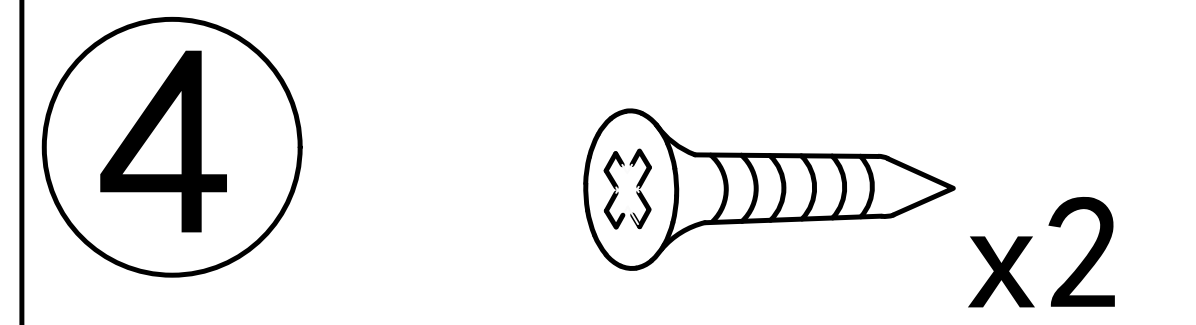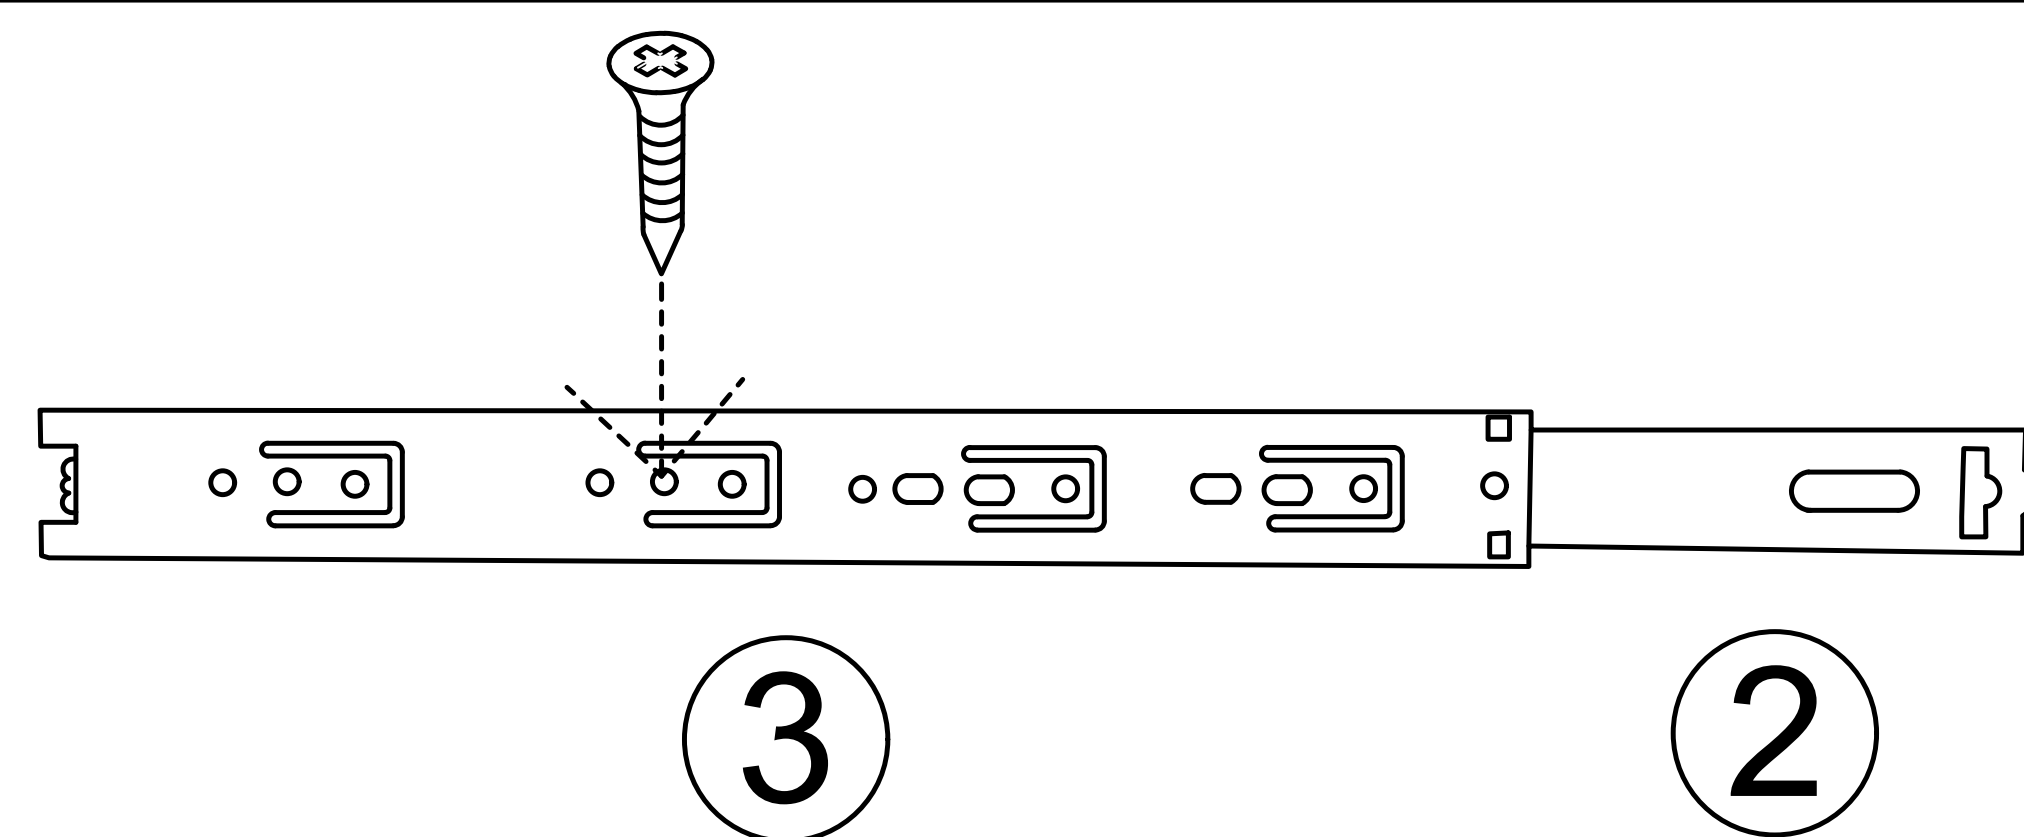

Step 19


1

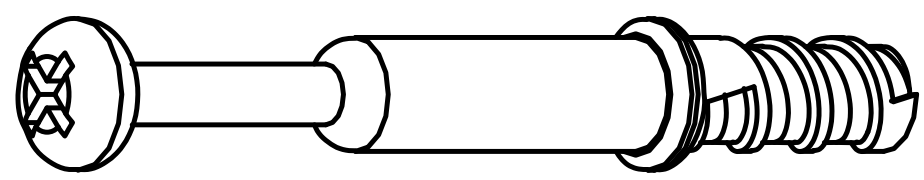

x2

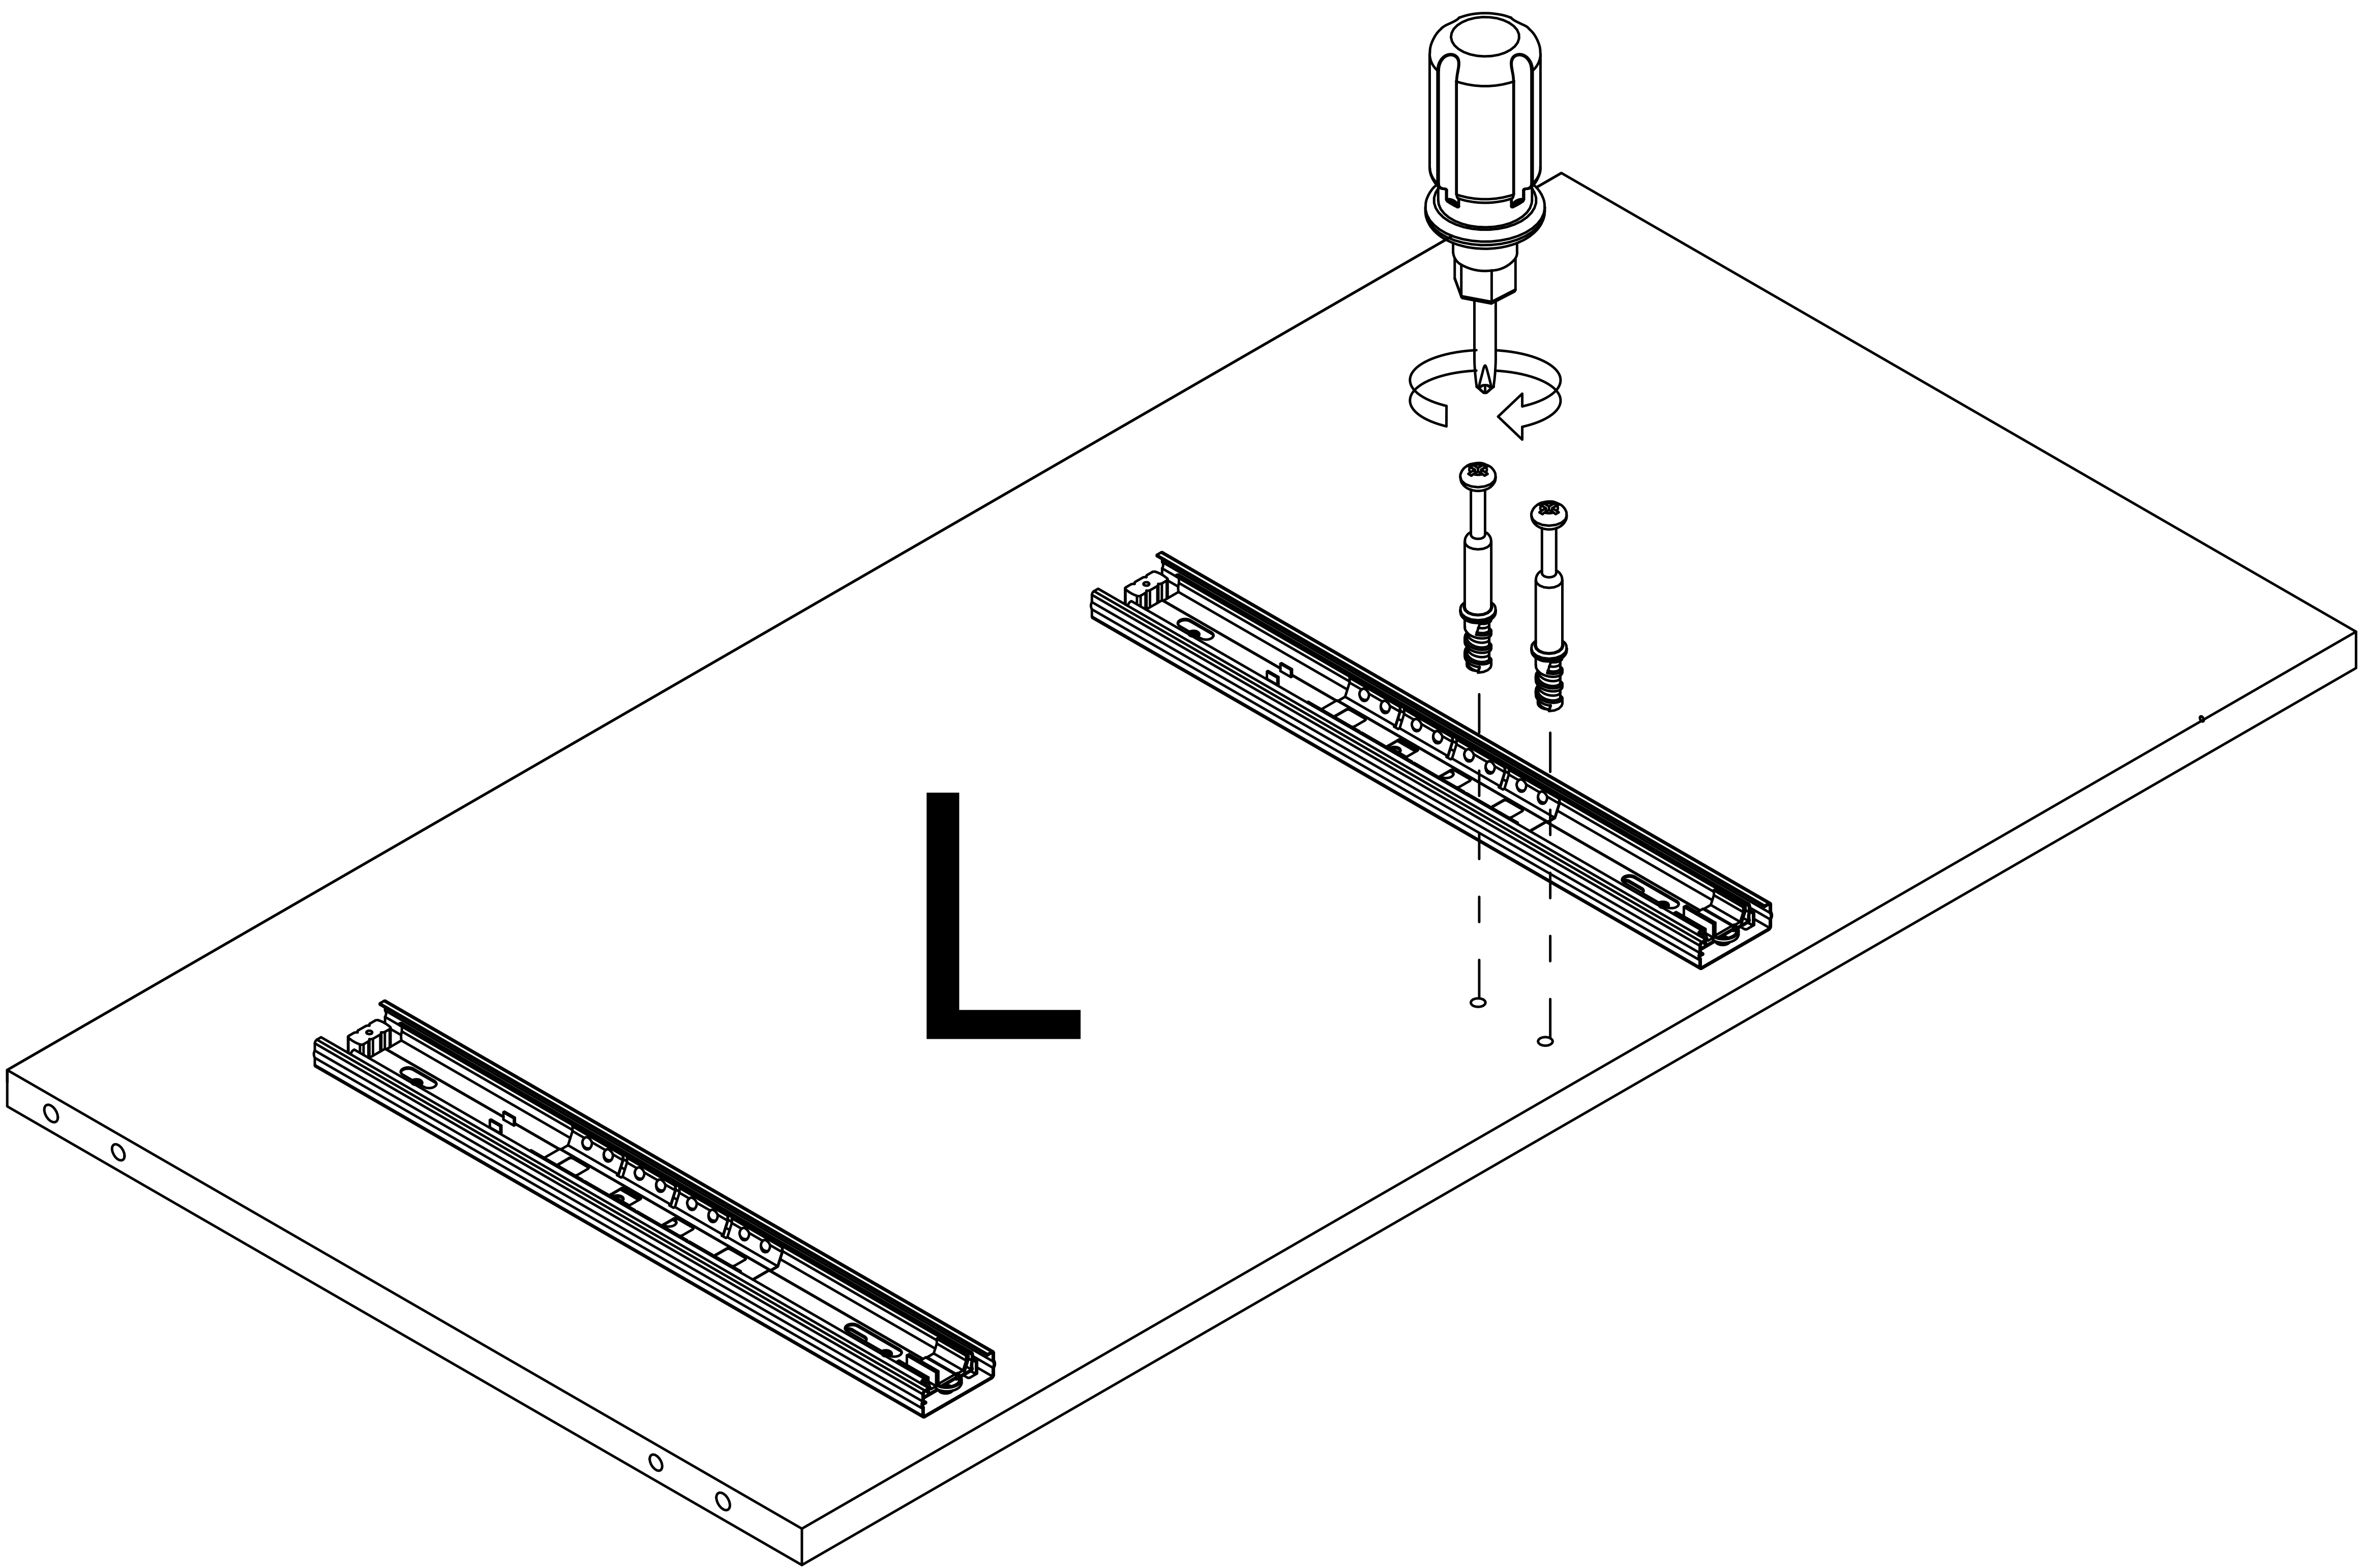


Step 20


2

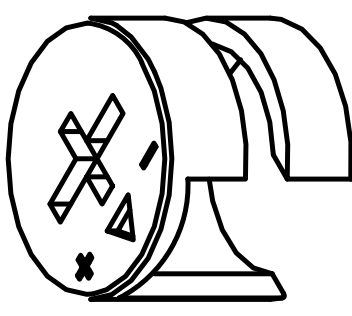
x2

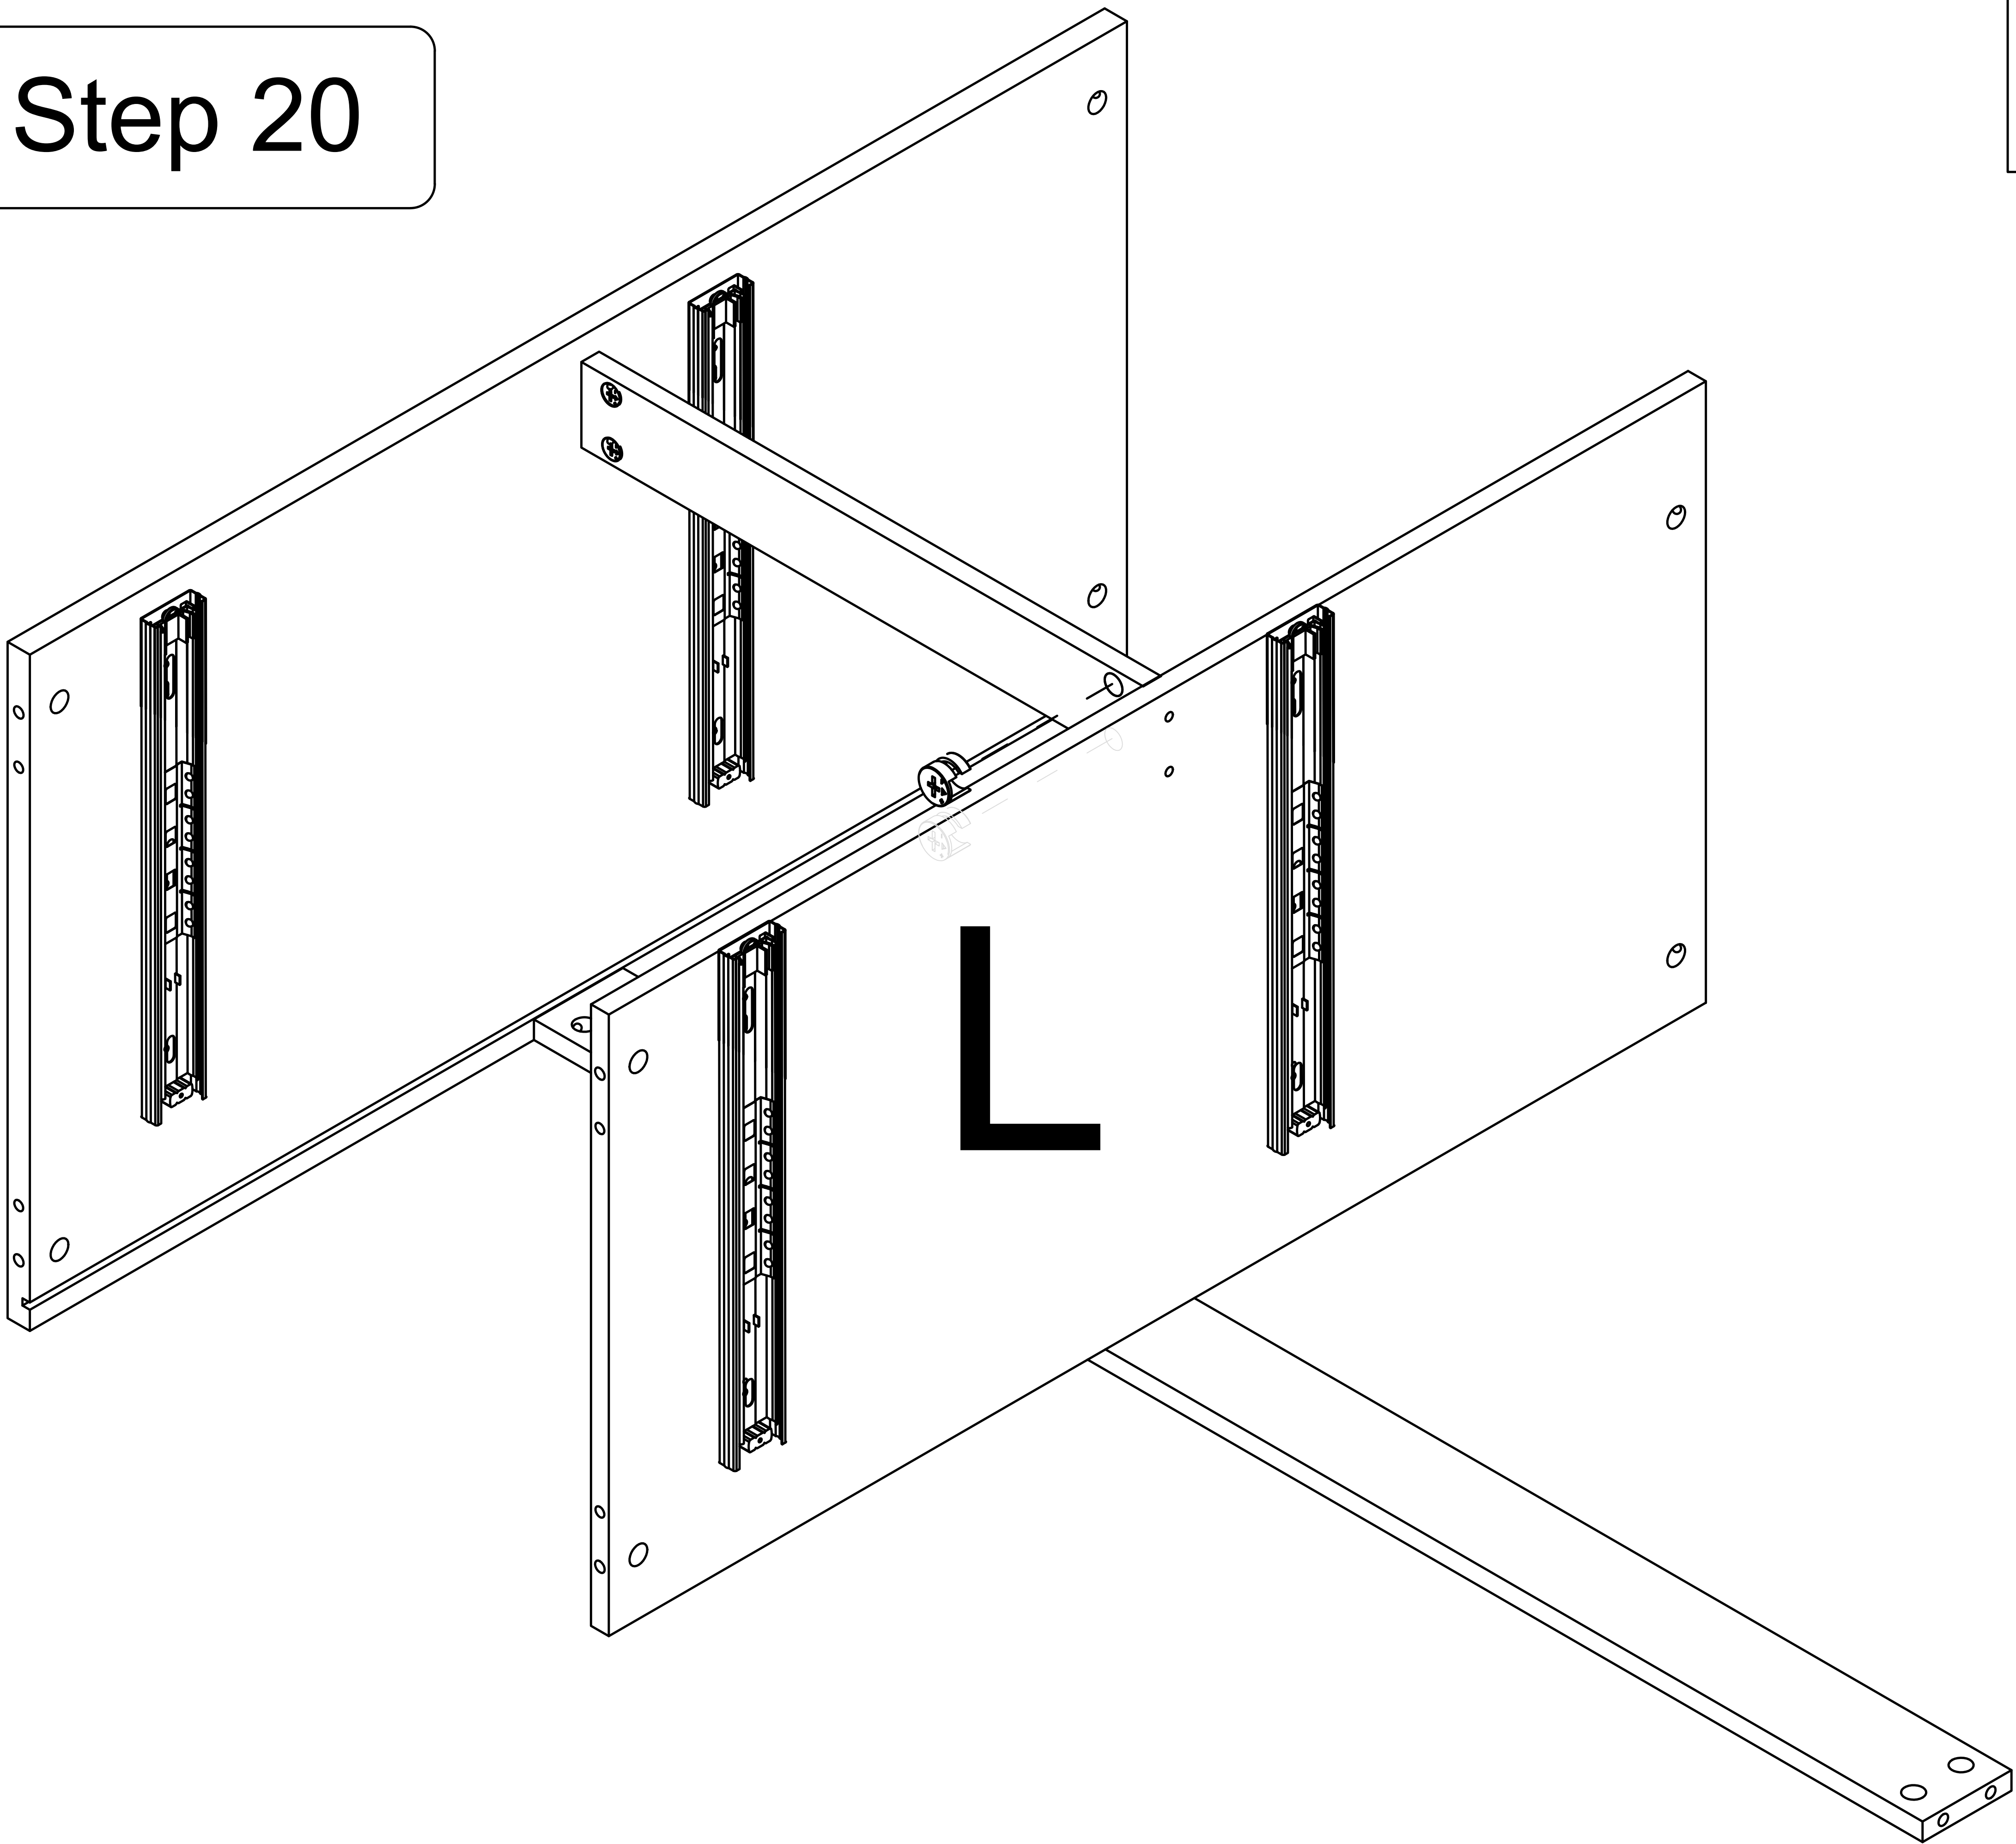



Step 21

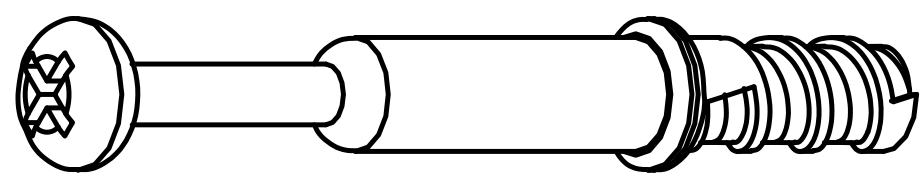1  x2



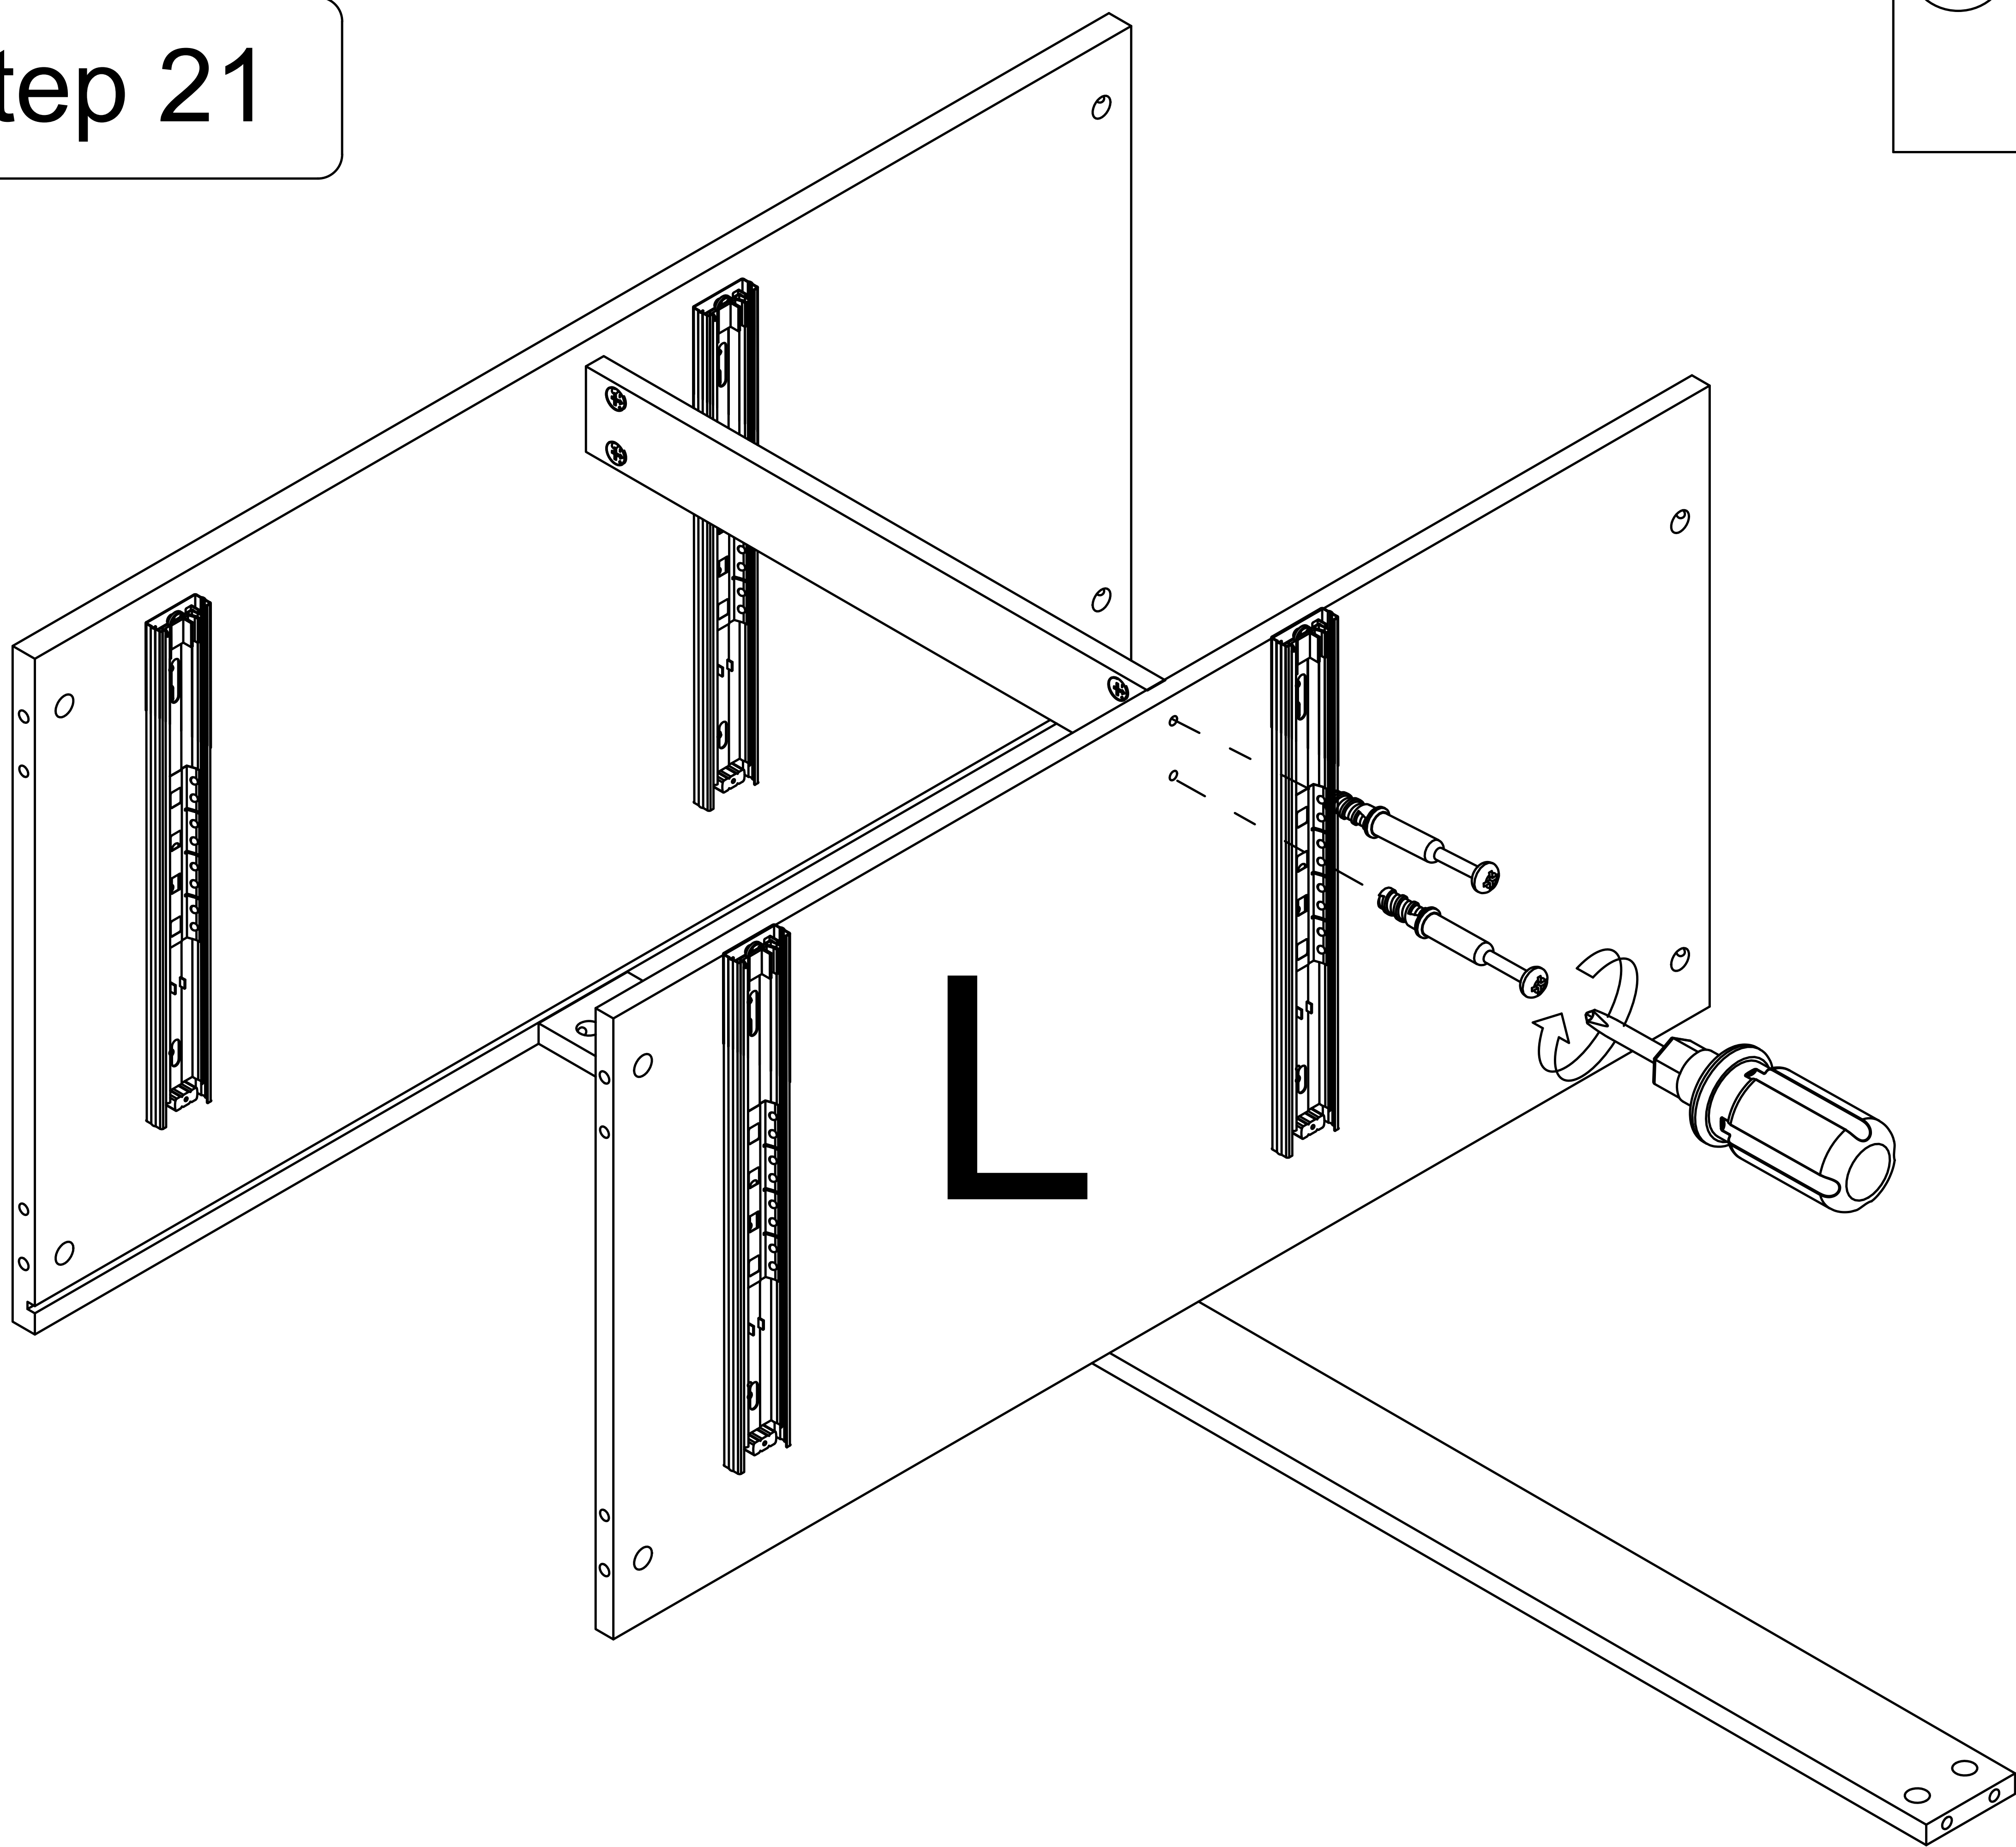


Step 22



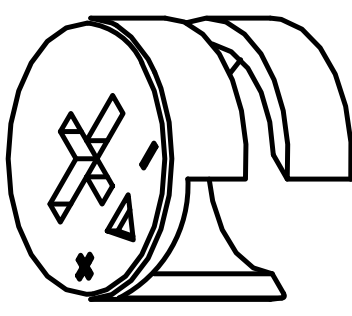
2  x2

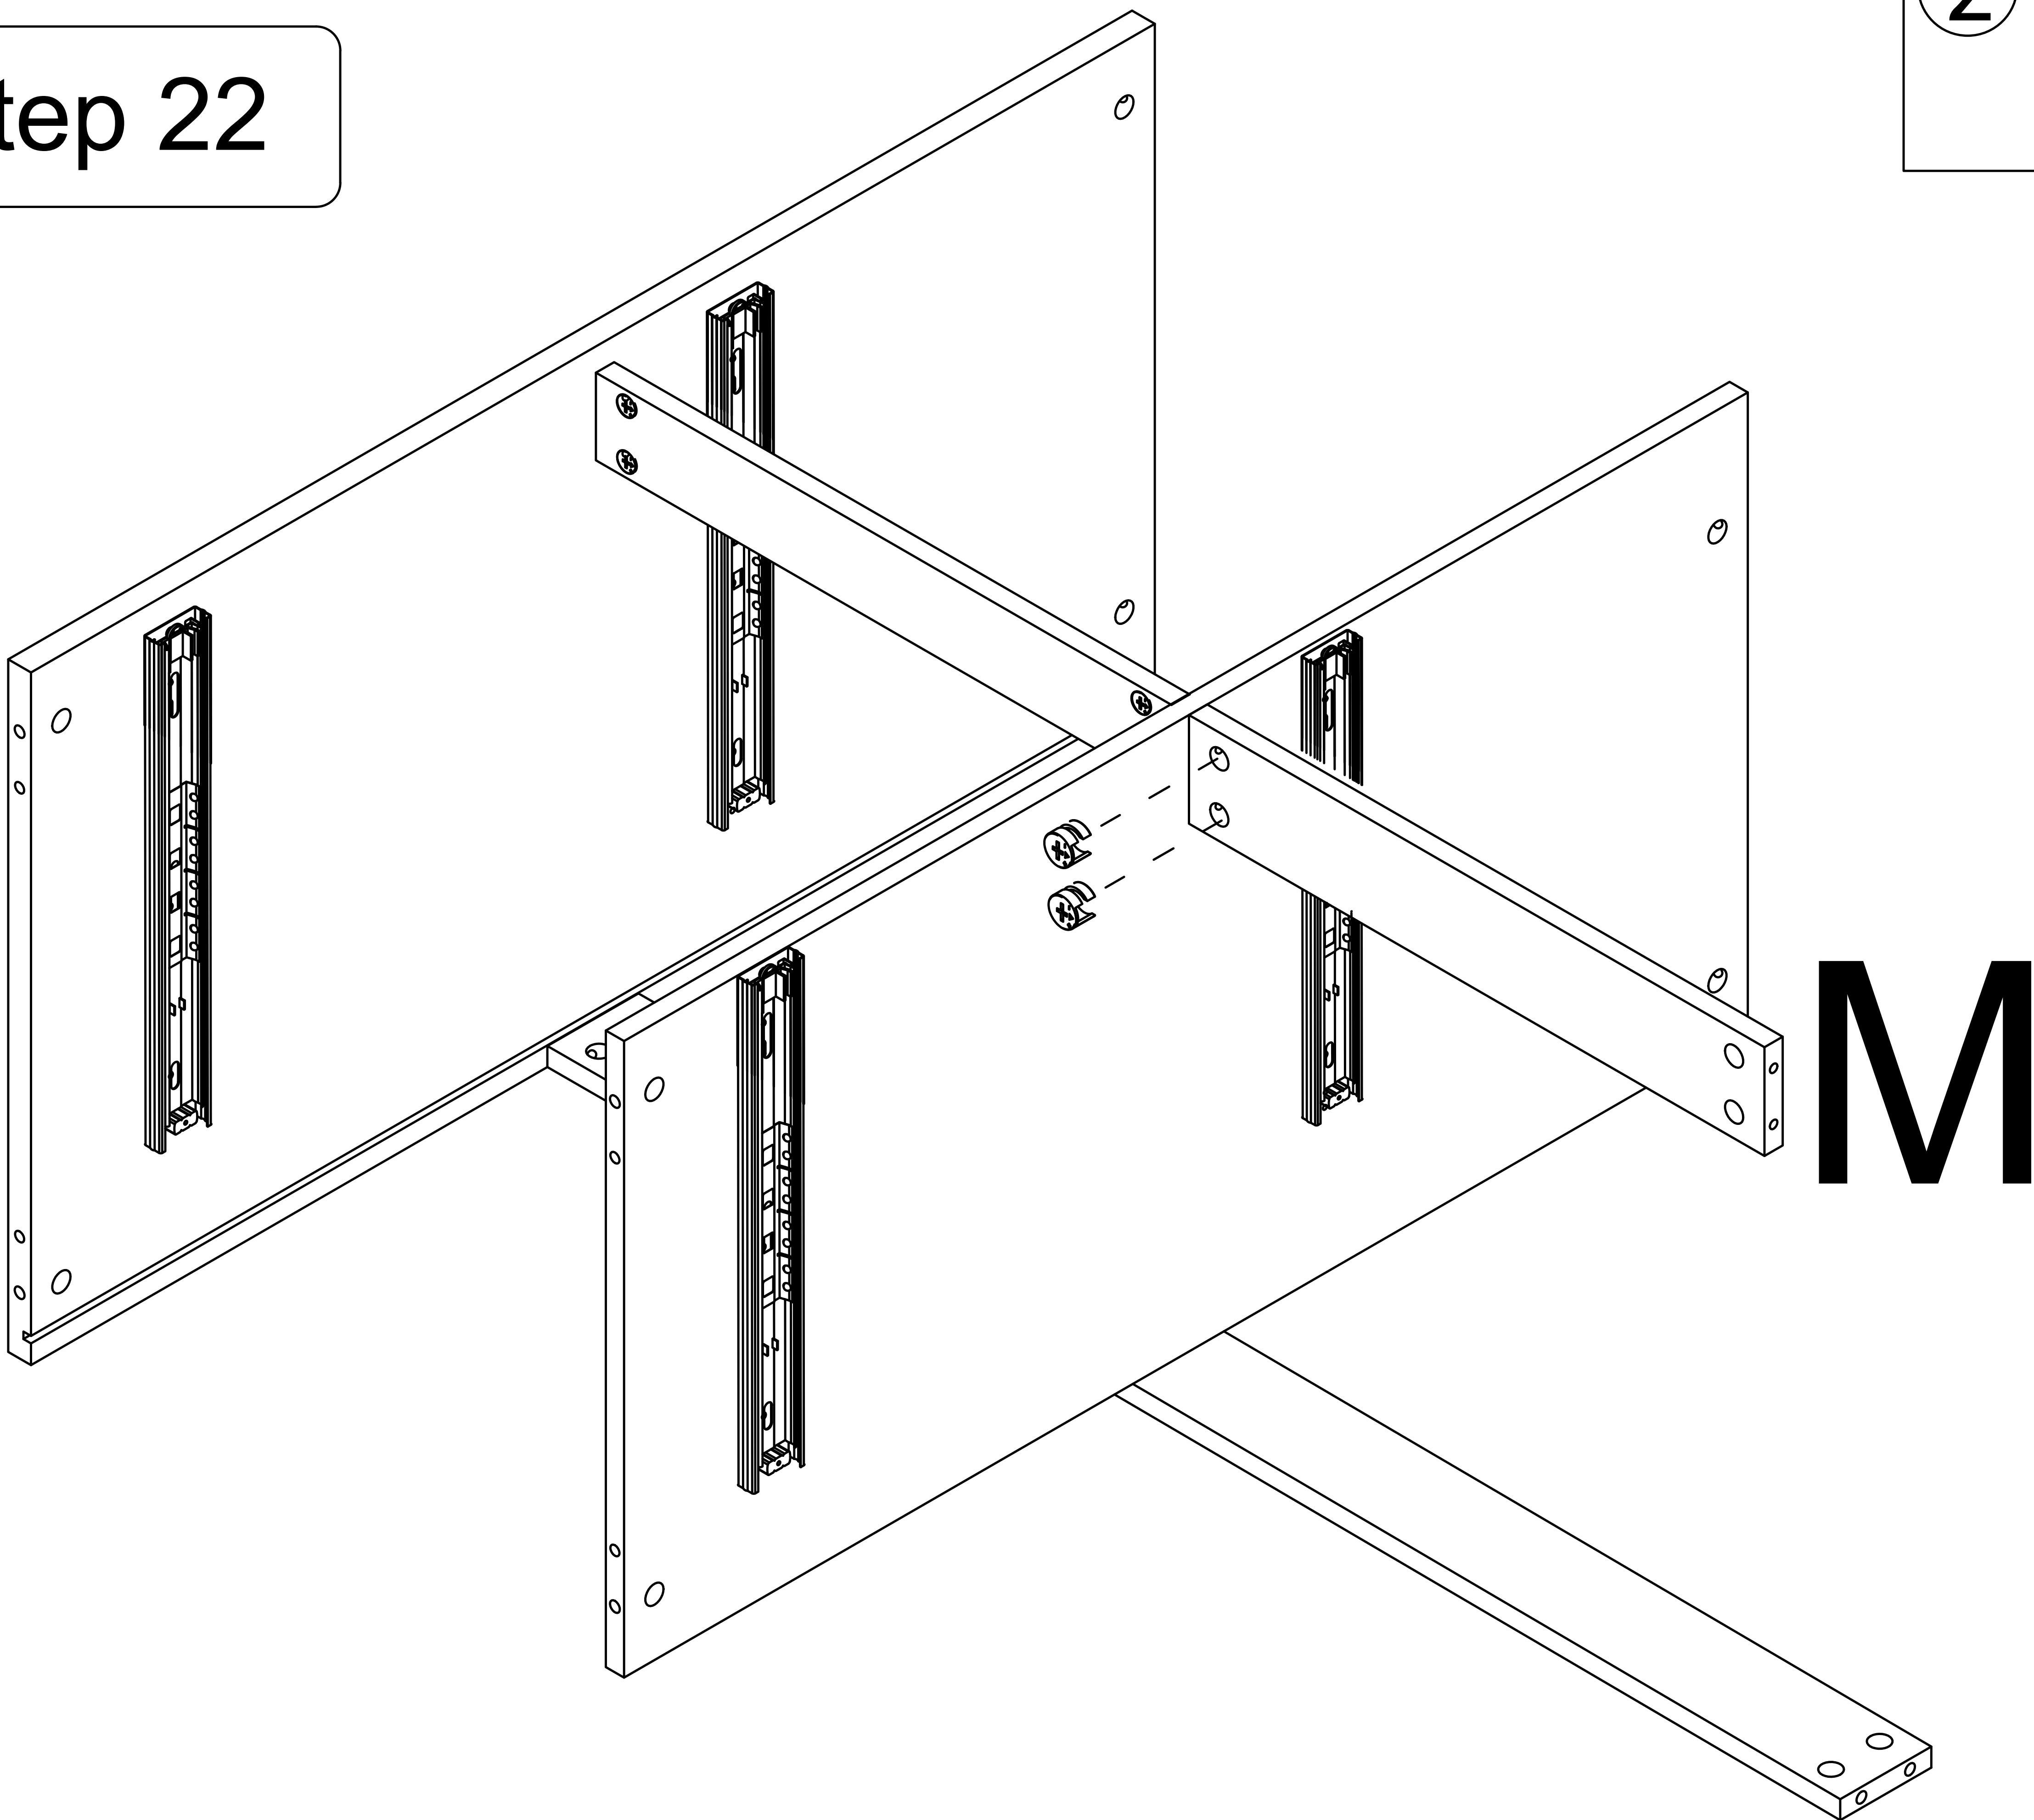






Step 23

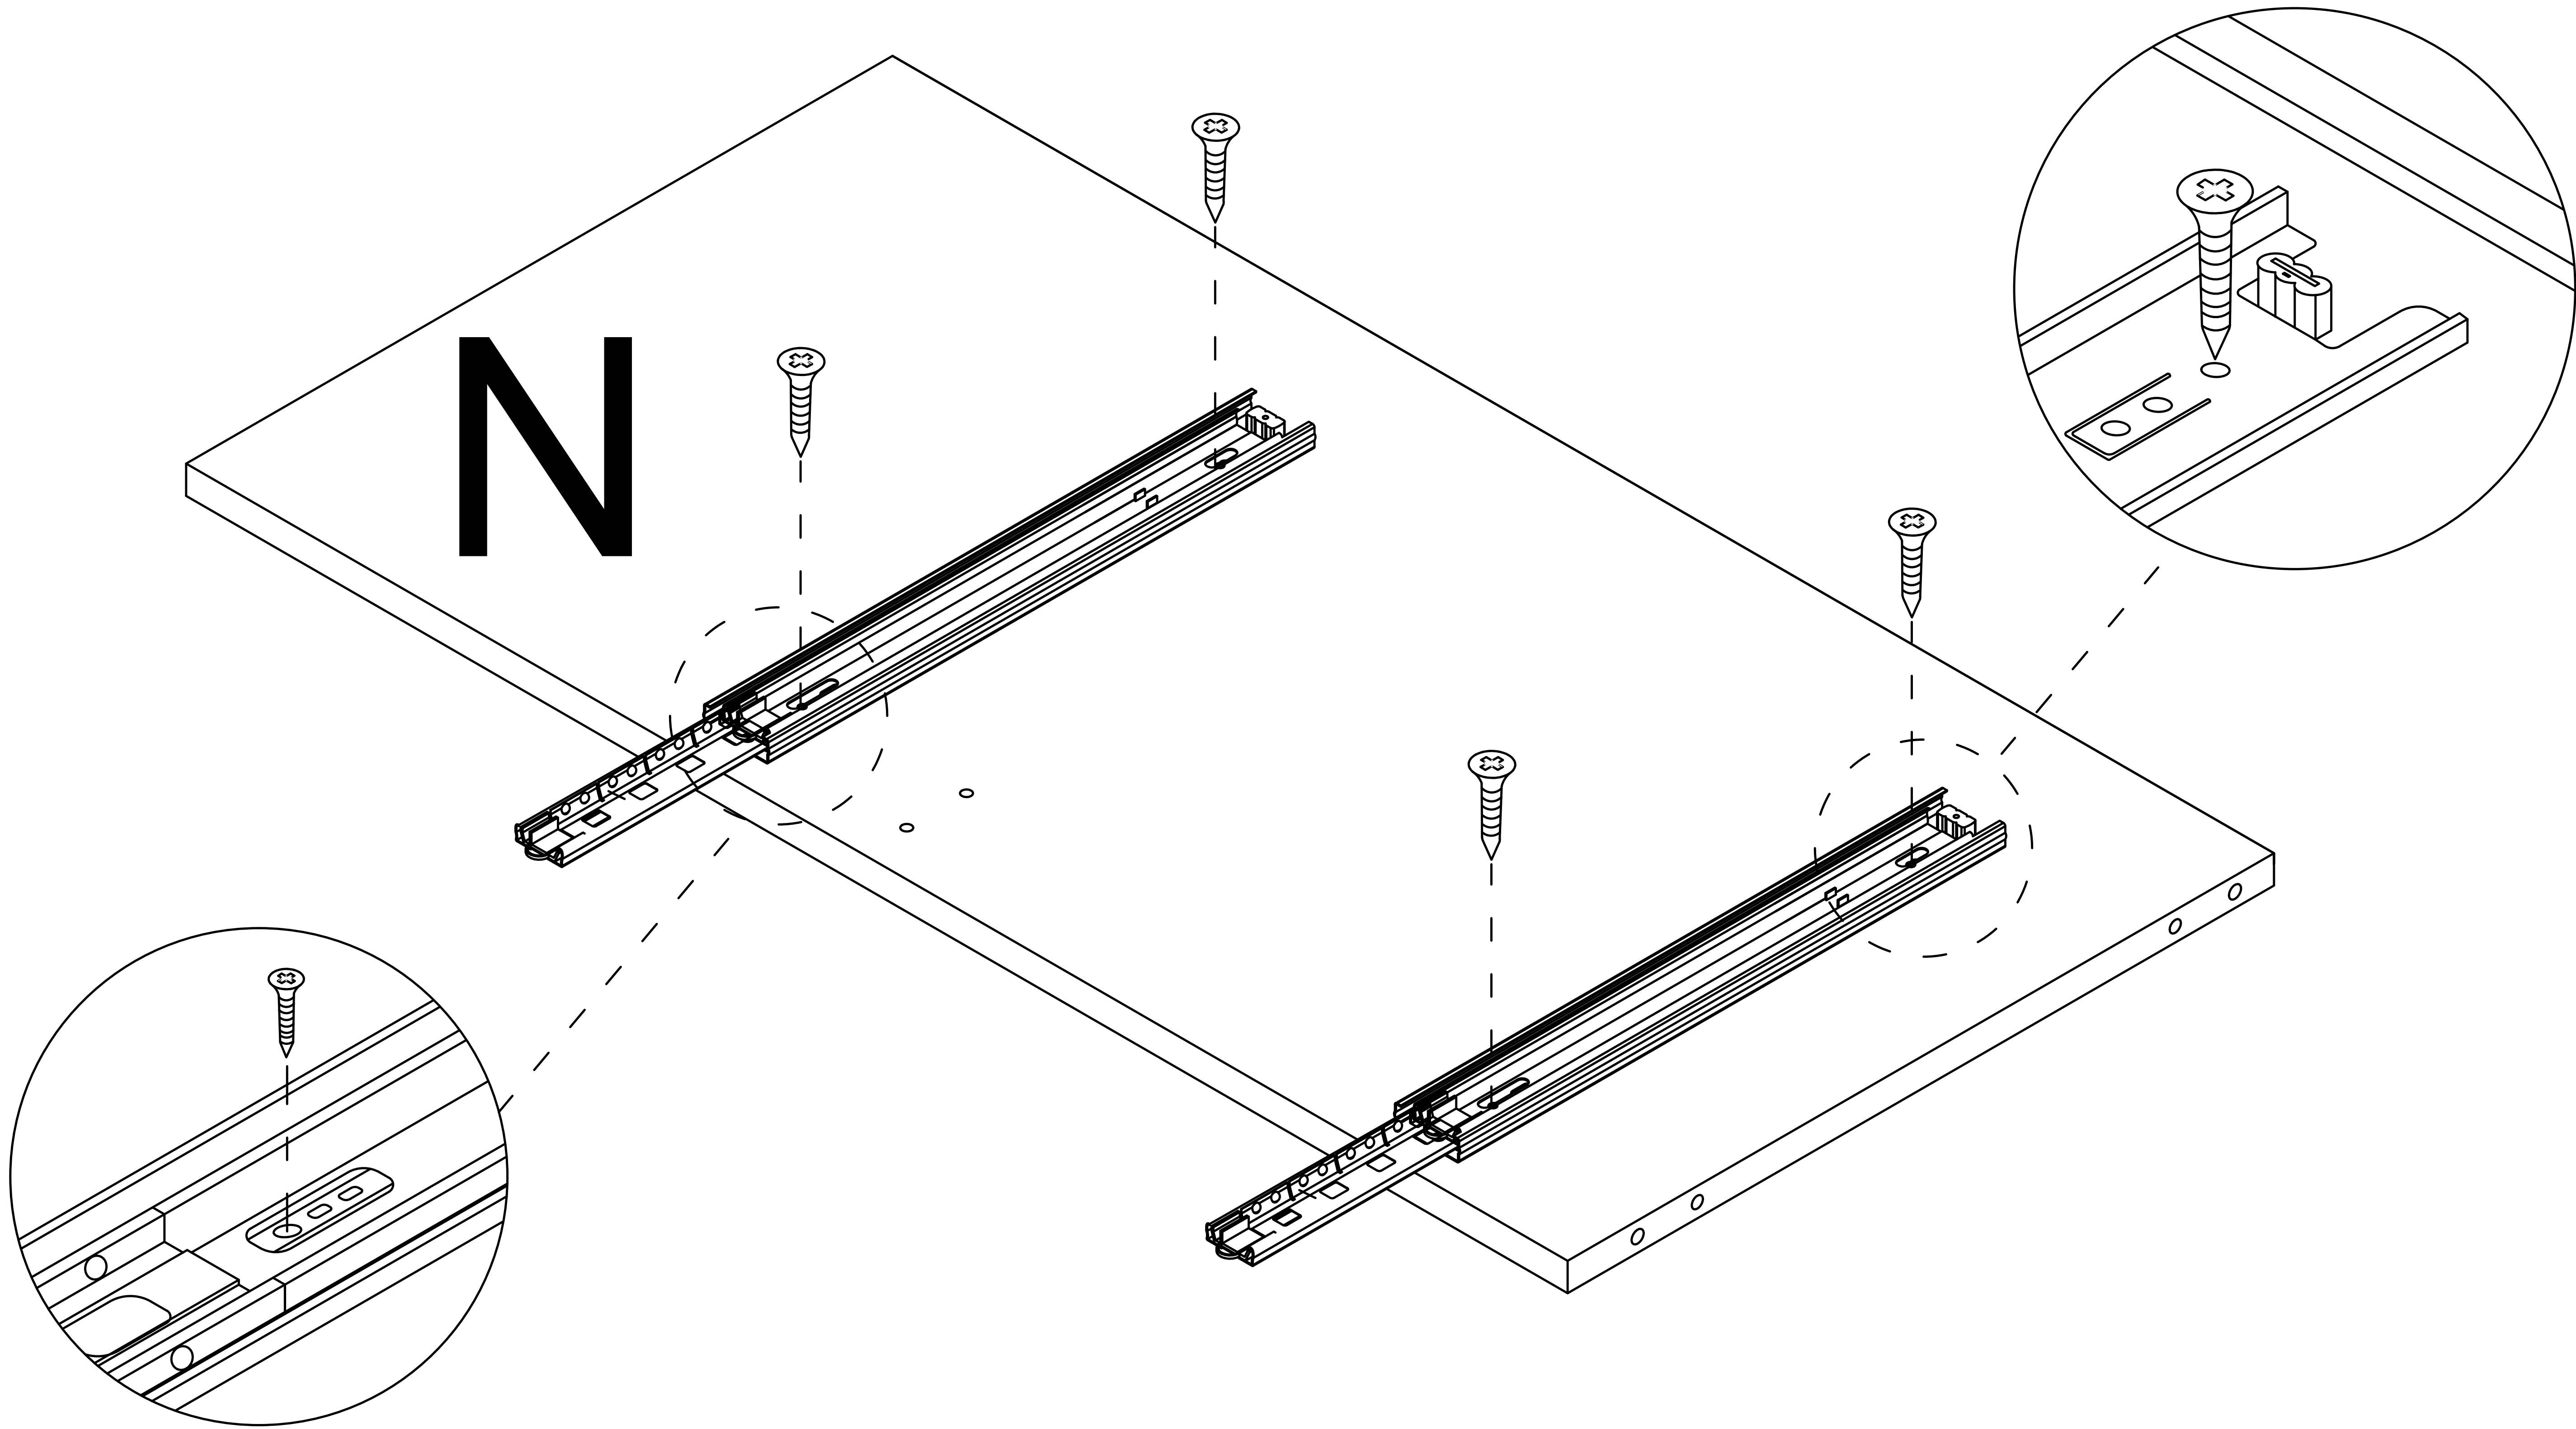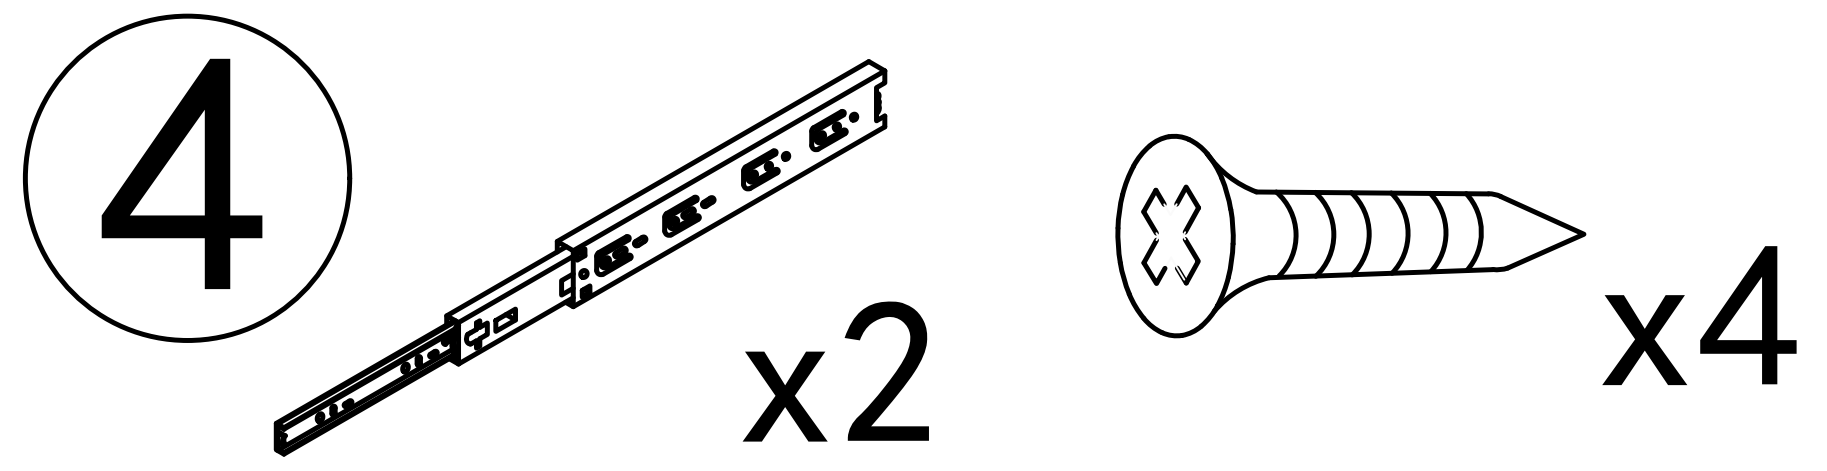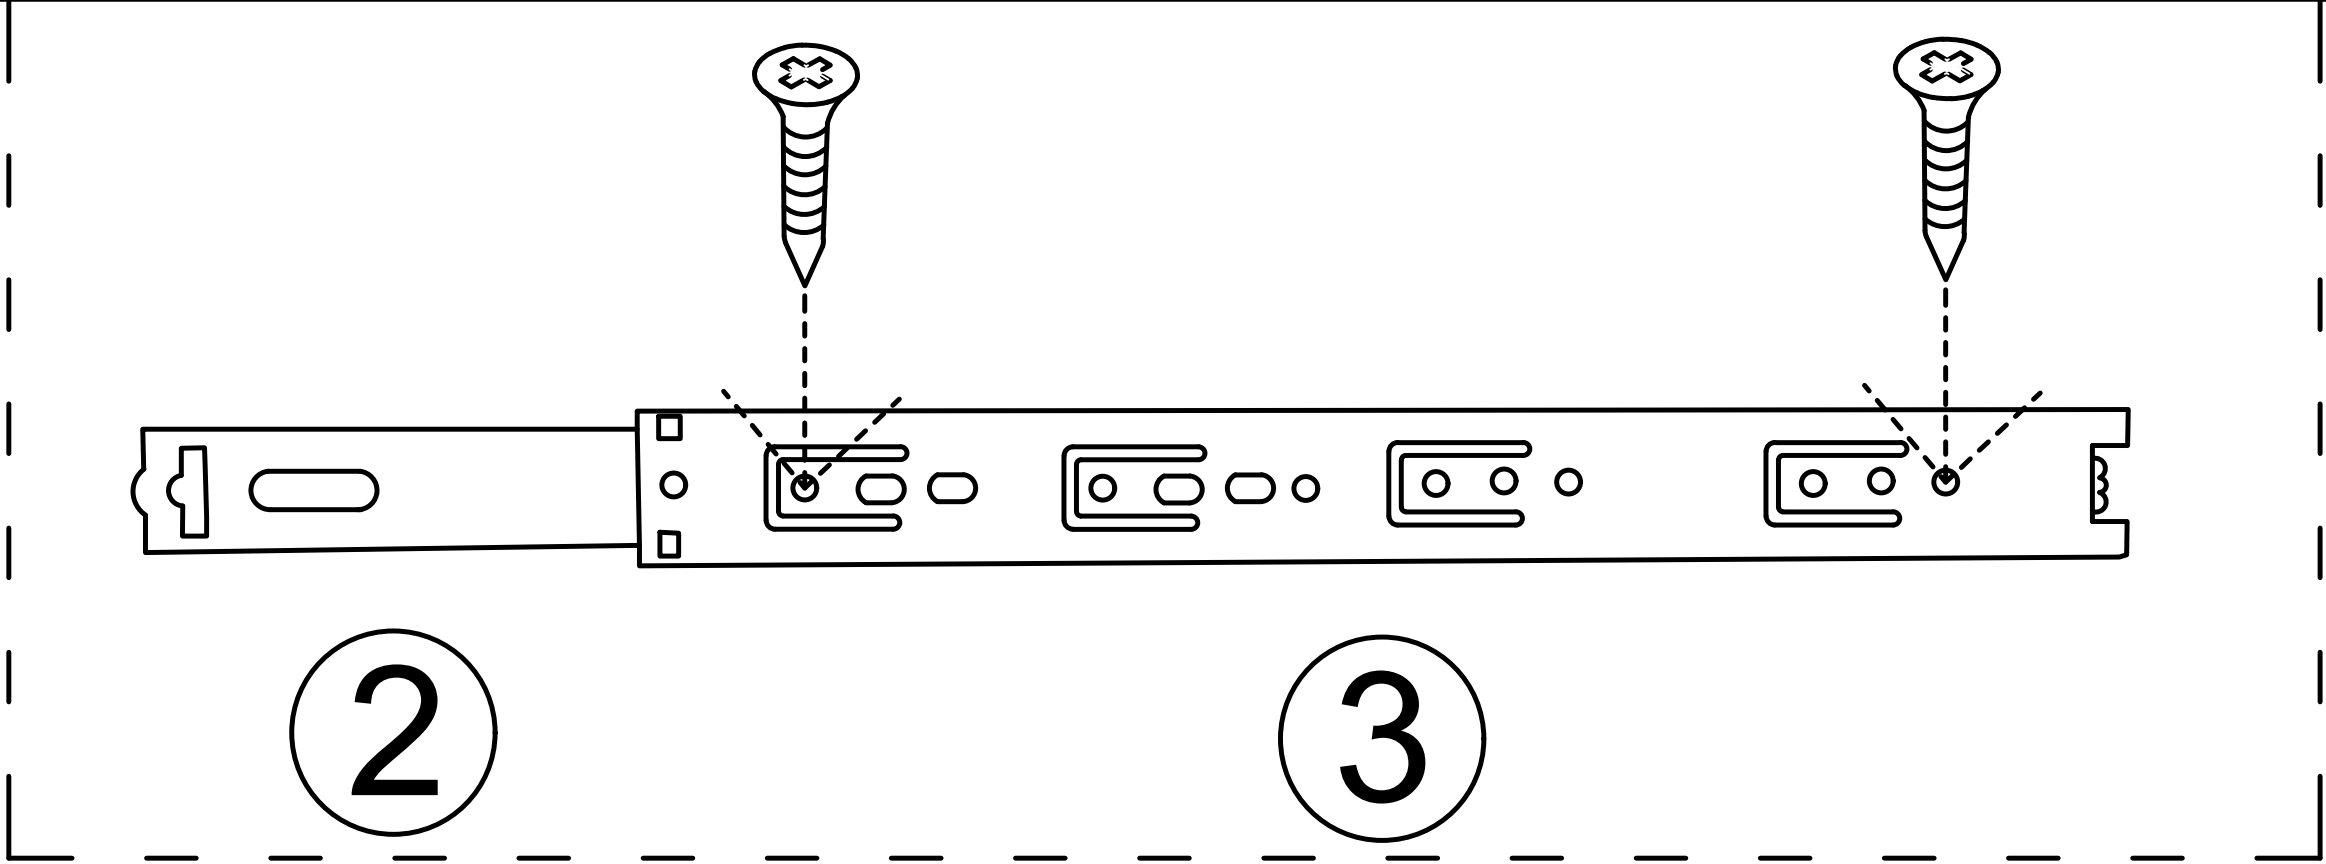





Step 24

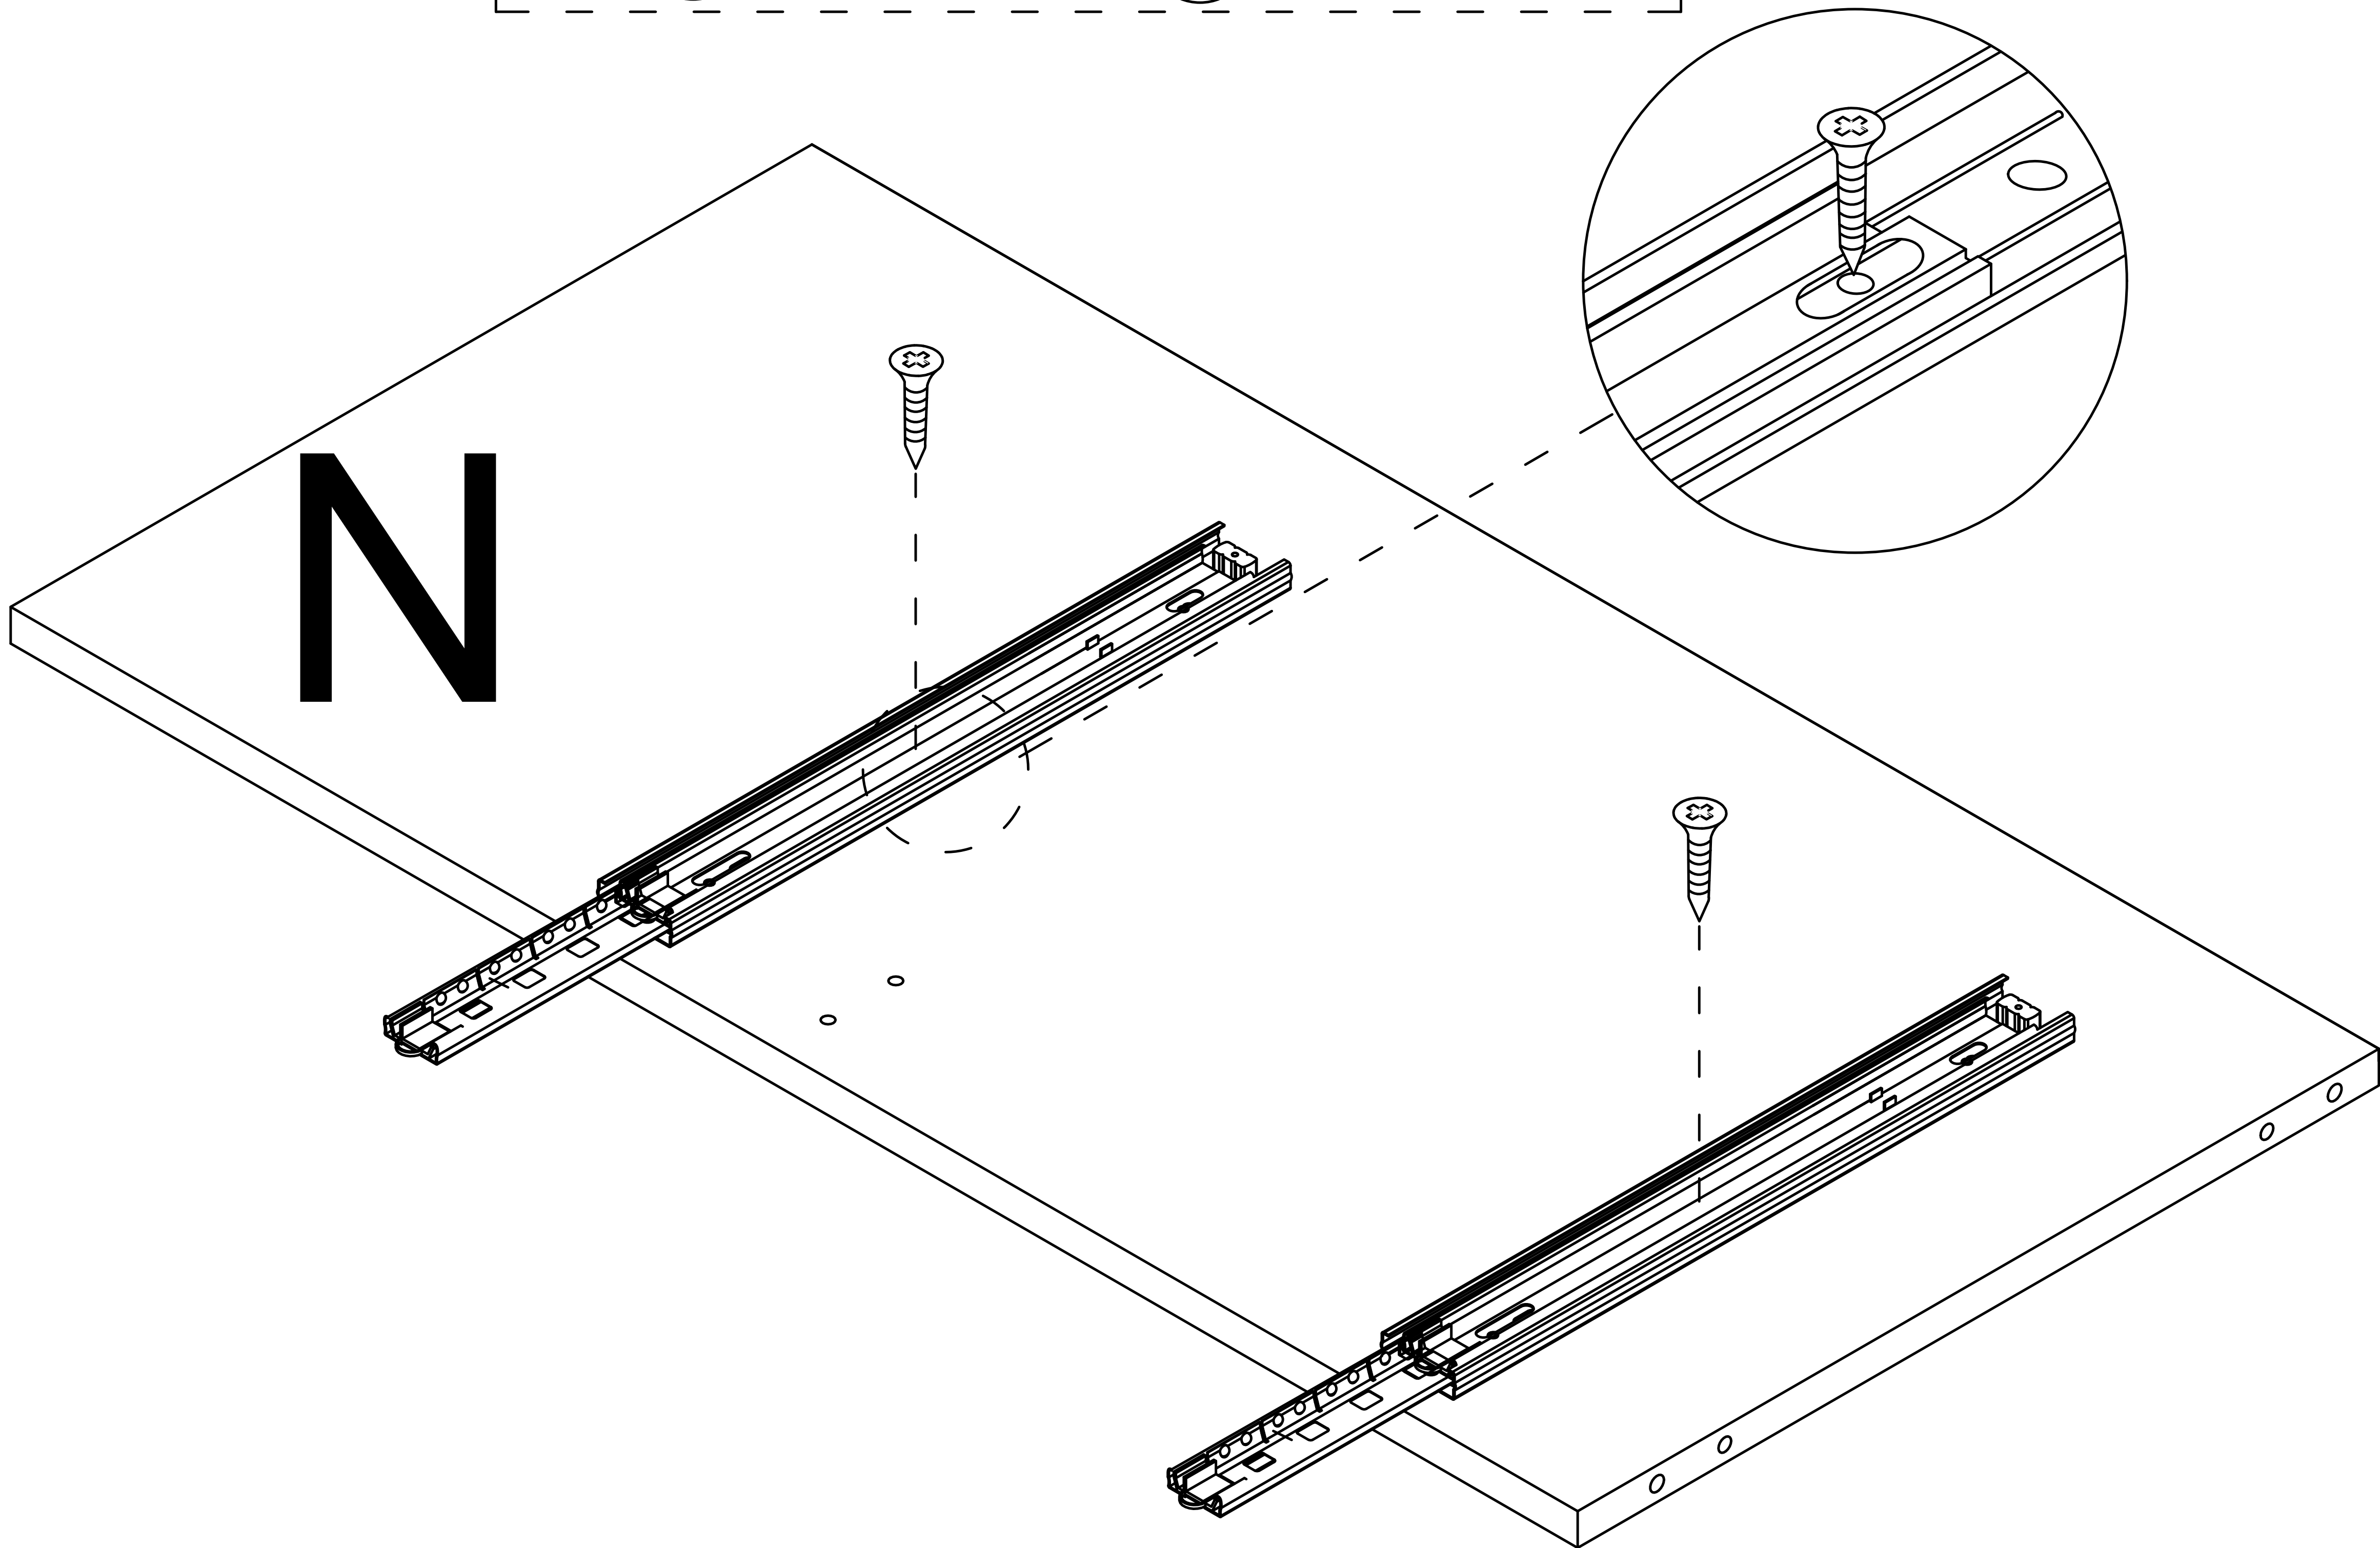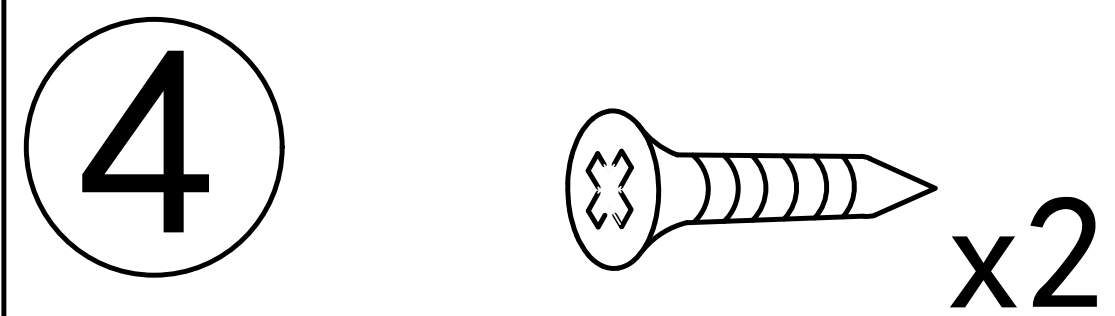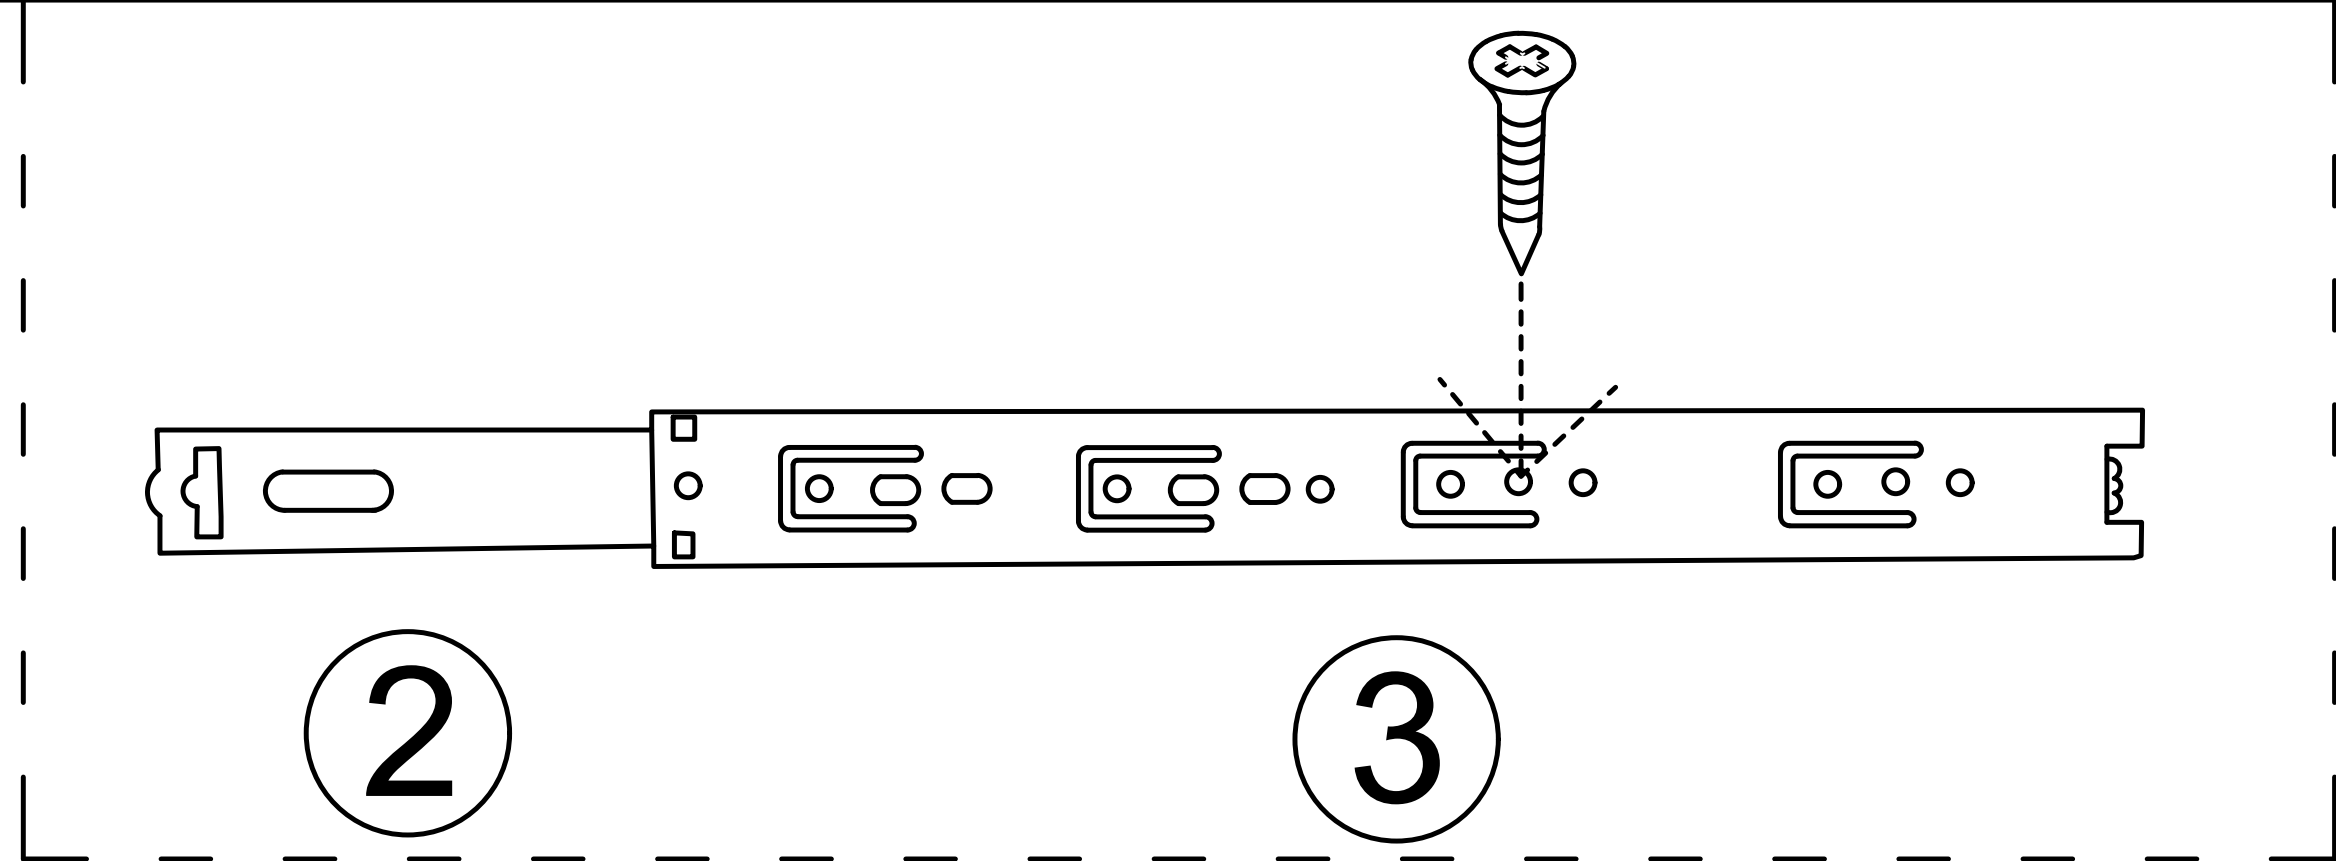



Step 25

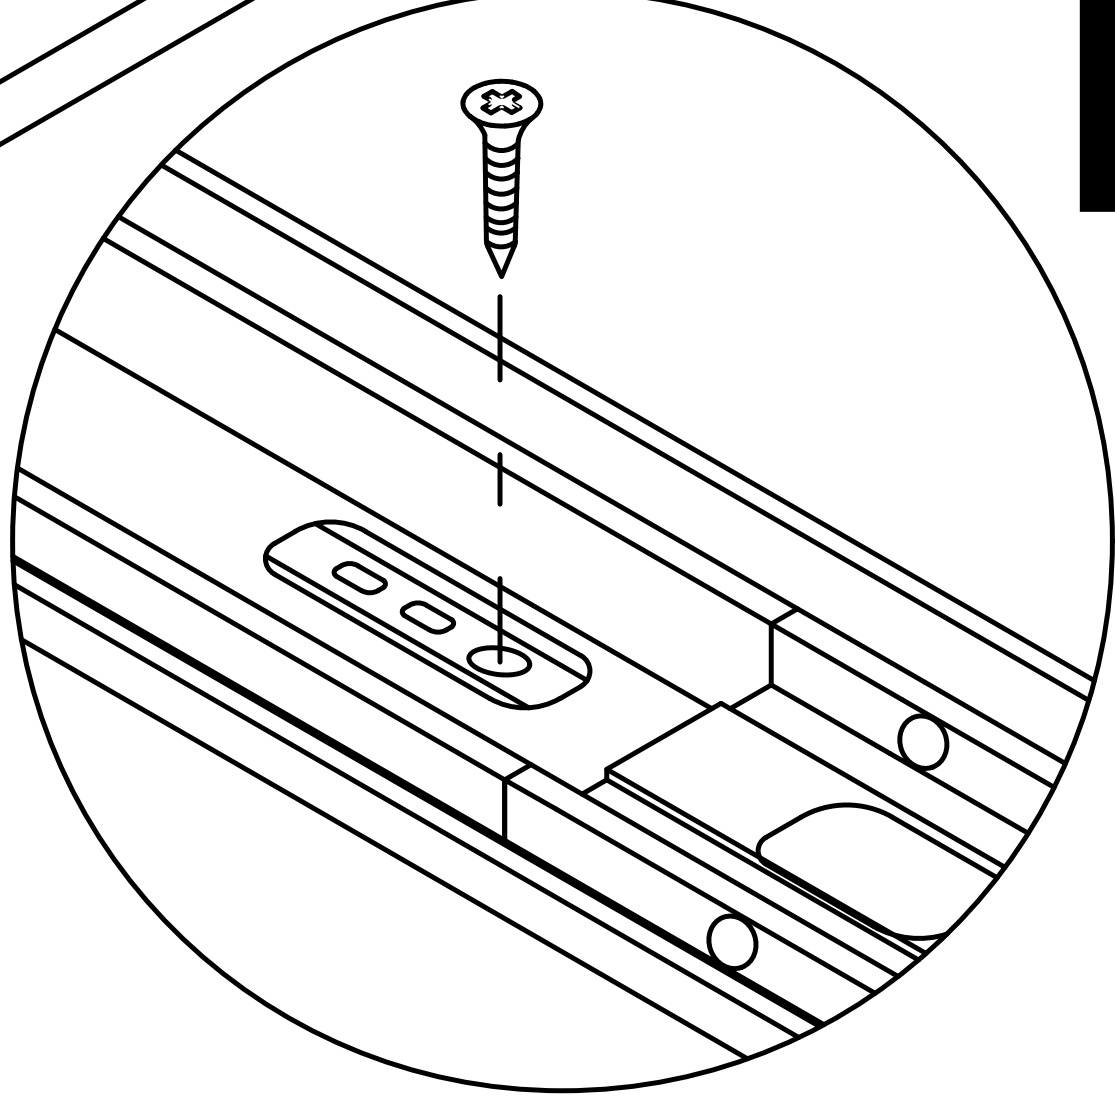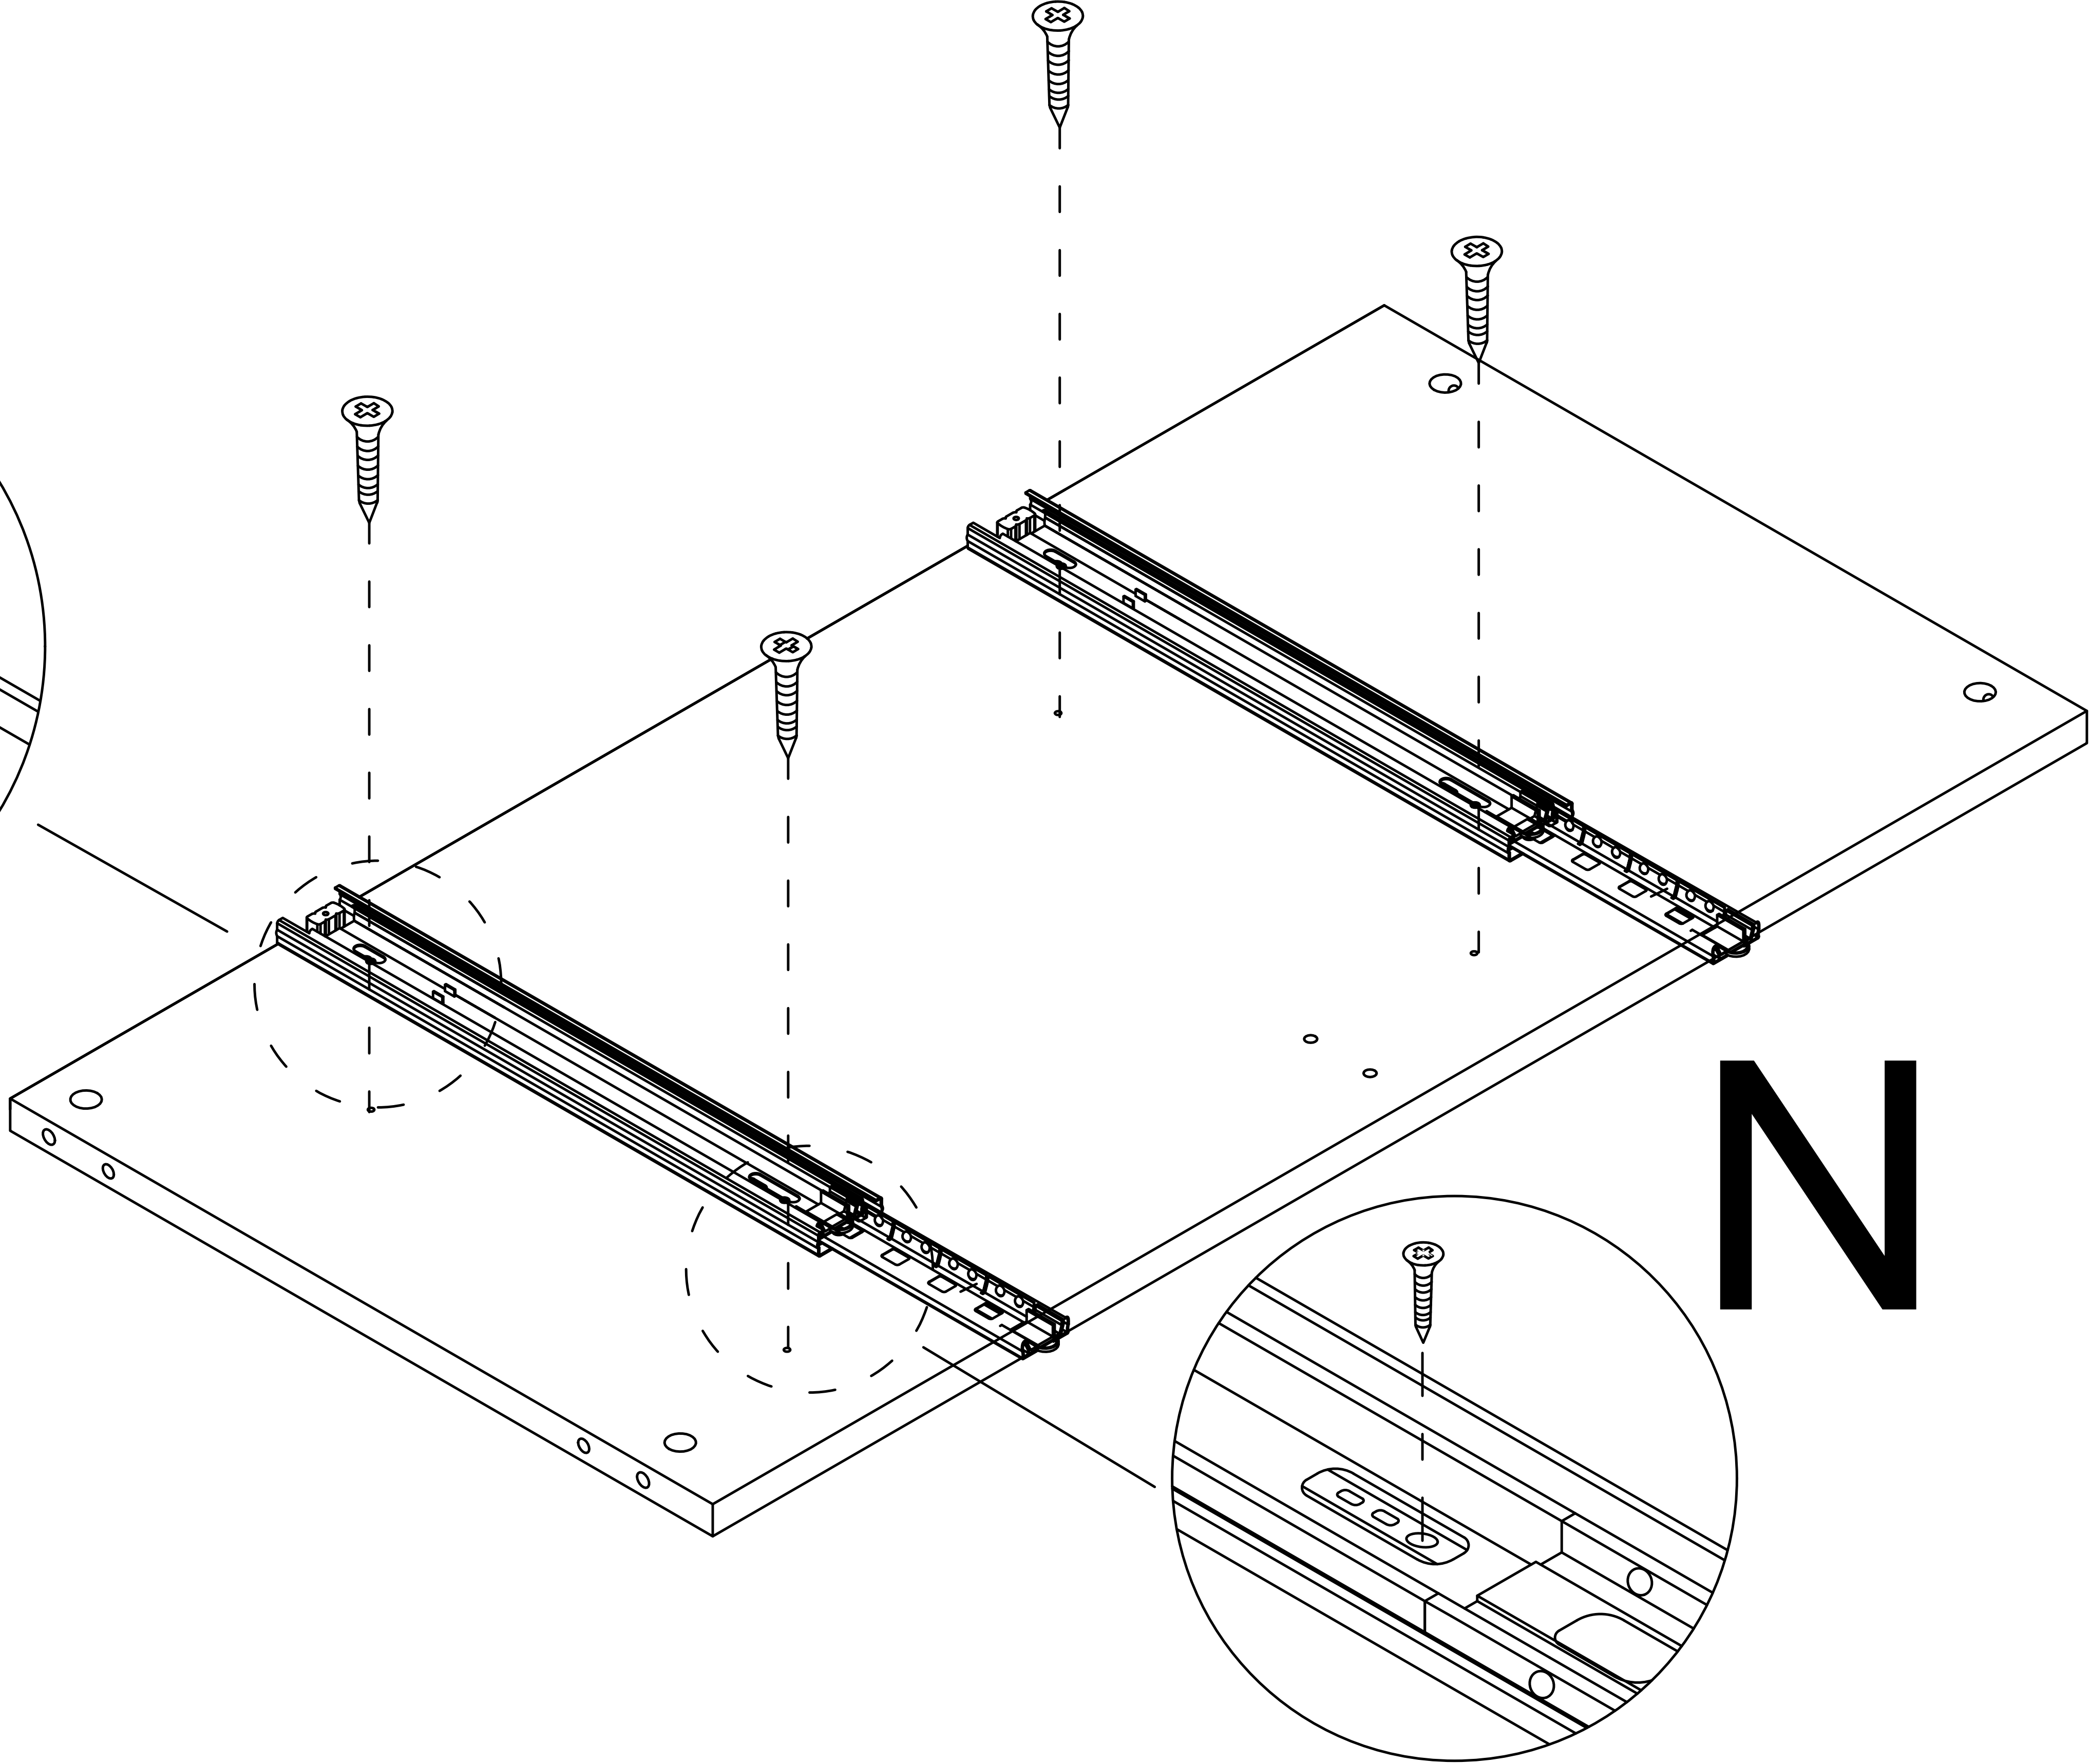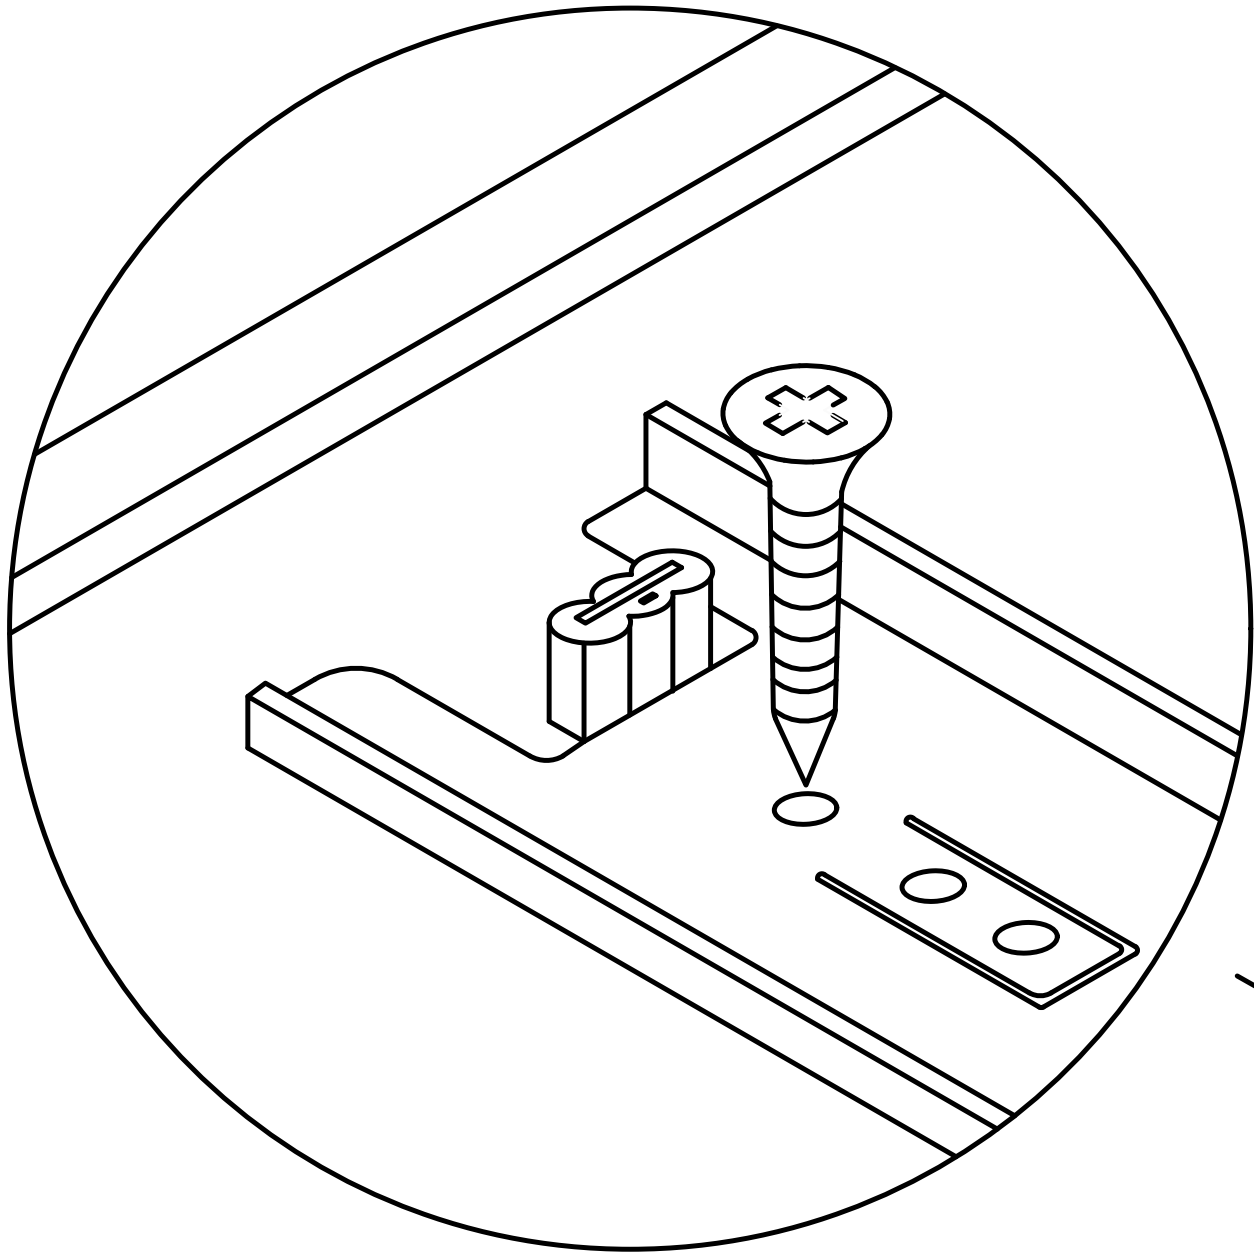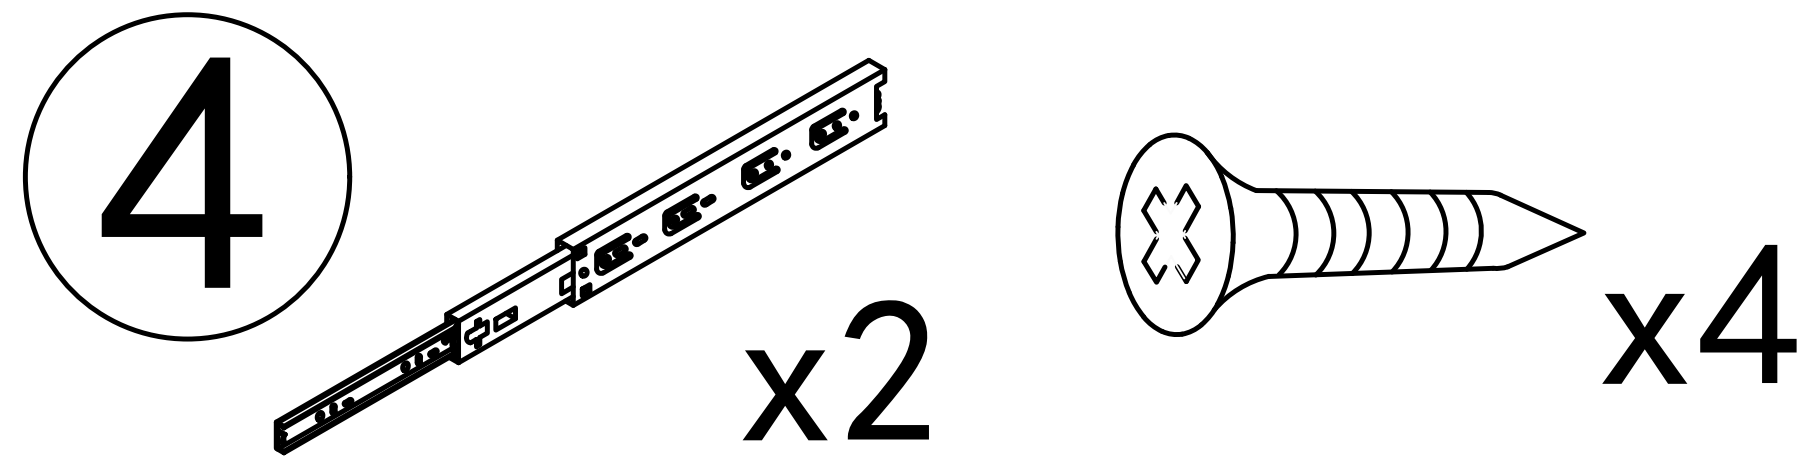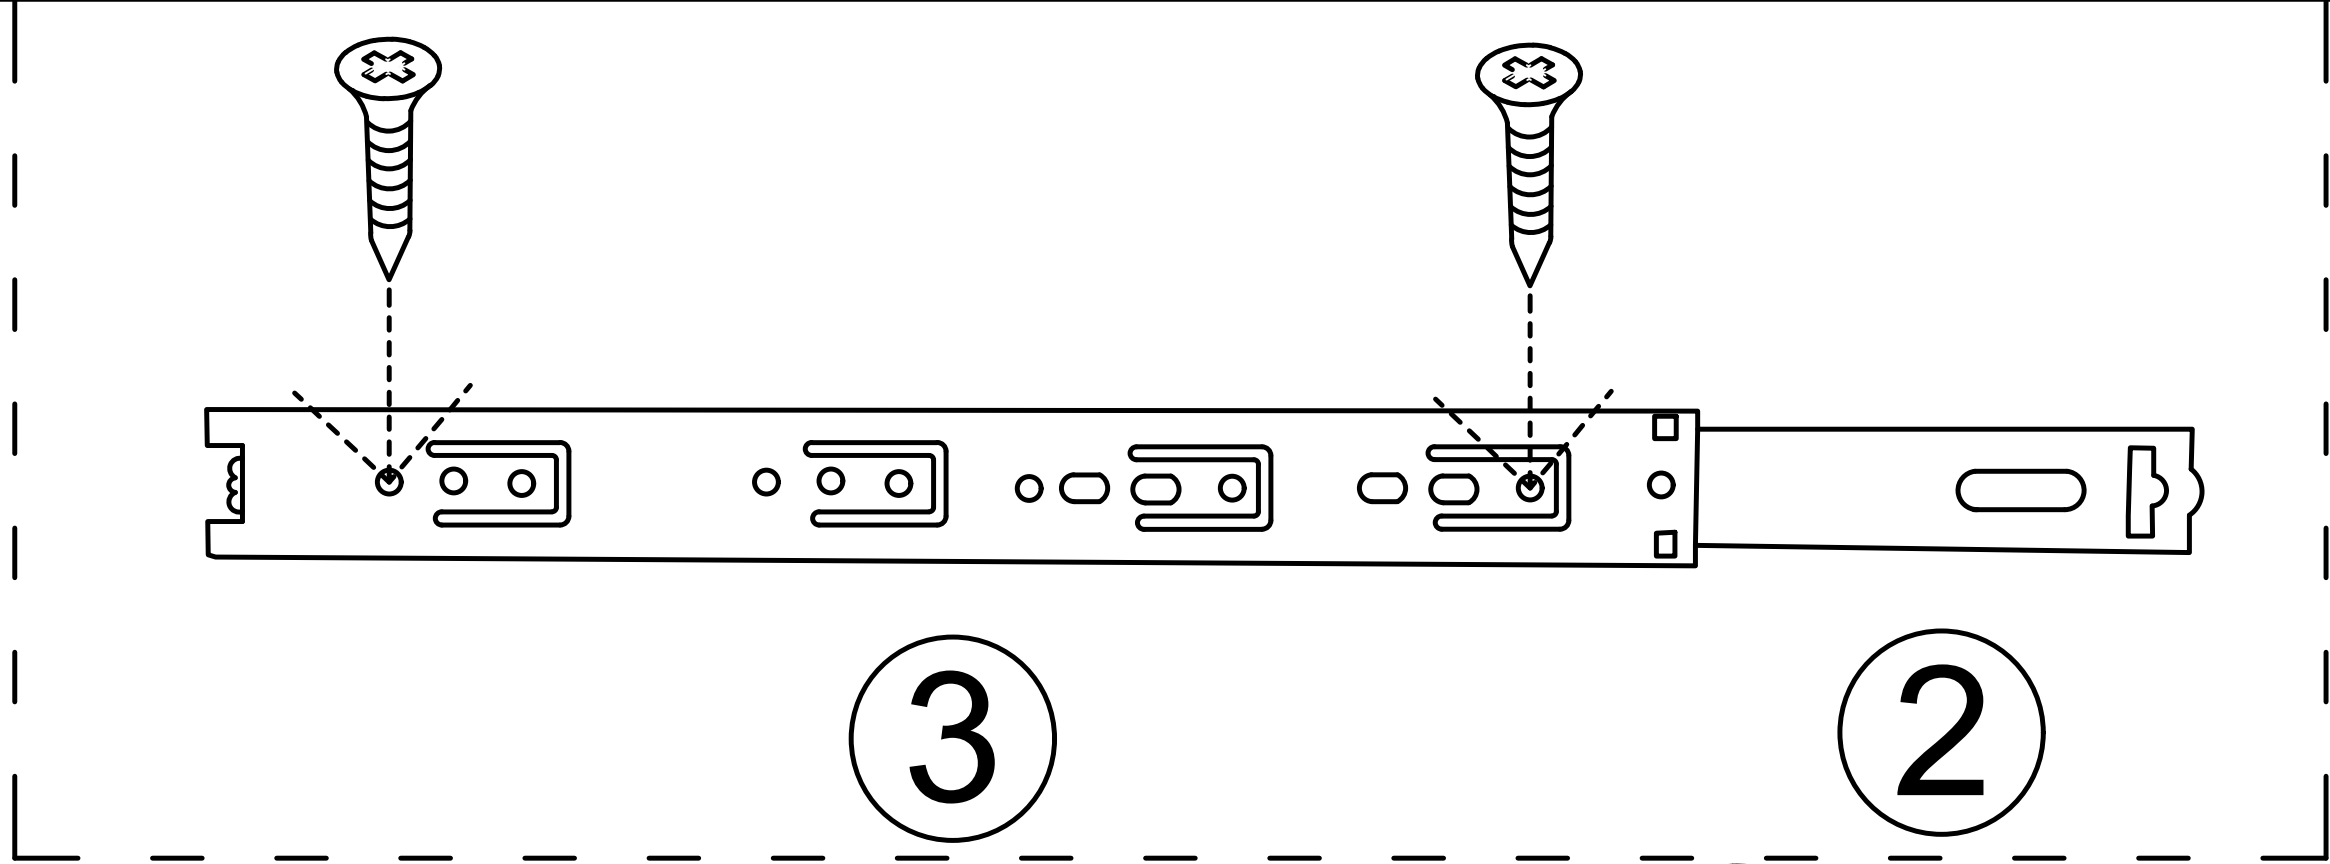



Step 26

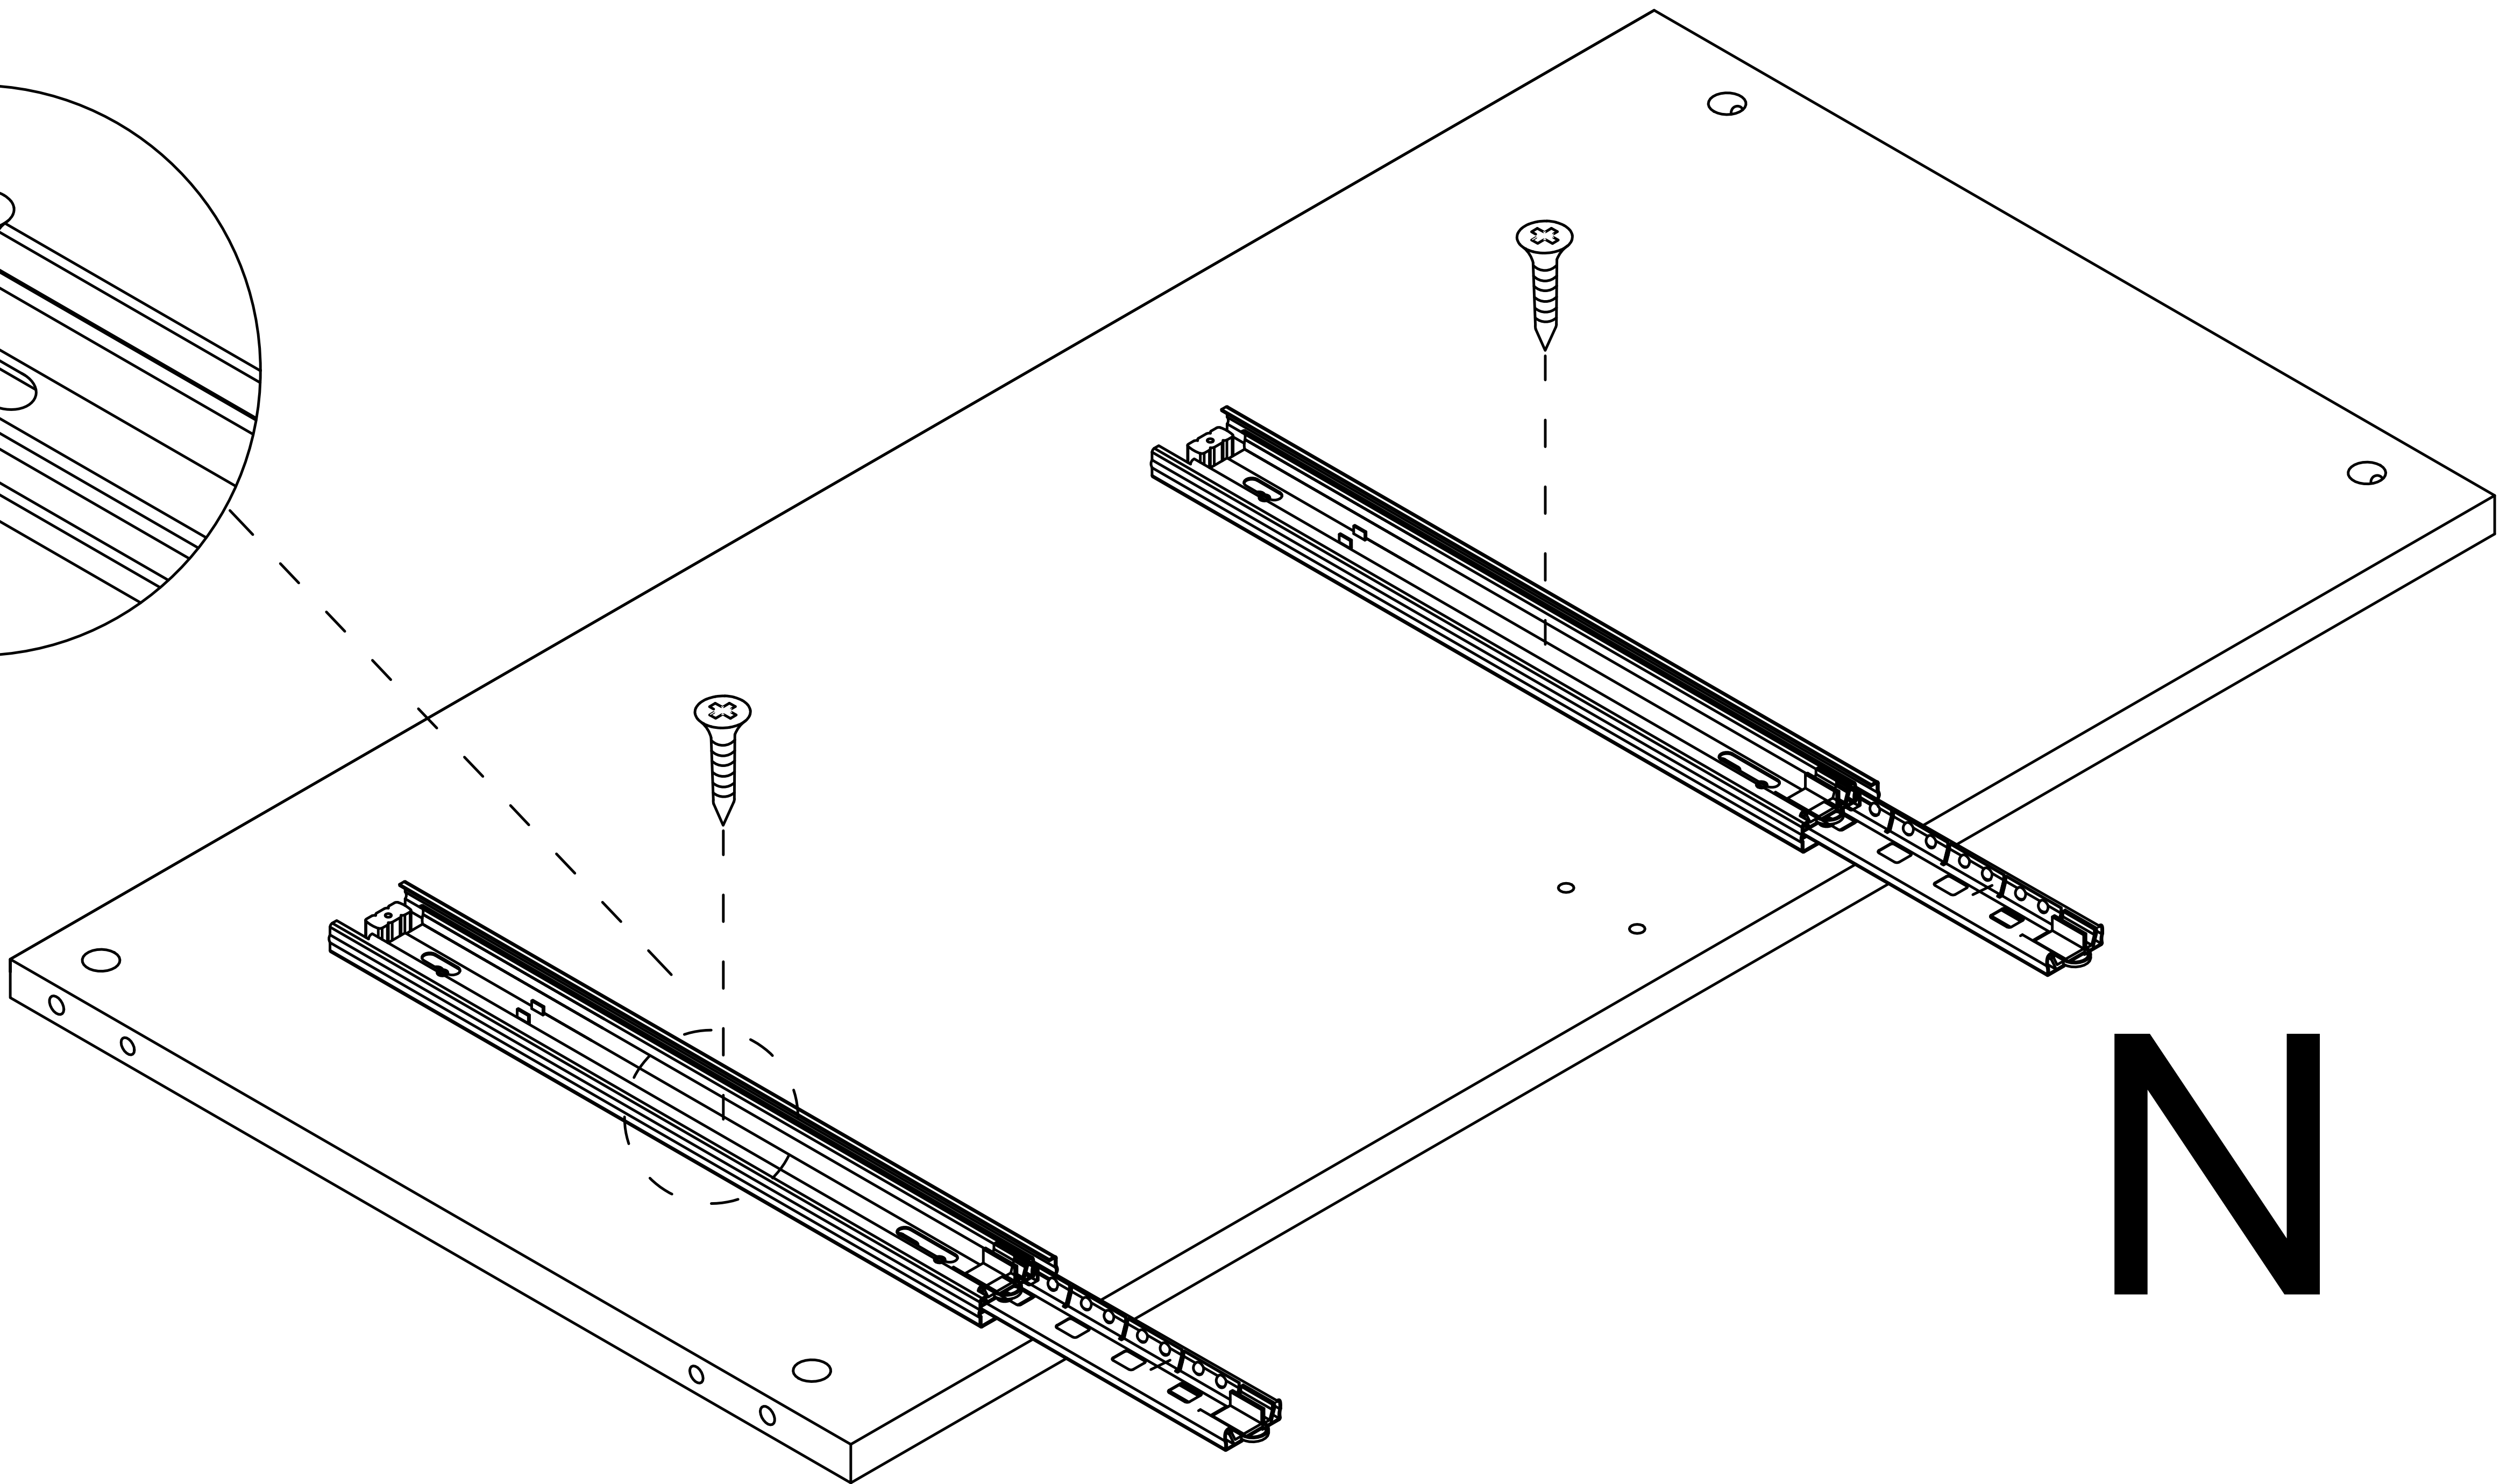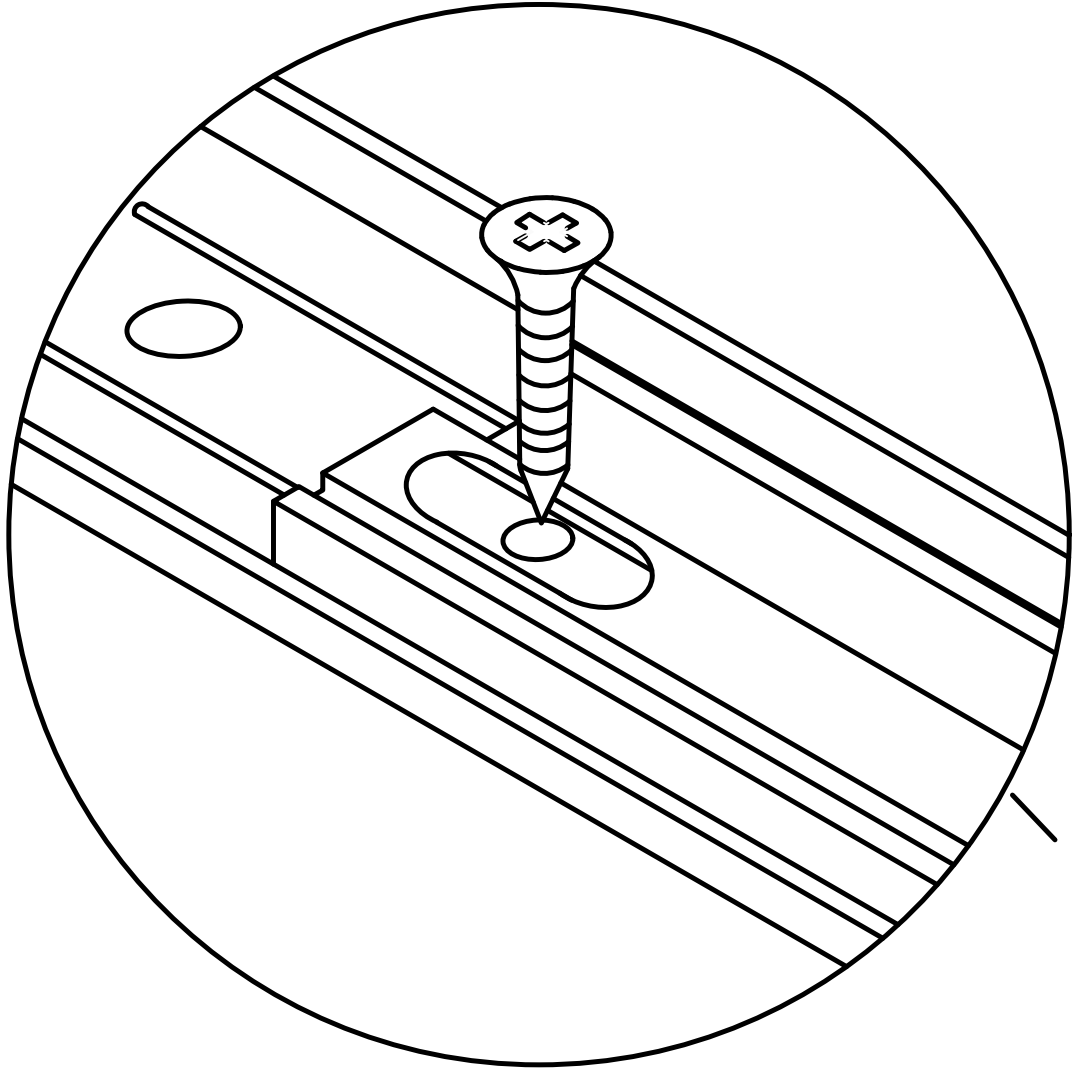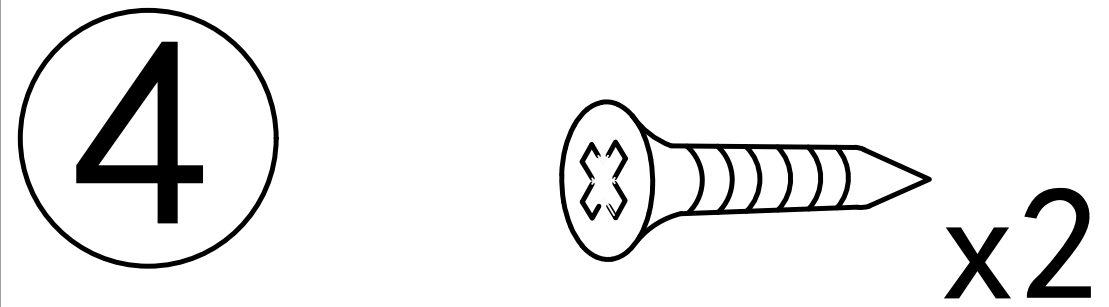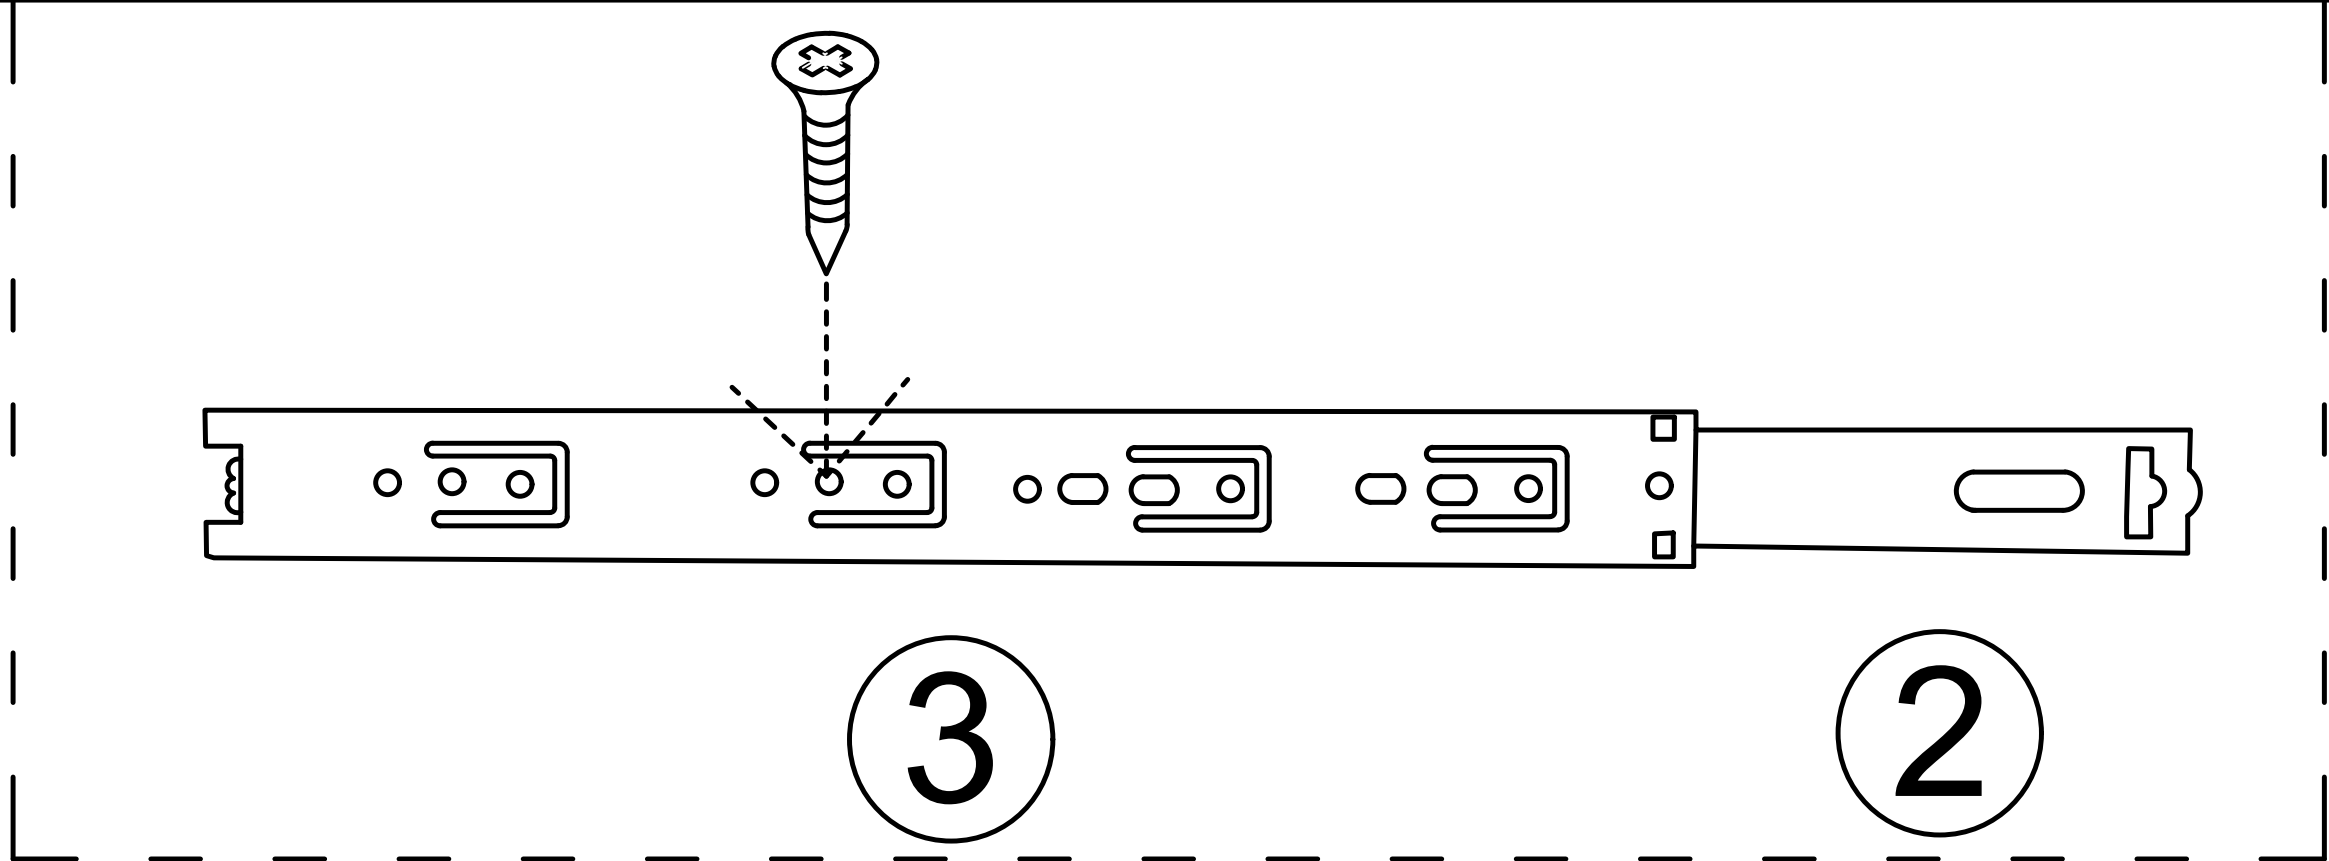


Step 27

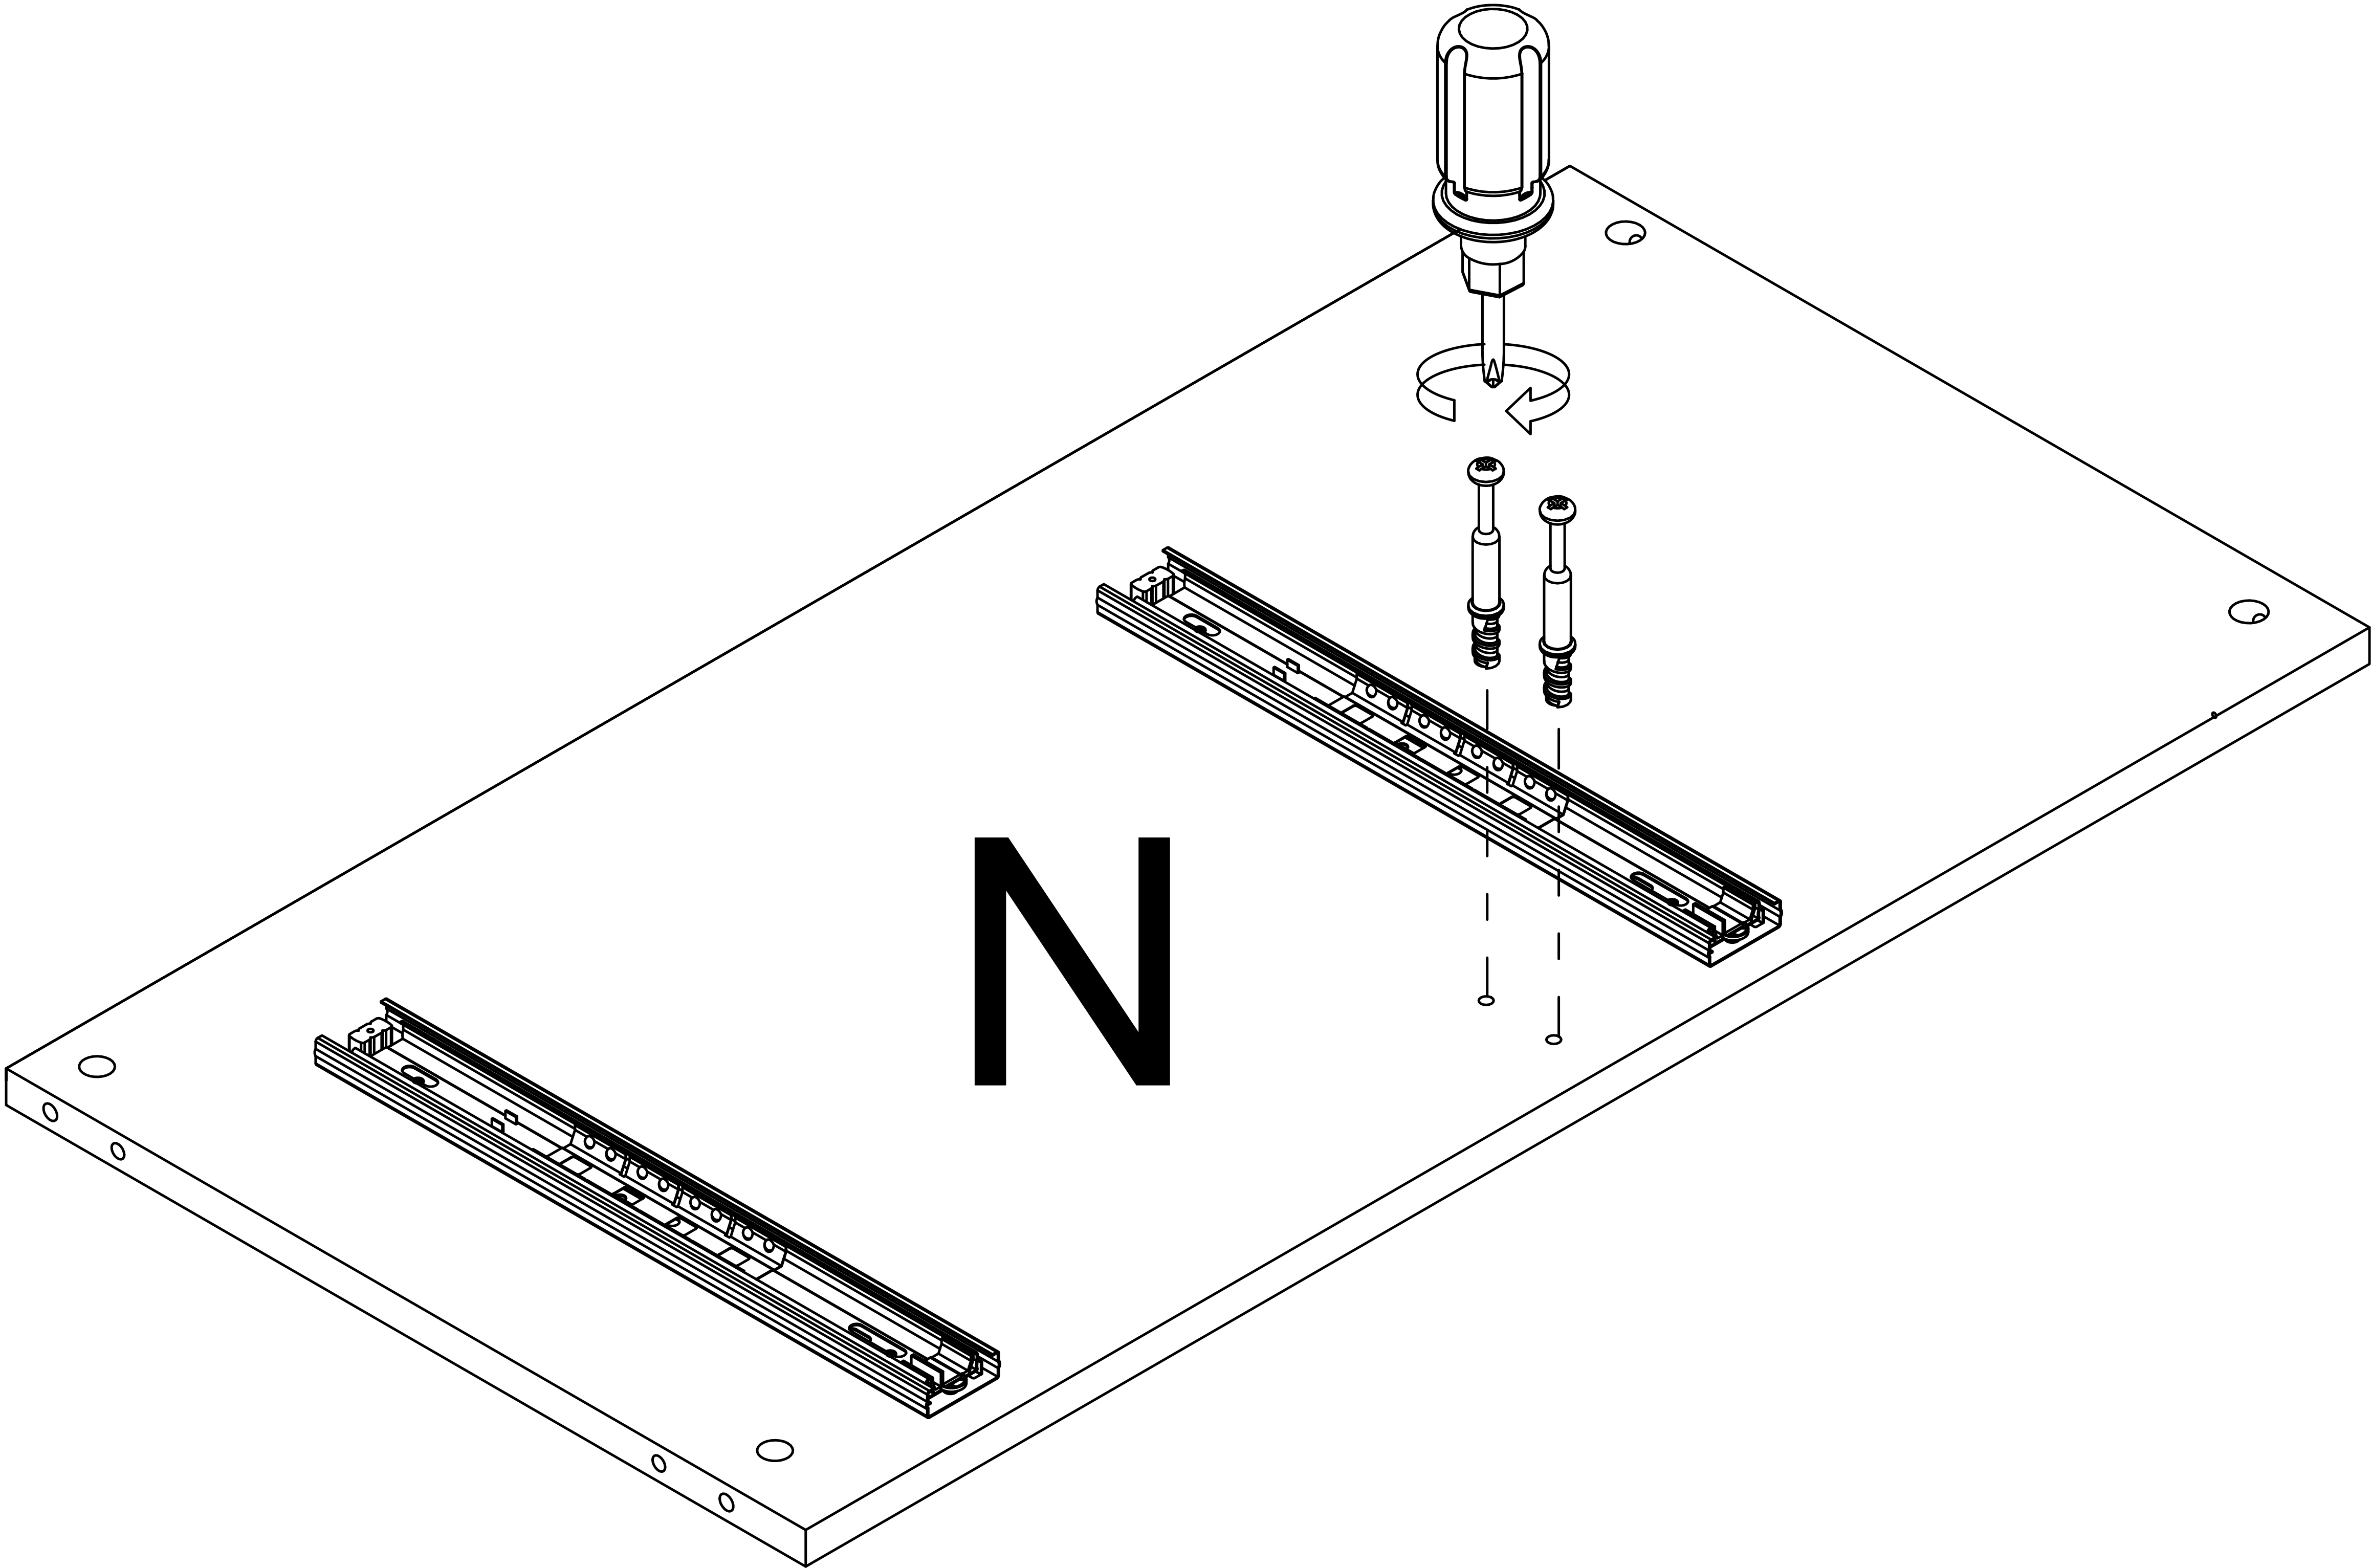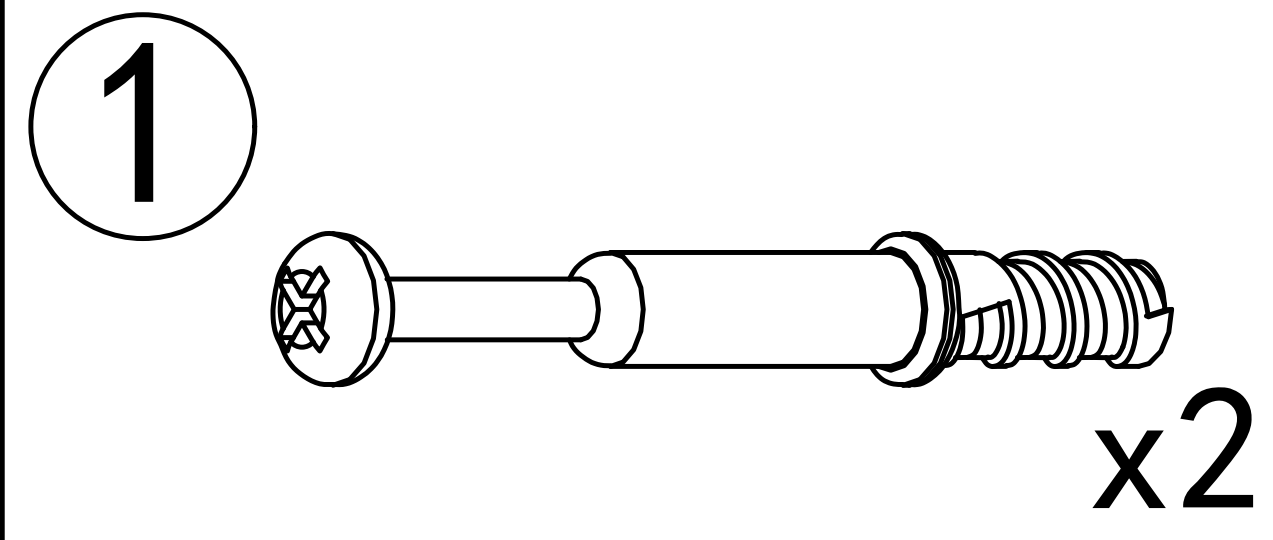


Step 28

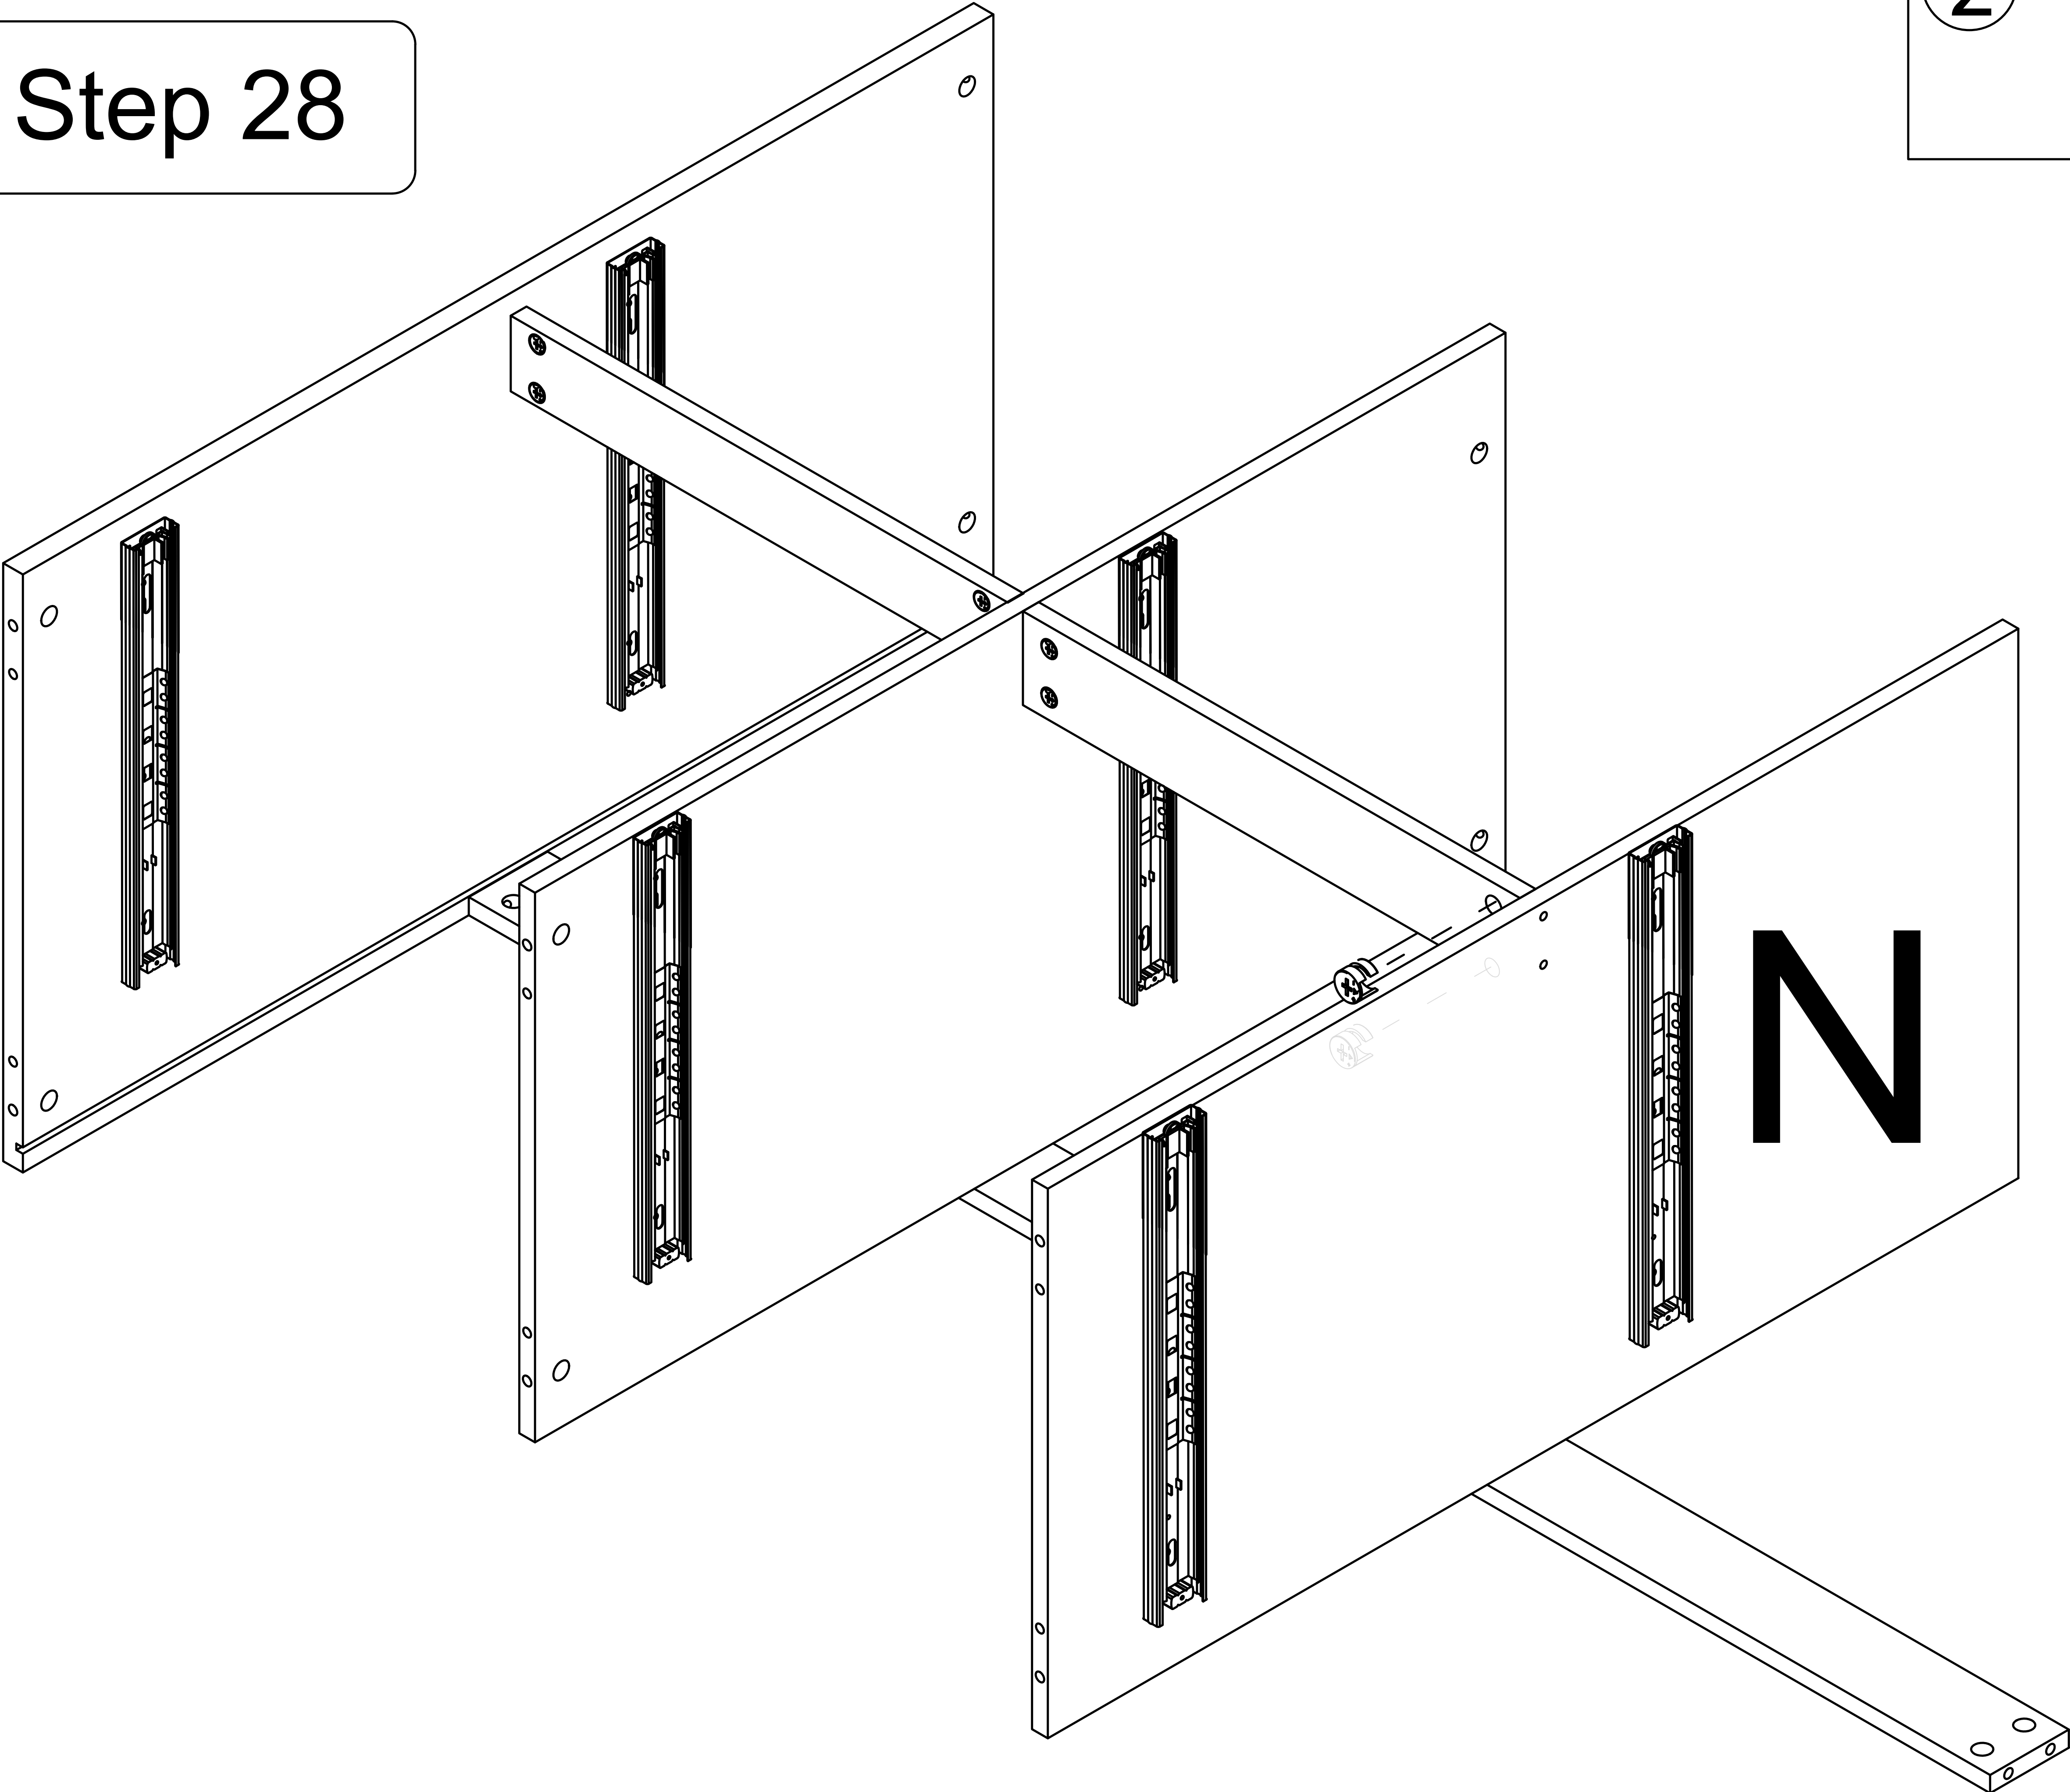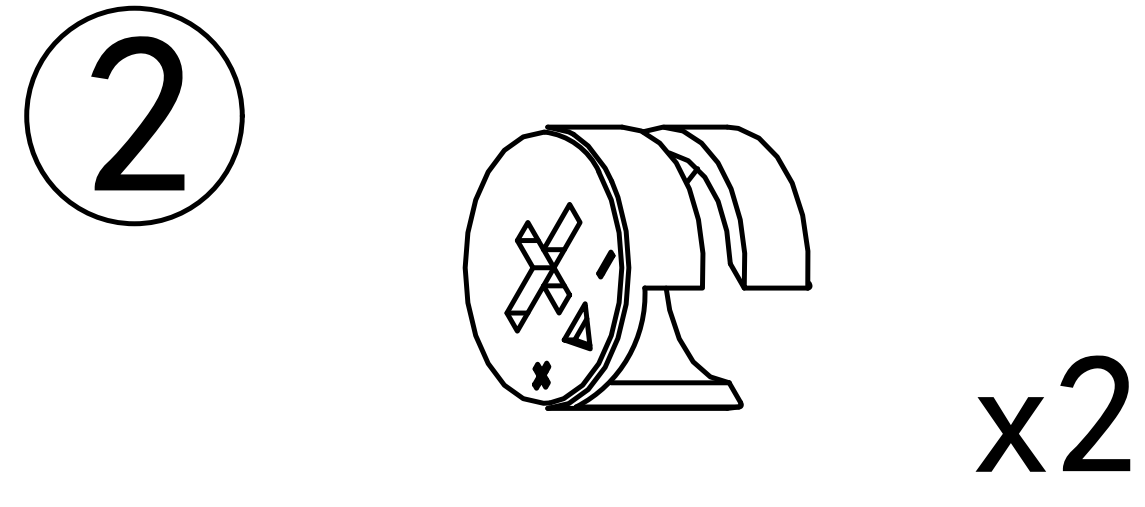



Step 29

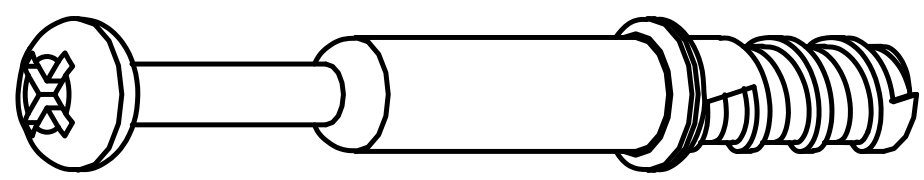1  x2





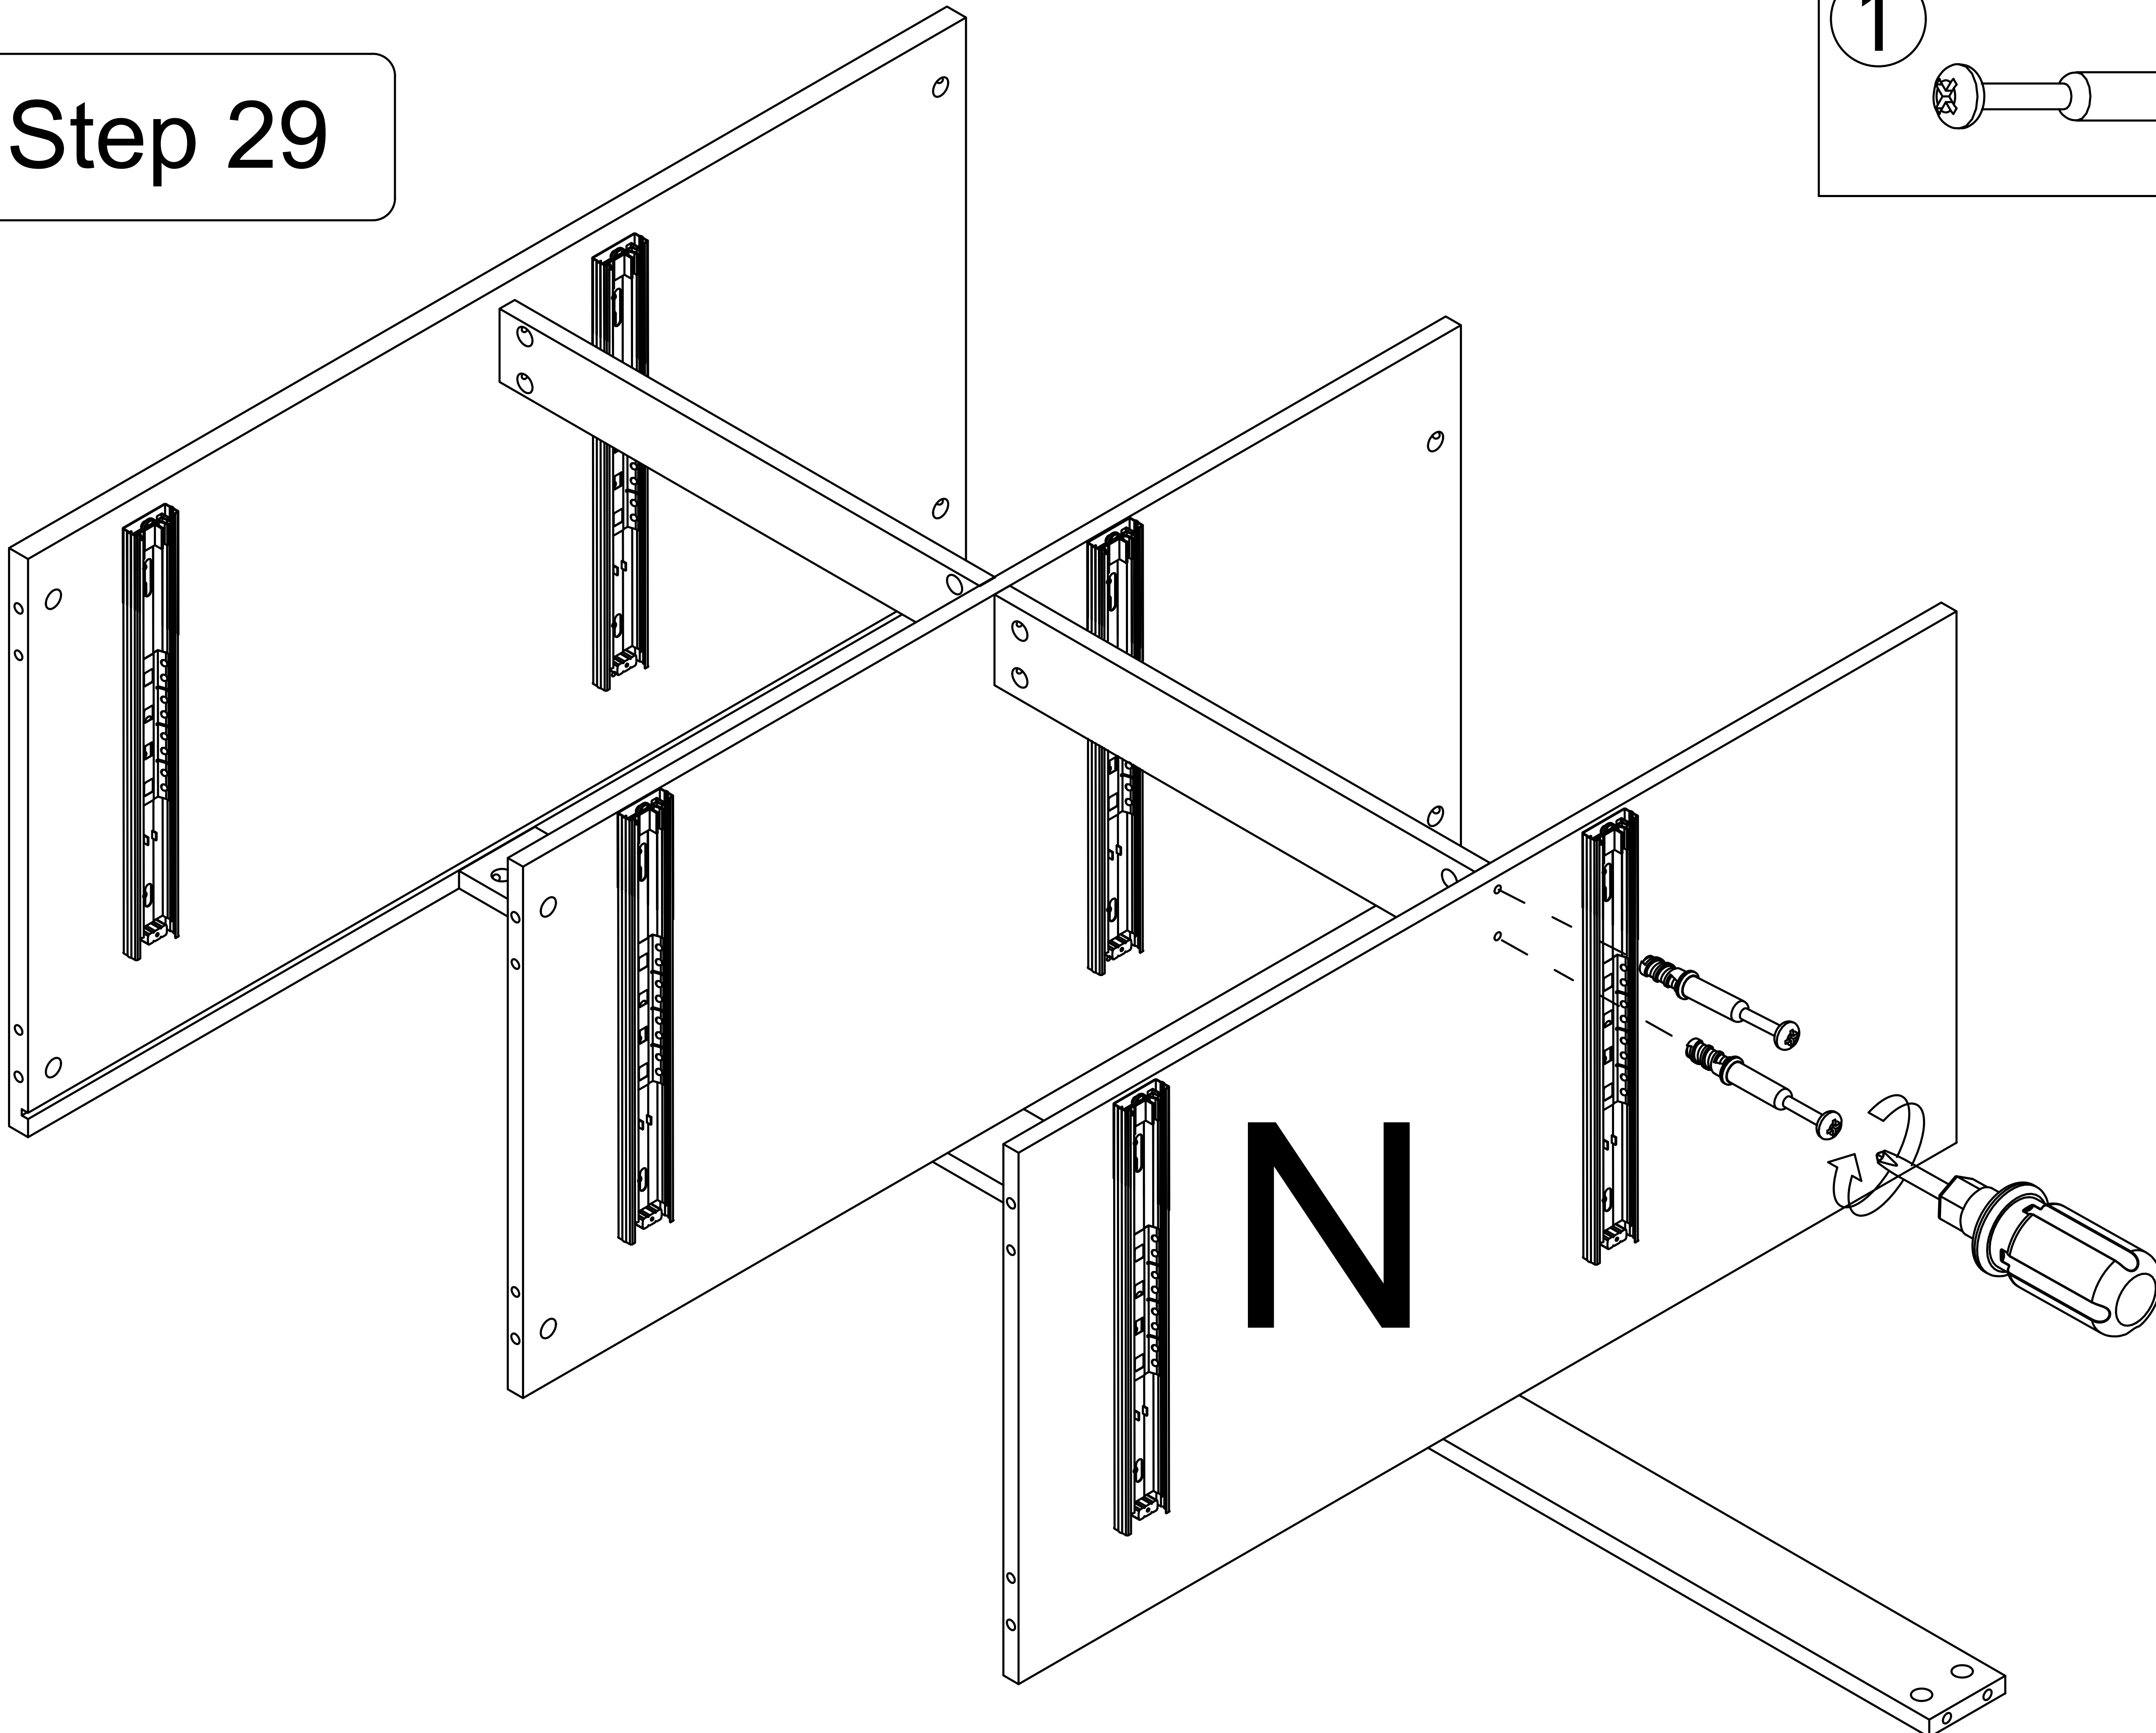


Step 30

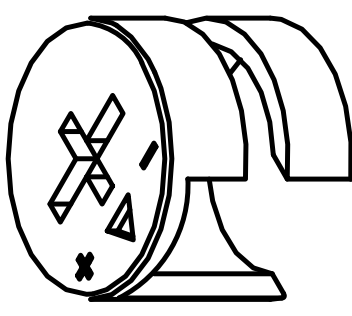2  x2



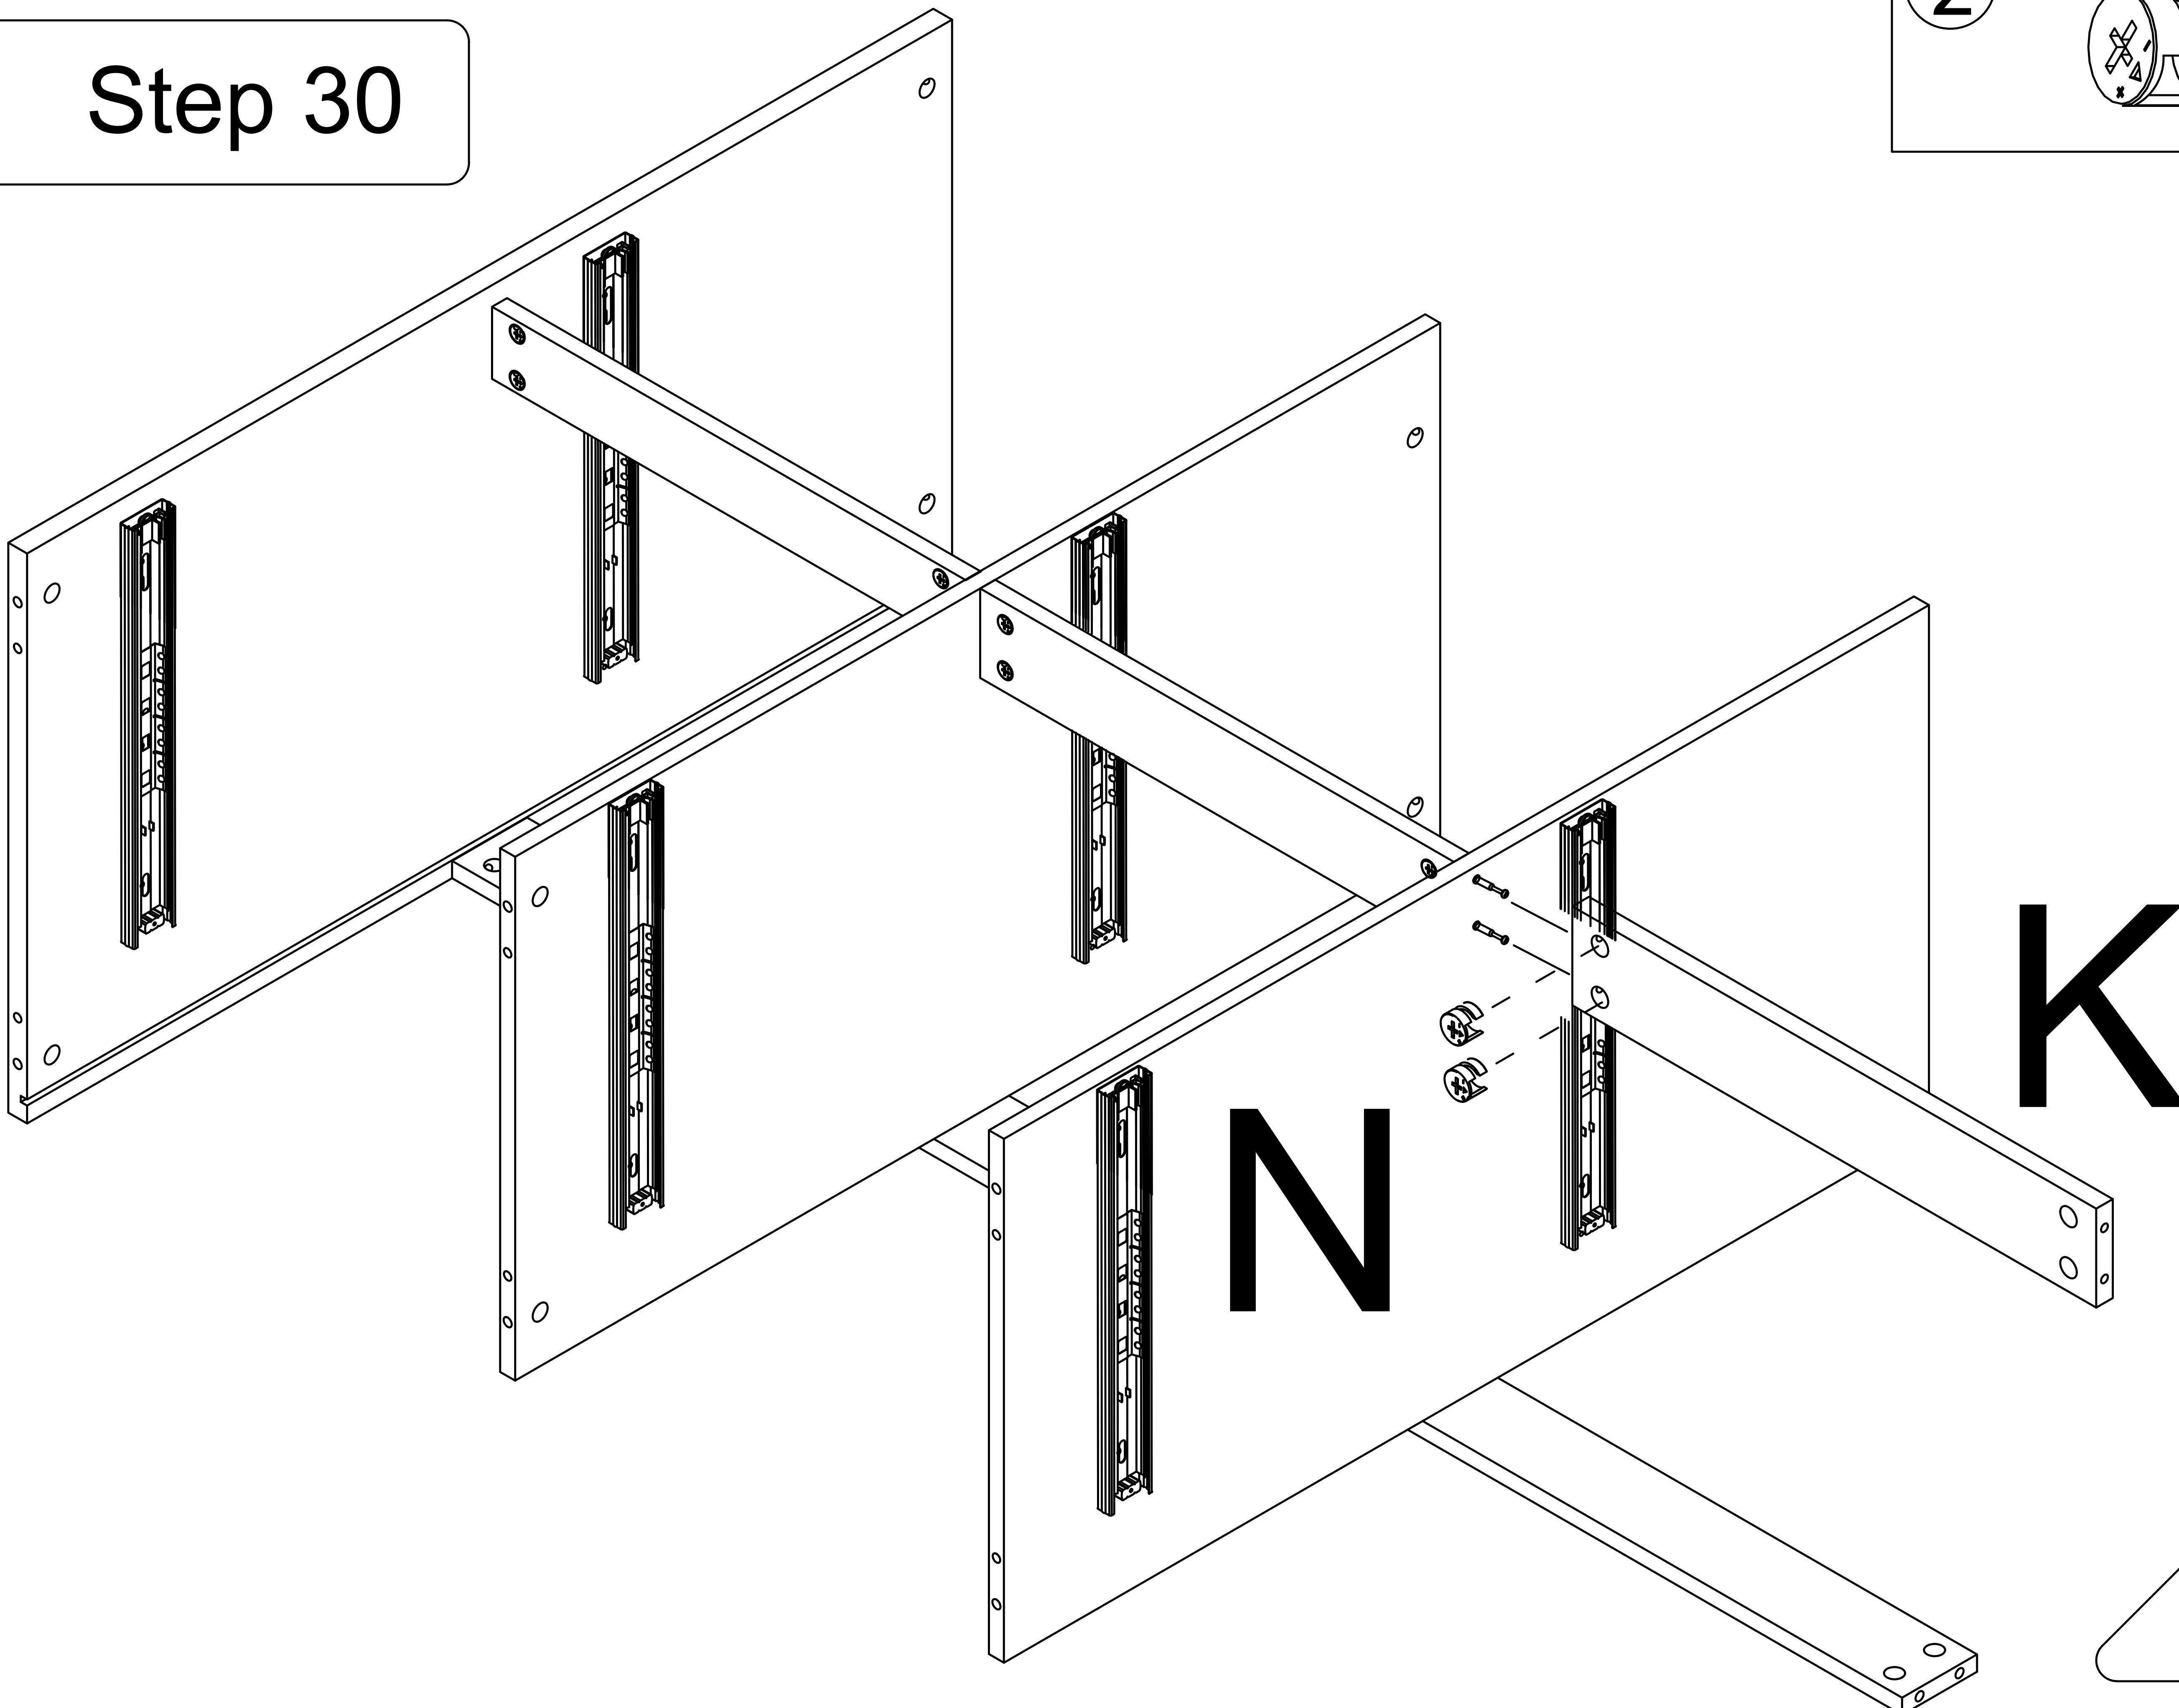


Step 31

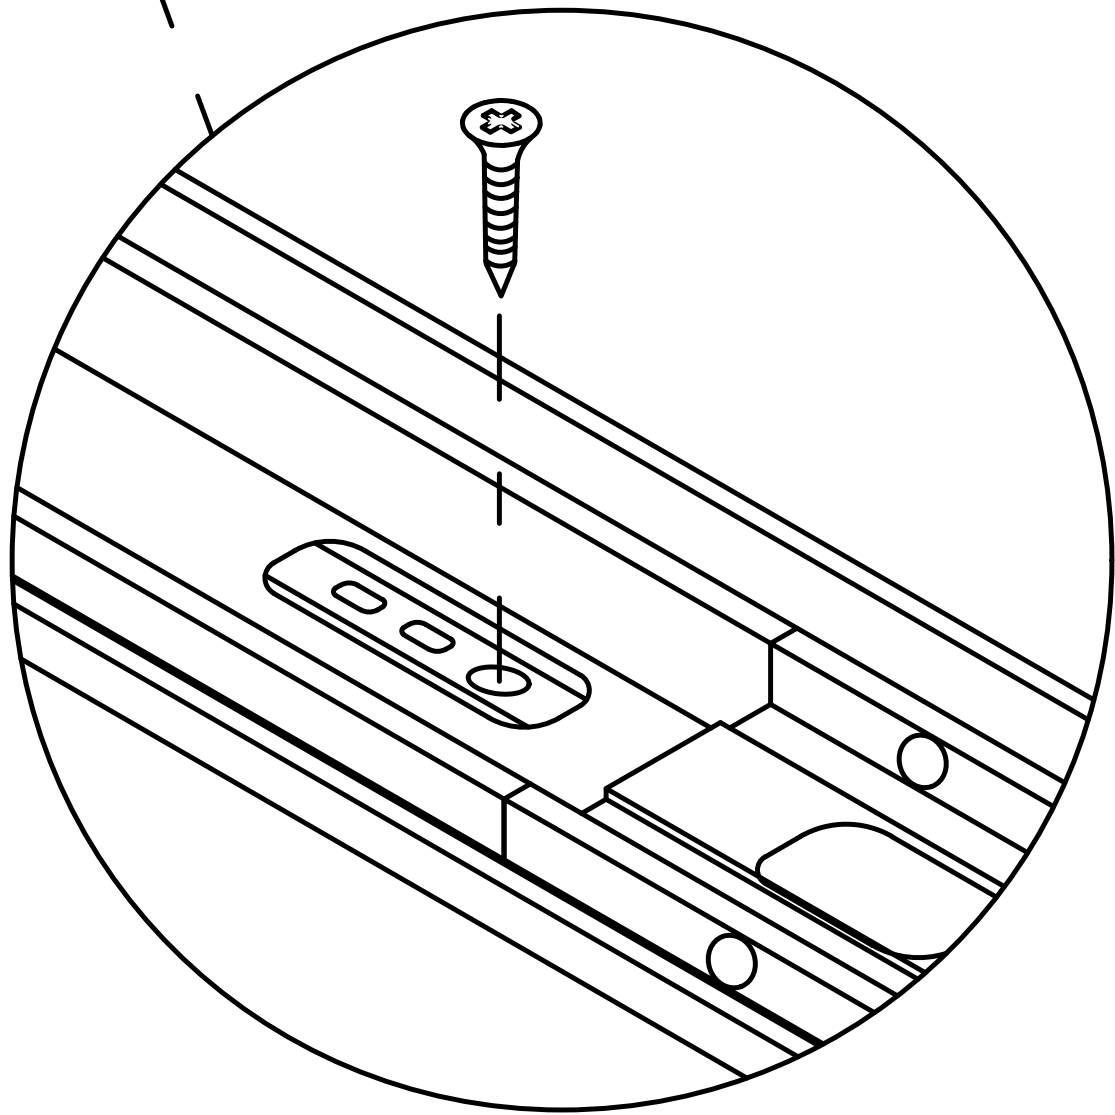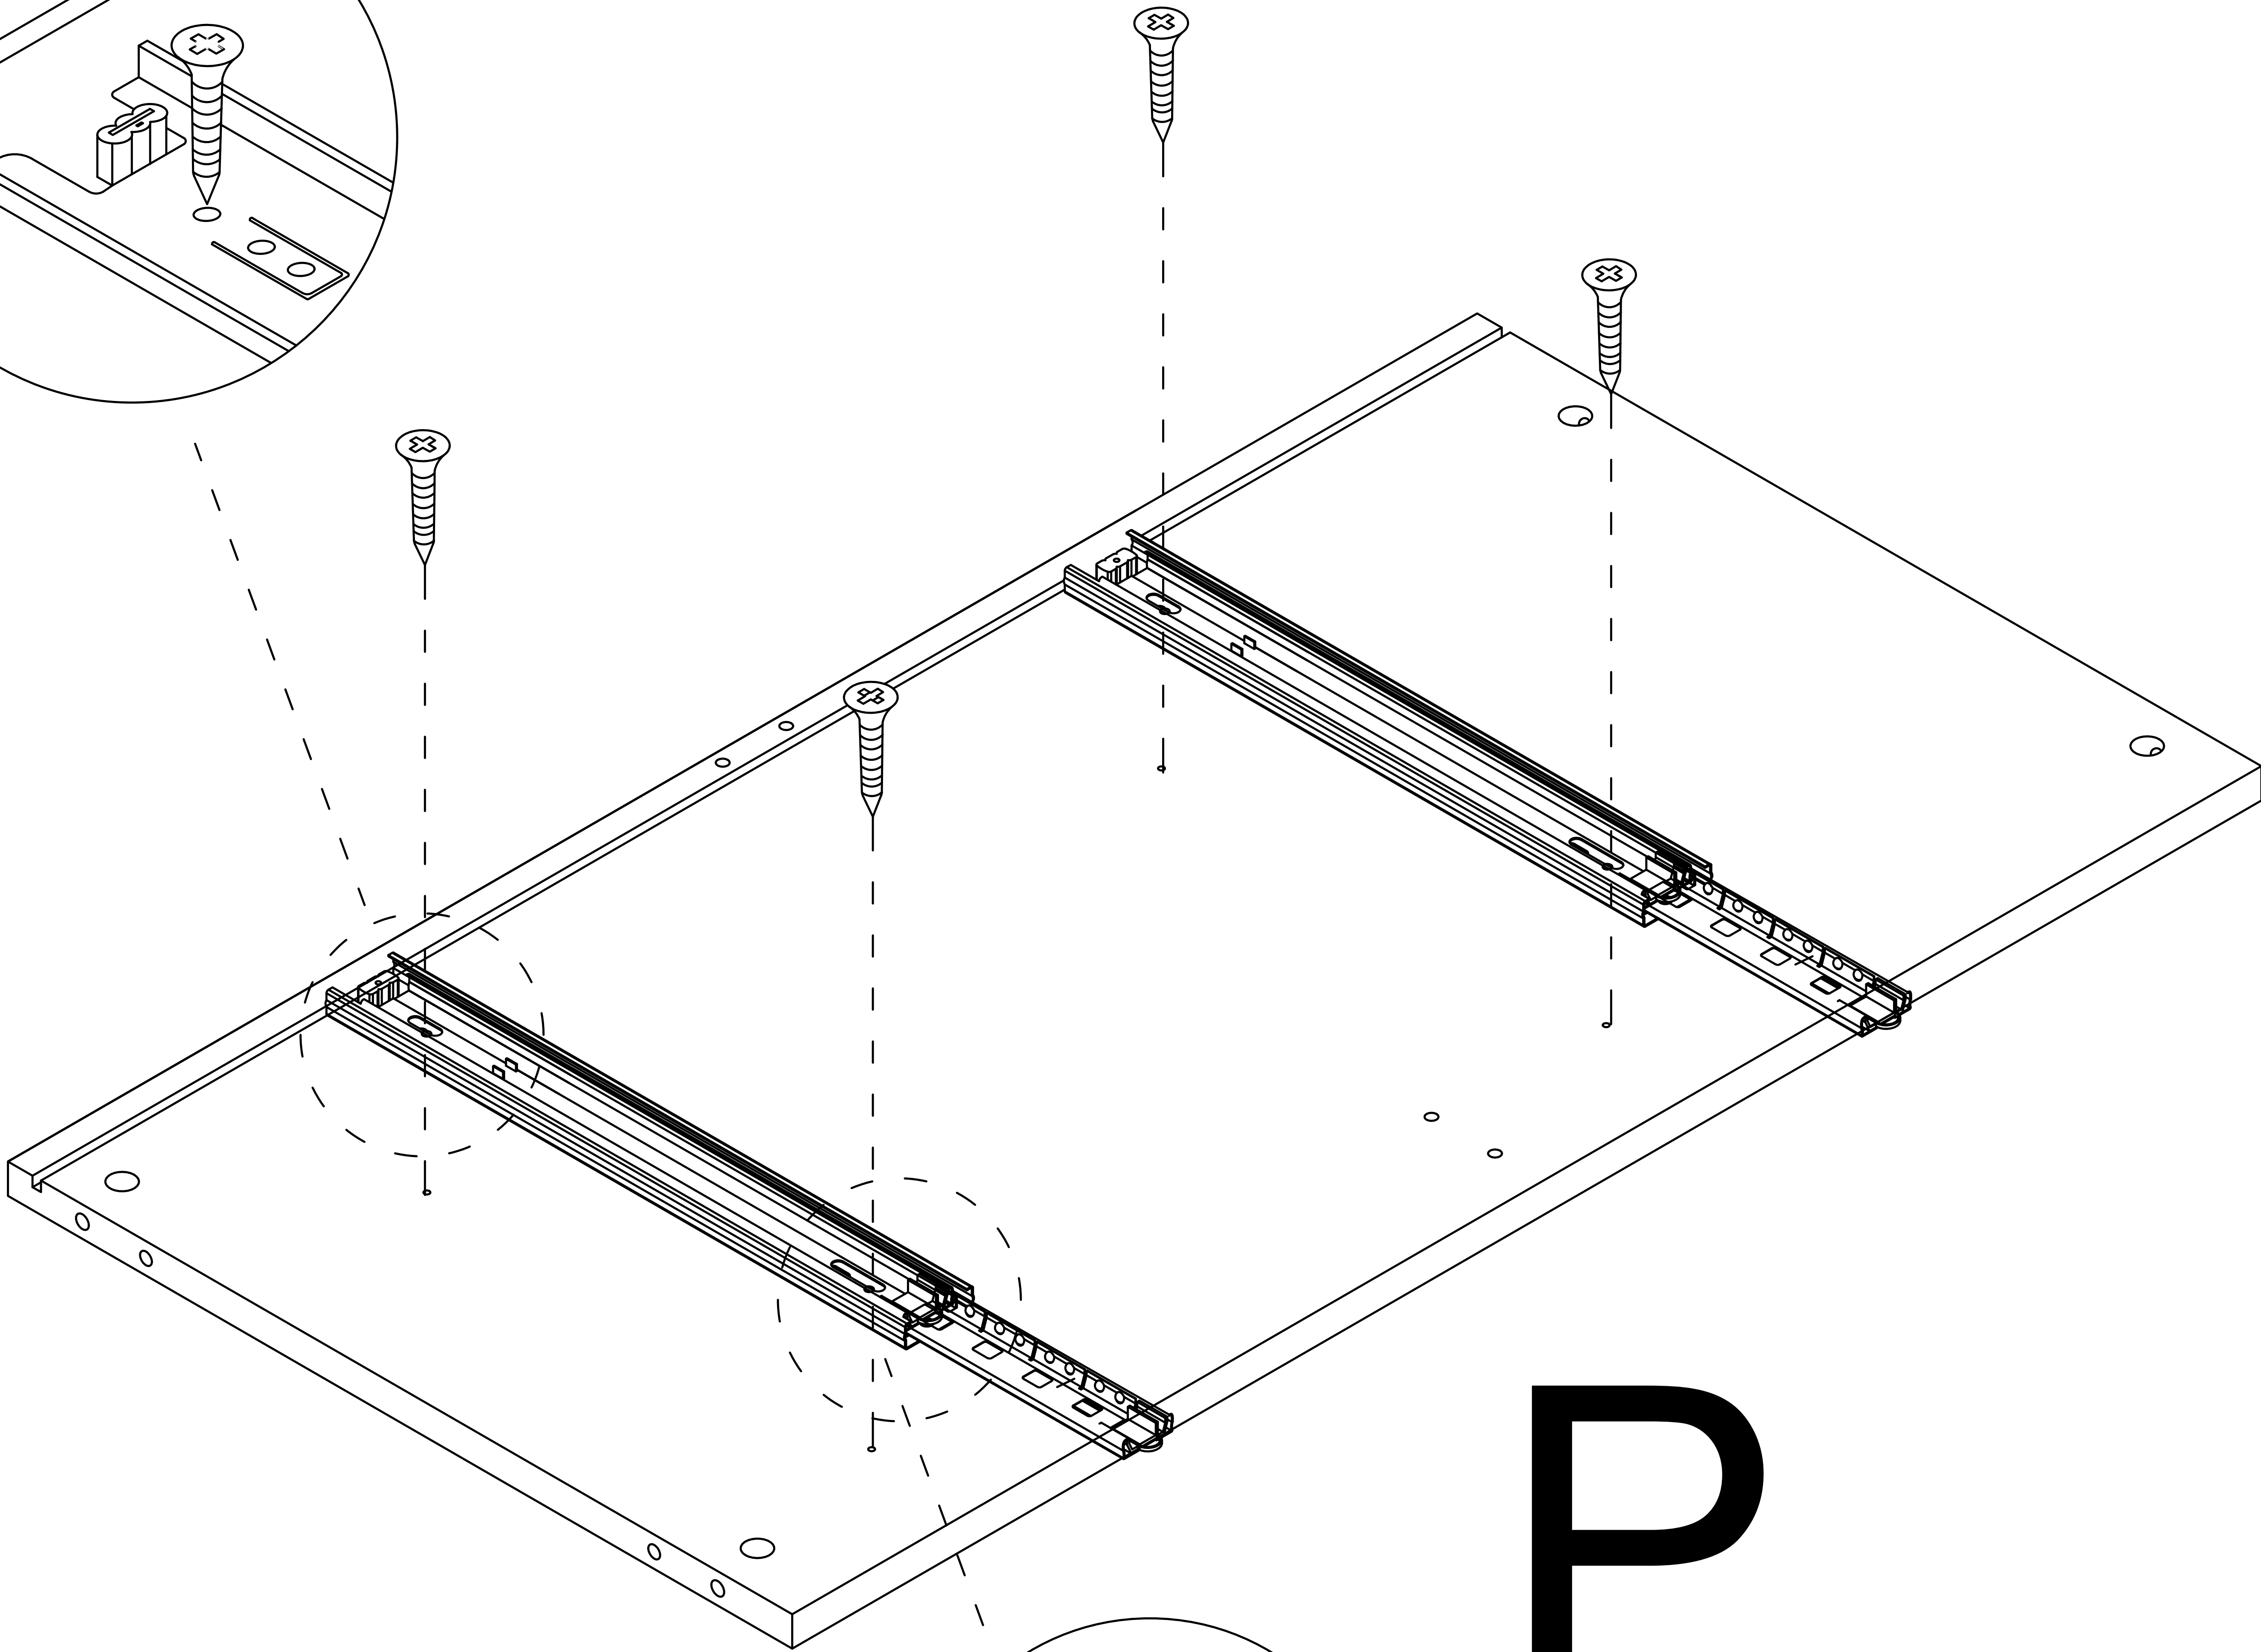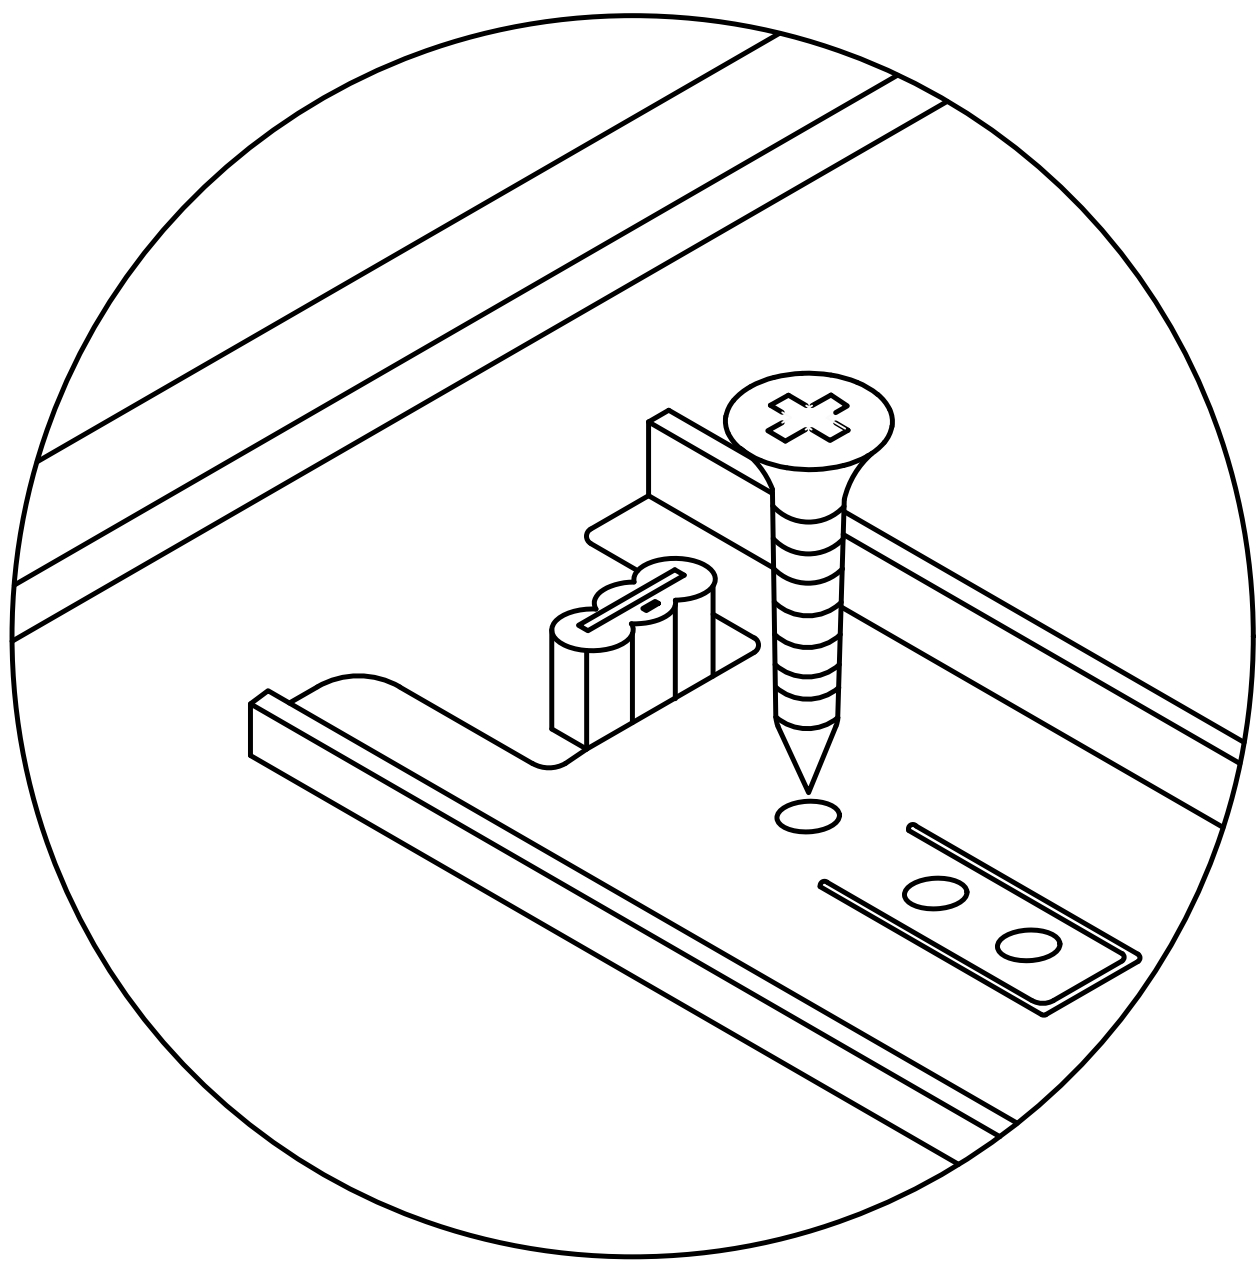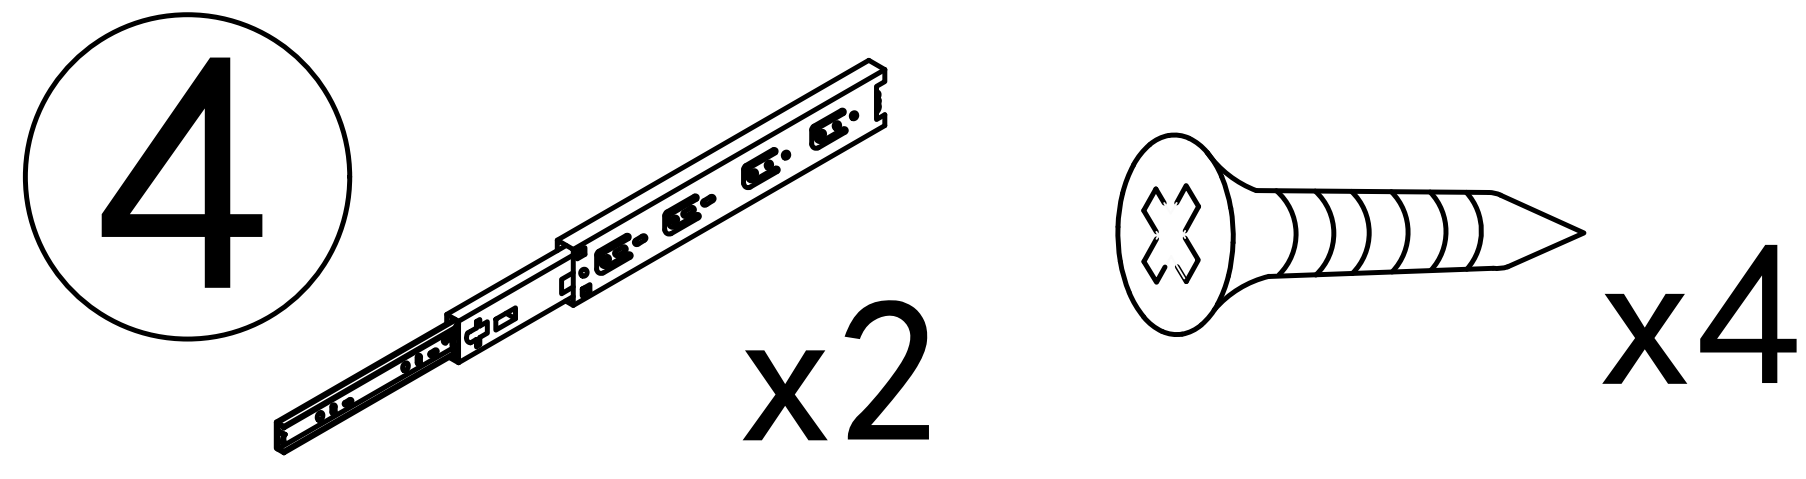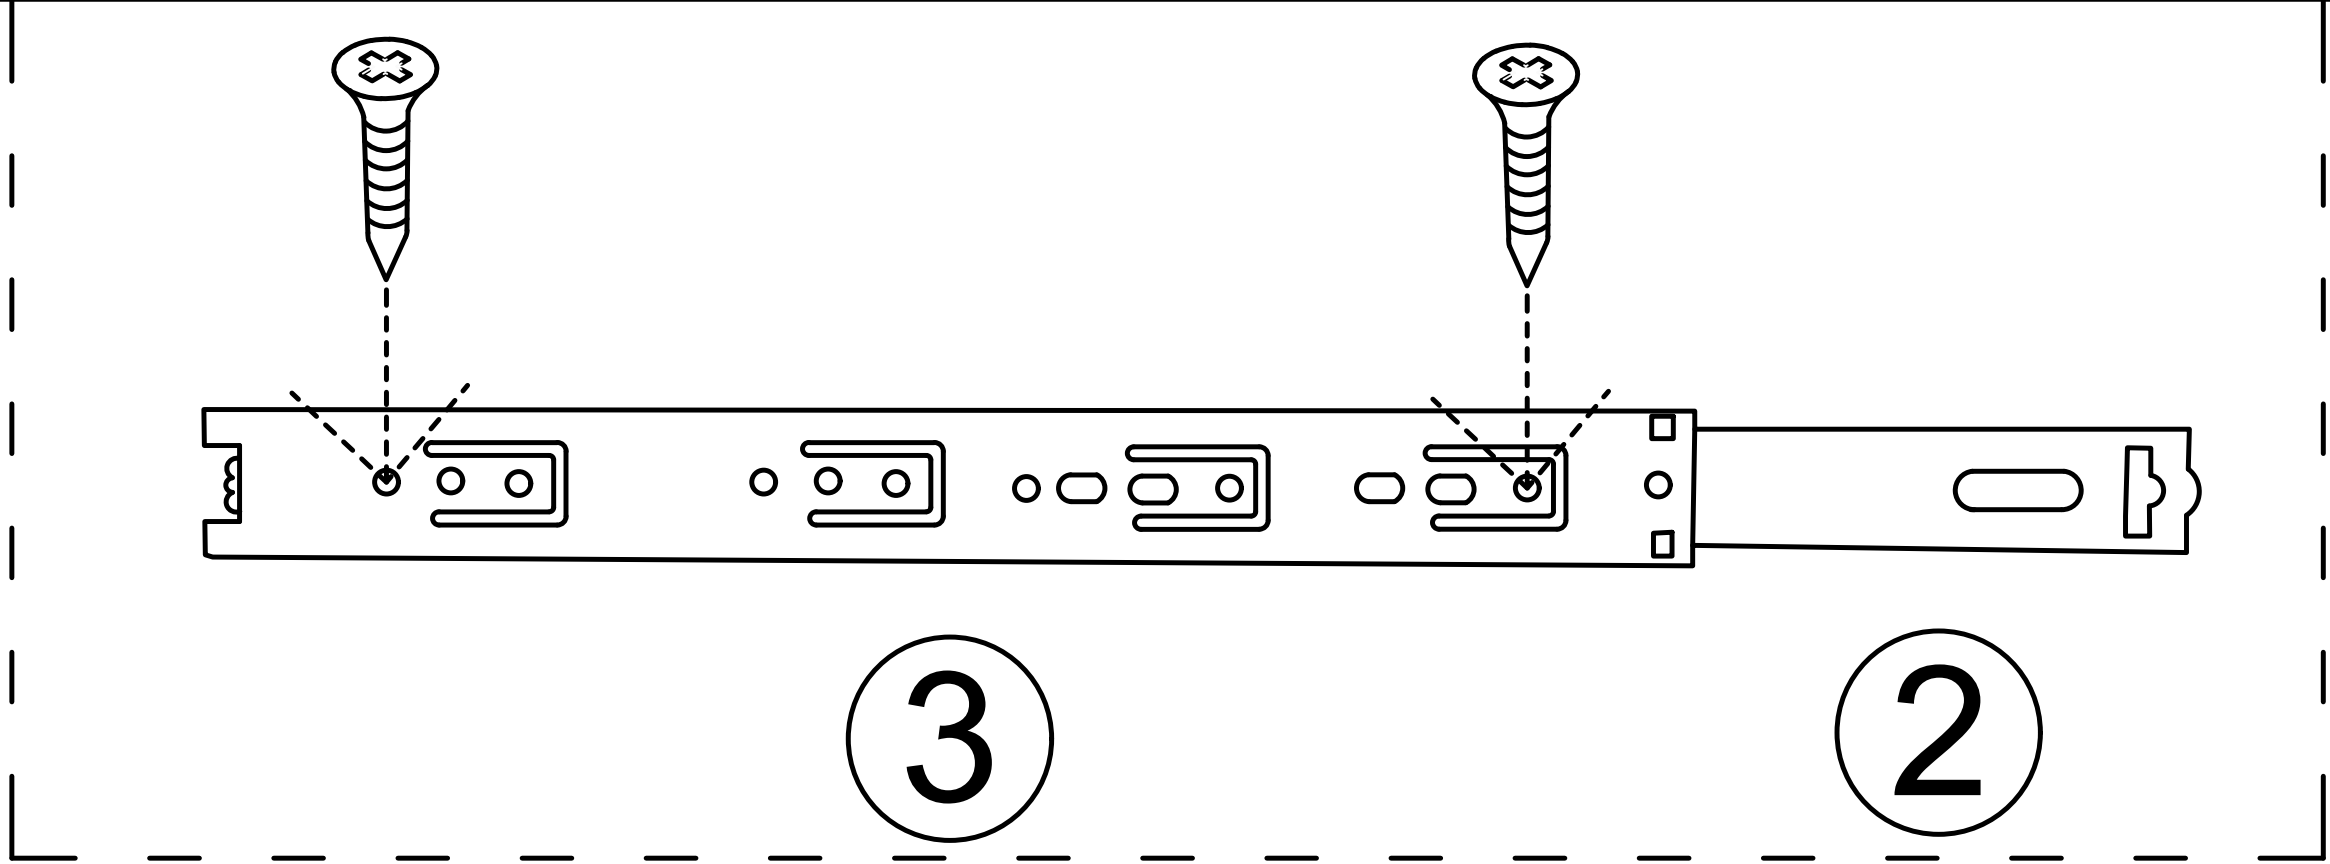

Step 32



4

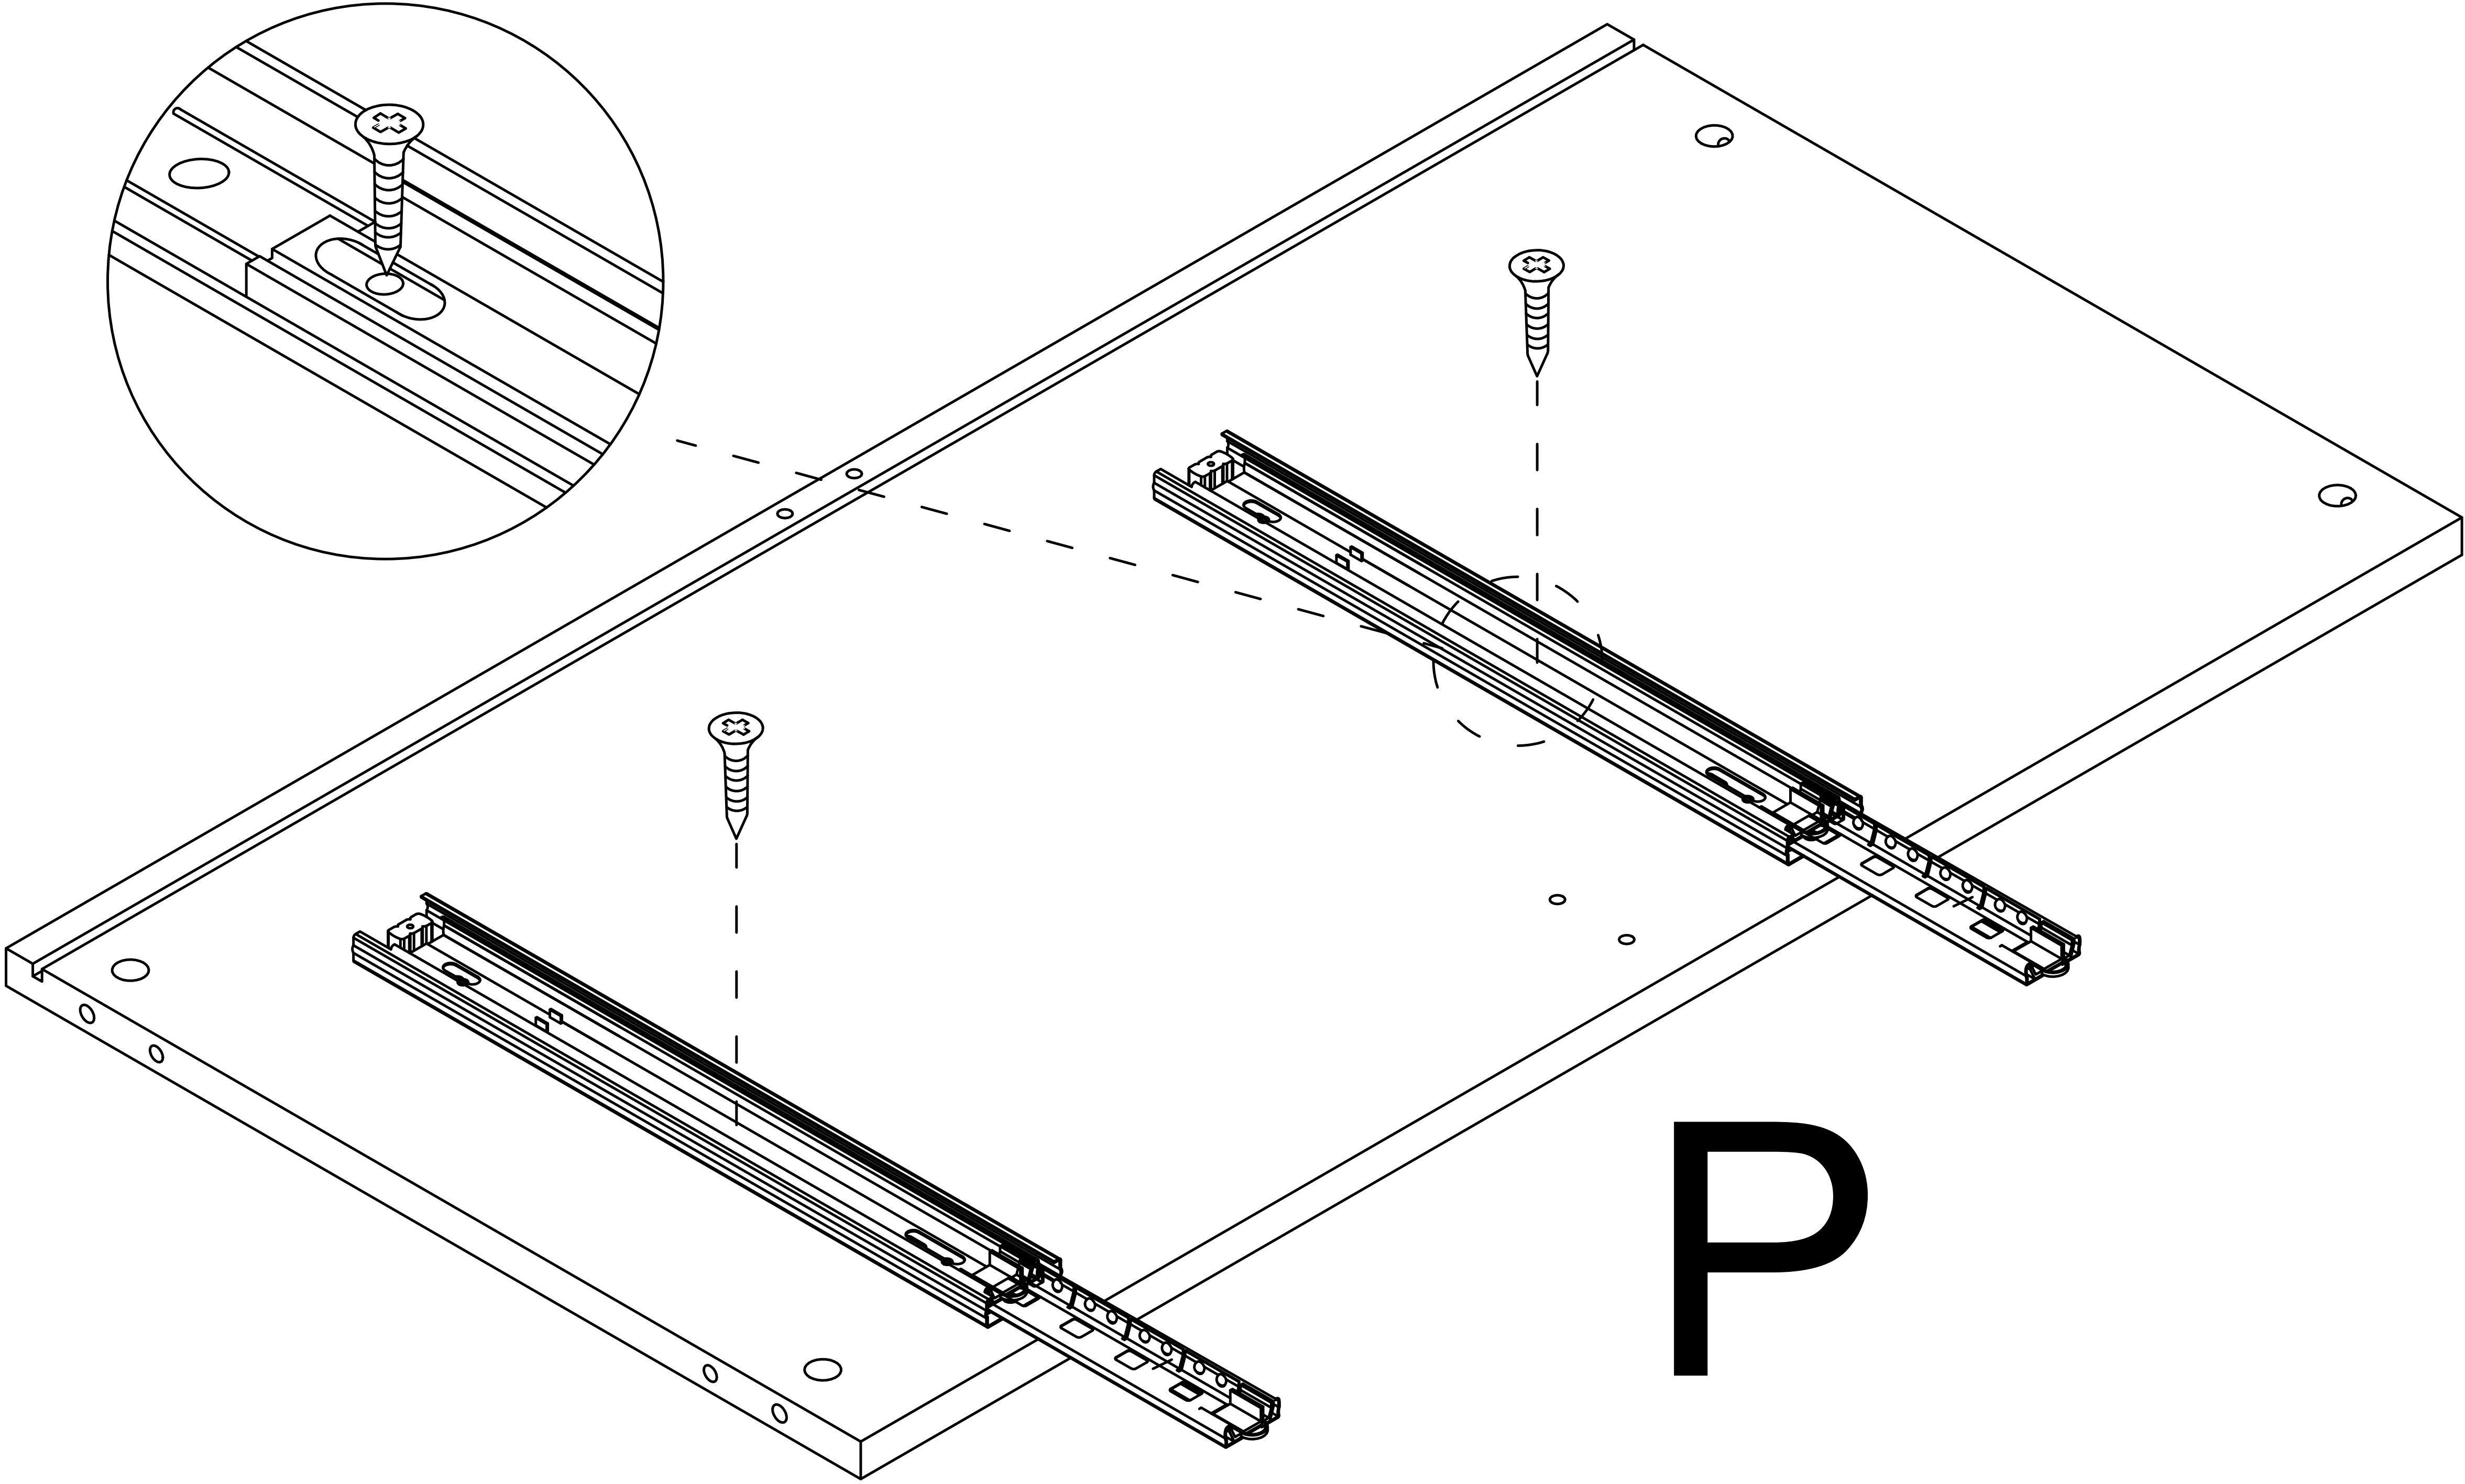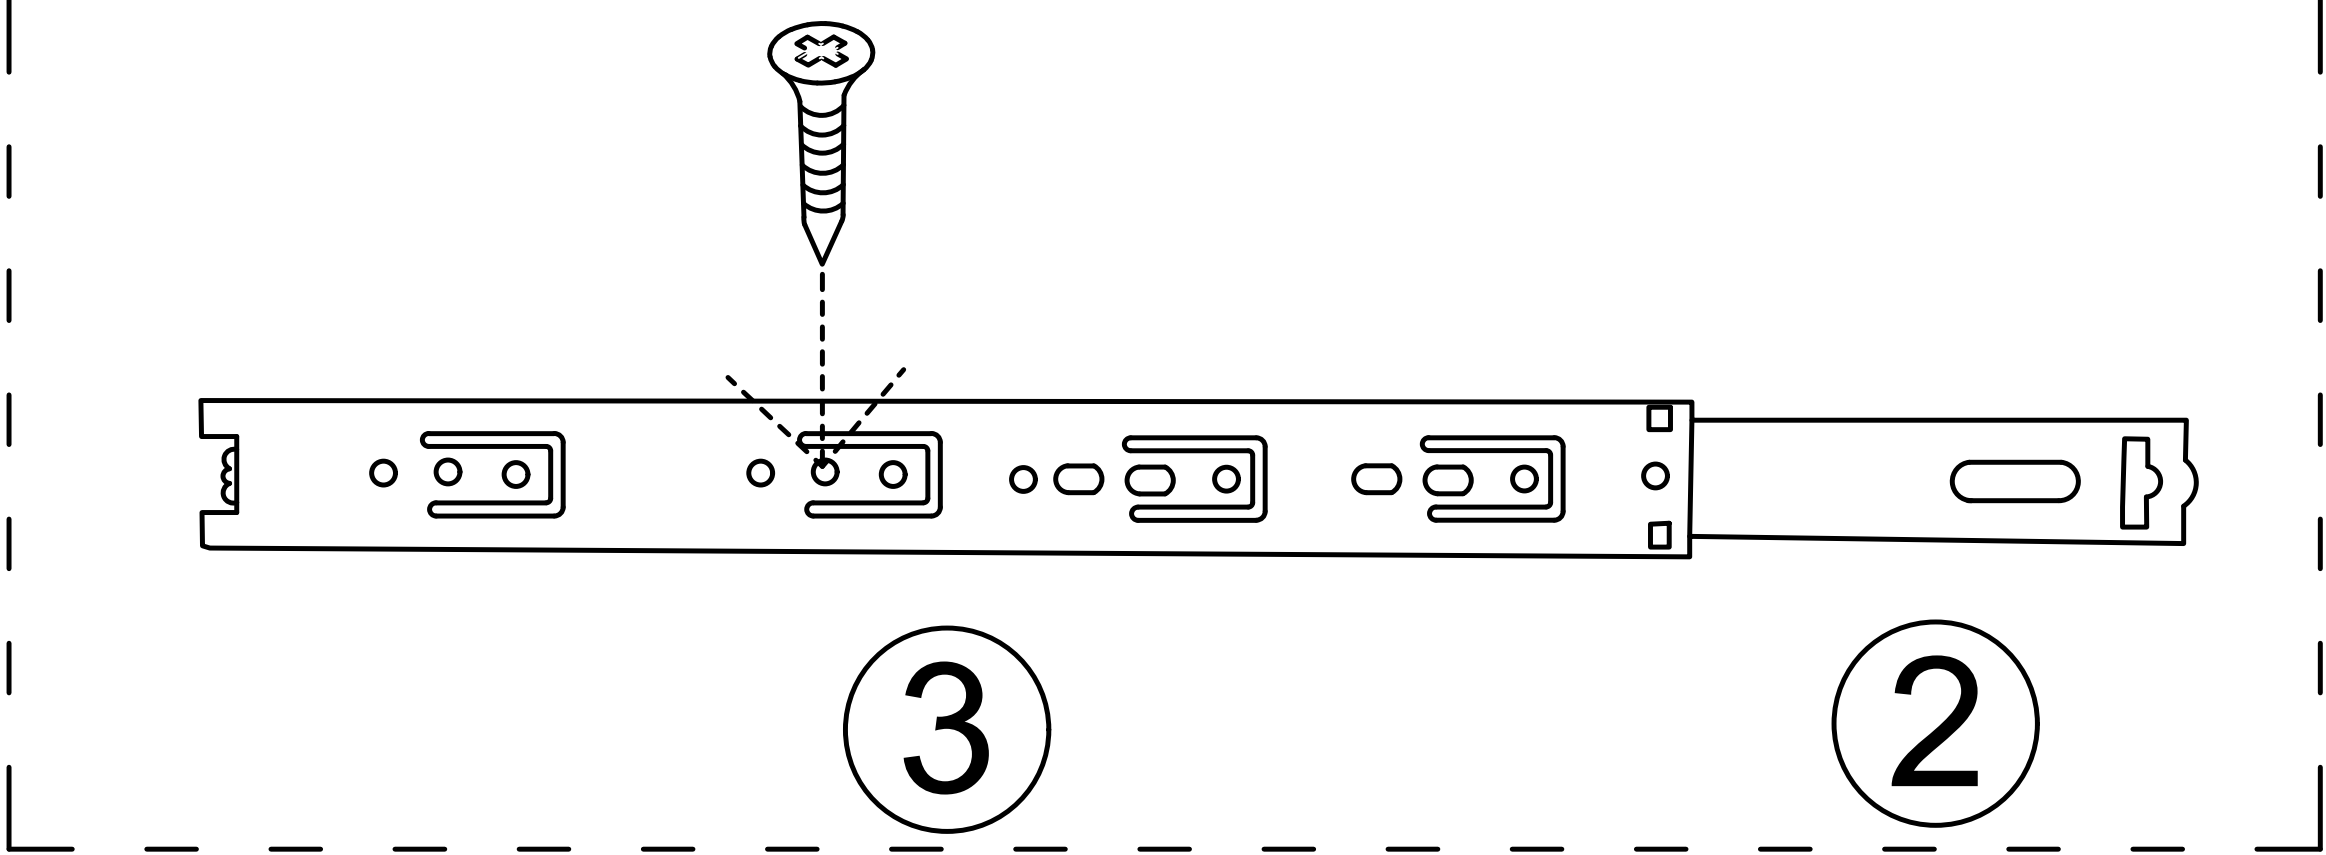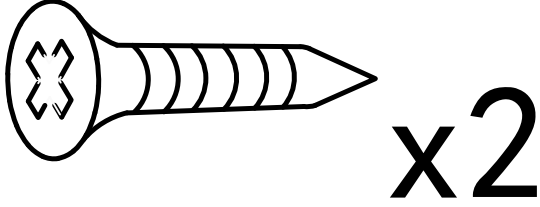

P

Step 33


1

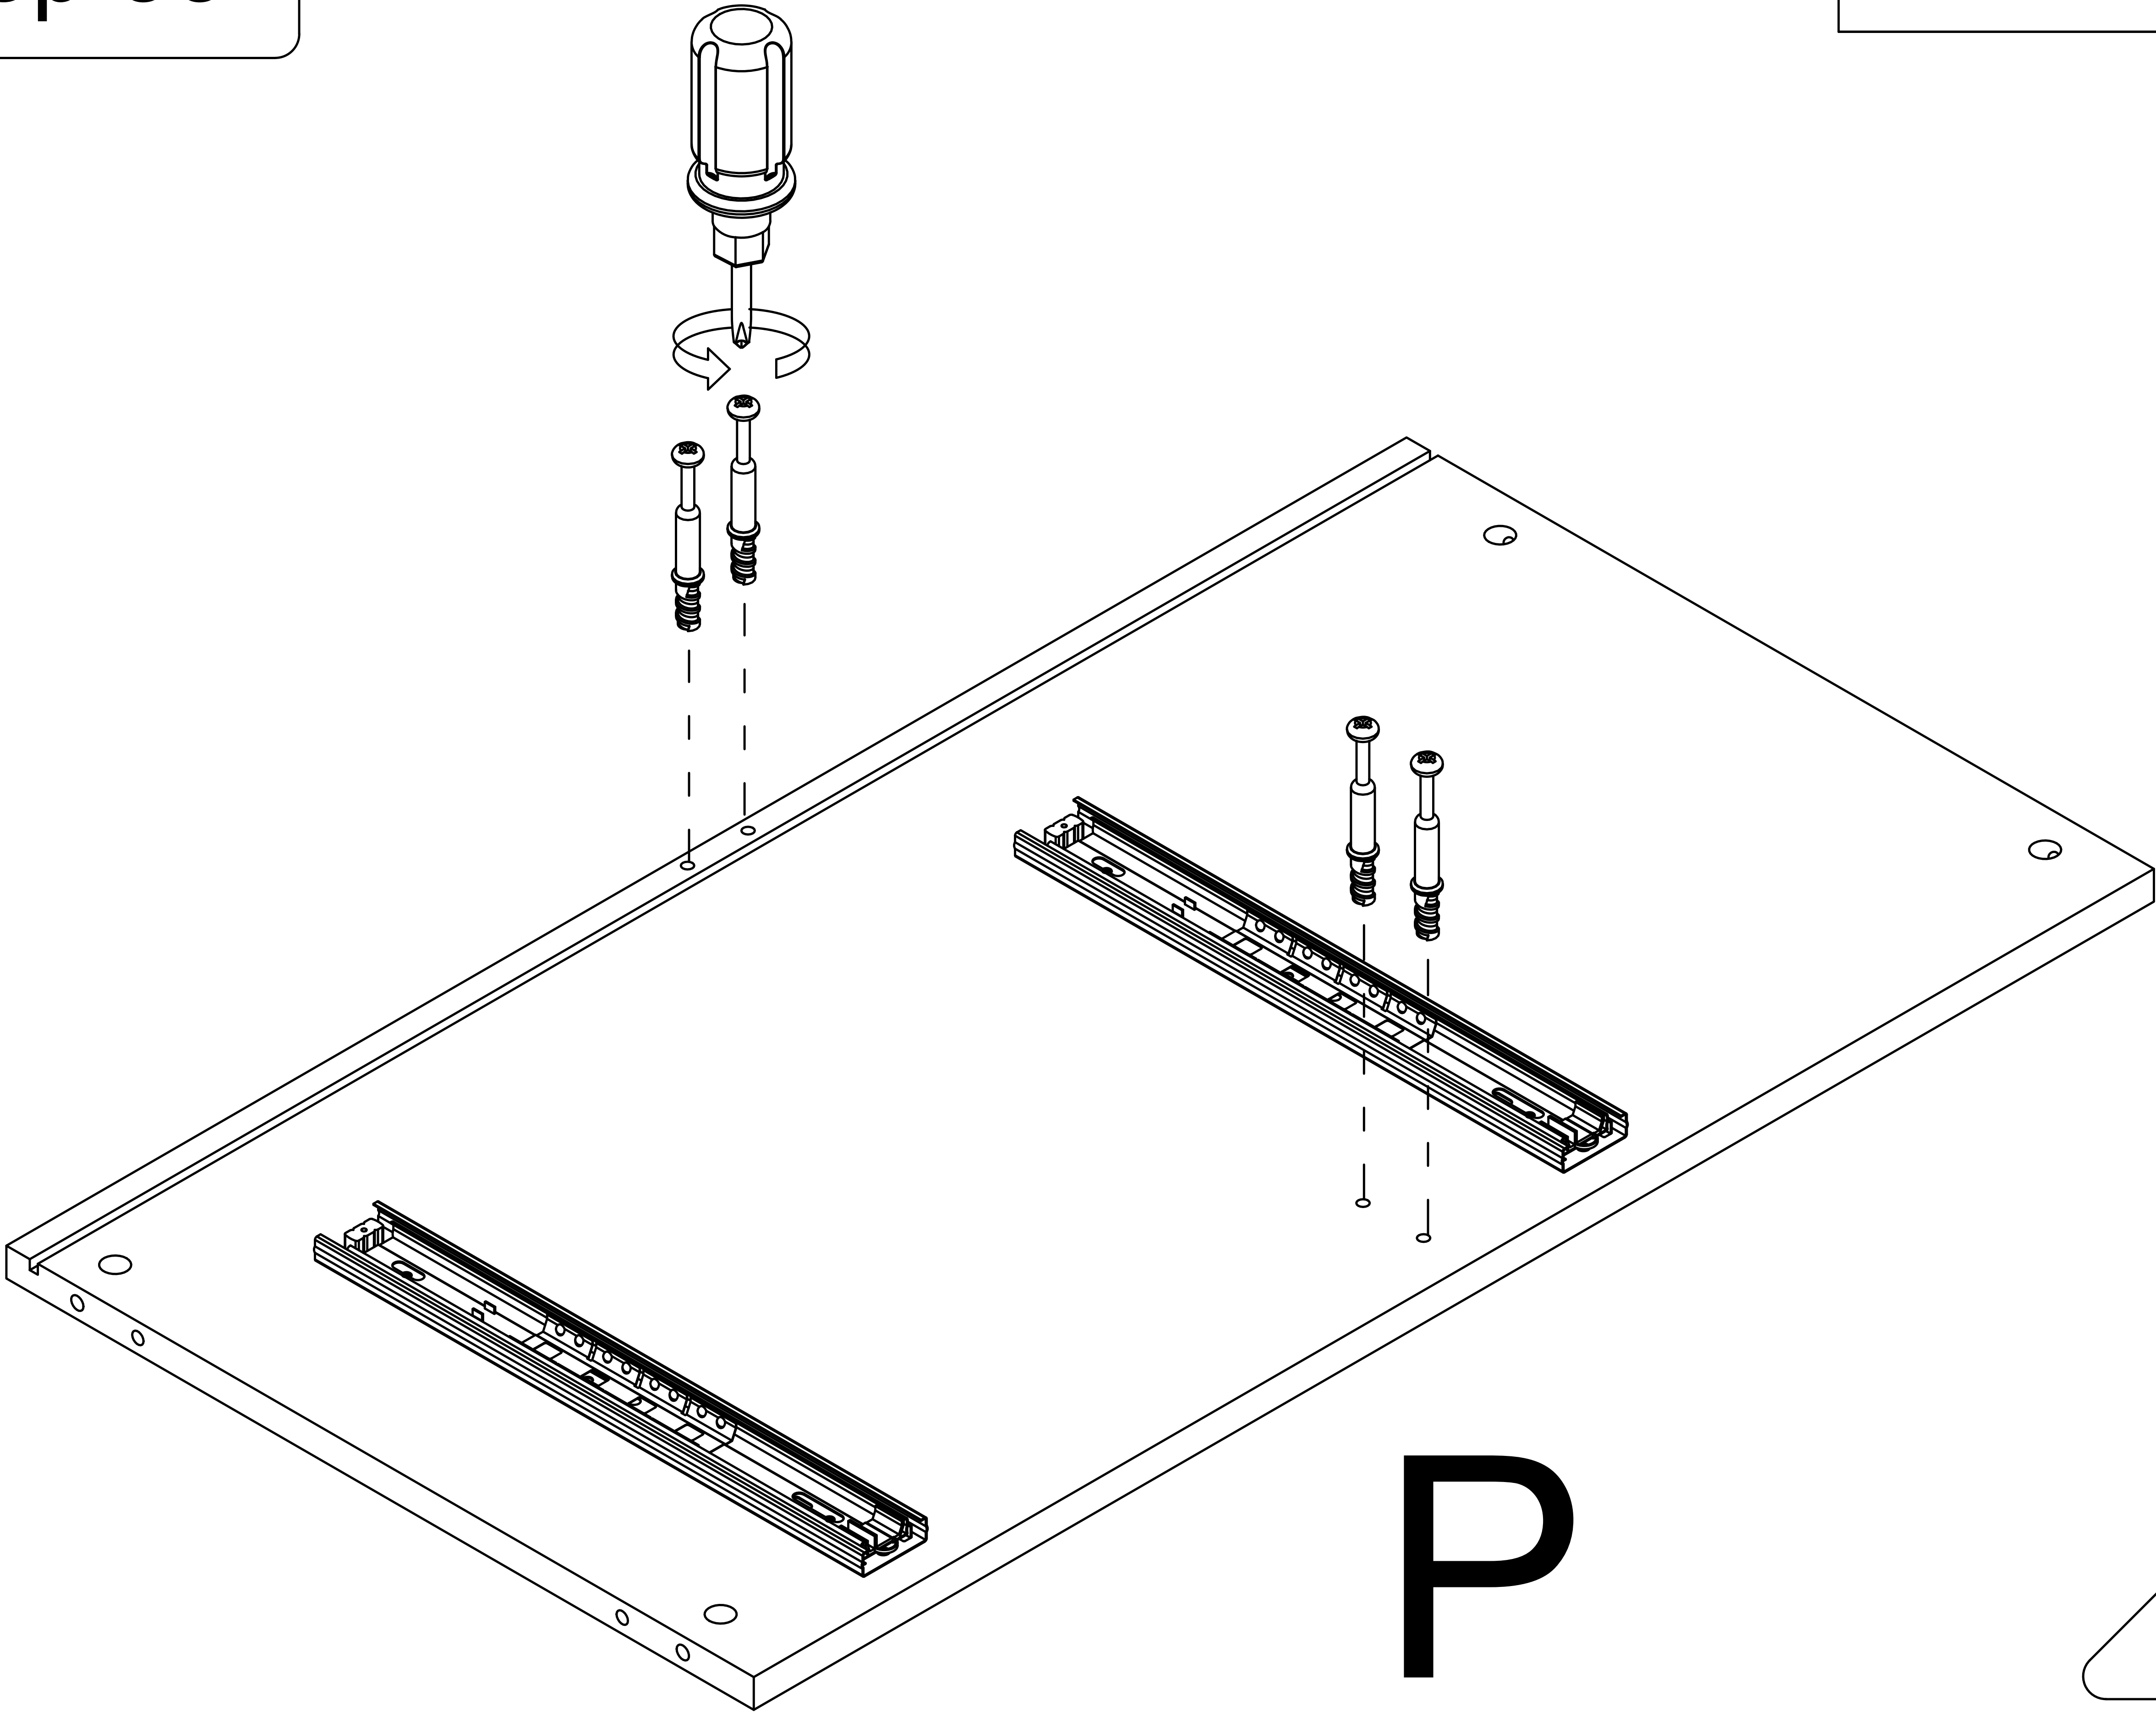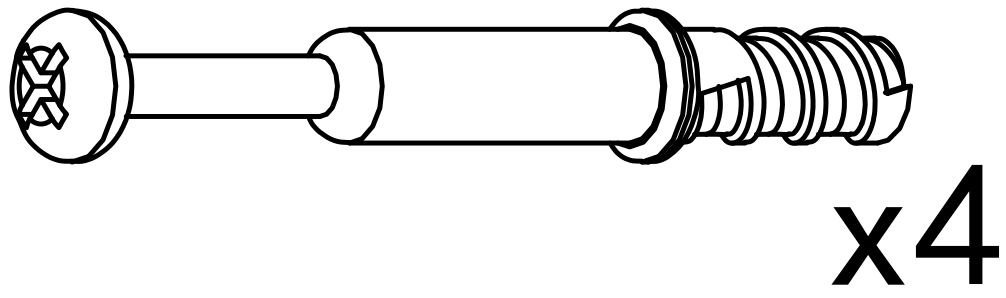


P

Step 34

2

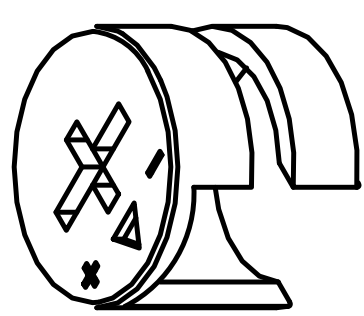

x4

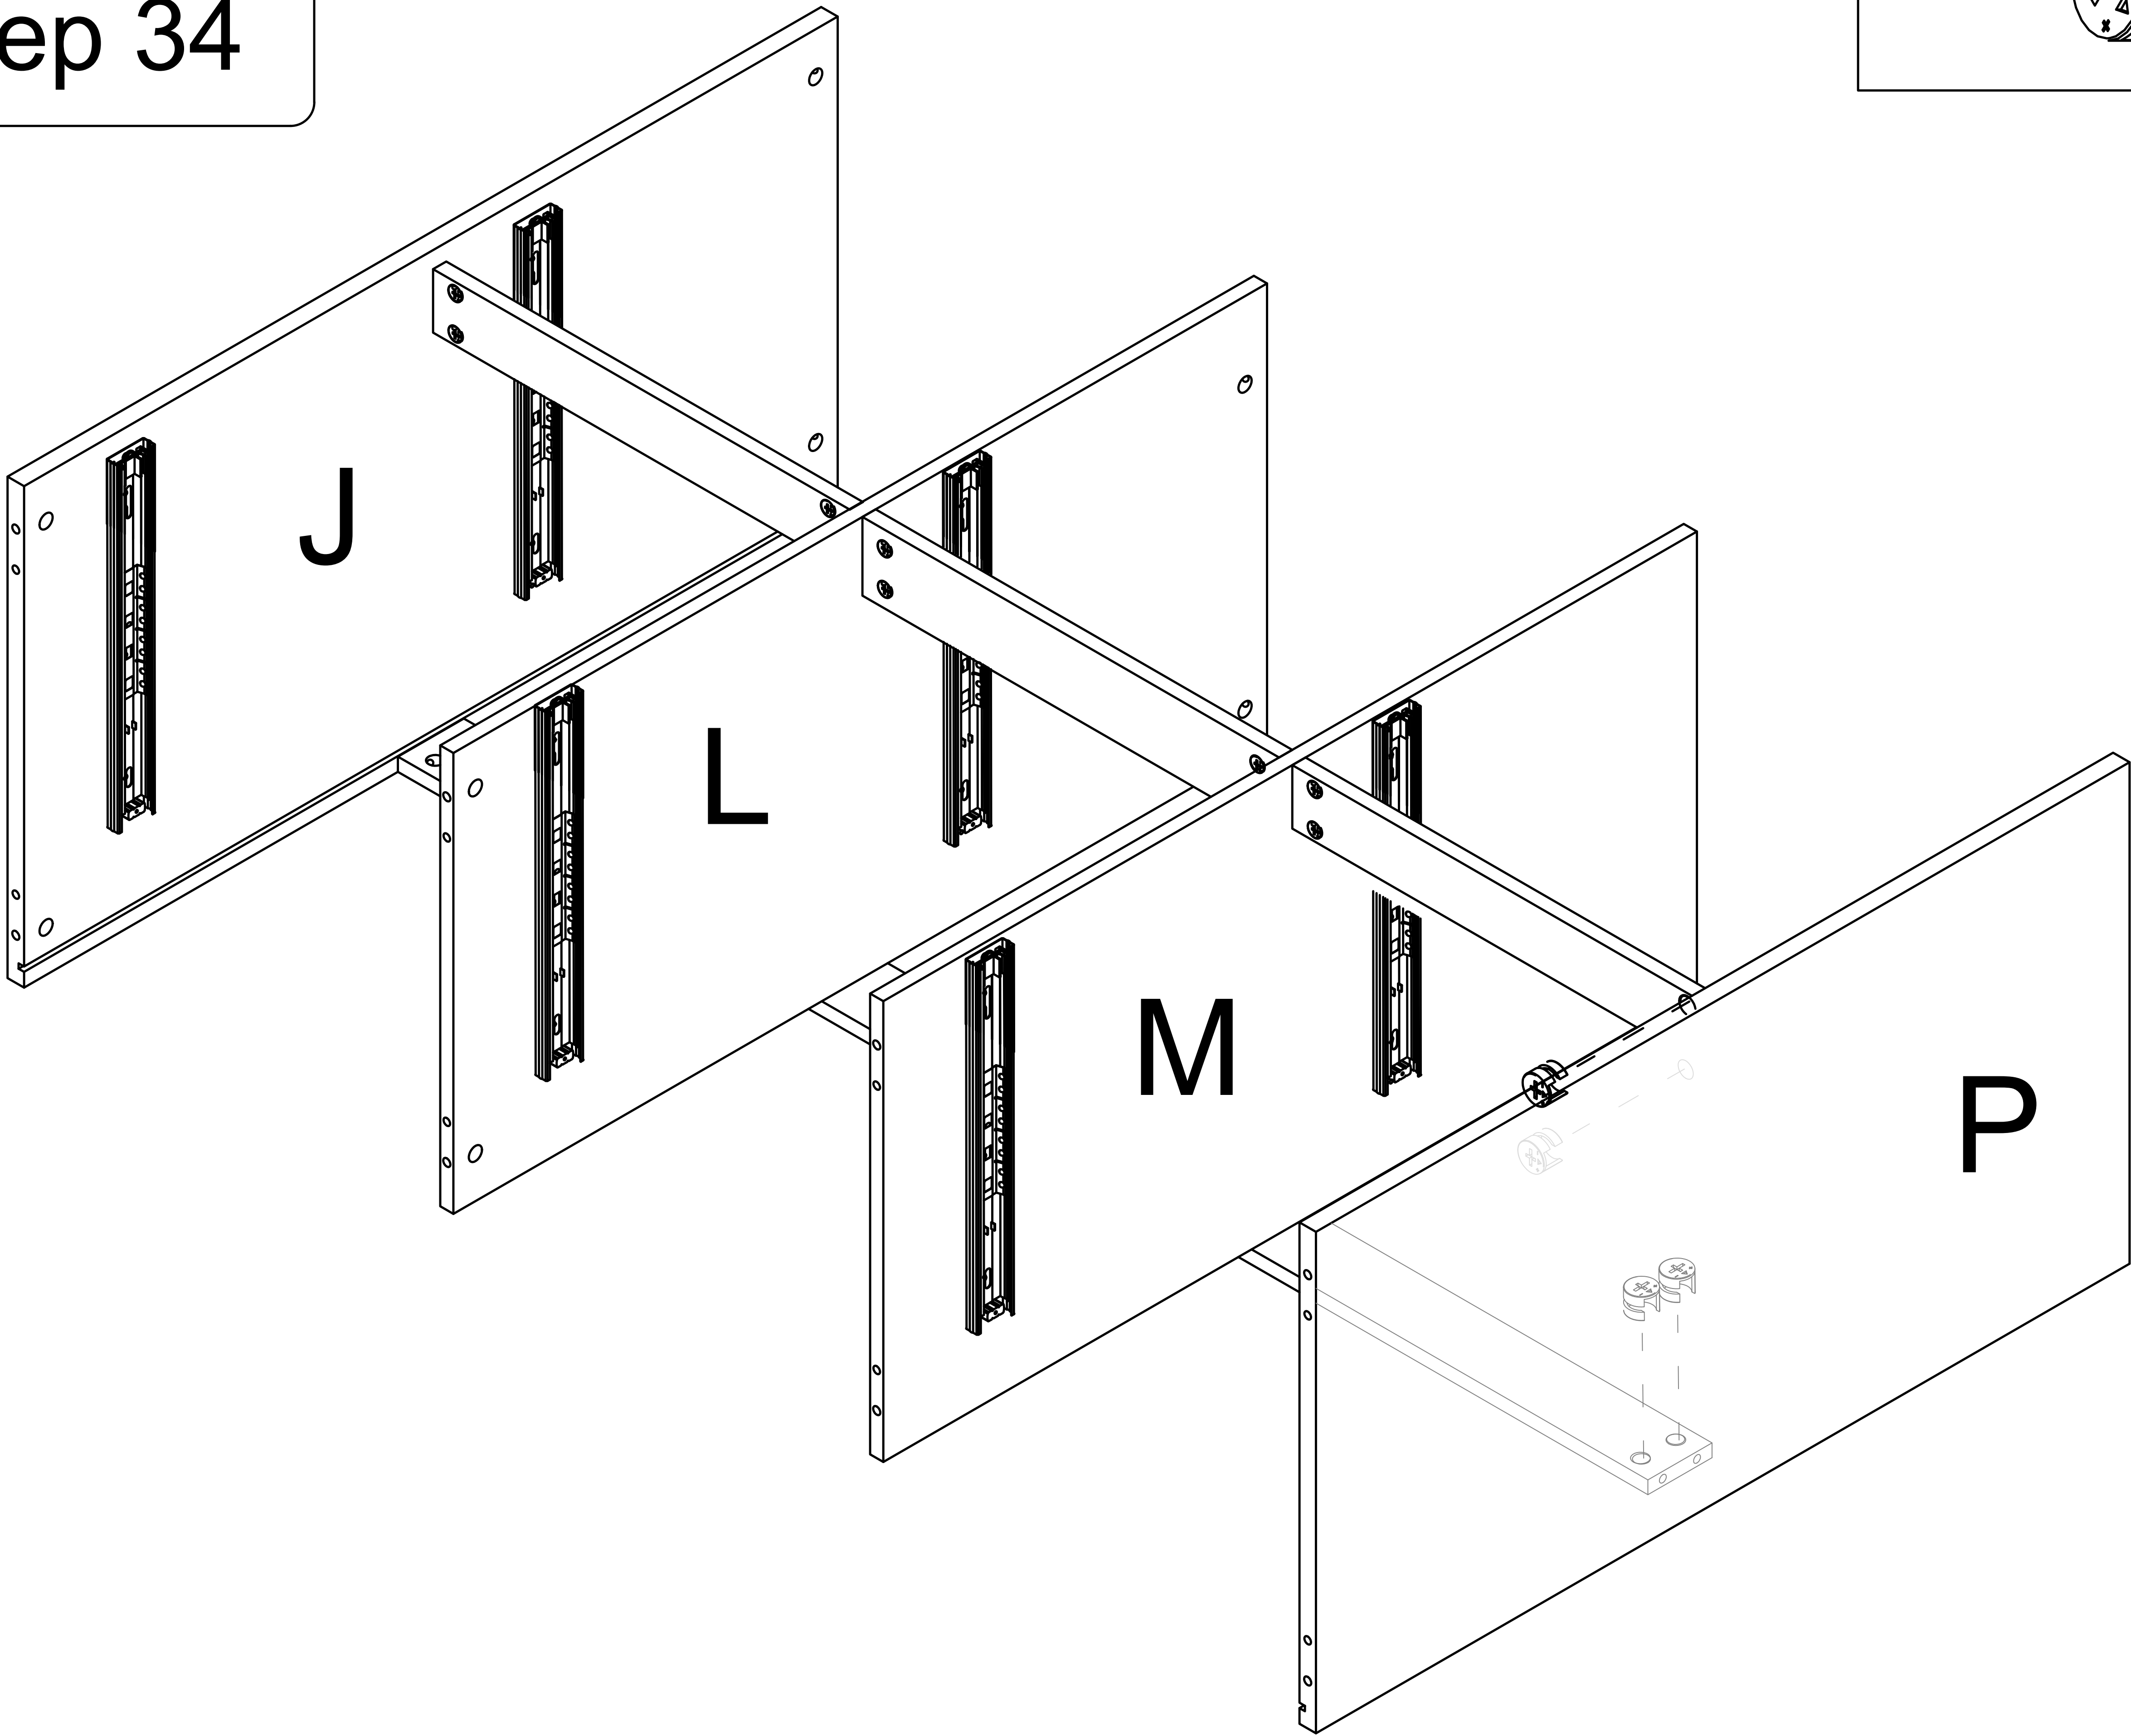


Step 35

3




x8

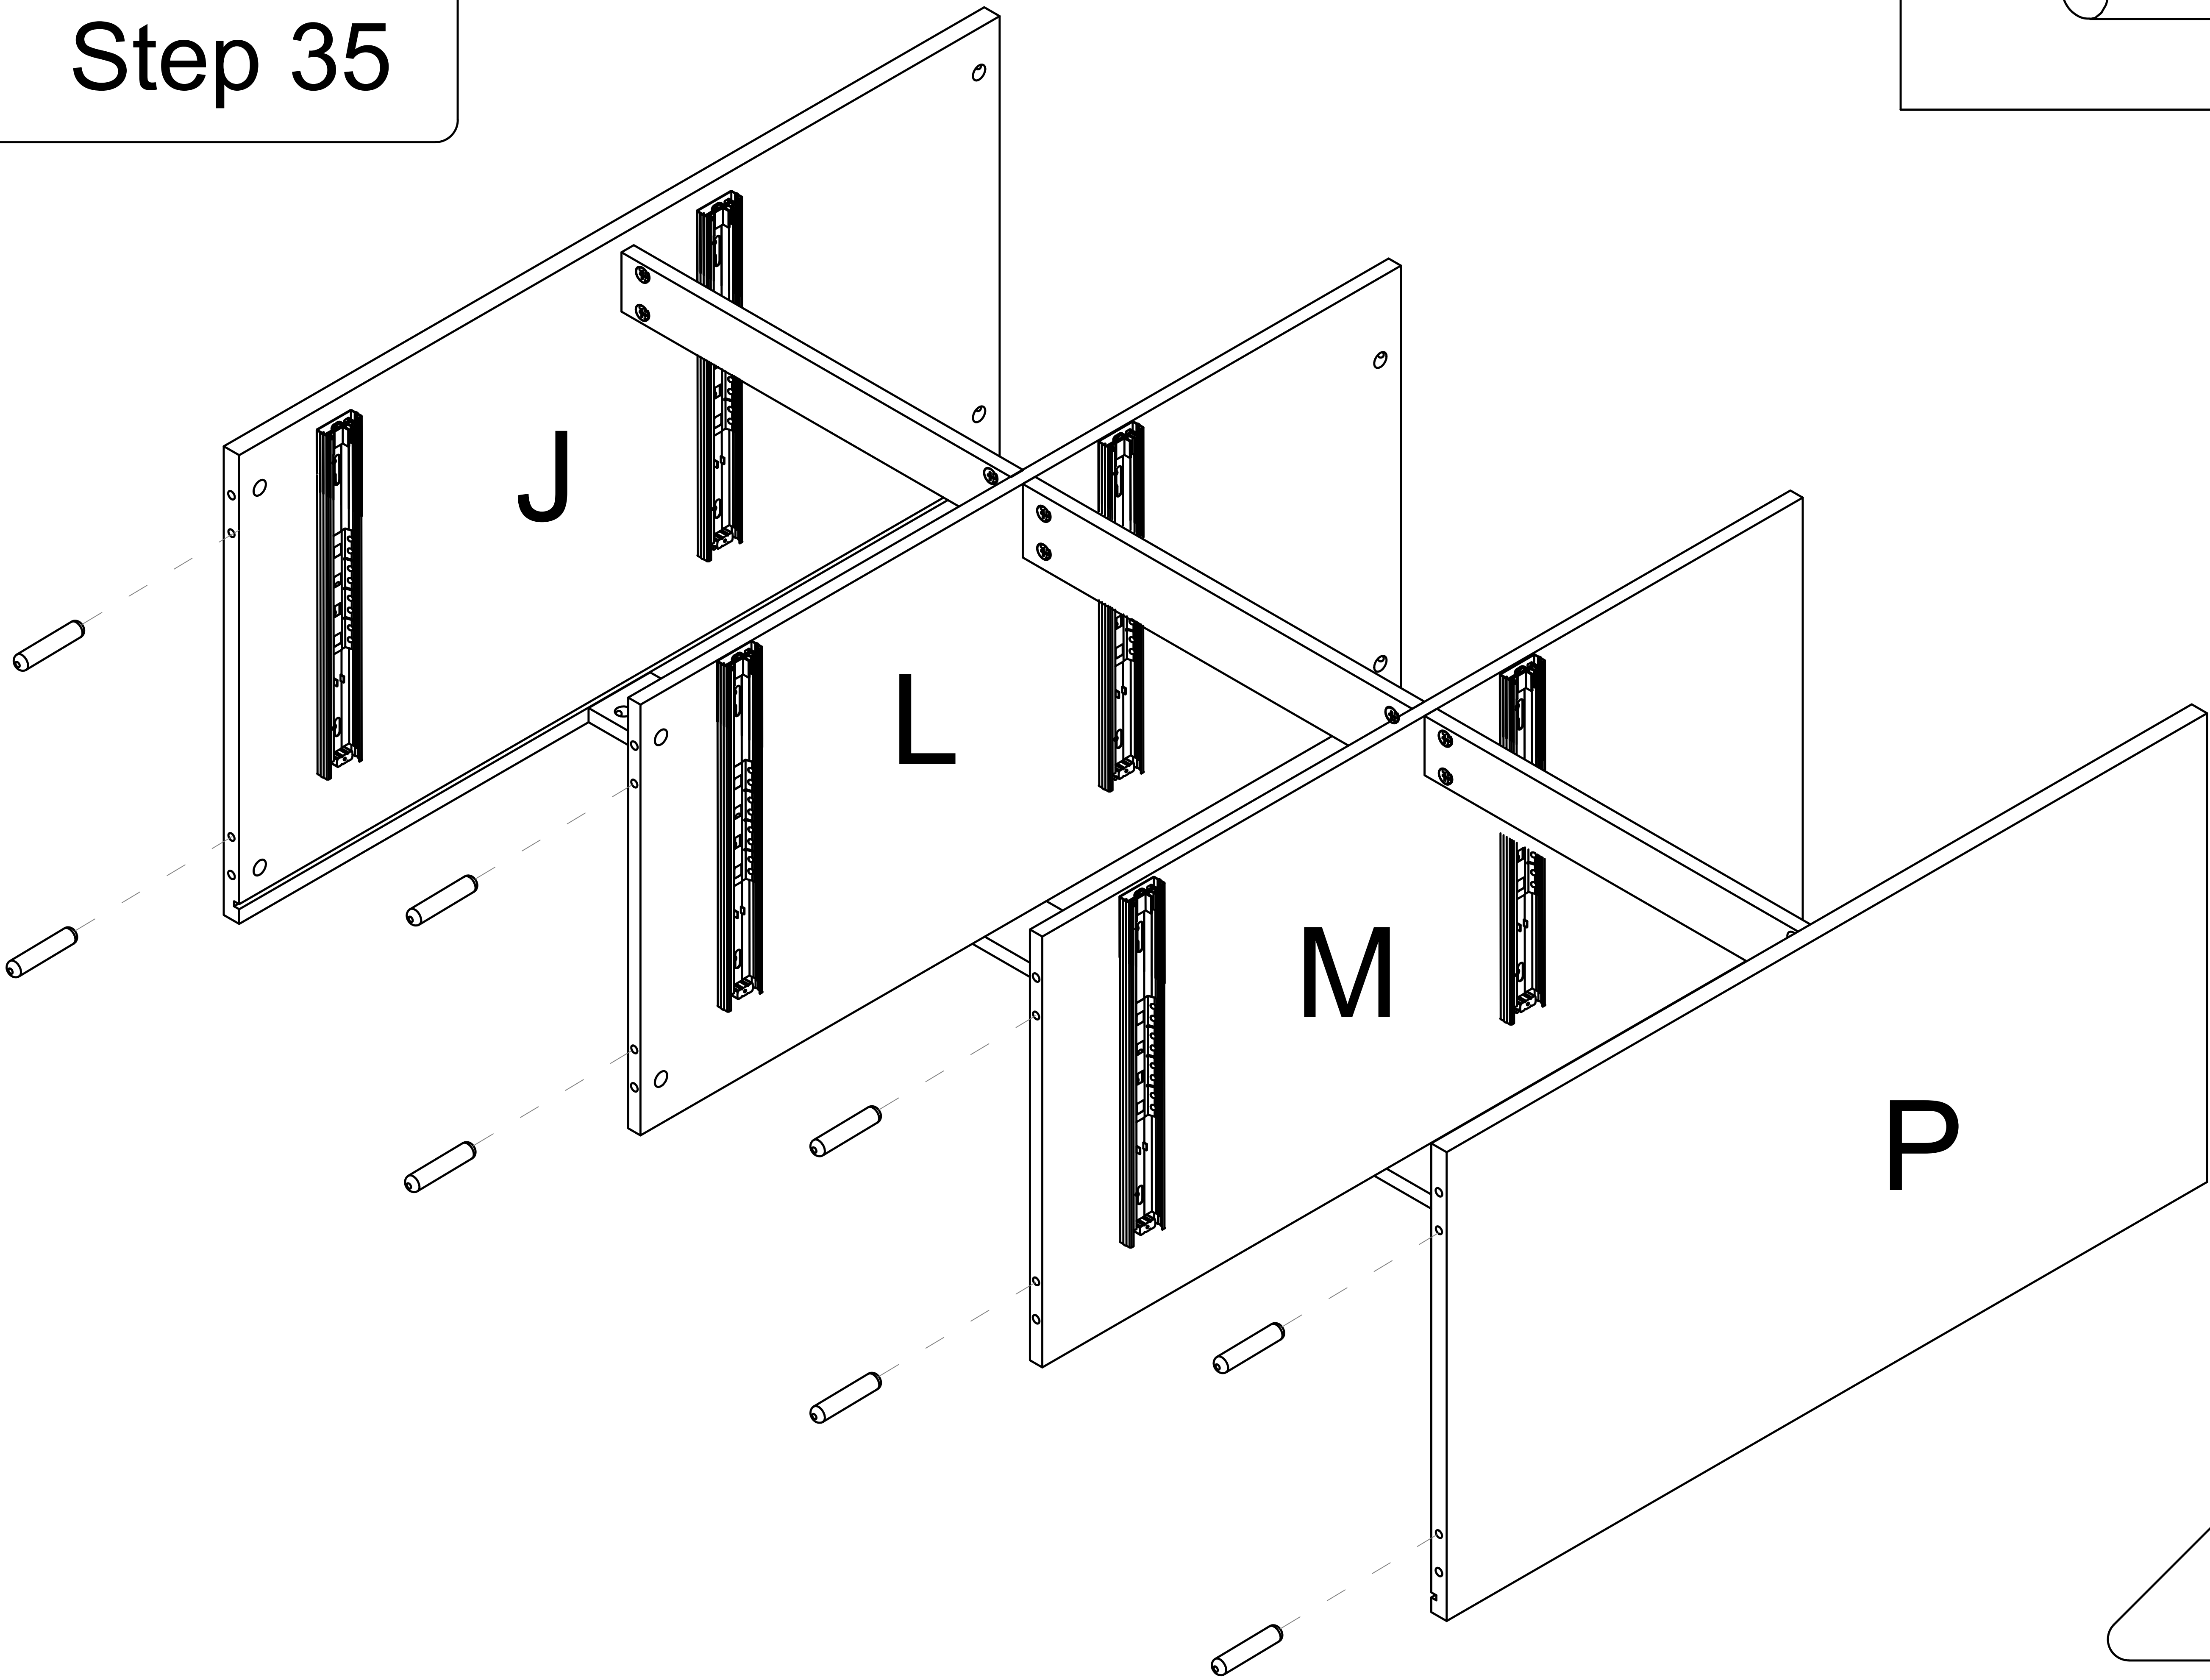


Step 36


2

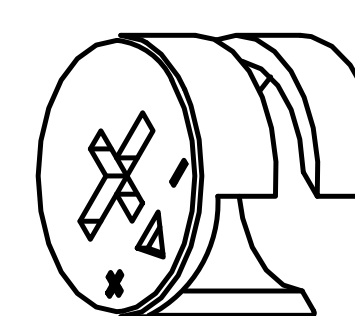

x8

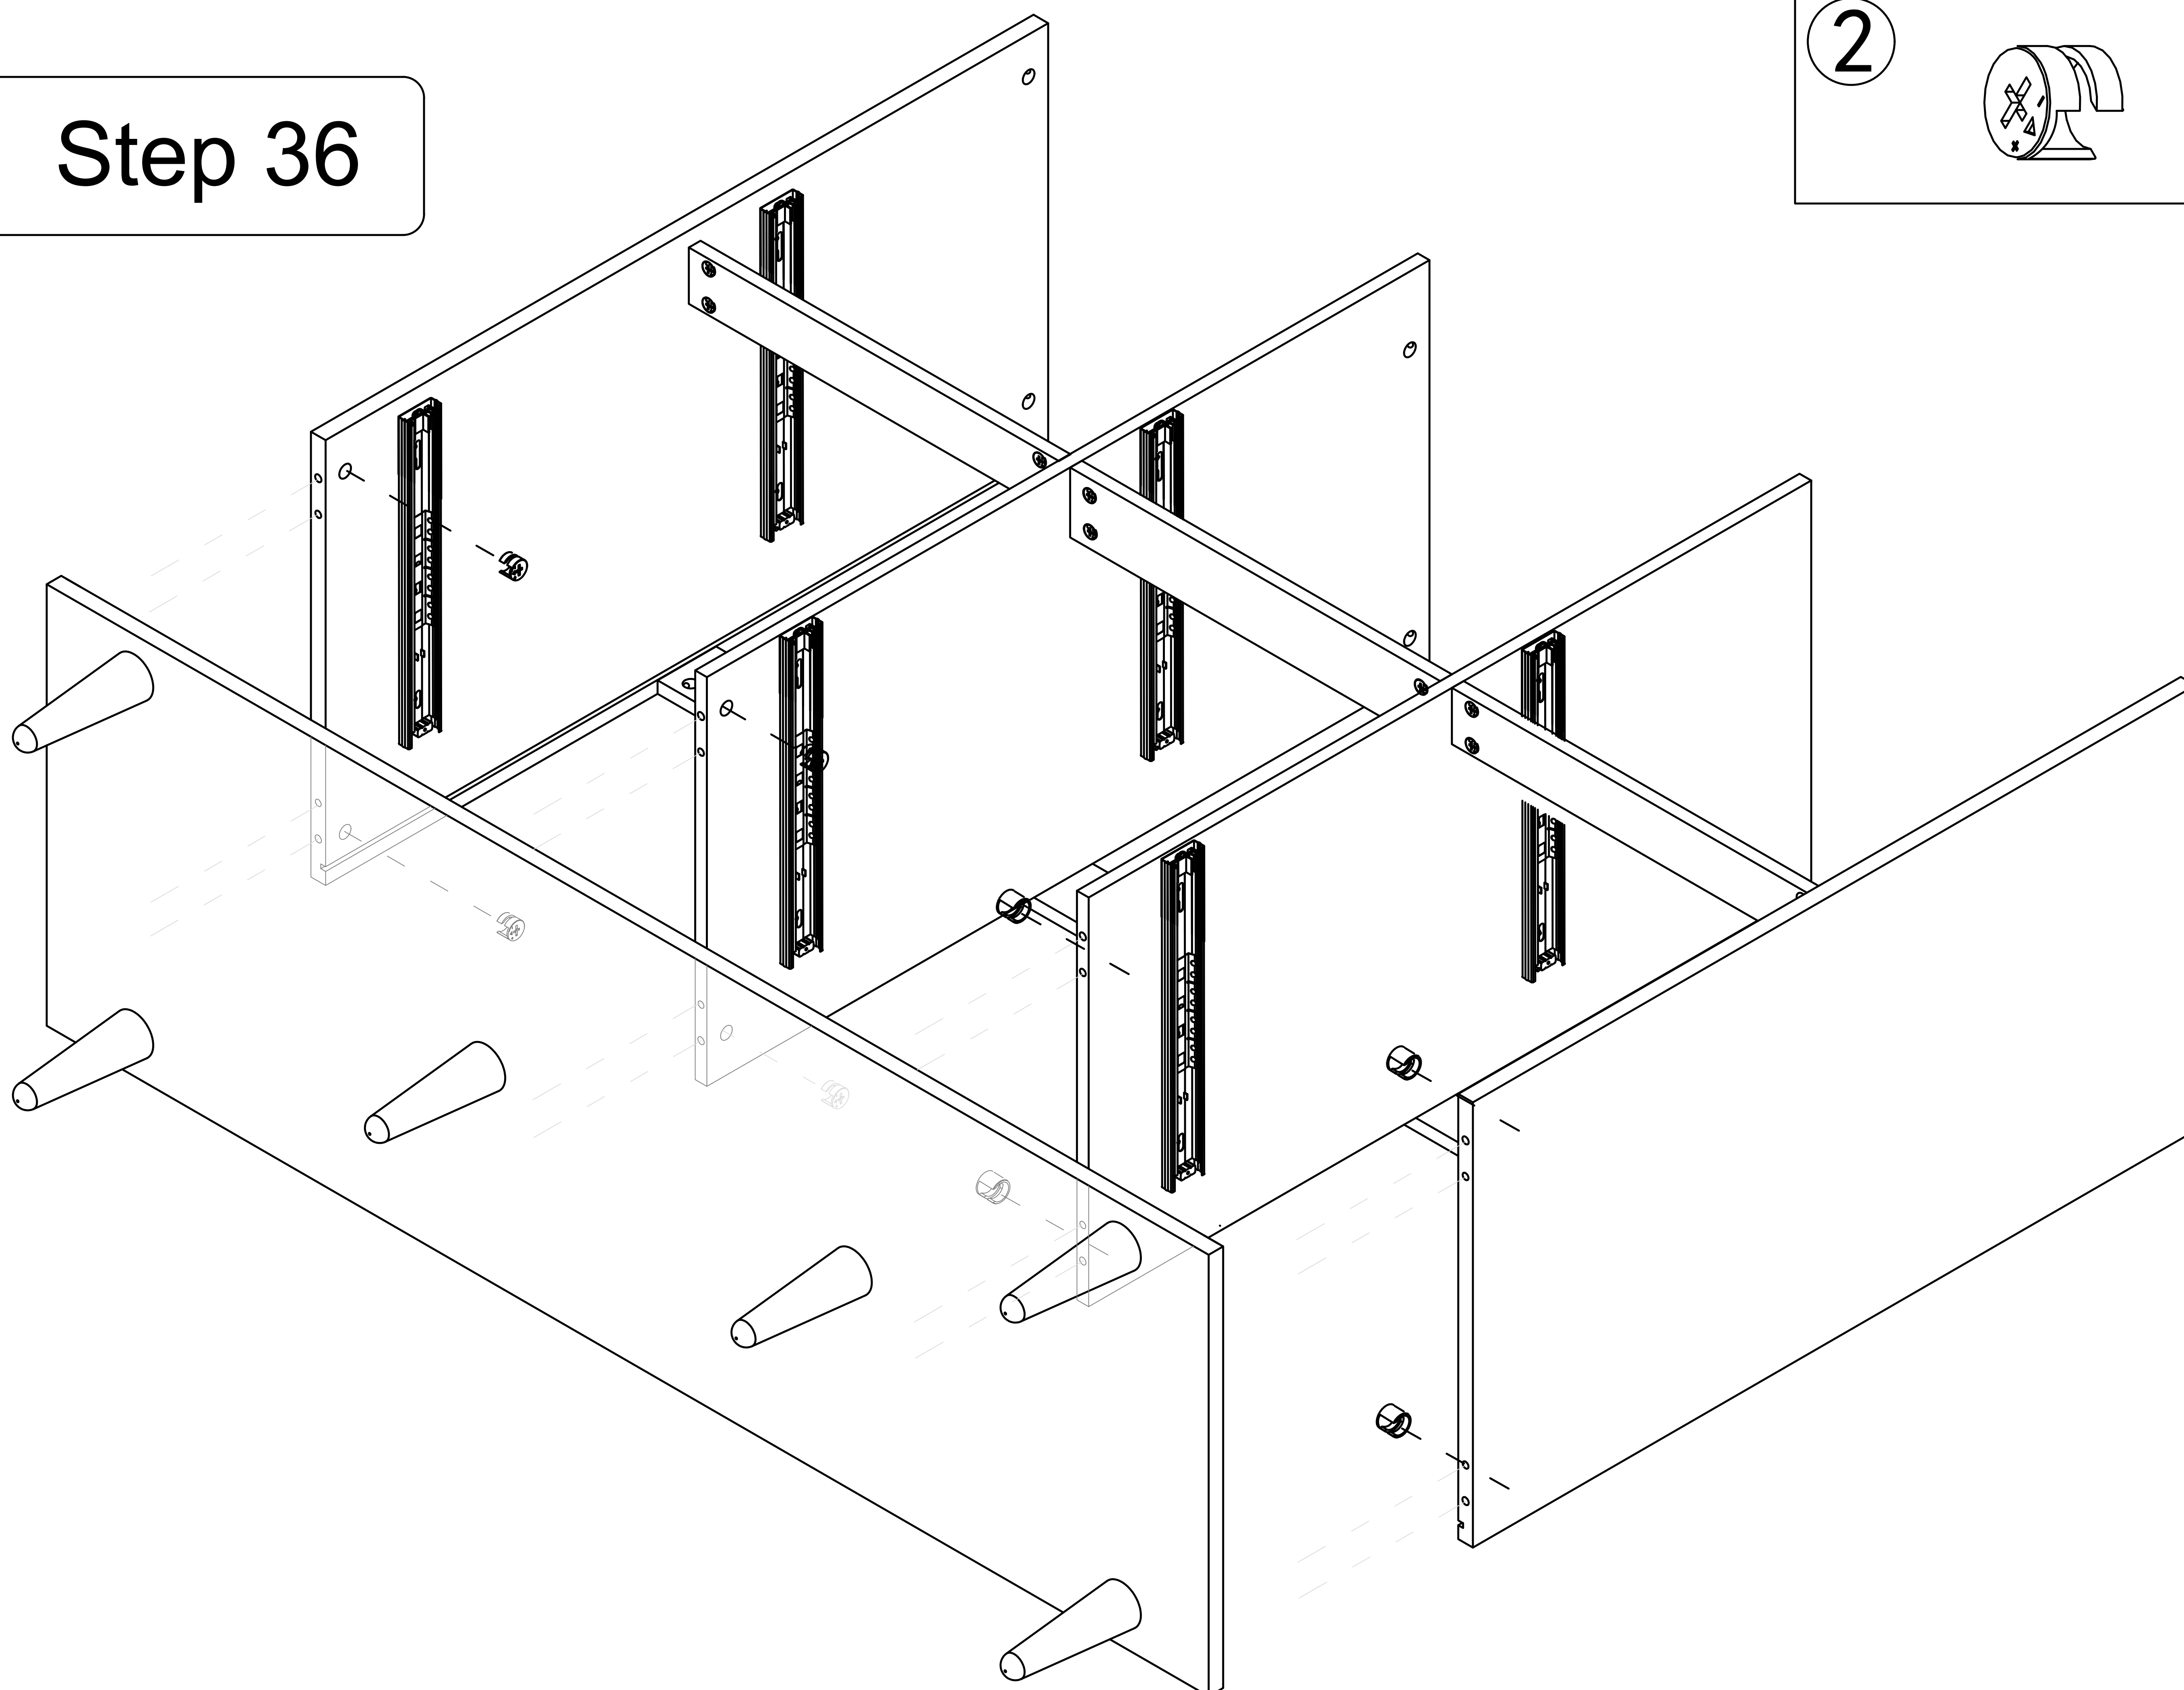


Step 37

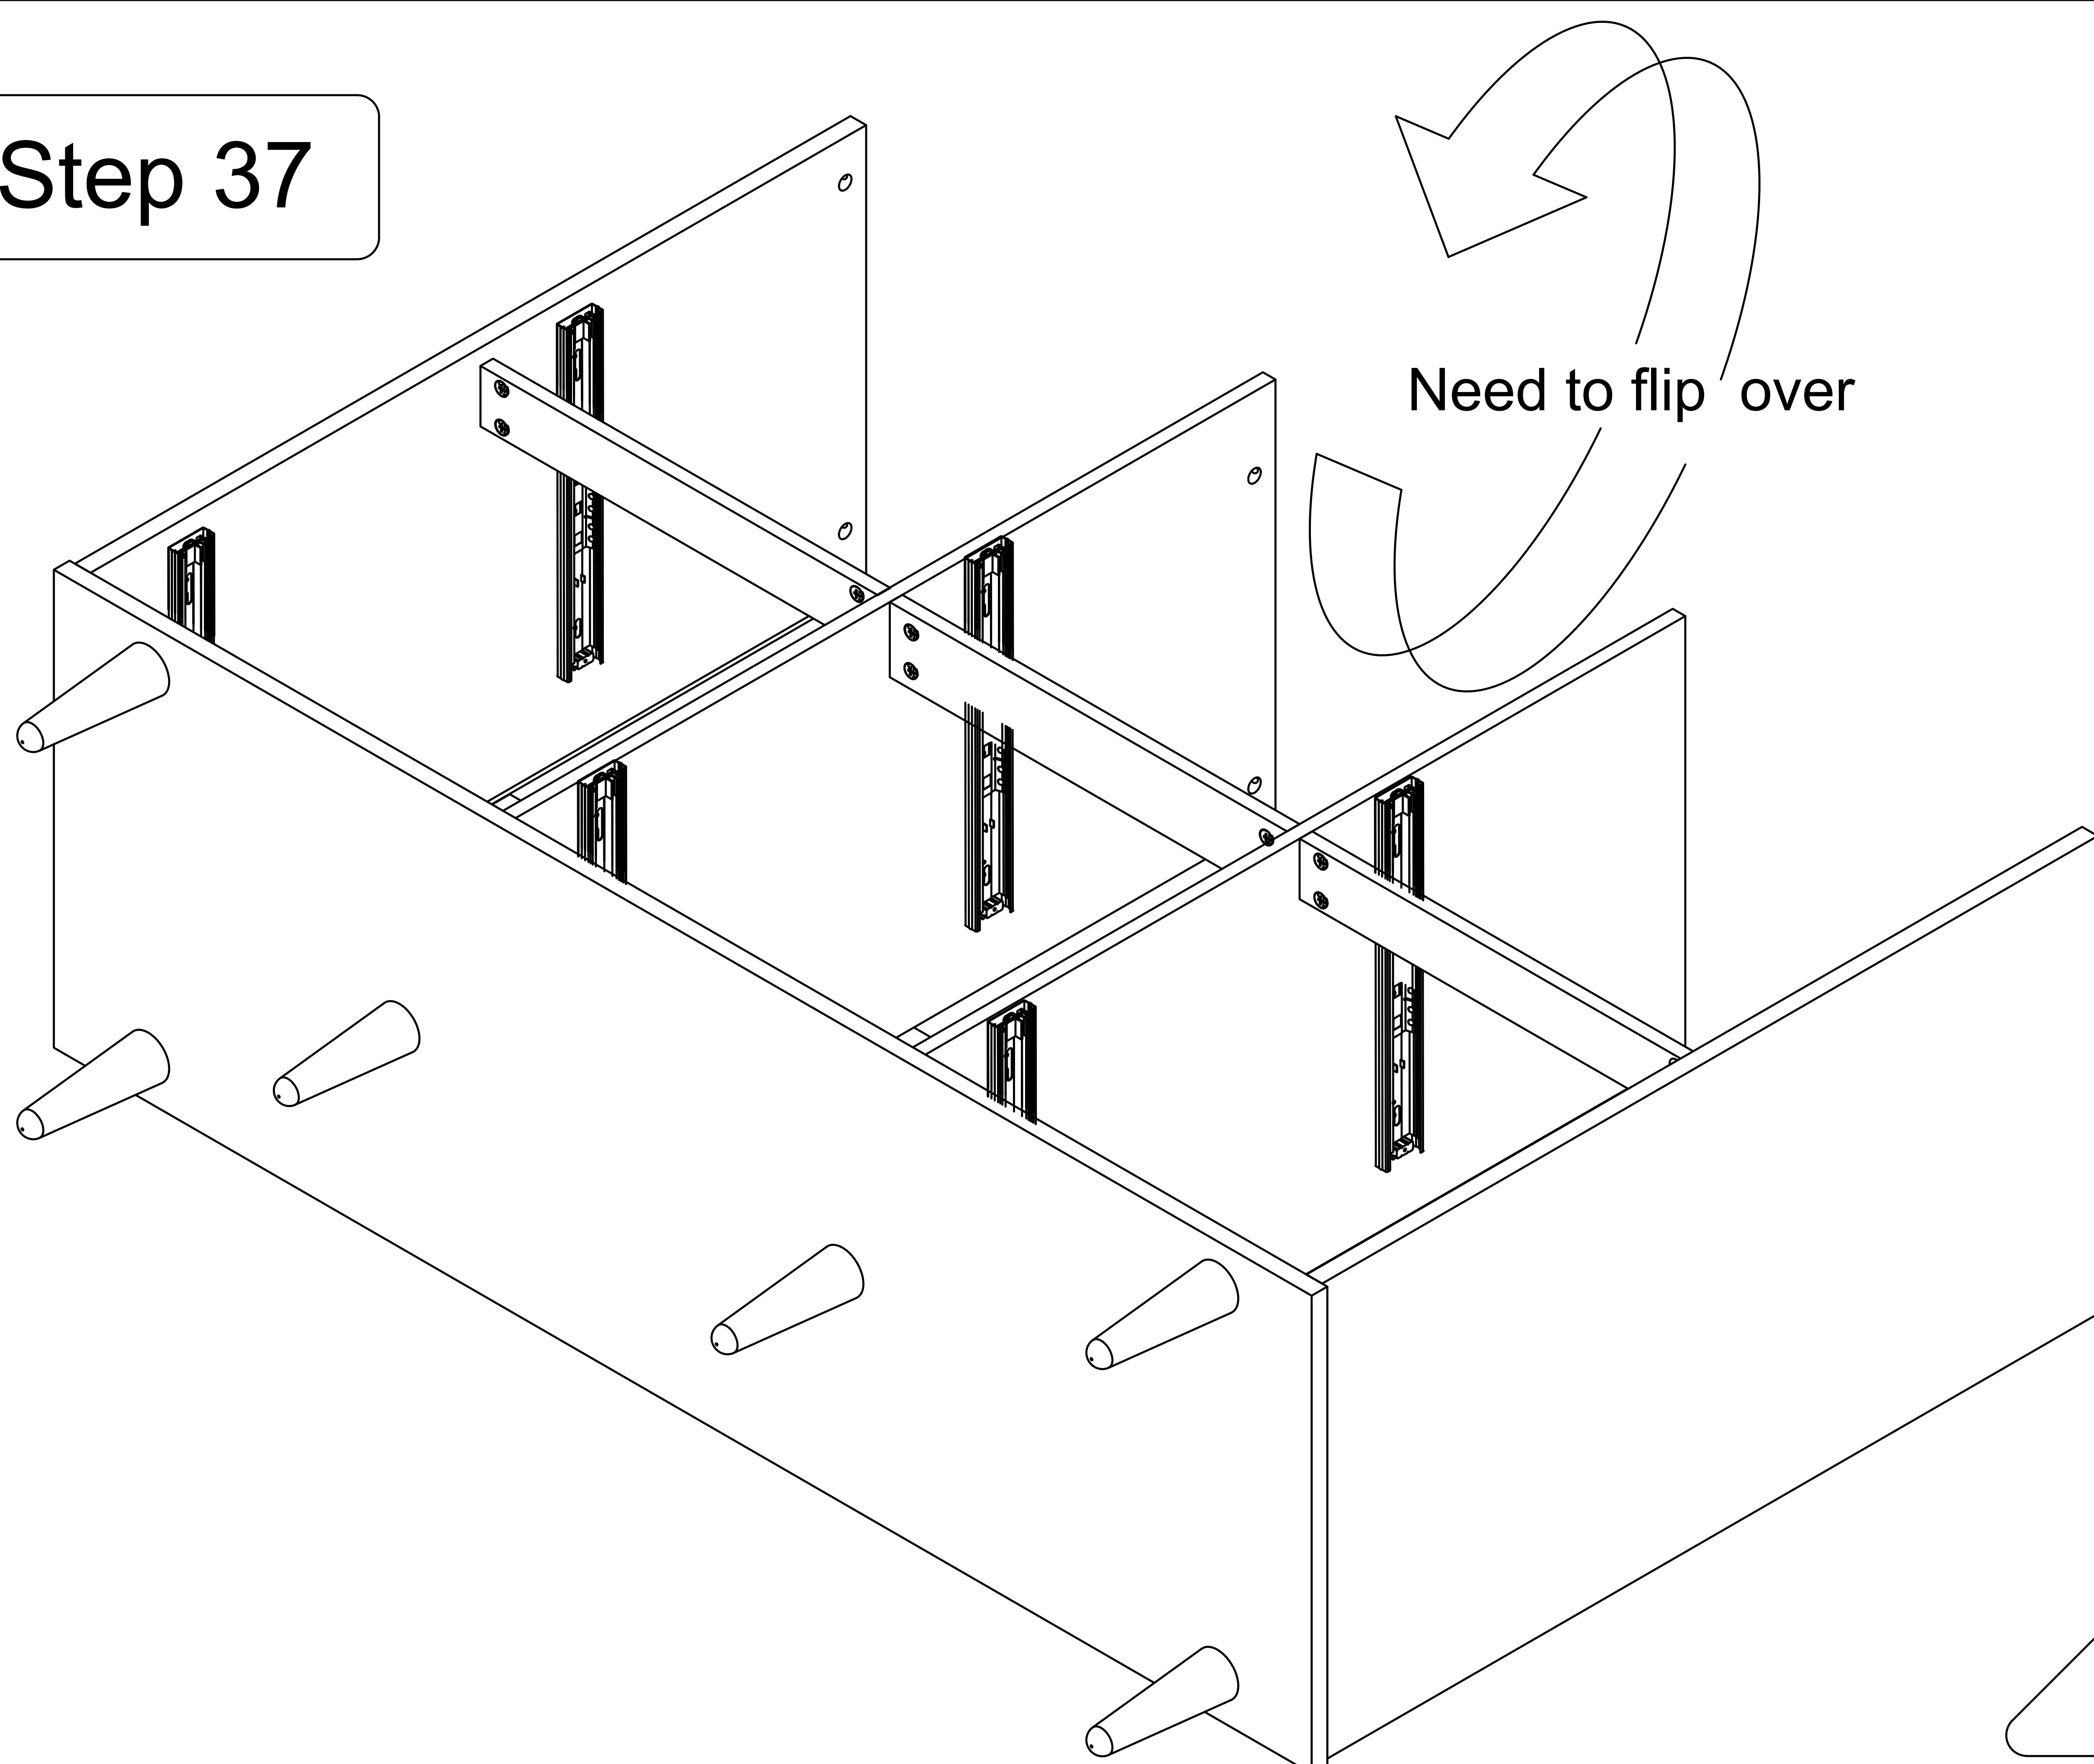


Need to flip over

Step 38

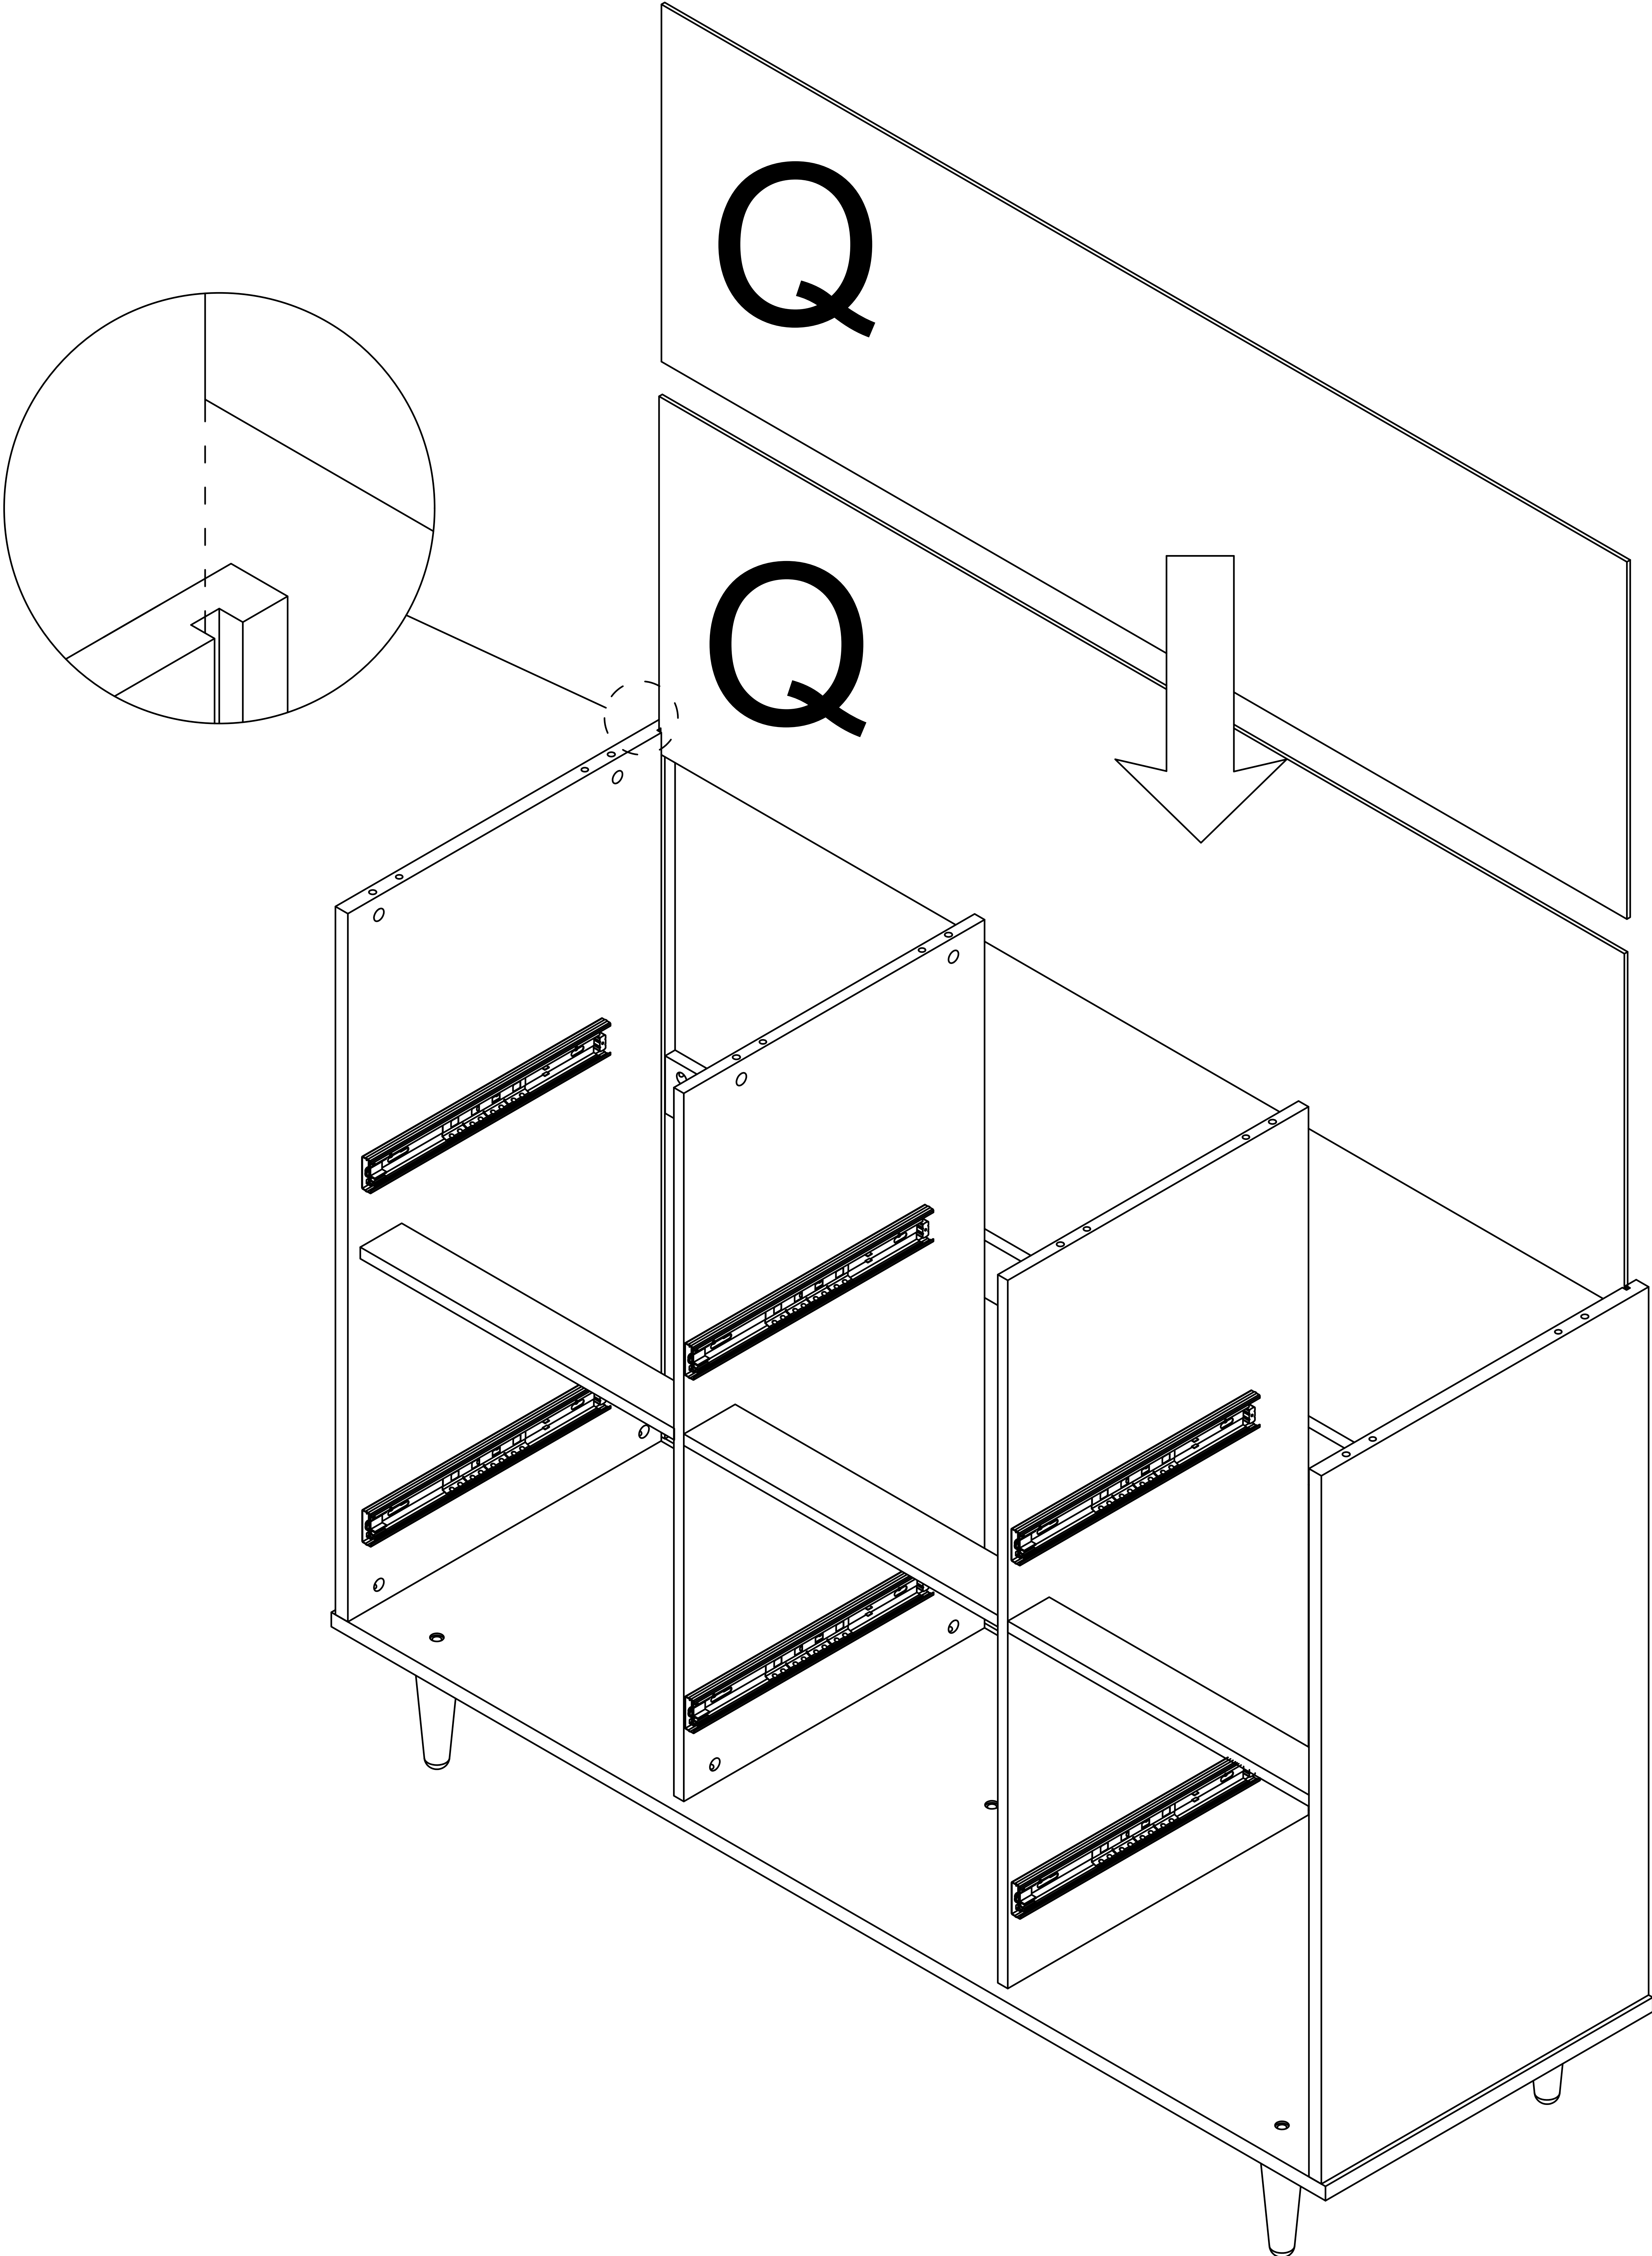


Step 39

3

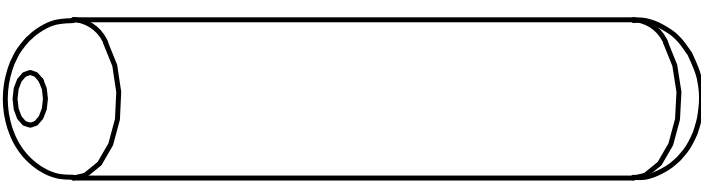


x8

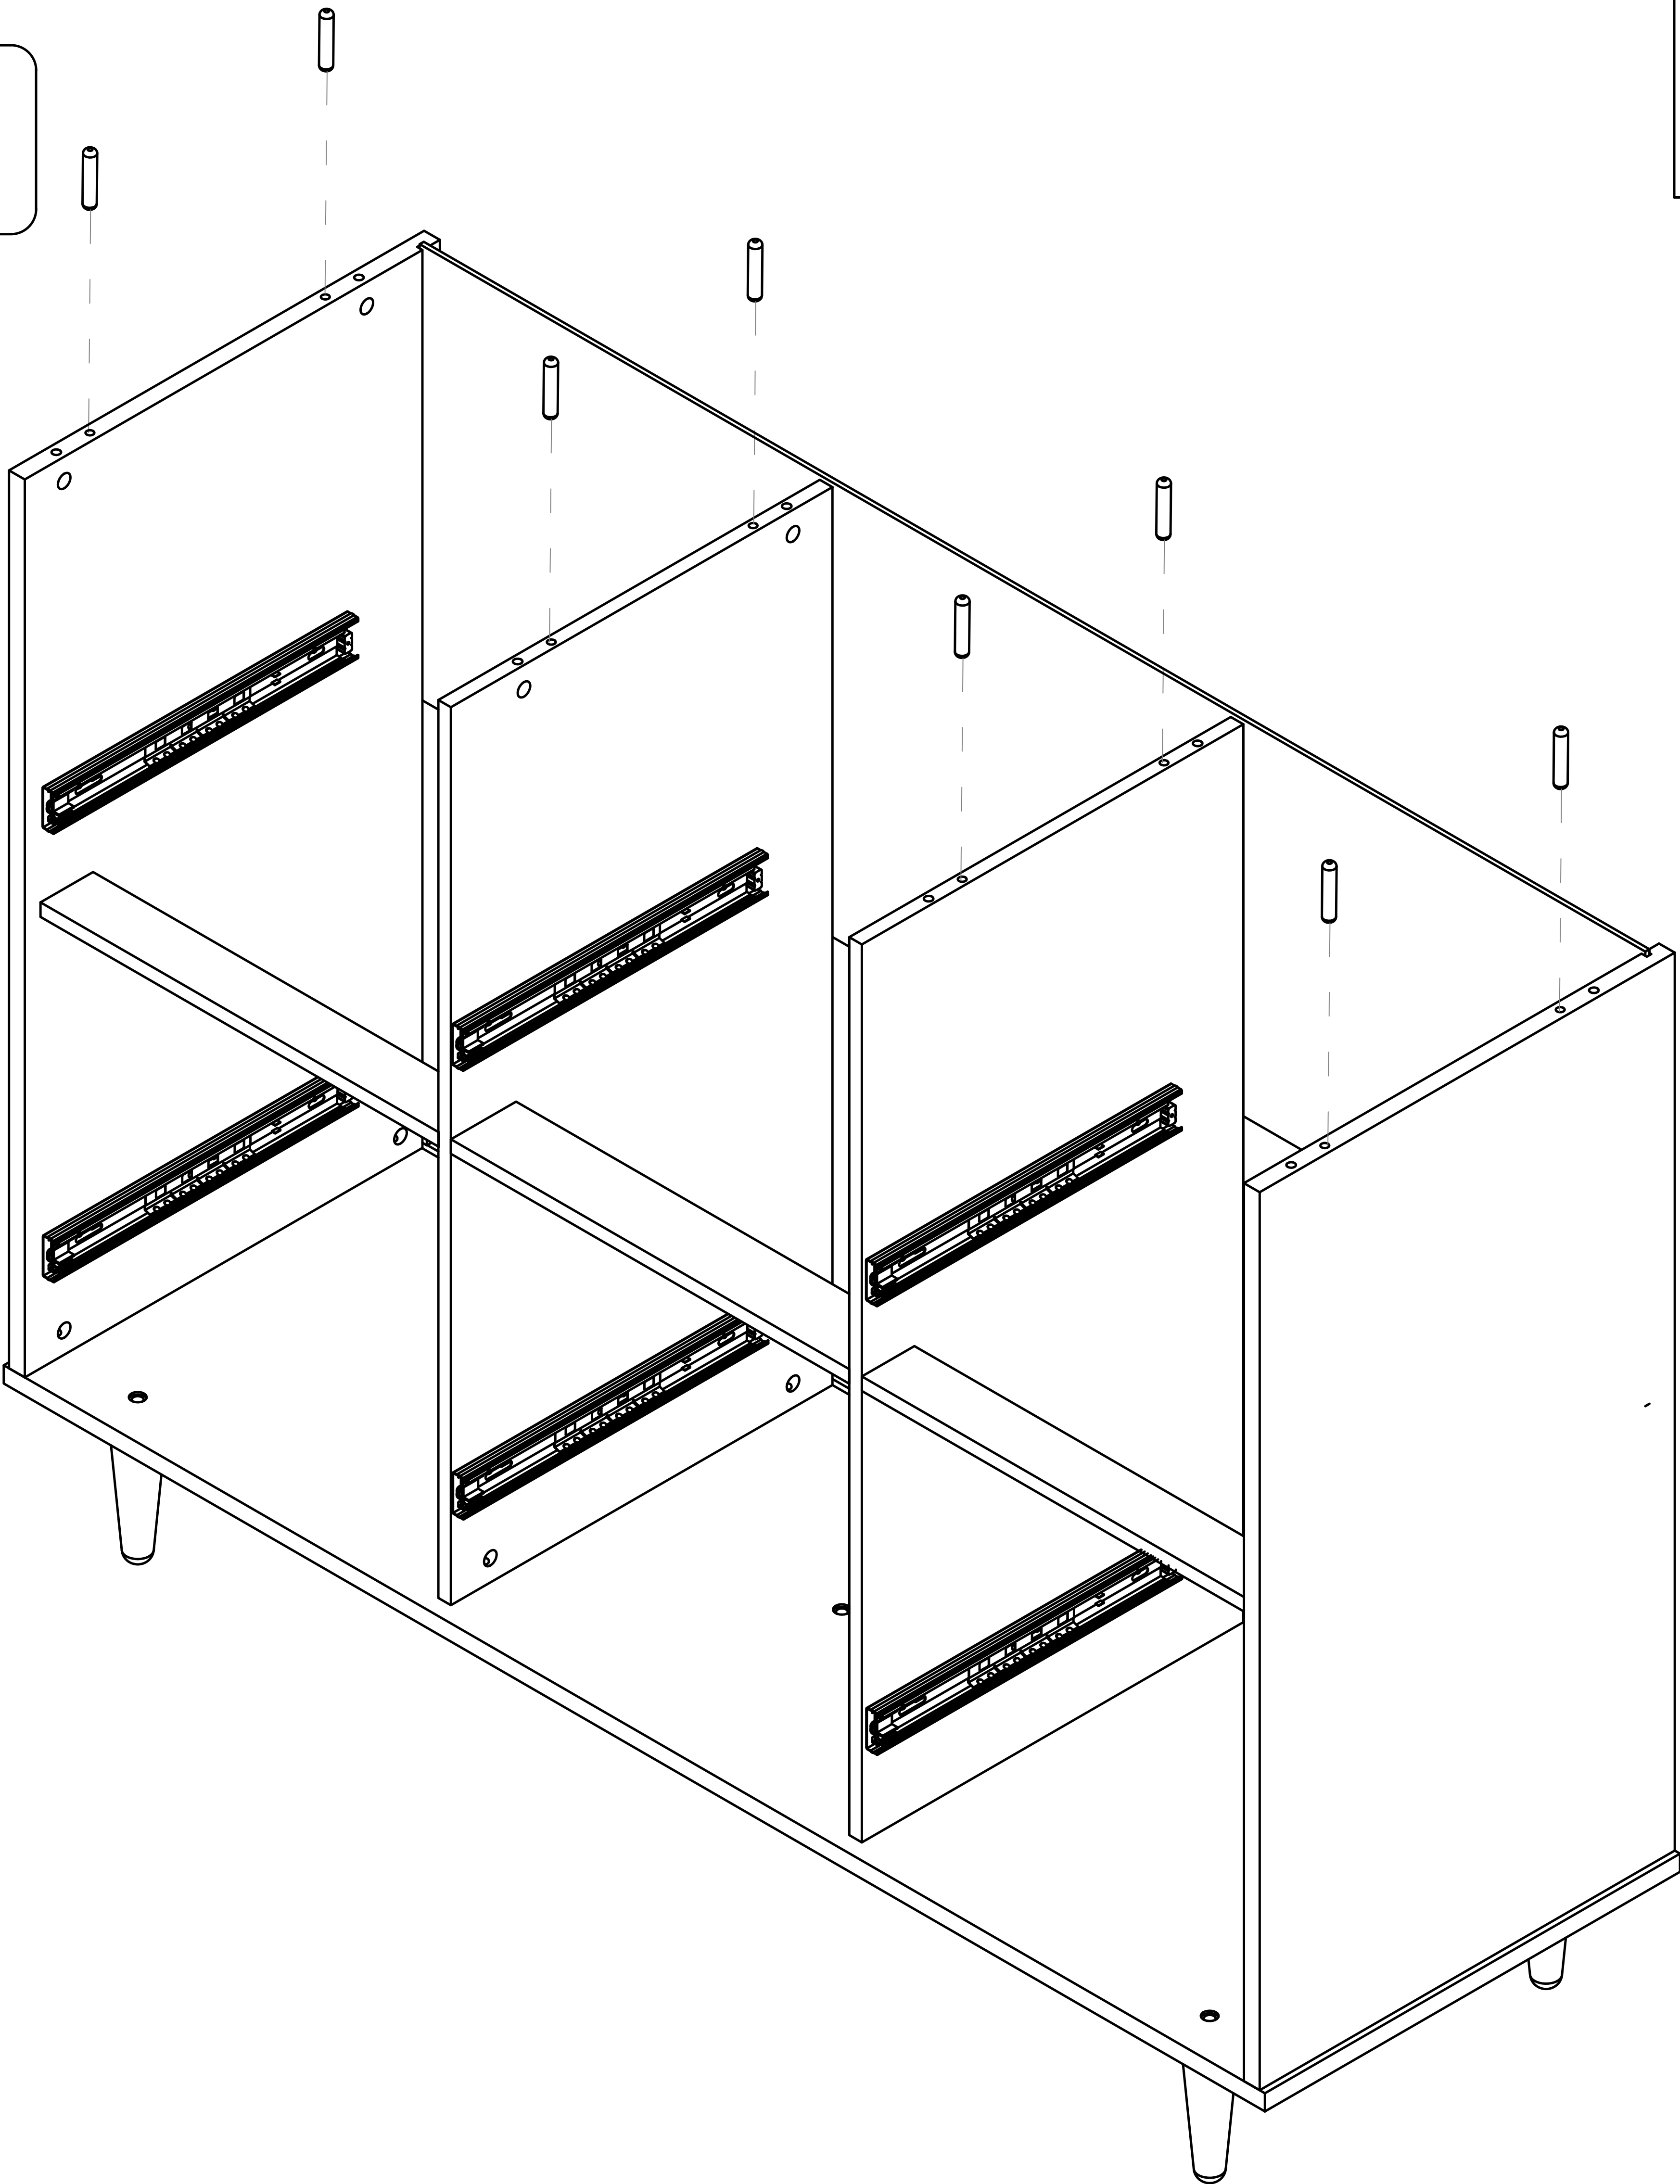


Step 40

1

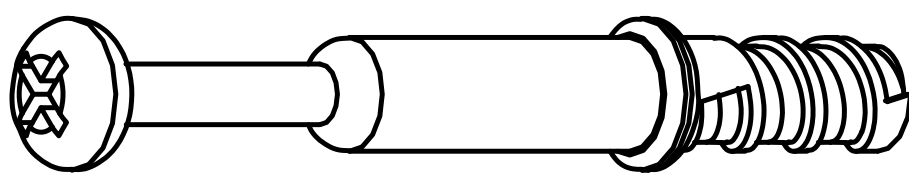


x8

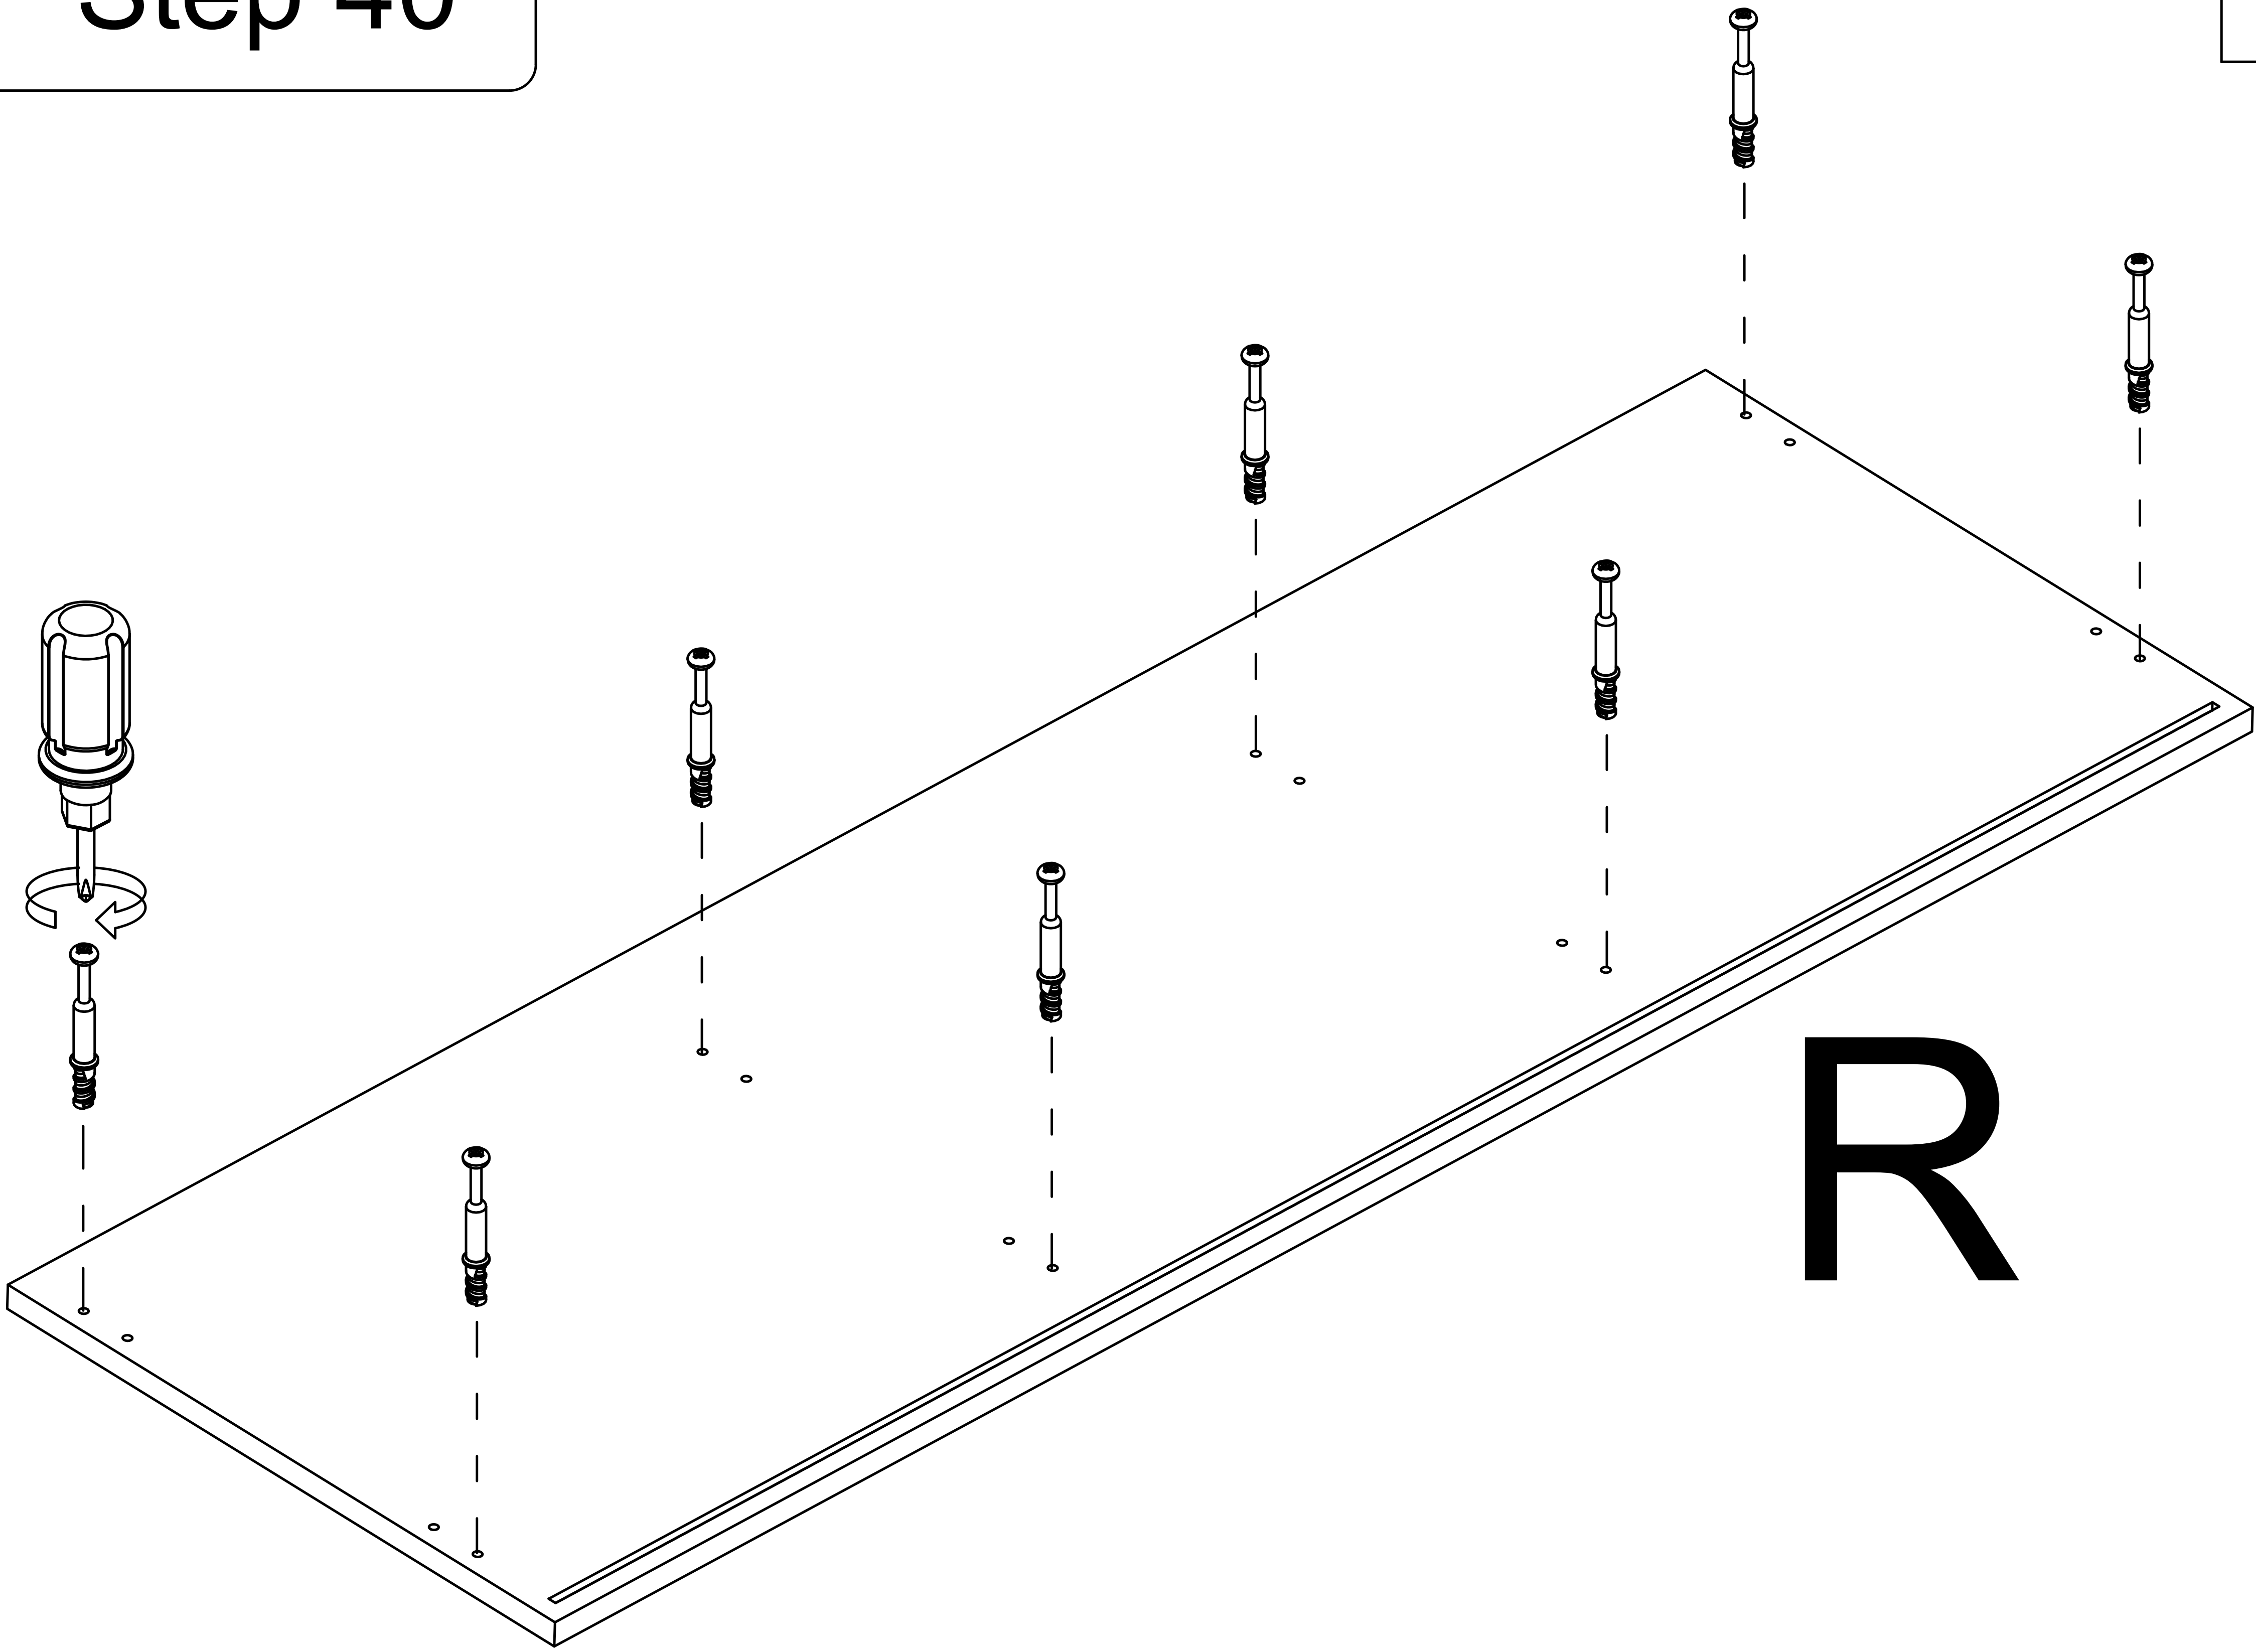

Step 41



2

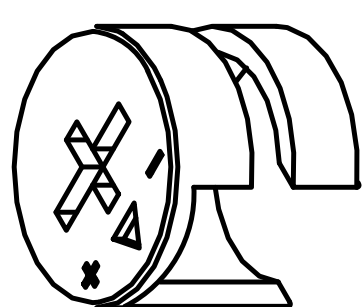

x8




Step 42

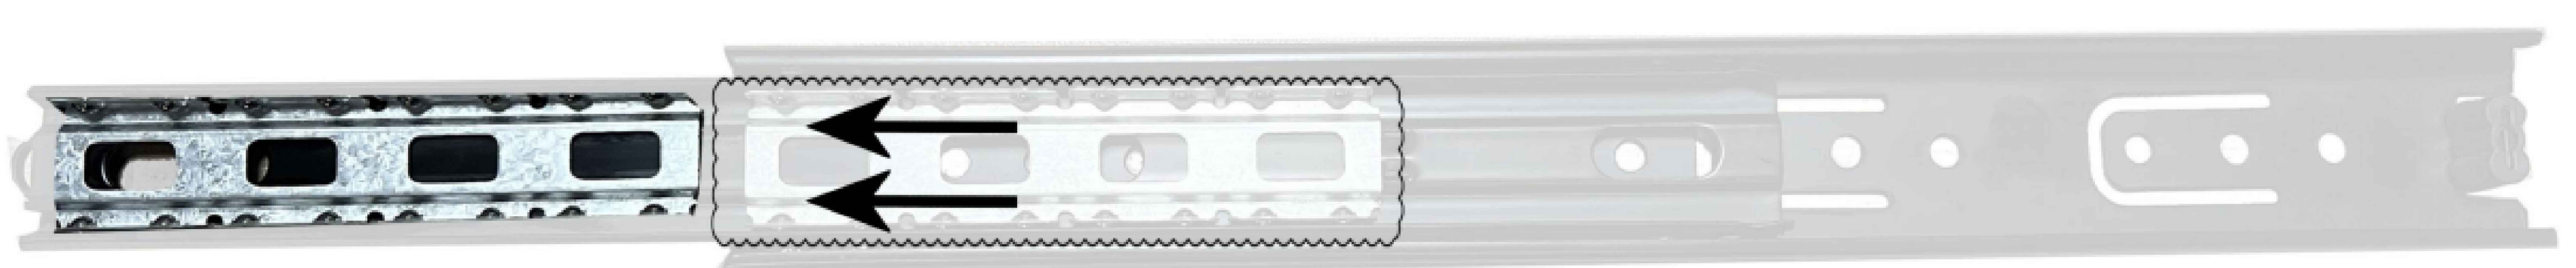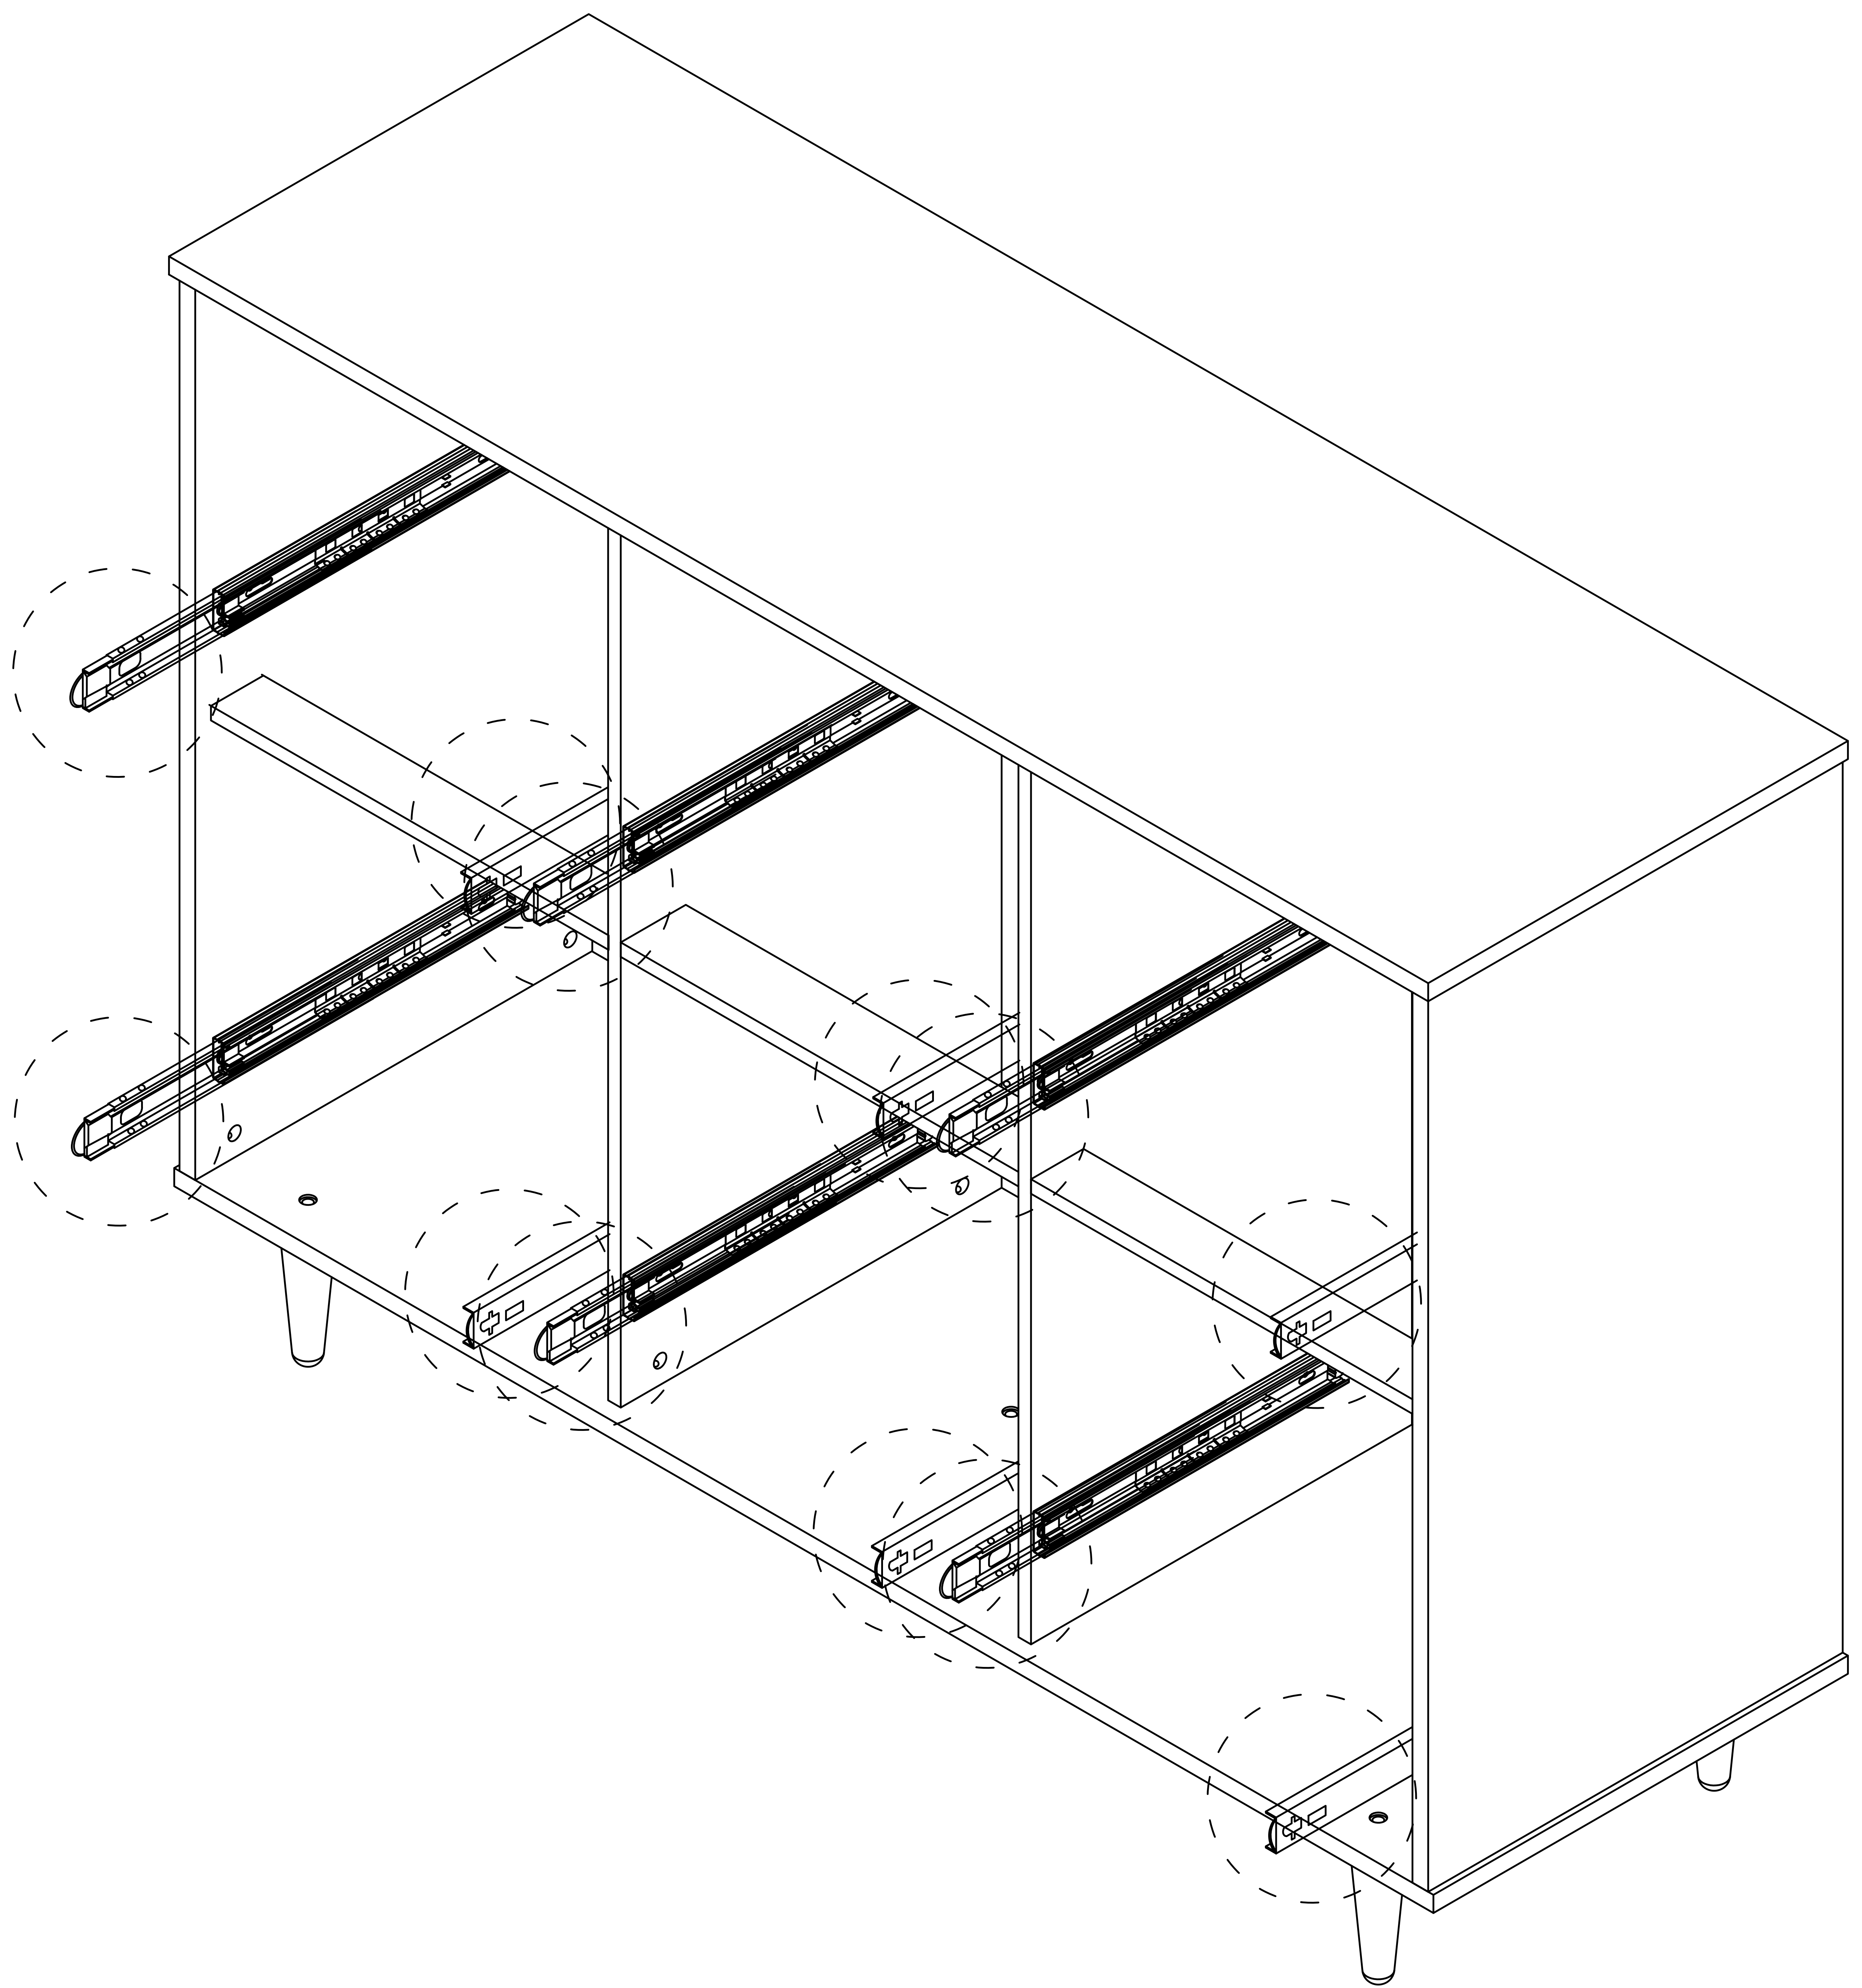





As shown, When installing the drawer,
pull the guide rail out first, Slide beads are also pulled out.

Step 43

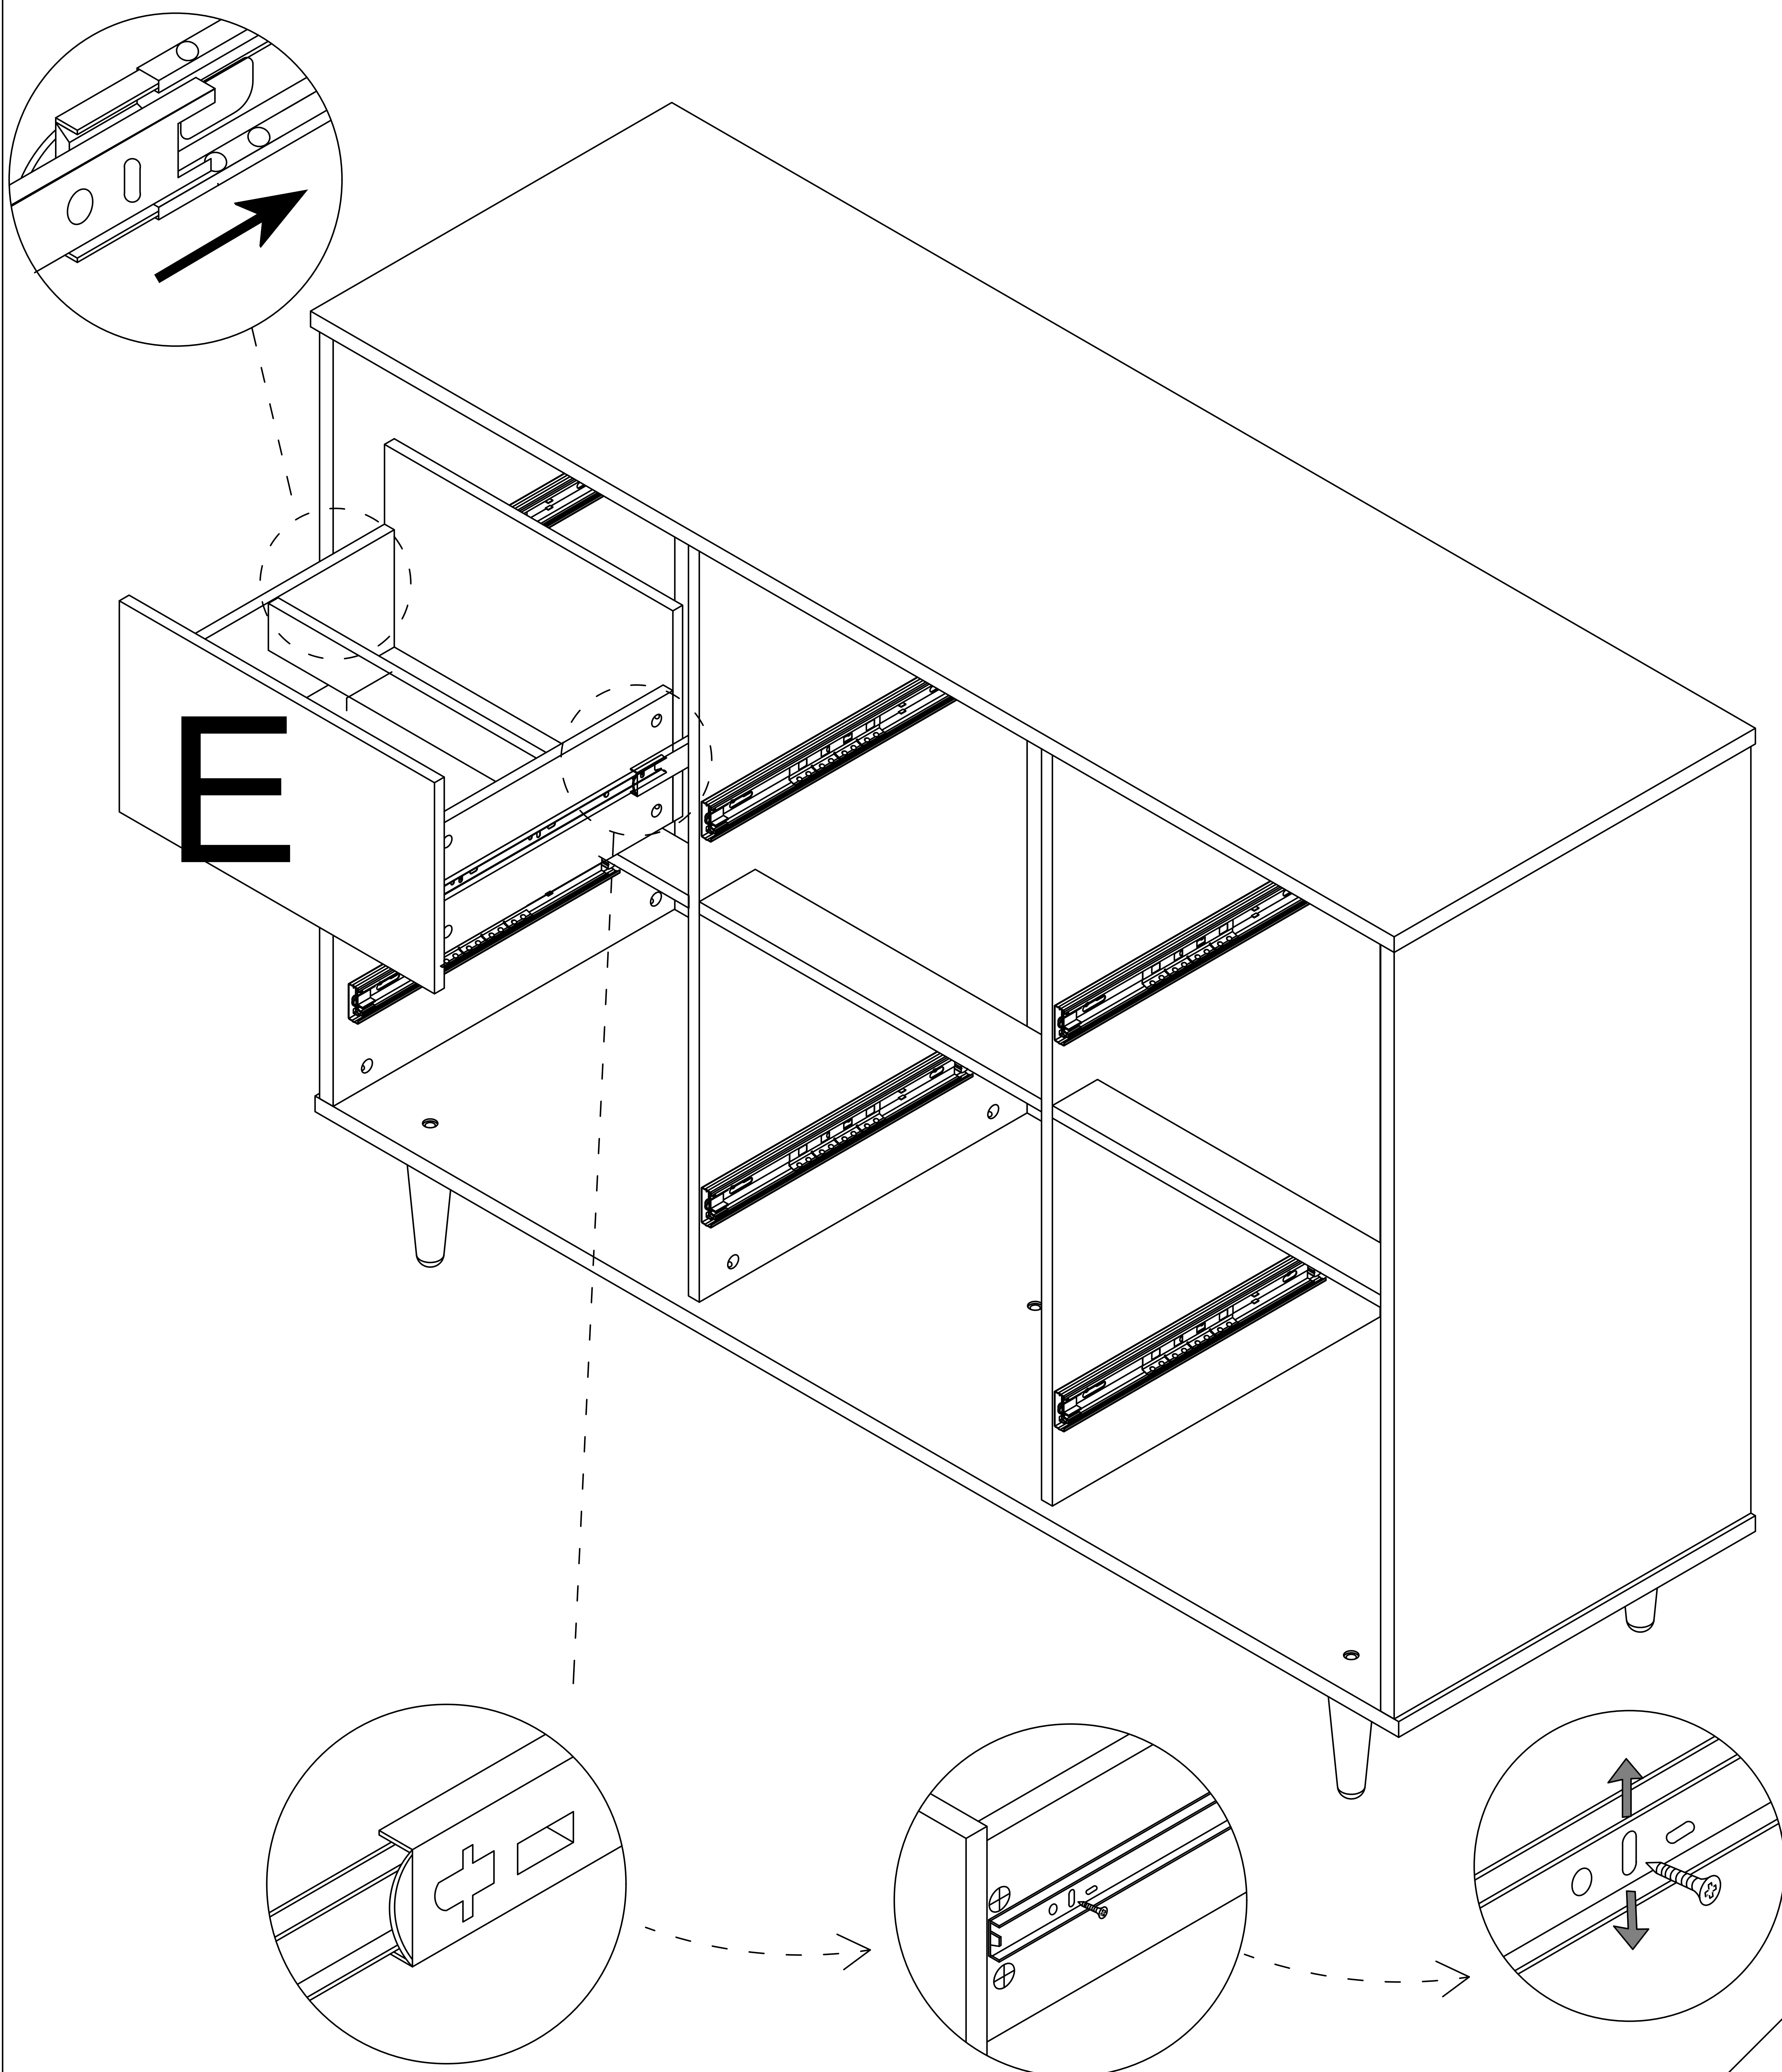

If a large gap is found after installing the drawer the slide rail can be moved up and down to adjust the gap


Step 44

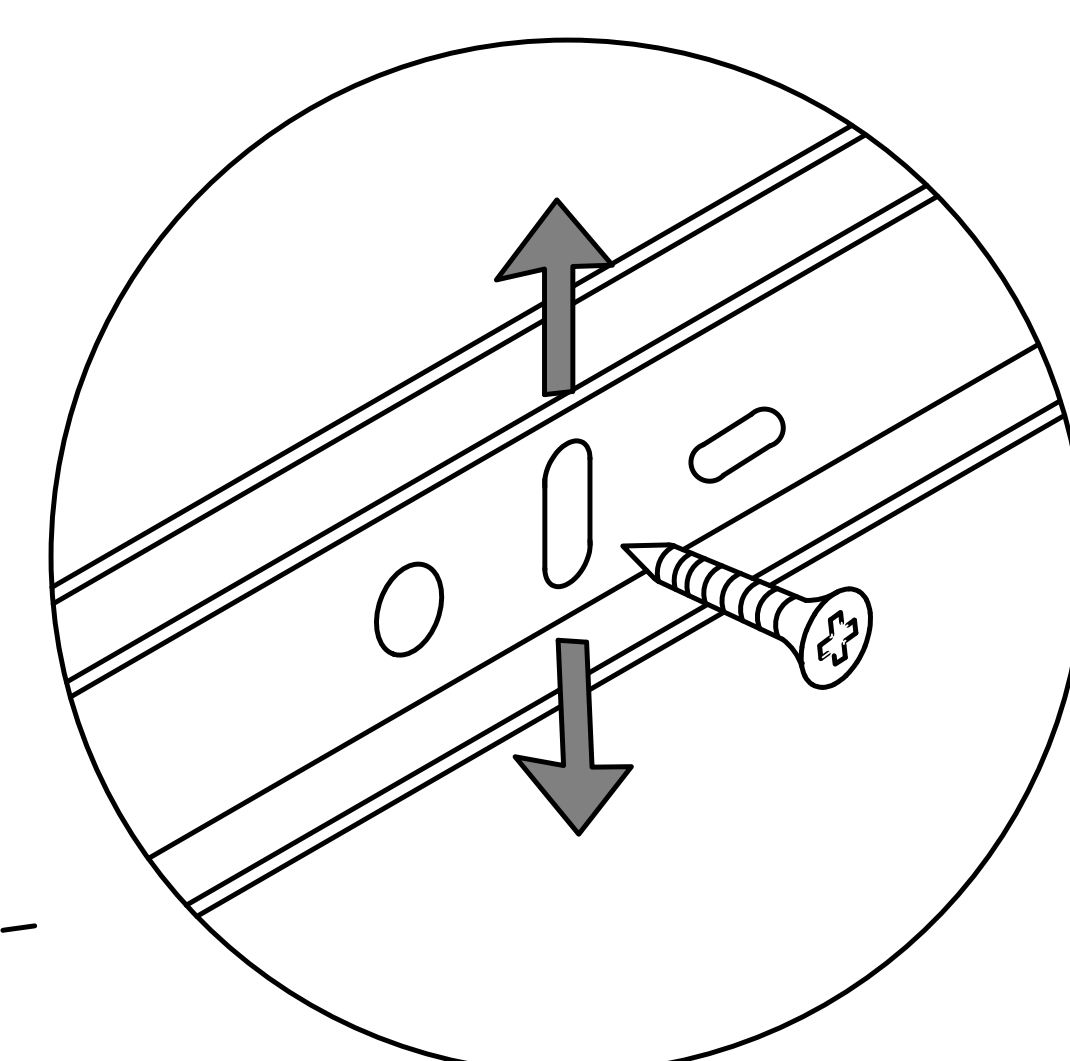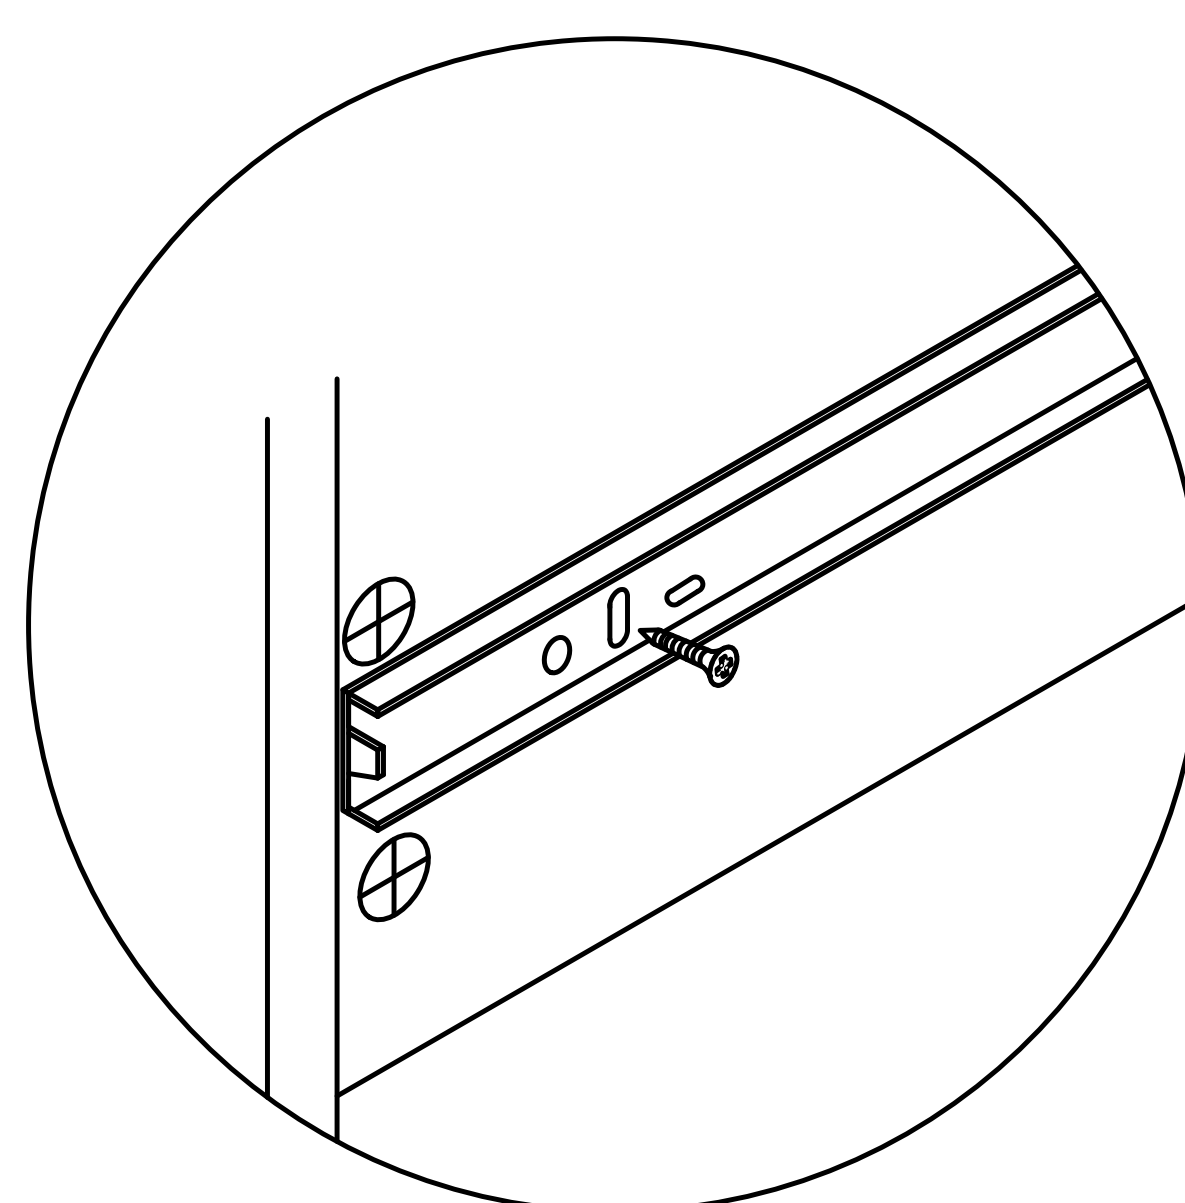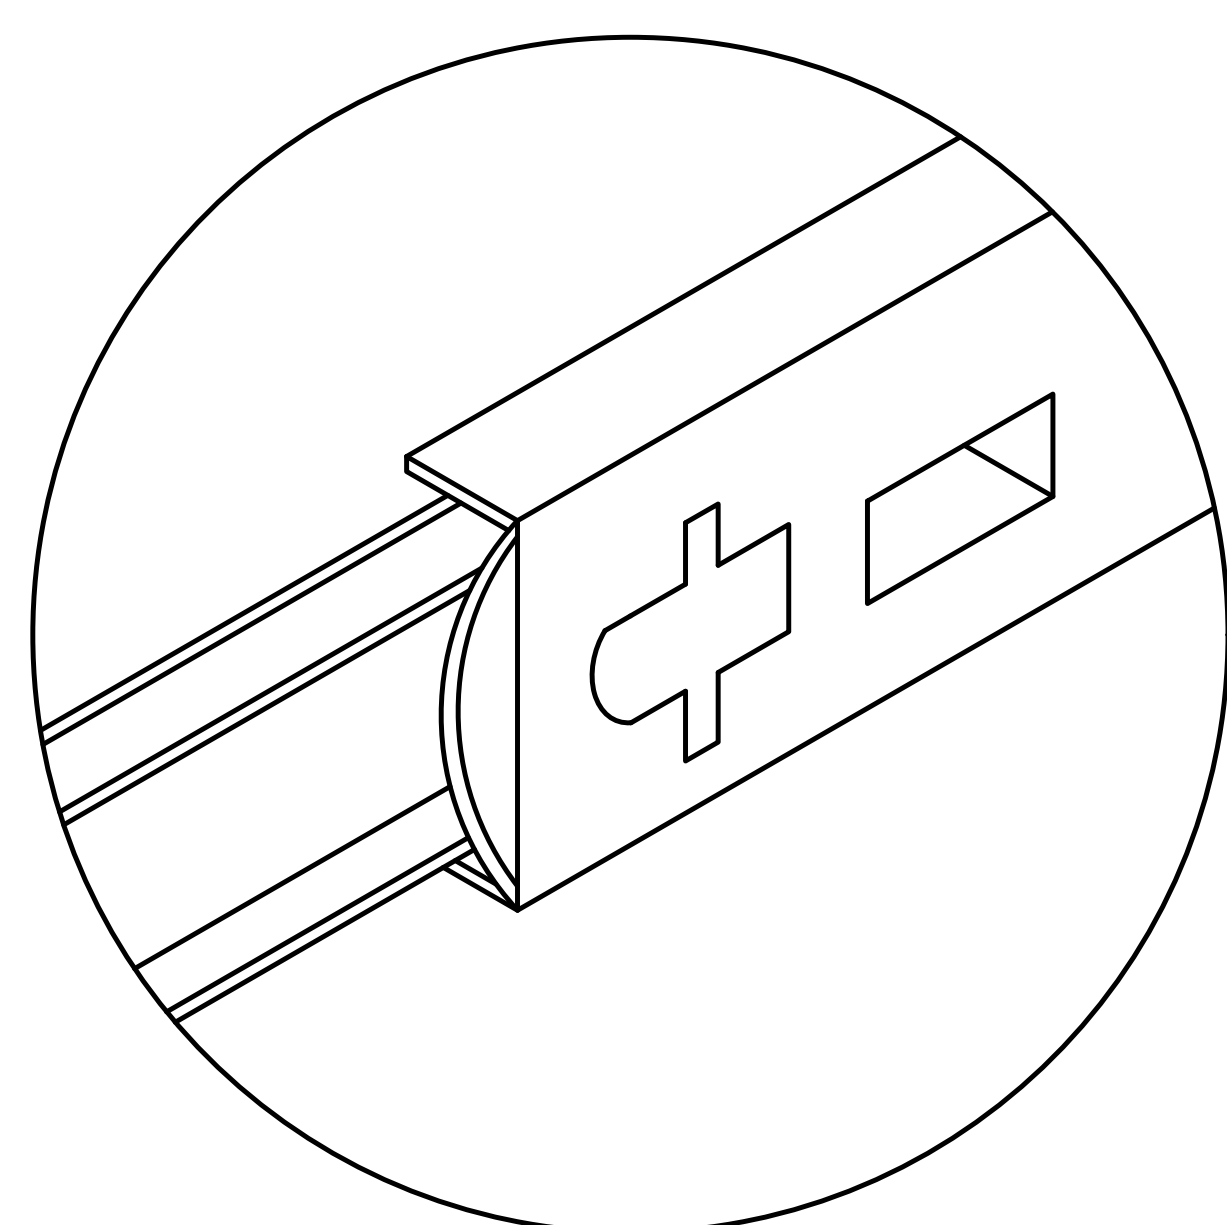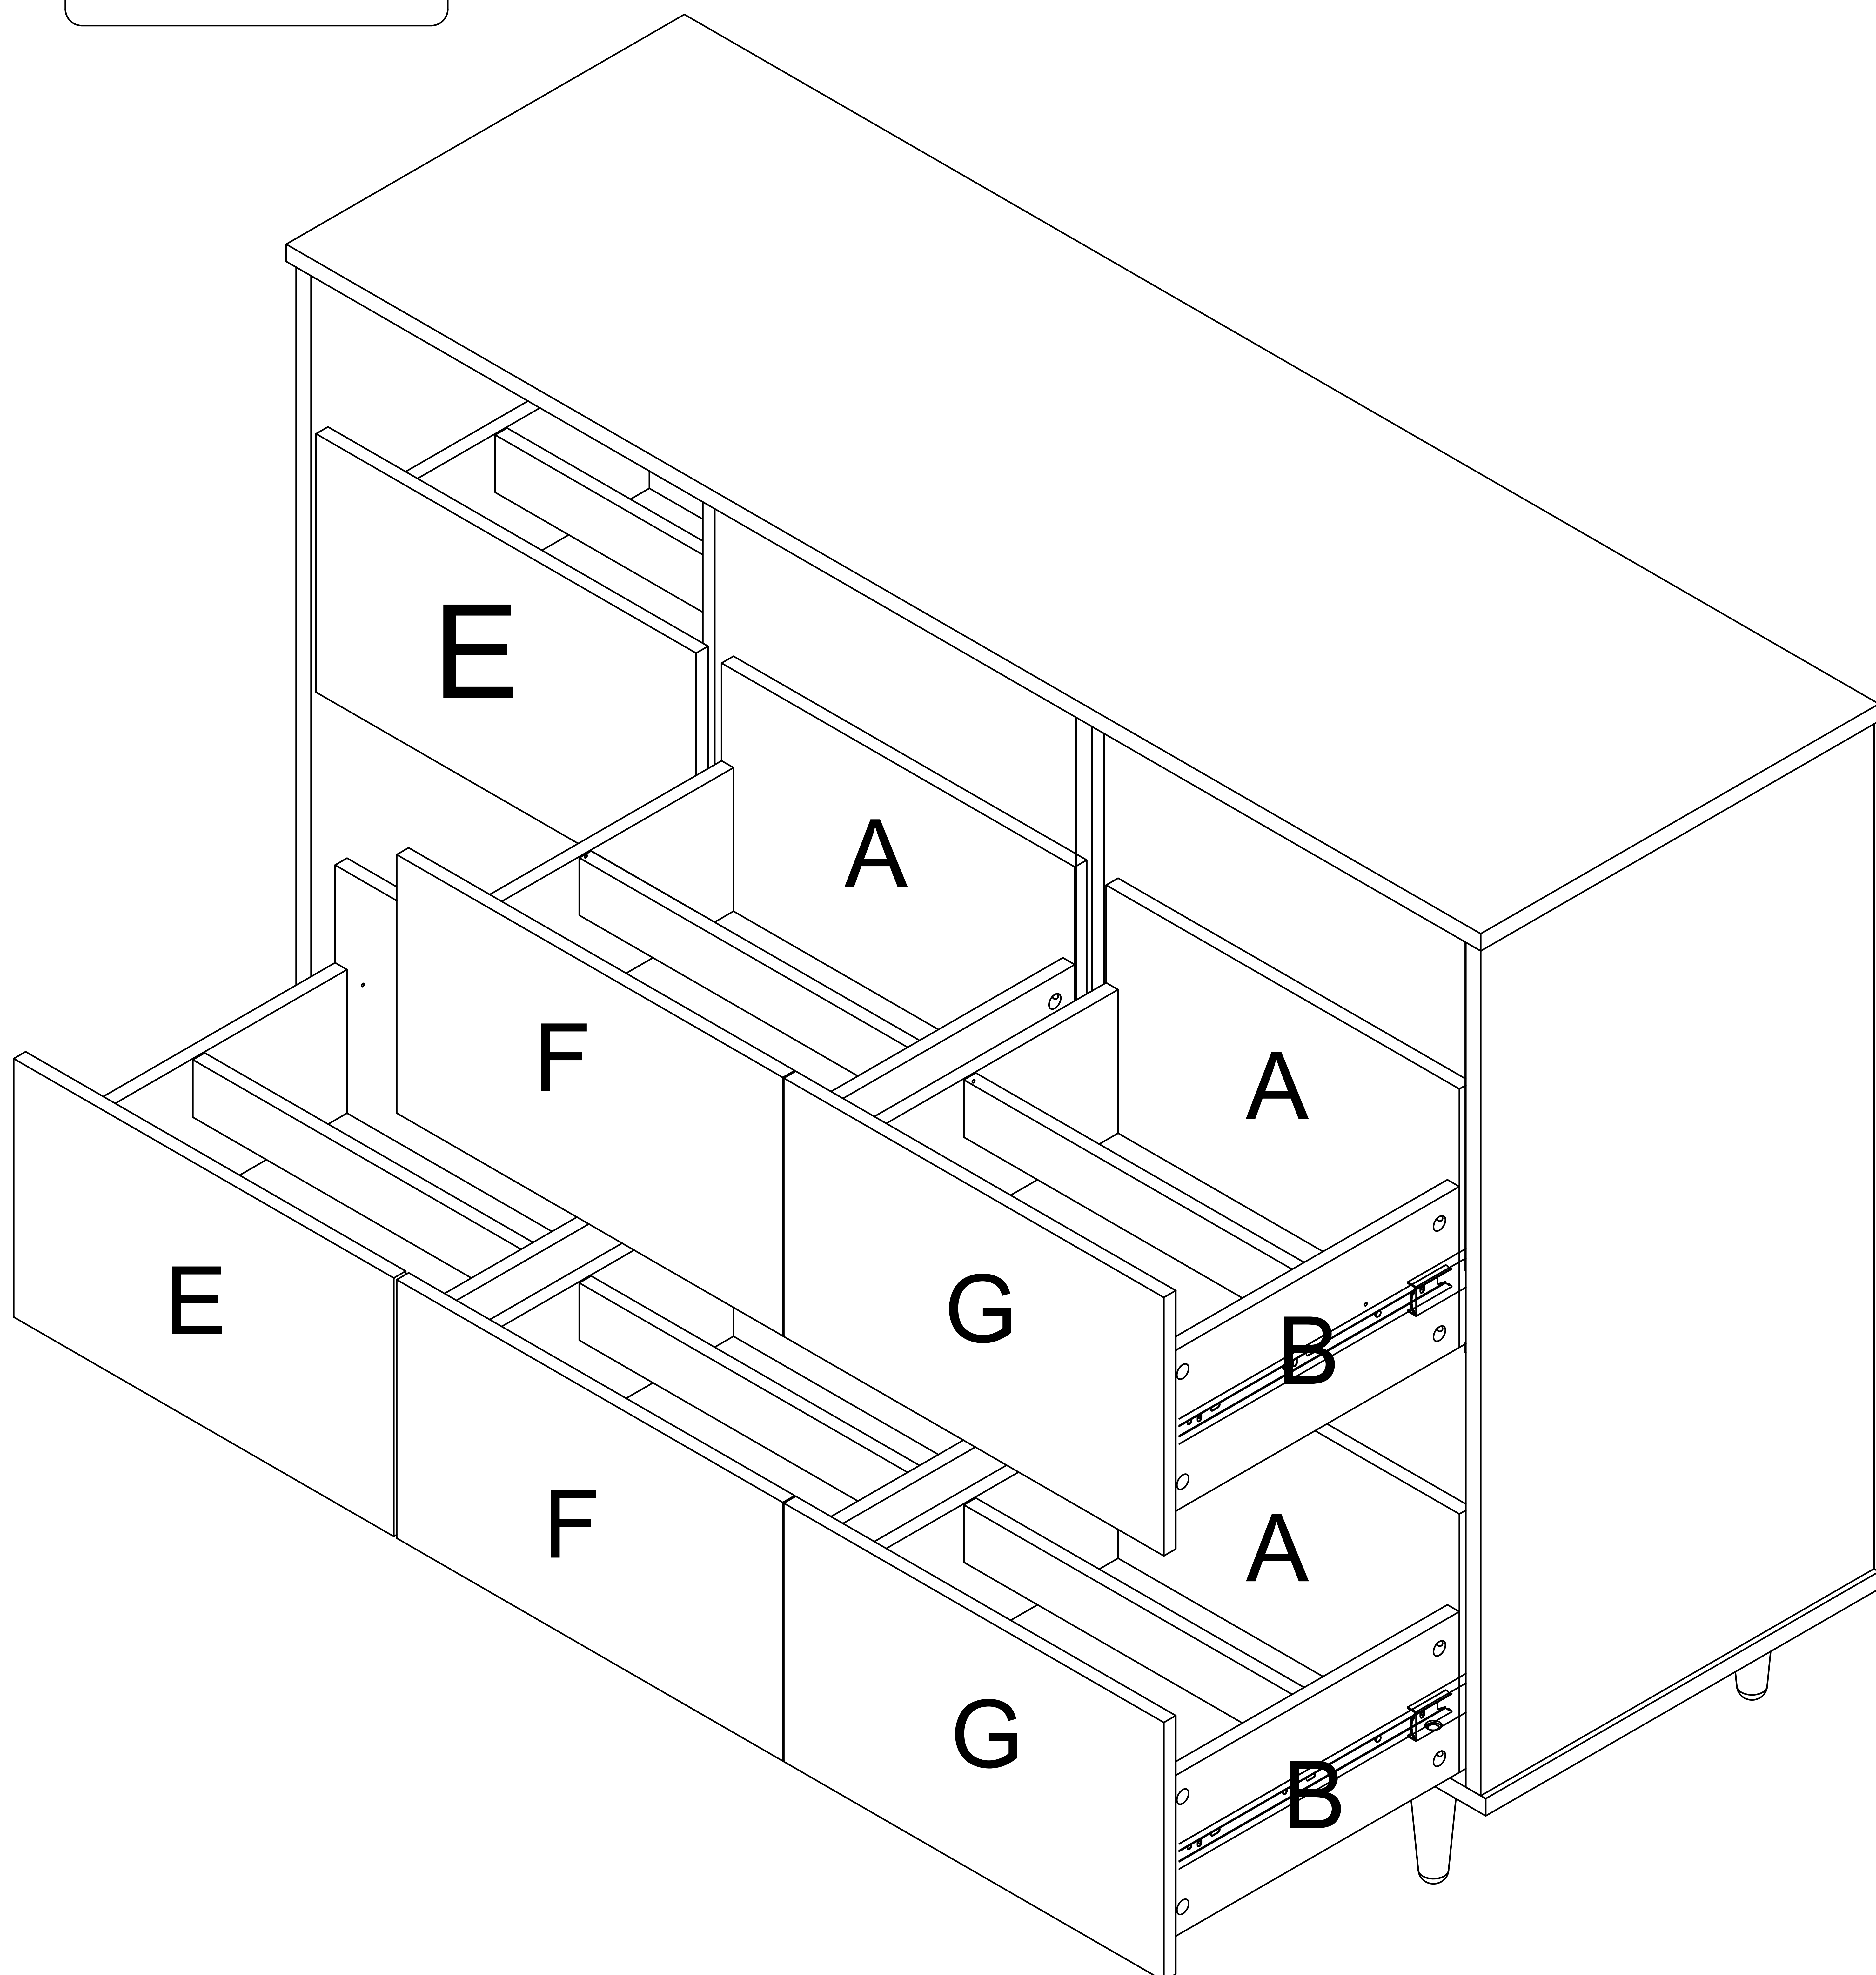


If a large gap is found after installing the drawer the slide rail can be moved up and down to adjust the gap

Step 45

6

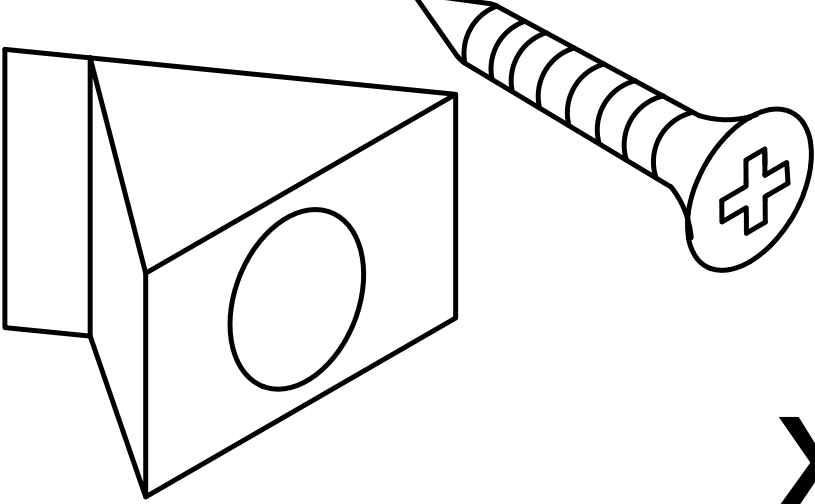


x12

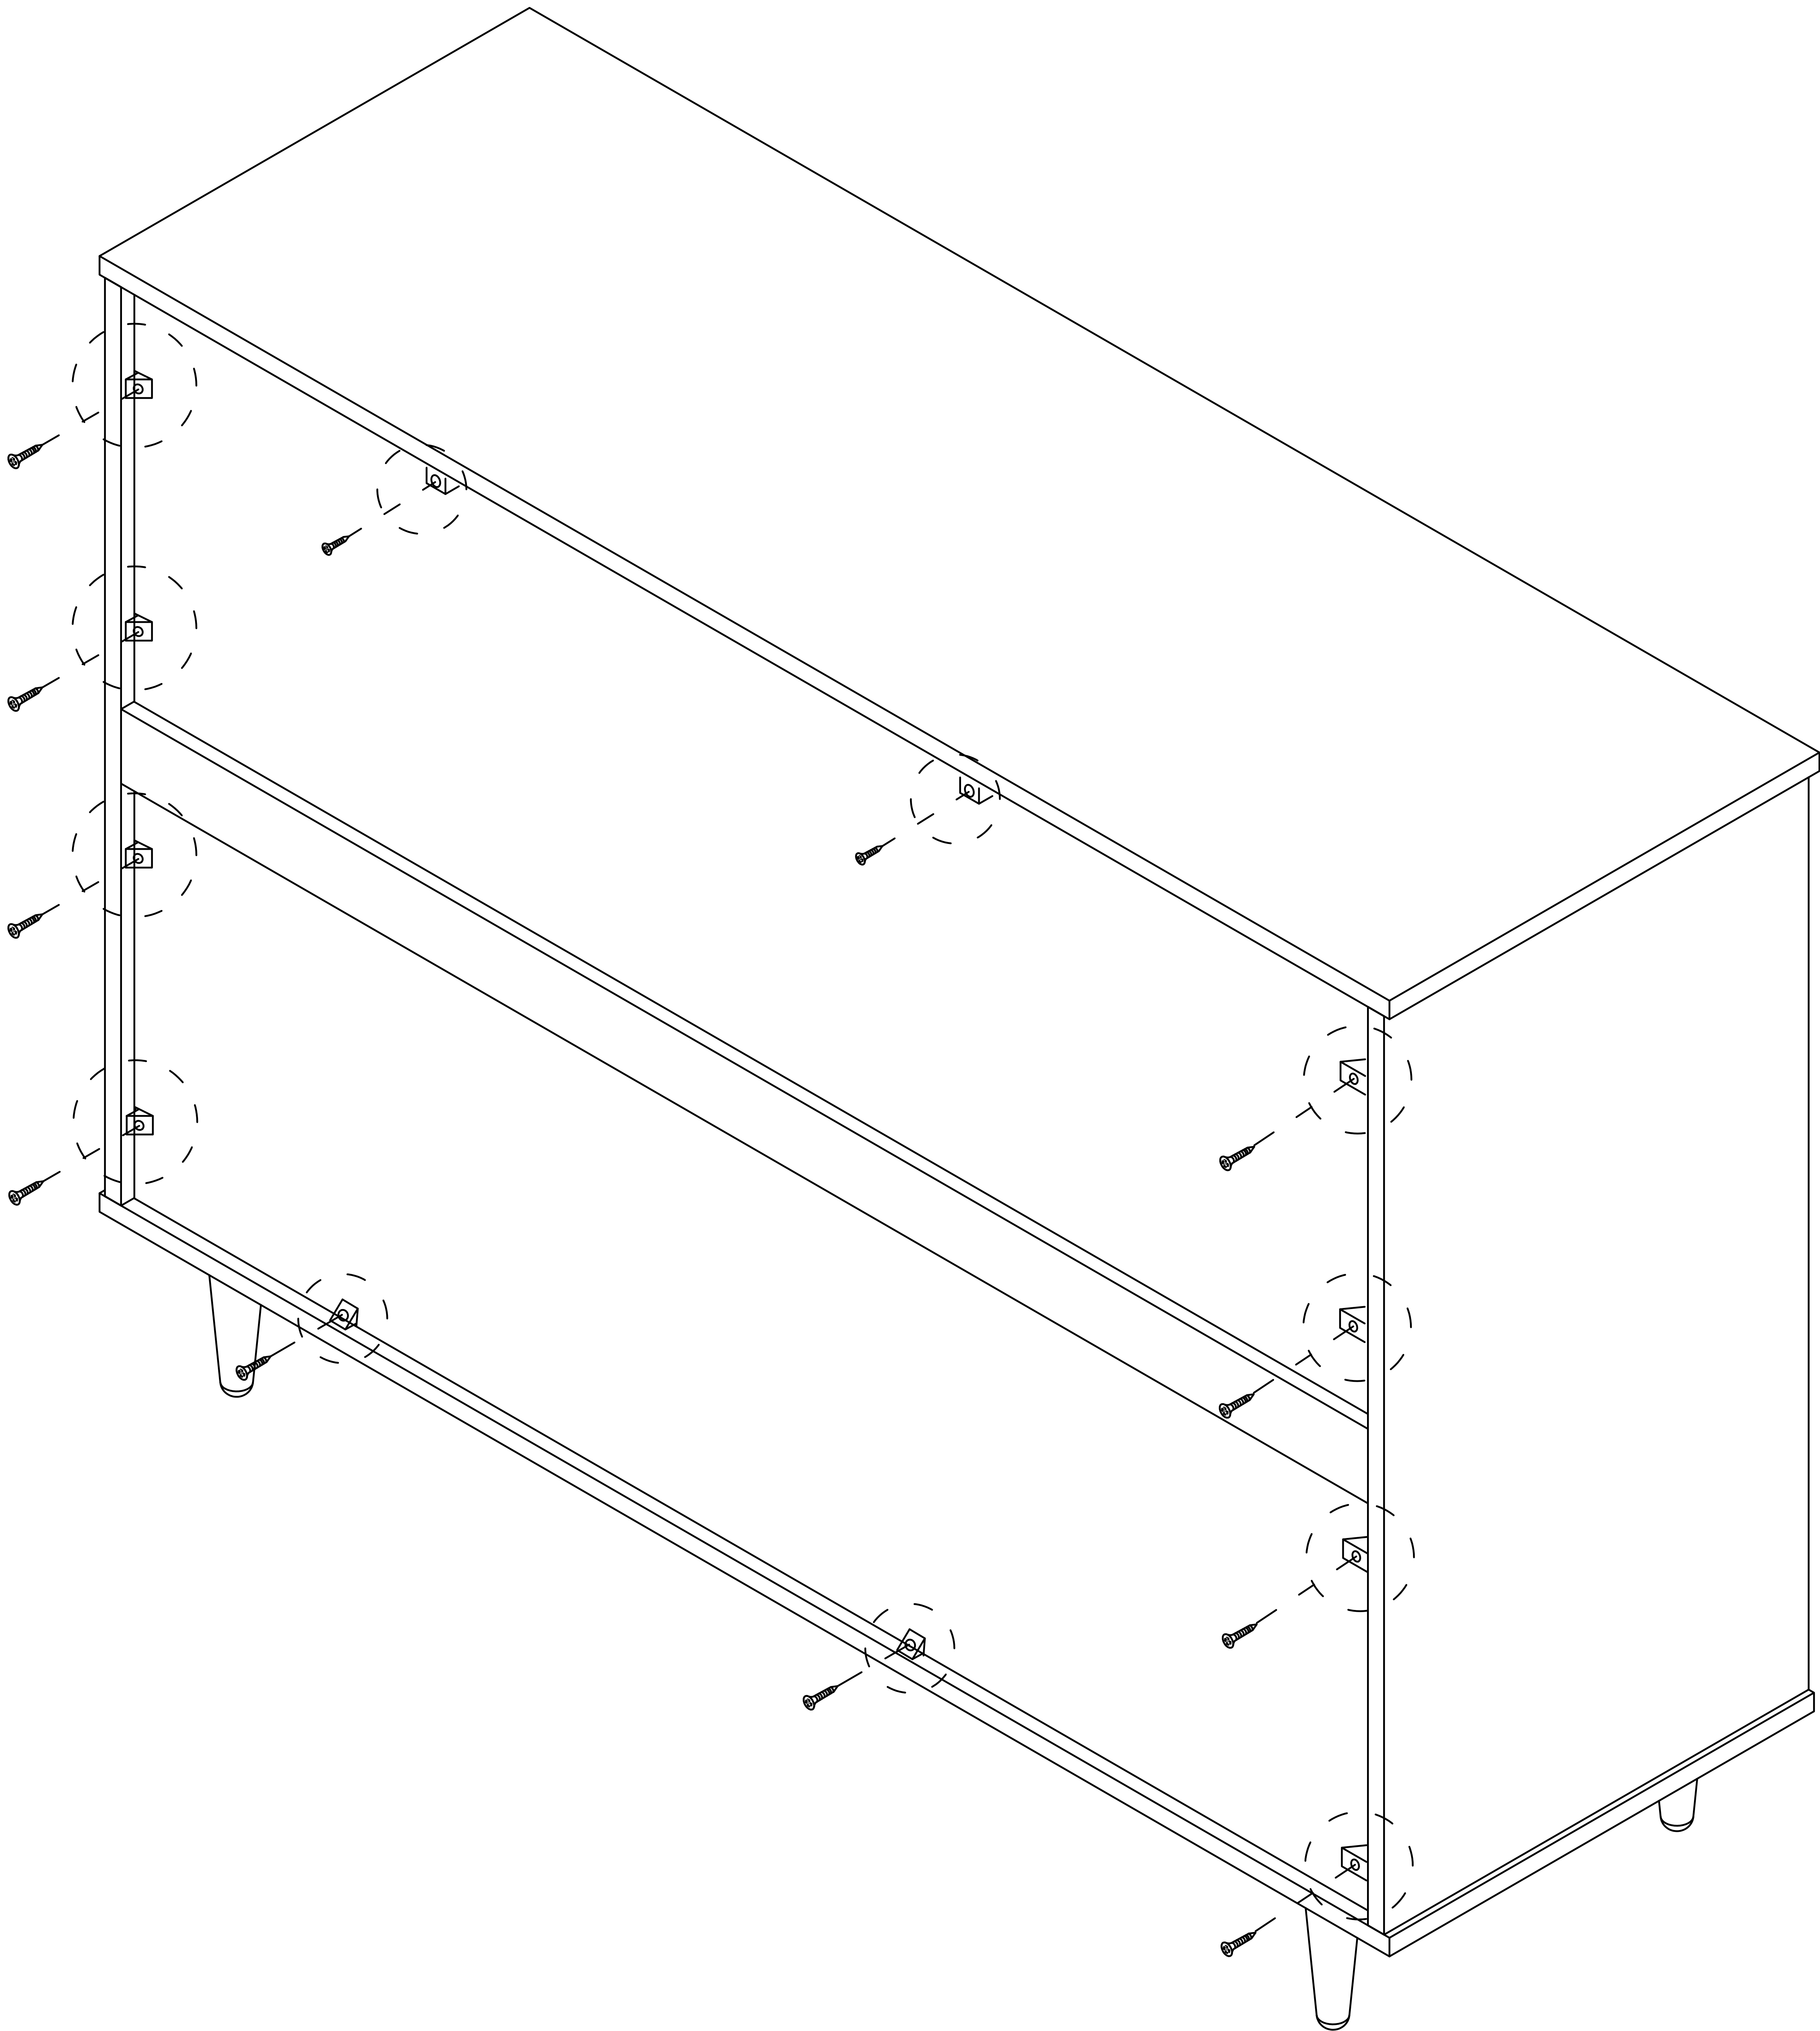


Step 46


7

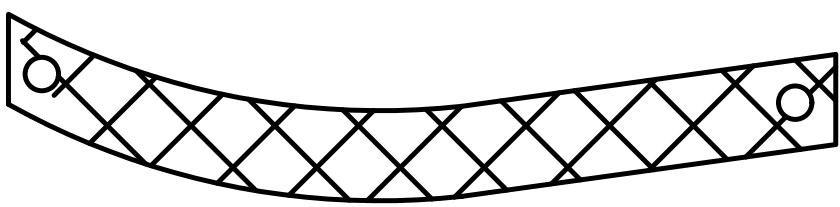


1pcs

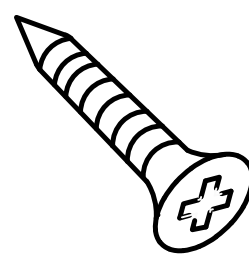

1pcs


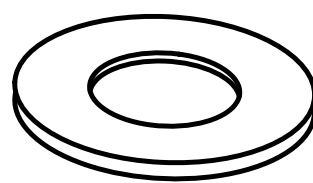


1pcs

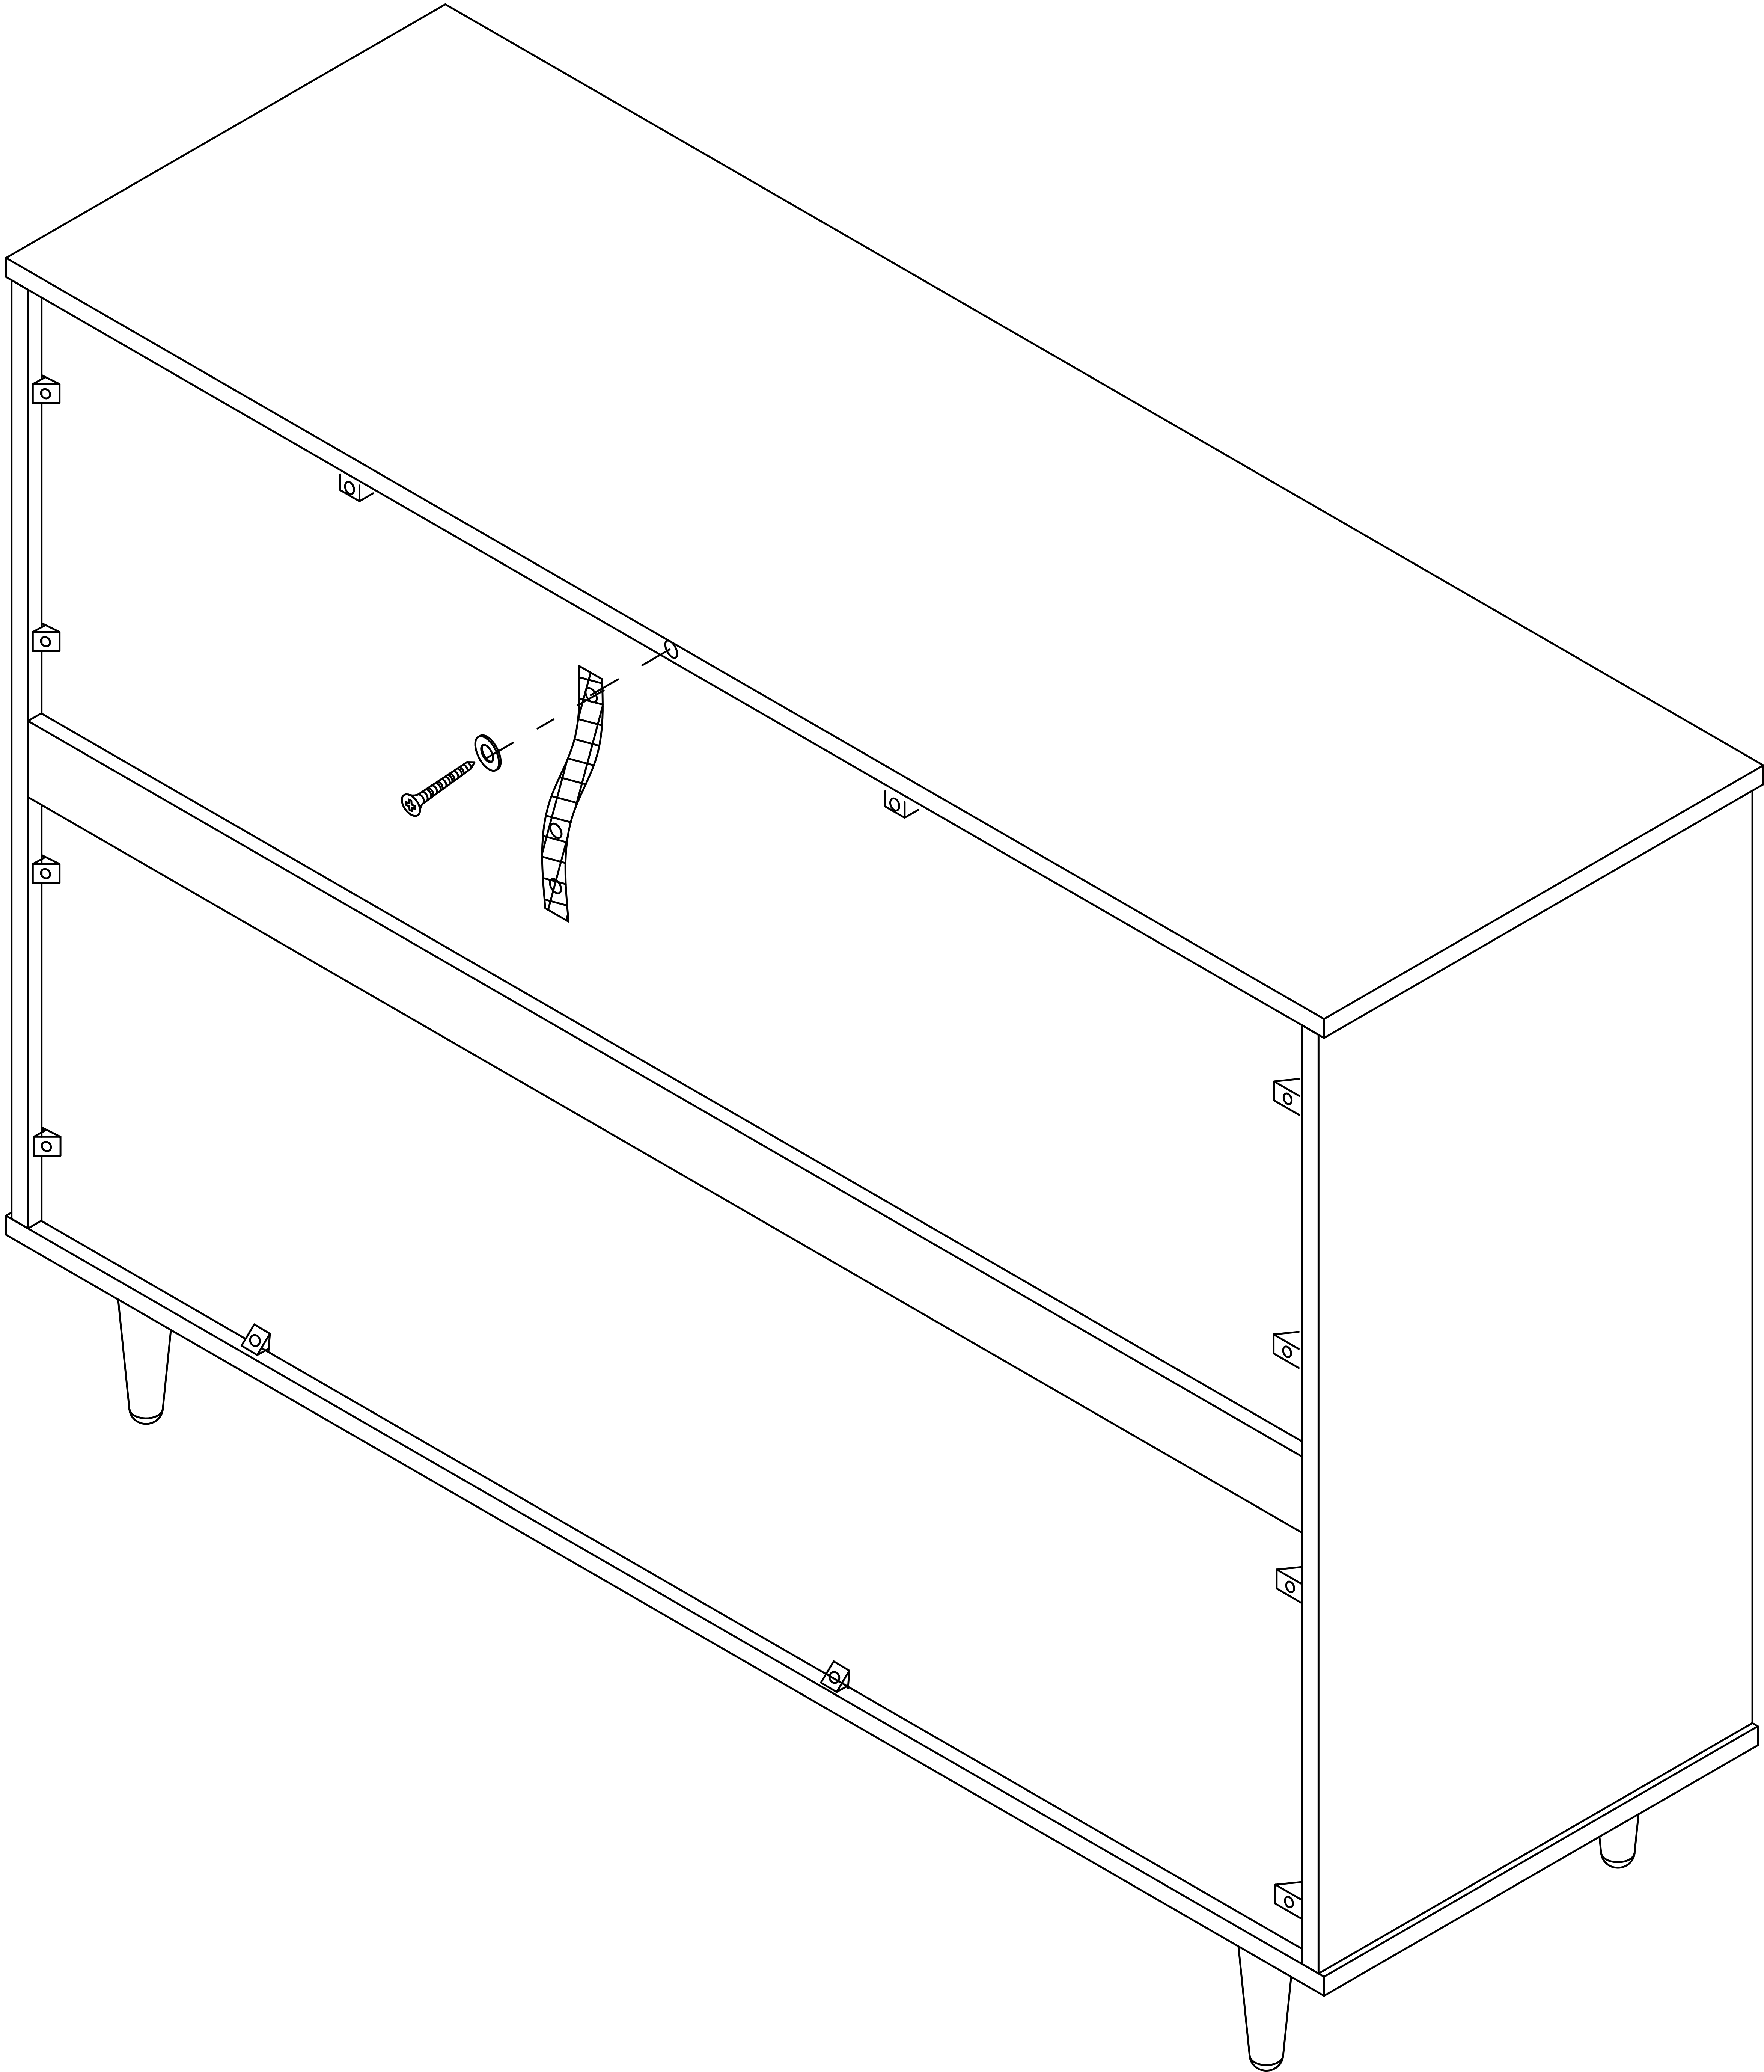

Step 47



use a ruler to measure the approximate height of the product on the wall, and then mark it with a pencil.

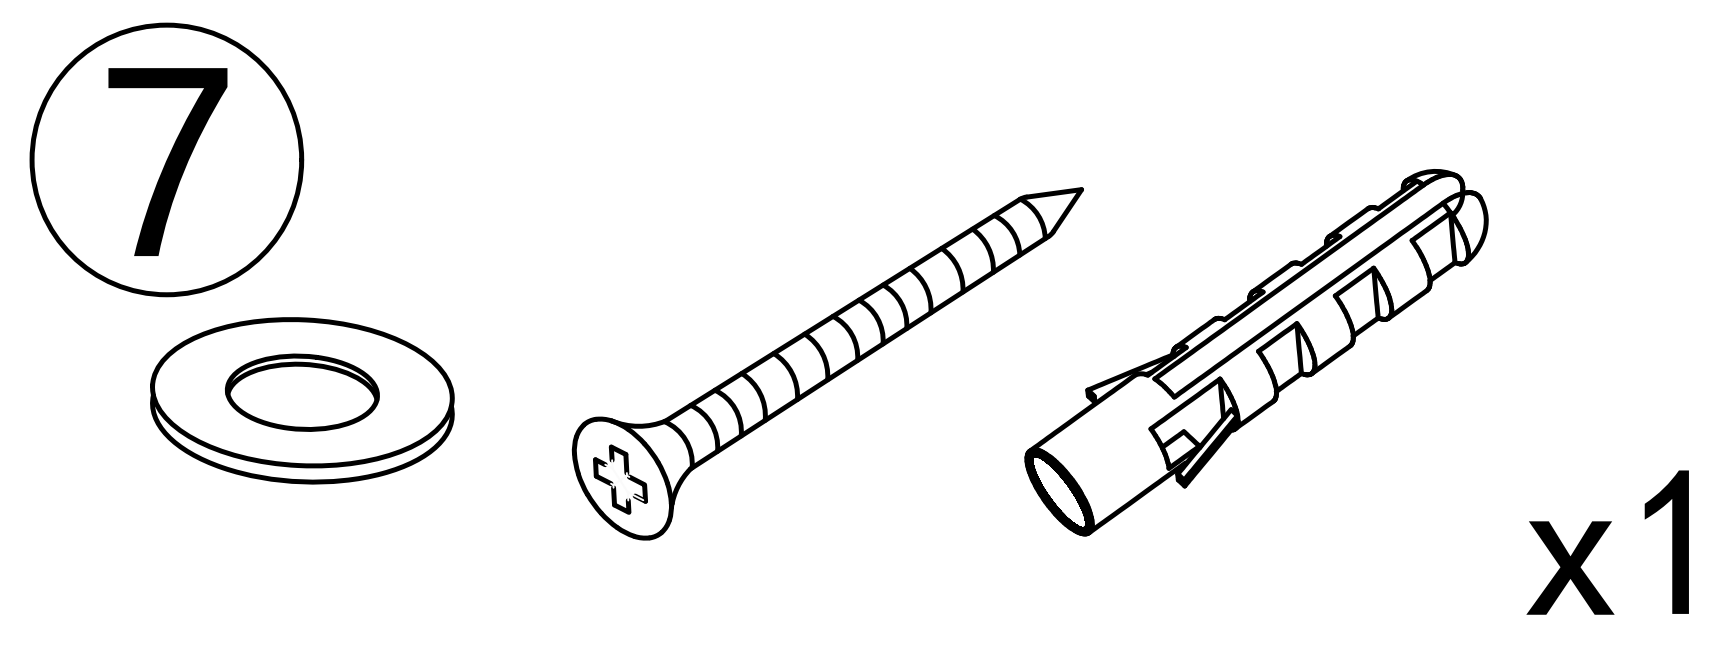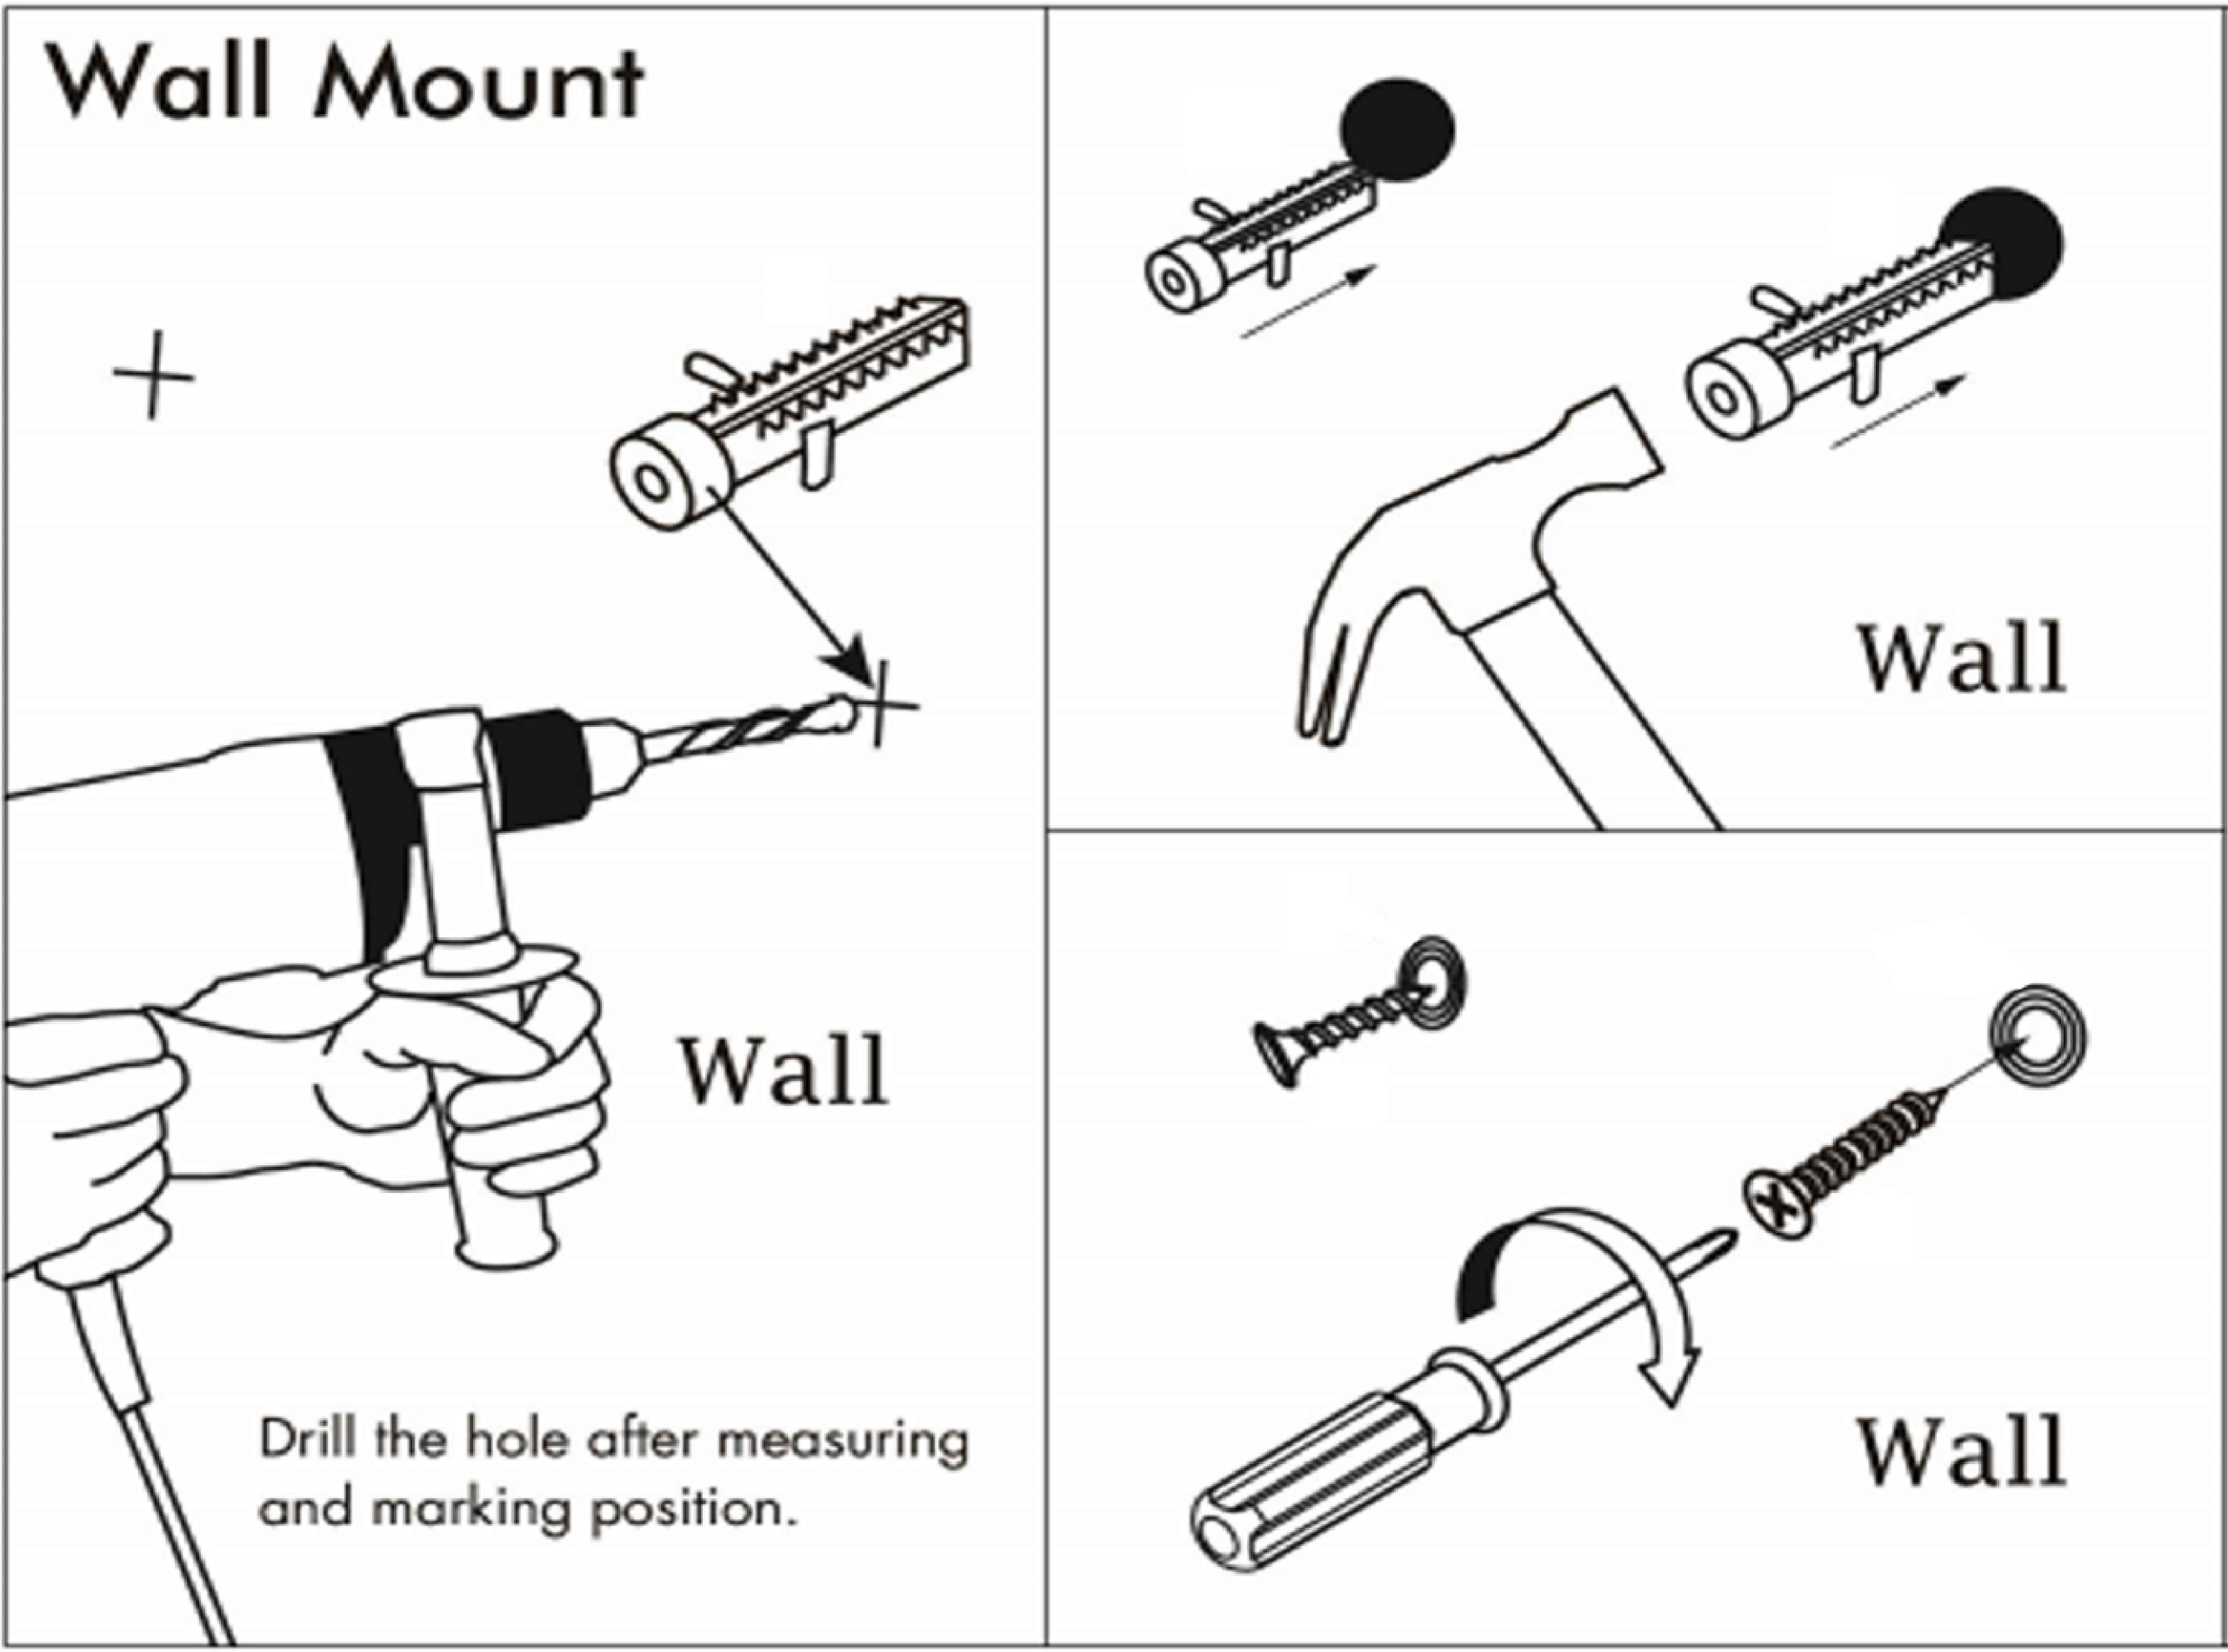

Put the expansion bolt into the hole.

Pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

Use a tape drill to make holes in the wall that are suitable for the product screws.

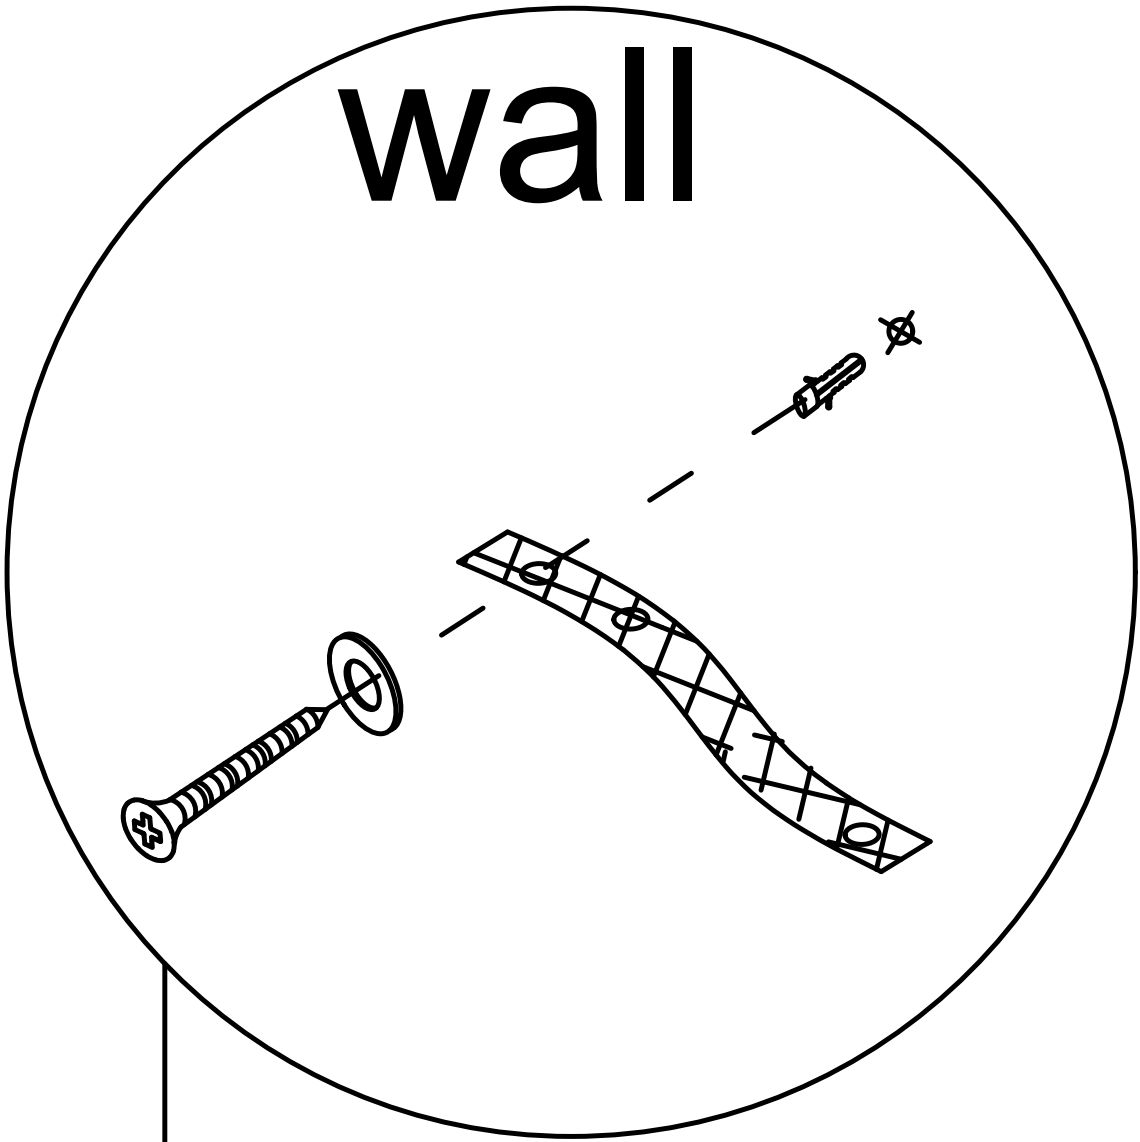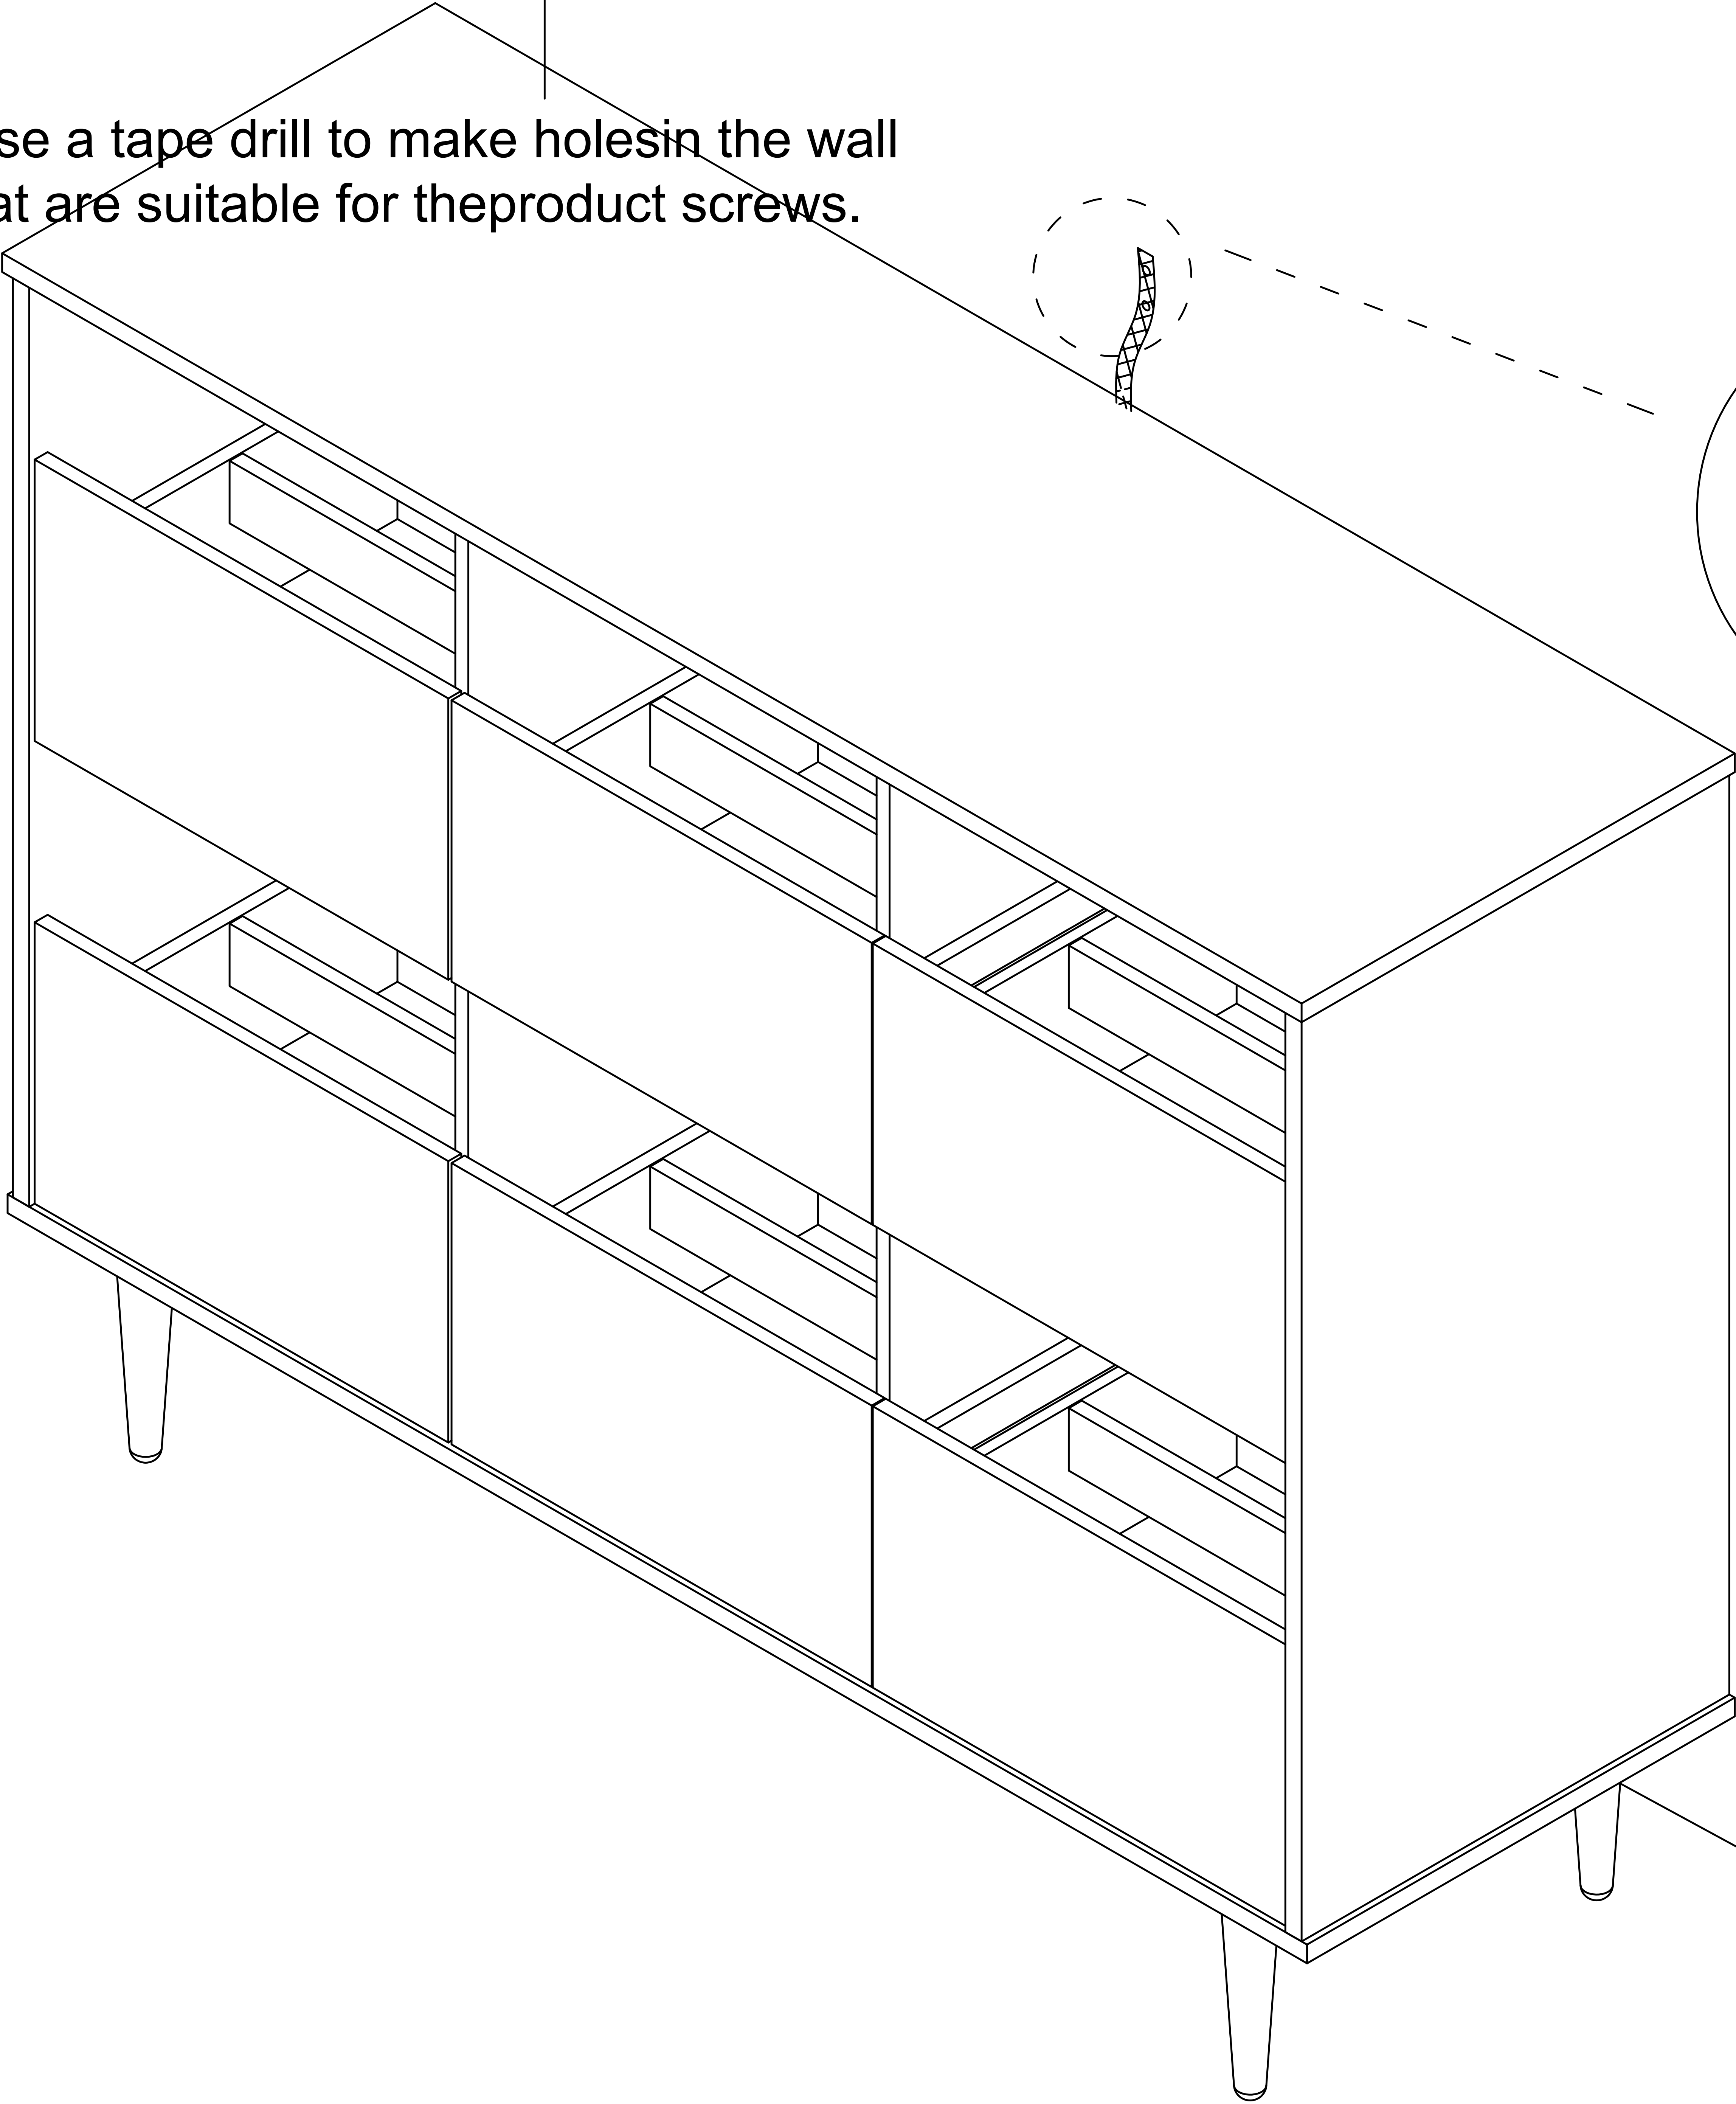

wall