
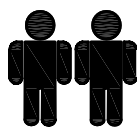


ASSEMBLY INSTRUCTIONS

(N708P473184-N708P473185-N708P473186-N708P473187-N708P473188)

INSTRUCTIONS DE MONTAGE

(N708P473184-N708P473185-N708P473186-N708P473187-N708P473188)

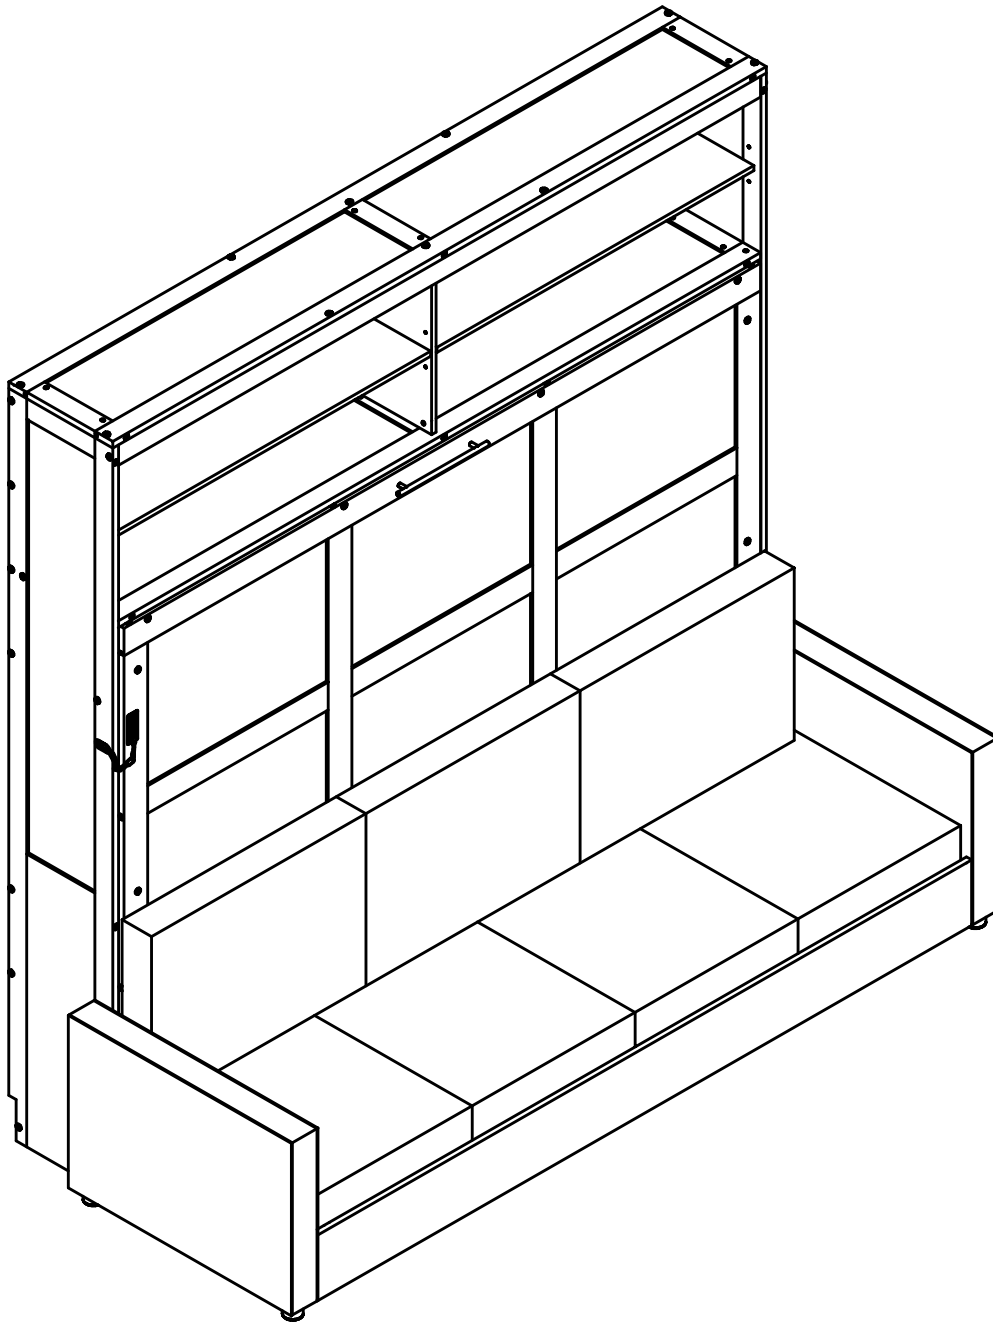

At least two people are needed to assemble and move this model.

Für den Aufbau und Transport dieses Modells werden mindestens zwei Personen benötigt.


Note: This bed must be equipped with a mattress e quivalent to 44 lbs

Remarque : Ce lit doit être équipé d'un matelas équivalent à 44 livres

SAFETY FIRST: WALL ANCHORING IS NON-NEGOTIABLE

MURPHY BEDS MUST BE SECURELY ANCHORED TO STRUCTURAL MEMBERS. NEVER MOUNT SOLELY TO DRYWALL. IMPROPER INSTALLATION CAN CAUSE SERIOUS INJURY OR DEATH.

ABSOLUTELY FORBIDDEN HARDWARE

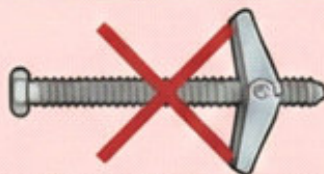

PLASTIC ANCHORS - WILL FAIL

A. WOOD STUD WALL


HOW TO IDENTIFY



KNOCK ON A
HOLLOW WALL



STUD FINDER
TOOL

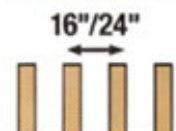


16"/24"
STUDS SPACED
IS 16" STUD

REQUIRED HARDWARE



HEAVY-DUTY SCREWS (MIN. 5/32" DIA., 2.5" LONG)

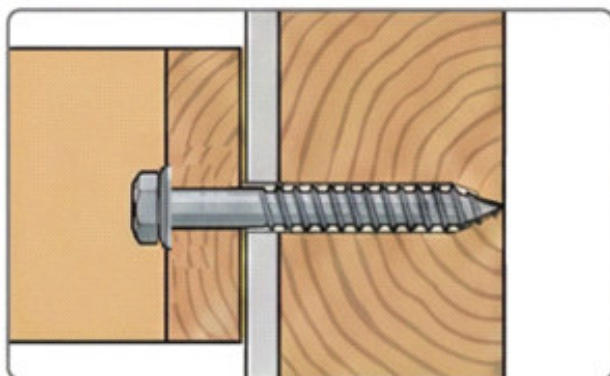

MUST PENETRATE WOOD STUD CENTER AT LEAST 2.5"

B. MASONRY/CONCRETE WALL

HOW TO IDENTIFY



KNOCK ON A
SOLID WALL




DRILL BIT CREATES
GREY/RED DUST

REQUIRED HARDWARE




ALL-METAL EXPANSION BOLTS
(MIN. 5/32" DIA., 2.5" LONG)

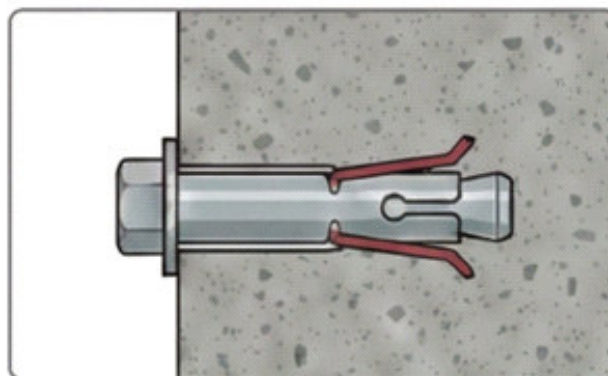


CLEAN HOLE OF DUST. **DO NOT** USE PLASTIC.

FINAL SAFETY CHECKLIST



VERIFY STUD CENTER BEFORE DRILLING



ENSURE FLUSH WALL FIT (ADJUST BASEBOARD)



PERFORM PULL TEST BEFORE MATTRESS LOAD



AVOID HIDDEN WIRES/PIPES BEFORE DRILLING



REGULARLY INSPECT AND MAINTAIN WALL ANCHORS



CONSULT A PROFESSIONAL FOR WALL ASSESSMENT
AND OPTIMAL HARDWARE; CUSTOMER ASSUMES
ALL INSTALLATION LIABILITY

IMPORTANT INFORMATION PACKAGE.

THIS INFORMATION PACKAGE CONTAINS WARNING AND
PRODUCT SAFETY INFORMATION. DO NOT PROCEED
WITHOUT REVIEWING THOROUGHLY.

A. WARNING LABELS.

Your purchased Murphy Bed is delivered to you with WARNING LABELS to constantly remind you to take and adopt Safety Measure throughout the entire assembly and mounting points of the Bed to the walls.

DO NOT REMOVE these labels.

These Warning Labels serve as a Reminder Tool for visiting friends and relatives when using the Murphy Bed to ensure Safety Precautions are taken.



WARNING.

IMPORTANT SAFETY REQUIREMENTS - Bed Attachment to Wall. **For Your Safety, the Murphy Bed MUST BE ATTACHED to the Wall.**

Seek Certified Professional Consultant / Contractors for their Services to:

- 1.) DETERMINE the WALL Type in Your Home;
- 2.) PRECISE HARDWARE that suits to the Wall Type in Your Home;
- 3.) INSTALL / ATTACH of the Murphy Bed to the Wall in Your Home;
- 4.) VALIDATE the Murphy Bed is appropriately and securely installed/attached.



The choice of wall anchoring hardware depends on the type of wall. This Murphy Bed is delivered with HARDWARE SCREWS suited for attachment to WOOD STUDS in walls. Any STUDS type detected with your Consultant-Contractors to be NOT WOOD STUDS - DISCARD and DO NOT USE these SCREWS. Use the hardware suitable for your wall material.

Seek the professional advice of your Consultant-Contractor and procure the appropriate hardware and brackets for the attachment of the Murphy Bed to the Wall.

FAILURE TO ADHERE TO THE ABOVE INSTRUCTIONS MAY RESULT IN SERIOUS and/or SEVERE INJURIES or Death caused by the detachment of the Murphy Bed from the Wall.

SAFETY PRECAUTION :

- 1.) MAXIMUM Mattress Weight suited to your Murphy Bed **44lbs (20kg)**;
MAXIMUM mattress thickness: **8 inches (20cm)**;
- 2.) ENSURE ADULTS ONLY throughout the entire assembly and attachment.
- 3.) KEEP ALL Children, Non-Ambulatory persons and Pets at bay during the entire assembly and attachment.

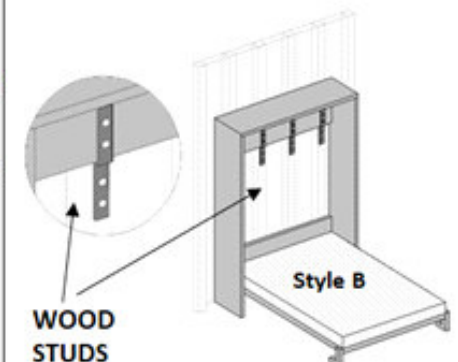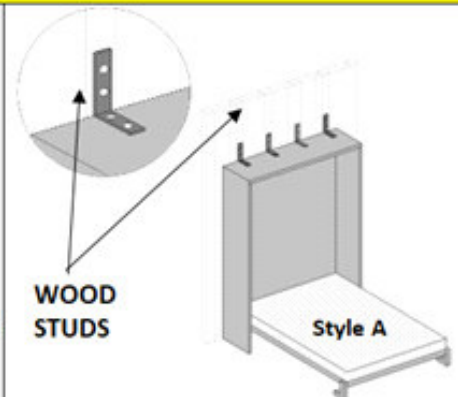


LINE ART for Reference only and
NOT DRAWN TO SCALE.

CAUTION : Homes are renovated differently. There are CONCRETE walls and "hollow walls". Hollow walls are reinforced with STUDS of Wooden or Steel Materials. Seek advice from professionals.

Style A - VERTICAL Murphy Bed with SEALED/CLOSED Back board.

Style B - VERTICAL Murphy Bed with OPEN STYLE Back board.

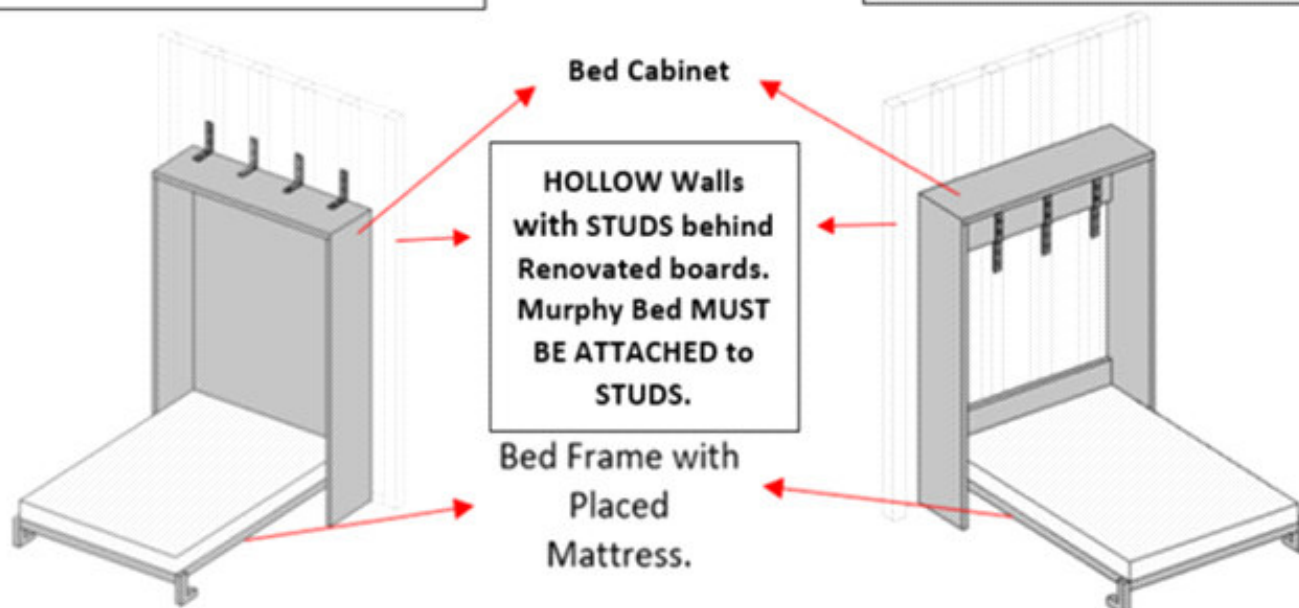

B. SAFETY REMINDERS.

MARKINGS in WALL – WHERE TO ATTACH the MURPHY BED.

Irrespective of the wall type, whether **Solid Concrete Walls** OR **Decorative Walls with WOODEN Studs** OR **Decorative Walls with Metal Studs**, ensure that

- a.) you choose a professional installer who has a good understanding of the wall structure where the Murphy Bed is anchored, including the position of the wall studs and structural components in the case of a wood or metal structure.
- b.) precise markings of the positions of the anchor points are to be made on the wall for easy identification during the Murphy Bed attachment to the wall.
- c.) the relevant and appropriate Hardware with Metal Brackets are READY for this attachment and are within easy access for prompt and efficient attachment.

This product requires Professional Consultation and Installation*.

* When you choose the professional installer, make sure to comply with all applicable laws, regulations and rules in the city, state or country where the Murphy Bed is installed.


To have your Murphy Bed fully assembled and to achieve its intended functionality – you **MUST READ** through this entire Assembly Instructions Manual before you start the assembly of the bed

1.) **There are numerous Safety Issues and Safety Precautionary Actions that you MUST KNOW before you start the Assembly.**
2.) **CAUTION - Failure to FOLLOW / ADHERE to the GUIDE, WARNING AND REMINDERS here, may result in serious / severe injuries or death.**
3.) **PRECAUTION : For the assembly, Adult Partners only, to assist in the entire assembly. Ensure NO LESS THAN 2 ABLE BODIED PERSONS ONLY in the entire assembly and attachment of this Murphy Bed to the walls of your home.**
4.) **CAUTION : During the entire assembly process and attachment of the Murphy Bed to the walls of your home, Keep ALL Children, Non-Ambulatory Persons and Pets completely away.**
5.) **SAFETY REMINDER on / to : Personal, Family Members and Pets. The Murphy Bed may be shipped to you in 3 to 5 packages and are HEAVY. Each carton holds many parts and components. Some of these components eg., bolts and screws are relatively small* in size.**
 - *. During the assembly process, ensure that any misplaced bolts and nuts are picked up so that Children and or Pets do not play or ingest these.
 - *. During the assembly process, ensure that any misplaced bolts and nuts are picked up so that Children and or Pets do not play or ingest these.
6.) **This Murphy Bed is intended for ADULT USE ONLY.**
7.) **This Murphy bed is delivered with pre-installed hardware for the wood studs and the concrete solid wall - please choose the appropriate hardware according to the type of the wall.**
8.) **Your Home's Wall Type** - Every home is renovated differently with different wall(s) type / finishes. Before you proceed to assemble your Murphy Bed :
 - a.) **SEEK and CONSULT Professional Services** to ascertain the wall type in the designated location where you intend to attach the Murphy Bed;
 - b.) **ENSURE** the Consultant-Contractor specifically **INFORMS** you of the **WALL TYPE** in the designated spot where you intend to attach the Murphy Bed.
 - c.) **ENSURE** the Consultant **INFORMS** you specifically on the matching and relevant Hardware / Brackets to secure and attach the Murphy Bed to the wall.
9.) **WARNING – YOU MUST HEED THE INSTRUCTIONS** given by your appointed Consultant-Contractor on the :
 - a.) Mounting Hardware Type that suits the wall(s) type - where / when it is NOT WOOD STUDS or NOT CONCRETE SOLID WALL, the **pre-packed hardware not match/ not fit.**
 - b.) Number of Mounting Points for the Murphy Bed to the Wall.

CAUTION : Homes are renovated differently. There are CONCRETE walls and "hollow walls". Hollow walls are reinforced with STUDS of Wooden or Steel Materials. Seek advice from professionals.

Style A - VERTICAL Murphy Bed with SEALED/CLOSED Back board.

Style B - VERTICAL Murphy Bed with OPEN STYLE Back board.

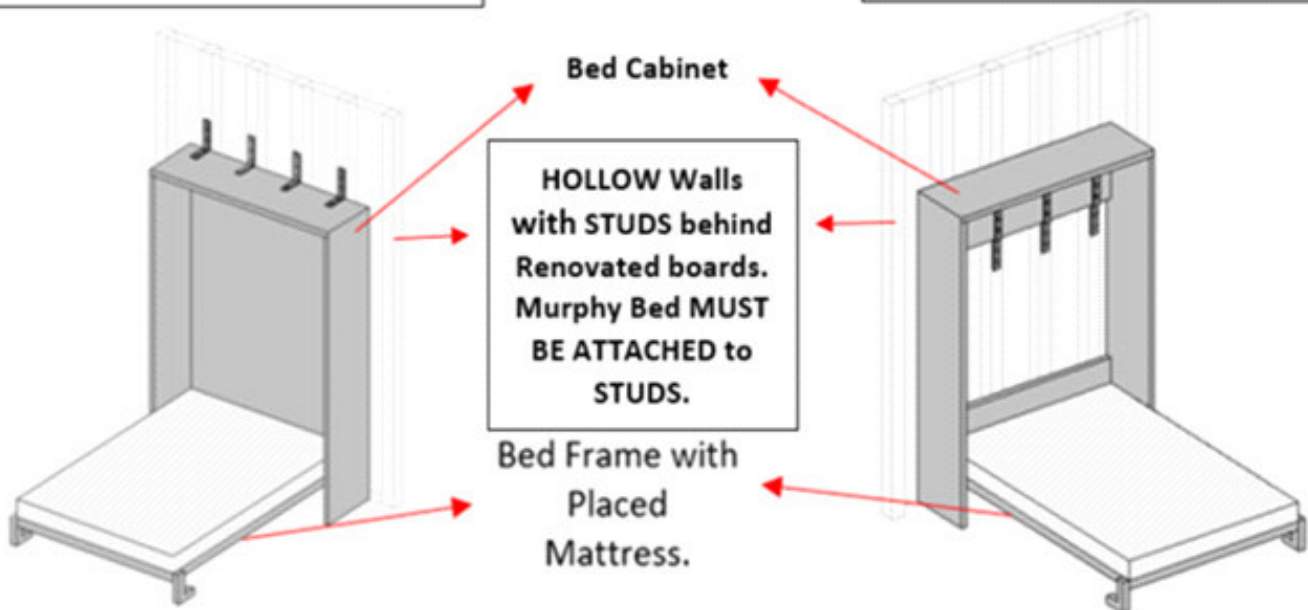

10.) This Murphy Bed is designed for home use and not intended for commercial use.

11.) This Murphy Bed is not intended to be moved, modified, uninstalled or disassembled once professionally installed.

C. MOUNTING INFO & HARDWARE.



1.) REMINDERS :

- a.) In the event, that this pre-packed Screws Set does not match to the walls in your home – **DO NOT USE / DISCARD** these hardware.
- b.) **ADHERE** to the Professional Consultant-Contractor instructions and information on the **RELEVANT** mounting hardware that suits your wall.
- c.) Procurement of these **RELEVANT** hardware is an arrangement made between your Consultant-Contractor and you.



2.) A step ladder (not provided) is needed to attach the L-Brackets to the wall, at the Top of the Murphy Bed. **DO NOT** lean against the Top of the Murphy Bed, it may cause sagging.

Murphy Bed Style A

L-Bracket Fixture to Wood Studs

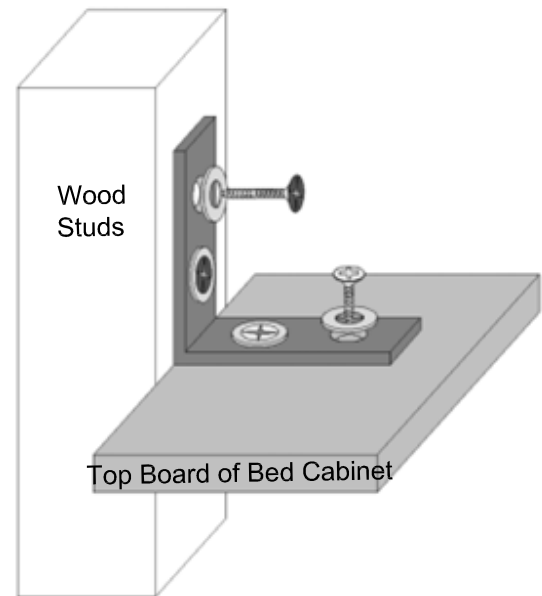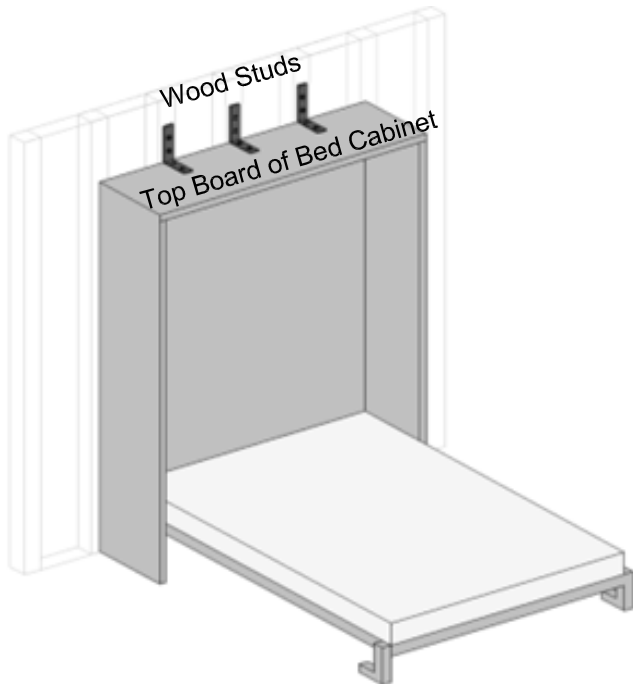

Z-Bracket Fixture to Wood Studs

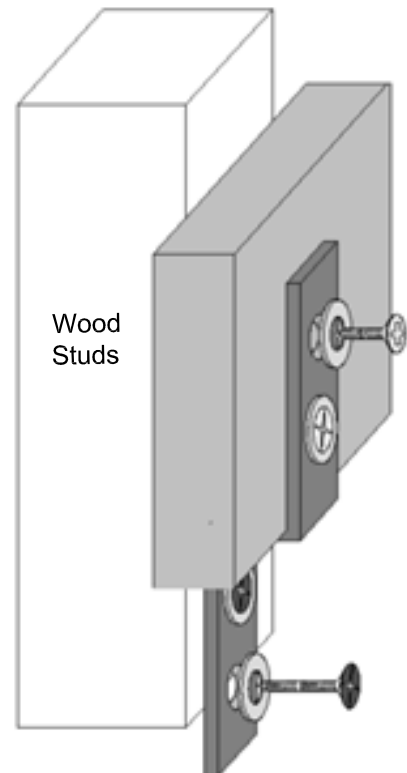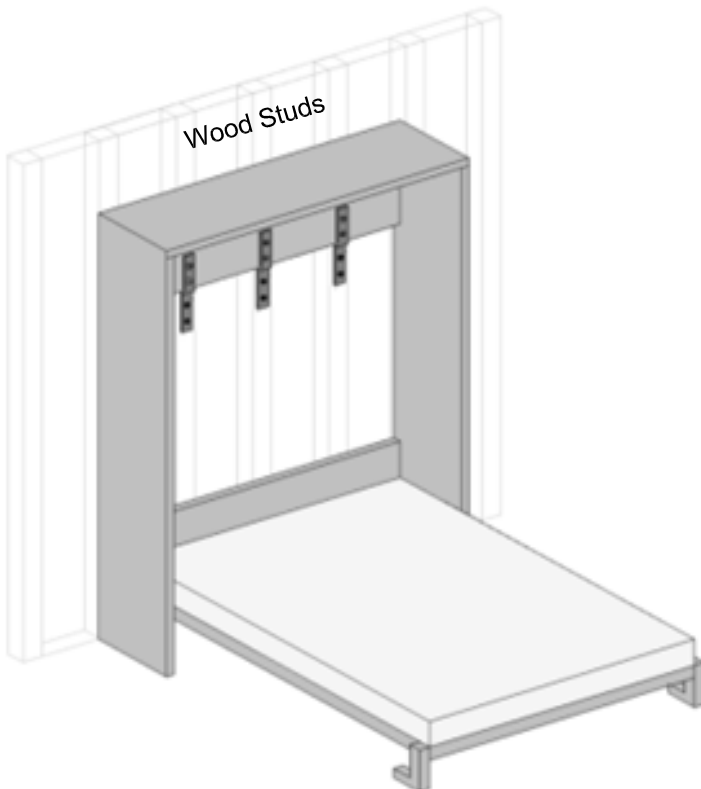

D. IDENTIFICATION of TOOLS and ATTACHMENT SKILL.

The parts and components to assemble the Bed Frame are stated in the Assembly Instructions. Follow the instructions carefully.

For an efficient assembly, after opening the cartons shipped to you :

- a.) open and layout all parts and components in sequence;
- b.) account for every part, hardware and component;
- c.) then lay out the parts close to each other;

Assemble and tighten each bolt / nut / screw up to 80% to allow for the Bed Frame and Bed Cabinet to be HELD together.

Upon FINAL assembly where all the parts and components are FITTED precisely, in a sequential manner – proceed to tighten each bolt & nut & screw gradually.

CAUTION :

- 1.) **The METAL PLATES to the sides of the Side Rails – MUST BE FULLY and SECURELY TIED to the SIDE RAILS.**
- 2.) **The Piston L-Brackets that are attached to the INNER WALL of the Bed Cabinet – MUST BE FULLY and SECURELY TIED to these Inner Walls.**
- 3.) **These Metal Plates and the L-Brackets – are the components that are holding the Pistons that allow your Bed to “travel” to an OPEN or CLOSED position.**
- 4.) **Frequent Inspections of these Metal Plates / Brackets and Pistons Bolts, up to Once a Month – to ascertain these DO NOT BECOME LOOSE. For if these bolts to the Bed Frame and or Bed Cabinet or Pistons are loose, may cause the BED FRAME to become DISLODGED and cause injuries.**

REMINDER : NEVER FULLY TIGHTEN any screw / nut or bolt in one session. If you DO TIGHTEN the hardware all the way into the core of the wood, this cause the parts to become skewed that would impact other parts of the item not being able to be aligned to its mounting points for assembly.

E. ALLASSEMBLY WORKS REQUIRES A TEAM OF NO LESS THAN 2 ADULTS.

Reminder : Per above info, the cartons and products are heavy – therefore exercise CAUTION at all times and ENSURE YOUR TEAM NO LESS THAN 2 for the entire ASSEMBLY.

F. ASSEMBLY OF WALL BED CABINET.

Identify all parts and components for the Wall Bed Cabinet.

Assemble the Wall Bed Cabinet according to the Assembly Instructions.

Upon the completion assembly of the Bed Cabinet, make a final inspection that all joints and parts are fully and securely attached.

CLEAR all debris in the area where your Murphy Bed is going to be attached to the wall.

Move this FULLY ASSEMBLED BED CABINET and position this BED CABINET some 2 feet to 3 feet away from the designated Wall, where you have previously made markings.

SAFETY REMINDER - The Wall Bed Cabinet is NOT ATTACHED TO THE WALL, YET. From here on - YOU MUST HAVE 2 ADULT to HOLD and STABILISE this WALL BED CABINET, to prevent the Wall Bed Cabinet from TIPPING OVER.

G. THE FIXATION OF THE WALL BED CABINET.

Fix the wall bed cabinet to the wall using wall-mounted hardware, and check to ensure that the wall bed cabinet is securely fastened to the Wood Studs or Concrete Solid Wall.

REMINDER : FOLLOW the INSTRUCTIONS from your Professional Consultant / Contractor.

SEQ	Bed Description	Bed Size	Details.
1	Single/Twin(XL)	~38*75/80~ inches	Attach at least 2 pieces of L or Z Hardware onto the Wall or Studs;
2	Full	54*75inches	Install at least 3 pieces of L or Z Hardware onto the Wall or Studs;
3	Queen	60*80inches	Install at least 3 pieces of L or Z Hardware onto the Wall or Studs;
4	King	76*80inches	Install at least 4 pieces of L or Z Hardware onto the Wall or Studs;
5	Other Bed Size		Other Bed Sizes - seek advice from your Contractor

H. ASSEMBLY of BED FRAME.

Identify all parts and components for the Bed Frame.

Assemble the Bed Frame according to the Assembly Instructions.

Upon completion of assembly of the Bed Frame, make a final inspection that all joints and parts are fully and securely attached.

I. ATTACHMENT OF BED FRAME TO WALL BED CABINET.

Using the lifting hardware (compressed pneumatic/hydraulic piston and other hardware fitting), follow the installation instructions to securely connect the bed frame and the wall bed cabinet together. This process requires NO LESS THAN 2 adults.

You may need to - LIGHTLY slide forward-backward to adjust and create gap space so as to enable the Pneumatic Pistons to be hooked to both ends of the hanging bolts in the Inner

Wall of the L-BRACKET

Fully Secure and Tighten these Bolts at each end of the Pneumatic Pistons.

J. Attachment of Safety Latches.

Upon completion of Step I above, ensure the entire structure of Bed Frame to Wall Bed Cabinet is fully and securely attached as ONE UNIT - affix the Safety Latches.

These Latches are to be reachable by Adults Only. Thus, the minimum height shall be no less than 5 feet (1.5m) from ground.

K. Attachment of Safety Latches.

Recommended Mattress weight (39.6 -55)lb or (18-25)kg / Recommended Mattress thickness (8-10)in or (20.3-25.4)cm - Your Murphy Bed is engineered based on the bed frame weight, mattress weight, and the Neptune force system.

Therefore, load your bed with the RECOMMENDED MATTRESS Weight, Size and Thickness as stated in the assembly instructions.

DO NOT LOAD any heavier or LARGER or LIGHTER Mattress than what is recommended here.

L. MATTRESS PLACEMENT.

Have 1 to 2 persons - place equal strengths to the handles and gently and securely, PULL DOWN the Bed Frame until the Bed Frame is horizontally and level to the ground.

Have the other 2 persons - carry and place the Mattress (within the recommended weight and thickness**) and gently place the Mattress on to the Bed Frame.**

M. PNEUMATIC PISTON NEWTON-LOAD STRENGTH.

You are hereby reminded that when the BED FRAME is EMPTY OF MATTRESS, the Bed Frame may NEED a FULL force to be pulled down before you can place the Mattress.

This PULLED DOWN RESISTANCE is a normal feature, as the Newton-Loaded Piston Force is in action.

N. BED STRAP – GUIDE STRAP.

Your Murphy Bed may or may not come equipped with a Bed Strap.

This Bed Strap serves as a GUIDE STRAP to help you lift the Bed Frame some 6 inches or so off its resting position. Then use both hands to FULLY LIFT HOIST the Bed Frame to its closing position.

SAFETY REMINDER :

1.) **DO NOT USE THE BED STRAP to PULL DOWN TO OPEN the BED FRAME from its CLOSED POSITION.**
2.) **DO NOT USE THE BED STRAP to PULL-LIFT-HOIST the BED FRAME from the OPENED-HORIZONTAL position, to the CLOSED POSITION.**

Both the above may cause injury and or unnecessary strain to your arm(s).

O. USING YOUR MURPHY BED.

For EVERY USE – exercising Safety Precautionary Measures to ensure the safety of your family members and pets are IMPORTANT.

Therefore, PRIOR TO OPENING / PRIOR TO CLOSING OF YOUR MURPHY BED - Make sure all Children / Non Ambulatory Persons and Pets are away.

KEEP CHILDREN and NON-AMBULATORY persons from Unlatching the Safety Latches.


P. CAUTION : DO NOT BE DISTRACTED During EVERY OPENING and CLOSING of your Murphy Bed.

Every time you Pull to **OPEN** the Murphy Bed from its closed position OR **Lift-Pull to CLOSE** the Murphy Bed to stow it into the Bed Cabinet -

- Give these actions your focused and dedicated attention.
- **DURING EVERY OPENING and CLOSING of your Murphy Bed** - always ensure you have an Adult Partner close by for added assistance, where necessary.
- **DO NOT OVER EXERT ADDED FORCE to OPEN the Bed or to CLOSE the Bedframe.** For if you do, the resistance of the Piston will only make it harder for you to complete the task.
- **TO CLOSE the Murphy Bed** : depending on your height – stand some 6 inches to 10 inches away from the FootBoard edge. Use both your hands and place both hands at about equal distance from the middle of the Bed Frame, spaced at 2 to 3 feet between your hands - **GENTLY LIFT-PULL to Close your Murphy Bed.**
- **TO OPEN the Murphy Bed** : using equal force – **place your hands to the installed grab handle** and **GENTLY PULL** towards you to Open. **As you pull Open the Murphy Bed – proceed to move backwards, slowly and steadily, so as to give way to the Murphy Bed's OPEN Position.**

- During **EVERY OPENING** or **CLOSING** of the Murphy Bed - at about your hip level - you may find that you need to rotate your hand / wrist - take caution here to prevent injury.
- During **EVERY OPENING** and **CLOSING**, keep Children and Pets and Non Ambulatory Persons at bay.
- **NEVER** allow your children to treat this Murphy Bed as a Hide and Seek place of fun or jump on the bed.
- **Care & Maintenance** - Depending on the frequency of use of your Murphy Bed, it is recommended that you take precautionary Care and Maintenance. It is advisable to conduct **NO LESS THAN 2 to 3 checks annually** on these mounting points & pistons to ensure that these are securely bolted. Where necessary, use a vacuum cleaner to clear all dust and then wipe down with a damp cloth, then proceed with your maintenance work.

Safety Latches - Your Murphy Bed comes with two (2) Safety Latches. These are to be attached at, both the **TOP LEFT** and **TOP RIGHT** hand upper portion, **minimum of 5 feet (1.5m) from ground**, of the Bed Frame / Bed Cabinet. Monitor and Inspect these frequently.

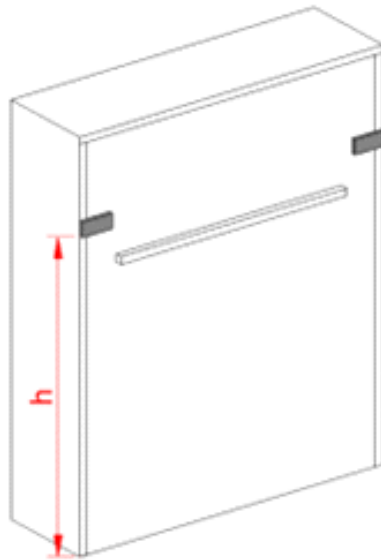

- Whenever NOT in use and after the Murphy Bed has been **LIFTED** and stowed in its **CLOSED POSITION** - **ALWAYS LATCH UP**.

Frequently Asked Questions.

Malfunctioned Pistons.

How do you know when the Murphy Bed's Piston has malfunctioned?

It would be quite evident in that :


- a.) the Bed Frame may become **LOPSIDED** and
- b.) the Lift-PULL force to **CLOSE** may be "heavier" than before.

IMMEDIATELY - STOP USING YOUR MURPHY BED.


SEEK and CONSULT professional maintenance service to ascertain the problem and repair and or have the pistons changed.

ASSEMBLY INSTRUCTION


INSTRUCTIONS DE MONTAGE

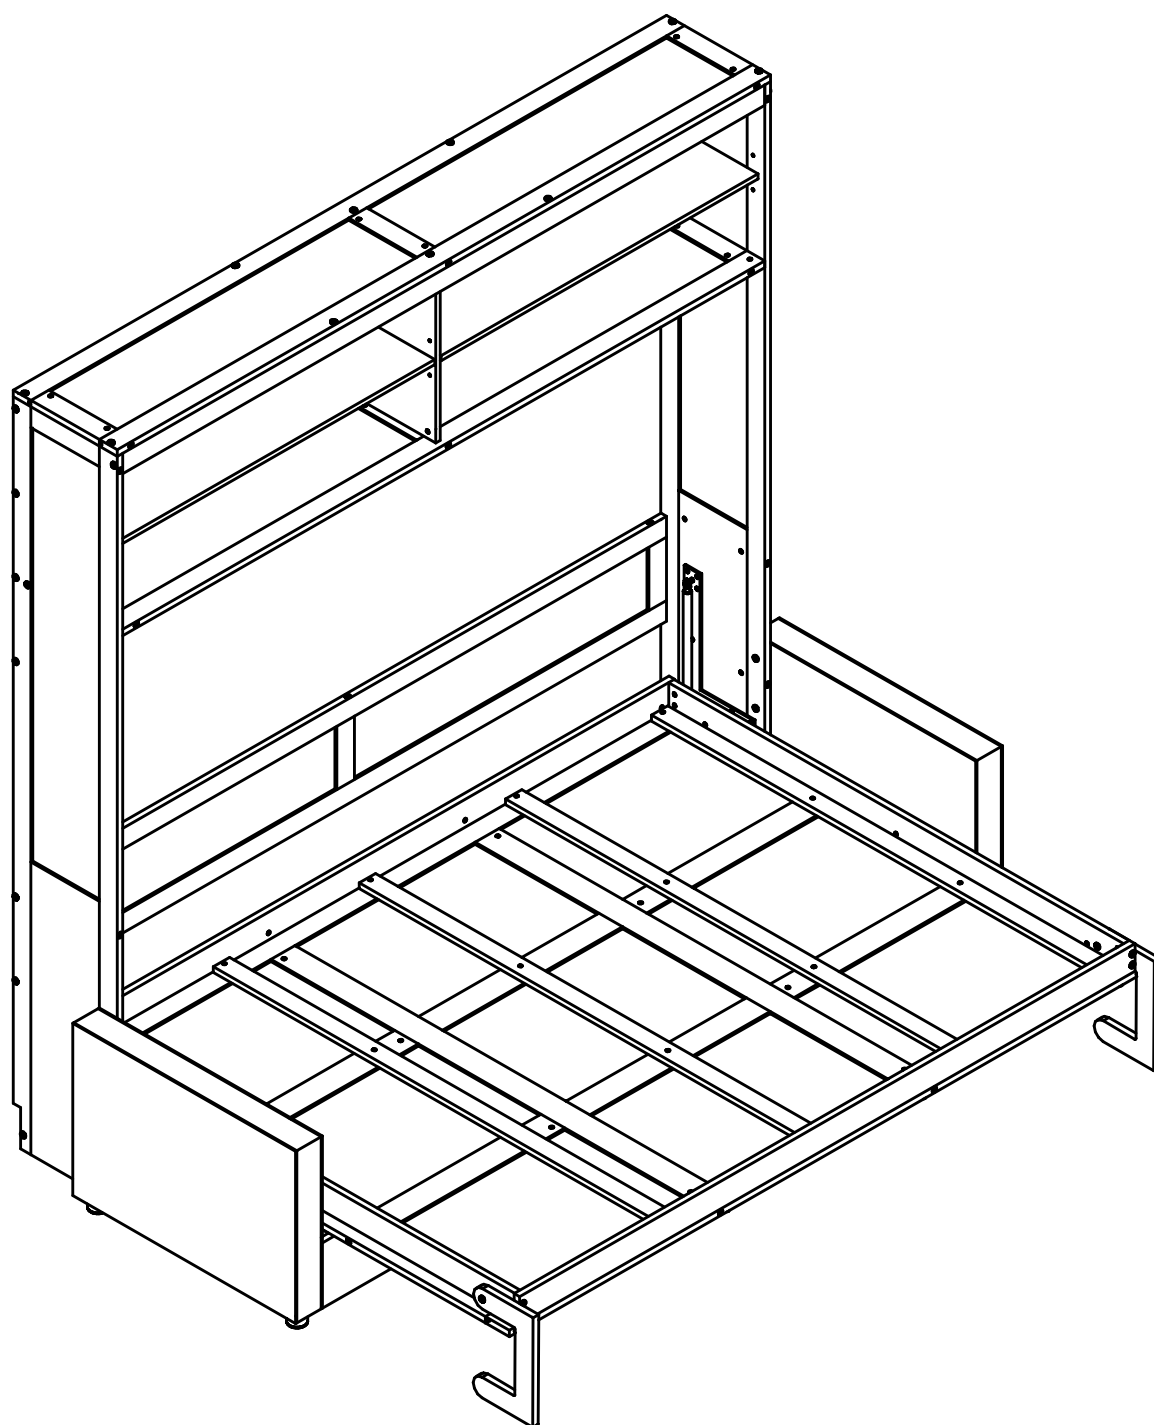


ASSEMBLY INSTRUCTION
INSTRUCTIONS DE MONTAGE

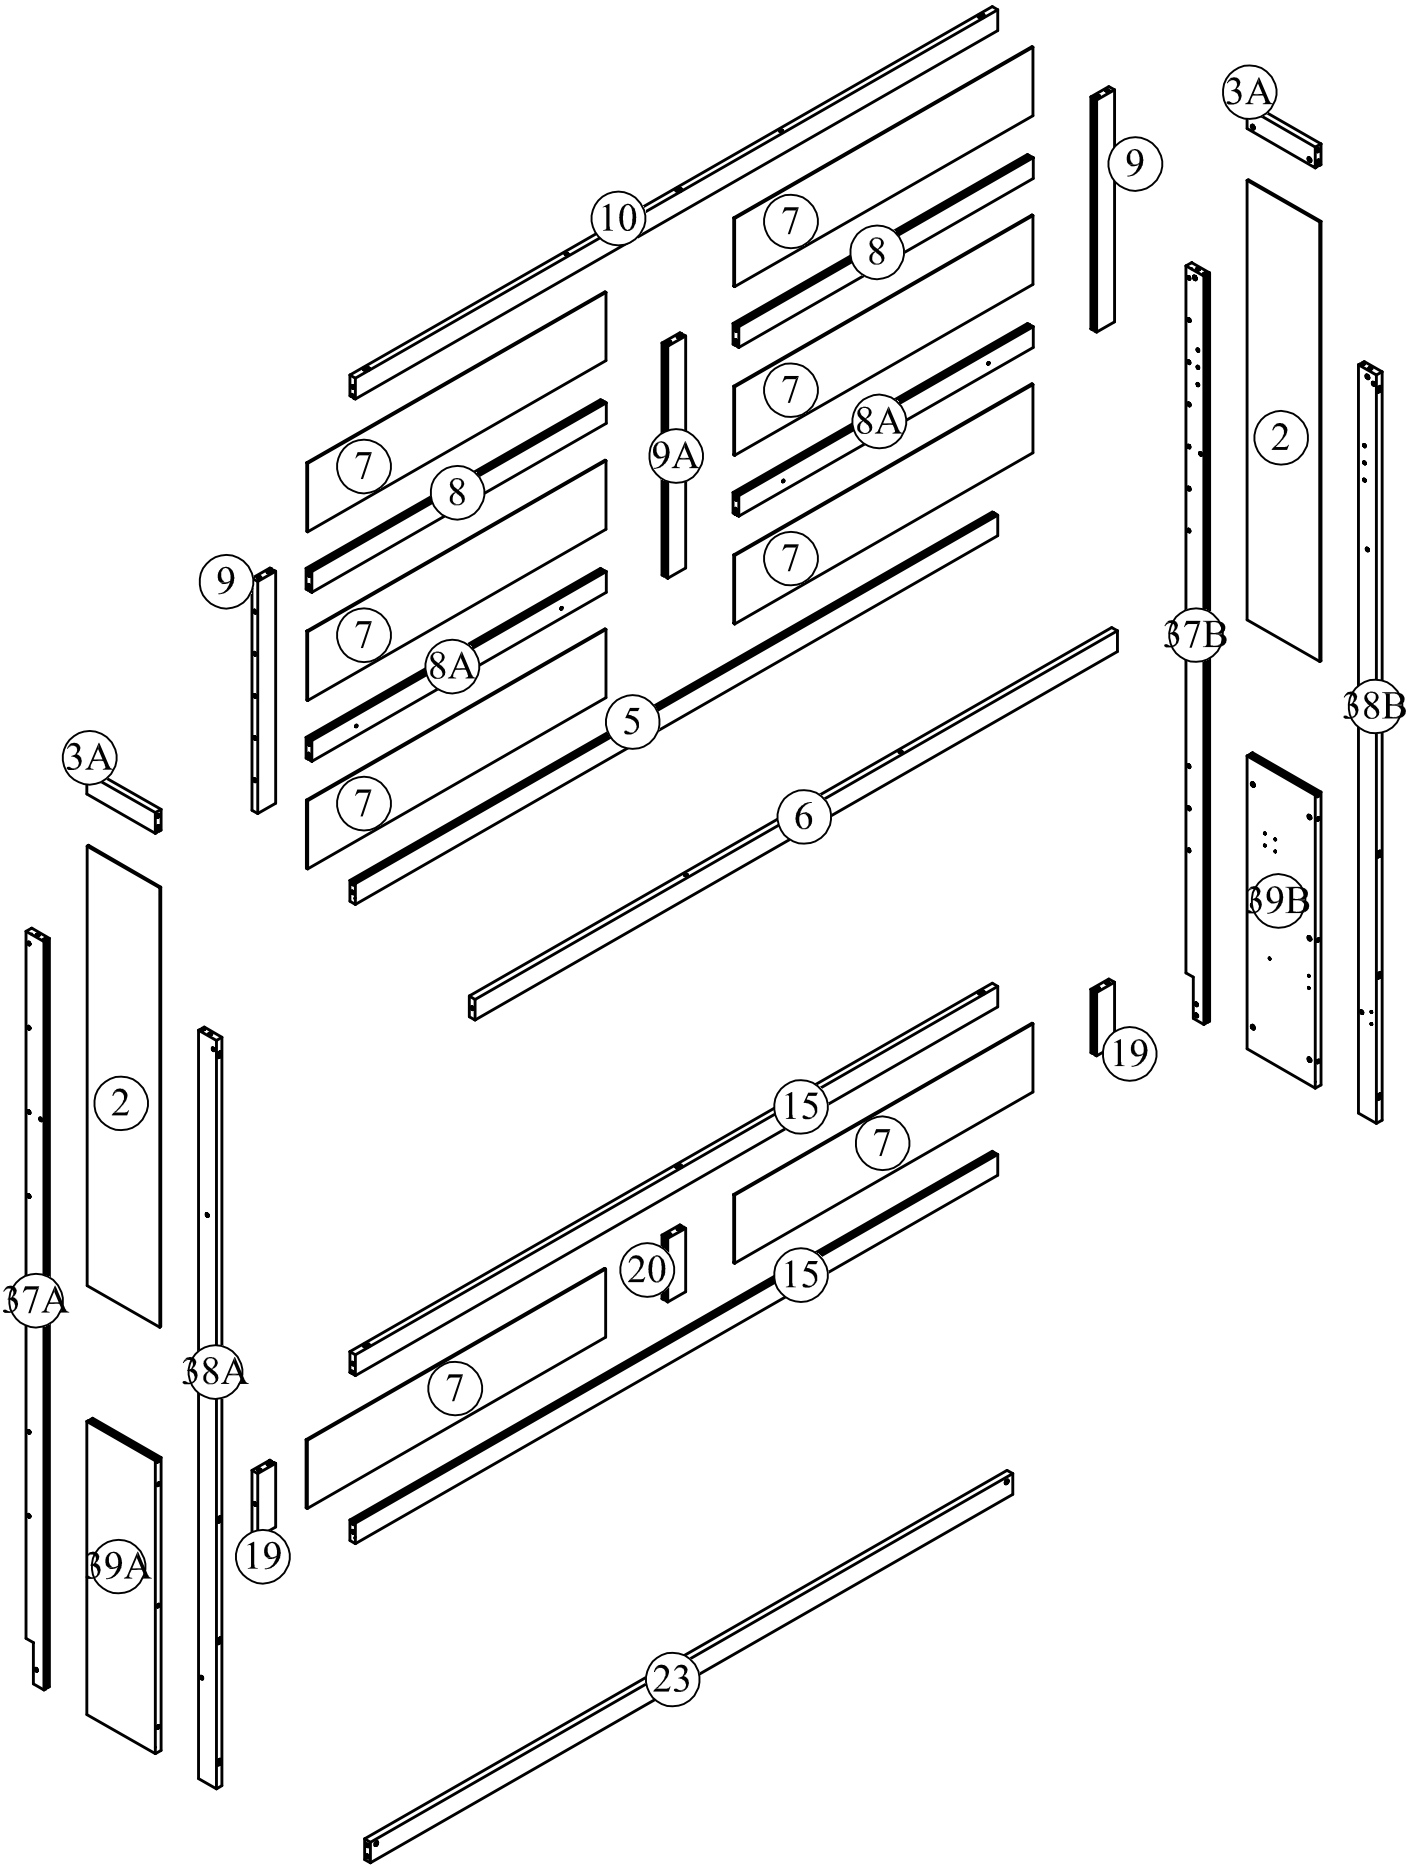

ASSEMBLY INSTRUCTIONS INSTRUCTIONS DE MONTAGE

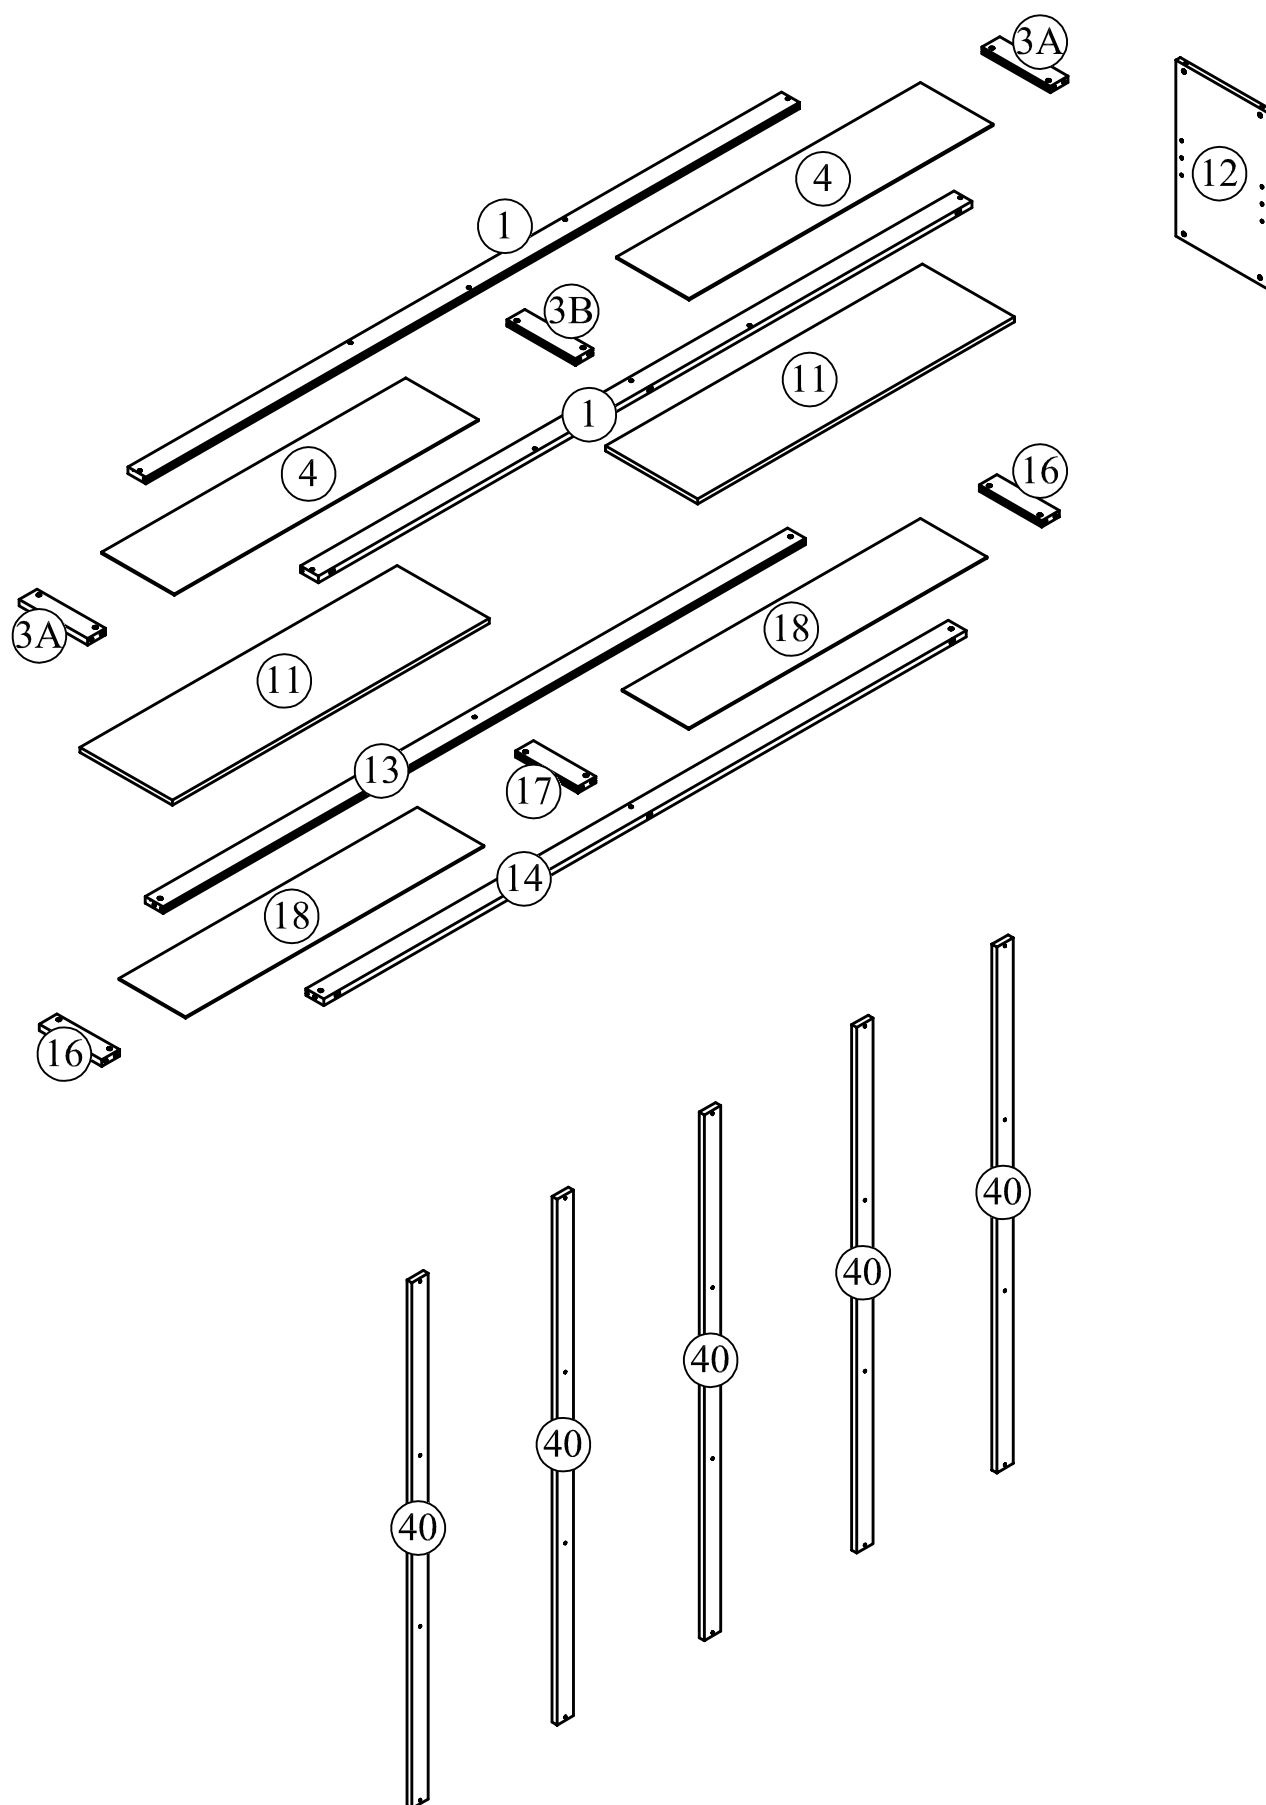


ASSEMBLY INSTRUCTIONS INSTRUCTIONS DE MONTAGE

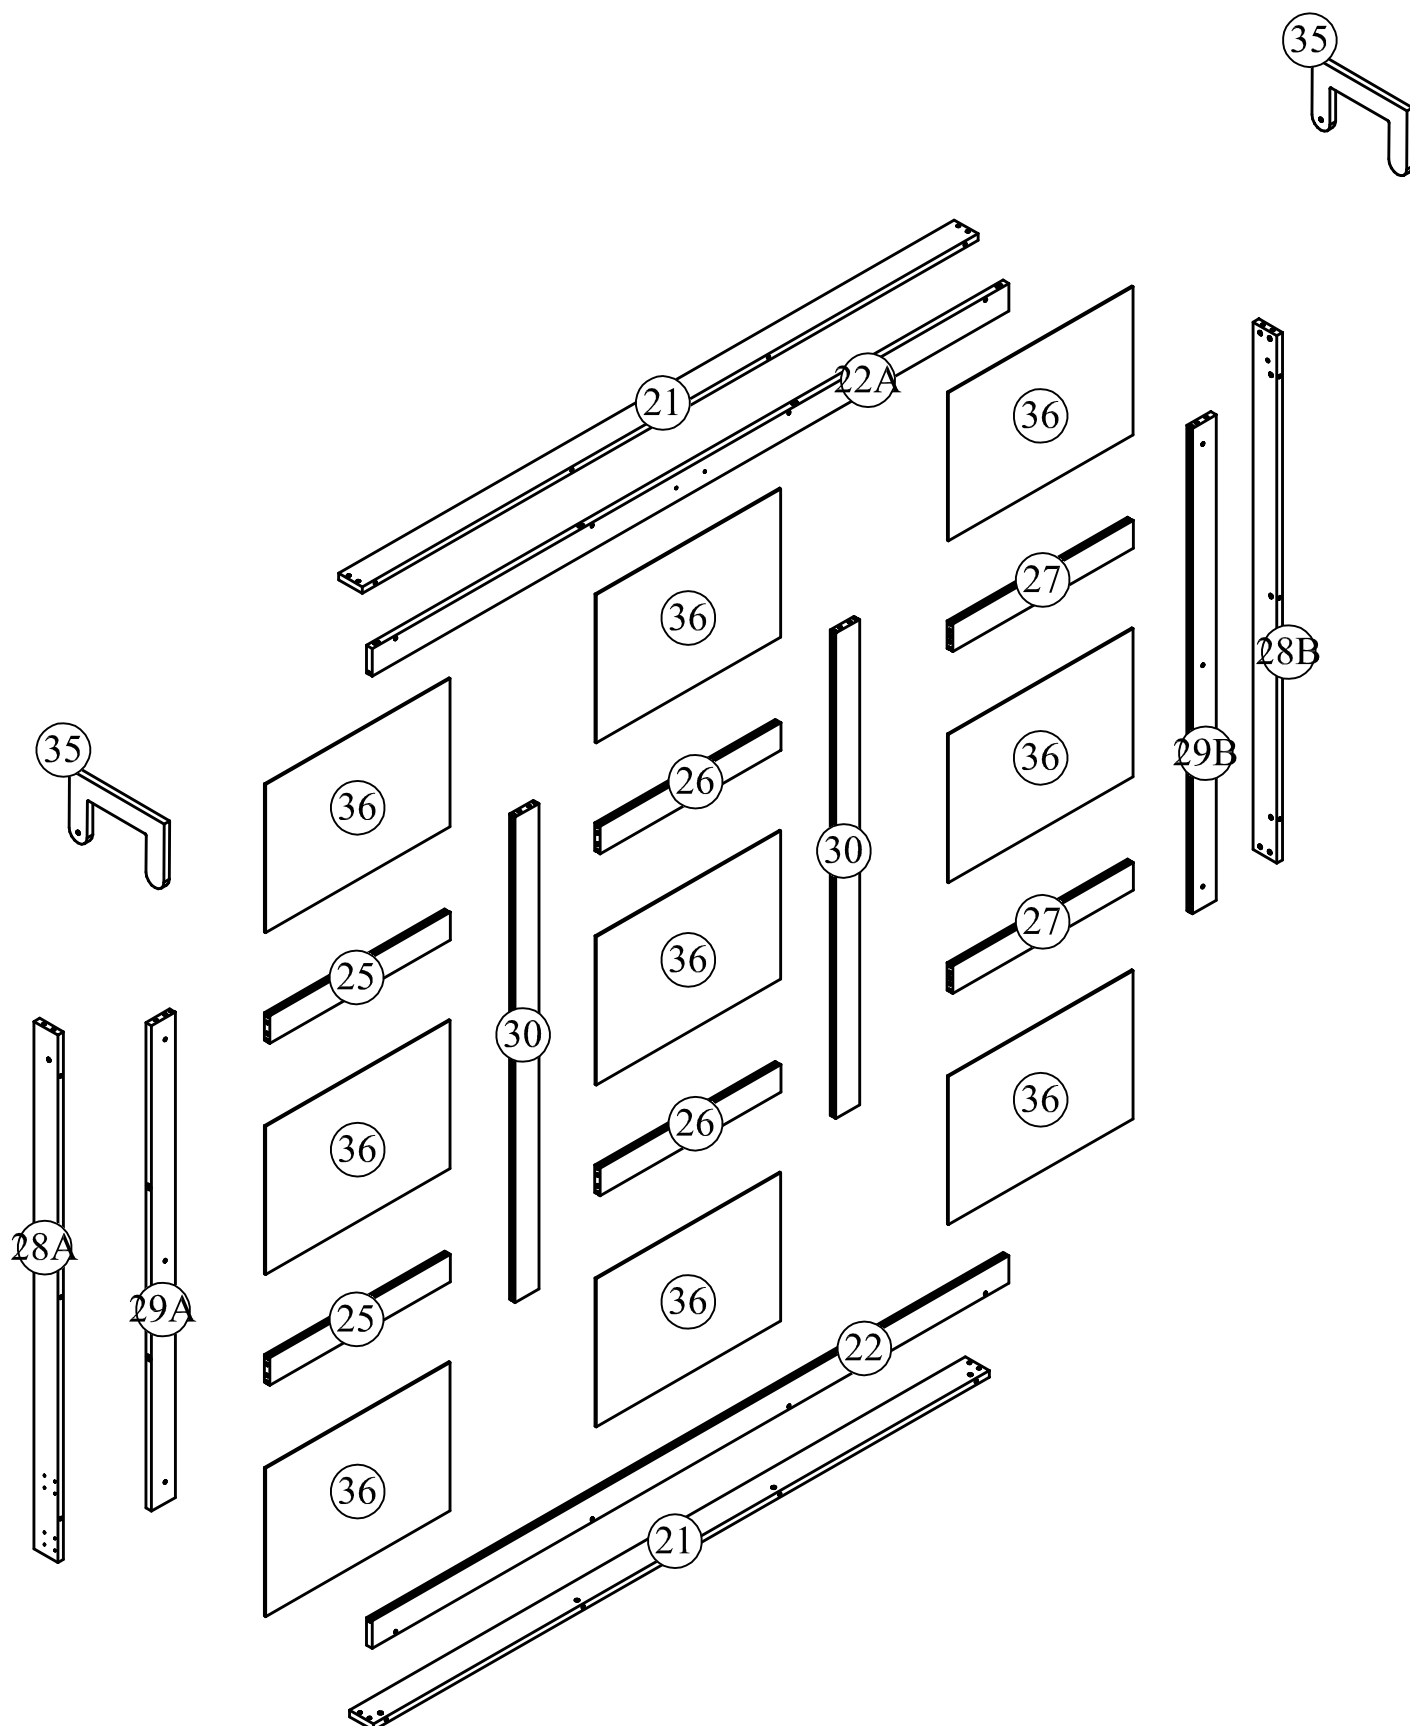
















ASSEMBLY INSTRUCTIONS

INSTRUCTIONS DE MONTAGE

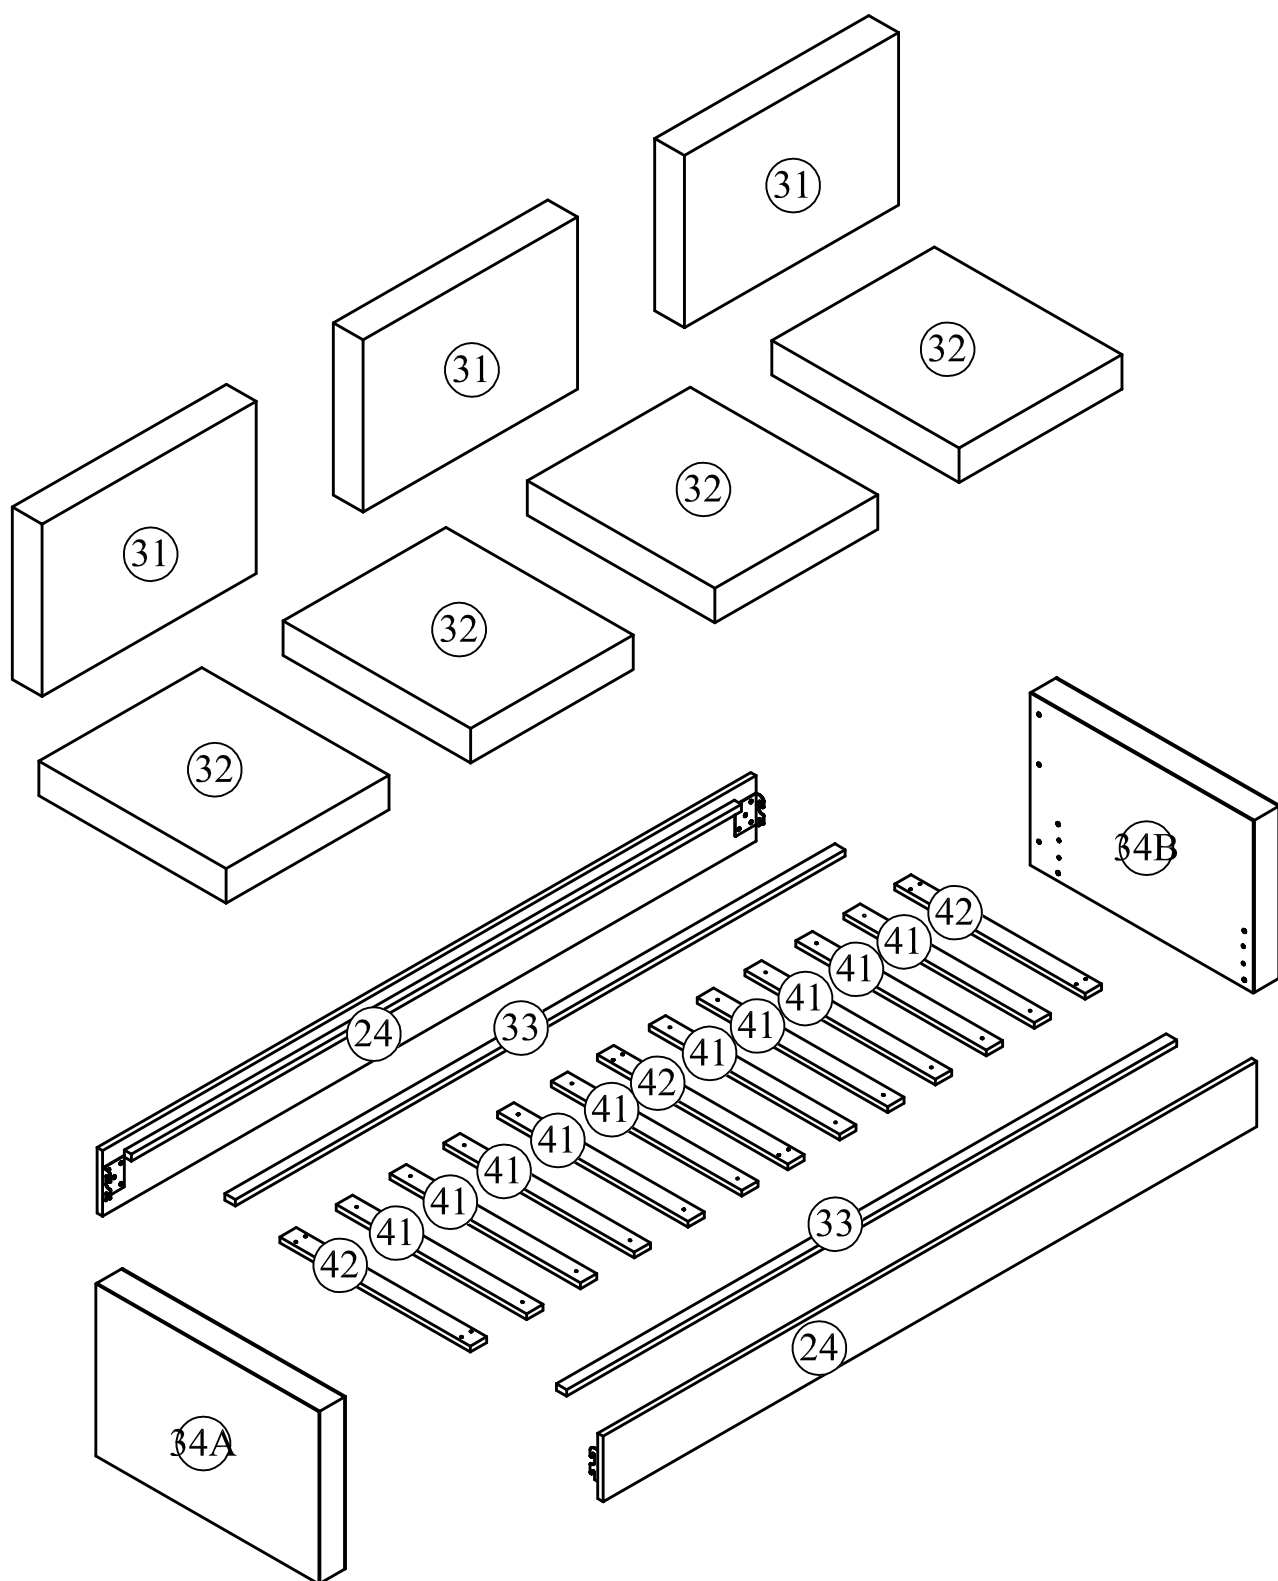















Part List (N708P473184)

Liste des pièces(N708P473184)

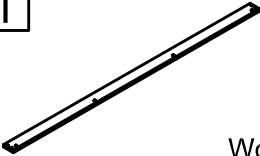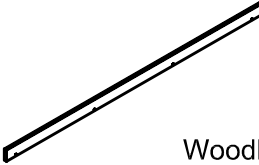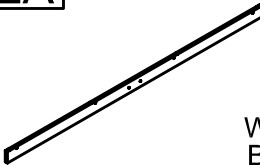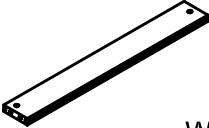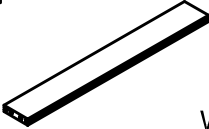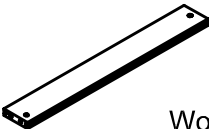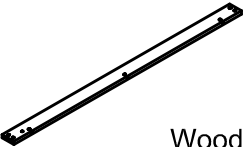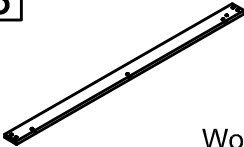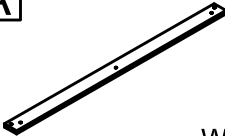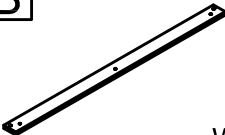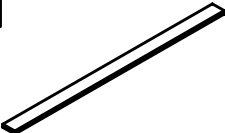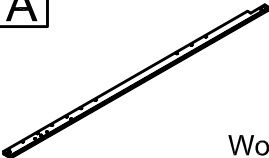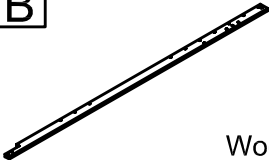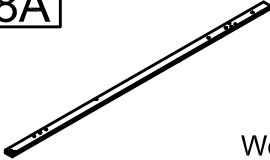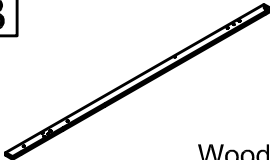21  WoodBar 2 pcs Barres de bois	22  WoodBar 1 pc Barres de bois	22A  WoodBar 1 pc Barres de bois
25  WoodBar 2 pcs Barres de bois	26  WoodBar 2 pcs Barres de bois	27  WoodBar 2 pcs Barres de bois
28A  WoodBar 1 pc Barres de bois	28B  WoodBar 1 pc Barres de bois	29A  WoodBar 1 pc Barres de bois
29B  WoodBar 1 pc Barres de bois	30  WoodBar 2 pcs Barres de bois	37A  WoodBar 1 pc Barres de bois
37B  WoodBar 1 pc Barres de bois	38A  WoodBar 1 pc Barres de bois	38B  WoodBar 1 pc Barres de bois




Part List (N708P473185)

Liste des pièces(N708P473185)

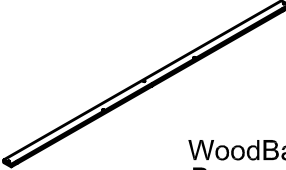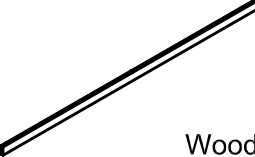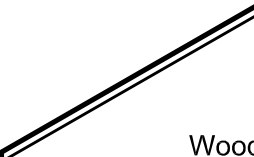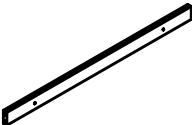
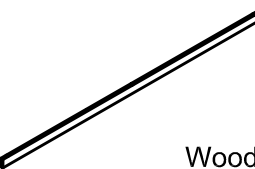
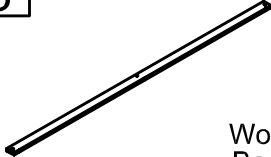
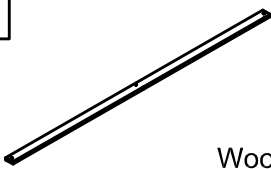
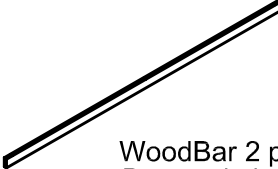


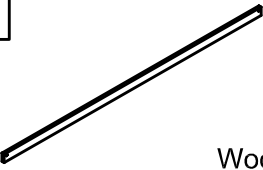
1  WoodBar 2 pcs Barres de bois	3A  WoodBar 4 pcs Barres de bois	3B  WoodBar 1 pc Barres de bois
5  WoodBar 1 pc Barres de bois	6  WoodBar 1 pc Barres de bois	8  WoodBar 2 pcs Barres de bois
8A  WoodBar 2 pcs Barres de bois	9  WoodBar 2 pcs Barres de bois	9A  WoodBar 1 pc Barres de bois
10  WoodBar 1 pc Barres de bois	13  WoodBar 1 pc Barres de bois	14  WoodBar 1 pc Barres de bois
15  WoodBar 2 pcs Barres de bois	16  WoodBar 2 pcs Barres de bois	17  WoodBar 1 pc Barres de bois
19  WoodBar 2 pcs Barres de bois	20  WoodBar 1 pc Barres de bois	23  WoodBar 1 pc Barres de bois
35  WoodBar 2 pcs Barres de bois		

Part List (N708P473186)

Liste des pièces(N708P473186)



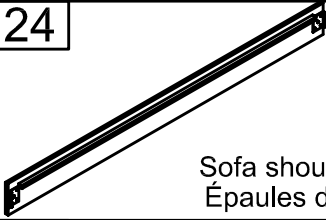
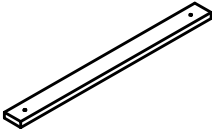
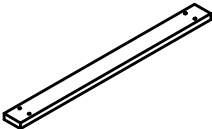
24  Sofa shoulders 2 pcs Épaules de canapé	33  WoodBar 2 pcs Barres de bois	41  Slats 640 mm 10pcs Lattes 640 mm
42  Slats 640 mm 3pcs Lattes 640 mm		

Part List (N708P473187)
Liste des pièces(N708P473187)

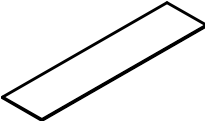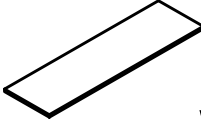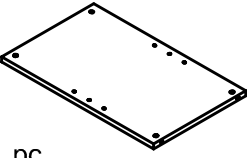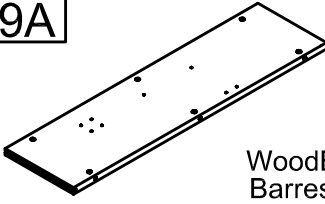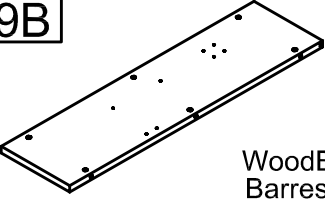2  Panel 1275x244 mm 2 pcs Panneau 1275x244 mm	4  Panel 1022x244 mm 2 pcs Panneau 1022x244 mm	7  Panel 1003x198 mm 8 pcs Panneau 1003x198 mm
11  WoodBar 2 pcs Barres de bois	12  WoodBar 1 pc Barres de bois	18  Panel 1003x224 mm 2 pcs Panneau 1003x224 mm
39A  WoodBar 1 pc Barres de bois	39B  WoodBar 1 pc Barres de bois	40  Slats 1525mm 5pcs Lattes 1525mm
L  Bracket Steel 2 Set Support en acier	N  Piston 600N 2pcs Piston 600N 2pièces	S  Left L 1pcs Gauche L 1pièces I  Right L 1pcs Droite L 1pièces
Y  Carpet Fabric 1pc Tissu de tapis 1pièce		












Part List (N708P473188)


Liste des pièces(N708P473188)

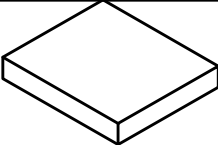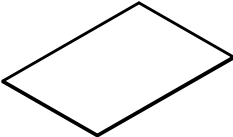31  Back cushion 3 pcs Coussin de dossier	32  Seat cushion 4 pcs Coussin de siège	34A  Sofa shoulders 1 pc Épaules de canapé
34B  Sofa shoulders 1 pc Épaules de canapé	36  Panel 620.5x430 mm 9 pcs Panneau 620.5x430 mm	

Hardware List (N708P473187)

Liste du matériel (N708P473187)

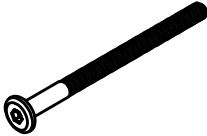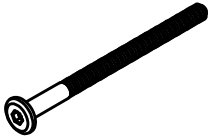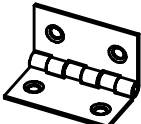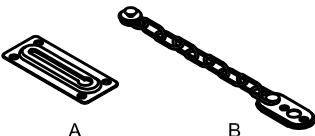A  1/4" x 100mm Hex-Head bolts 16pcs Boulons à tête hexagonale 1/4" x 100 mm	B  Ø10.5 x 12mm Horizontal -Hole bolts 110pcs Boulons à trou horizontal Ø10.5 x 12mm	C  1/4" x 50mm Hex-Head bolts 58pcs Boulons à tête hexagonale 1/4" x 50 mm
D  Ø8 x 30 mm Wood dowel 54 pcs Cheville en bois Ø8 x 30 mm	E  Shelf Pin 9mm 8 pcs Broche d'étagère 9mm	G  M4 x 15mm Wood Screws 40 pcs Vis à bois M4 x 15 mm
H  1/4" x 30mm Wood Screws 4pcs Vis à bois 1/4" x 30mm	J  1/4" x 90mm Hex-Head bolts 38pcs Boulons à tête hexagonale 1/4" x 90 mm	K  M4 x 30 mm Wood Screws 52pcs Vis à bois M4 x 30 mm
M  Handle 1 pc Poignées	O  1/4" x 25mm Hex-Head bolts 2pcs Boulons à tête hexagonale 1/4" x 25 mm	P  1/4" x 30mm Steeve Nut 2pcs Écrou Steeve 1/4" x 30 mm
Q  Ø8 x 40 mm Wood dowel 28 pcs Cheville en bois Ø8 x 40 mm	R  M4 x 25 mm Handle Screw 2pcs Vis de poignée M4 x 25 mm	T  1/4" x 20mm Hex-Head bolts 8pcs Boulons à tête hexagonale 1/4" x 20 mm
U  Plastic Feet(Ø50x40) 4pcs Pieds en plastique (Ø50x40)	V  Allen Key 2pcs Clé Allen	X  Hinge 3pcs Charnière
Z  1/4" x 70mm Hex-Head bolts 2pcs Boulons à tête hexagonale 1/4" x 70mm	A1  Ø5 x 10 mm Screws and plastic anchor 1set (6 pcs) Vis et ancrage en plastique 1 jeu	A2  Ø6 x 12 mm Stainless Steel anchor 1set (6 pcs) Ancre en acier inoxydable 1 jeu
B1  Z Bracket 3 pcs Support en Z	C1  A B Safety Chain 1 set Chaîne de sécurité	D1  M4 x 15mm Wood Screws 12pcs Vis à bois M4 x 15 mm



Assembly Tools Required (Not Included)
Outils d'assemblage Requis (Non Inclus)

Please scan the QR code below to see the safe assembly instructions.


Bitte scannen Sie den unten stehenden QR-Code, um die sichere Montageanleitung anzuzeigen.



STEP 1: Following below illustration:

ÉTAPE 1: Illustration ci-dessous :


Z	D	J	B
			
1pcs	2pcs	7pcs	8pcs

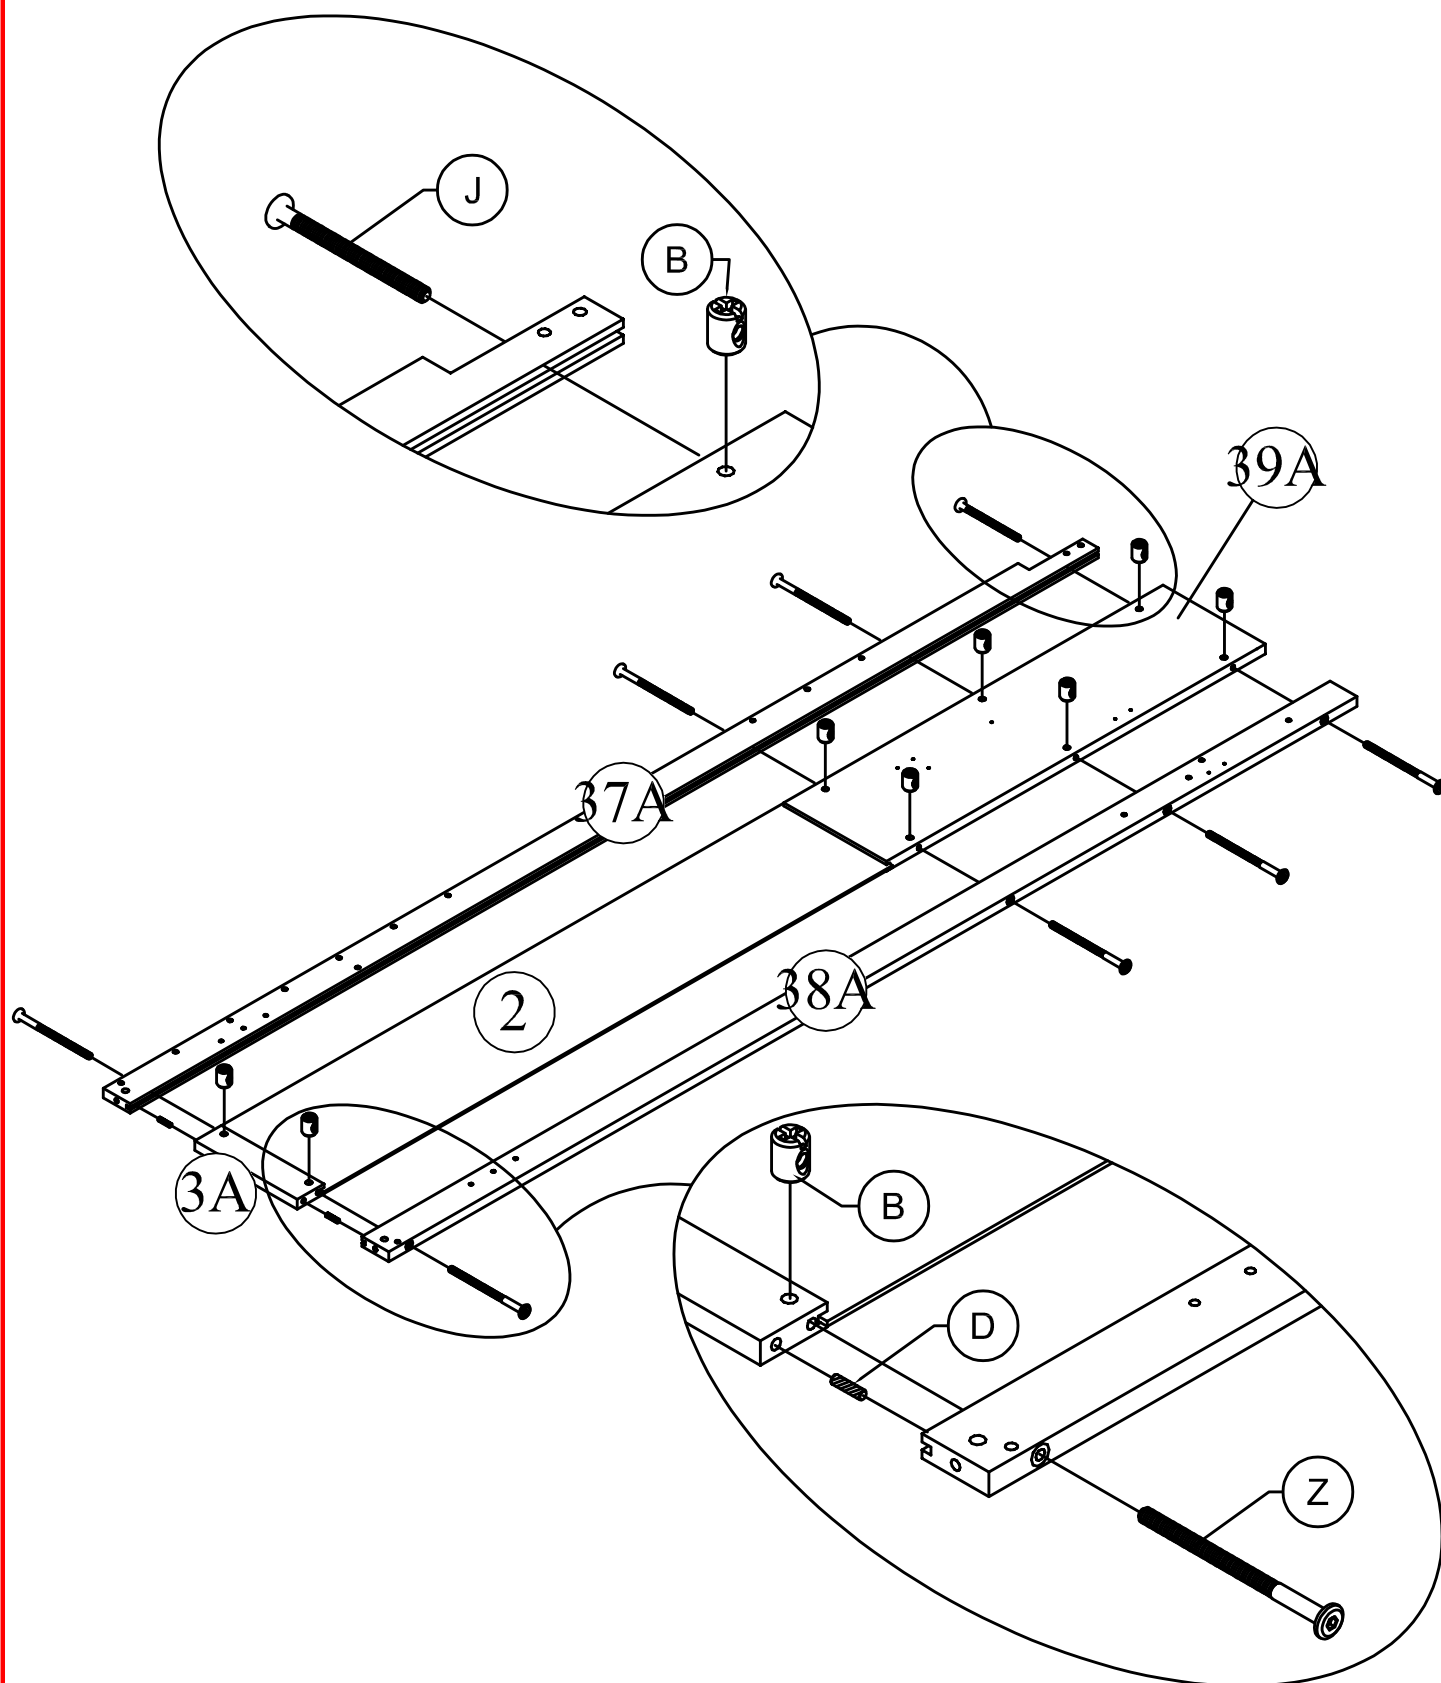

STEP 2: Following below illustration:

ÉTAPE 2: Illustration ci-dessous :


Z	D	J	B
			
1pcs	2pcs	7pcs	8pcs

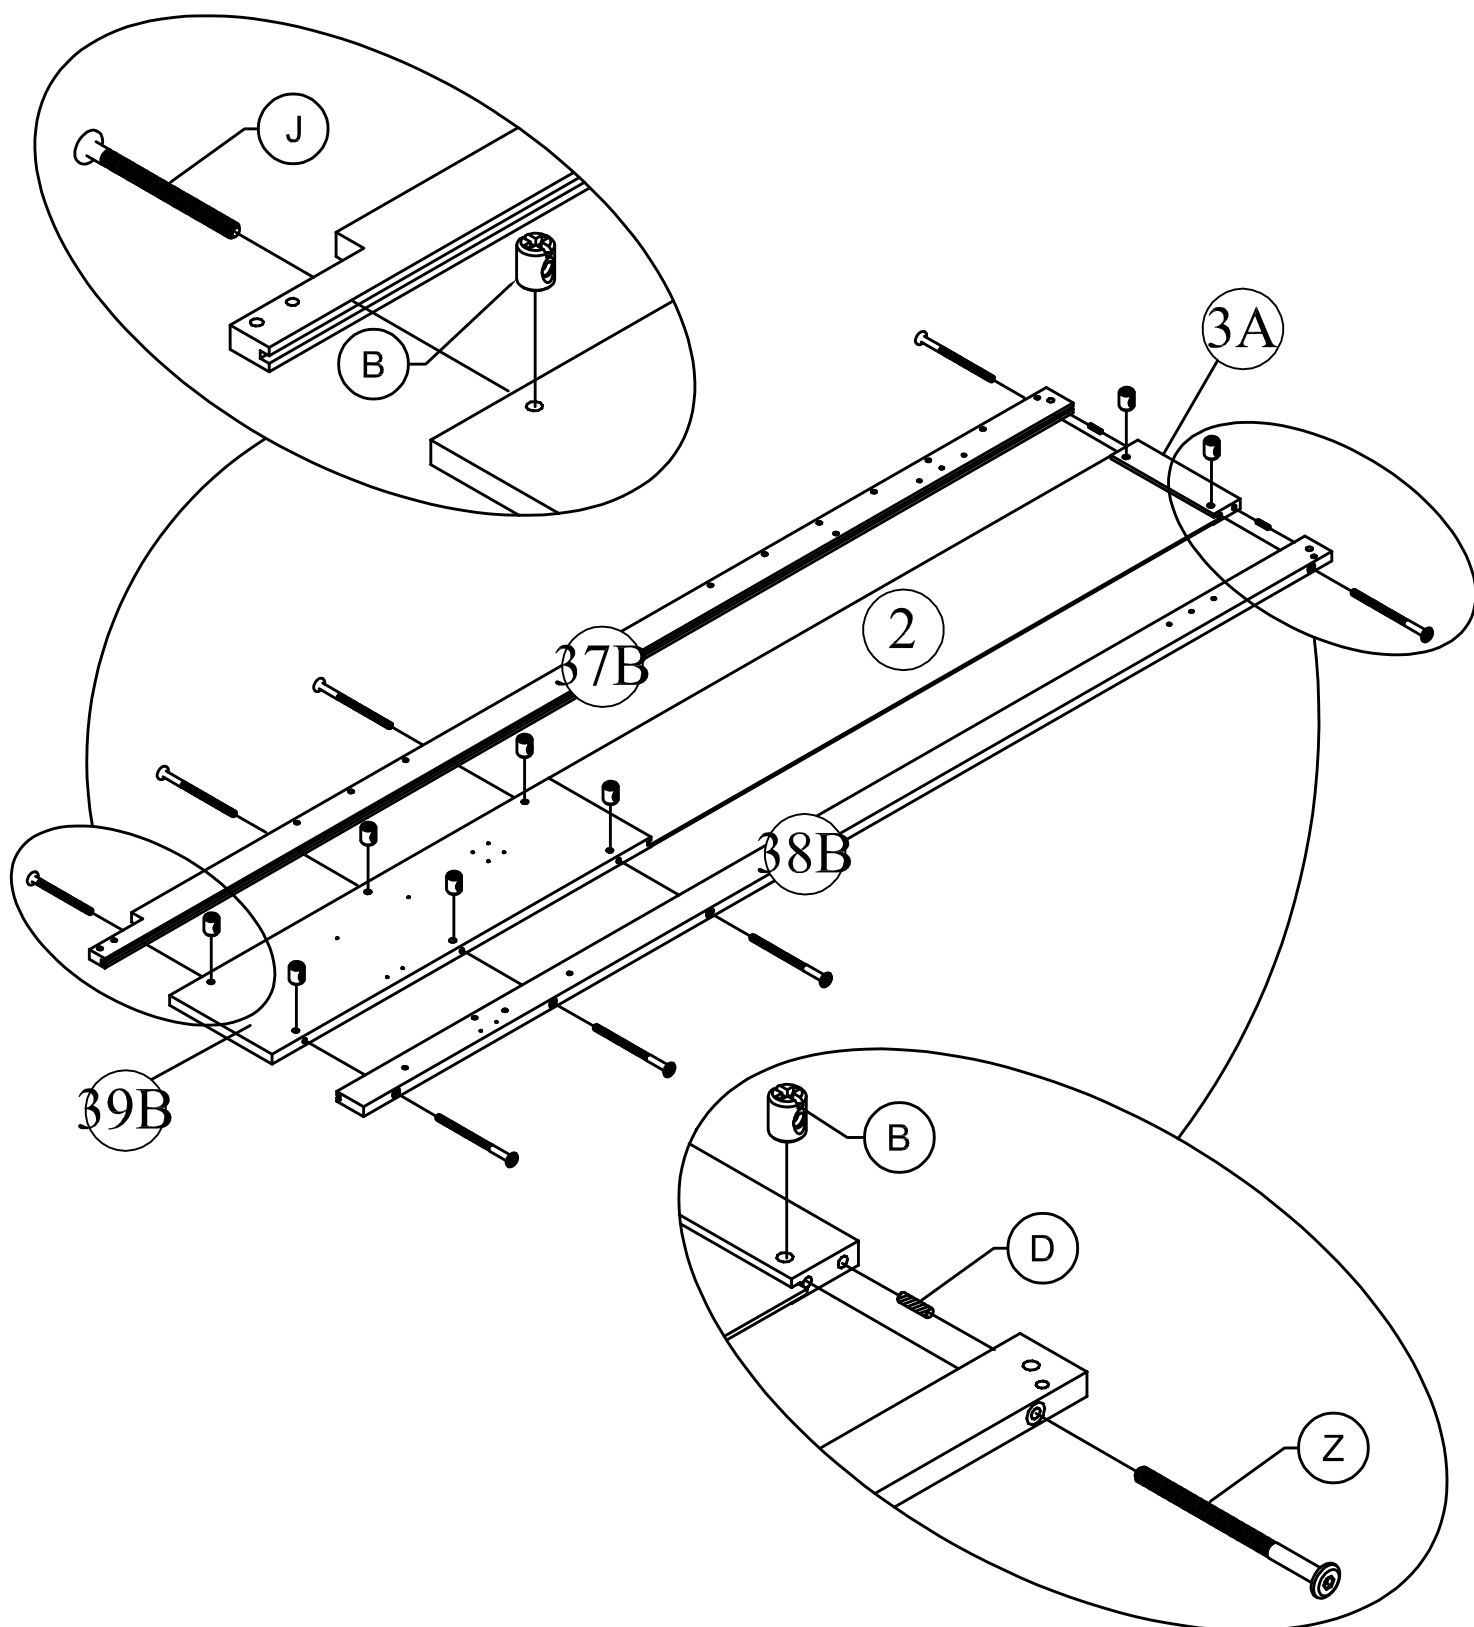

STEP 3: Following below illustration:


ÉTAPE 3: Illustration ci-dessous :


D	J	B
		
6pcs	6pcs	6pcs

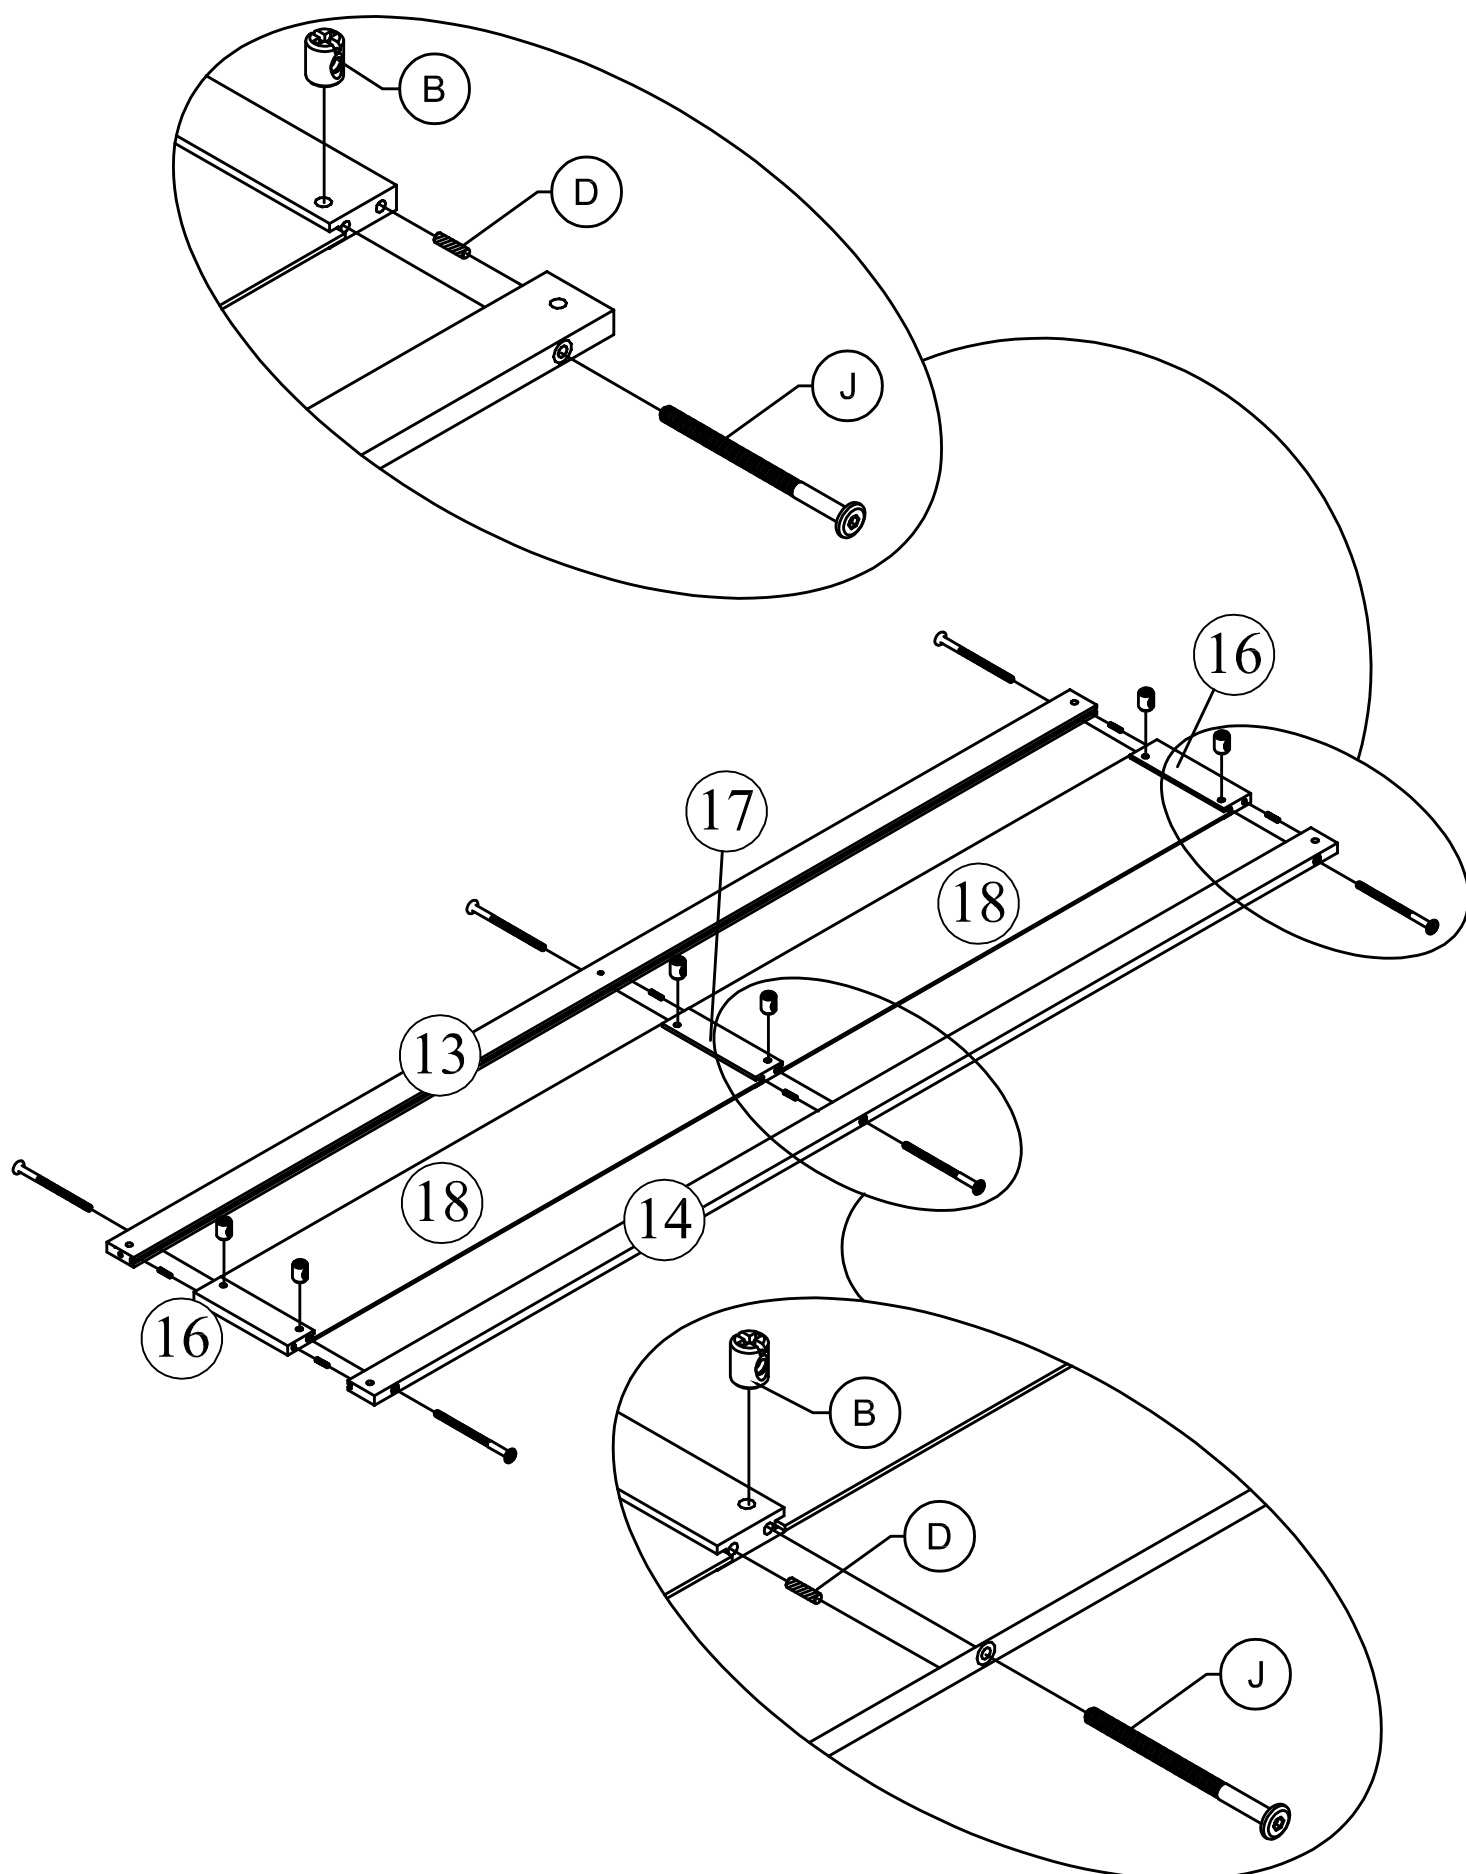

STEP 4: Following below illustration:

ÉTAPE 4: Illustration ci-dessous :


D	J	B
		
6pcs	6pcs	6pcs

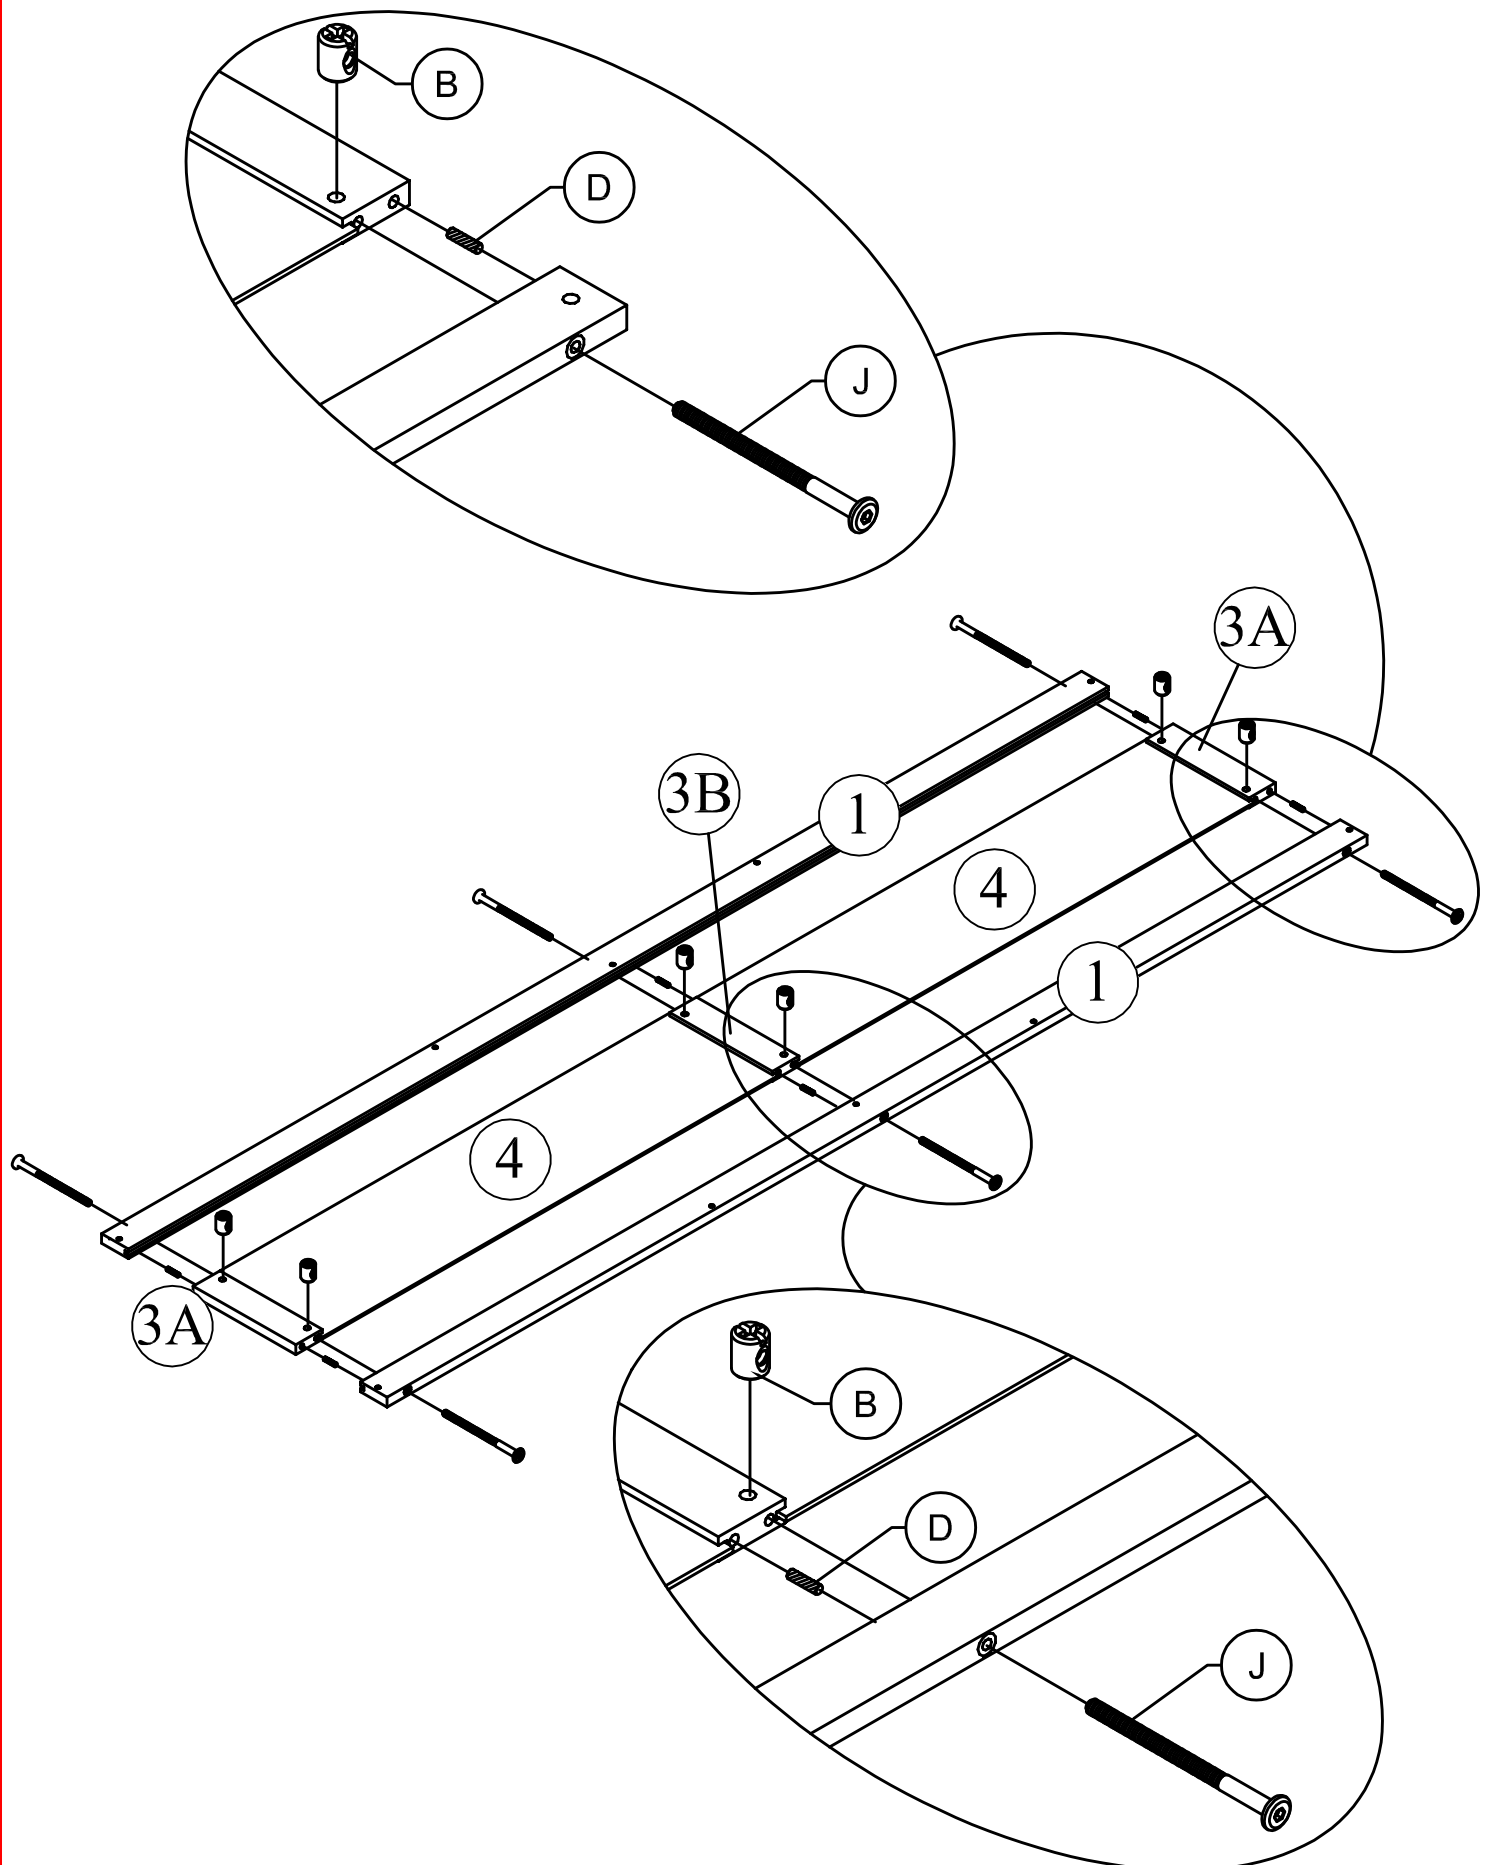

STEP 5: Following below illustration:



ÉTAPE 5: Illustration ci-dessous :

D	J	B
		
6pcs	6pcs	6pcs

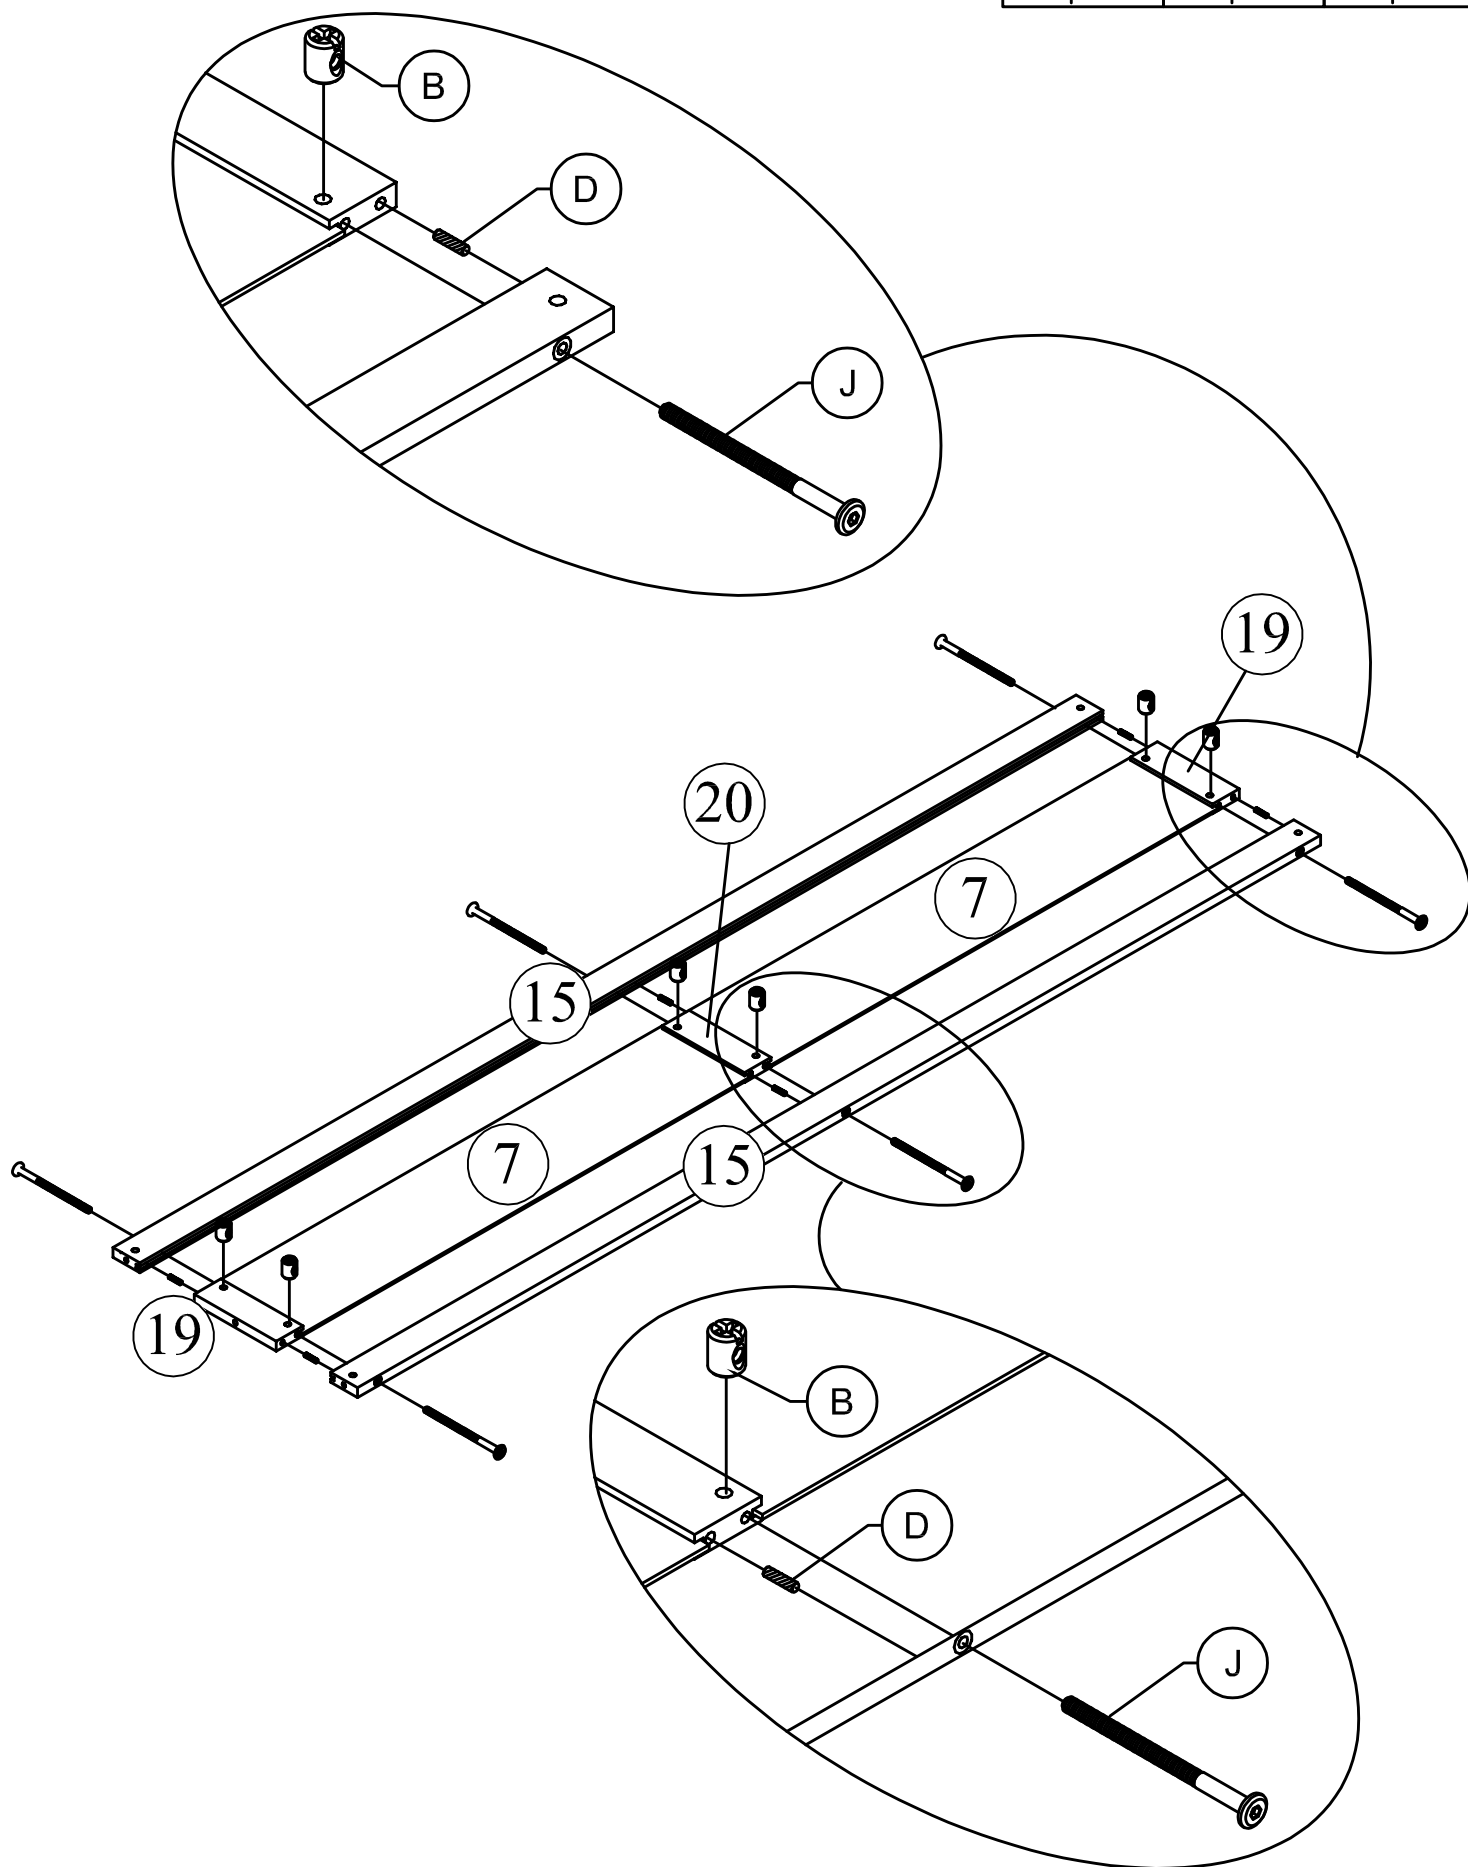


STEP 6: Following below illustration:


ÉTAPE 6: Illustration ci-dessous :

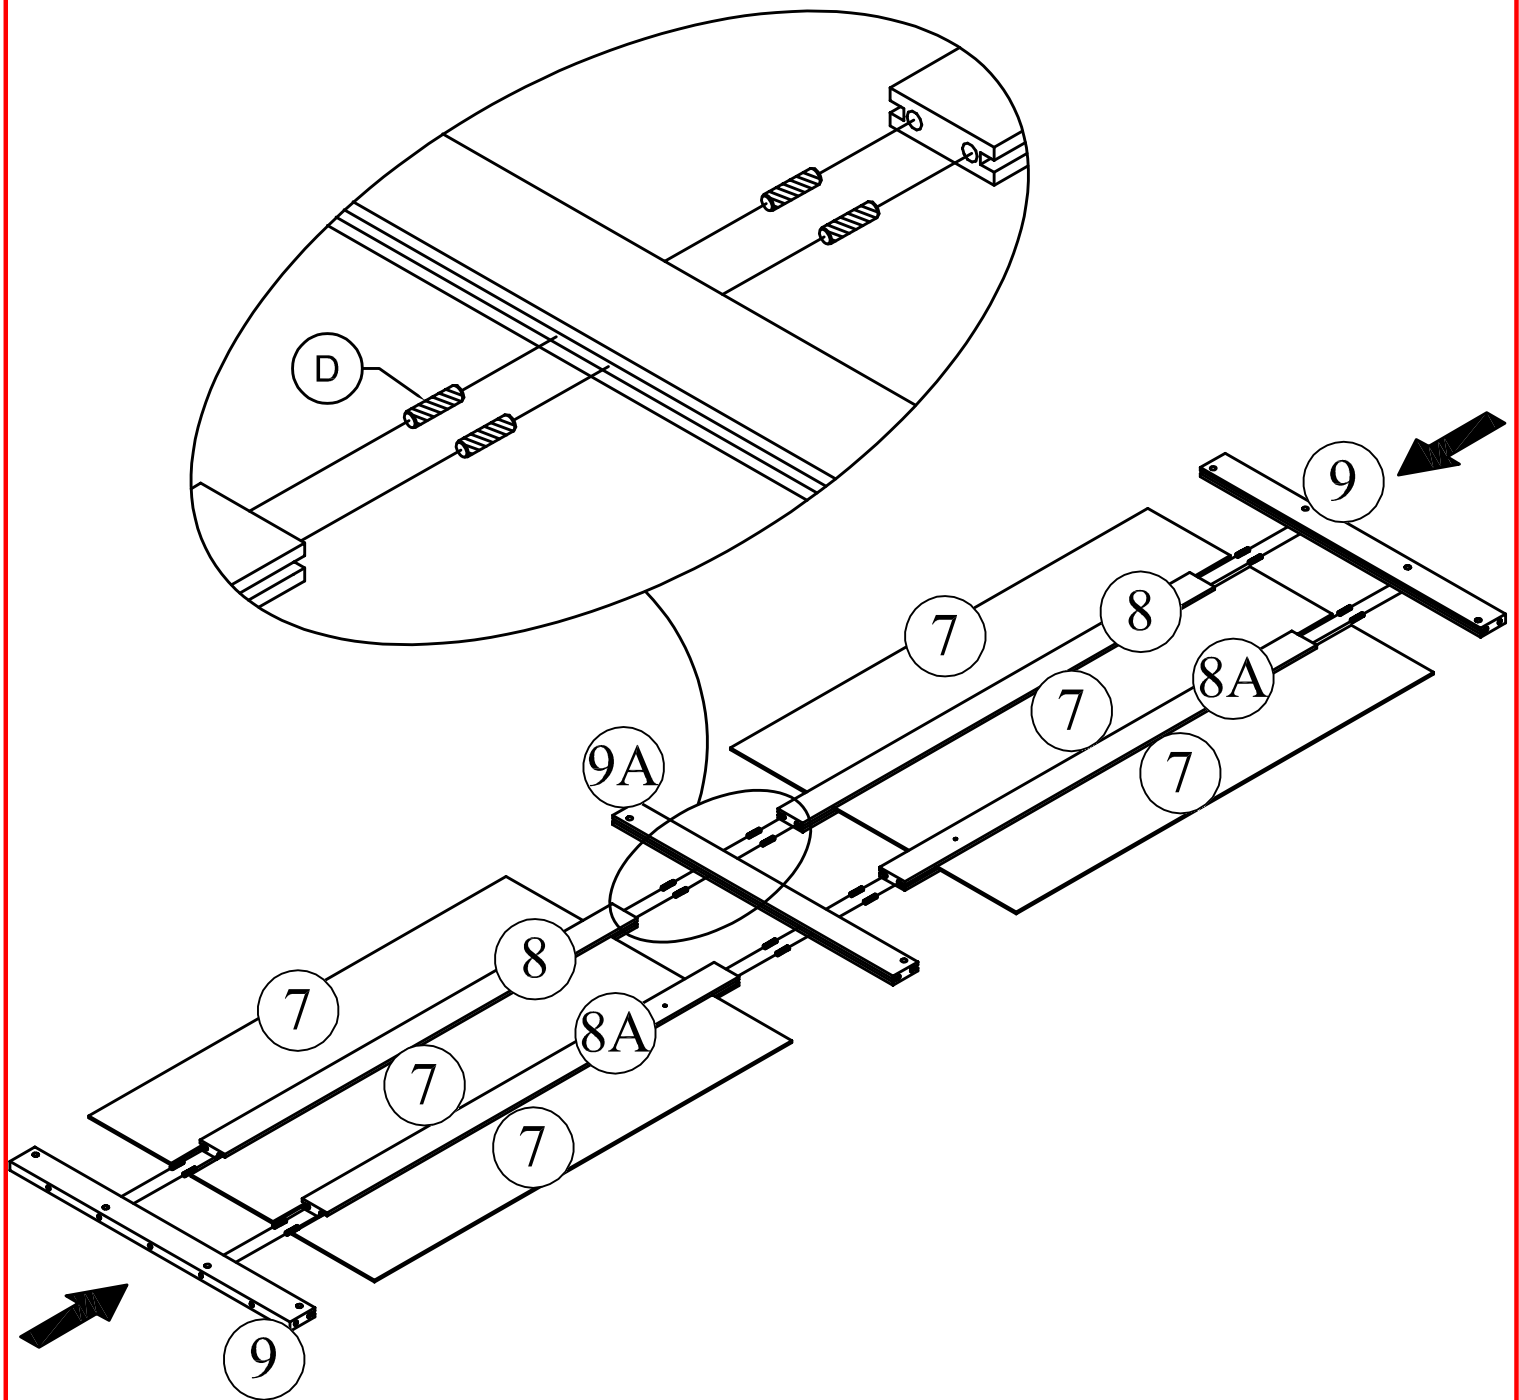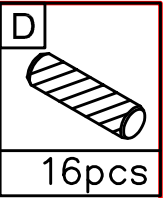

STEP 7: Following below illustration:


ÉTAPE 7: Illustration ci-dessous :


D	J	B
		
6pcs	6pcs	6pcs

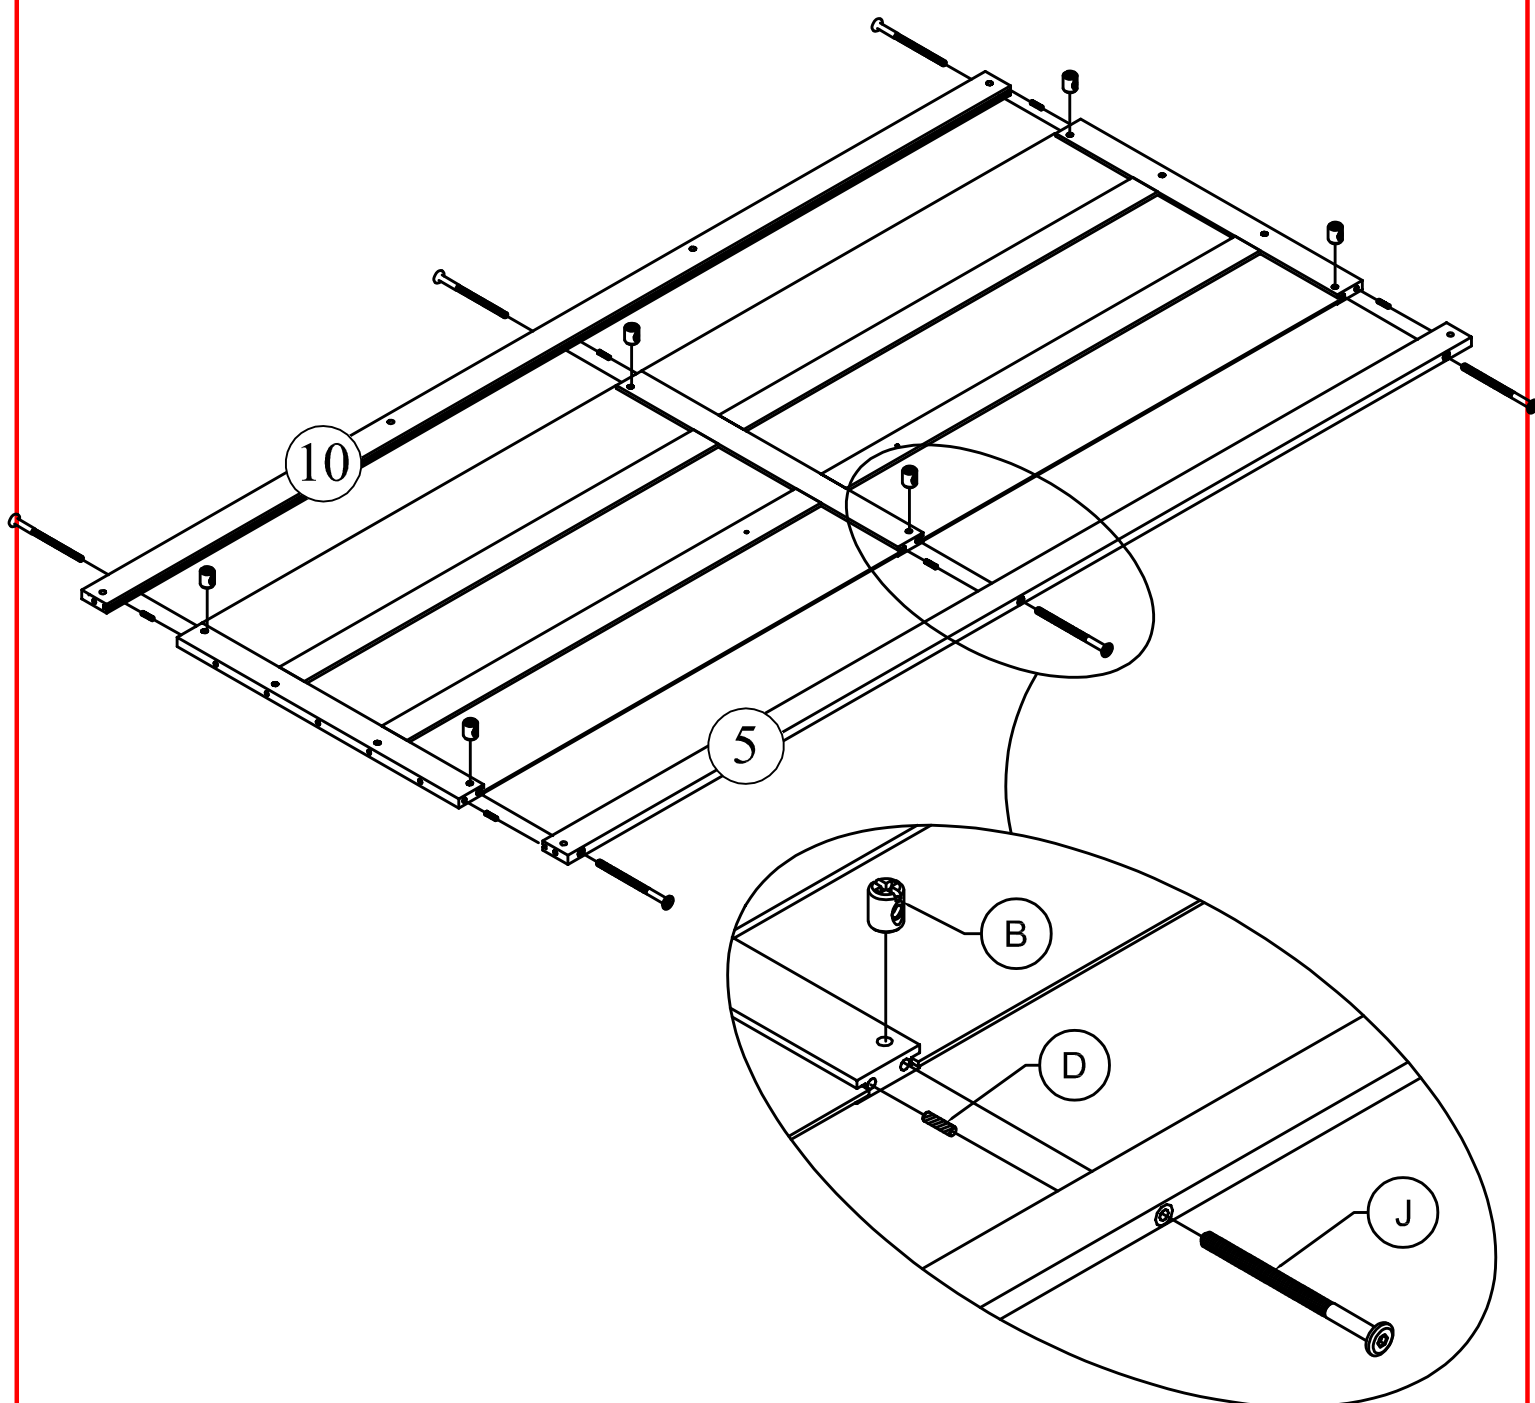

STEP 8: Following below illustration:

ÉTAPE 8: Illustration ci-dessous :


D	C	B
		
10pcs	16pcs	16pcs

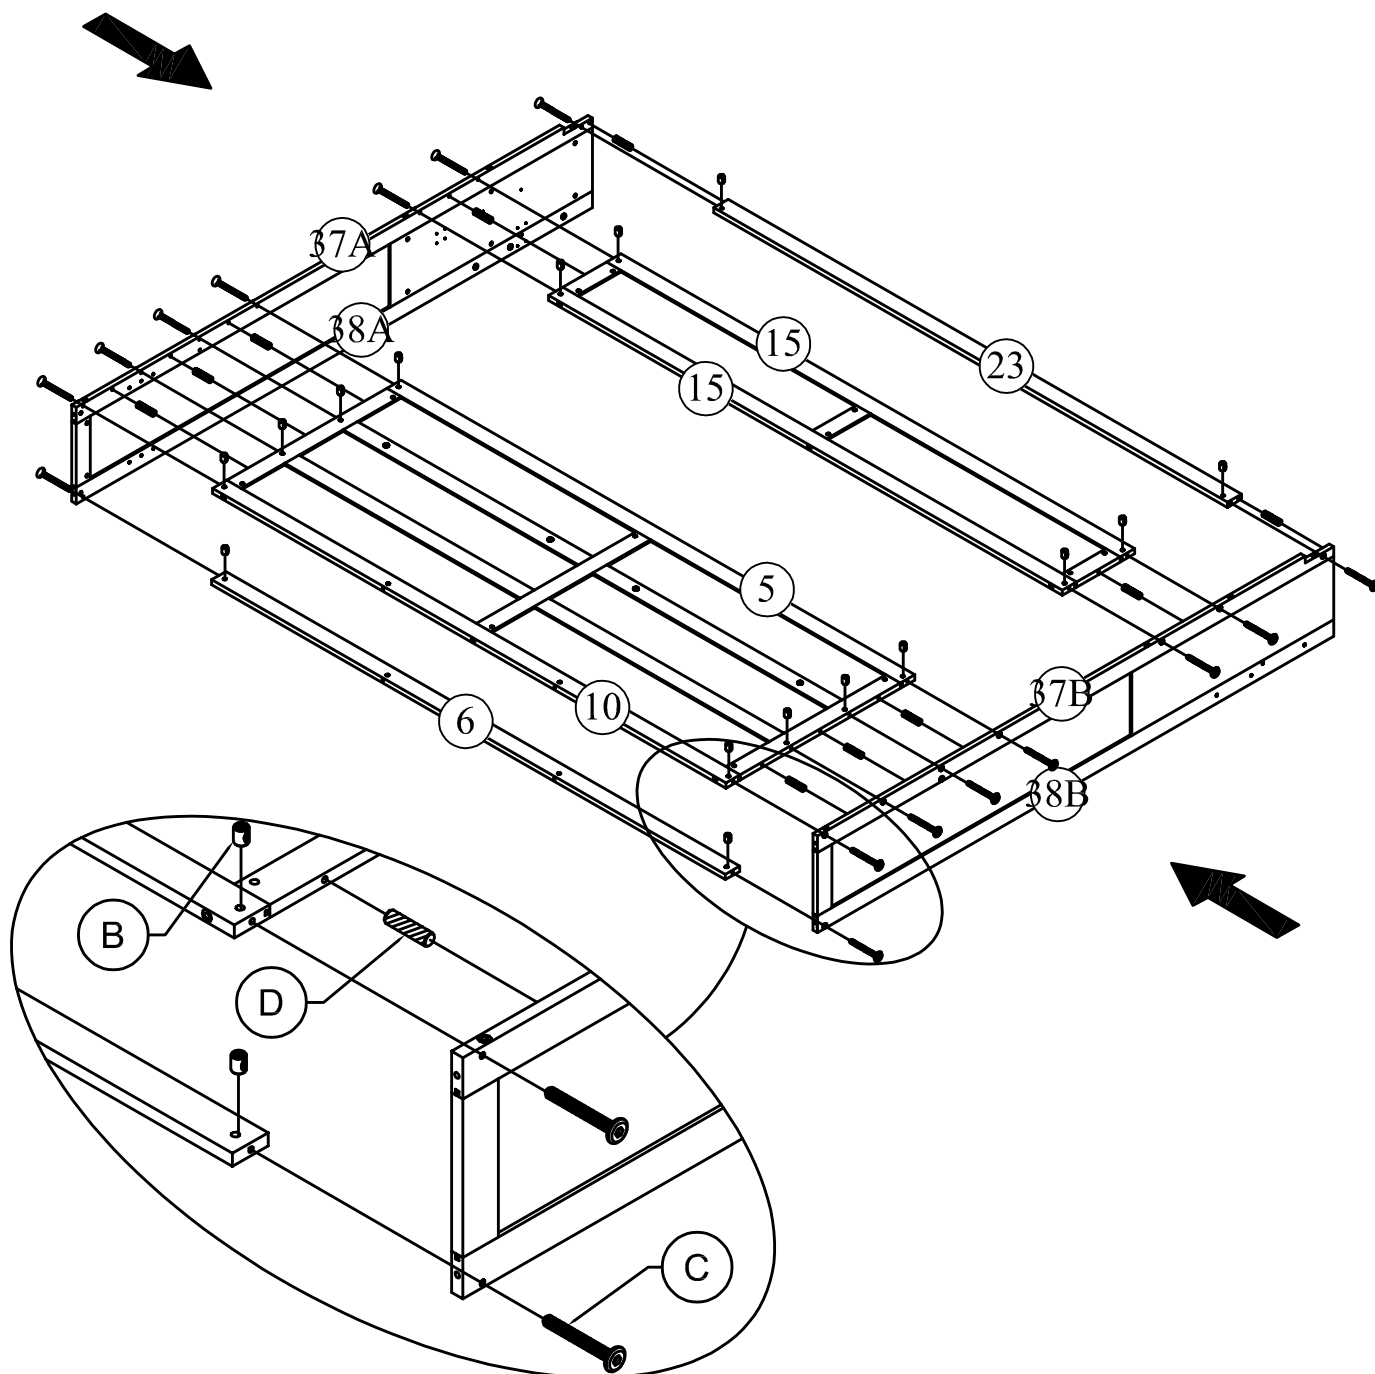

STEP 9: Following below illustration:


ÉTAPE 9: Illustration ci-dessous :

C	B
	
8pcs	8pcs

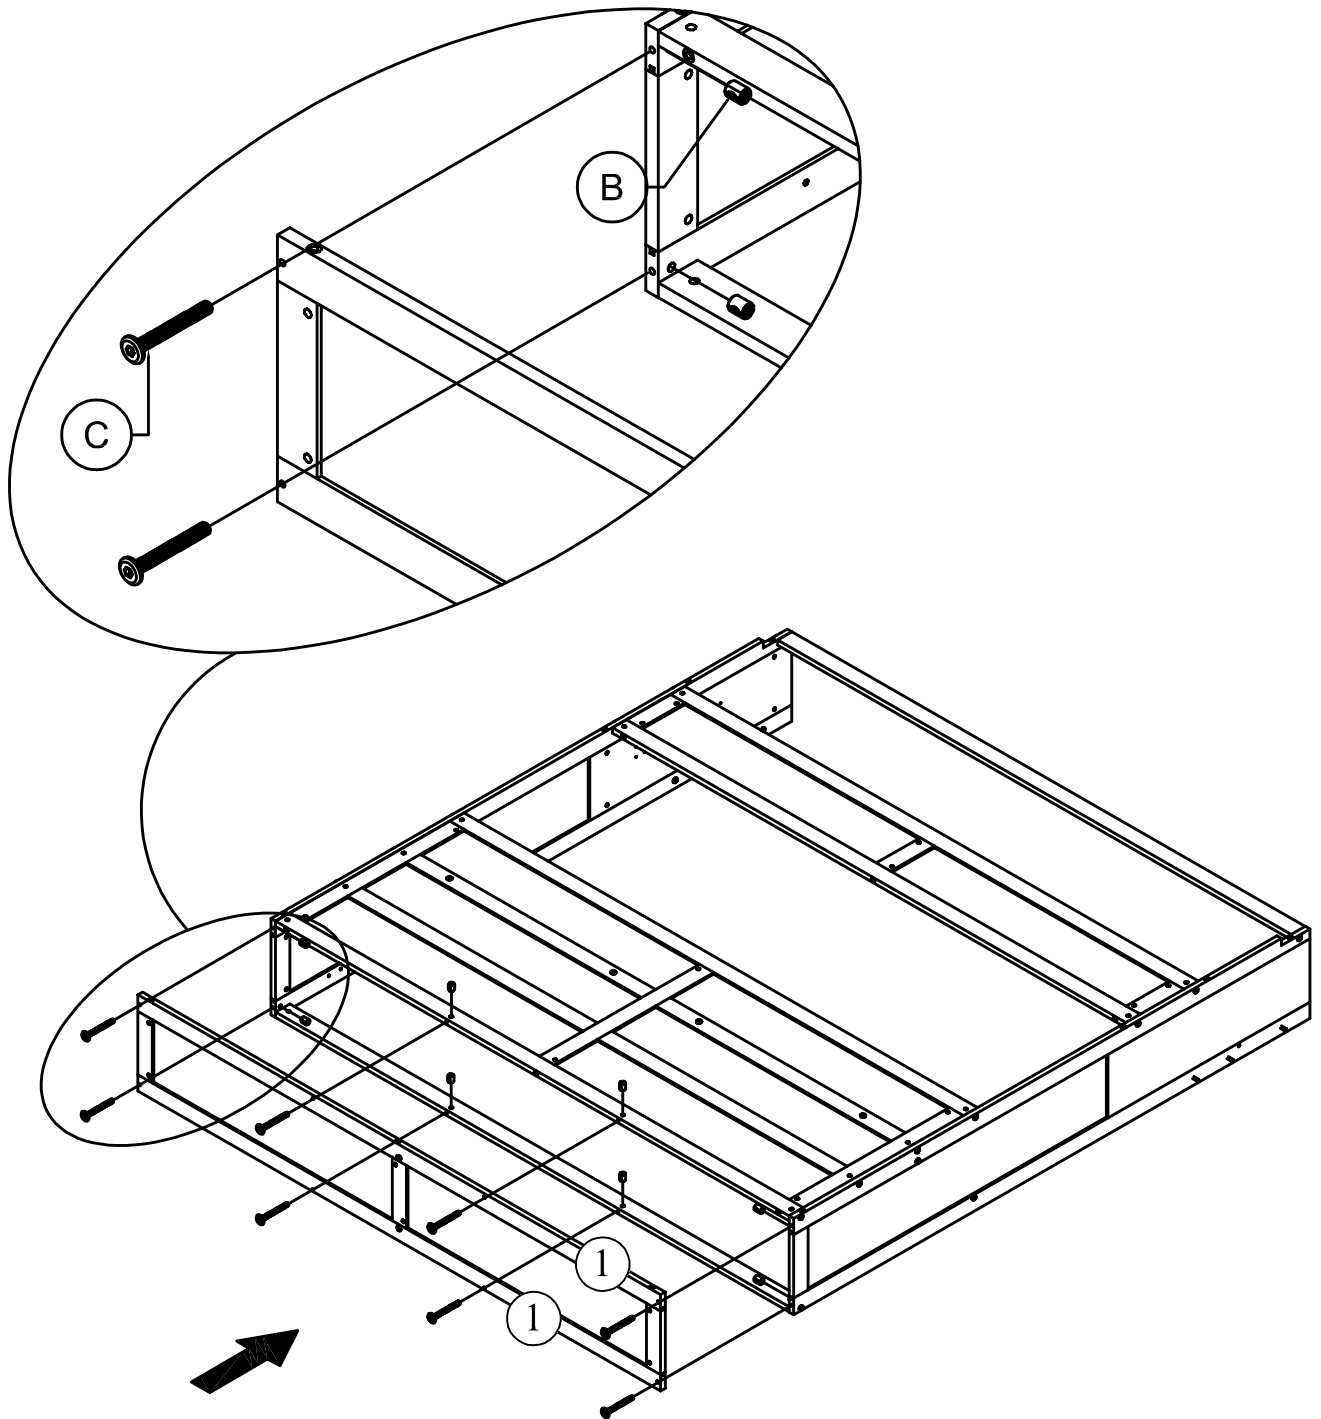


STEP 10: Following below illustration:


ÉTAPE 10: Illustration ci-dessous :

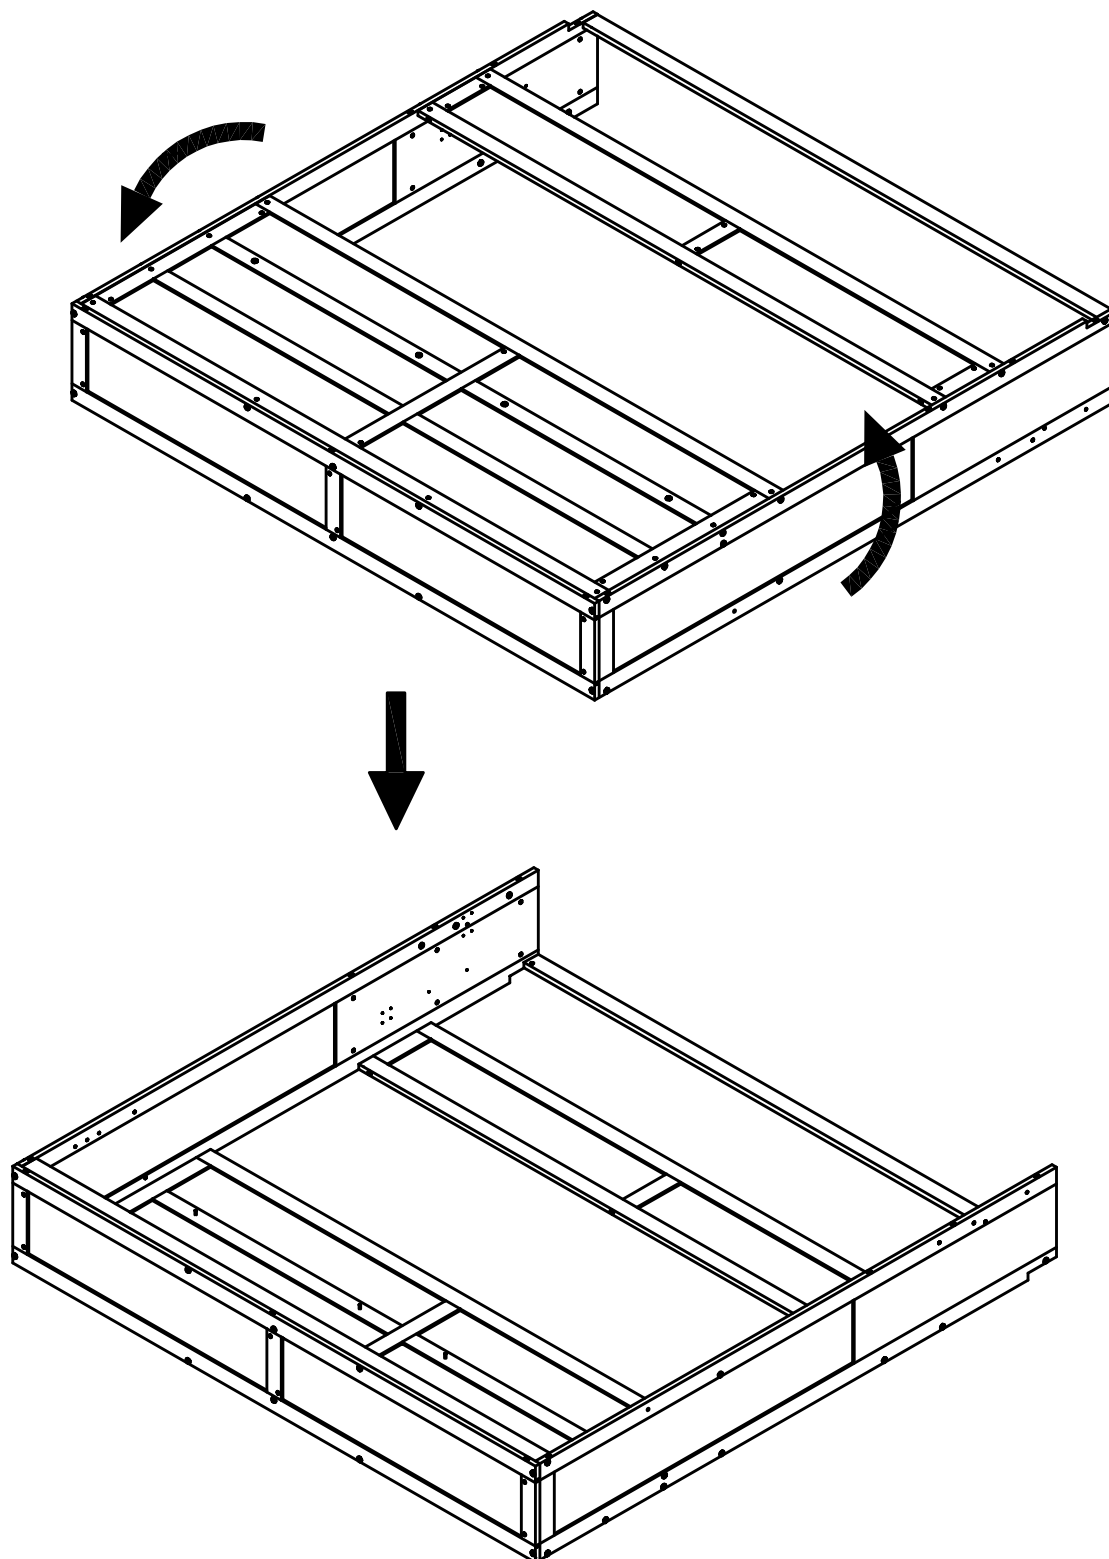

STEP 11: Following below illustration:


ÉTAPE 11: Illustration ci-dessous :


C	B
	
4pcs	4pcs

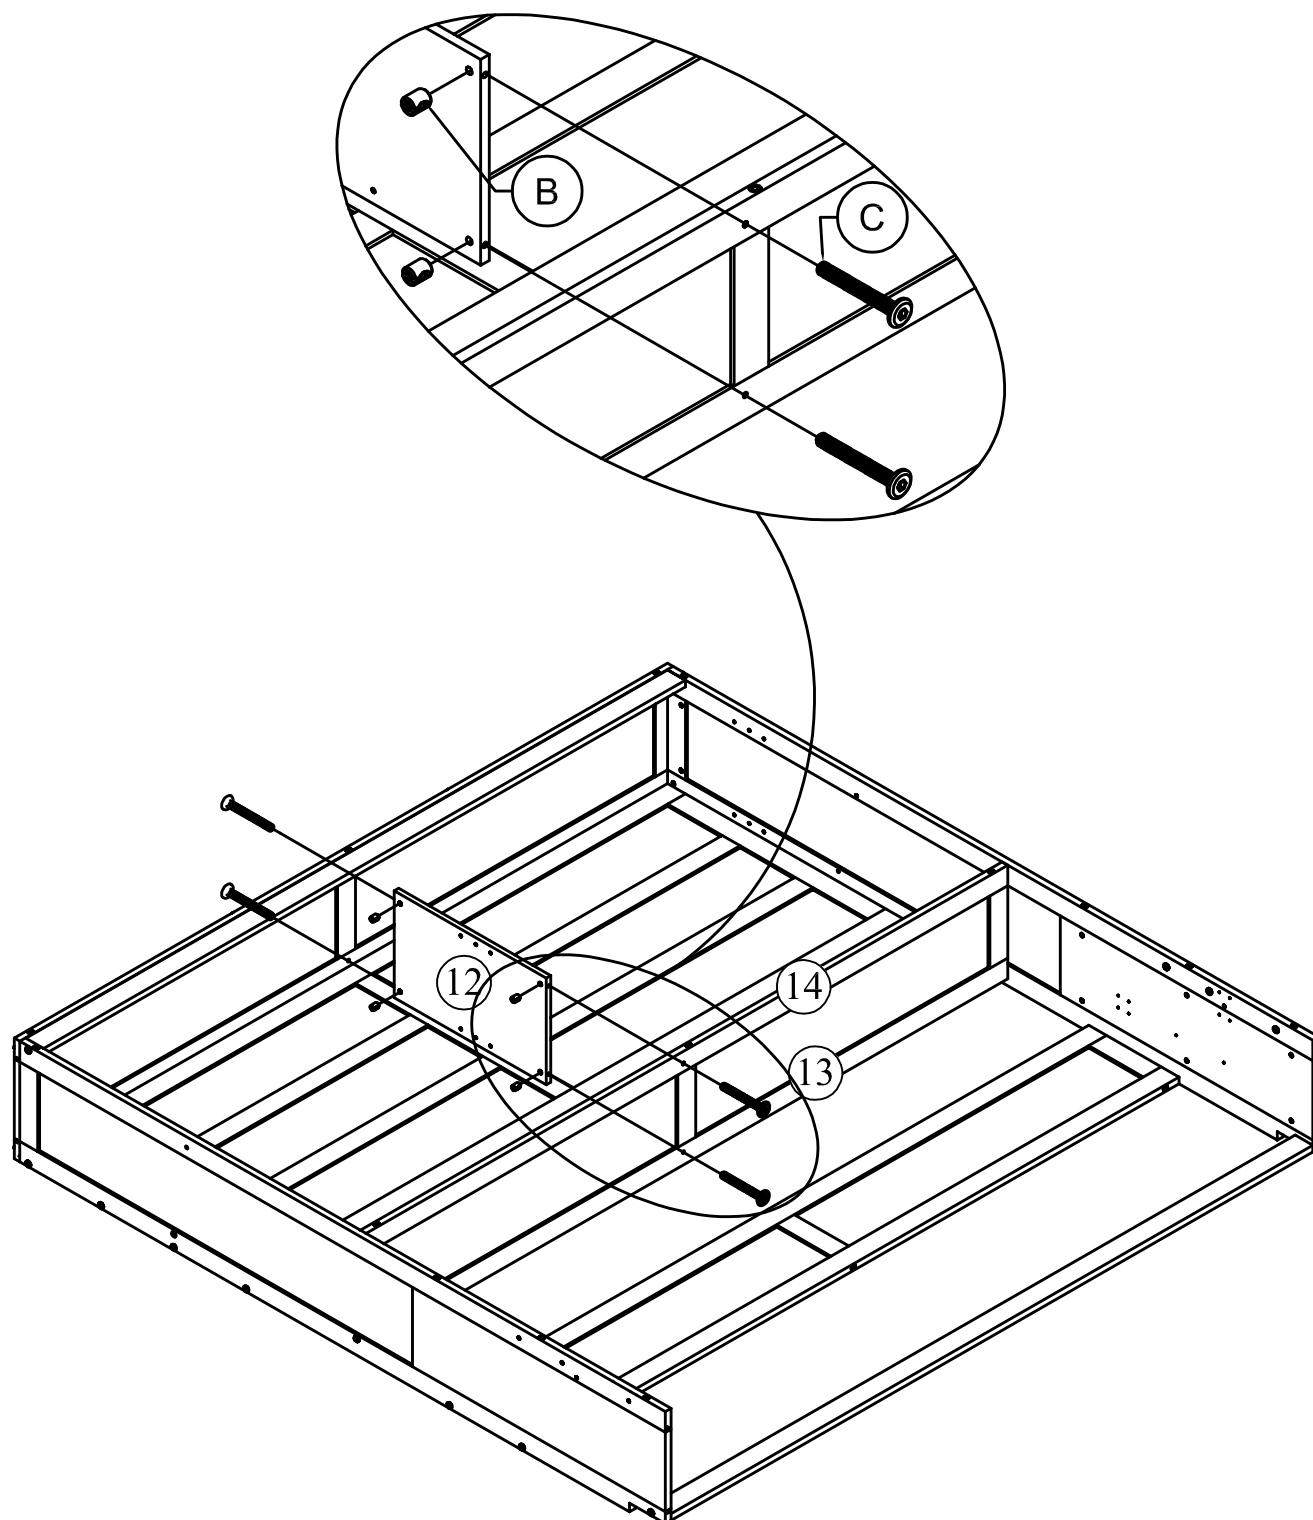

STEP 12: Following below illustration:



ÉTAPE 12: Illustration ci-dessous :

C	B
	
4pcs	4pcs

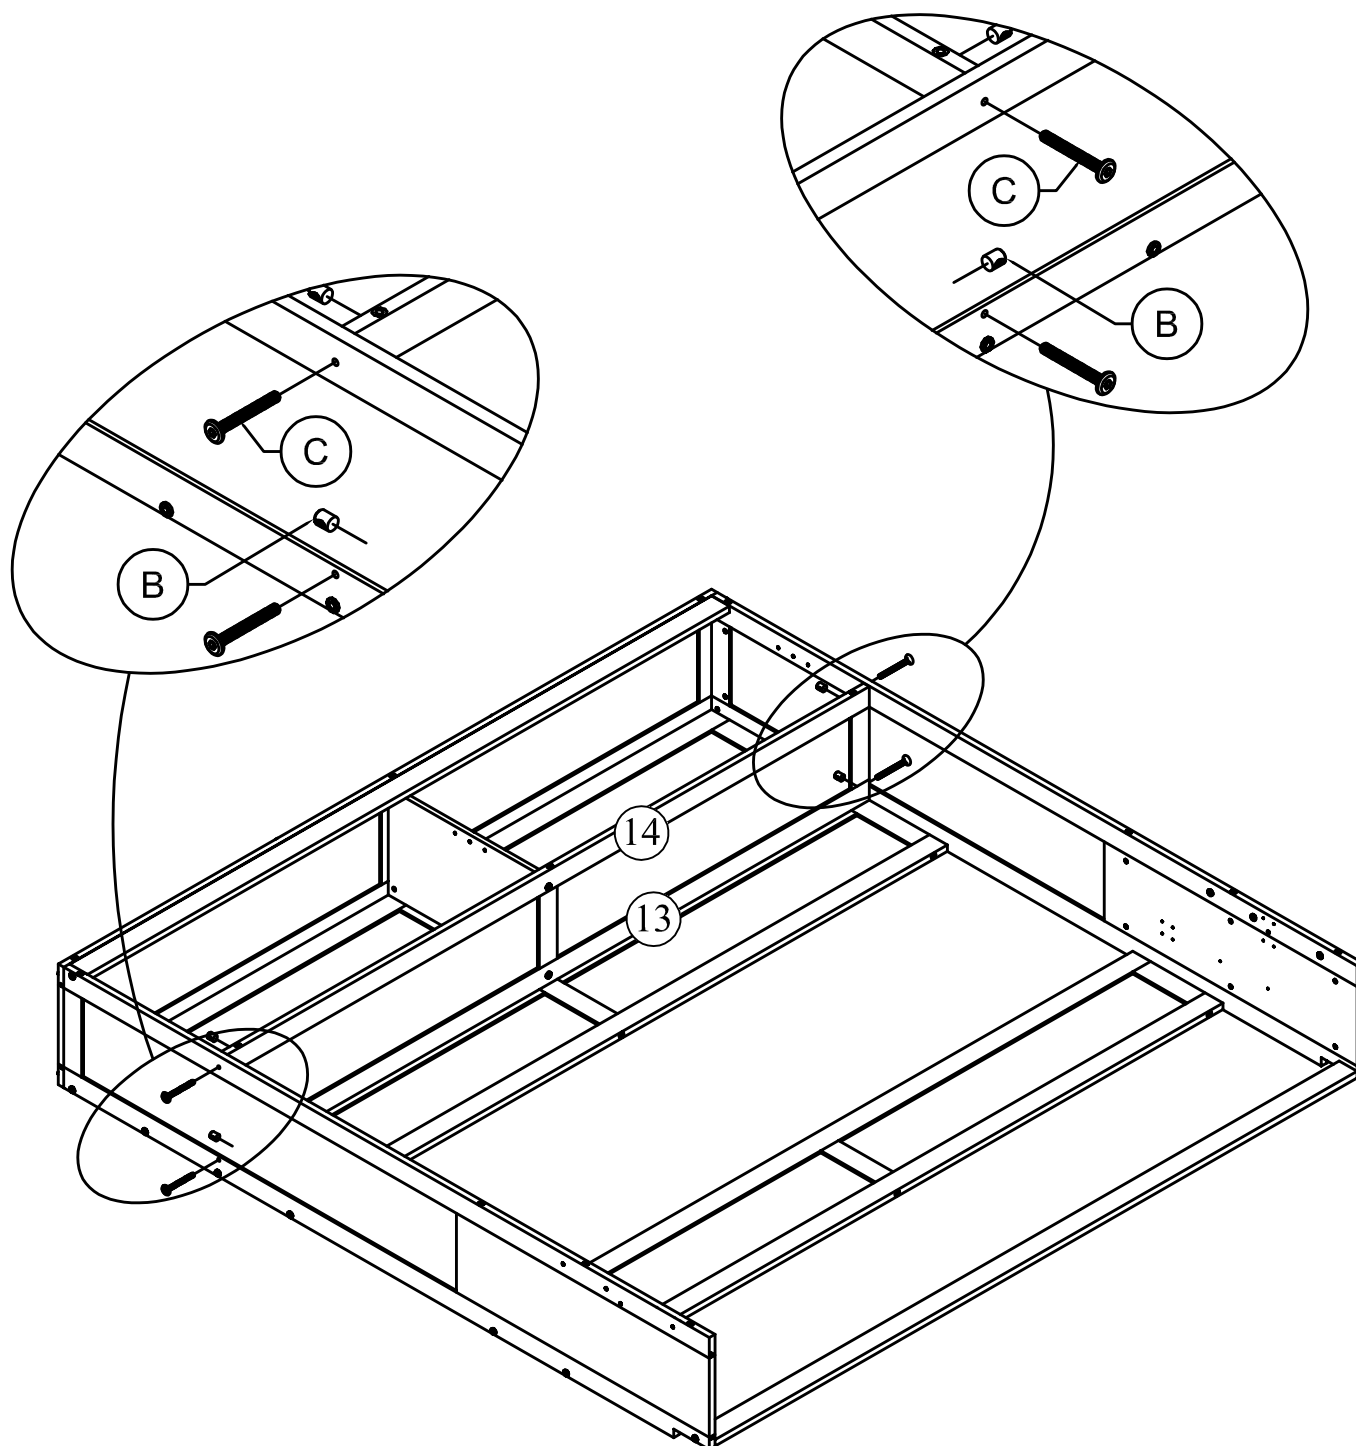

STEP 13: Following below illustration:


ÉTAPE 13: Illustration ci-dessous :

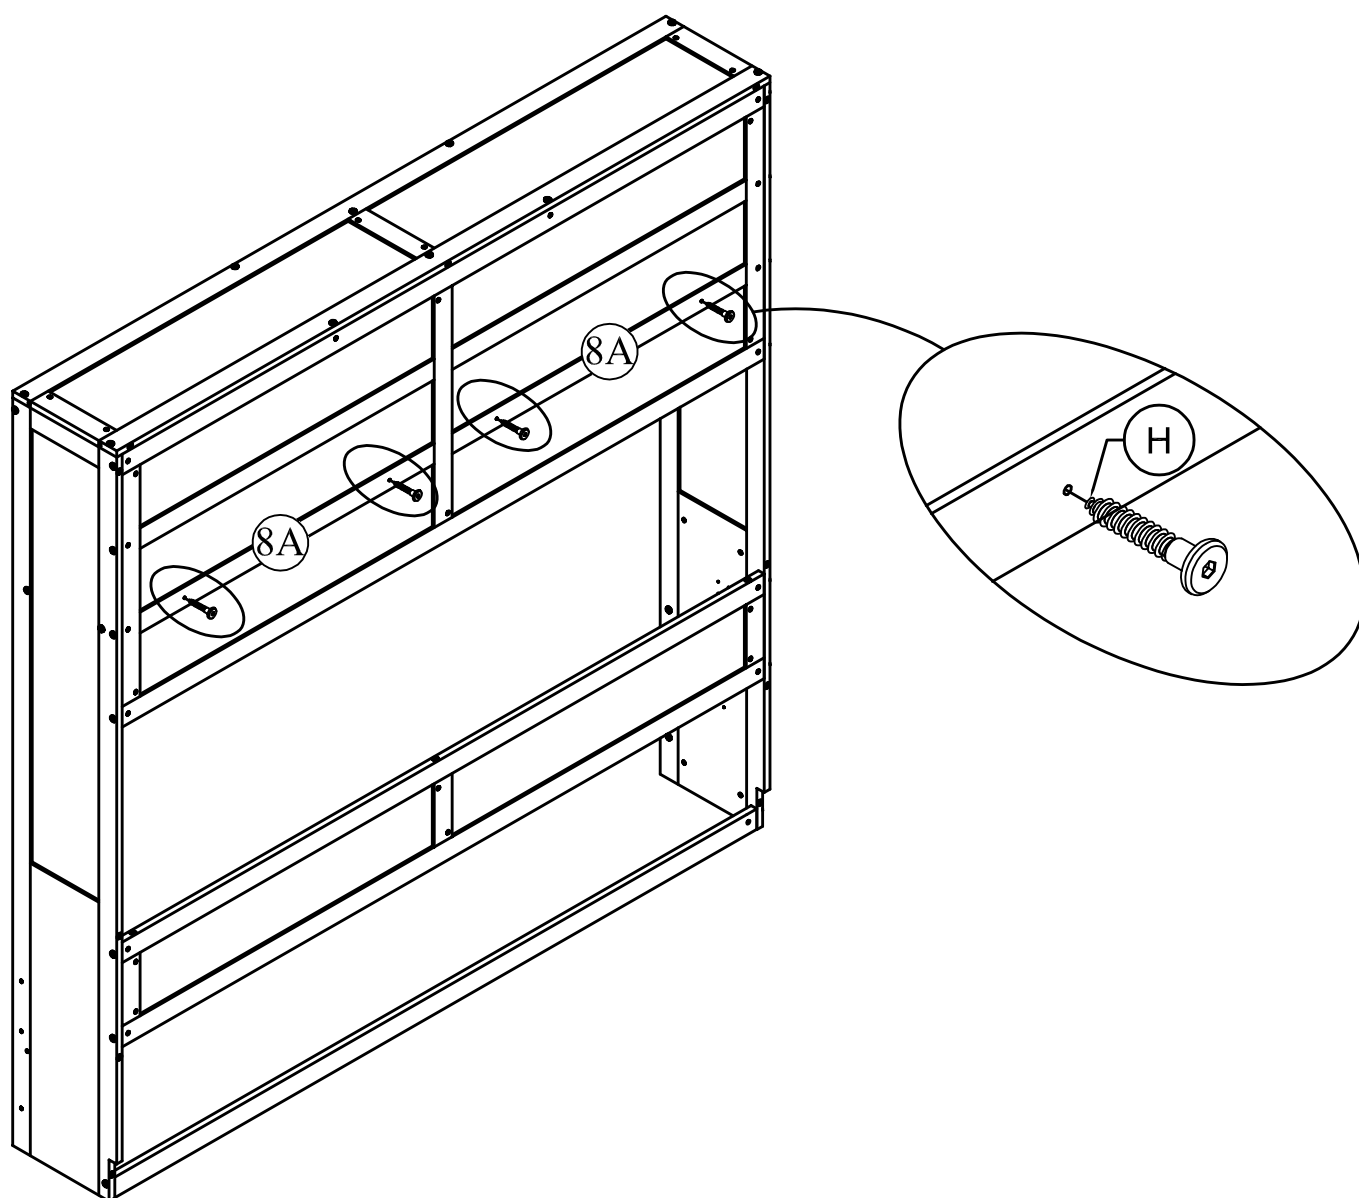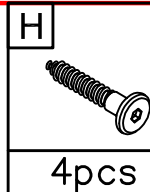

STEP 14: Following below illustration:

ÉTAPE 14: Illustration ci-dessous :


G		S		I	
	20pcs		1pcs		1pcs

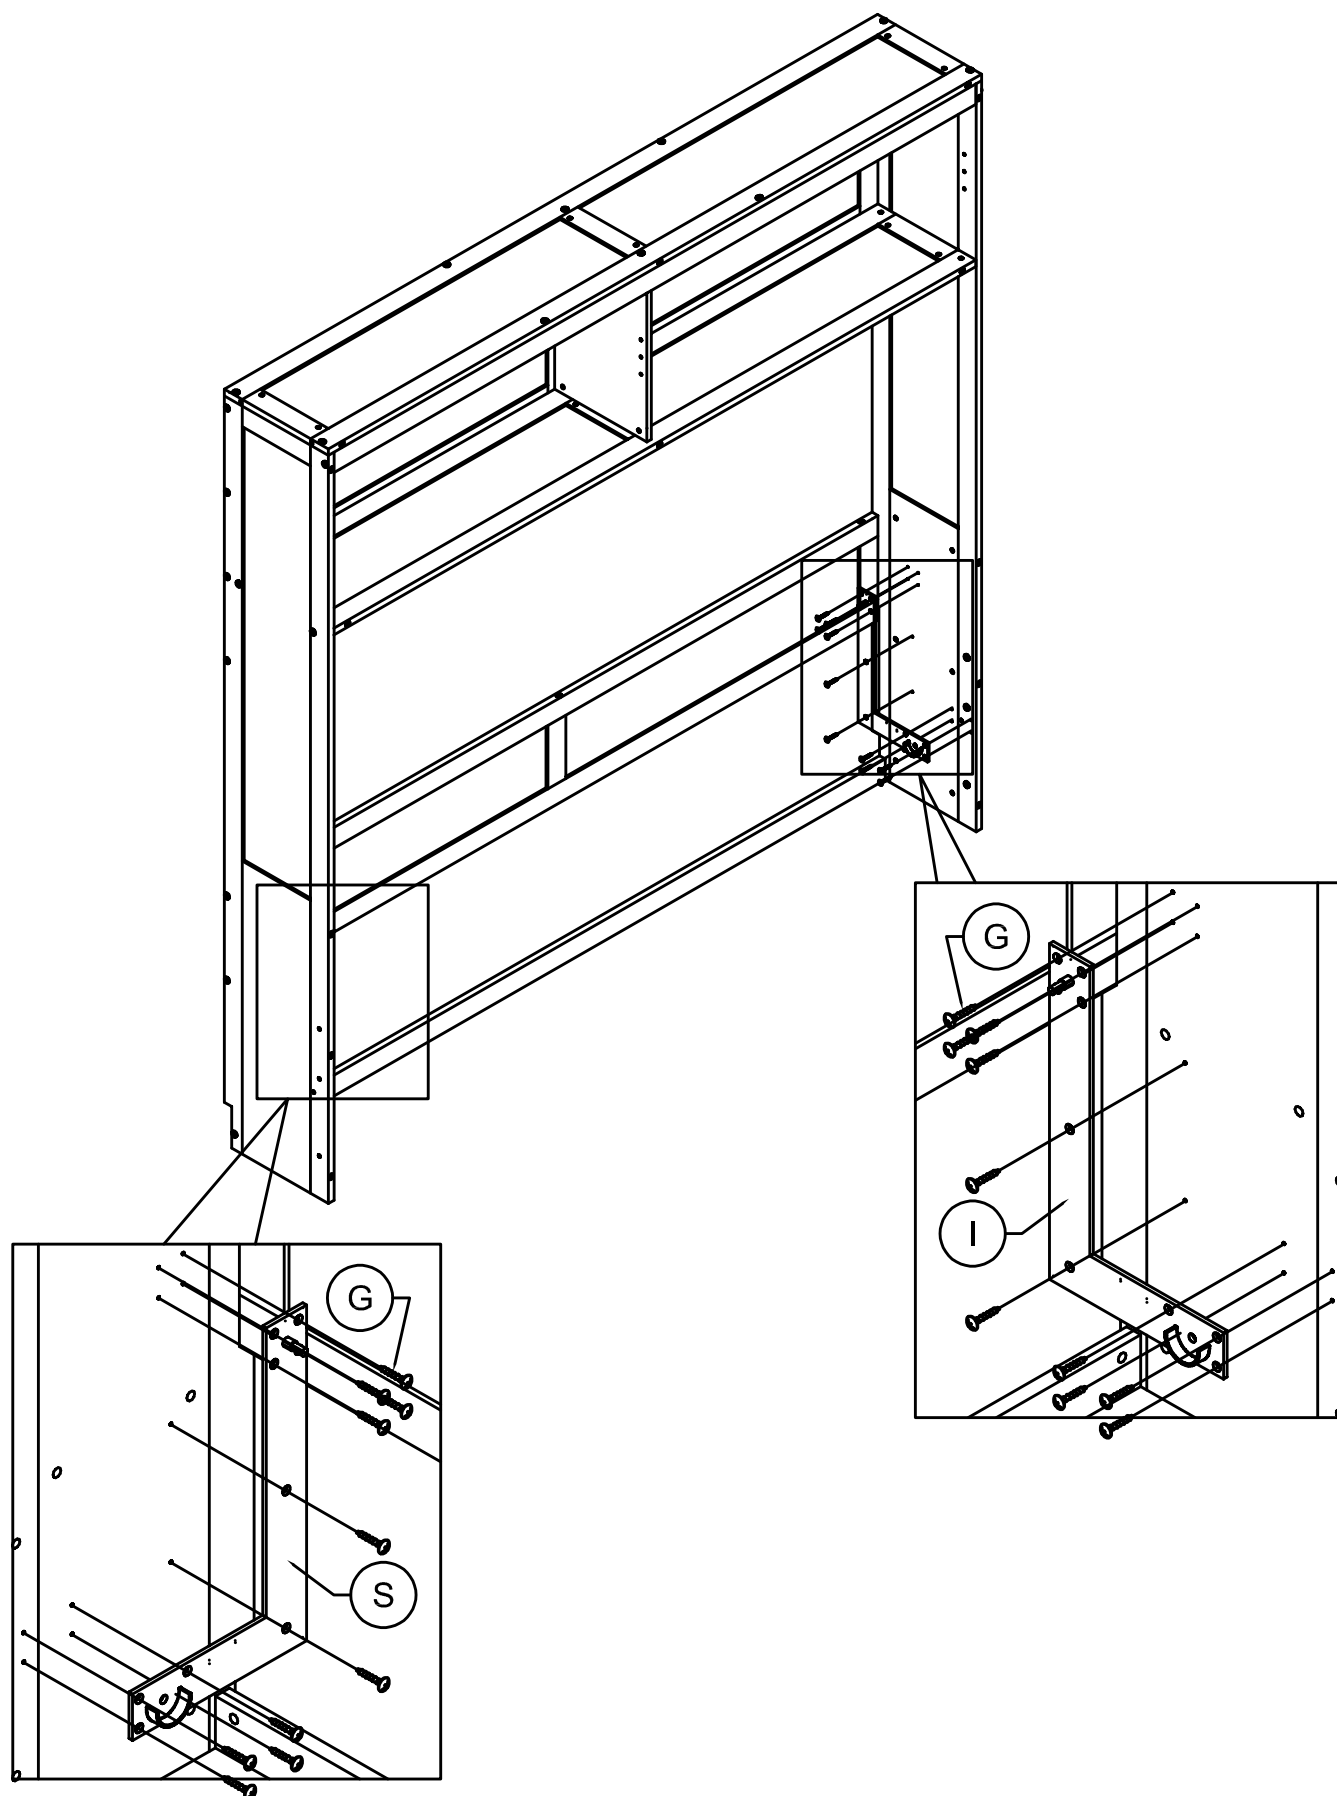


STEP 15: Following below illustration:

ÉTAPE 15: Illustration ci-dessous :

B1	G
	
3pcs	6pcs

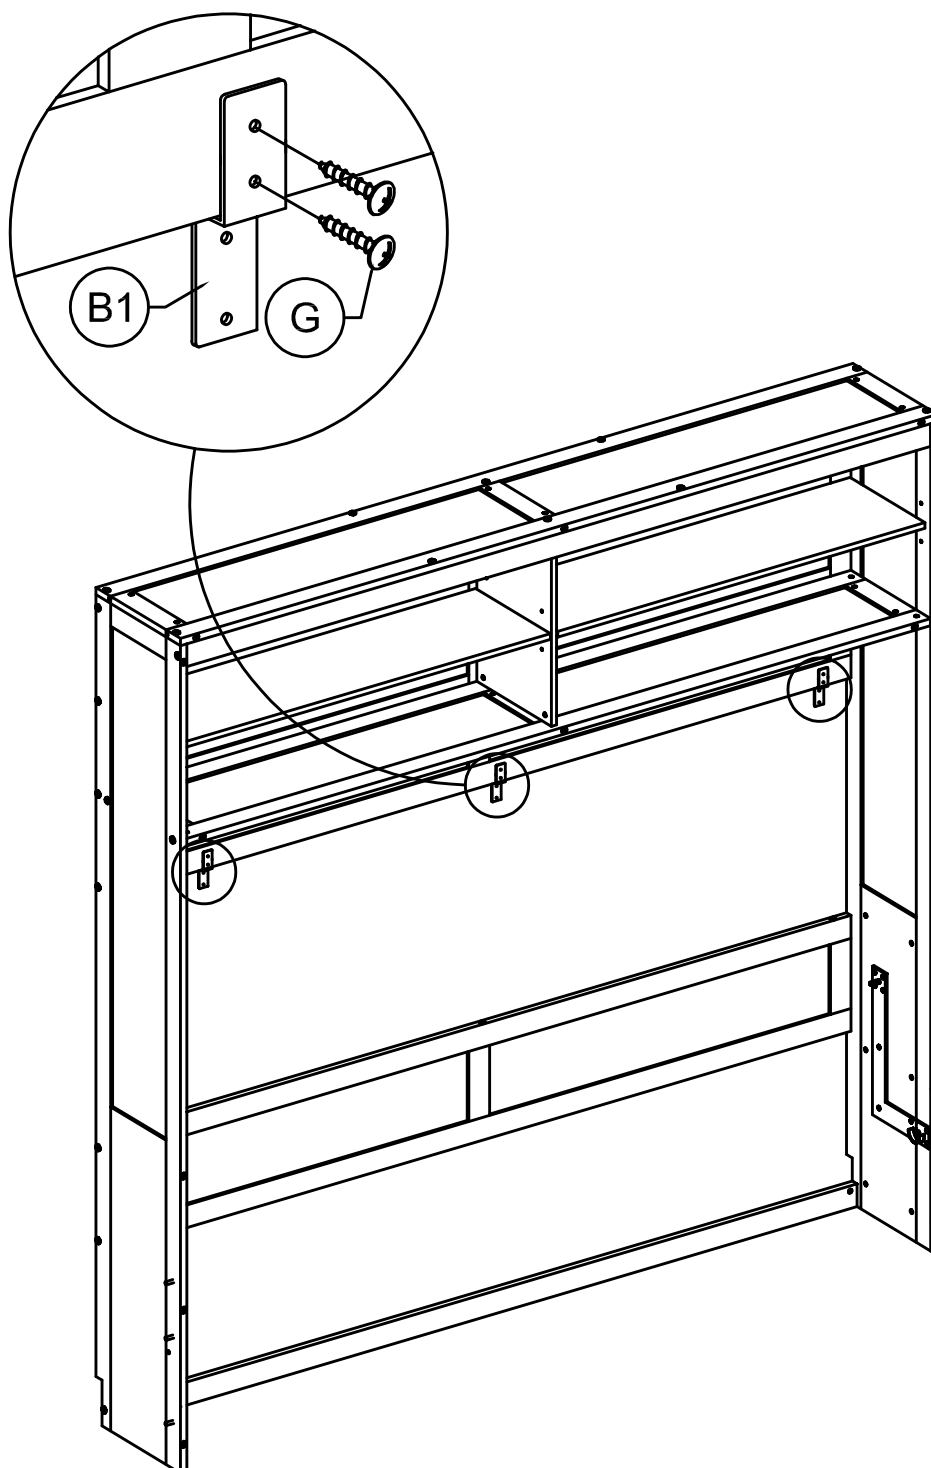


OPTION A: WOOD STUD WALL

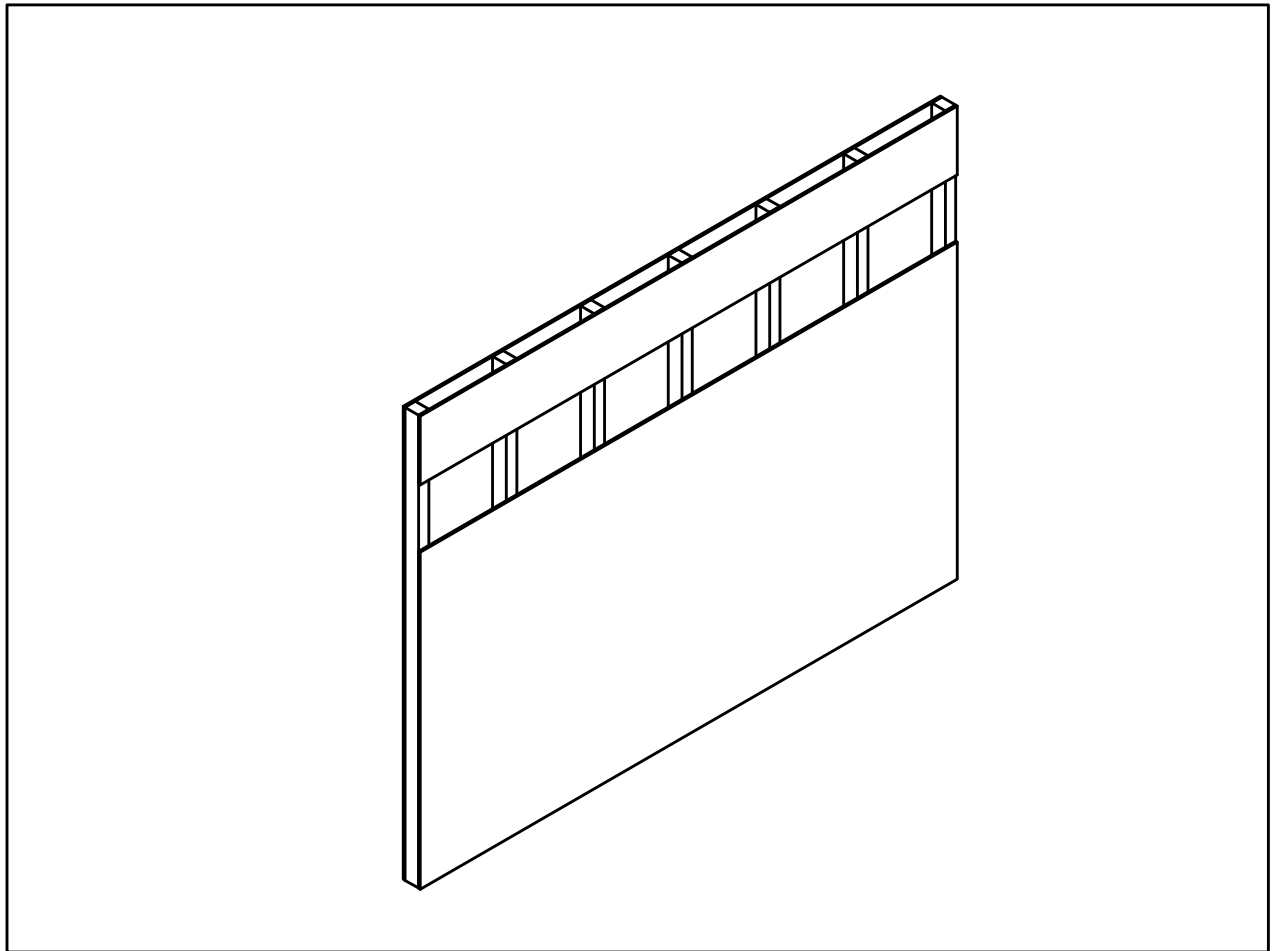


1- Determine the position of the bed in the room.

1- Déterminez la position du lit dans la chambre.

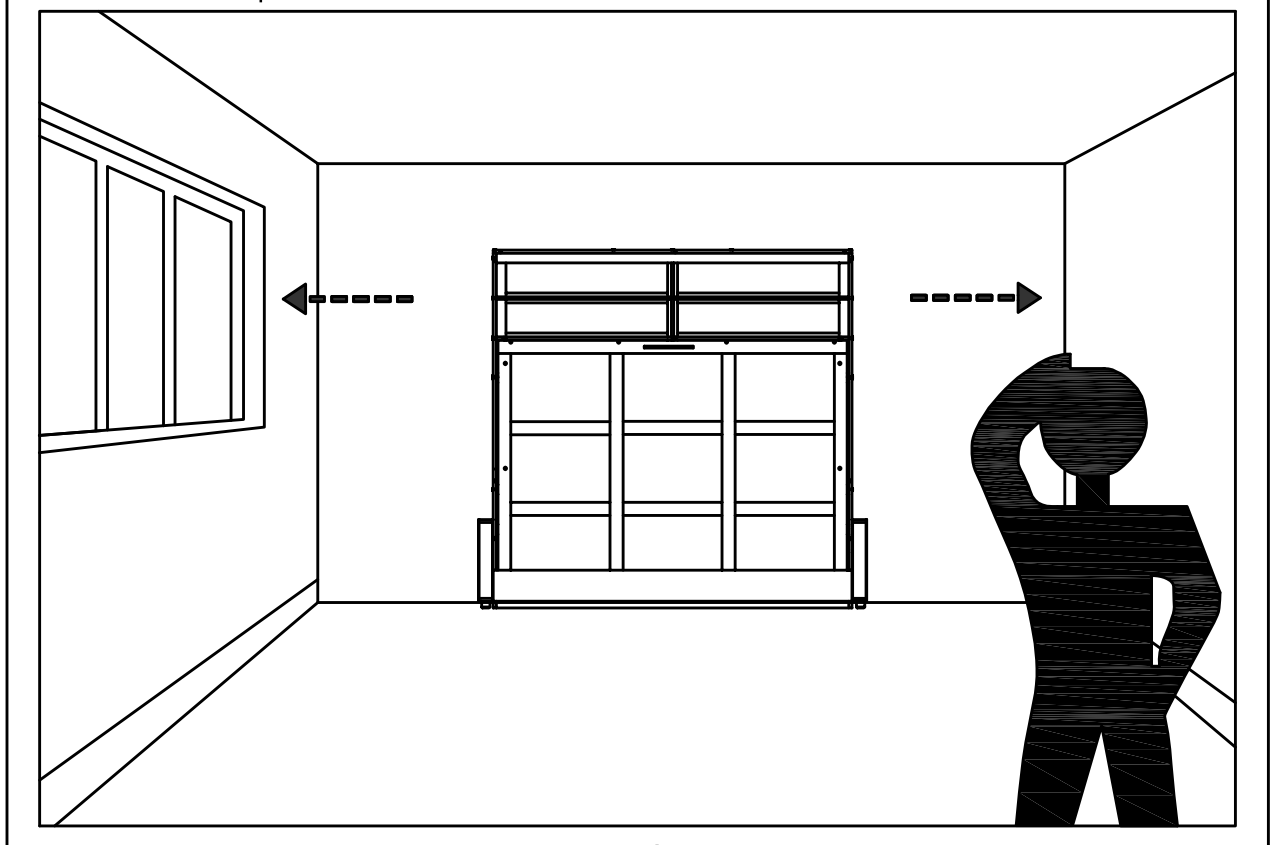


2- Put the bed back in its place. Please keep it vertical and horizontal.

2- Remettez le lit à sa place. Veuillez le garder vertical et horizontal.

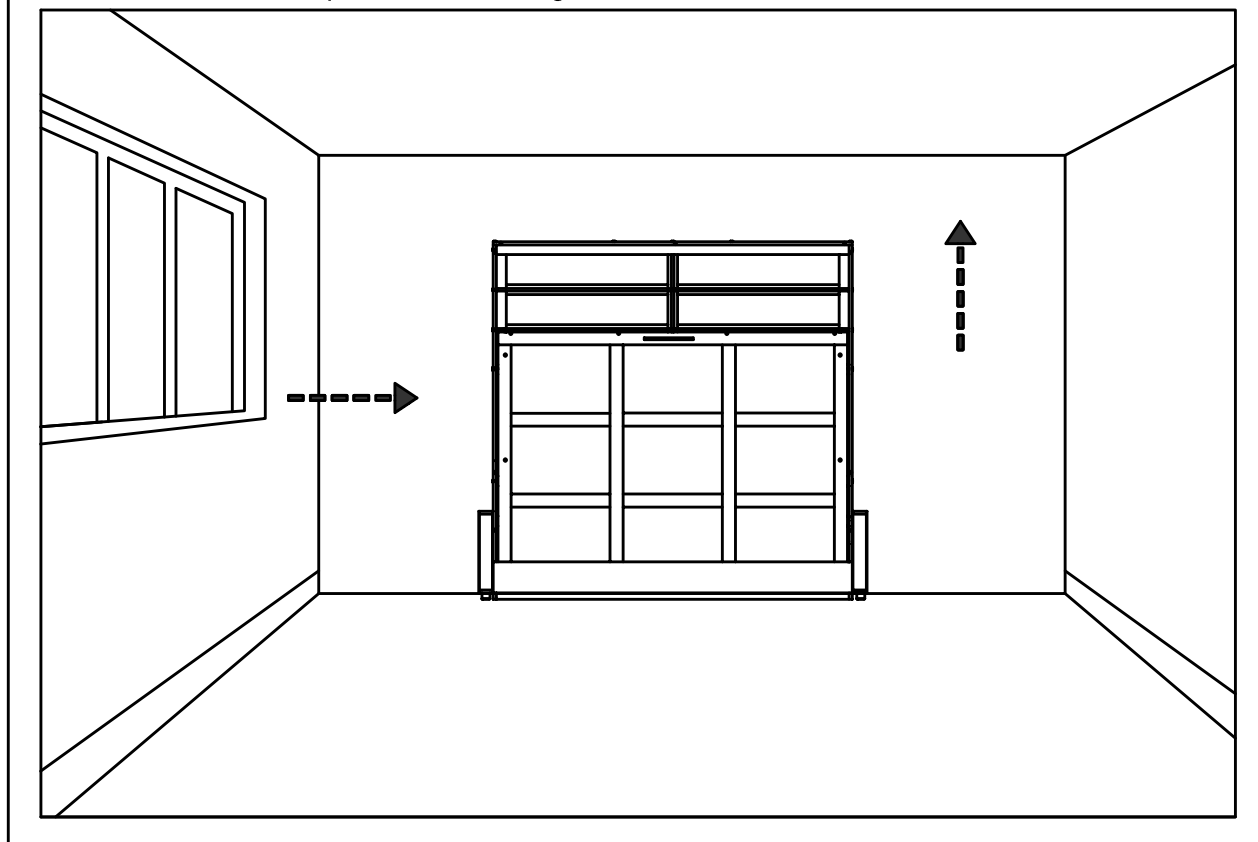


3- Mark the points drill holes according to actual products.


3- Marquez les points de perçage en fonction des produits réels.

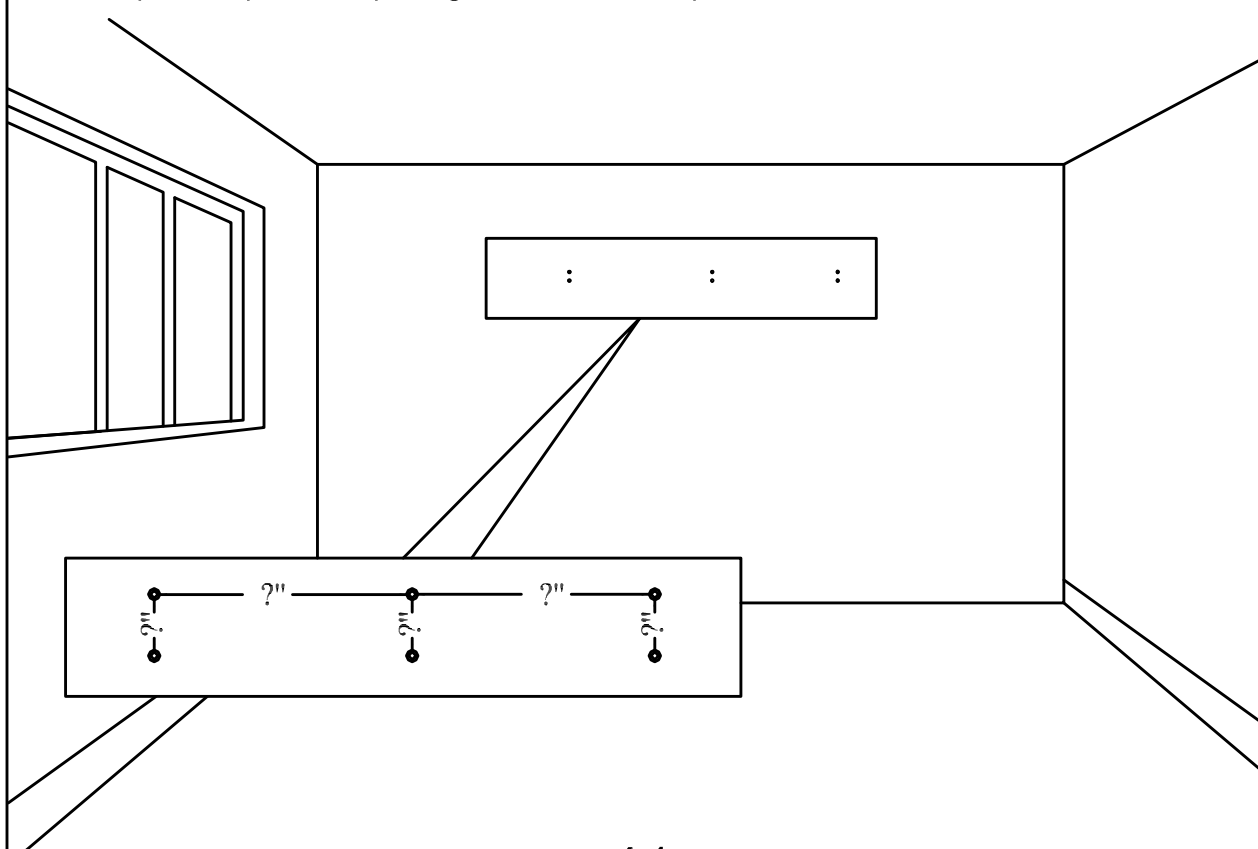

A1A	A1B
	
6pcs	6pcs

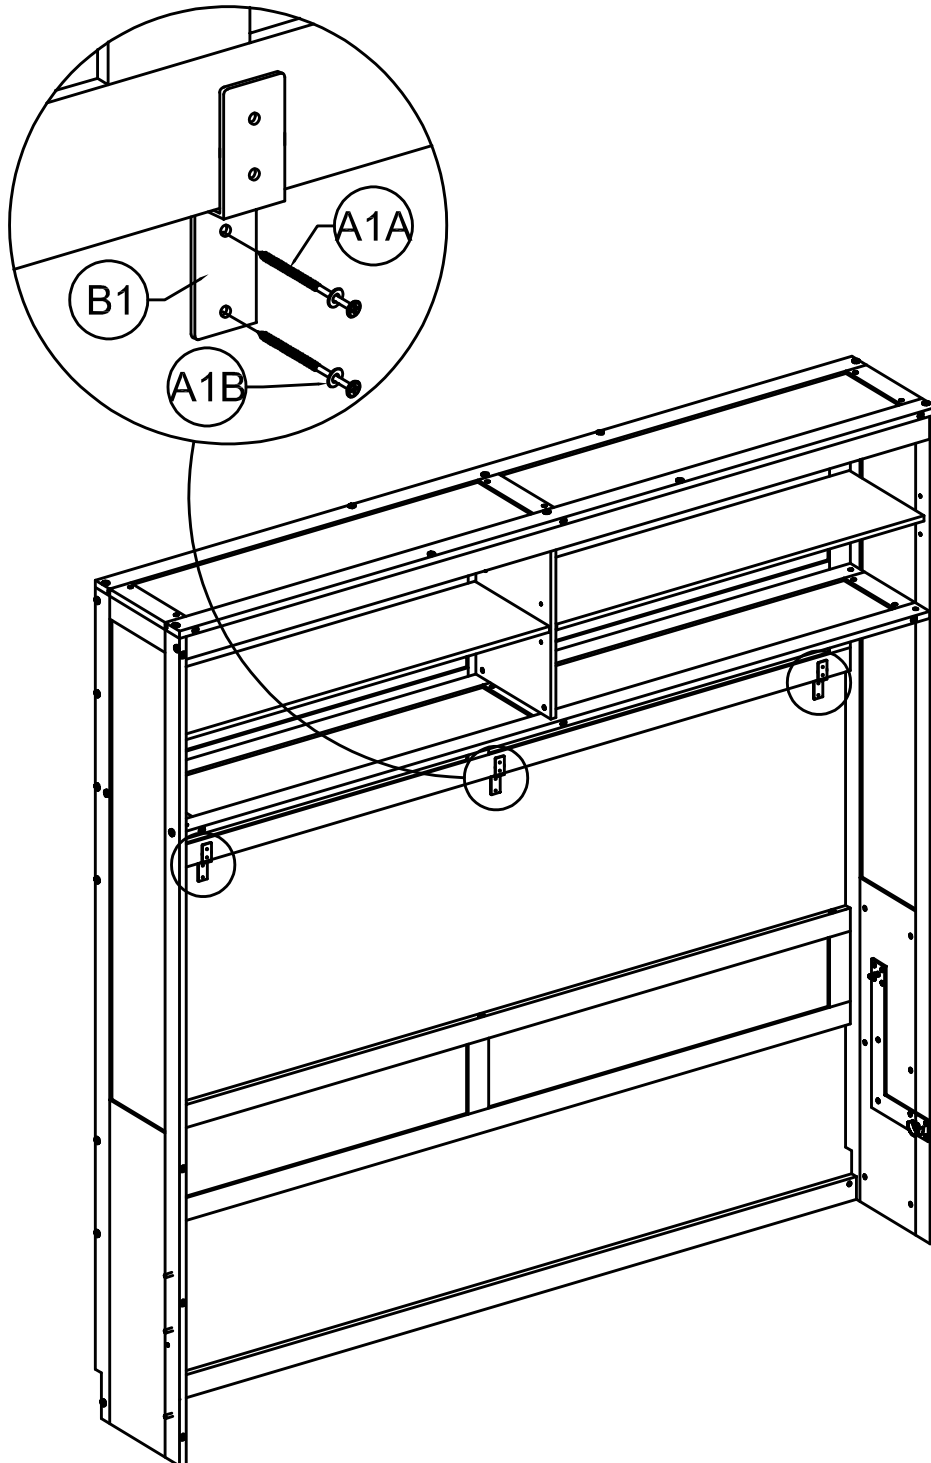


OPTION B: MASONRY/CONCRETE WALL

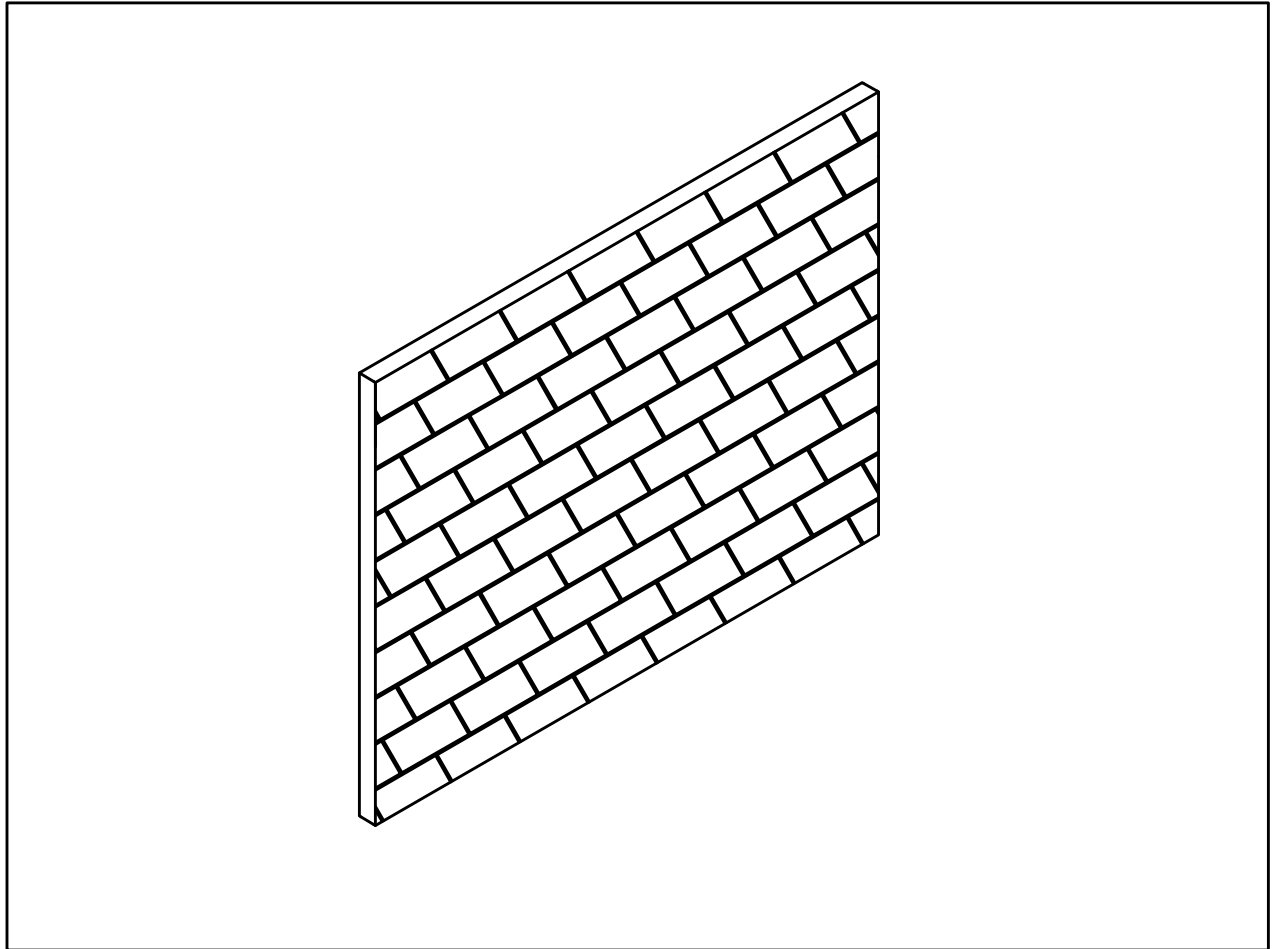


1- Determine the position of the bed in the room.

1- Déterminez la position du lit dans la chambre.

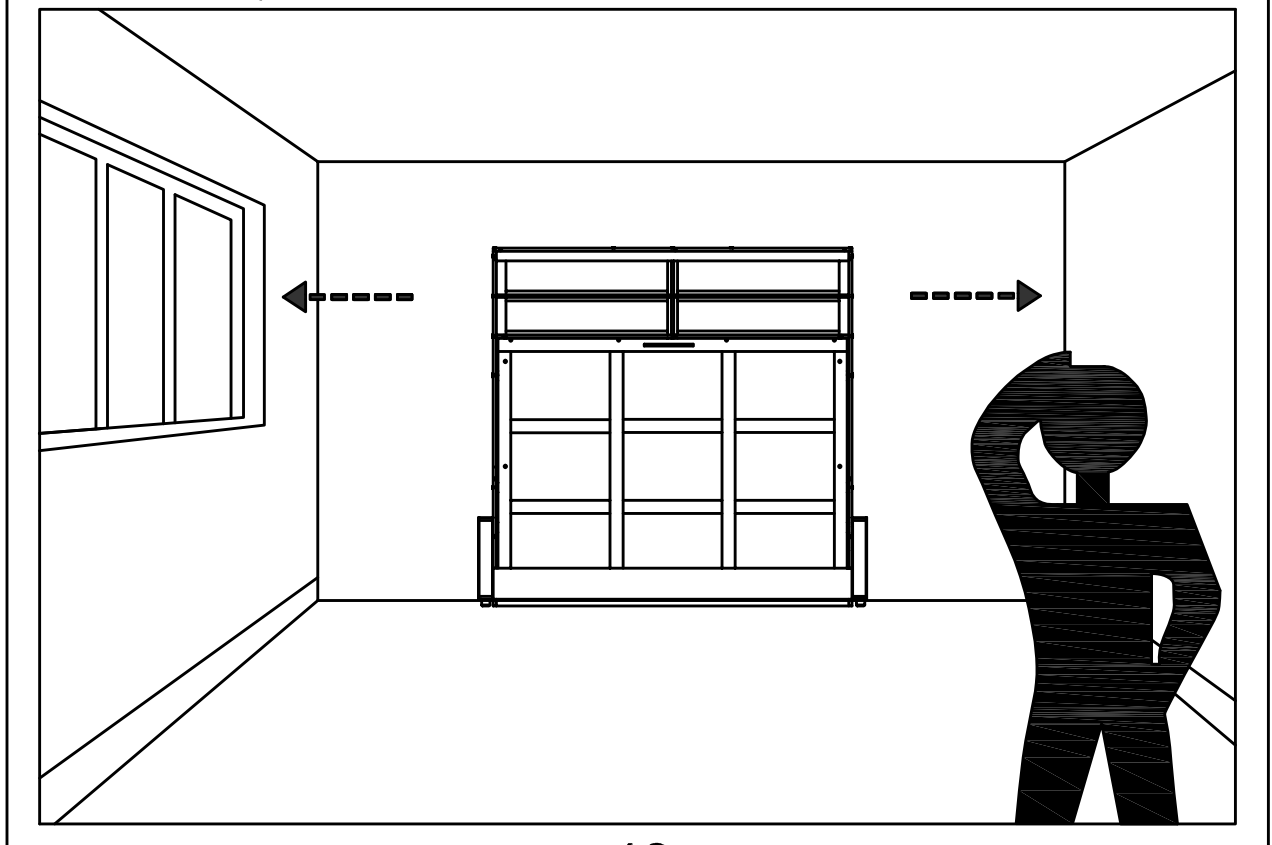


2- Put the bed back in its place. Please keep it vertical and horizontal.

2- Remettez le lit à sa place. Veuillez le garder vertical et horizontal.

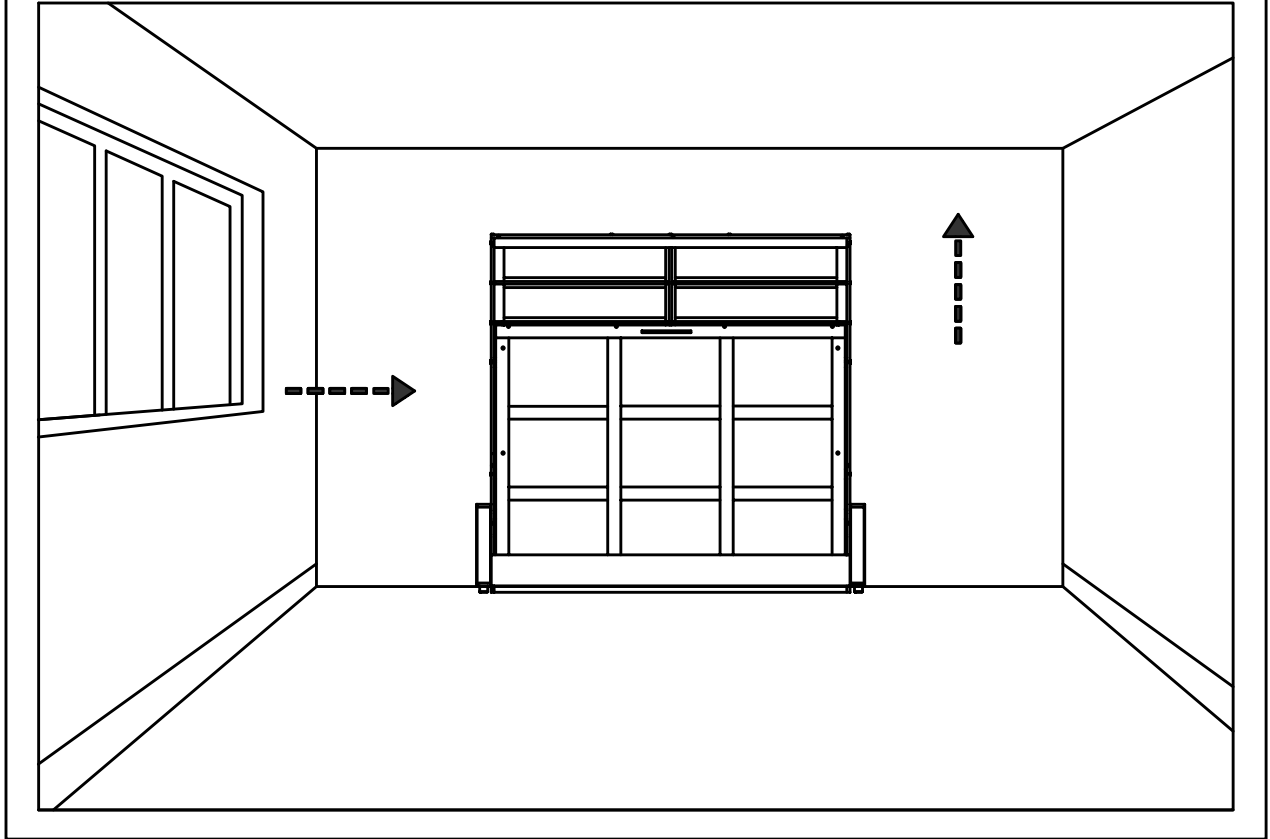

3- Mark the points drill holes according to actual products.


3- Marquez les points de perçage en fonction des produits réels.

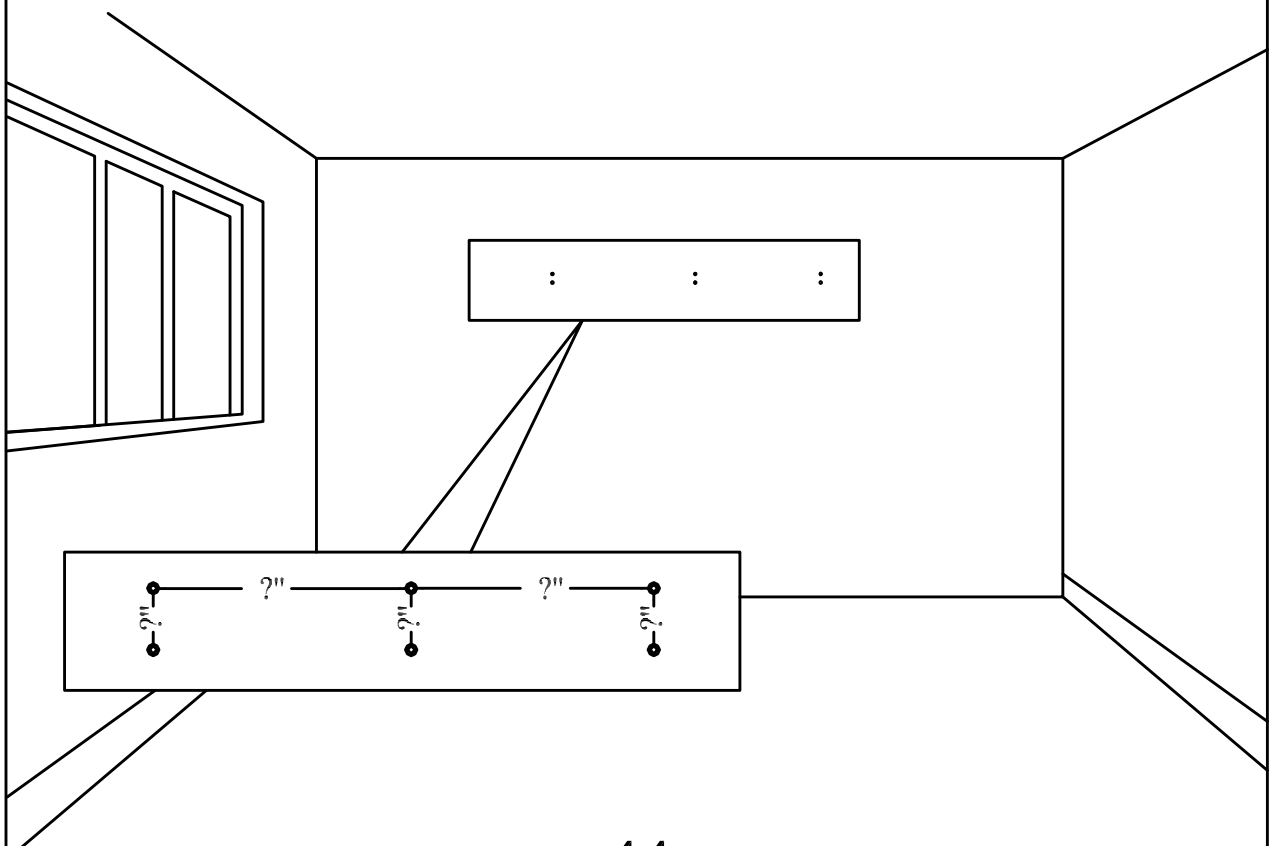


4- Drill the positions marked in STEP 3 and secure the plug.

4- Percez les positions marquées à ÉTAPE 3 et fixez la cheville.

A2A




6pcs

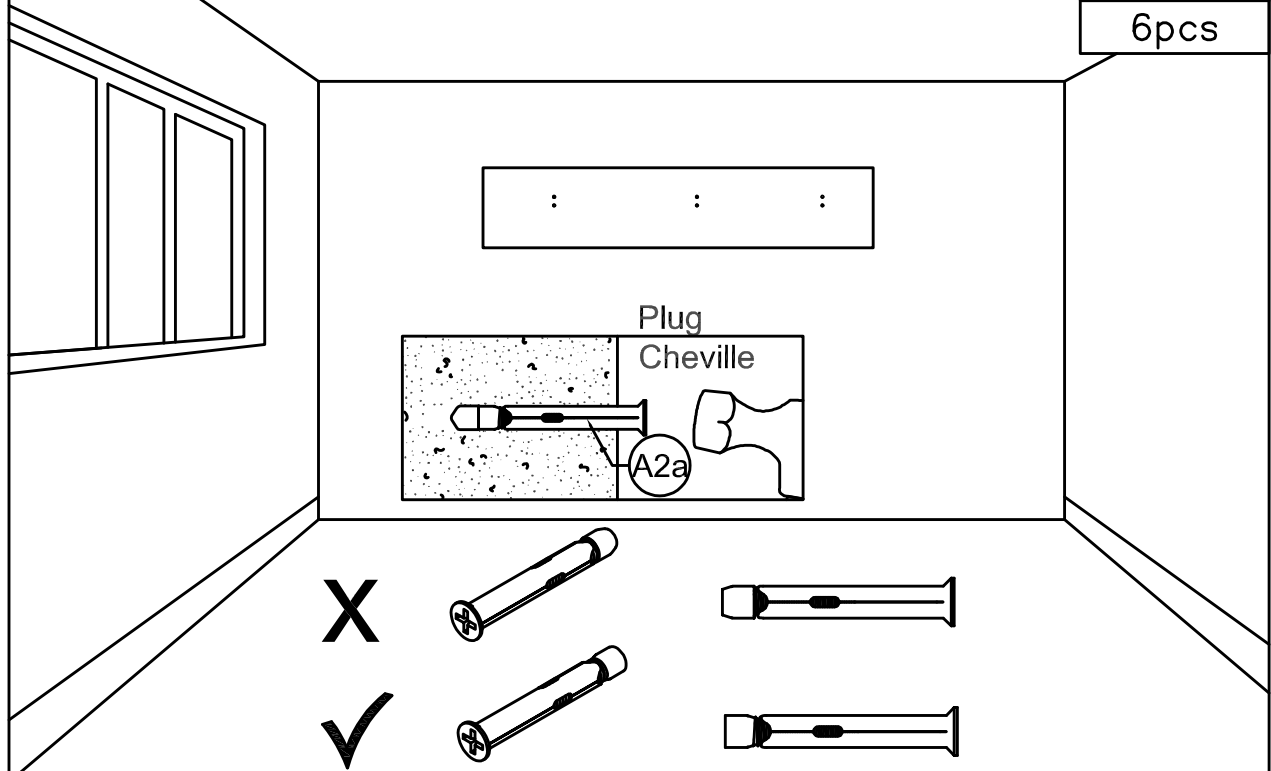

5- Remove the screw component from the anchor and reuse.



5- Etirez la vis de l'ancrage et réutilisez-la.

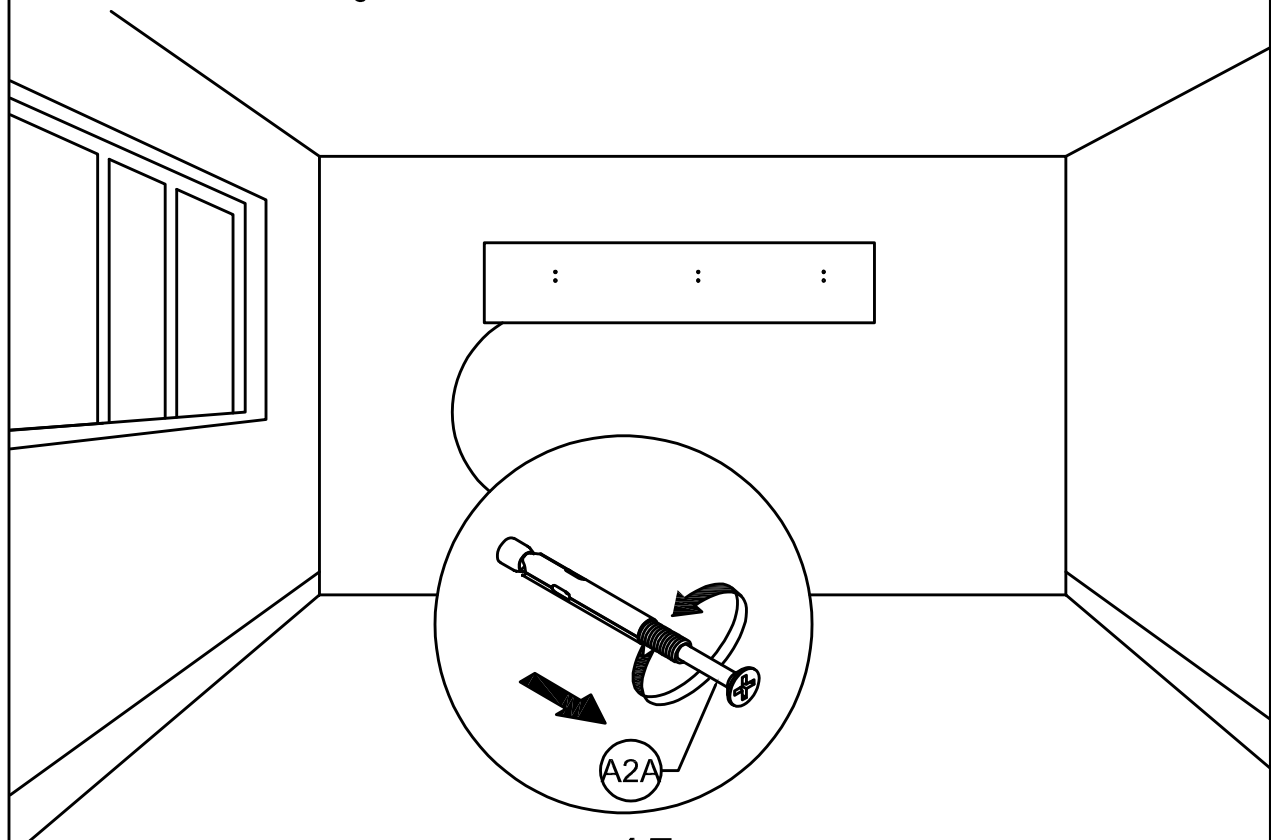

A2B





6pcs

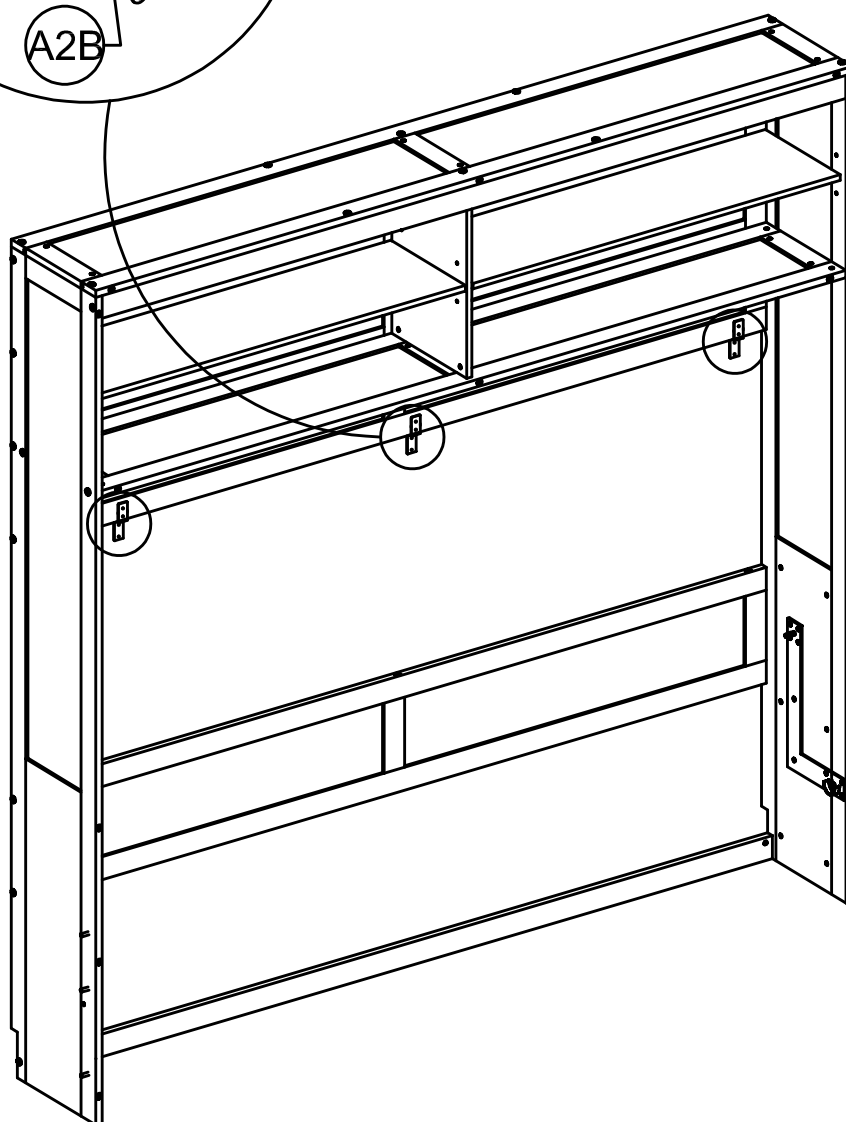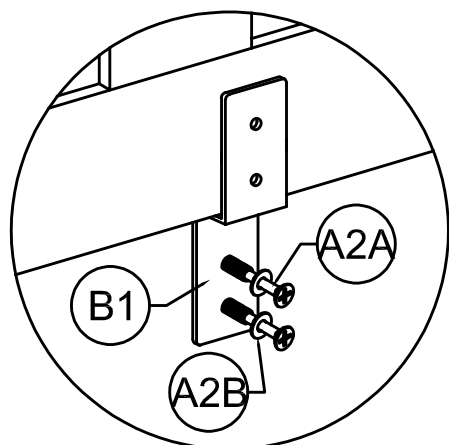

STEP 16: Following below illustration:

ÉTAPE 16: Illustration ci-dessous :


Q	A	B
		
6pcs	4pcs	4pcs

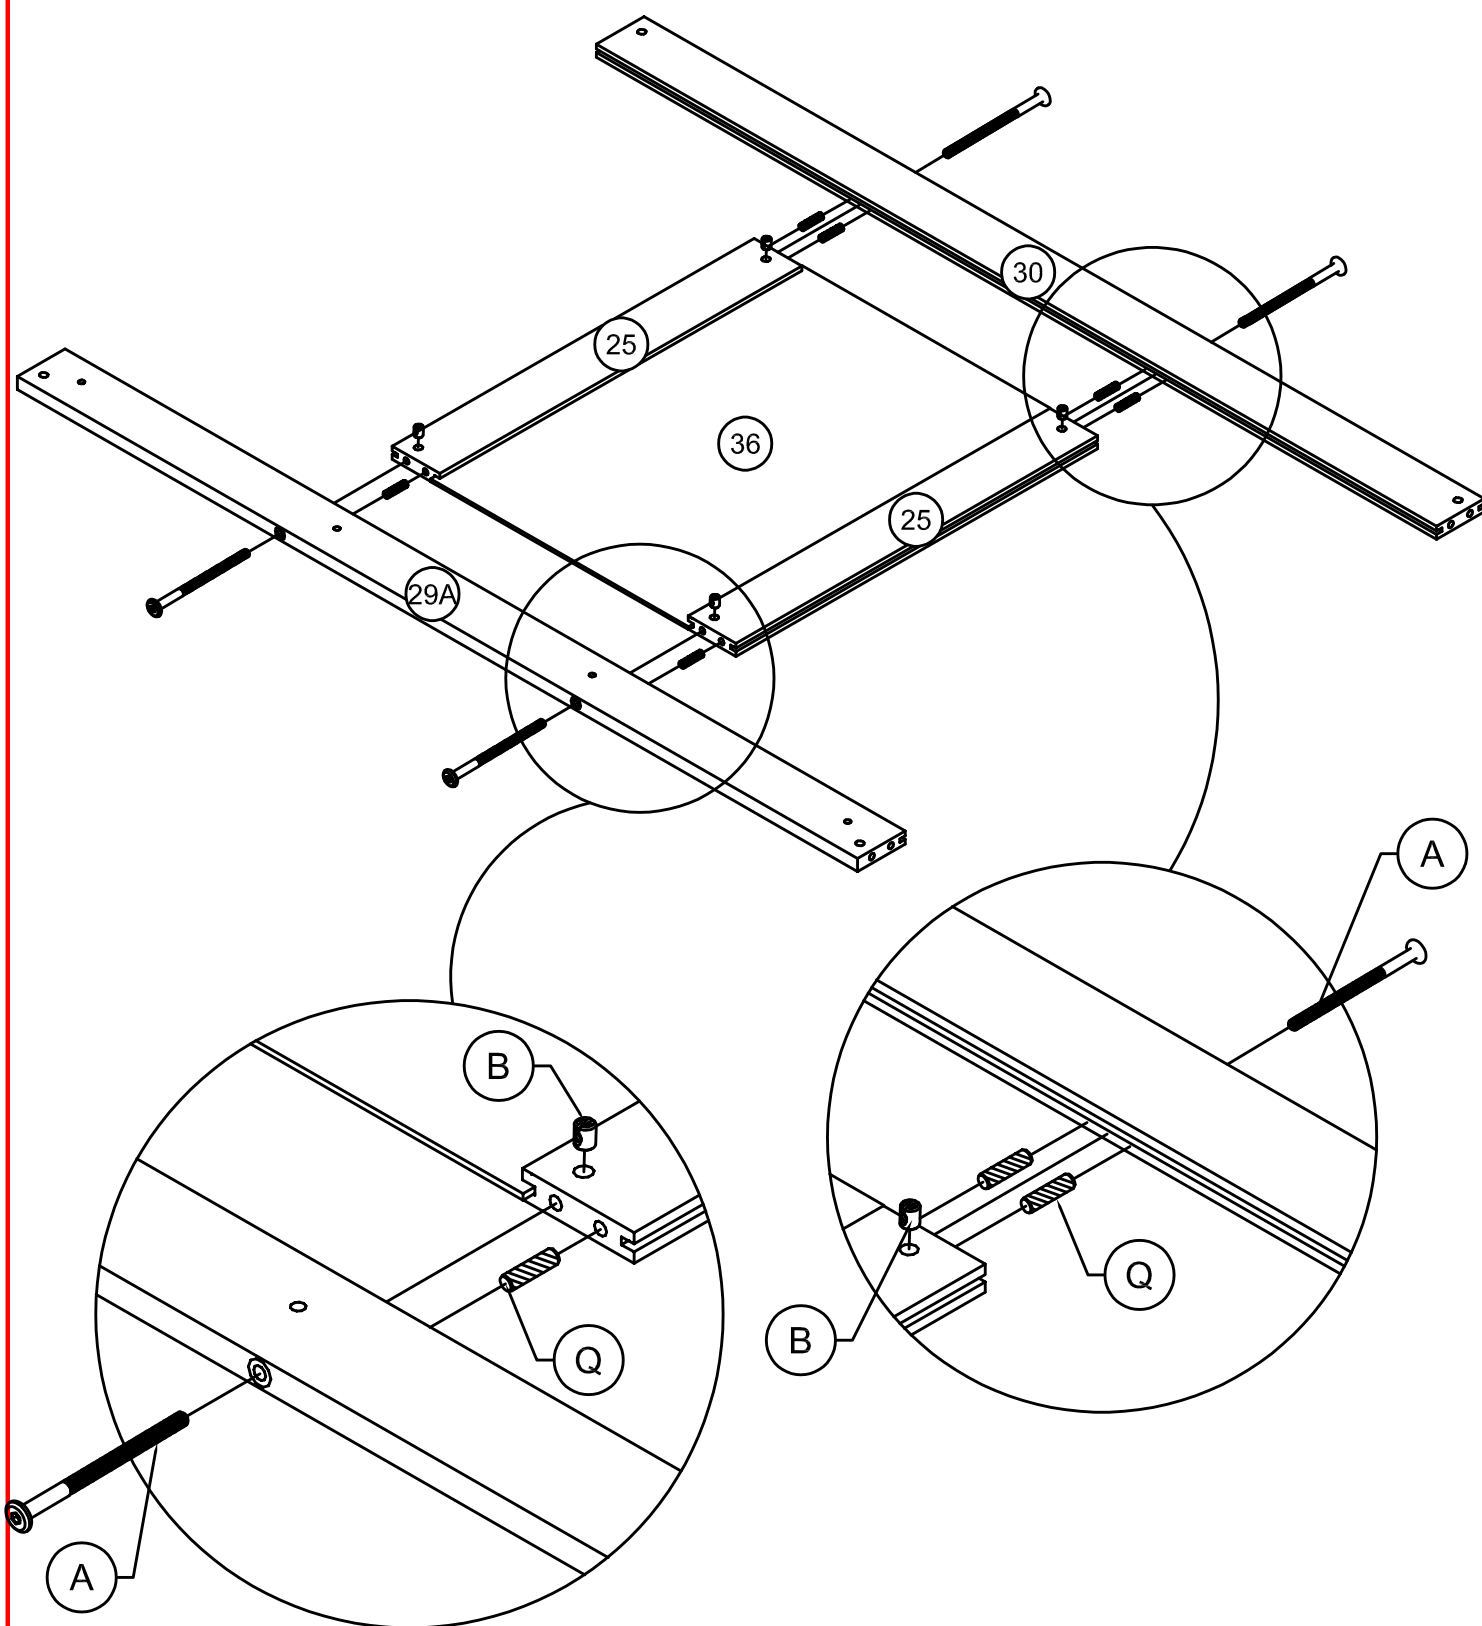

STEP 17: Following below illustration:



ÉTAPE 17: Illustration ci-dessous :

Q	A	B
		
6pcs	4pcs	4pcs

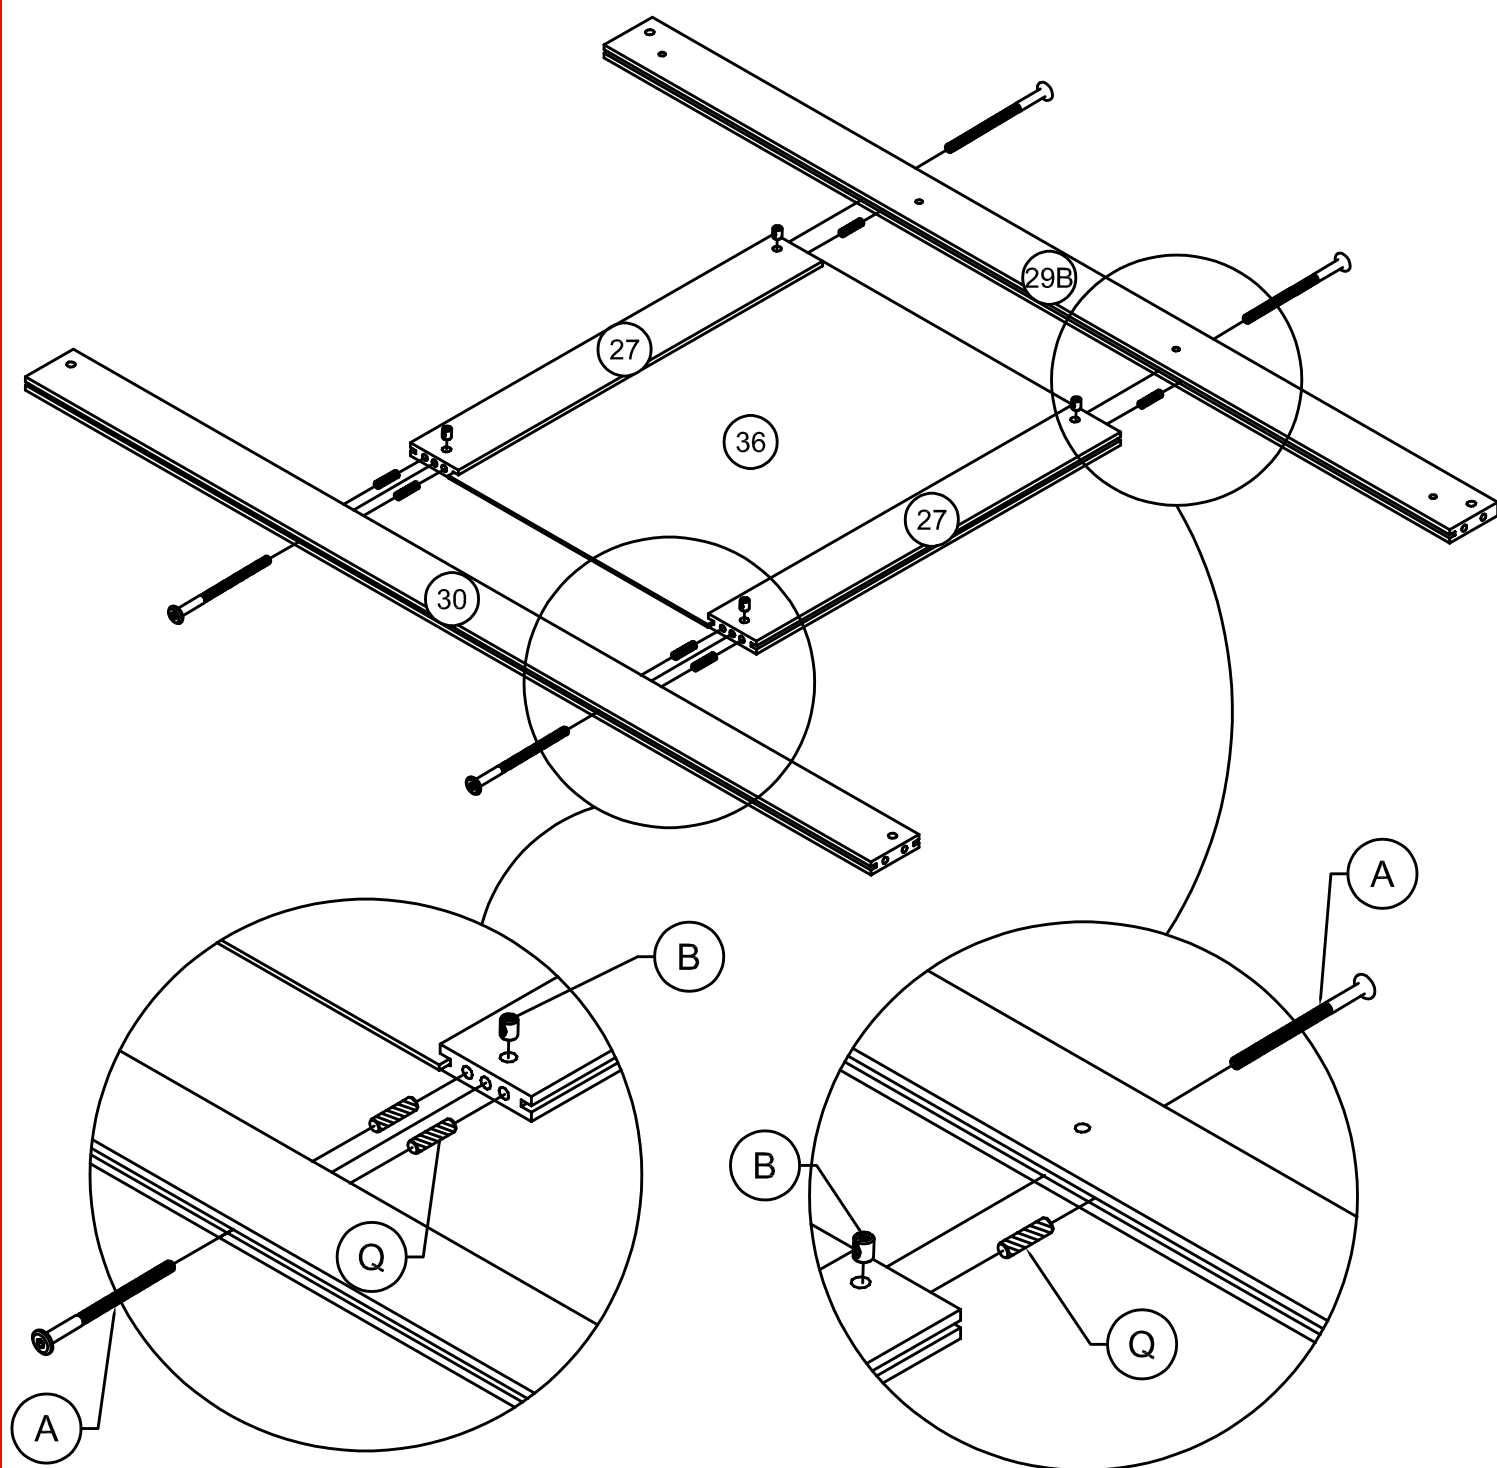


STEP 18: Following below illustration:


ÉTAPE 18: Illustration ci-dessous :

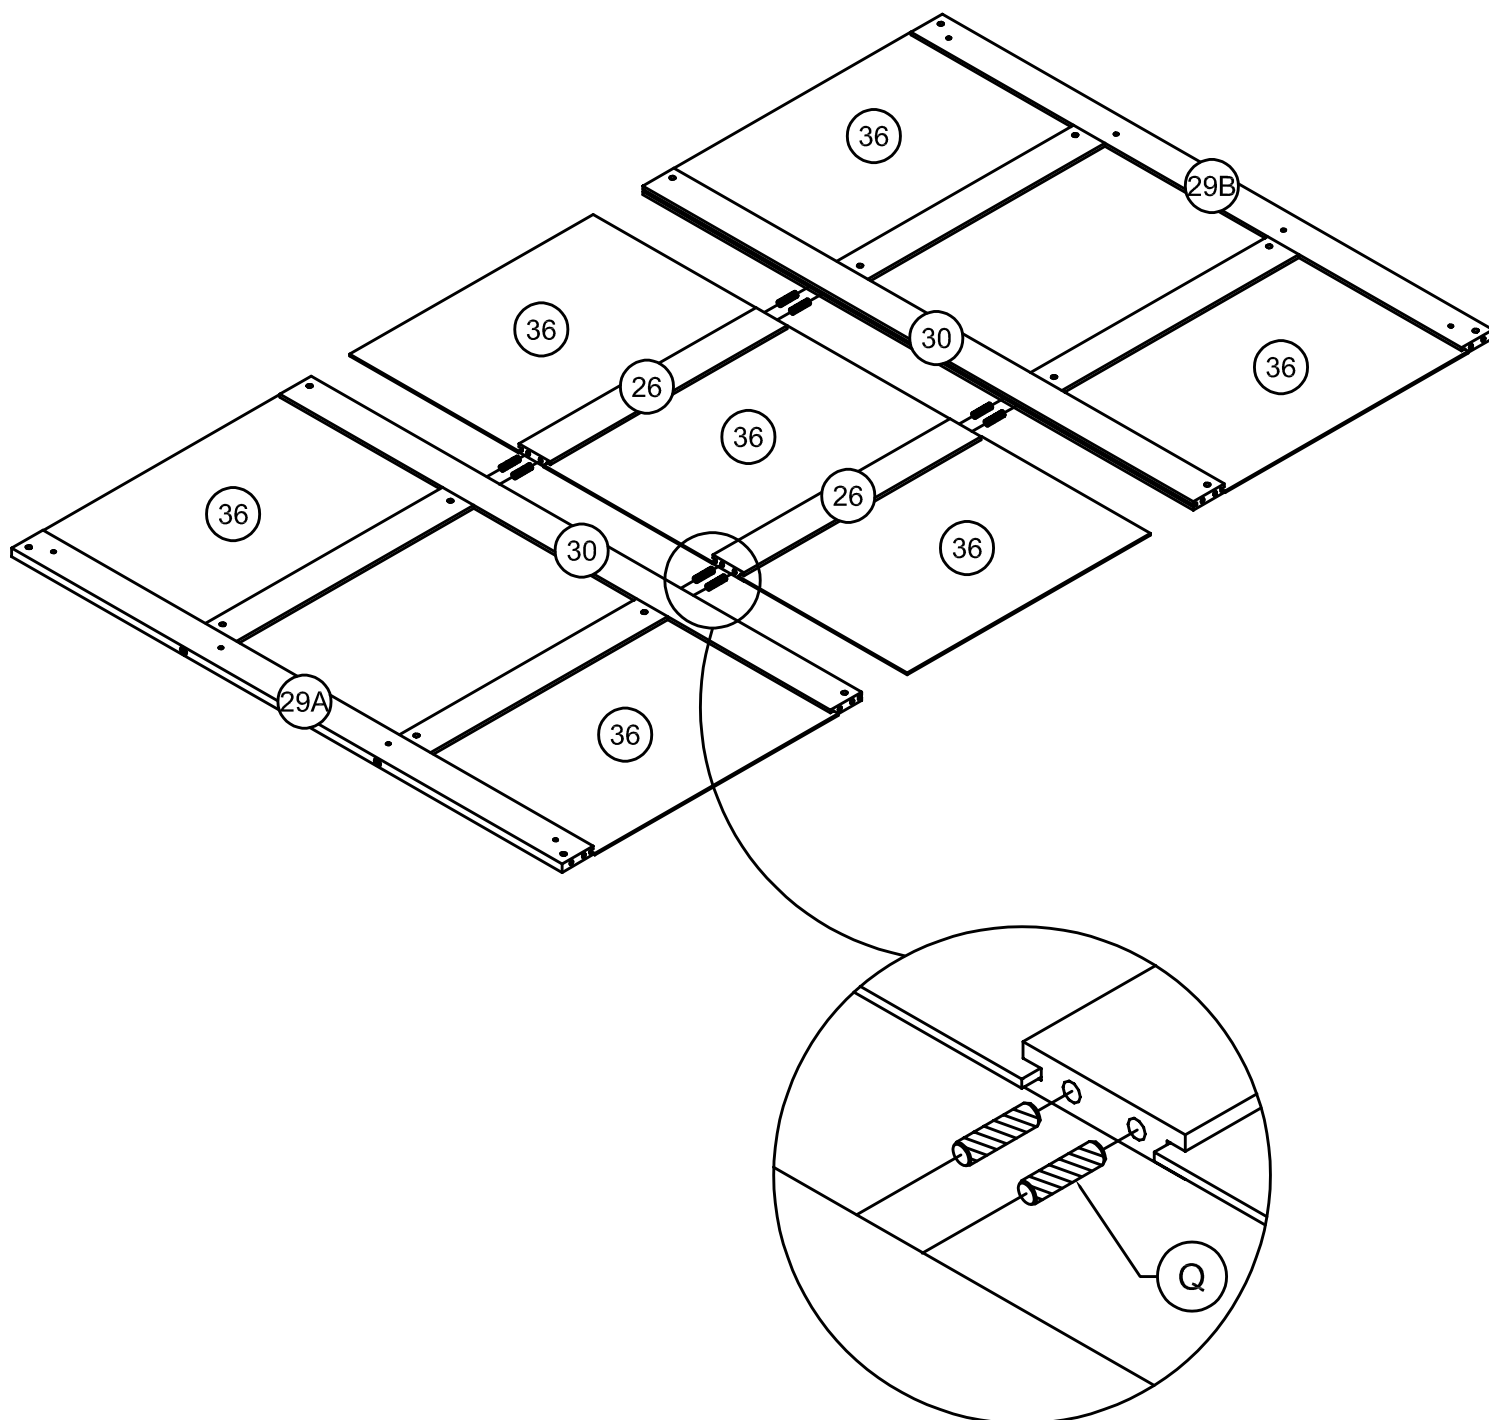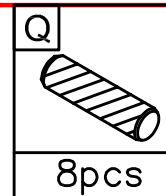

STEP 19: Following below illustration:

ÉTAPE 19: Illustration ci-dessous :


Q	A	B
		
8pcs	8pcs	8pcs

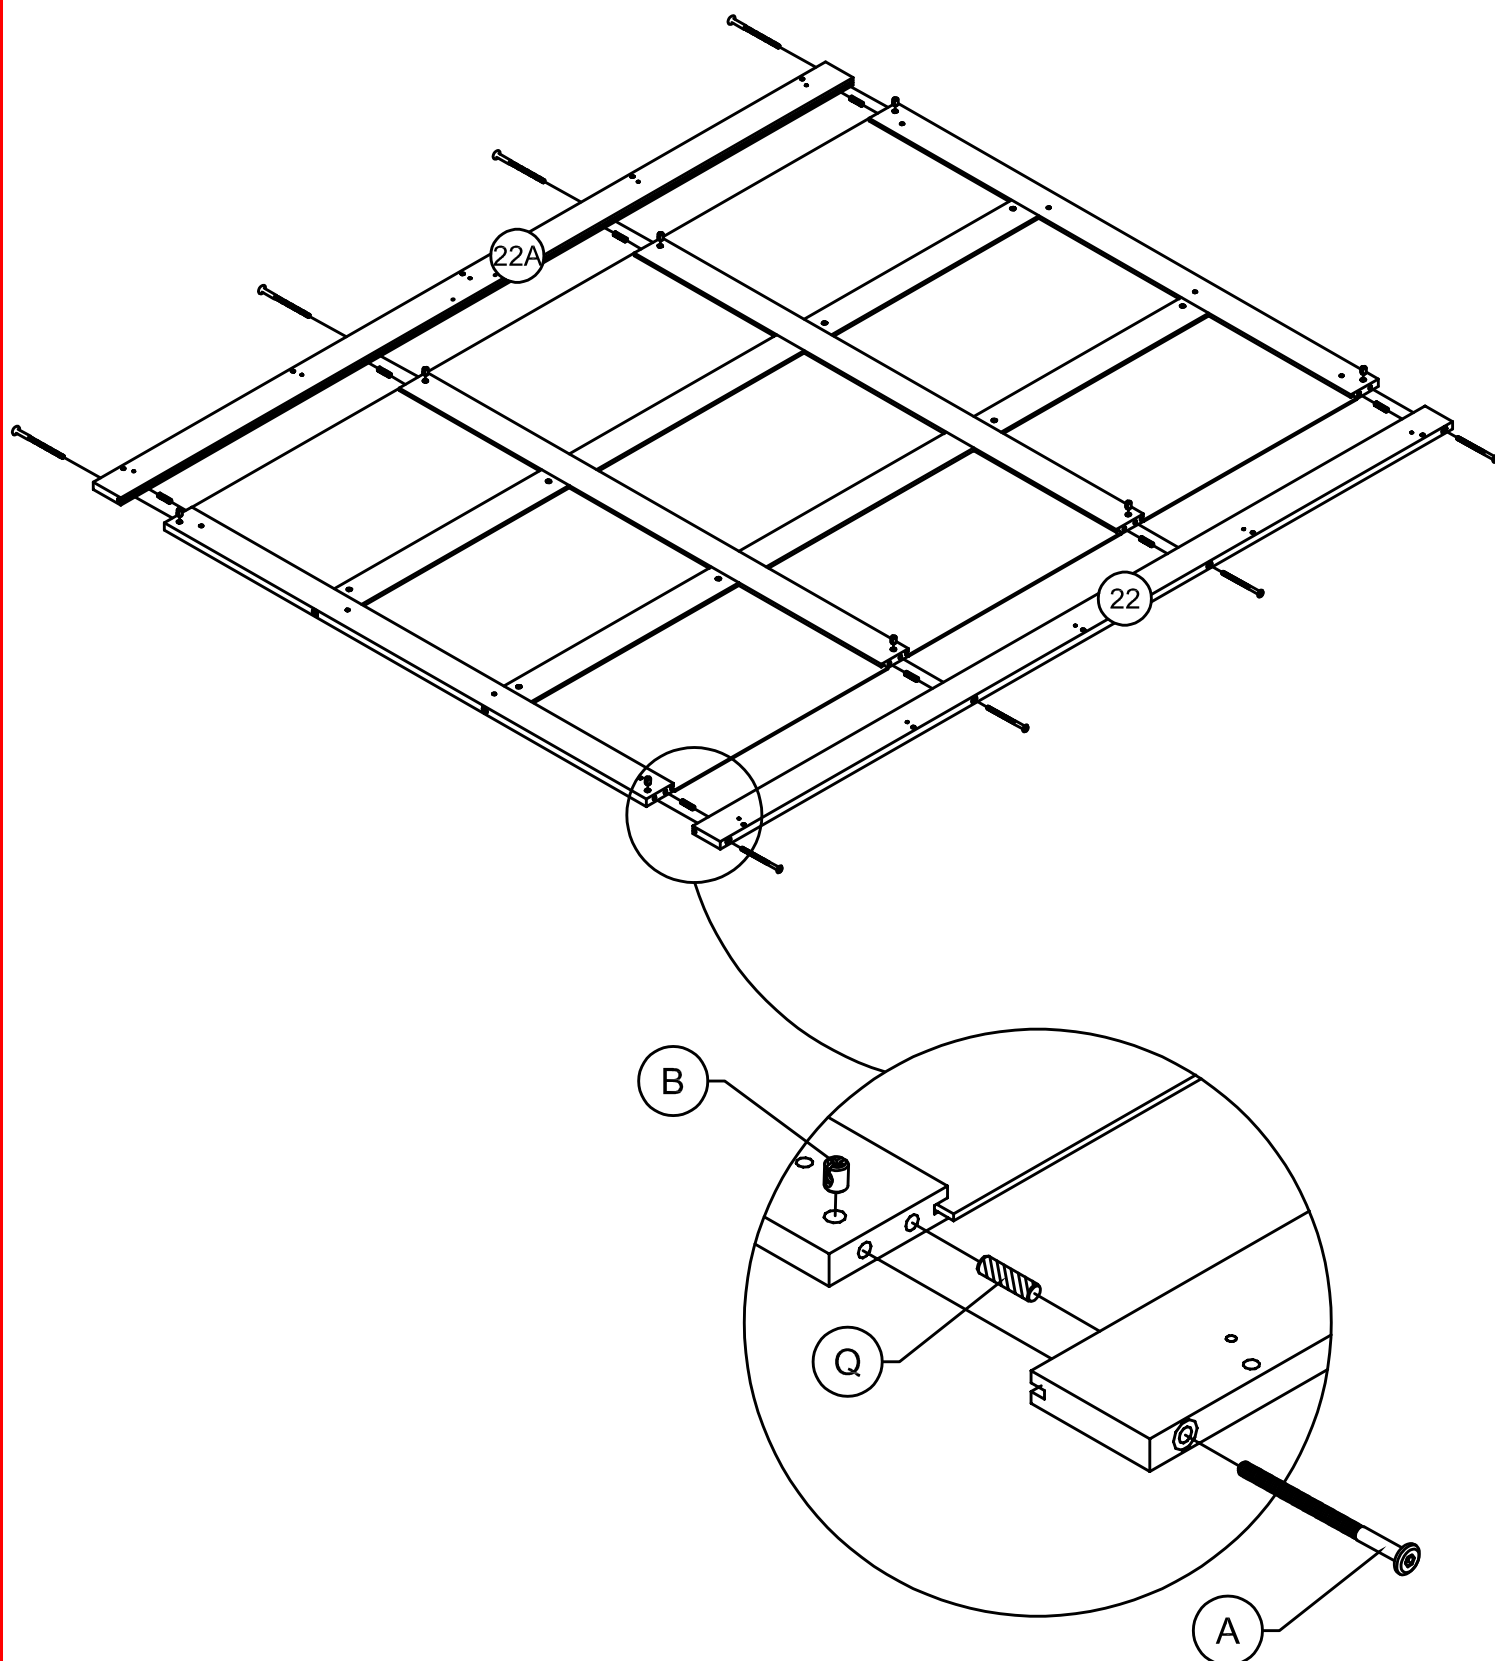

STEP 20: Following below illustration:

ÉTAPE 20: Illustration ci-dessous :


C	B
	
8pcs	8pcs

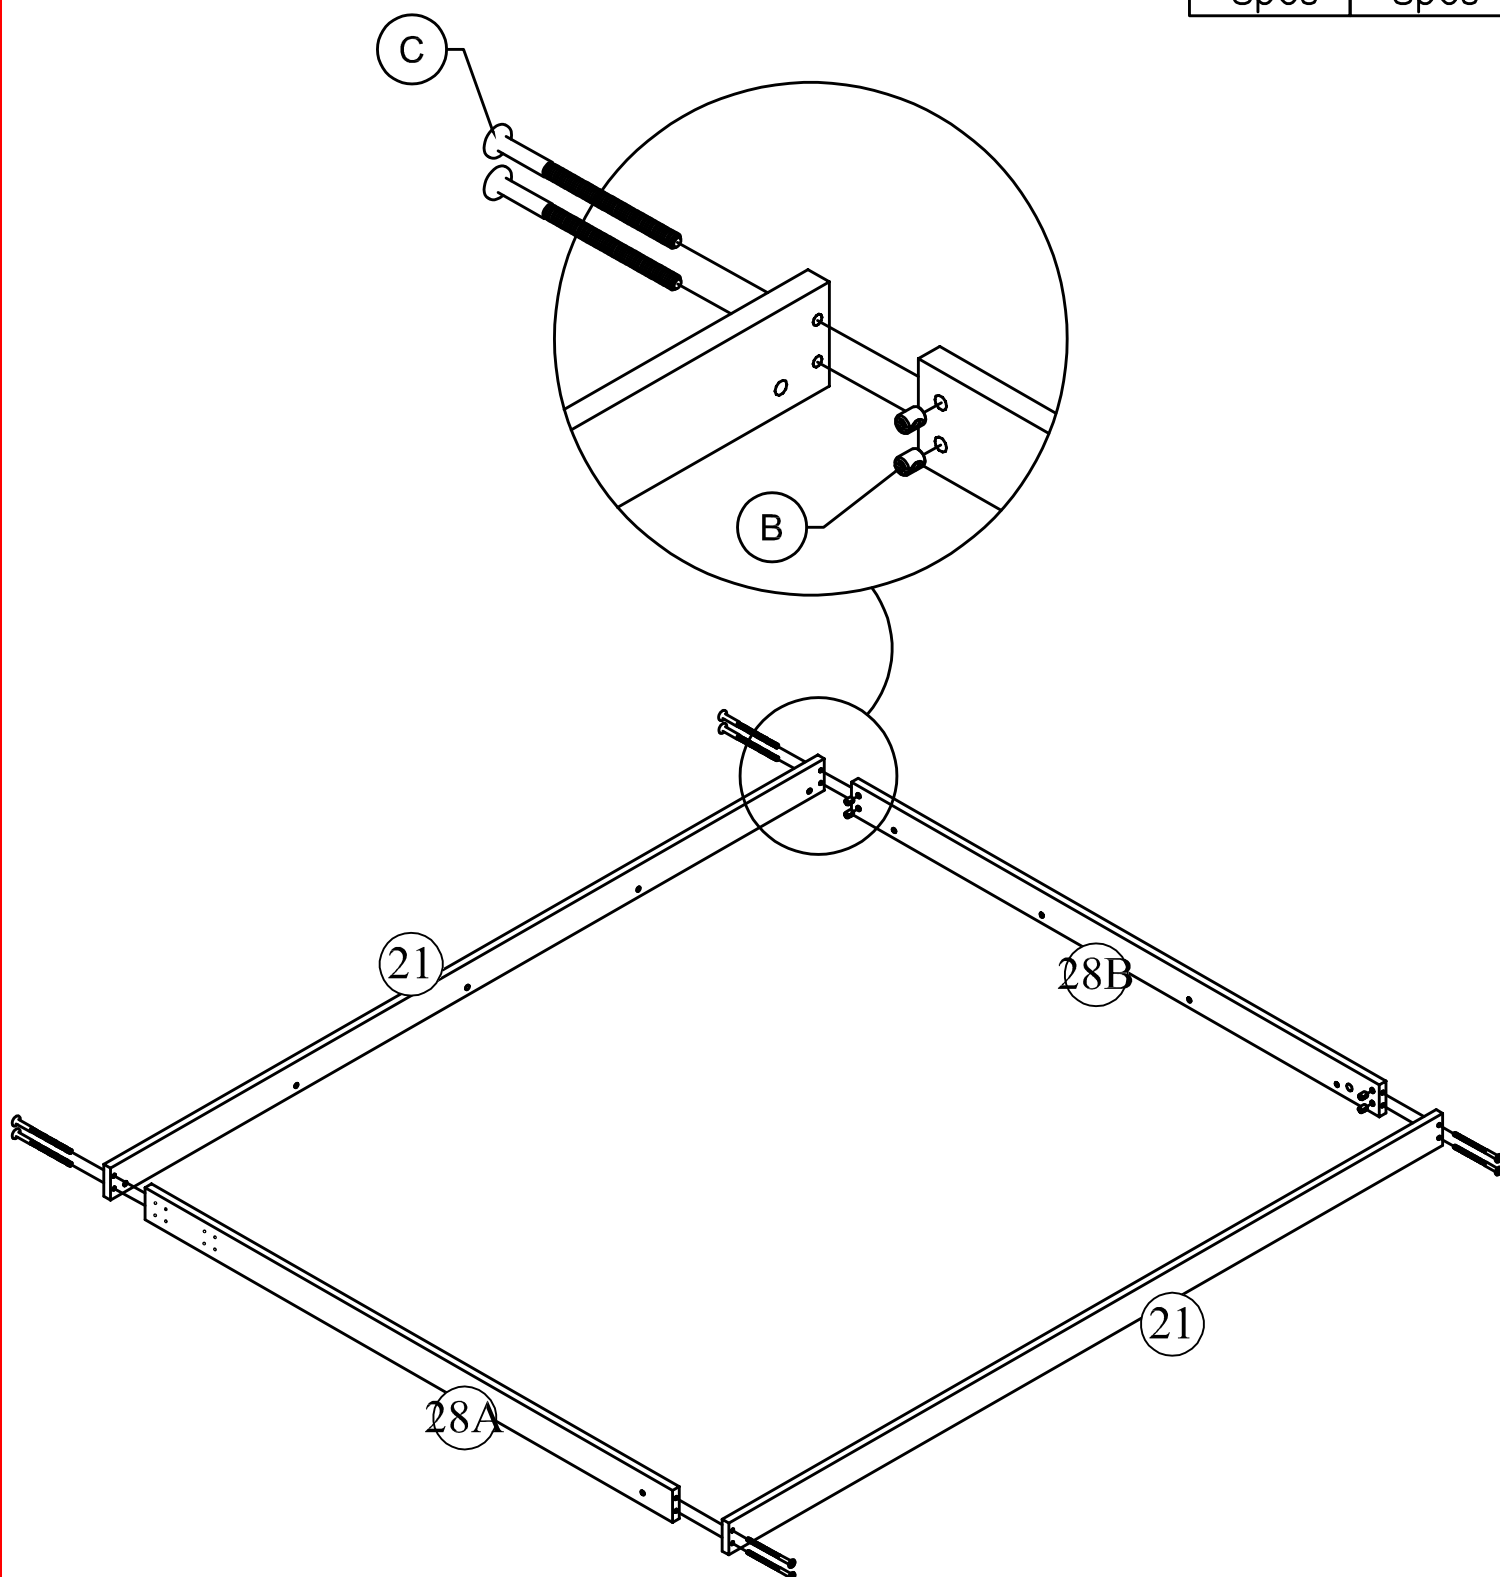

STEP 21: Following below illustration:


ÉTAPE 21: Illustration ci-dessous :





C	B
	
14pcs	14pcs

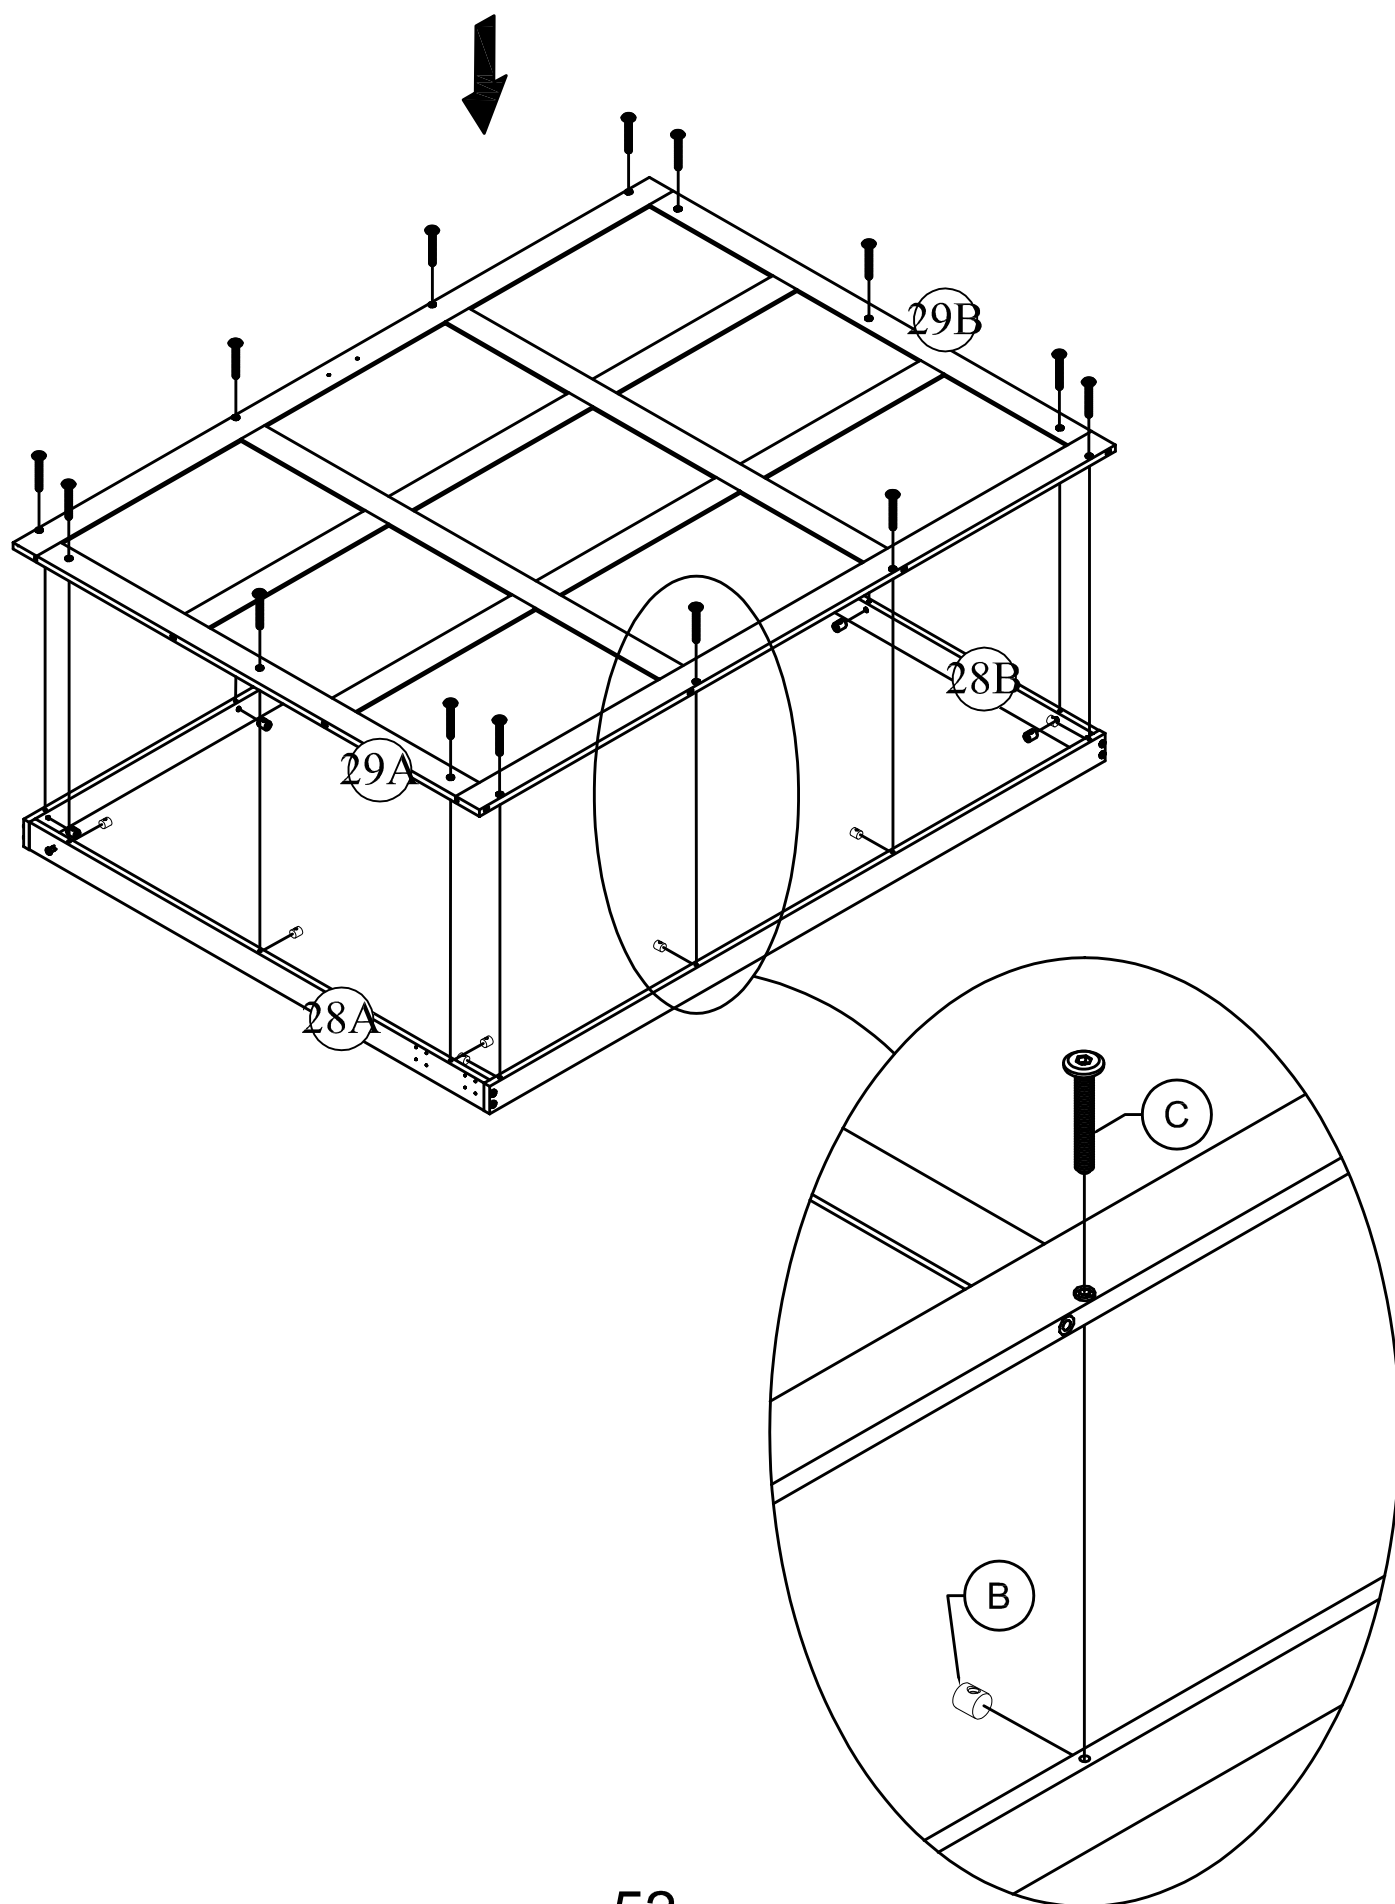

STEP 22: Following below illustration:



ÉTAPE 22: Illustration ci-dessous :

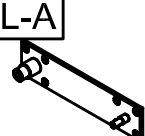K	J	L-A	L-B
			
20pcs	16pcs	2pcs	2pcs

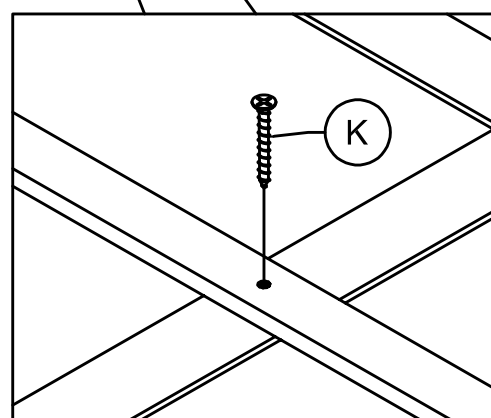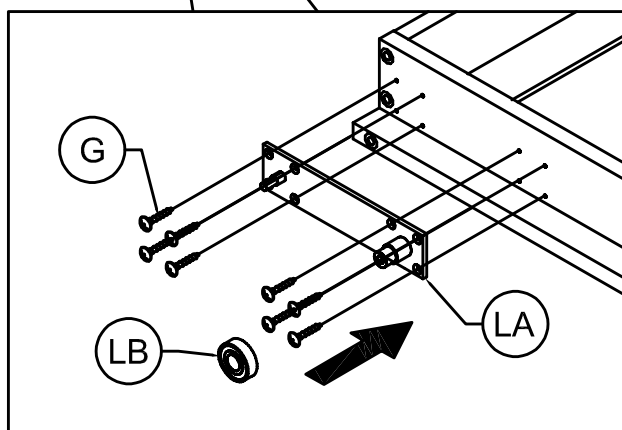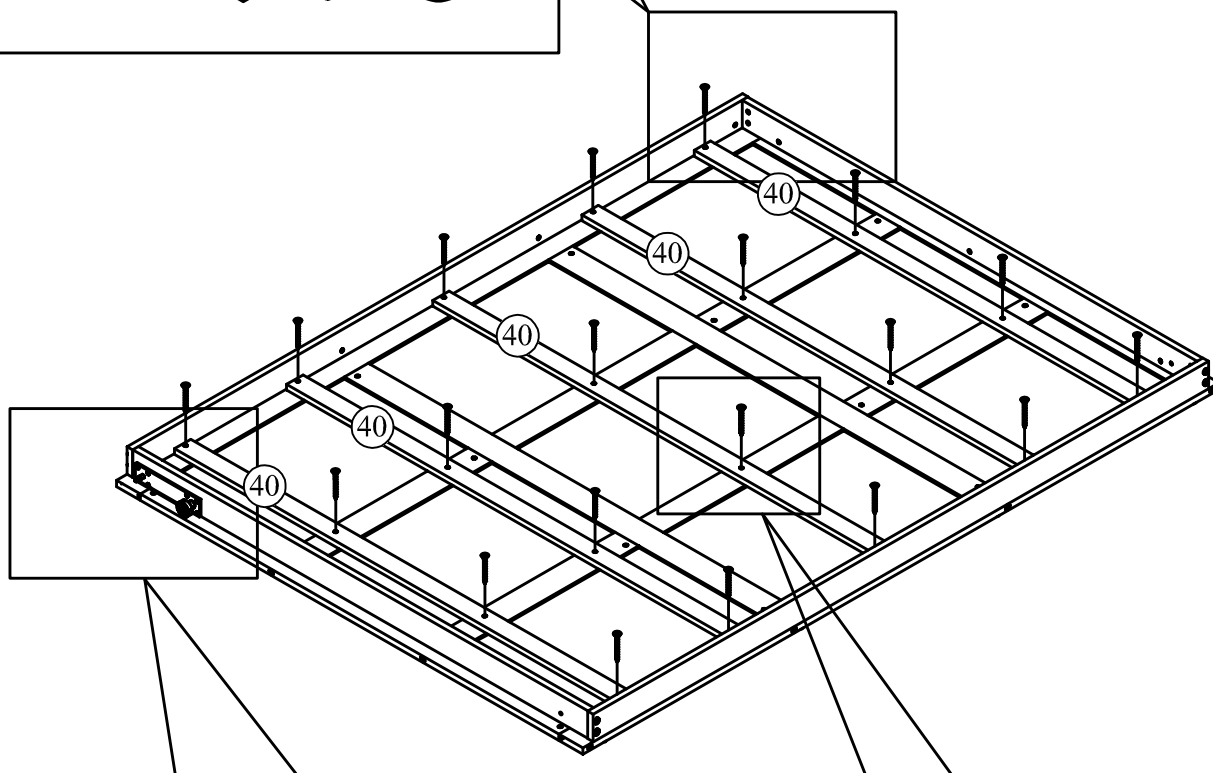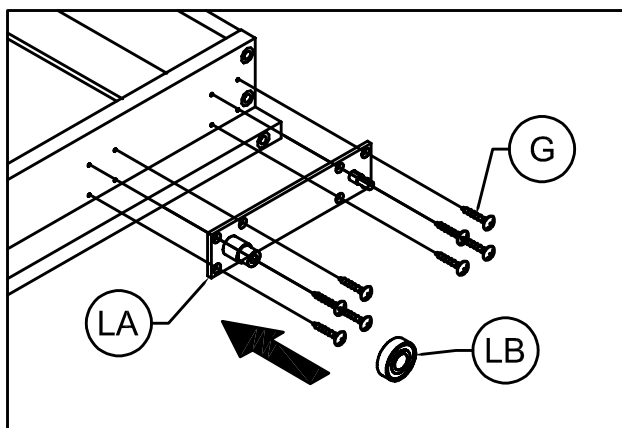

STEP 23: Following below illustration:

ÉTAPE 23: Illustration ci-dessous :

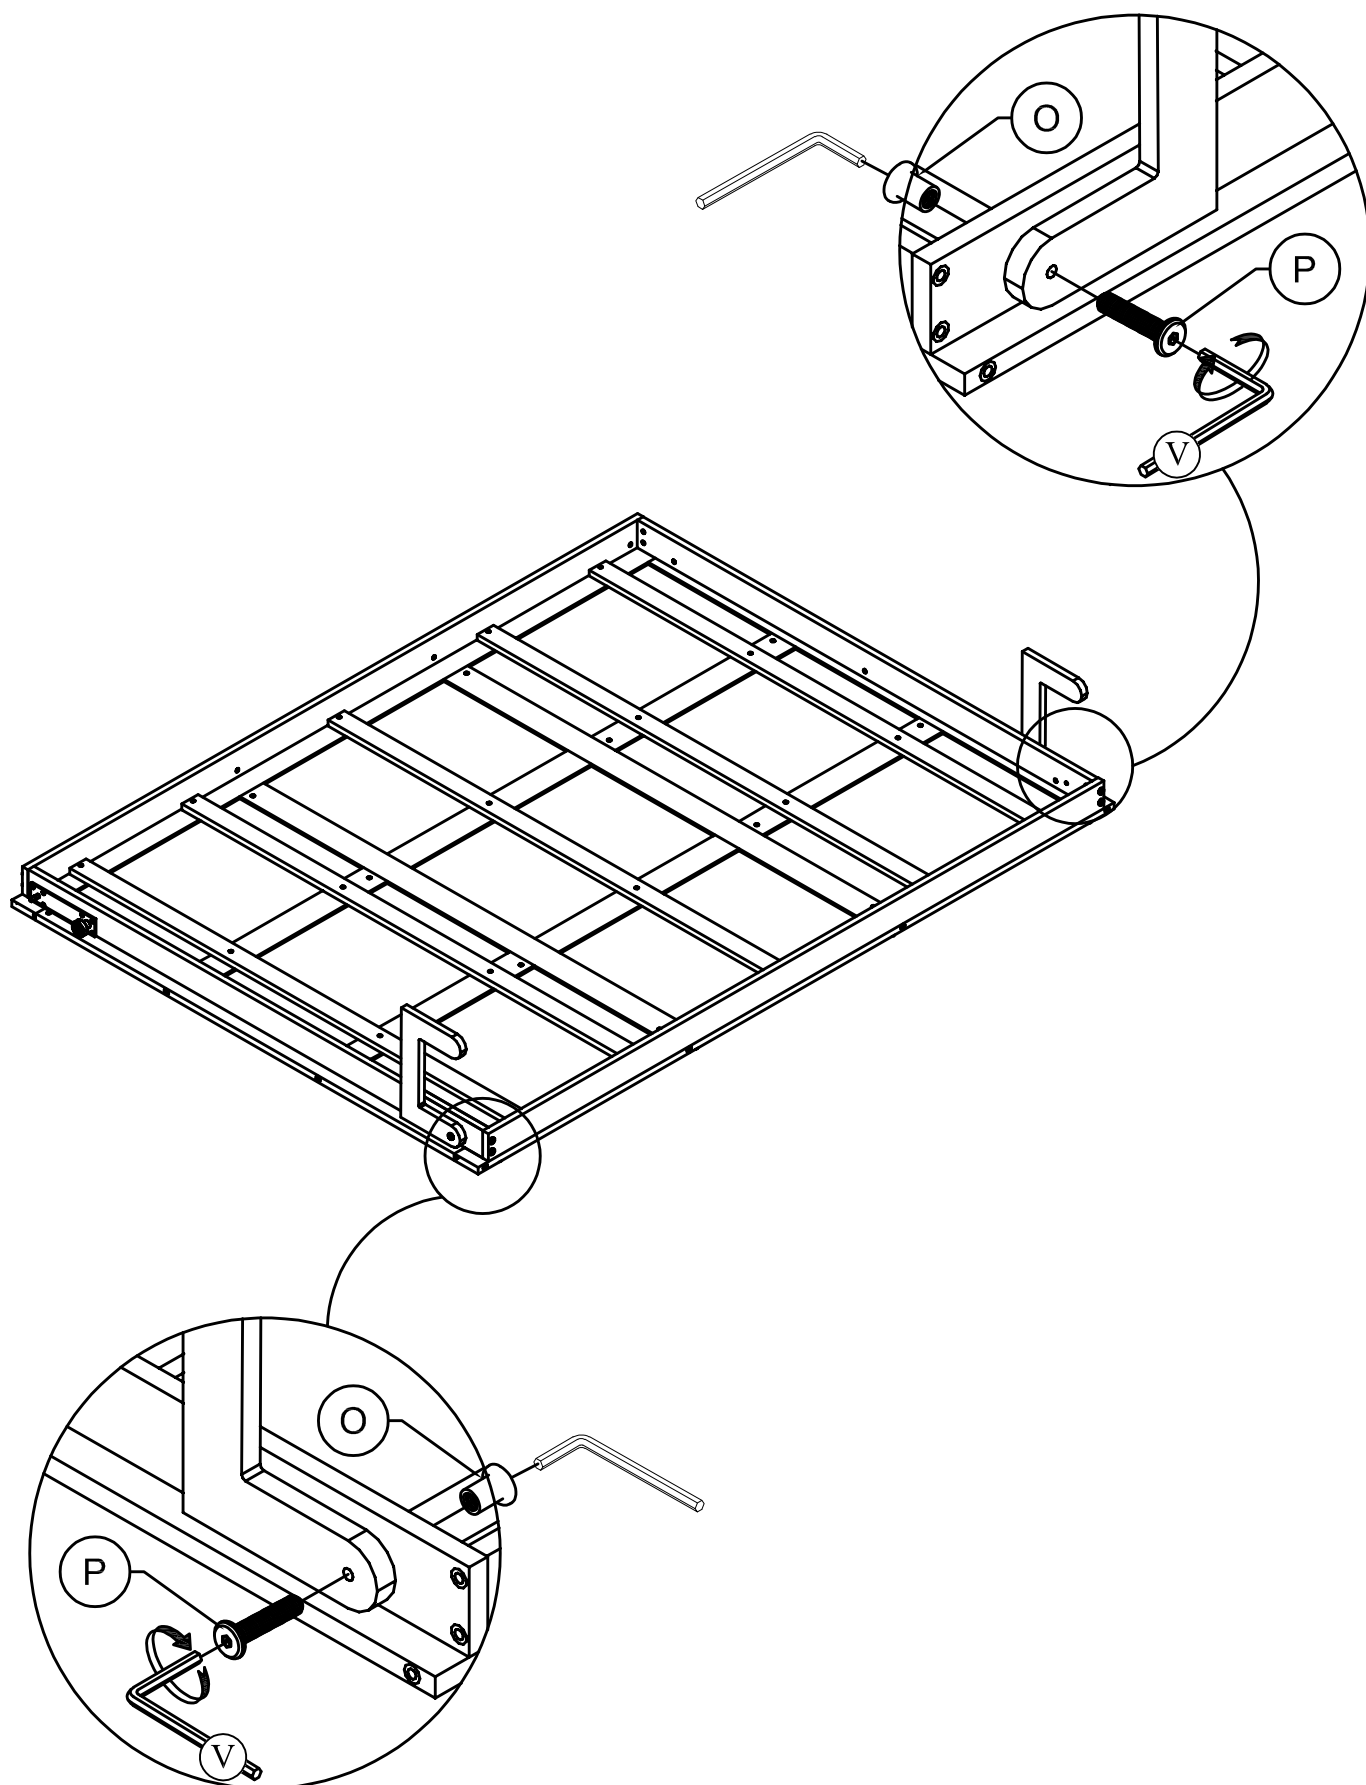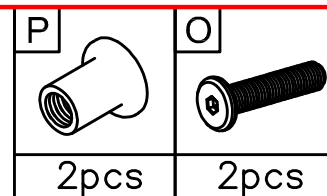

STEP 24: Following below illustration:


ÉTAPE 24: Illustration ci-dessous :

N	LD
	
2pcs	2pcs

Before assembling, we need to remove the plastic ties first.


Avant le montage, il faut d'abord retirer les attaches en plastique.

Please do not remove the steel ring.
Bitte entfernen Sie den Stahlring nicht.

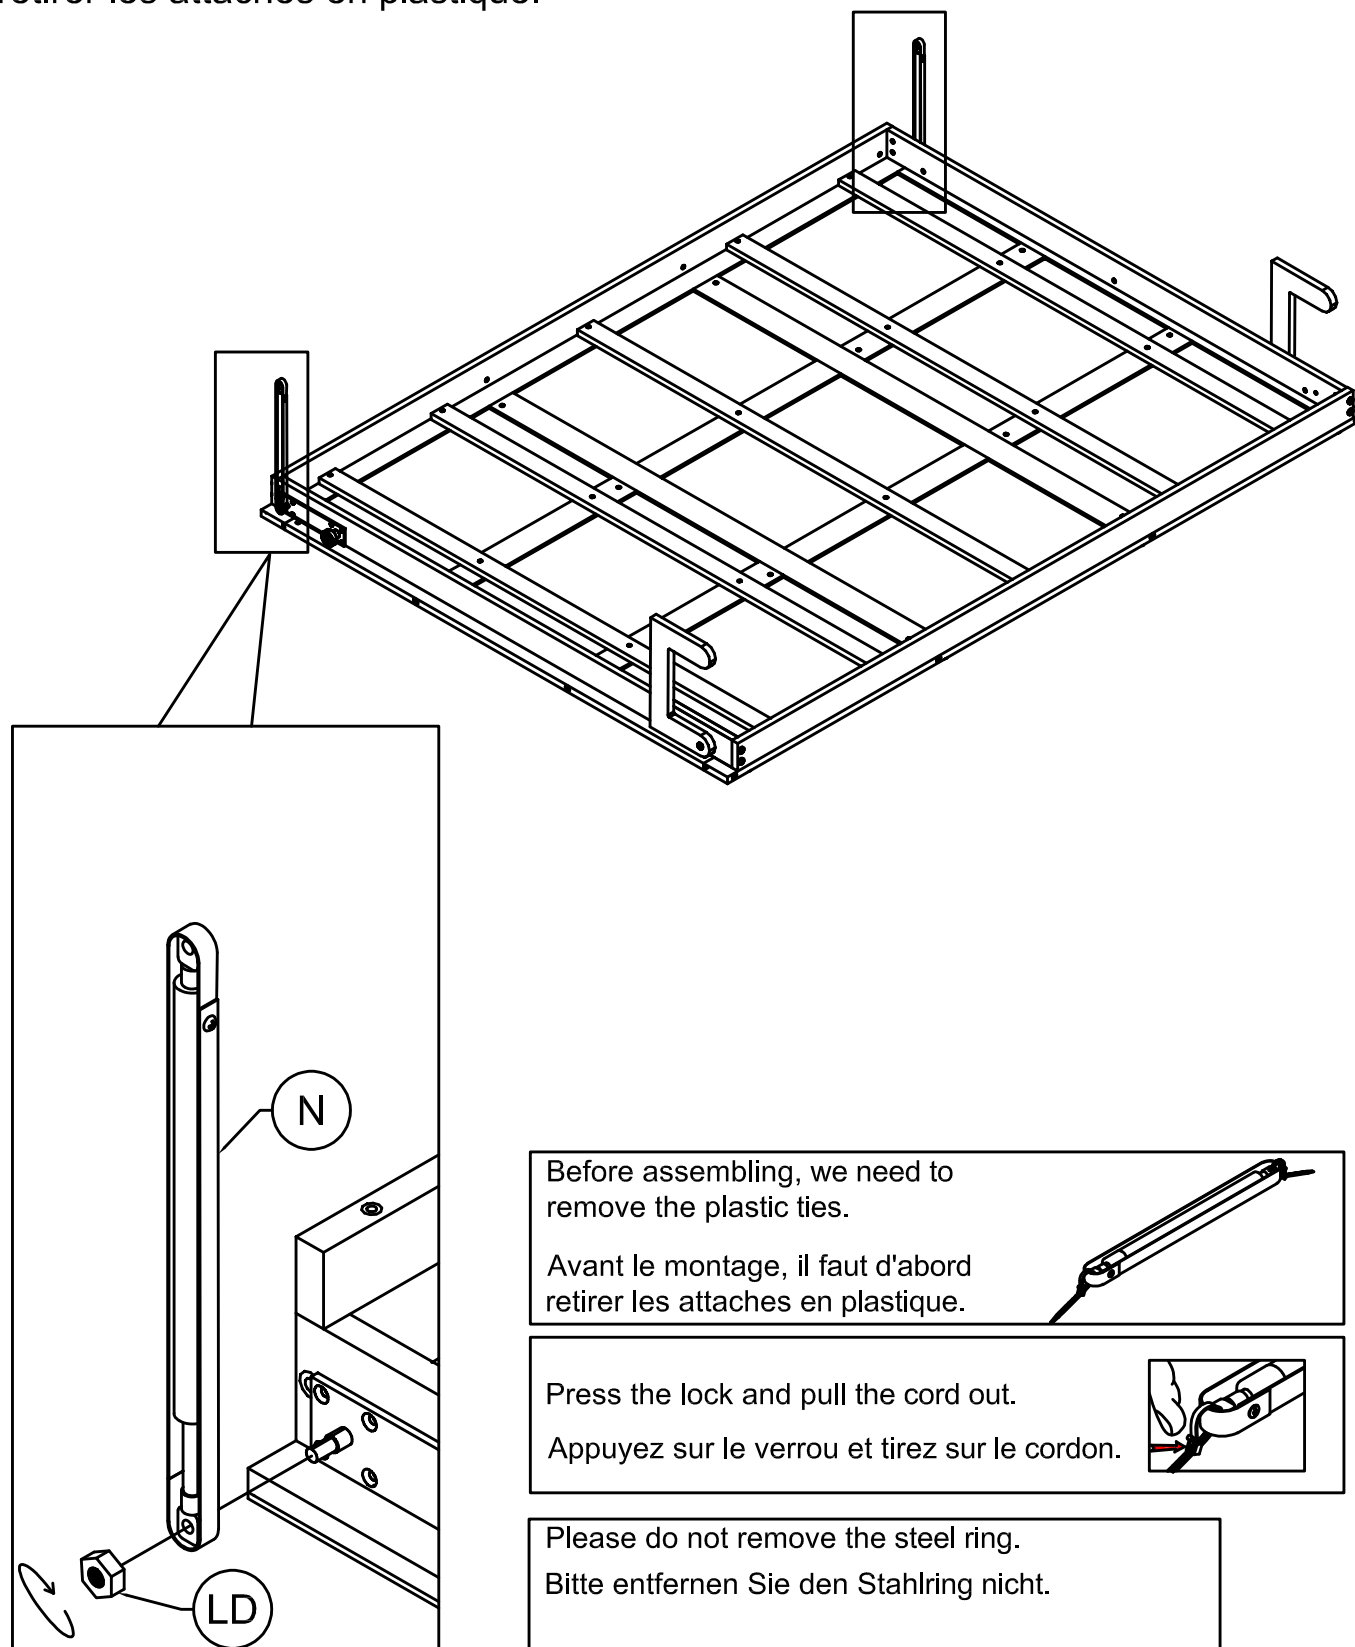


Before assembling, we need to remove the plastic ties.

Avant le montage, il faut d'abord retirer les attaches en plastique.

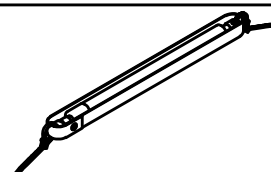

Press the lock and pull the cord out.

Appuyez sur le verrou et tirez sur le cordon.




Please do not remove the steel ring.
Bitte entfernen Sie den Stahlring nicht.

STEP 25: Following below illustration:



ÉTAPE 25: Illustration ci-dessous :

LC




2pcs


Please do not remove the steel ring.
Bitte entfernen Sie den Stahlring nicht.

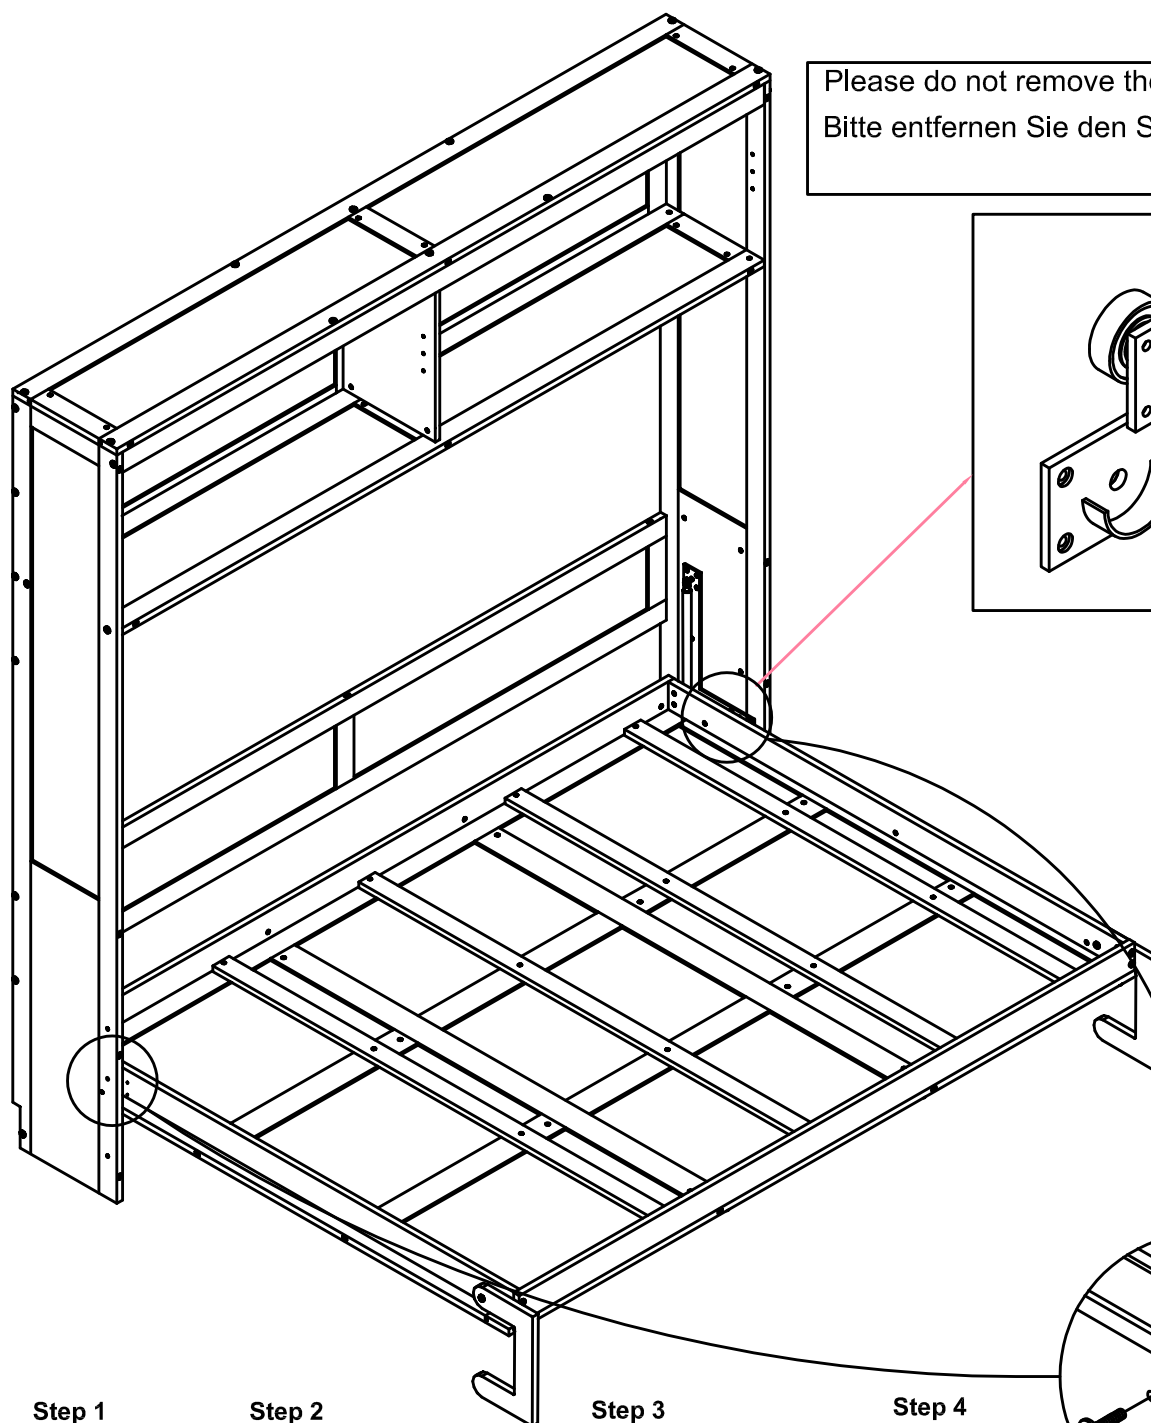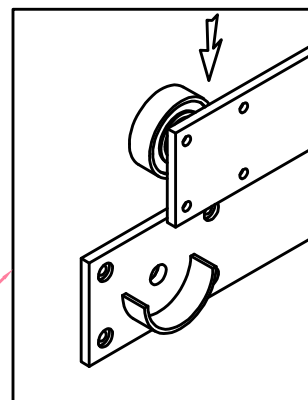


Step 1

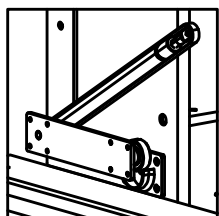



Step 2

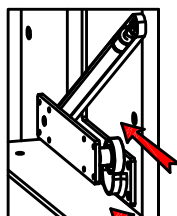

Step 3

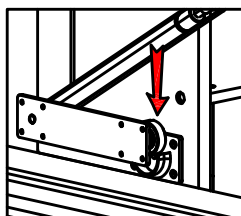

Step 4

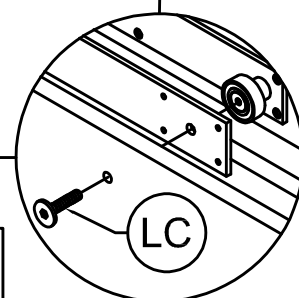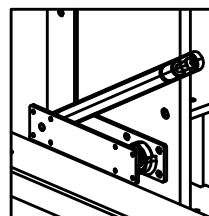

Step 1 Slide the bed unit into the frame / Faites glisser le lit dans le cadre

Step 2 The roller housing of must be positioned between the roller of and the front vertical bar of the bed assembly / Le logement du rouleau de doit être placé entre le rouleau de et le montant vertical avant du lit

Step 3 Slide in slowly from both sides, align until the roller of is directly above the housing , then lower the bed assembly gently, keeping both sides aligned / Faites glisser lentement des deux côtés, alignez jusqu'à ce que le rouleau de soit directement au-dessus du logement, puis abaissez doucement l'ensemble du lit en gardant les deux côtés alignés

Important note / Remarque importante : Do not insert the bed unit into the frame as shown in illustrations No1 and No2 / Ne pas insérer le module lit dans la structure comme indiqué sur les illustrations No1 et No2

STEP 26: Following below illustration:


ÉTAPE 26: Illustration ci-dessous :

LD




2pcs

Please do not remove the steel ring.
Bitte entfernen Sie den Stahlring nicht.

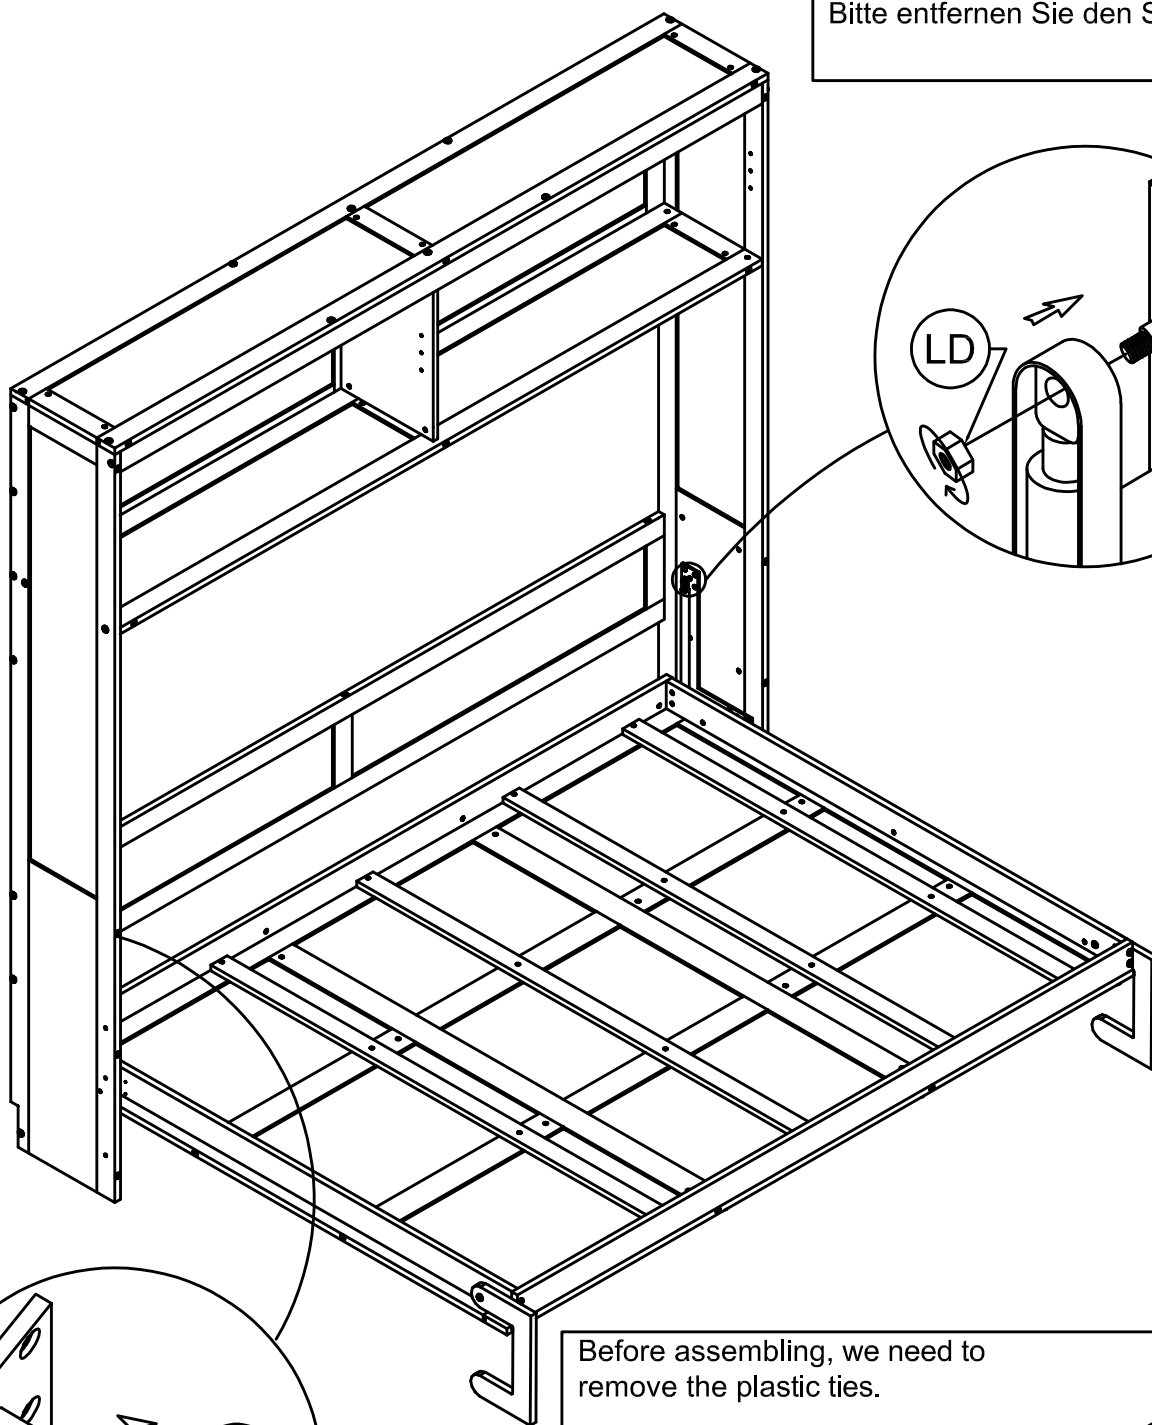


Before assembling, we need to
remove the plastic ties.

Avant le montage, il faut d'abord
retirer les attaches en plastique.

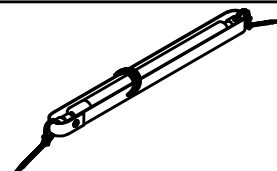

Press the lock and pull the cord out.


Appuyez sur le verrou et tirez sur le cordon.



Please do not remove the steel ring.
Bitte entfernen Sie den Stahlring nicht.

STEP 27: Following below illustration:


ÉTAPE 27: Illustration ci-dessous :

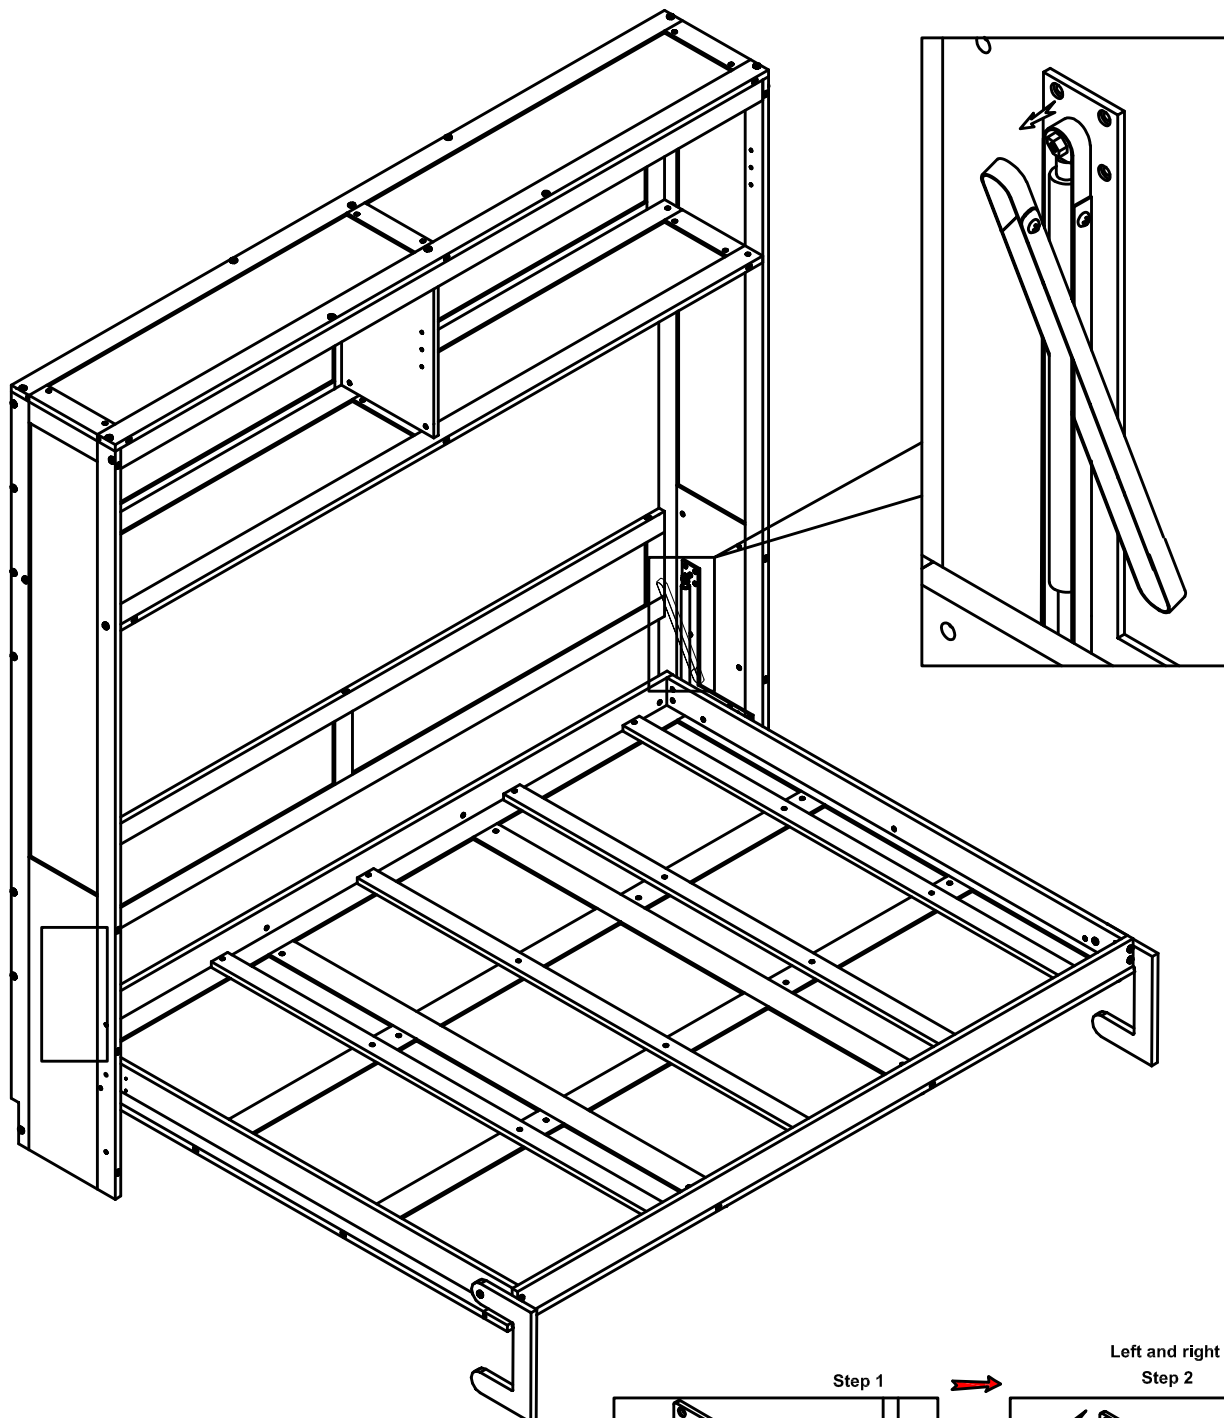

Move the bed frame in the direction of the arrow, pull the straps to the side, then use a screwdriver to open and remove the straps.



Déplacez le cadre de lit dans le sens de la flèche, tirez les sangles sur le côté, puis utilisez un tournevis pour ouvrir et retirer les sangles.



Because the cord is made of metal, please handle it carefully. When removing it, please do so very slowly to avoid injury and scratching the product.

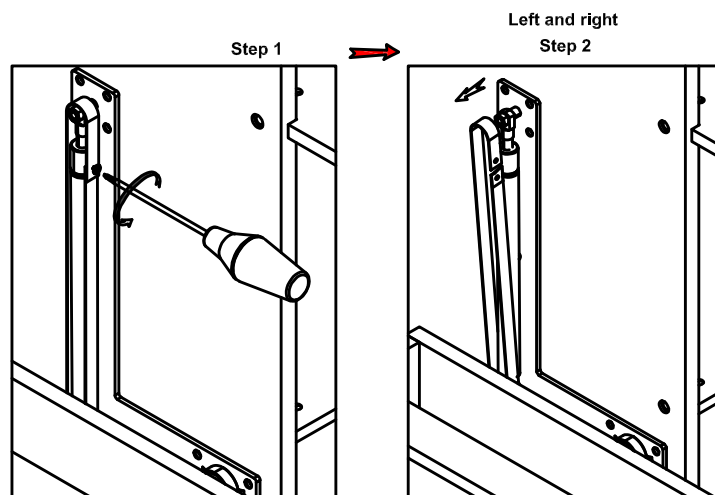

STEP 28: Following below illustration:



ÉTAPE 28: Illustration ci-dessous :

M	R
	
1pcs	2pcs

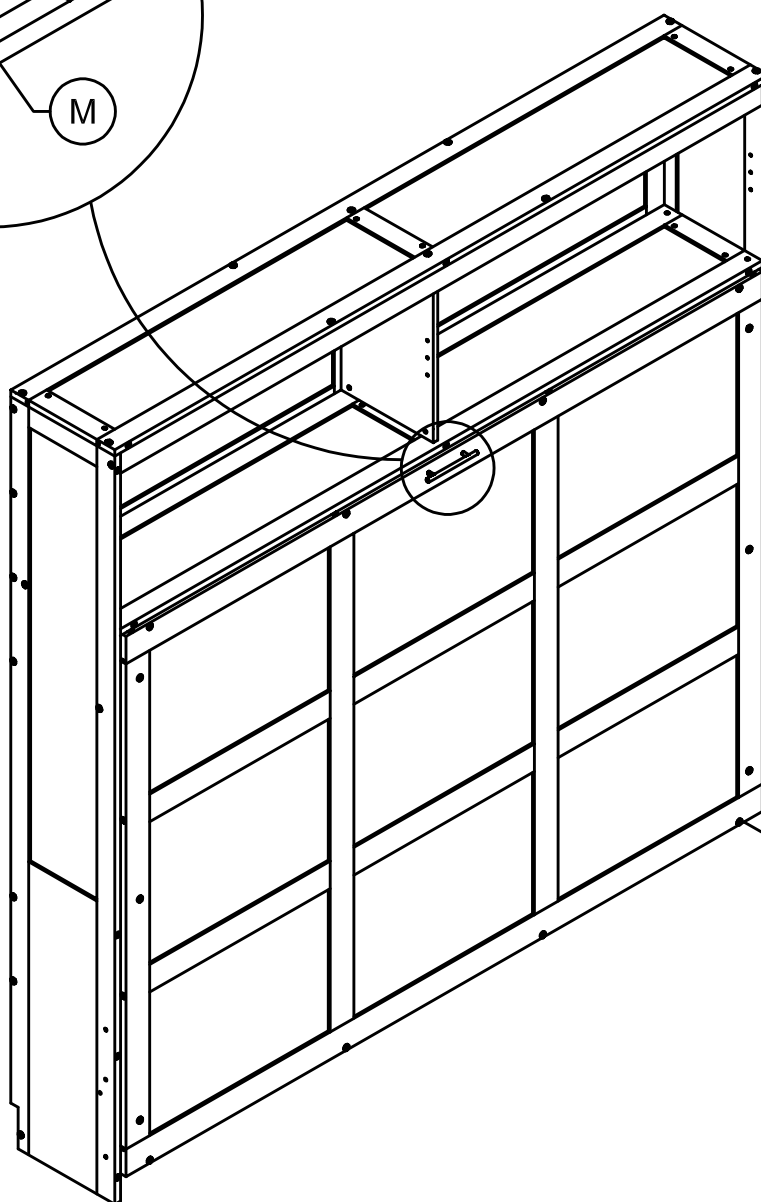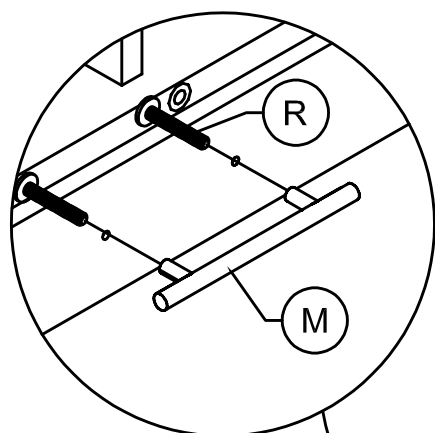

STEP 29: Following below illustration:


ÉTAPE 29: Illustration ci-dessous :

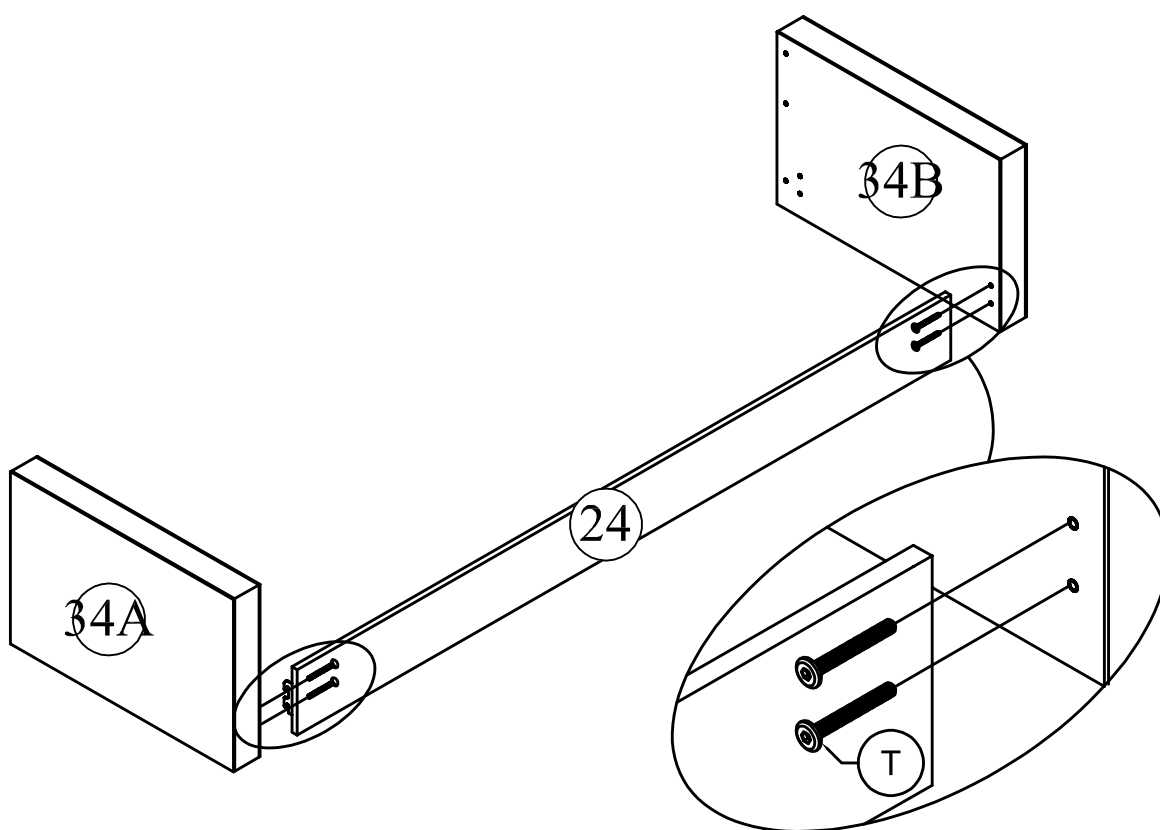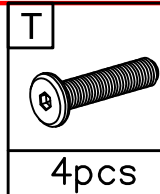

STEP 30: Following below illustration:


ÉTAPE 30: Illustration ci-dessous :

Y	U
	
1pc	4pcs

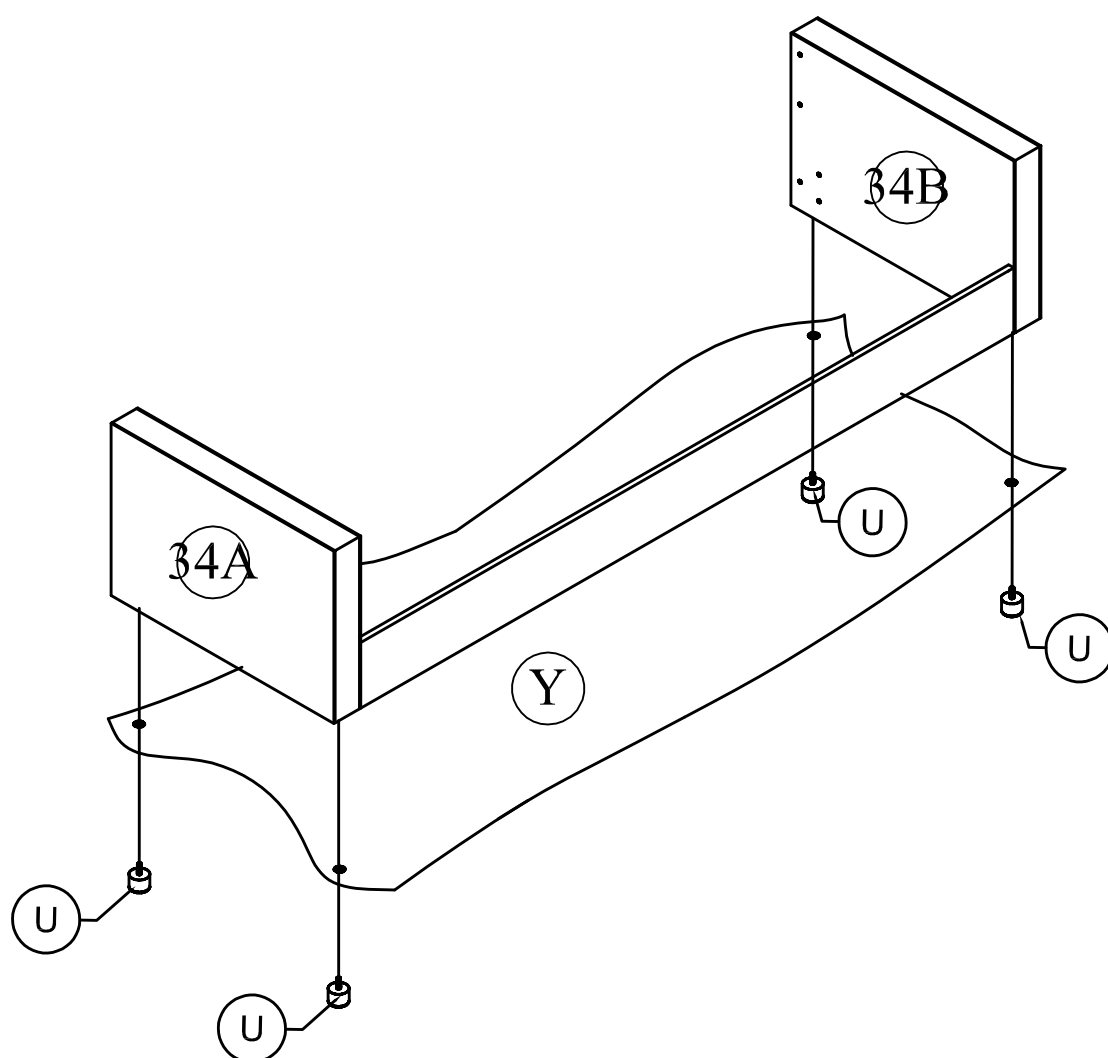

STEP 31: Following below illustration:

ÉTAPE 31: Illustration ci-dessous :

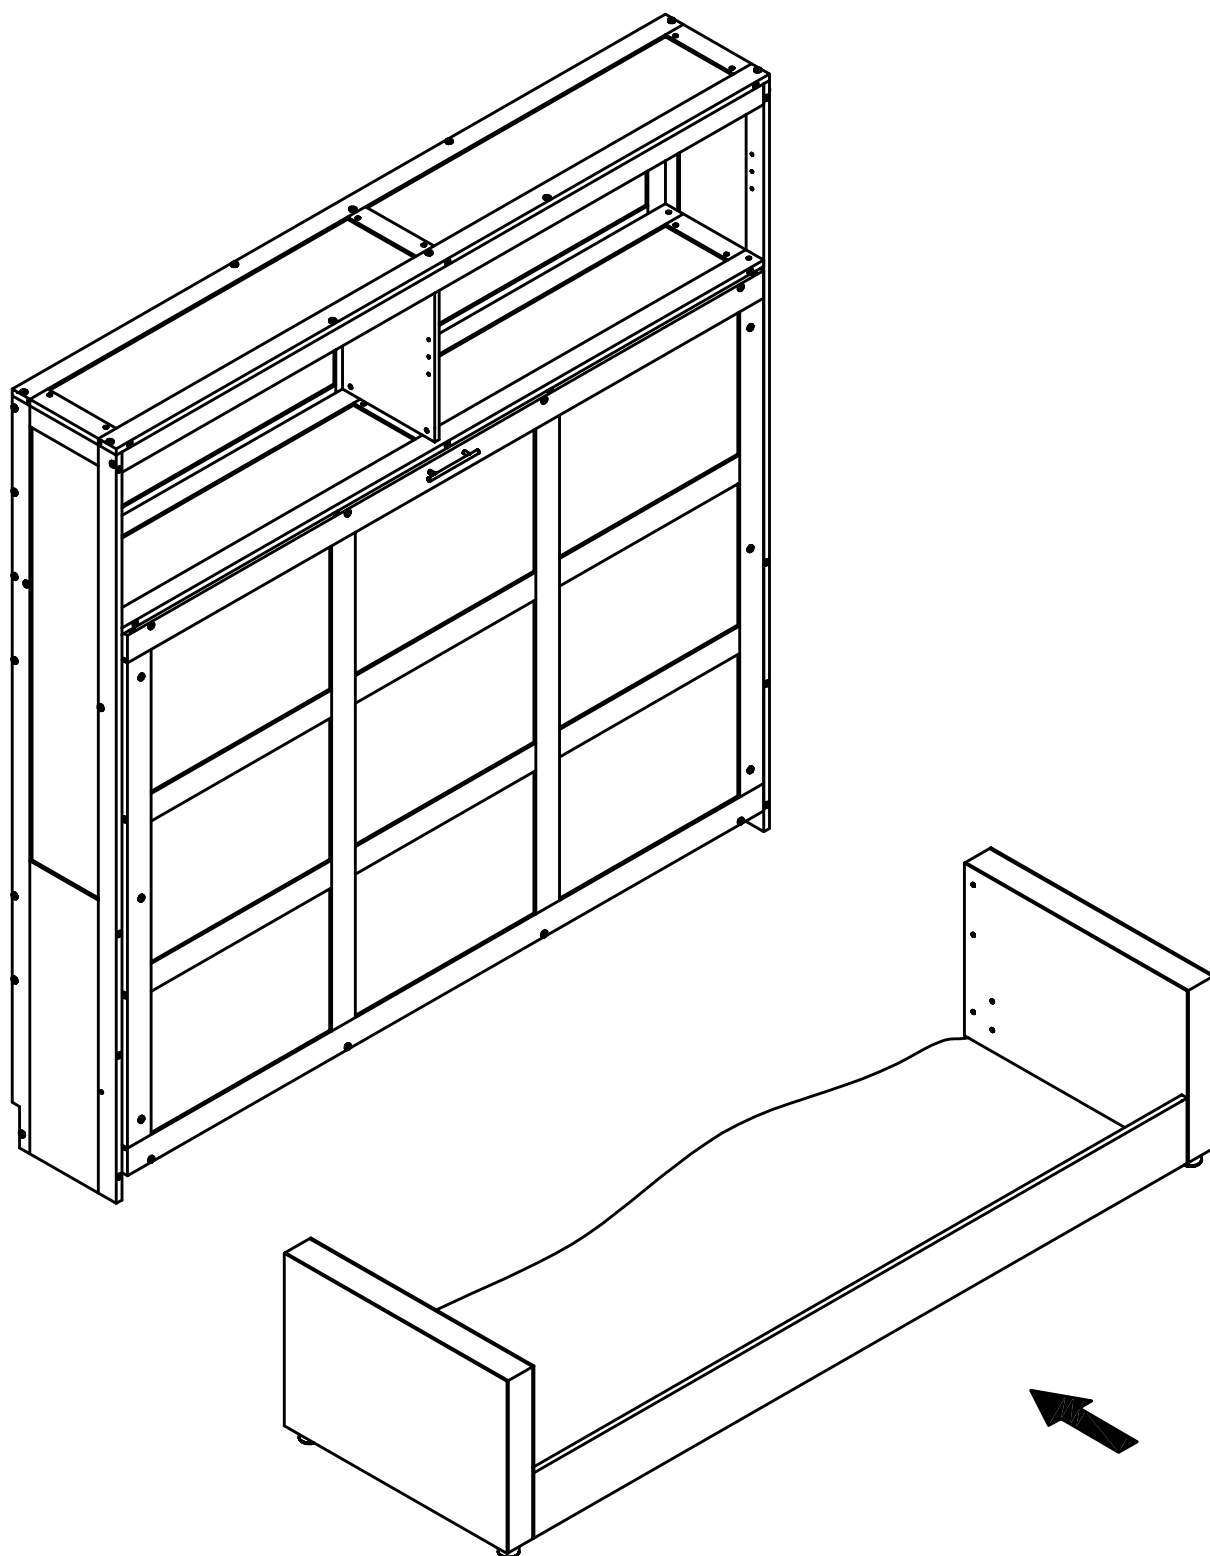


STEP 32: Following below illustration:

ÉTAPE 32: Illustration ci-dessous :

C





4pcs

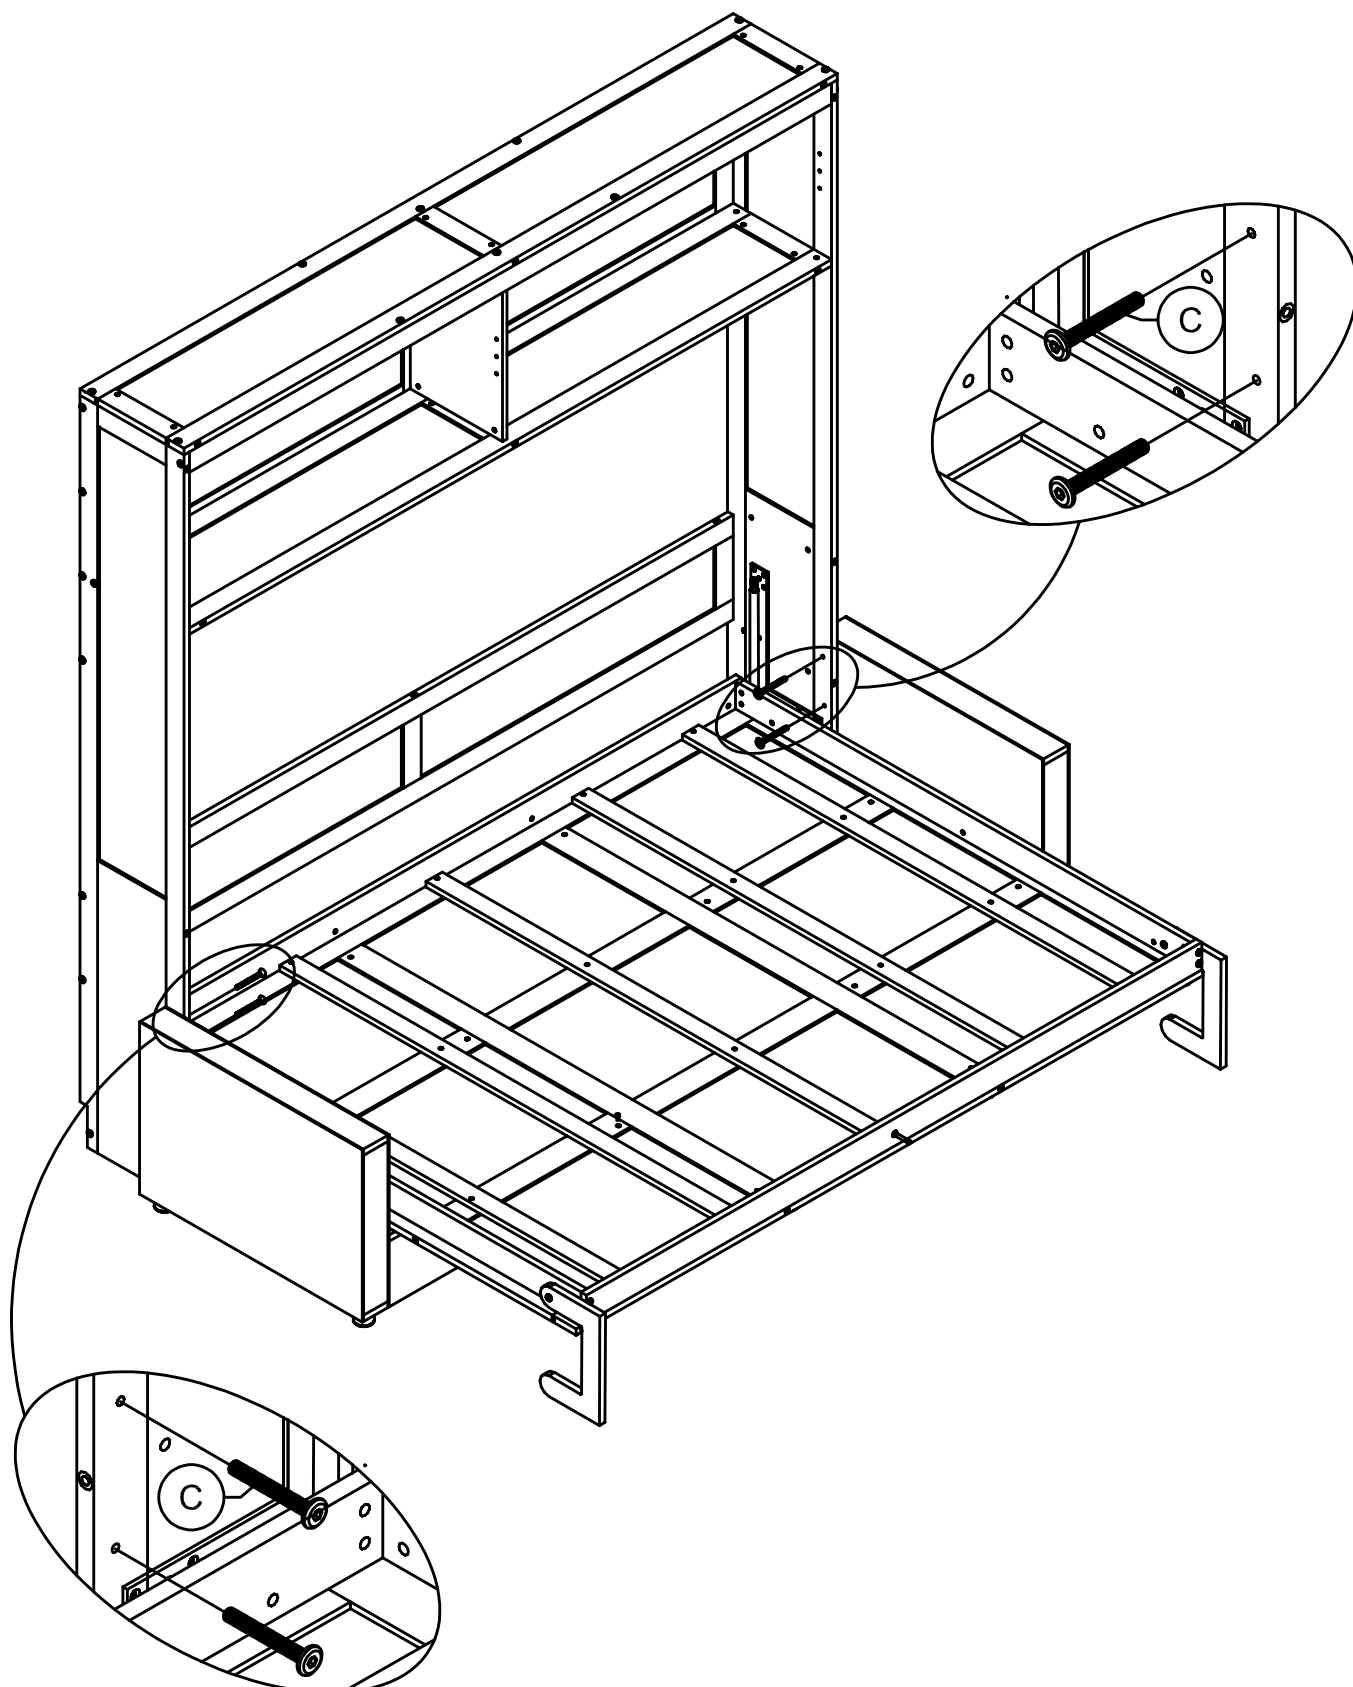

STEP 33: Following below illustration:


ÉTAPE 33: Illustration ci-dessous :



G	E
	
8pcs	8pcs

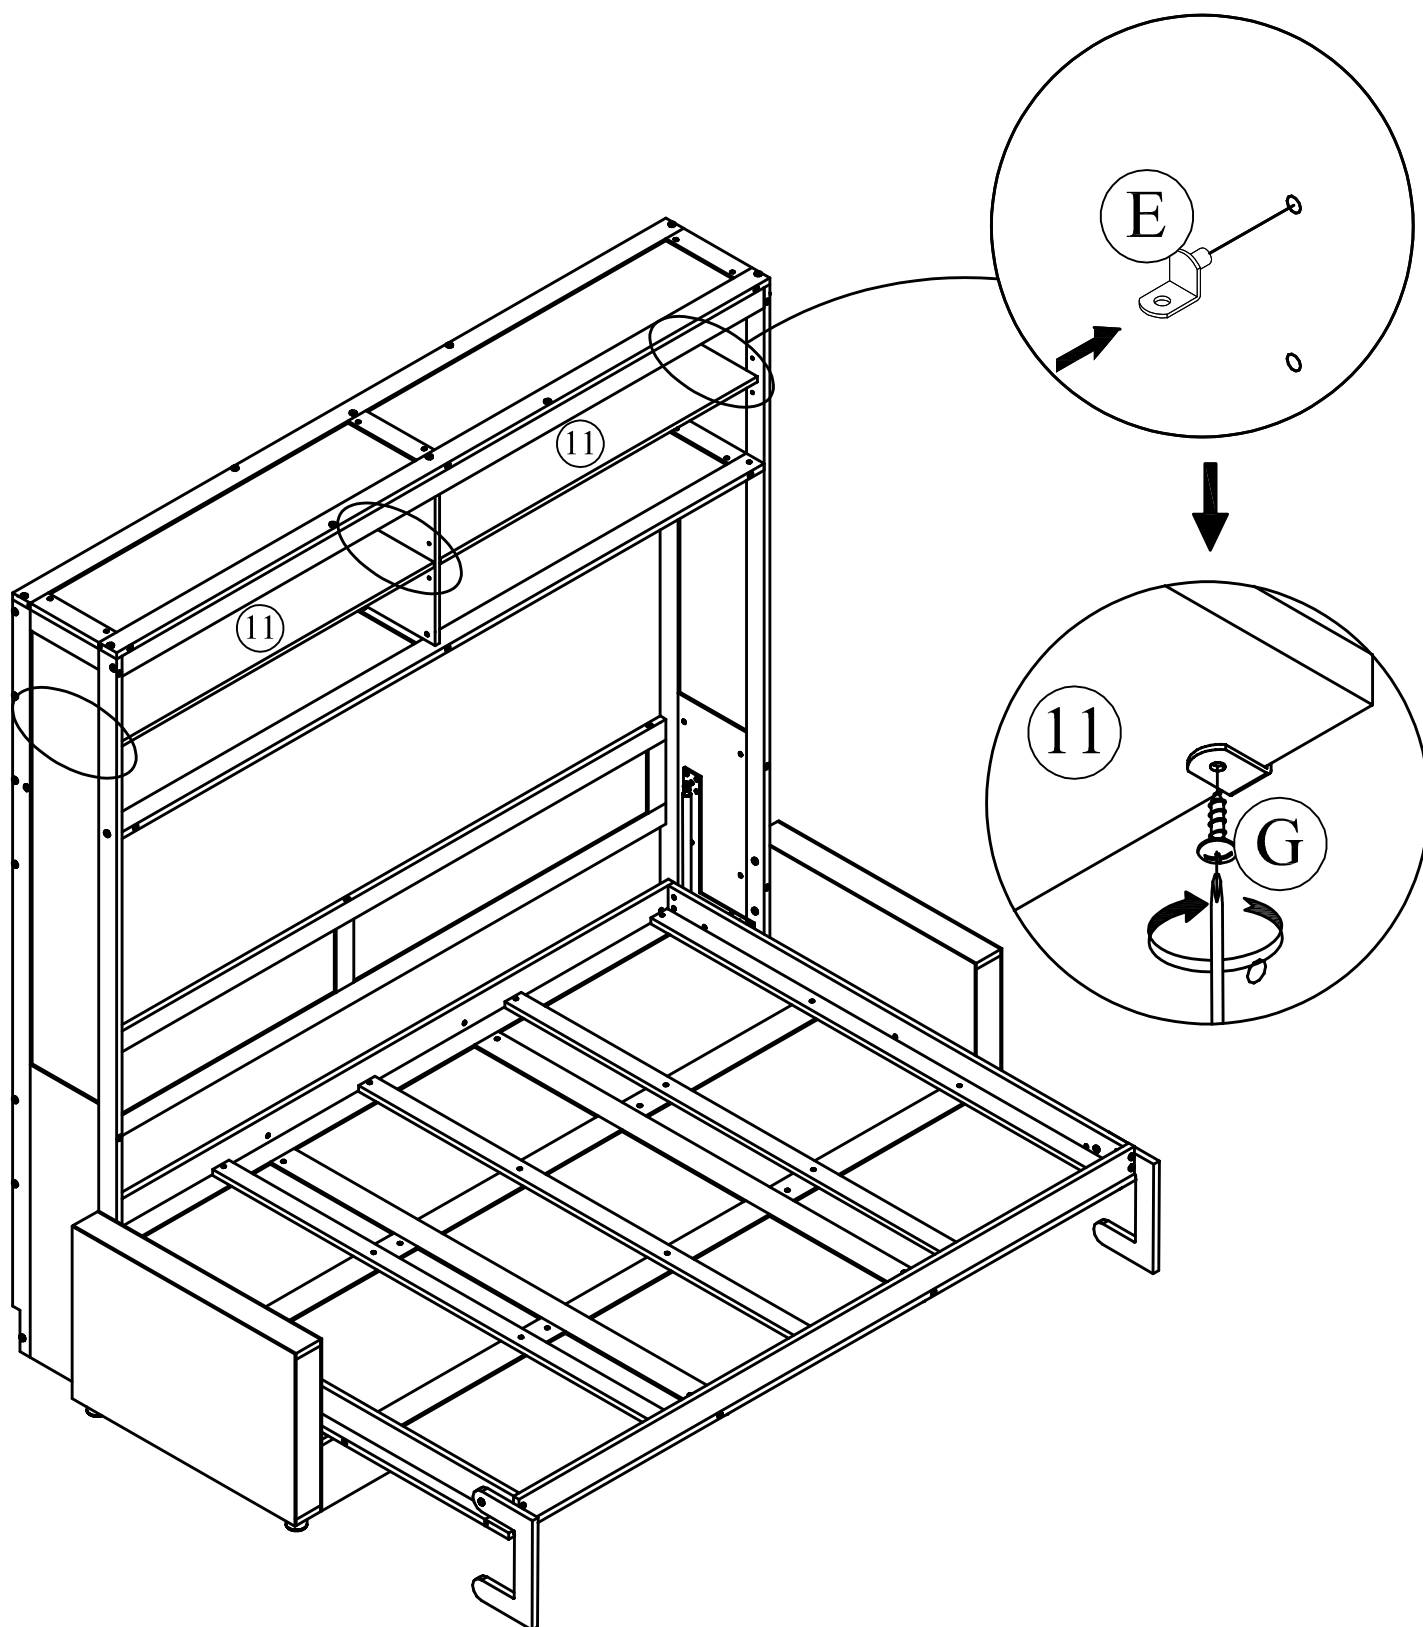

STEP 34: Following below illustration:

ÉTAPE 34: Illustration ci-dessous :


G	C1-A	C1-B	T
			
6pcs	1pc	1pc	4pcs

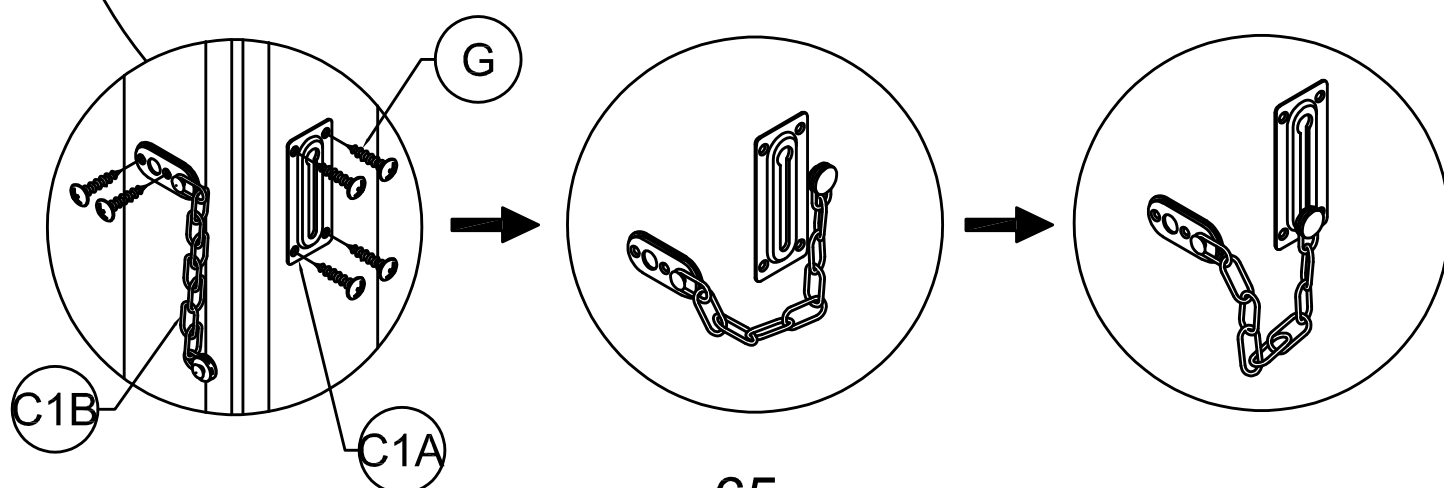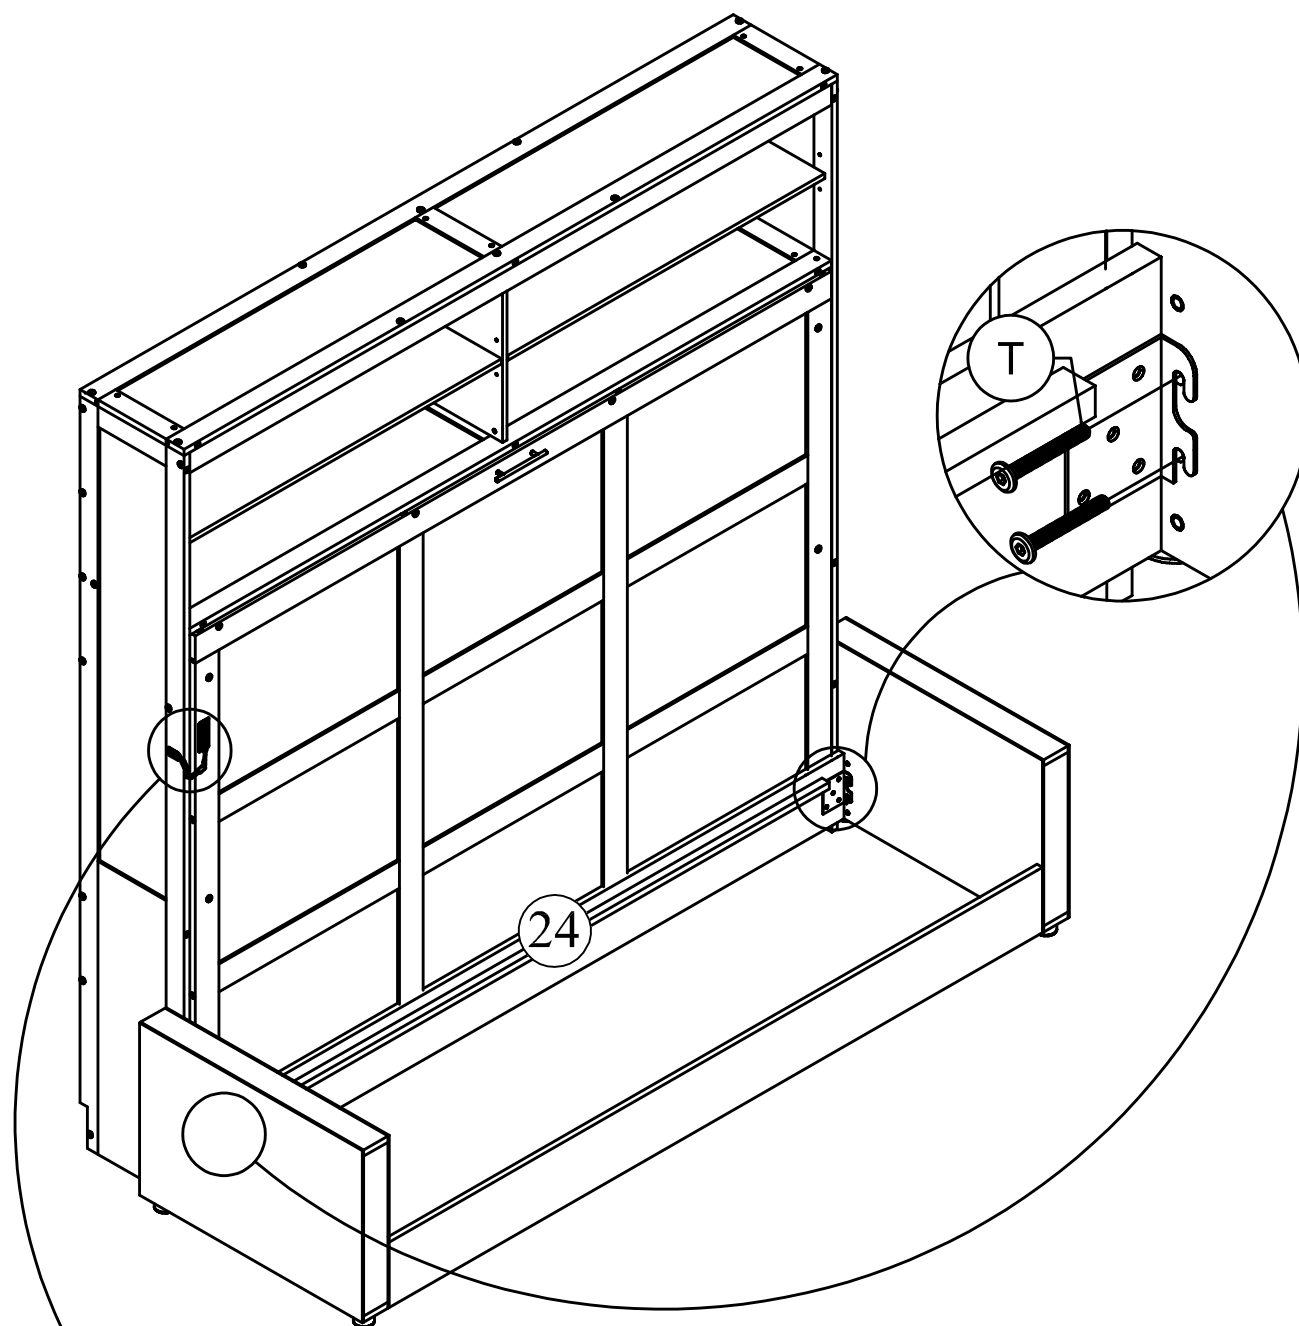

STEP 35: Following below illustration:

ÉTAPE 35: Illustration ci-dessous :

X	K	D1
		
3pcs	32pcs	6pcs

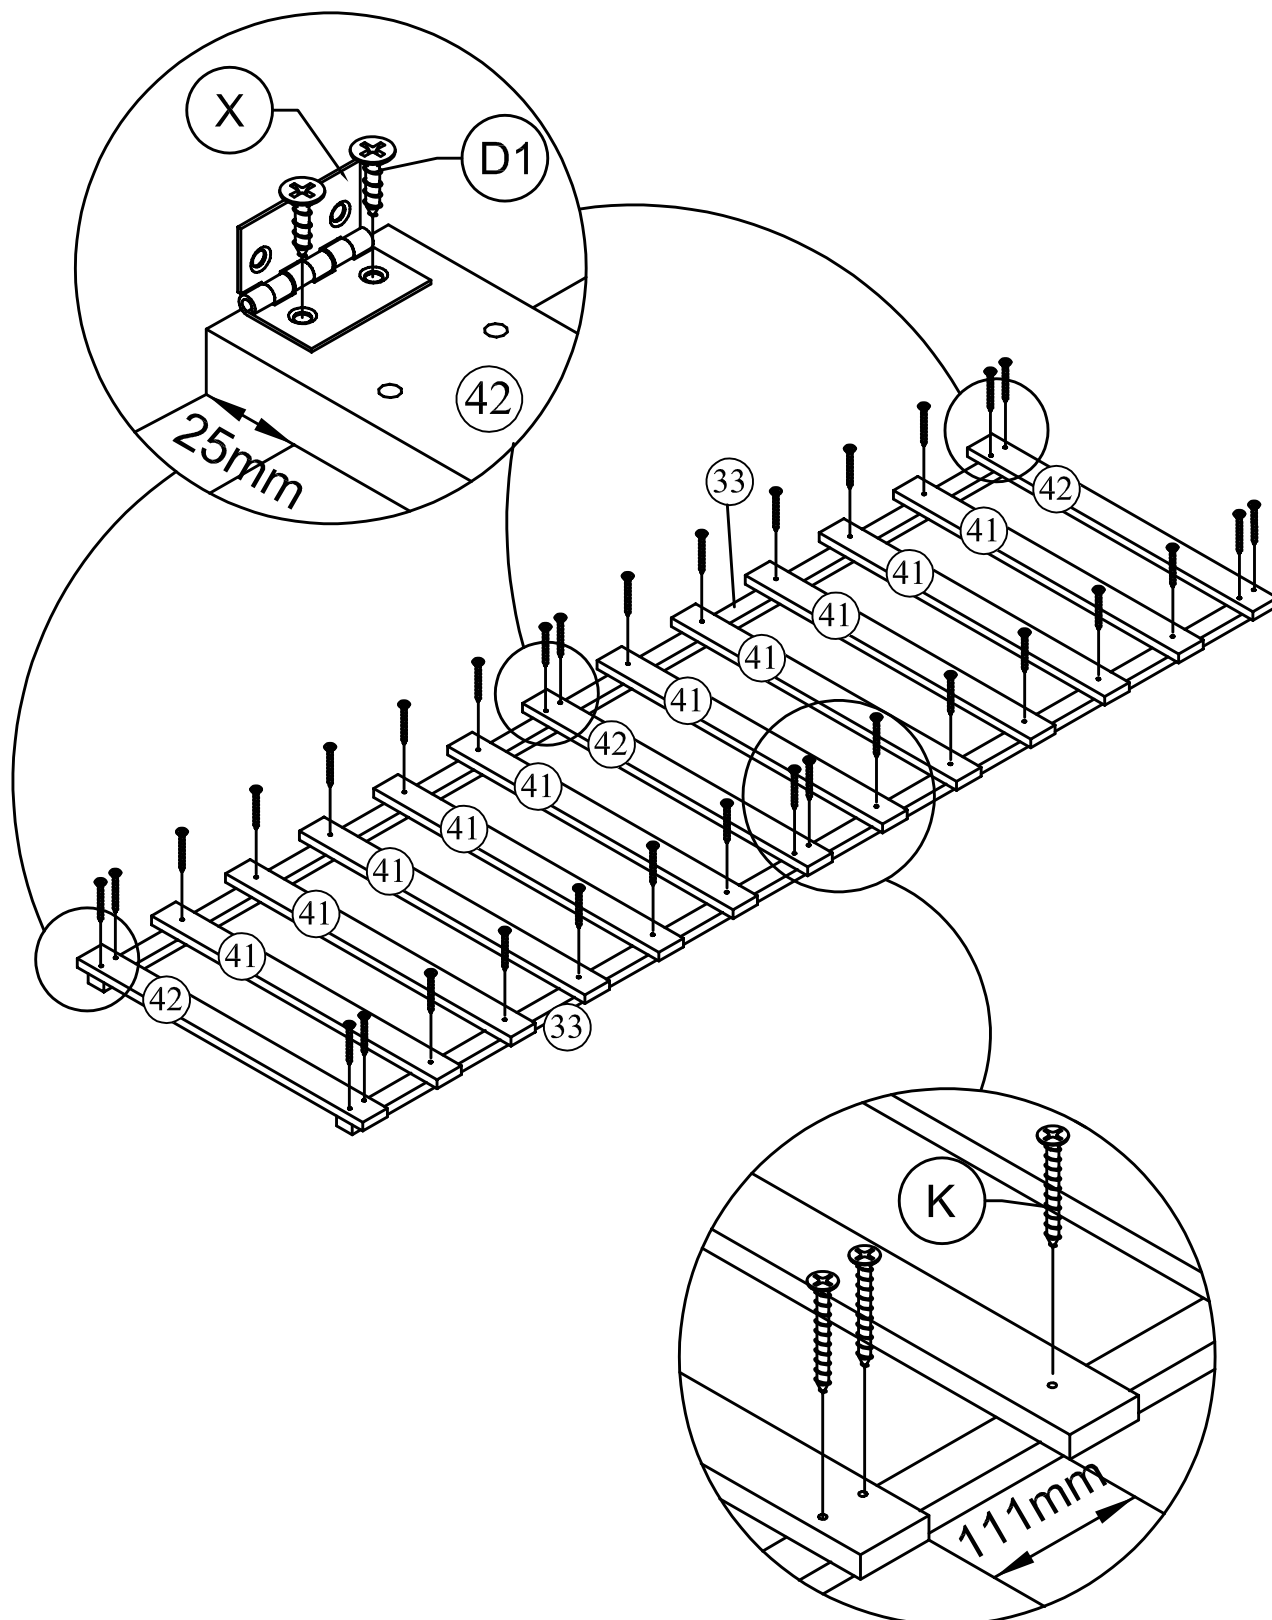


STEP 36: Following below illustration:

ÉTAPE 36: Illustration ci-dessous :

D1






6pcs

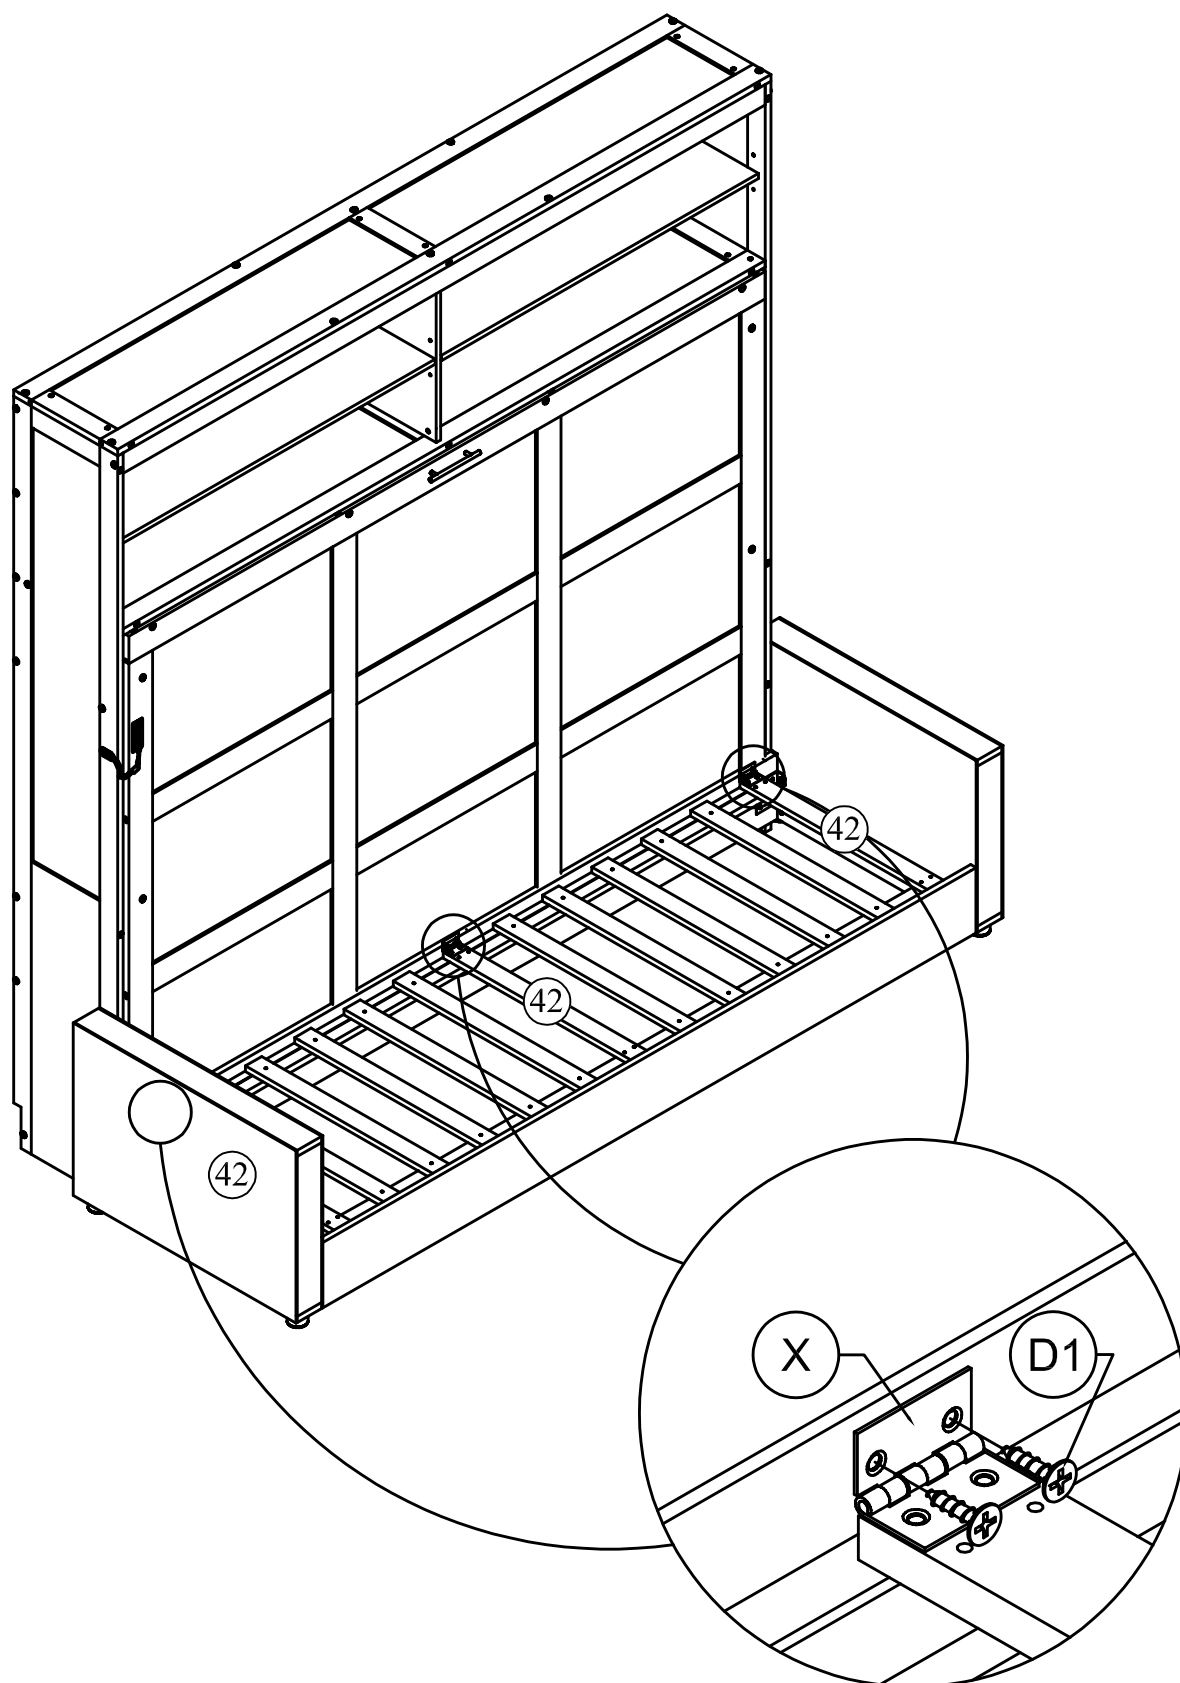


STEP 37: Following below illustration:

ÉTAPE 37: Illustration ci-dessous :

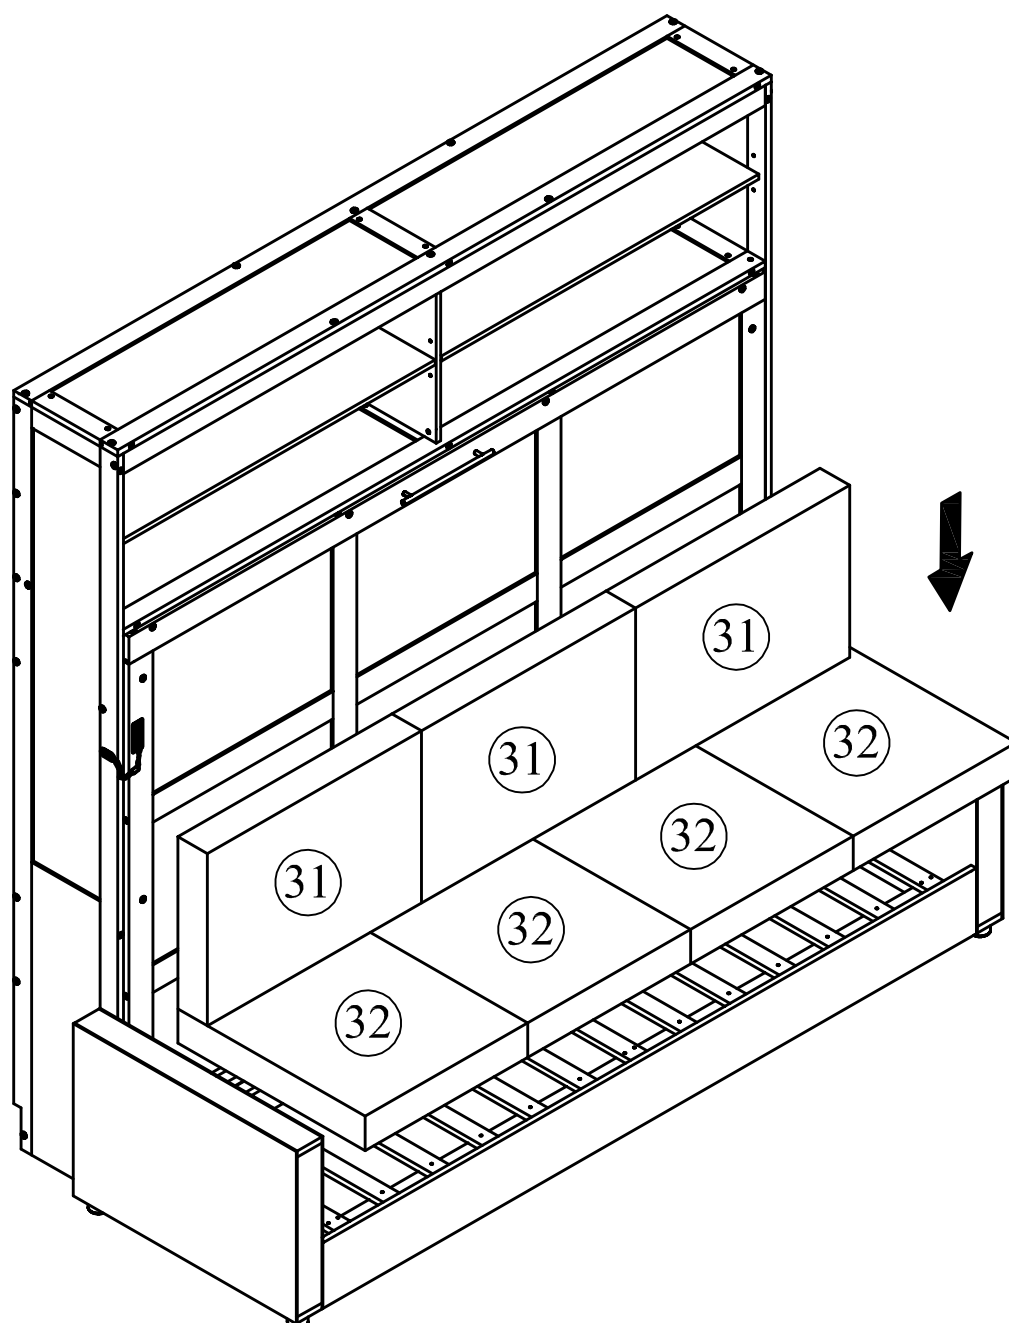

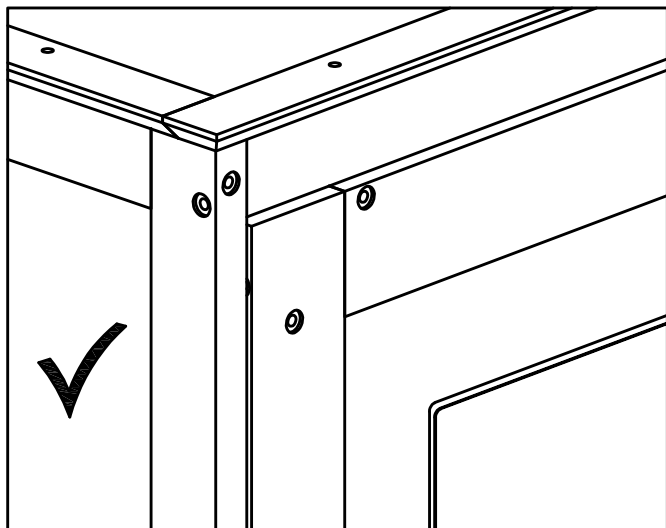
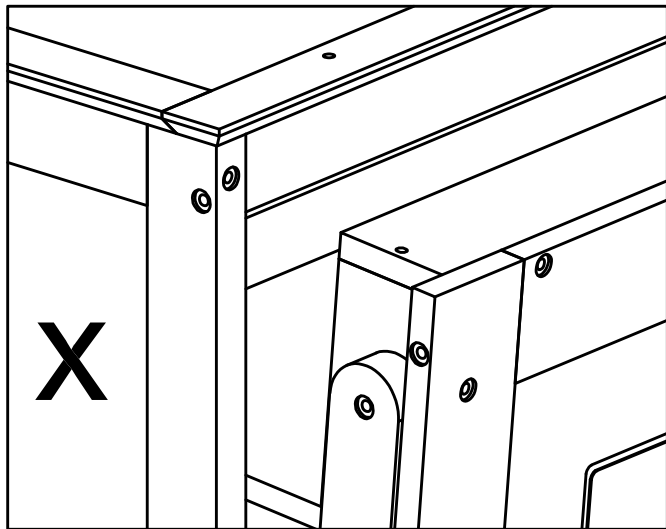


X

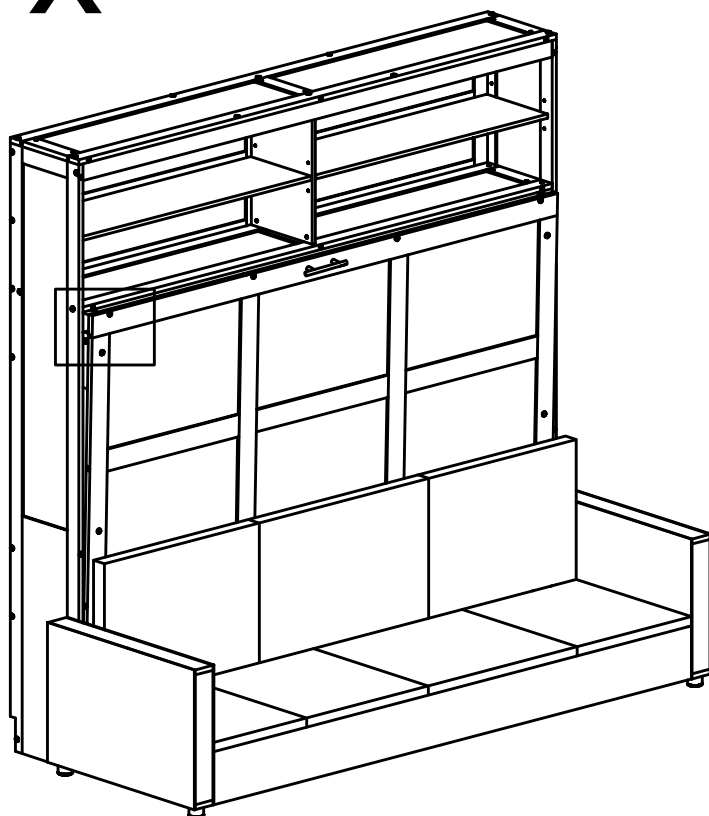

NOTED


ADJUSTABLE ACCESSORIES.
PLEASE FOLLOW THE INSTRUCTIONS
SO THAT THE DETAILS CAN BE
IN THE CORRECT POSITION AS DESIRED

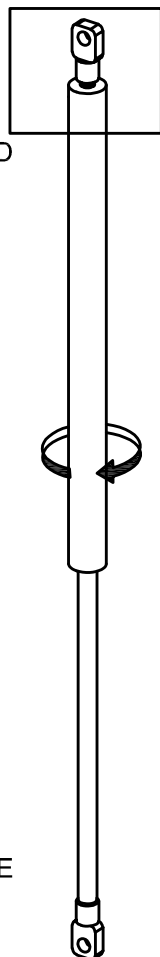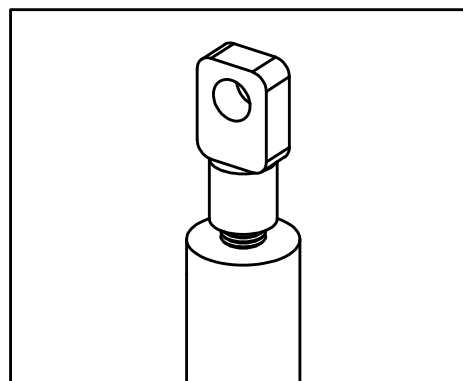


RENOMMÉ


ACCESSOIRES RÉGLABLES. VEUILLEZ
SUIVRE LE
INSTRUCTIONS POUR QUE LES
DÉTAILS PUISSENT ÊTRE DANS LE
POSITION CORRECTE COMME VOUS LE
SOUHAITEZ

✓

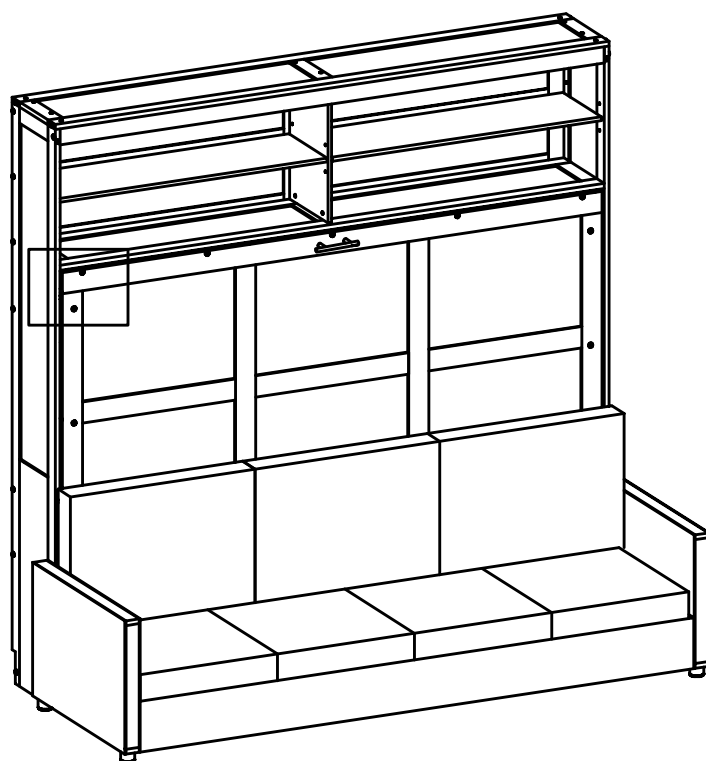


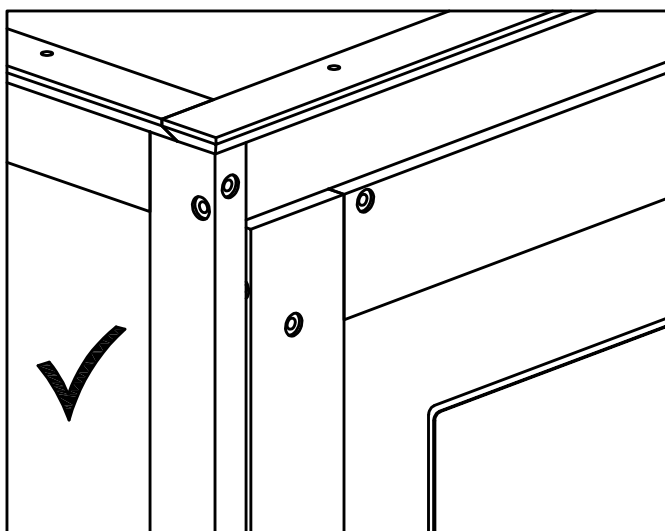


X

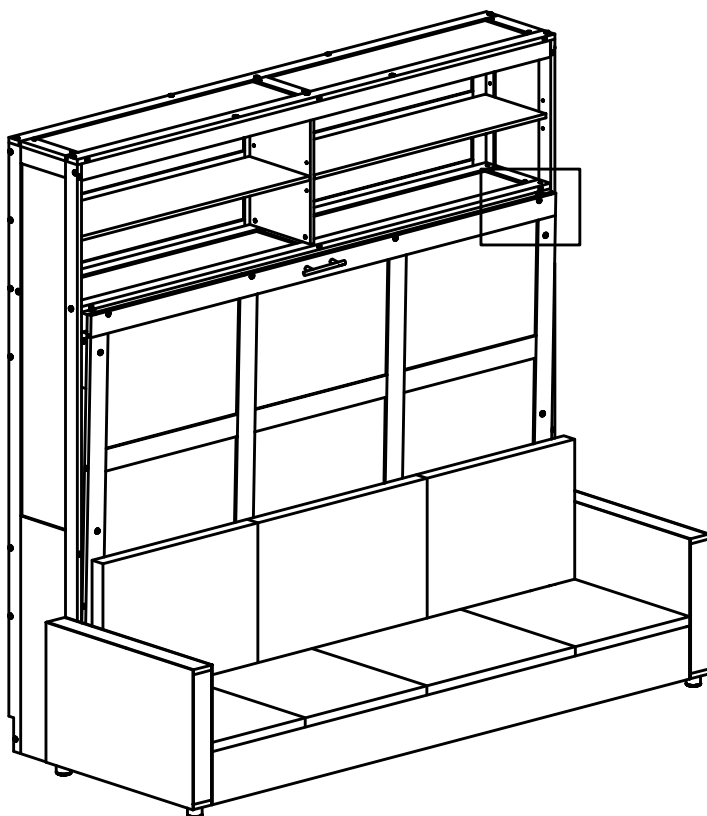

NOTED


ADJUSTABLE ACCESSORIES.
PLEASE FOLLOW THE INSTRUCTIONS
SO THAT THE DETAILS CAN BE
IN THE CORRECT POSITION AS DESIRED

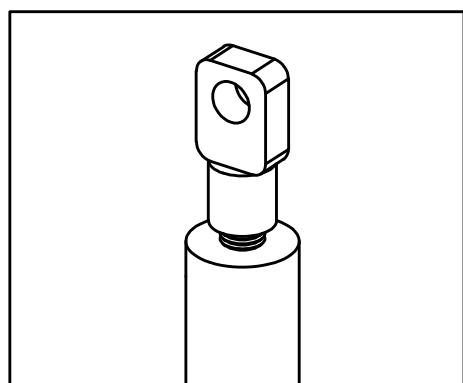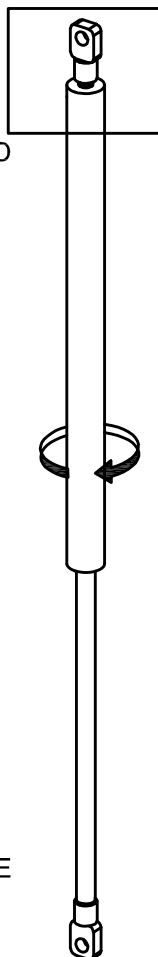

RENOMMÉ

ACCESSOIRES RÉGLABLES. VEUILLEZ
SUIVRE LE
INSTRUCTIONS POUR QUE LES
DÉTAILS PUISSENT ÊTRE DANS LE
POSITION CORRECTE COMME VOUS LE
SOUHAITEZ

✓

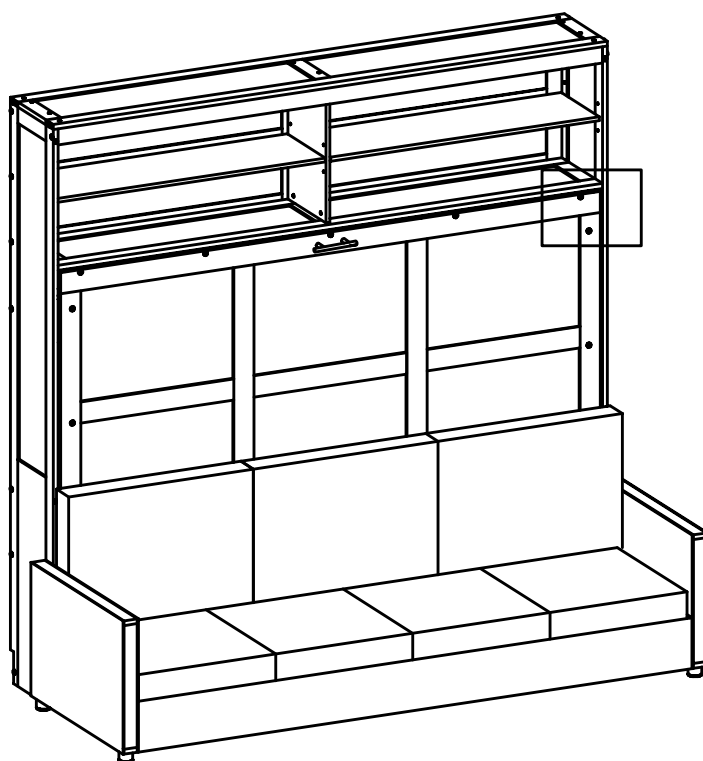

FINISH FINITION

