


Portman Headboard Assembly Instructions

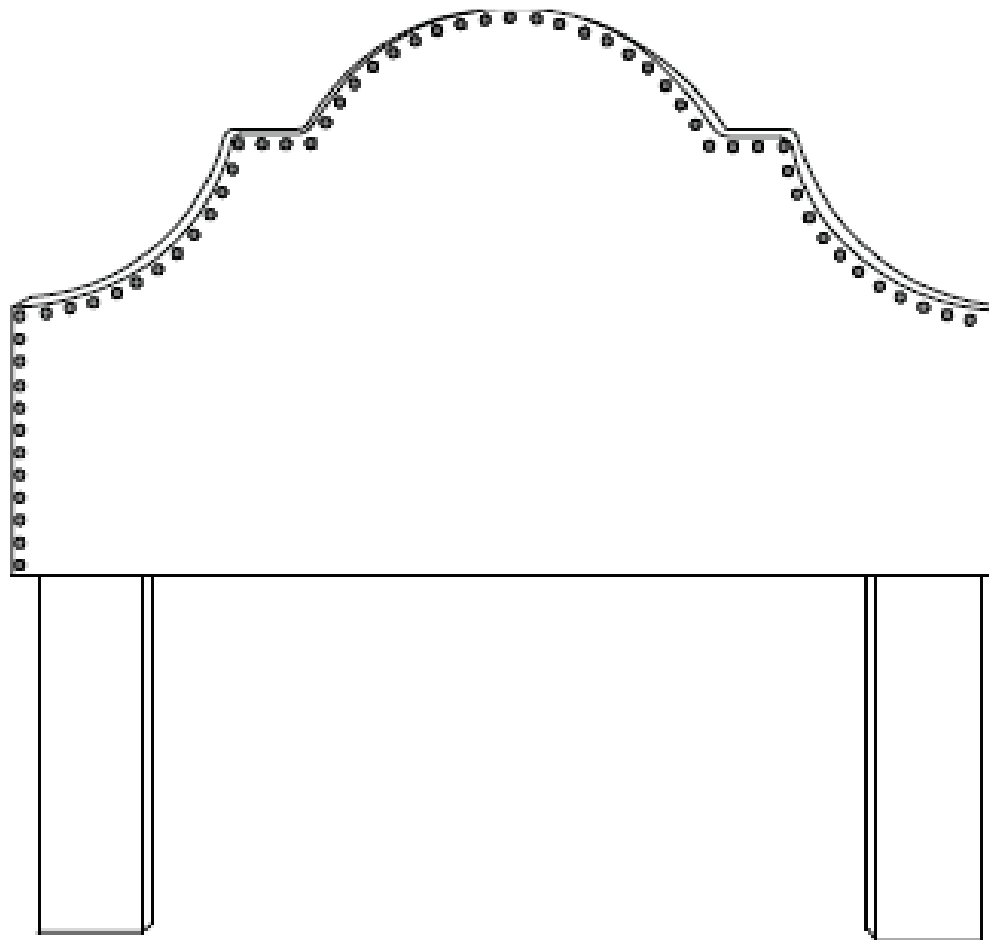


Republic Design House

Portman Headboard Assembly Instructions

NOTE: Place all parts on a clean and smooth surface (rug, carpet) to avoid the parts from being scratched.

NOTE: Follow assembly instructions step by step.


NOTE: Do not completely tighten screws until the headboard is fully set up.

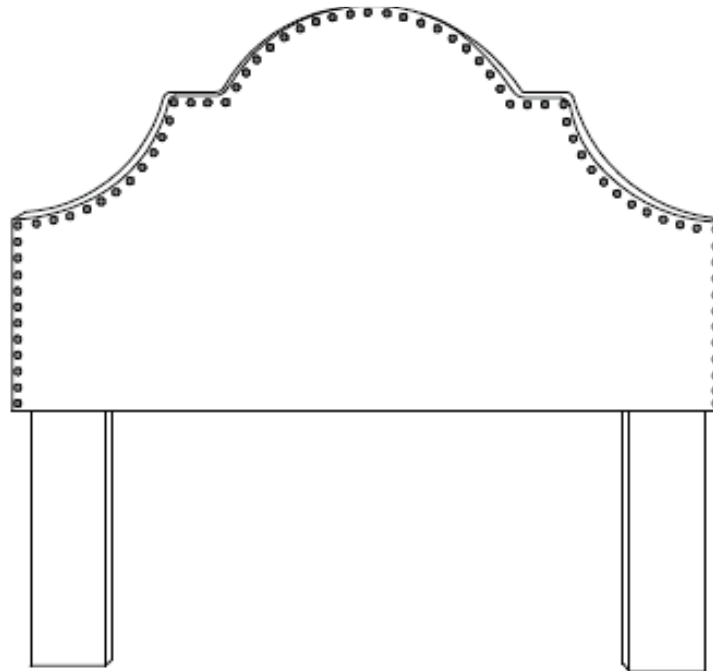


Republic Design House

Portman Headboard Assembly Instructions

PART LIST:

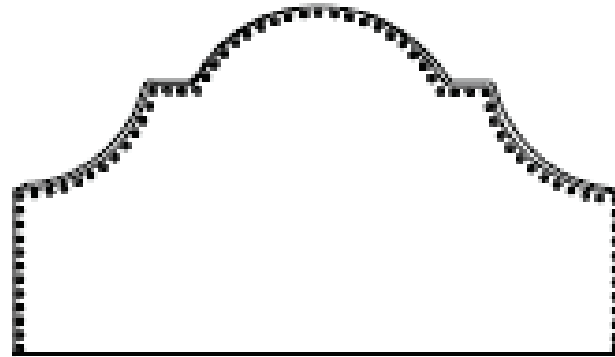

① Headboard 1pc

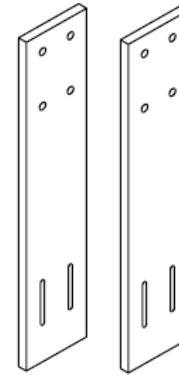

② Legs 2pcs


HARDWARE LIST:

LABEL	PICTURE	DESCRIPTION	QTY	LABEL	PICTURE	DESCRIPTION	QTY
A		2" BOLT M8	8	C		M8 FLAT WASHER	16
B		M8 ALLEN WRENCH	1	D		M8 LOCK WASHER	8
E		HEX NUT (to attach headboard to metal bed frame)	4	F		2-1/2" BOLT M8 (to attach headboard to metal bed frame)	4

Republic Design House

Portman Headboard Assembly Instructions

STEP 1: Remove legs and hardware from behind the headboard.
(See below diagram)


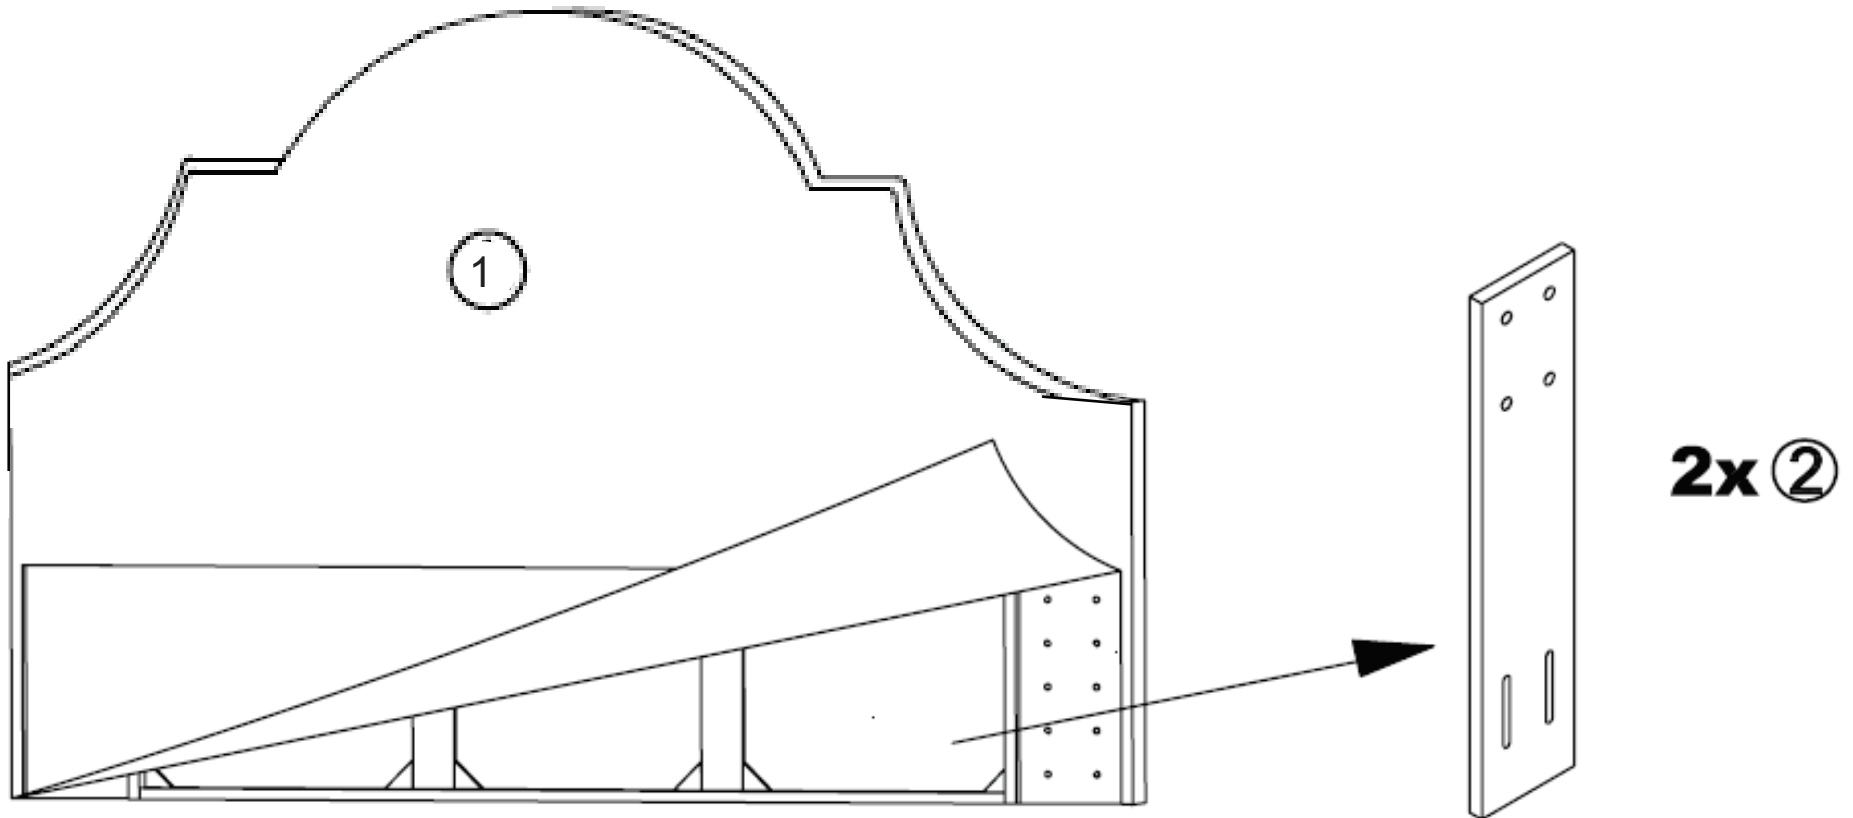


Republic Design House


Portman Headboard Assembly Instructions

STEP 2: Using the provided hardware, attach legs to headboard.
(See below diagram)


Use the different hole patterns to customize the desired height of the headboard.

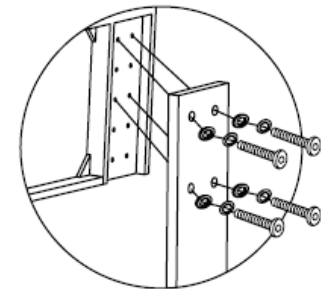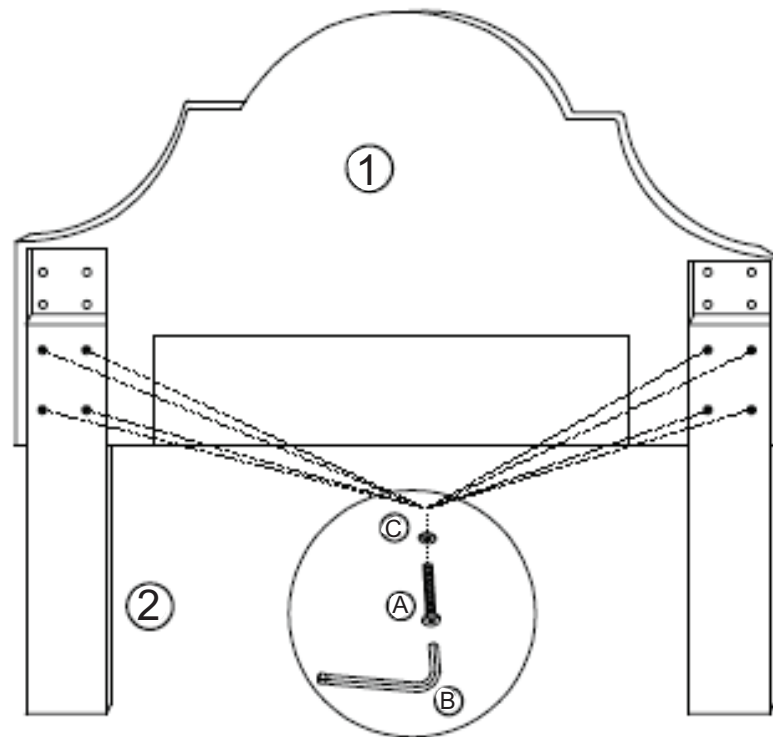

54"

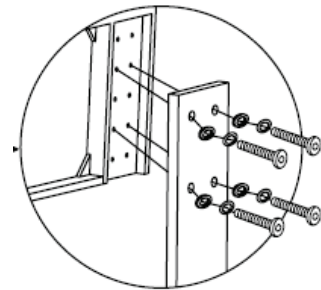

57"

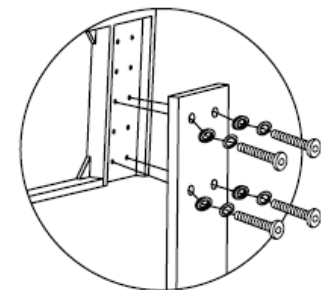


60"

Republic Design House

Portman Headboard Assembly Instructions

STEP 3: After all bolts have been tightened, re-apply velcro backing.

STEP 4: After headboard is fully assembled, align slots at the bottom of headboard legs with attachment holes on metal bedframe, use the provided 2-1/2" bolts, washers & hex nuts to attach headboard to metal bed frame.

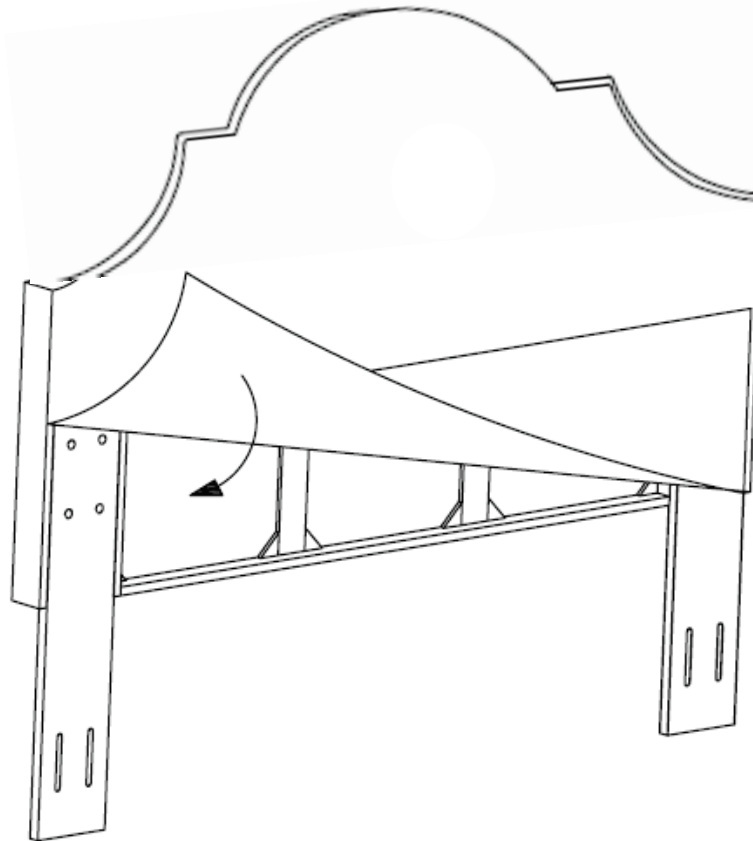

Republic Design House
