



ASSEMBLY INSTRUCTIONS


PARTS:

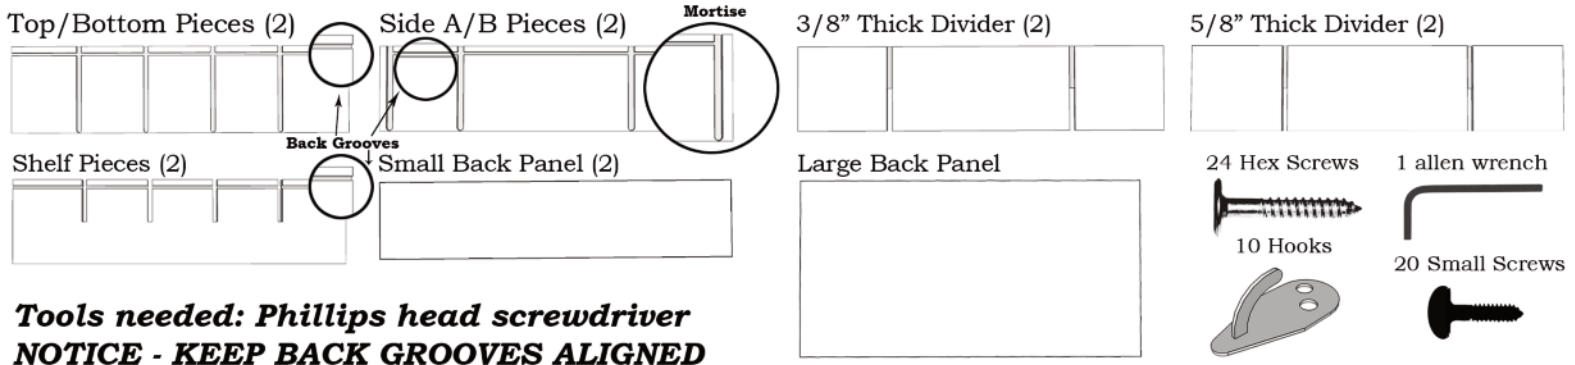

Tools needed: Phillips head screwdriver
NOTICE - KEEP BACK GROOVES ALIGNED

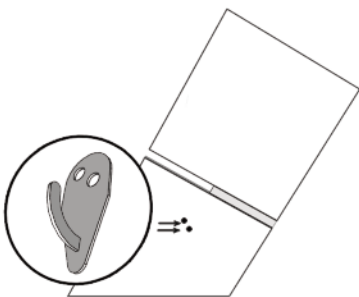


Step 1: Attach hooks to divider pieces by using Phillip's head screwdriver to screw small screws into pre-drilled holes before assembling unit. Make sure hooks are pointed upwards toward the shortest end of the divider panel as seen in illustration.

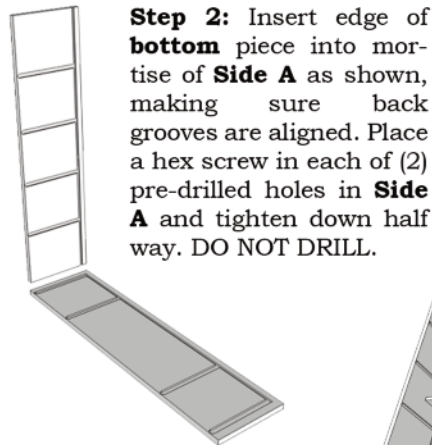


Step 2: Insert edge of **bottom** piece into mortise of **Side A** as shown, making sure back grooves are aligned. Place a hex screw in each of (2) pre-drilled holes in **Side A** and tighten down half way. **DO NOT DRILL.**


Step 3: Insert edge of one of the 5/8" thick dividers (end without hook) into one of the two center mortises of bottom piece. Make sure that the notches of divider face away from back grooves of **bottom** and **Side A**. Place a hex screw in each of (2) pre-drilled holes in **bottom** piece and tighten down half way. **DO NOT DRILL.**

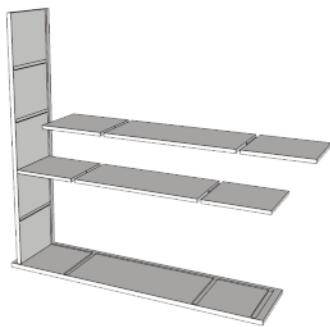


Step 4: Insert edge of other 5/8" divider (end without hook) into second center mortise of **bottom** piece. Make sure that the notches of divider face away from back grooves of **bottom** and **Side A**. Place a hex screw in each of (2) pre-drilled holes in **bottom** piece and tighten down half way. **DO NOT DRILL.**

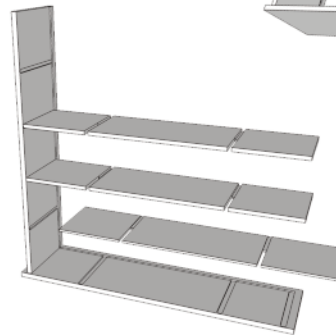

Step 5: Insert edge of one 3/8" thick divider (end without hook) into one of the remaining mortises of **bottom** piece. Make sure that the notches of divider face away from back grooves of **bottom** and **Side A**.

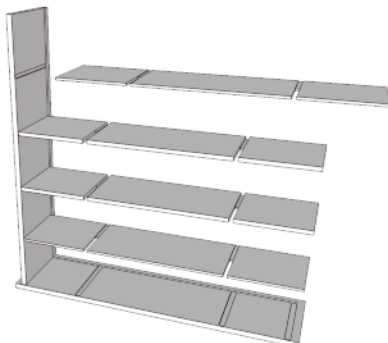


Step 6: Insert edge of final 3/8" divider (end without hook) into remaining mortise of **bottom** piece. Make sure that notches of divider face away from back grooves of **bottom** and **Side A**. **DO NOT DRILL.**

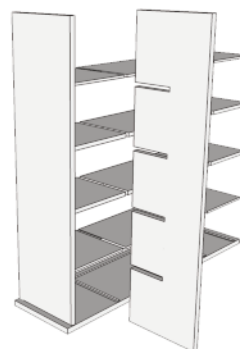


Step 7: Insert **bottom shelf** parallel to **bottom** piece, fitting the grooves of **bottom shelf** into grooves of dividers. Make sure back grooves are aligned. Edge of shelf should be inserted into mortise of **Side A**. Insert hex screws into (2) pre-drilled holes in **Side A** and tighten down half way. **DO NOT DRILL.**


ASSEMBLY INSTRUCTIONS

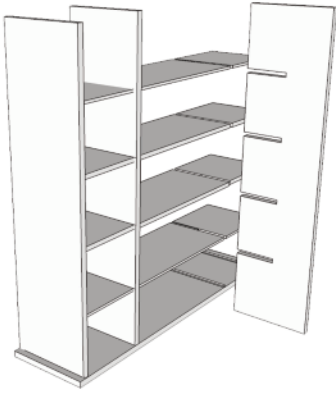

Step 8: Insert **top shelf** parallel to **bottom shelf**, fitting the grooves of **top shelf** into remaining grooves of dividers. Make sure back grooves are aligned. Edge of shelf should be inserted into remaining mortise of **Side A**. Insert hex screws into (2) pre-drilled holes in **Side A** and tighten down half way. **DO NOT DRILL.**

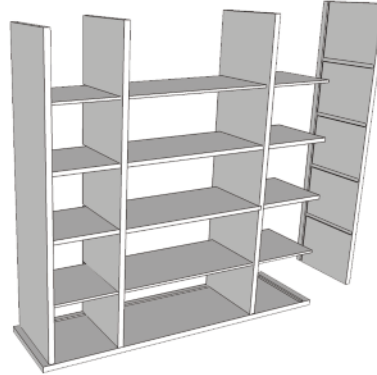


Step 9: Insert edge of **top piece** into remaining mortise of **Side A** aligning back grooves. Insert edges of each divider into the corresponding mortise on **top piece**. Insert hex screws into (4) pre-drilled holes of **top piece** and tighten down half way. **DO NOT DRILL.**

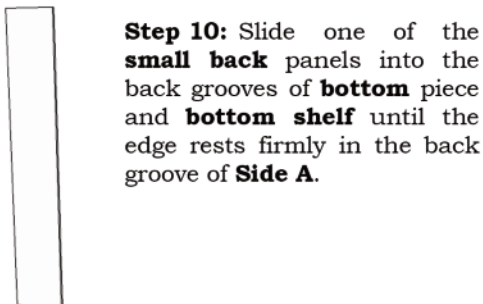

Step 10: Slide one of the **small back** panels into the back grooves of **bottom piece** and **bottom shelf** until the edge rests firmly in the back groove of **Side A**.




Step 11: Slide **large back** panel into the back grooves of **bottom shelf** and **top shelf** until the edge rests firmly in the back groove of **Side A**.

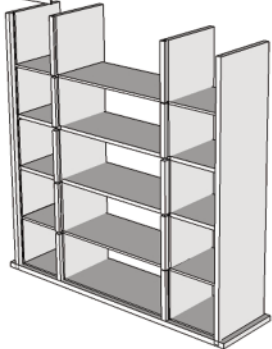

Step 12: Slide remaining **small back** panel into the back grooves of **top piece** and **top shelf** until the edge rests firmly in the back groove of **Side A**.



Step 13: Fit **Side B** over edges of the assembled pieces, inserting edges of **bottom piece**, **bottom shelf**, **top shelf** and **top piece** into mortises of **Side B**. Make sure that back panels fit into back grooves of **Side B**. Insert hex screws into each of (8) pre-drilled holes on **Side B** and tighten down half way. **DO NOT DRILL.**

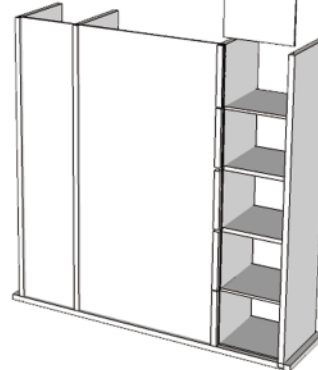

Step 14: Finish tightening all hex screws. **DO NOT OVER TIGHTEN. DO NOT DRILL.** Stand unit upright so that it is resting on **bottom piece** and the edges of **Side A** and **B**. Assembly is complete.

