


# Installation Instructions

V1.0

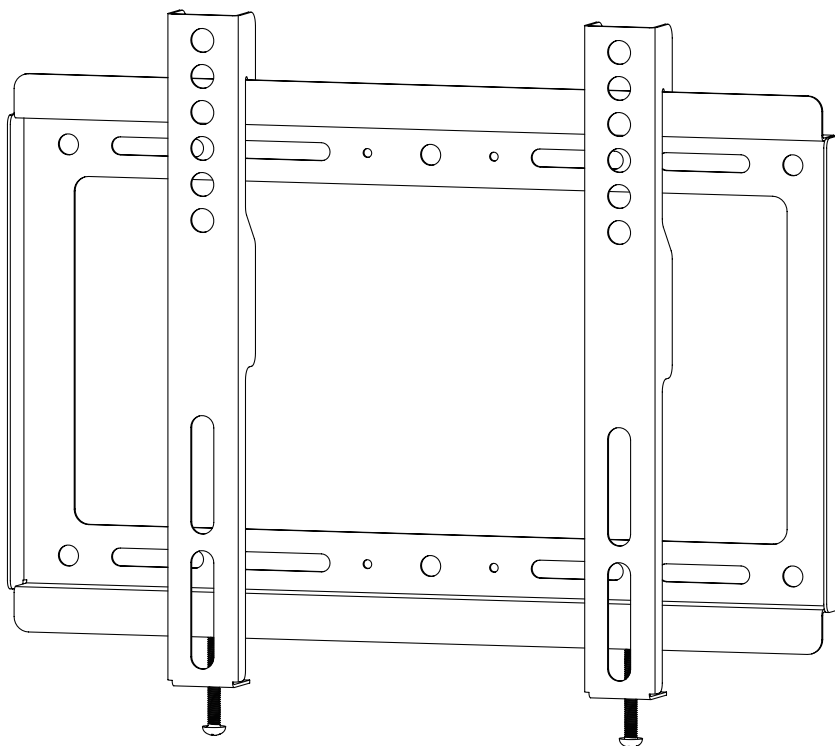

**PISL2**

Thank you for choosing our product! We strive to provide the best quality and services for our customers. Would you kindly share your experience on Amazon if you are satisfied? Should you have any issues, please don't hesitate to contact us.

Telephone: 800-556-9829 Mon-Fri 10am – 6pm (PST) (USA) (CAN)

Email: [supportus@pipishell.net](mailto:supportus@pipishell.net) (US/CA/DE/UK/FR/IT/ES/JP/AU)

## IMPORTANT SAFETY INFORMATION

- Check package contents against Supplied Parts and Hardware Lists to assure that all components were received undamaged. Do not use damaged or defective parts.If you require replacement parts, contact customer service at supportus@pipishell.net
- Not all parts and hardware included will be used.
- Carefully read all instructions before attempting installation.If you do not understand the instructions or have any concerns or questions, please contact customer service at supportus@pipishell.net
- This product may contain moving parts. Use with caution.
- Do not use this product for any purpose or in any configuration not explicitly specified in this instruction. We hereby disclaim any liability for injury or damage arising from incorrect assembly, incorrect mounting, or incorrect use of this product.
- DO NOT INSTALL INTO DRYWALL ALONE.

## Tools Needed (Not Included)




Stud Finder



Tape measure



Pencil



Drill



Hammer



Wood Drill



Concrete Drill



socket wrench




Screwdriver




level

## Supplied Parts

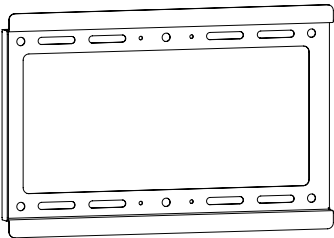

Wall Plate **01** x1



TV Brackets **02** x2

Supplied Hardware

Hardware for Attaching TV Bracket to TV

03 Washers



x4  
M4



x4  
M6


04 Spacers



x4  
2.5mm



x4  
5mm



x4  
10mm

05 TV Screws



M4 M4X16mm x4



M4X30mm x4



M6 M6X16mm x4




M6X30mm x4



M8 M8 x 25mm x4

Hardware for Attaching Wall Plate to Wall

Lag Bolts  
M6X50



x4

A1

Wall Anchor



x4

A2



CAUTION!

These anchors are for concrete or brick walls ONLY. DO NOT use them in drywall or wood studs.

## Step 1 Select TV Screws

Only one screw size fits your TV.


M4



M6




M8

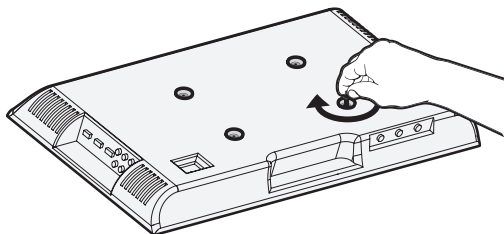


## Step 2 Select Spacers (If Needed)

### a NO SPACER

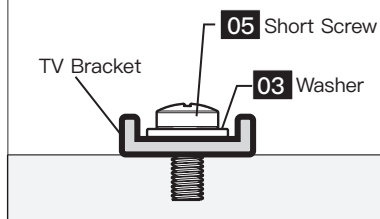


For Flat TV

Spacer not necessary

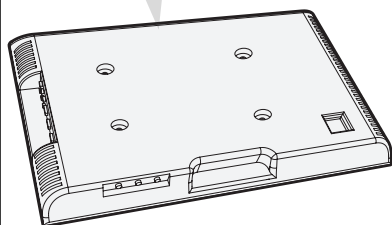

### b SPACER



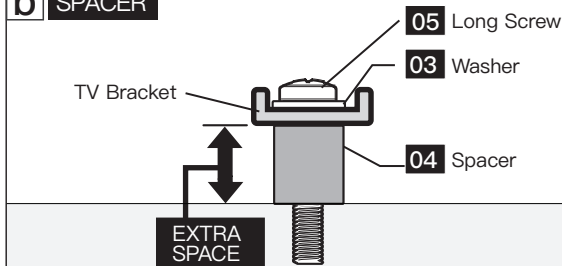


For Flat TV with:

Inset Holes

Cable Interference


For Rounded TV

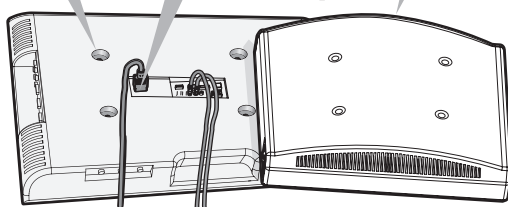

Too Short




Too Long



### Step 3

### Secure the TV Brackets to Your TV

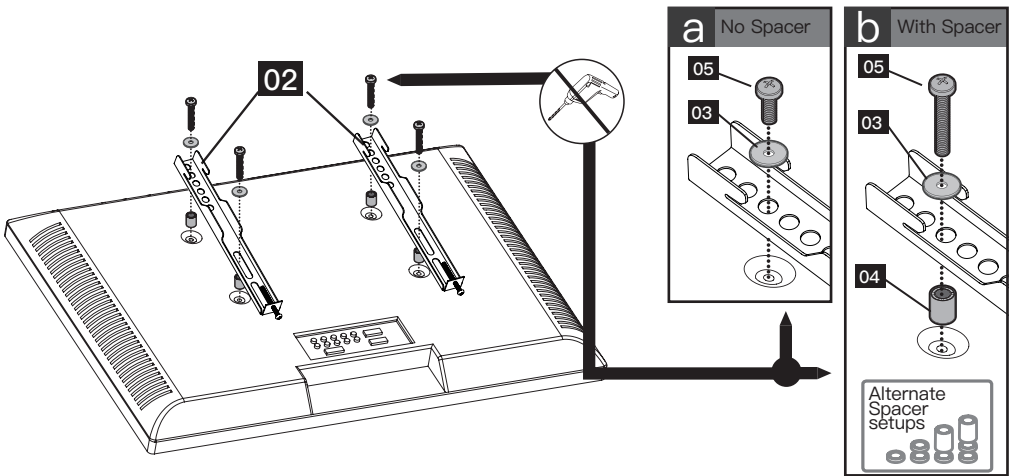

### Step 4

### Attach Wall Plate to Wall

For wood stud installation, follow STEP 4A

For concrete installation, follow STEP 4B

#### Step 4A

#### Wood Stud Option

#### ⚠ WARNING:


● Avoid potential personal injury or property damage! DO NOT over-tighten the lag bolts [A1]. Tighten the lag bolts [A1] only until they are pulled firmly against the wall plate [01].

● Ensure the wall plate is securely fastened to the wall before continuing on to the next step.




- Any material covering the wall must not exceed 5/8 in. (16 mm)
- Nominal wood stud size: common 2 x 4 in. (51 x 102 mm) minimum 1½ x 3½ in. (38 x 89 mm)
- Stud center must be verified

4A-1

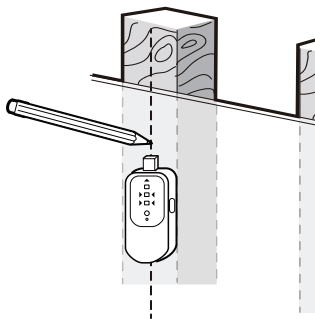



Use a stud finder(not included)to locate wood studs. Mark the edge and center locations.

4A-2

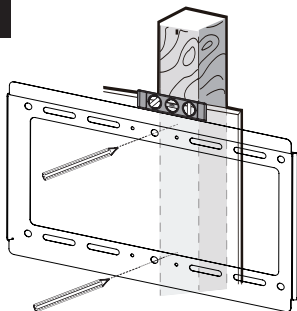


Position the wall plate at your desired height and line up the holes with your stud center line. Level the wall plate and mark the holes.

4A-3

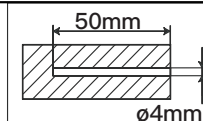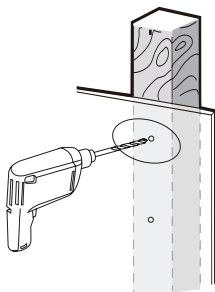

Drill 4 pilot holes using a 4 mm diameter drill bit. Make sure the depth is not less than 50mm.

4A-4

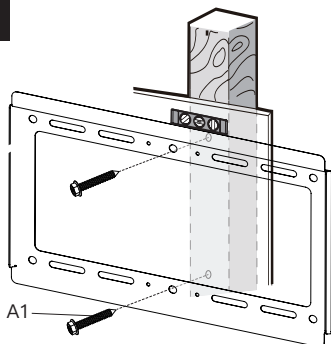

Install the wall plate [01] using lag bolts [A1] . Tighten the lag bolts [A1] only until they are pulled firmly against the wall plate.




Socket Wrench

## Step 4B Solid Concrete or Concrete Block Option

### ⚠ WARNING:


● Avoid potential personal injury or property damage! DO NOT over-tighten the lag bolts [A1]. Tighten the lag bolts [A1] only until they are pulled firmly against the wall plate [01].

● Ensure the wall plate is securely fastened to the wall before continuing on to the next step.

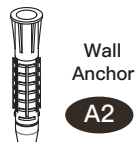


- Any material covering the wall must not exceed 5/8 in. (16 mm)
- Mount the wall plate [01] directly onto the concrete surface
- Minimum solid concrete thickness: 203 mm (8 in.)
- Minimum concrete block size: 203 x 203 x 406 mm (8 x 8 x 16 in.)

### 4B-1

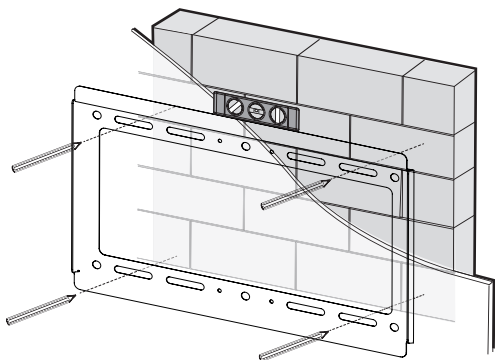



Position the wall plate at your desired height, level the wall plate and mark the pilot hole locations.

### 4B-2

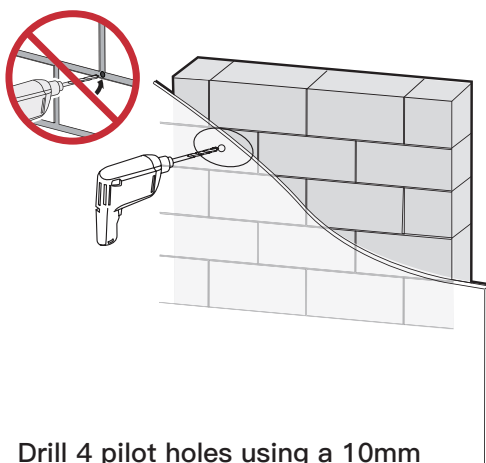


Drill 4 pilot holes using a 10mm diameter drill bit. Make sure the depth is not less than 60mm. Never drill into the mortar between blocks.

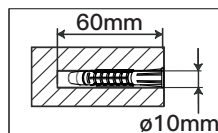

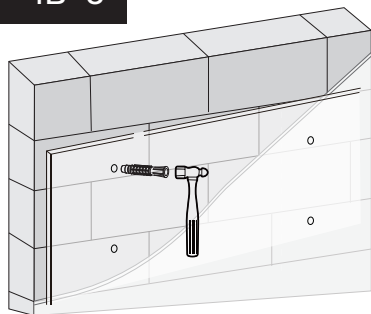

Use the hammer to knock anchors [A2] into the wall.

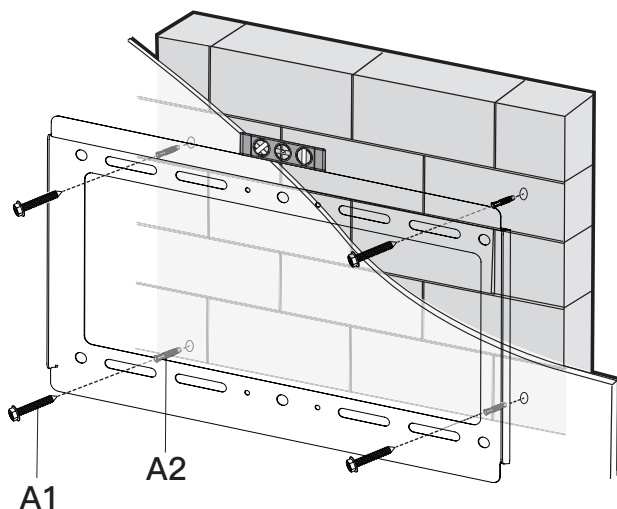

Install wall plate using lag bolts [A1] and anchors [A2]. Be sure the anchors [A2] are seated flush with the concrete surface. Tighten the lag bolts [A1] only until they are pulled firmly against the wall plate. **DO NOT** over-tighten the lag bolts [A1].

## Step 5 Hang the TV onto the Wall Plate

