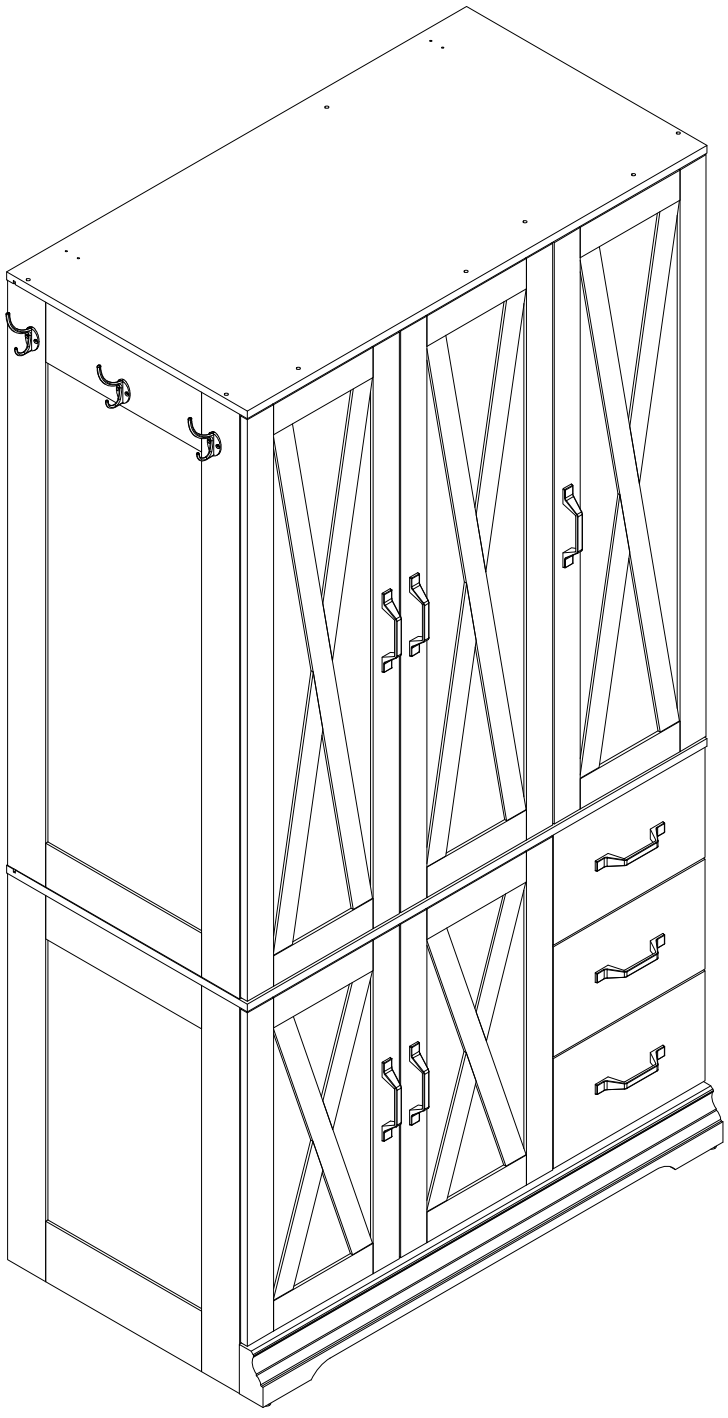


CLOTHES CABINET


User Manual

CATALOG:


Part List.....4-5.
AccessoriesList.....6.
Assemble.....7-28.

Foreword:


Thank you for choosing our product! We hope you have a good shopping experience!
We aim to provide a 100% satisfaction product and customer service.

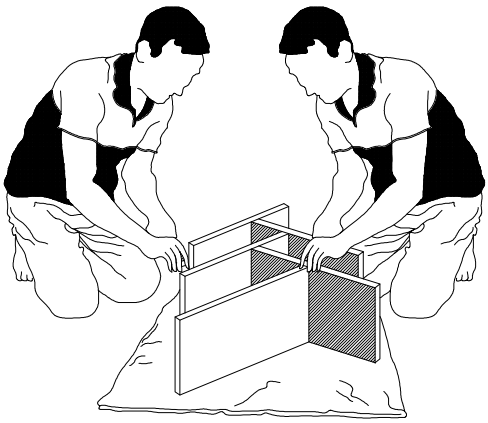

Requires 2 people to assemble the product more easily

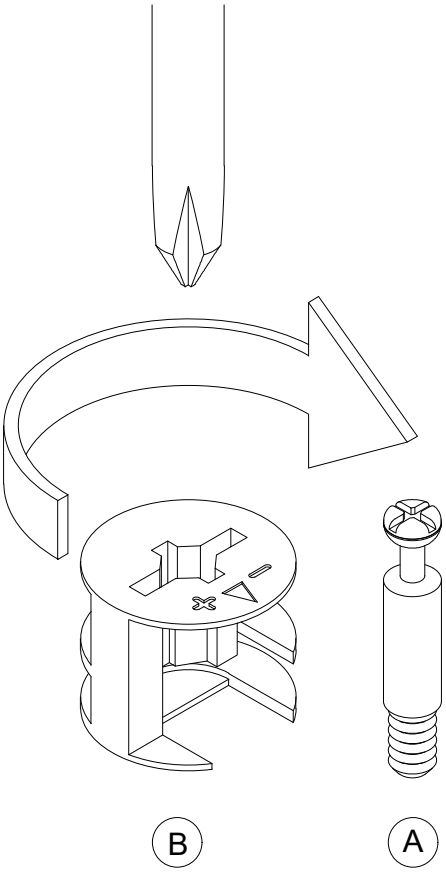

Only slight turn of cams required.
Do **NOT** overturn.

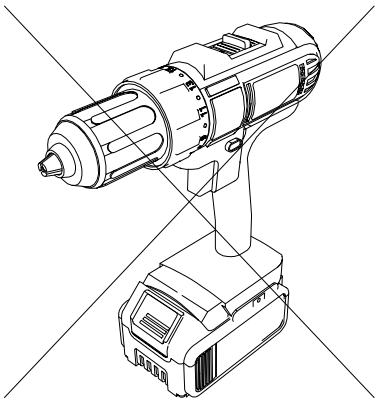


*Power Tool **NOT** Recommended for **A-B** hardware assembly
























TOOL REQUIRED
Phillips Screwdriver





PACKAGE CONTAINS

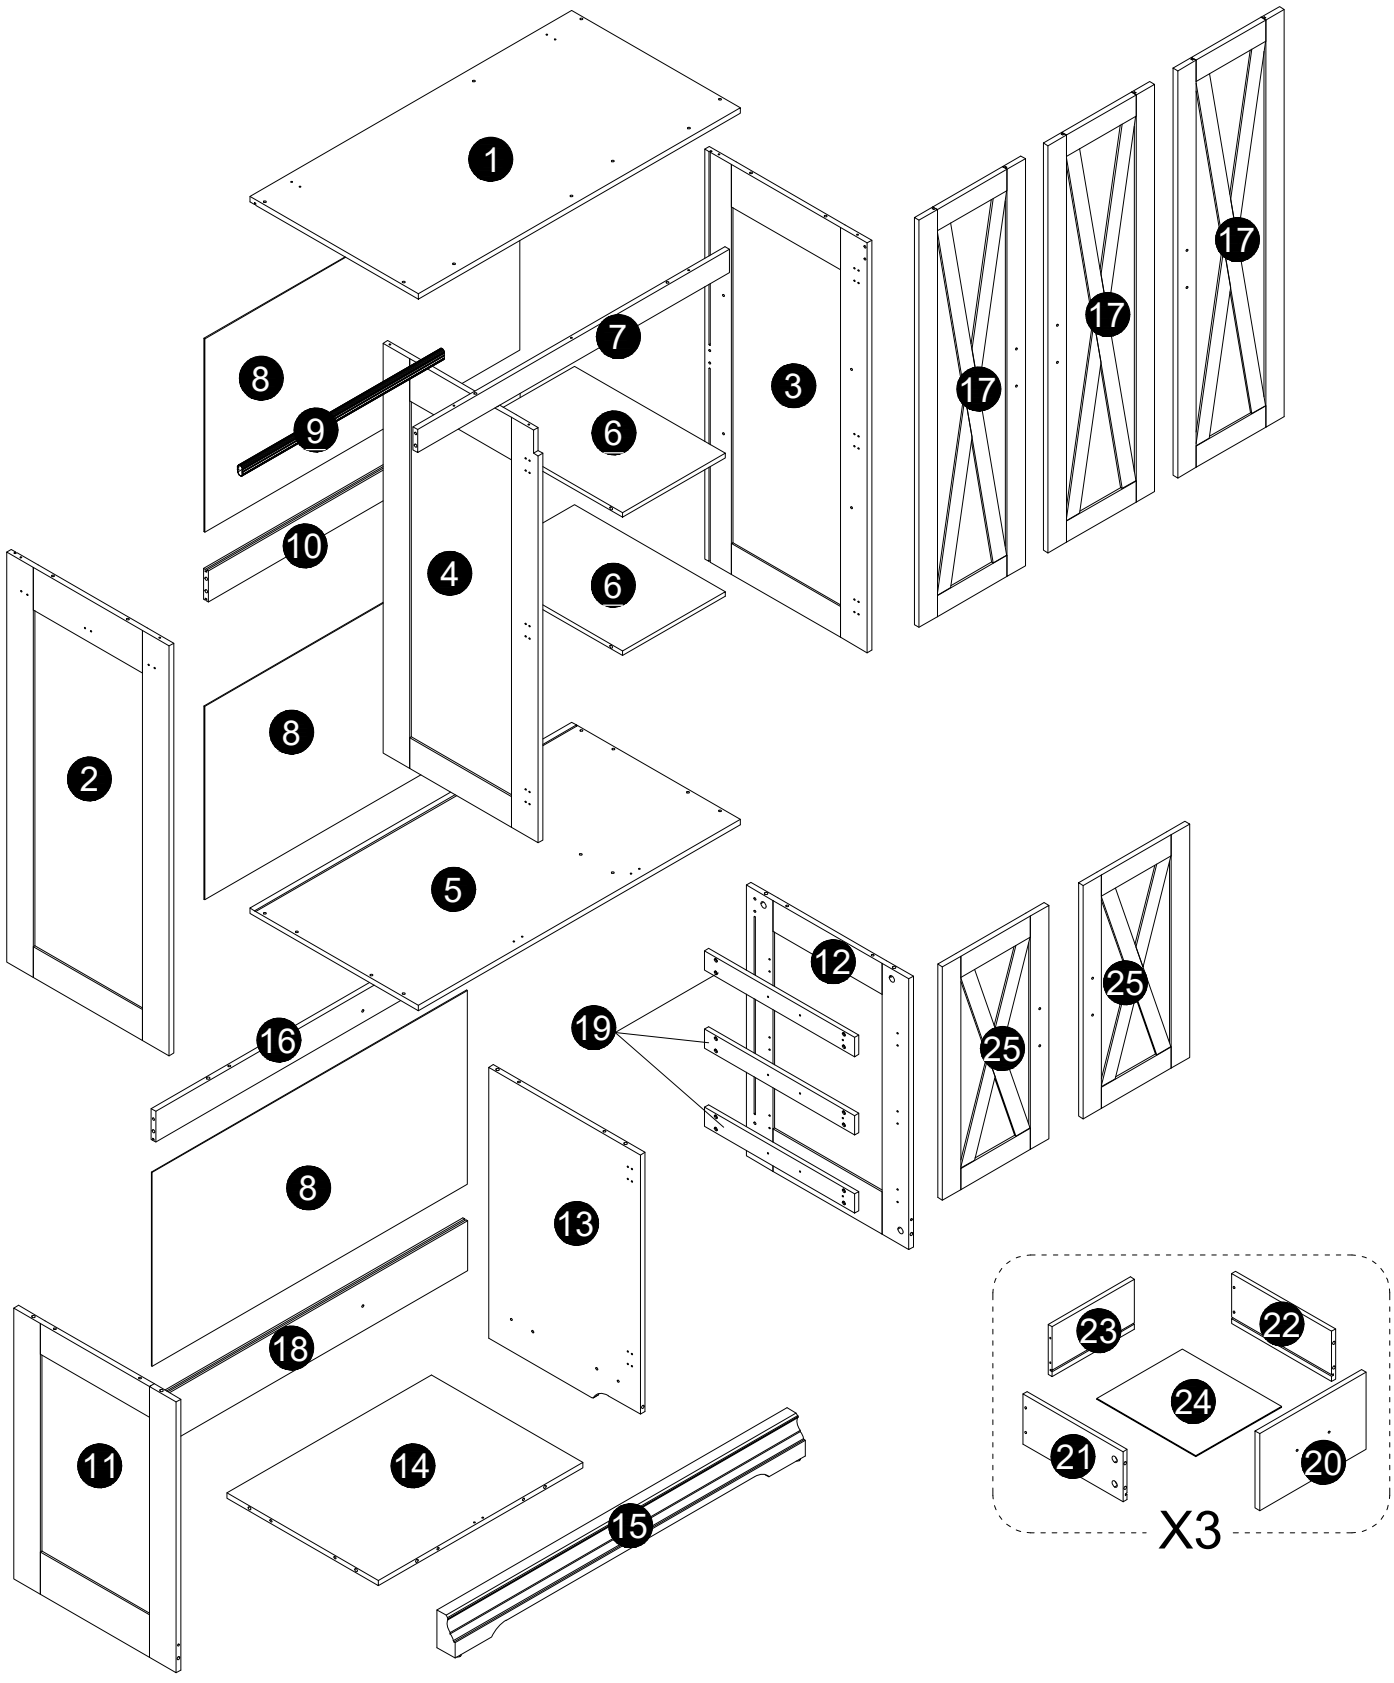















1. When installing the product, use a soft surface (such as carpet or cardboard) to avoid scratching or damaging the surface of the product.
2. Please try to use a manual screwdriver instead of electric screw driver. A manual screwdriver can be used to better control the tightness of the screws.
3. Do not use any glue.
4. The product is unstable before it is assembled. Please pay attention to the product installation sequence, and align all screws and screw holes before tightening.
5. The structure of this product can not meet the requirements of children climbing.

PARTS LIST (Unit: mm)

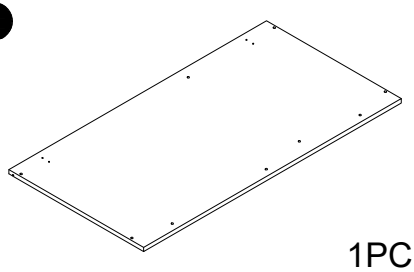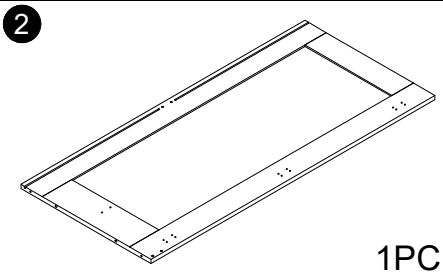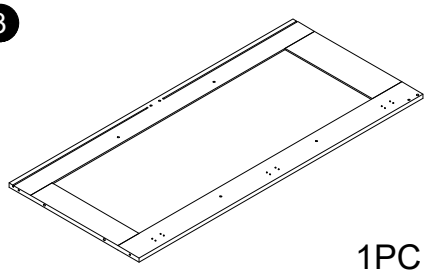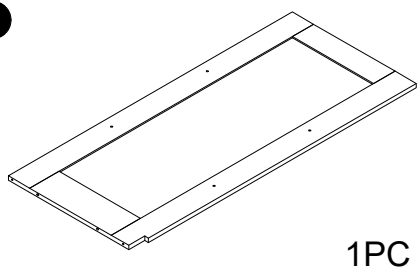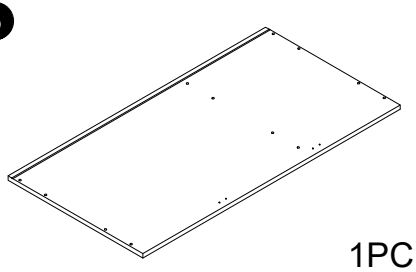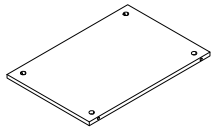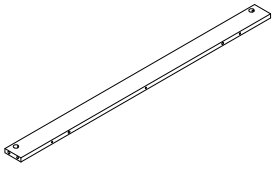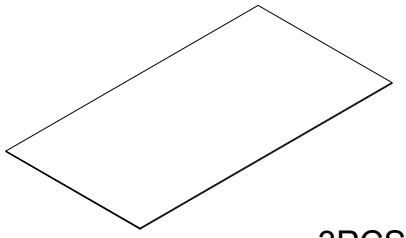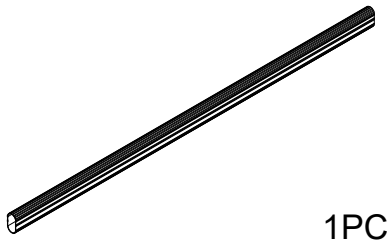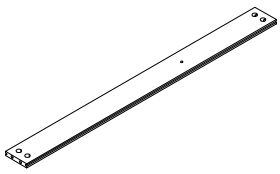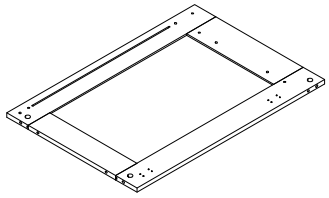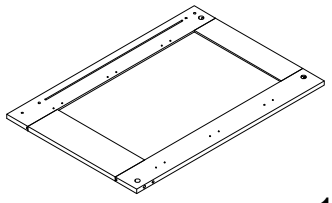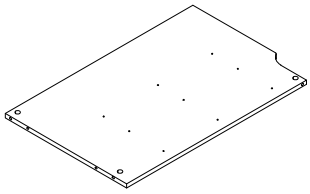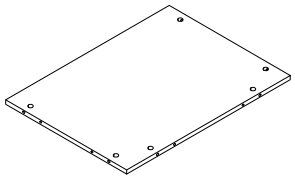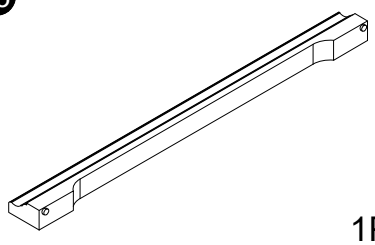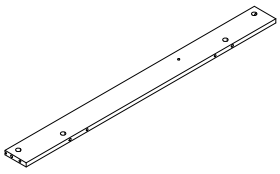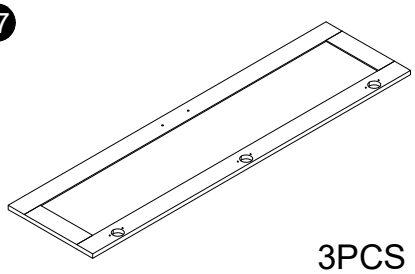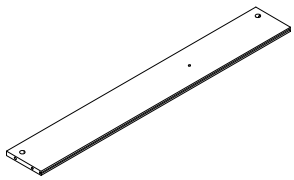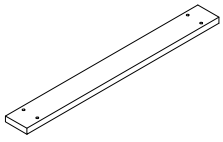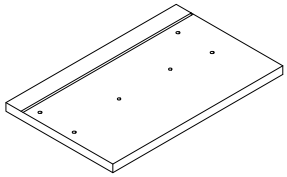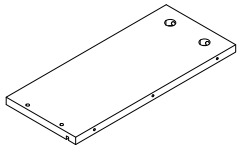1  1PC	2  1PC	3  1PC
4  1PC	5  1PC	6  2PCS
7  1PC	8  3PCS	9  1PC
10  1PC	11  1PC	12  1PC
13  1PC	14  1PC	15  1PC
16  1PC	17  3PCS	18  1PC
19  3PCS	20  3PCS	21  3PCS

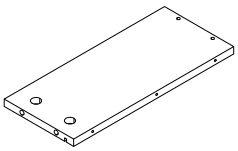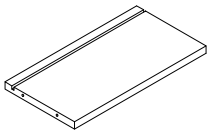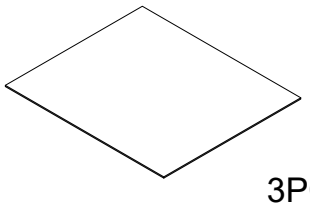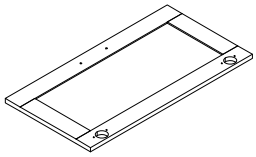
22  3PCS	23  3PCS	24  3PCS
25  2PCS		


ACCESSORIES LIST (Unit: mm)

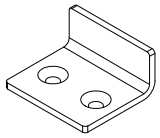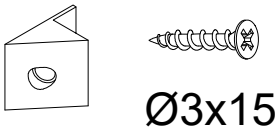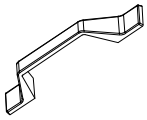	 Ø15x9.5	 Ø6X30	
A x47+4	B x47+4	C x36+3	D x2
 Ø3.5X12	 Ø5X50		 Ø4x38
E x48+4	F x18+1	G x4	H x12+1
 Ø4X20		 Ø3x15	
I x12+1	J x6	K x12+1	L x1
	 Ø4x14		
M x3	N x84+8	O x13	P x8
 M4*18	R1x2 R2x4 R3x2 R4x2  Ø4x12 Ø6x30 Ø4x35		
Q x16	R		
 CL	 CR	 DL	 DR
CL x3	CR x3	DL x3	DR x3

INSTALLATION INSTRUCTION


STEP1

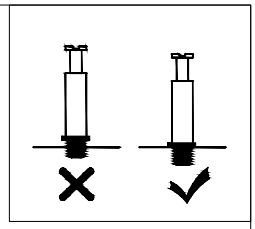

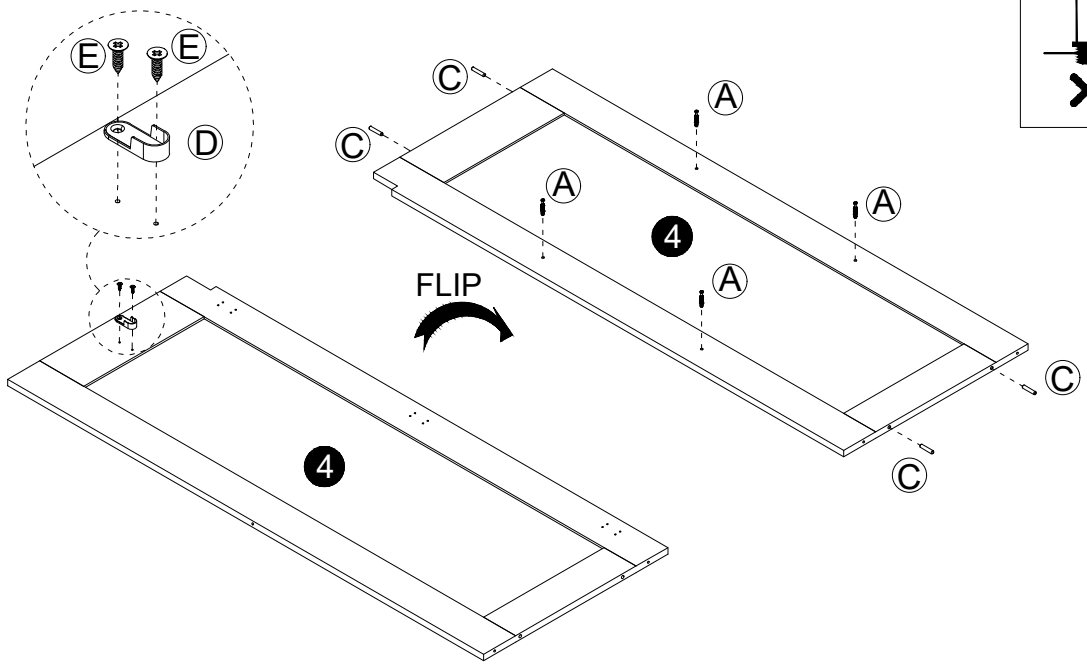

Ø3.5X12		D		Ø6X30		A	
E	x 2	D	x 1	C	x 4	A	x 4


STEP2

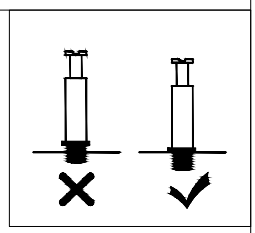



Ø3.5X12		D		Ø6X30		A	
E	x 2	D	x 1	C	x 12	A	x 10

INSTALLATION INSTRUCTION


STEP3

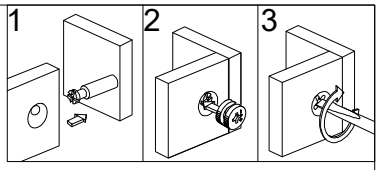


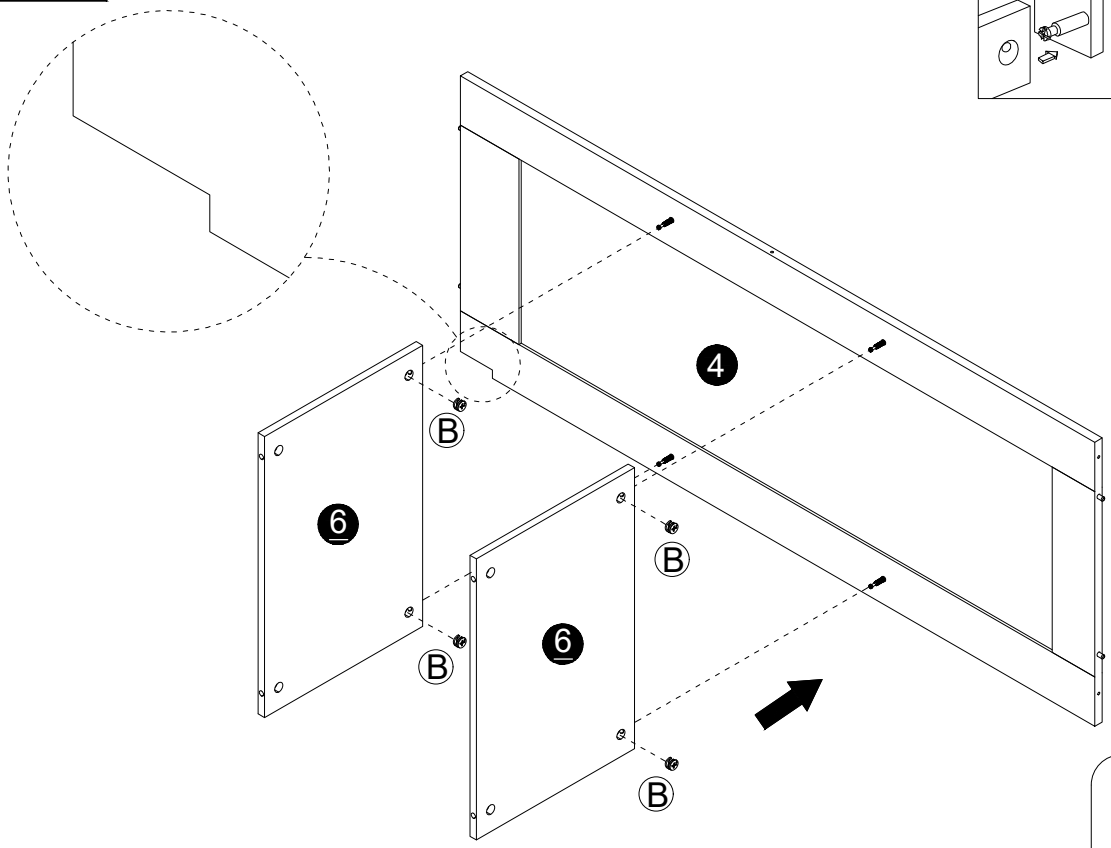


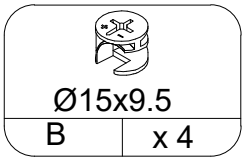

STEP4

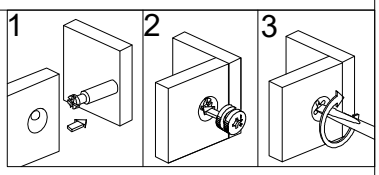


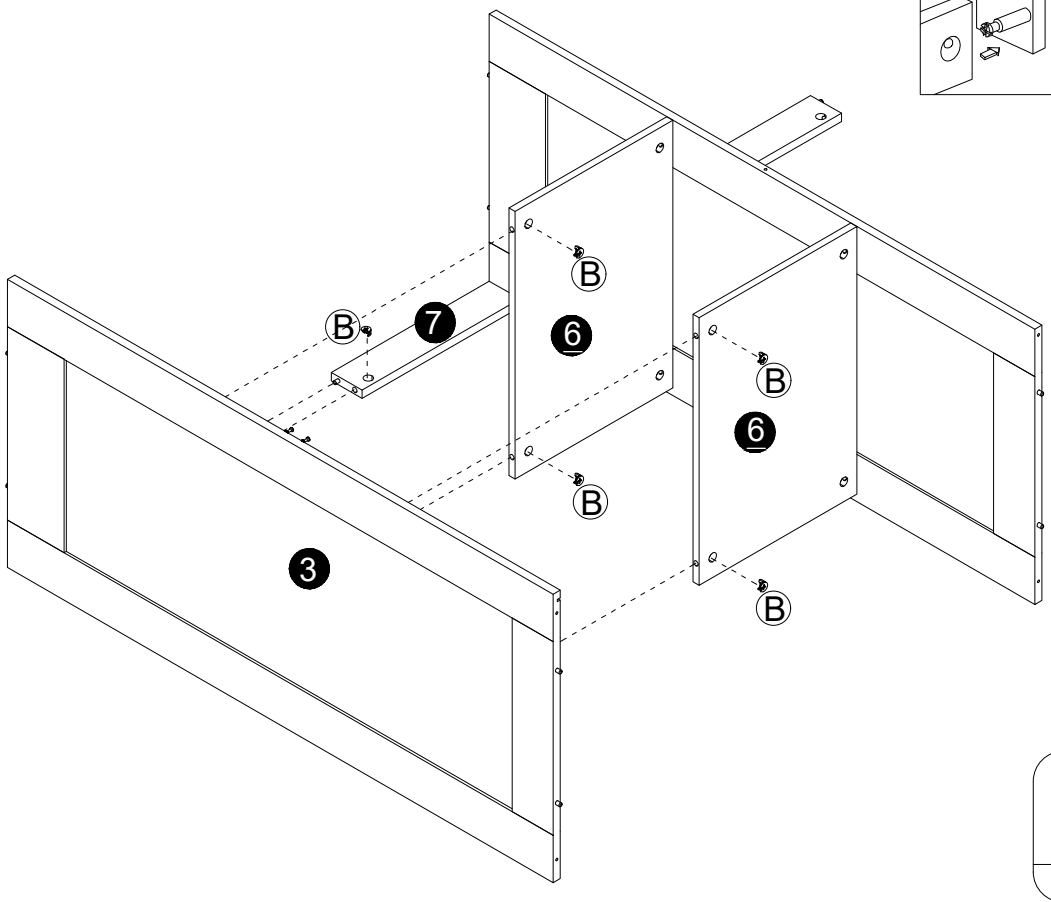


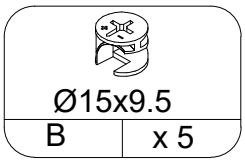


INSTALLATION INSTRUCTION

STEP5

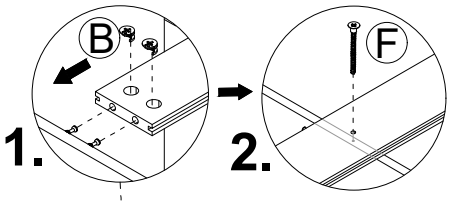

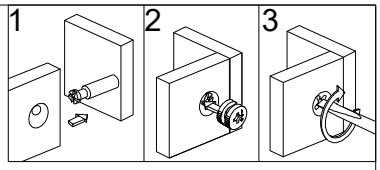

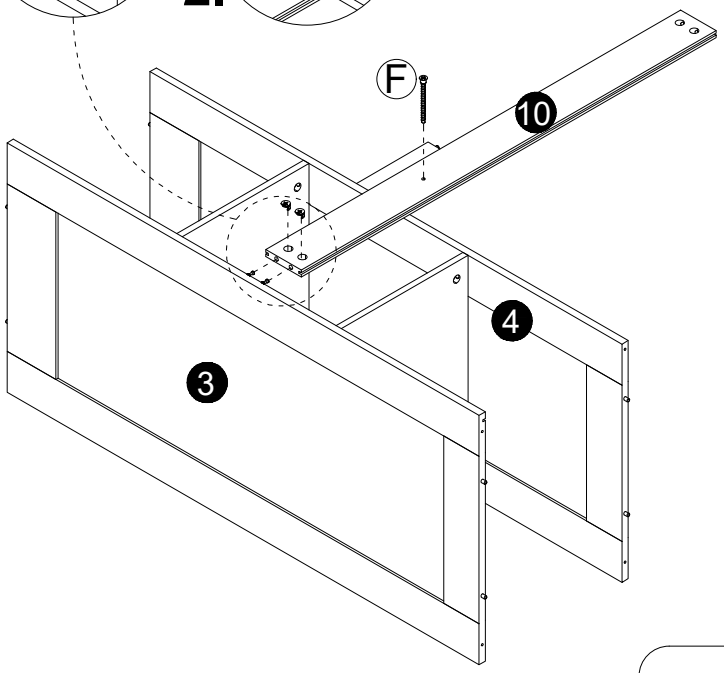





Ø5X50	
F	x 1



Ø15x9.5	
B	x 2

STEP6

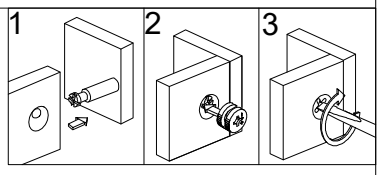

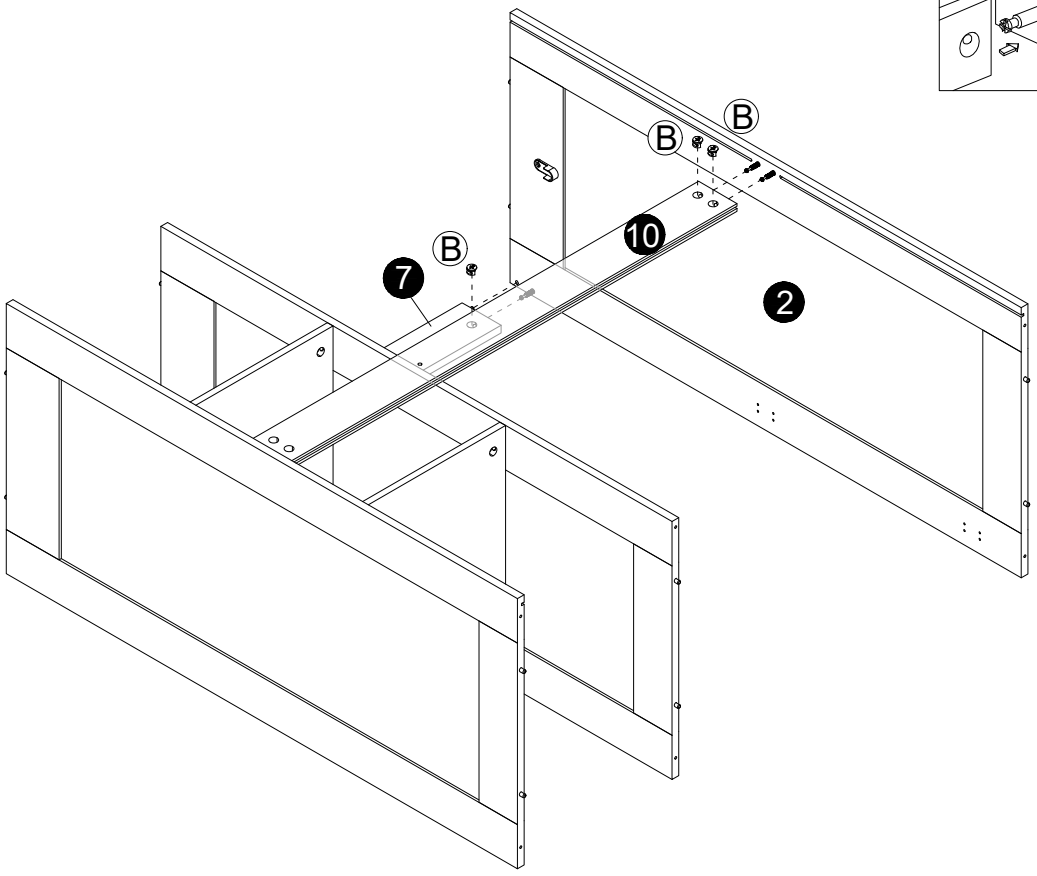





Ø15x9.5	
B	x 3

INSTALLATION INSTRUCTION

STEP7

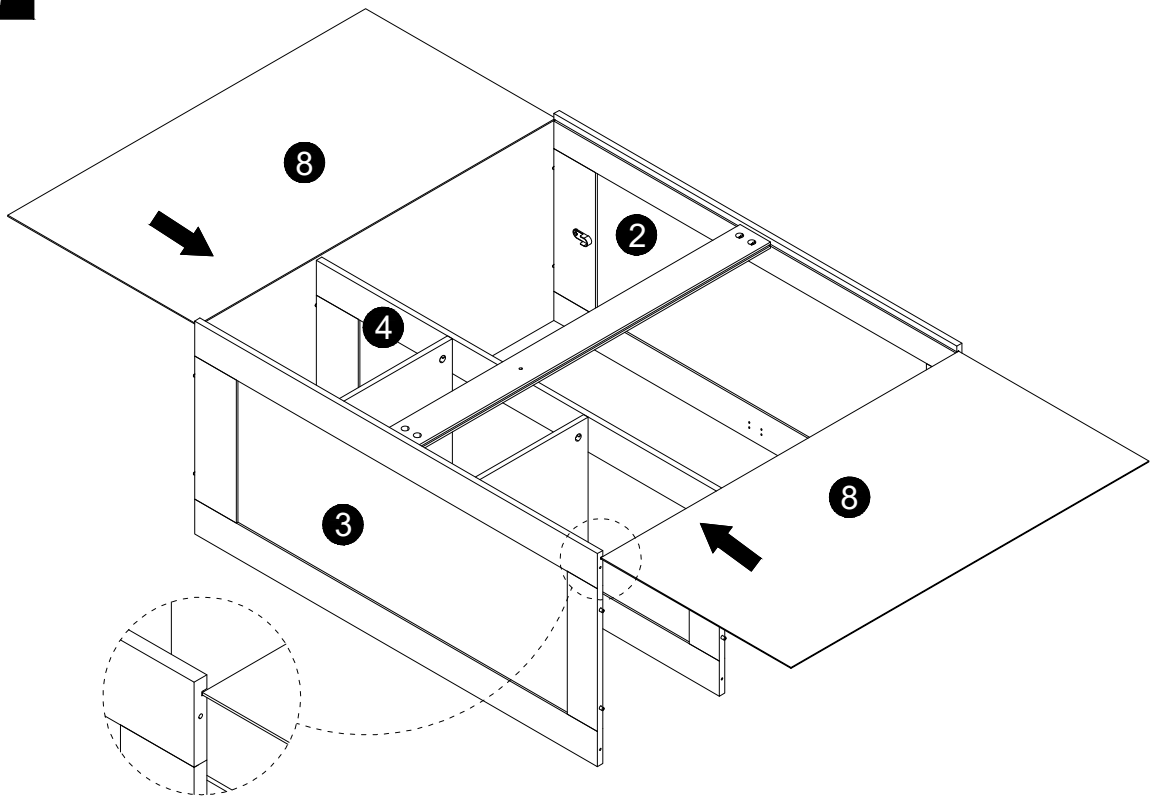


STEP8

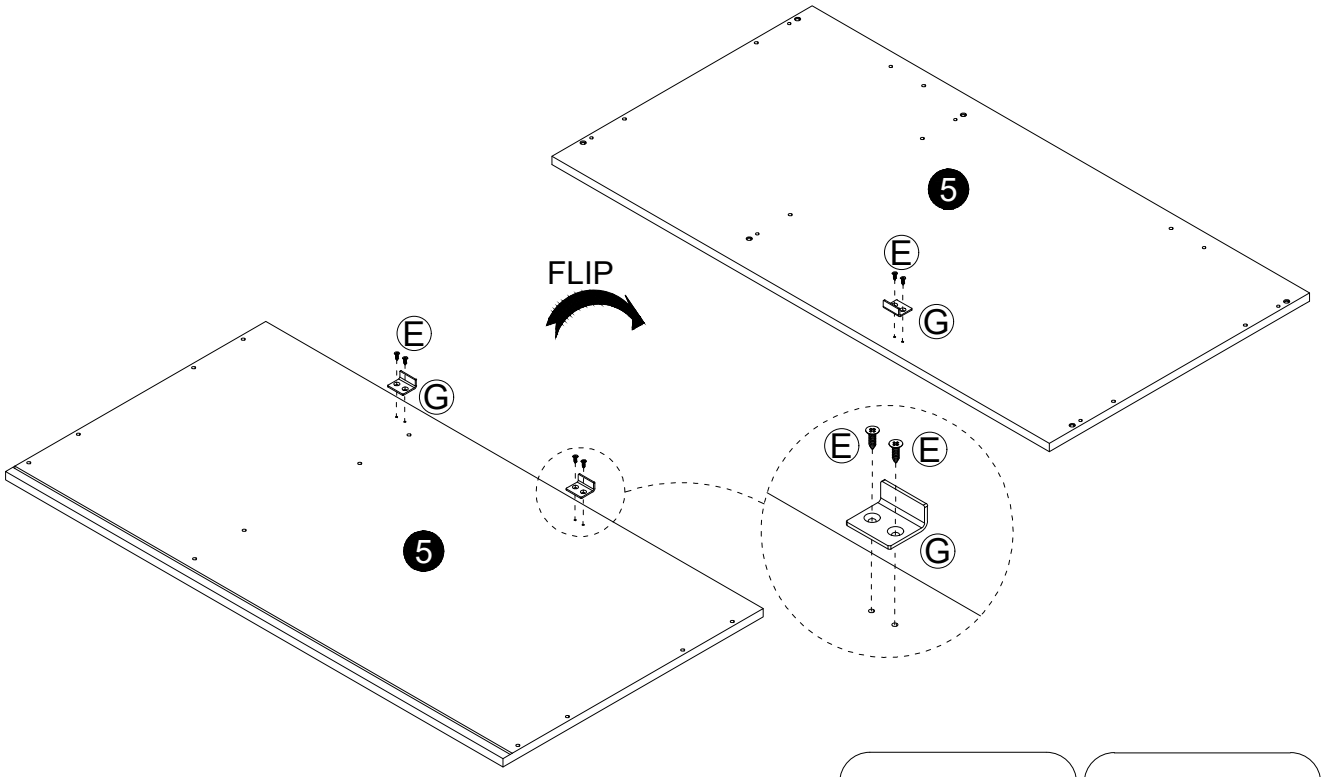


Ø3.5X12		G	
E	x 6	G	x 3


INSTALLATION INSTRUCTION


STEP9

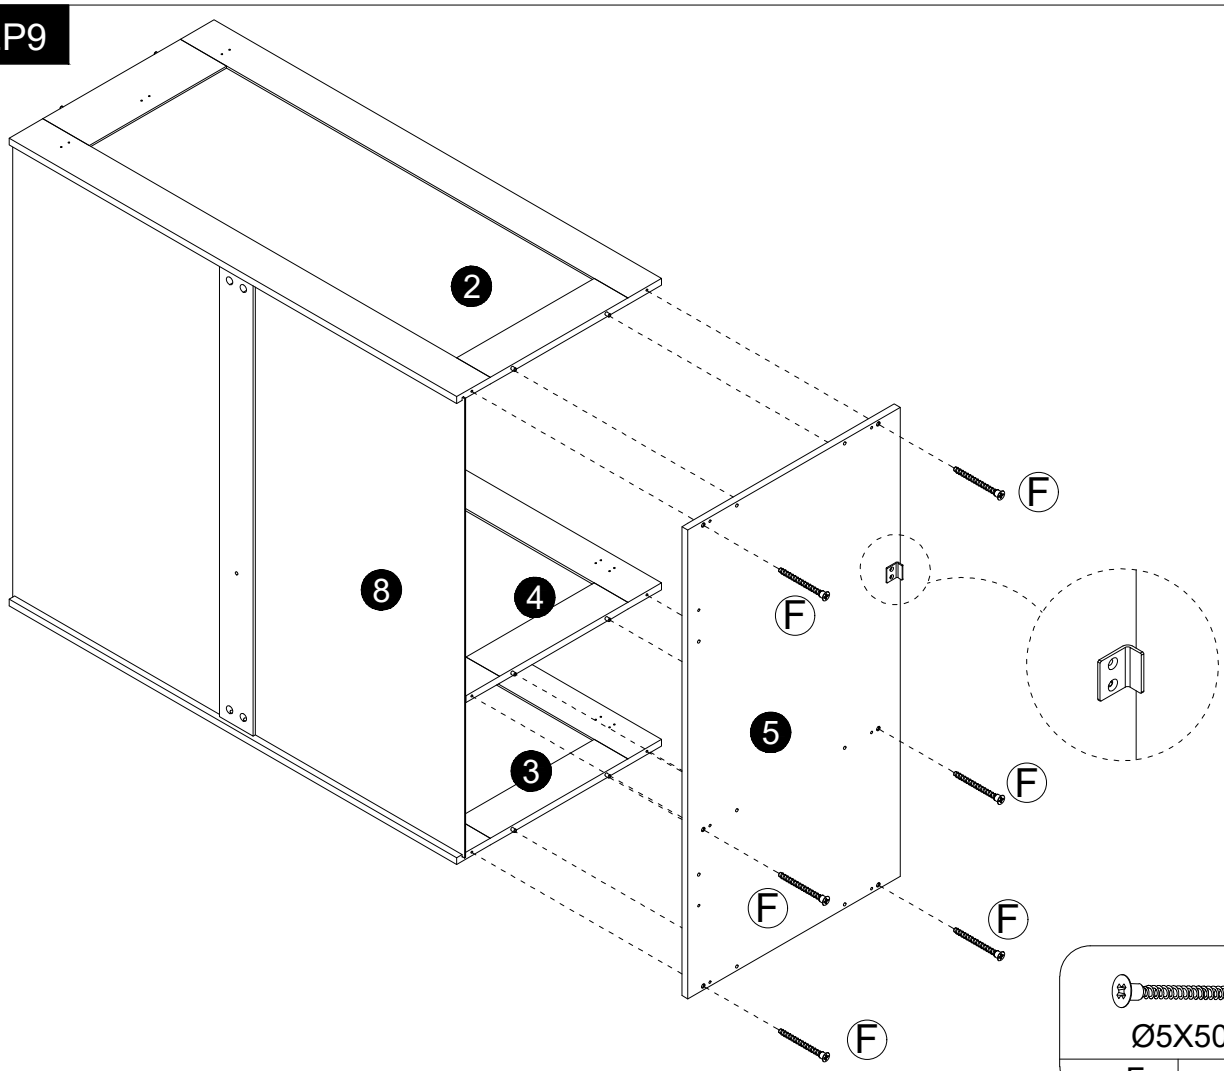

STEP10

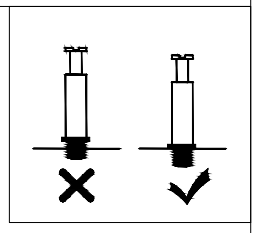


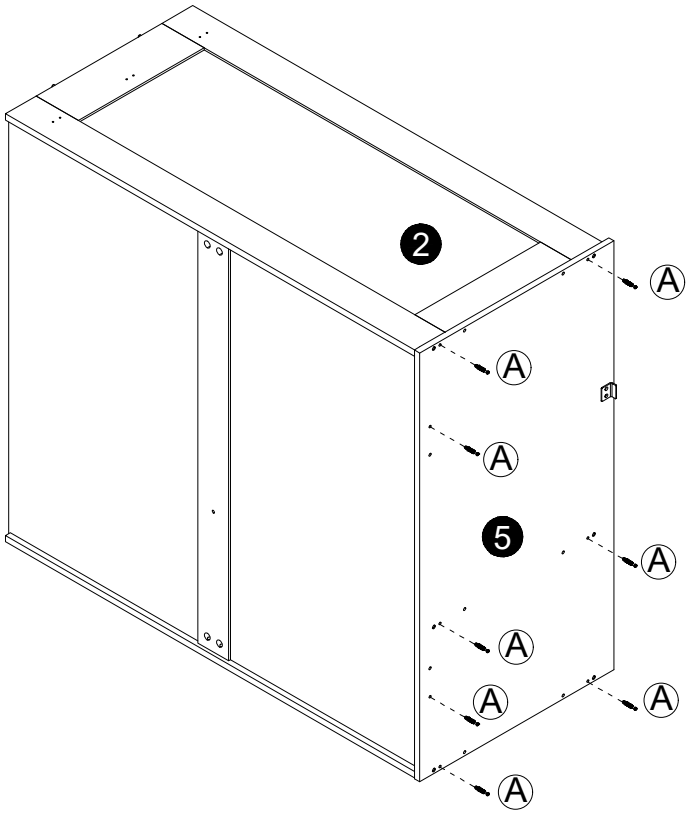


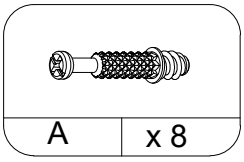


INSTALLATION INSTRUCTION


STEP11

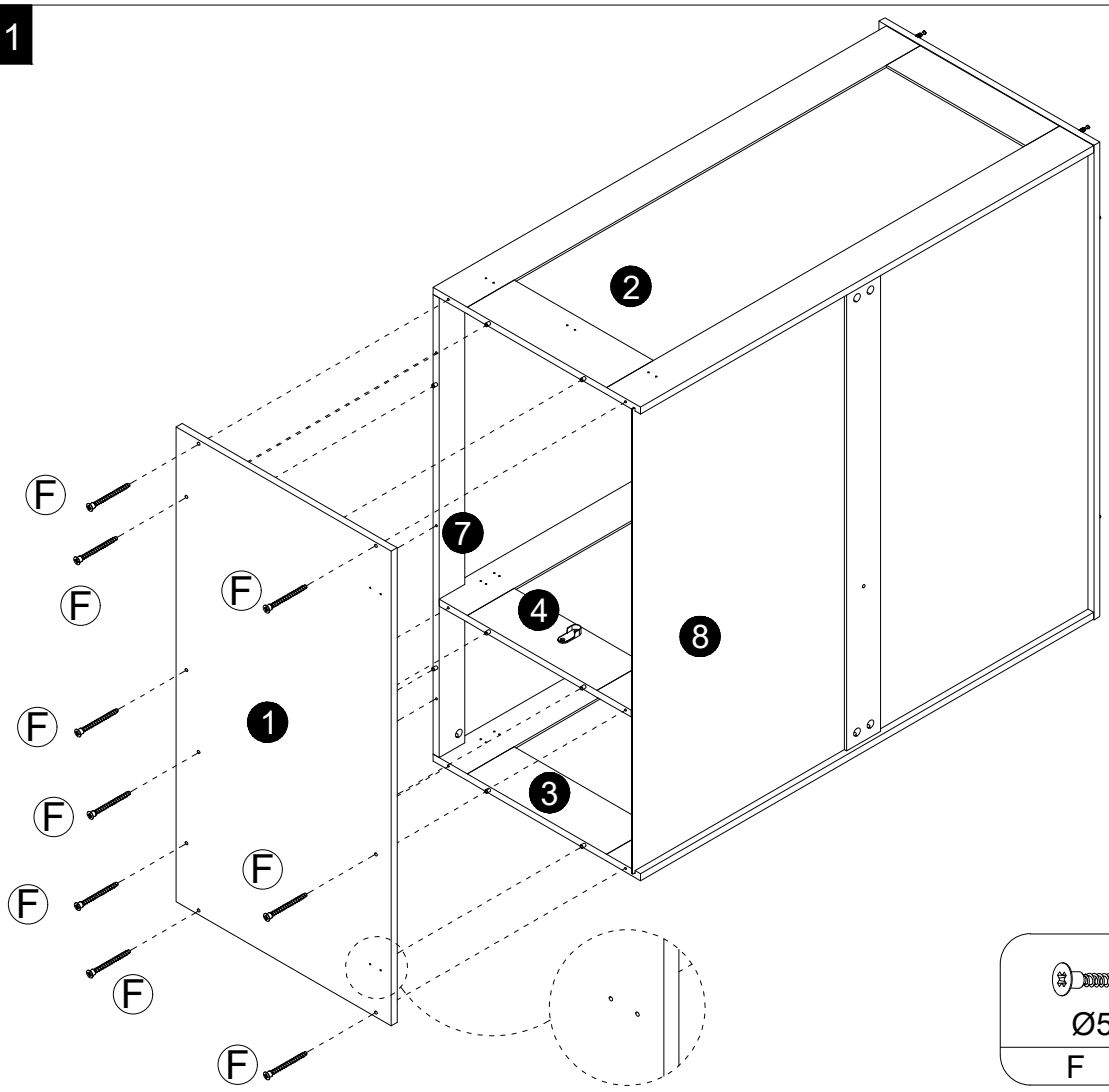

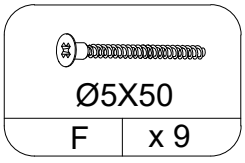


STEP12

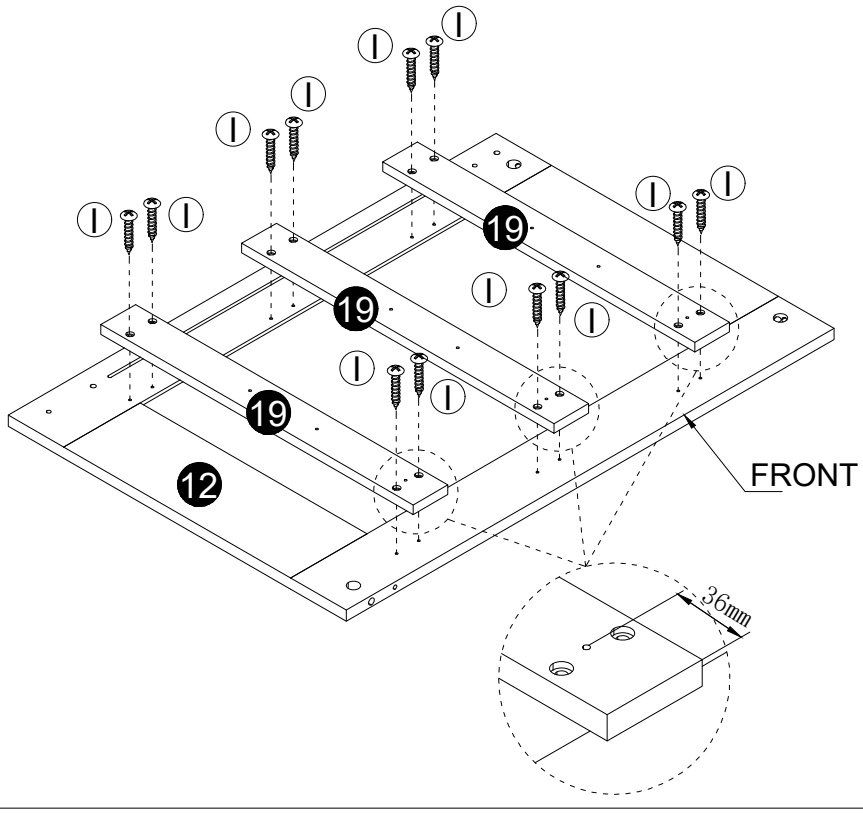


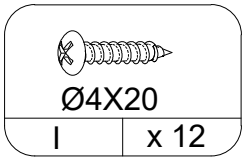



INSTALLATION INSTRUCTION

STEP13

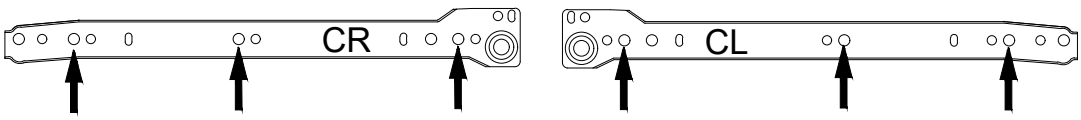


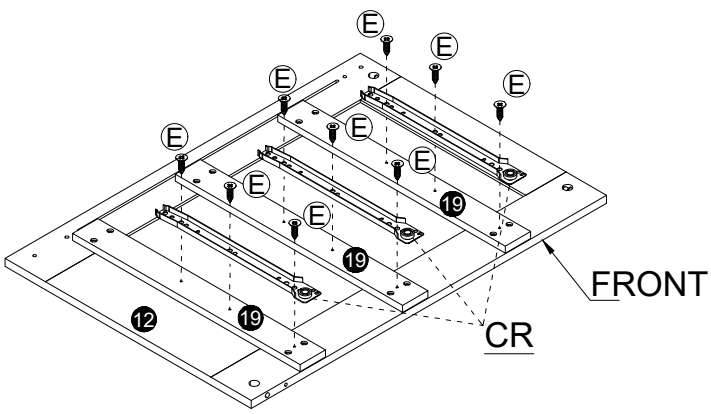

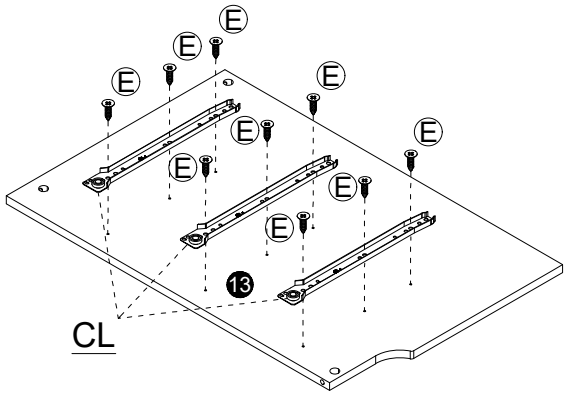

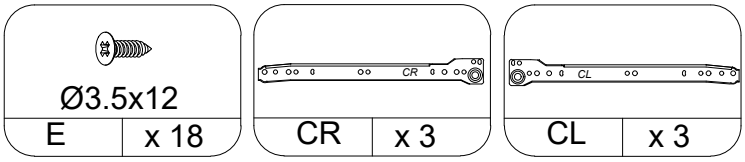


STEP14

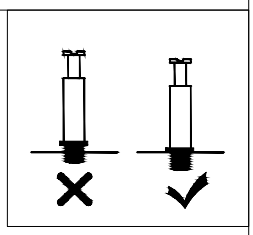


INSTALLATION INSTRUCTION


STEP15

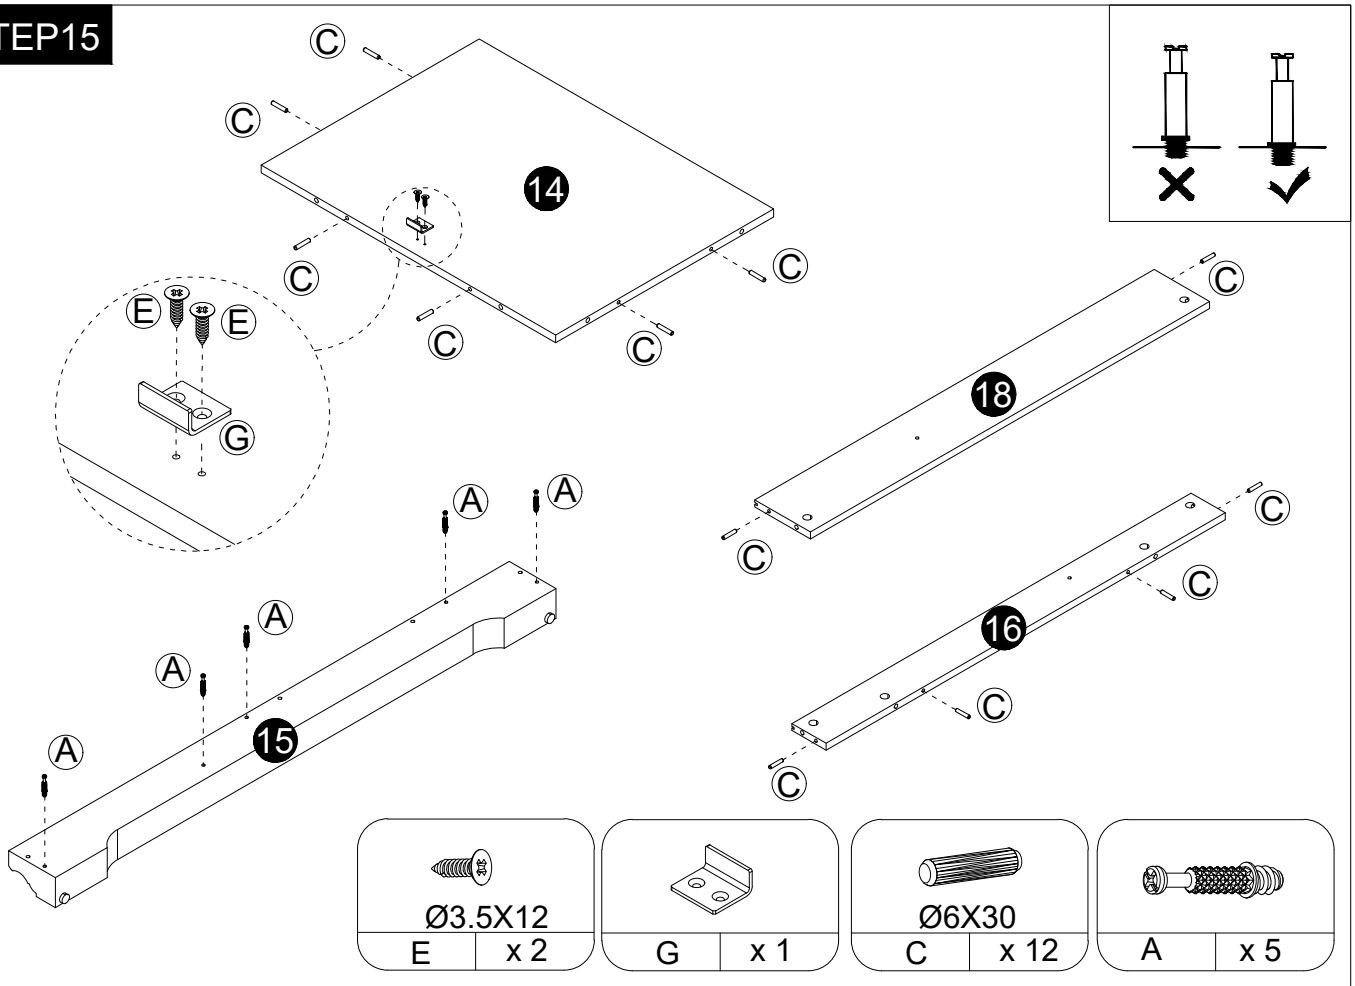

Ø3.5X12		Ø6X30			
E	x 2	G	x 1	C	x 12	A	x 5

STEP16

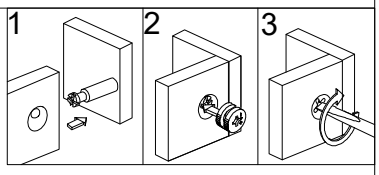


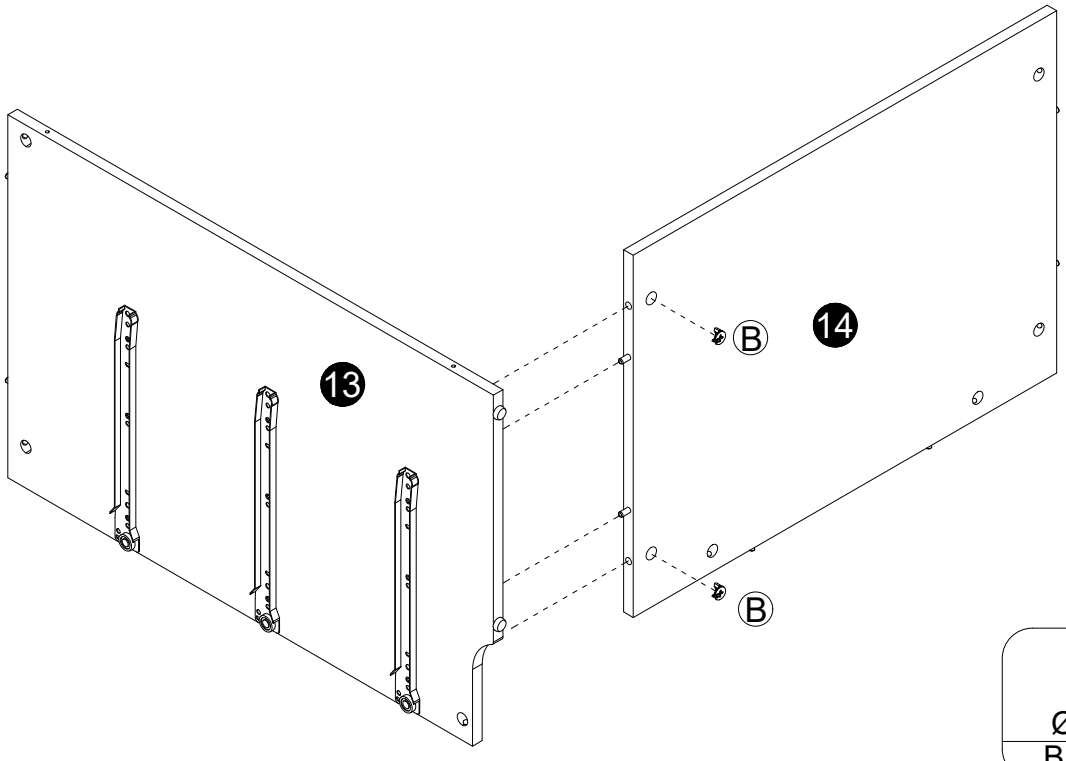



Ø15x9.5	
B	x 2

INSTALLATION INSTRUCTION


STEP17

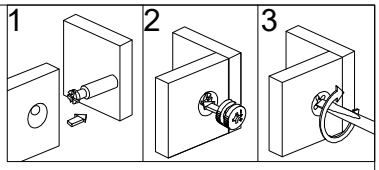


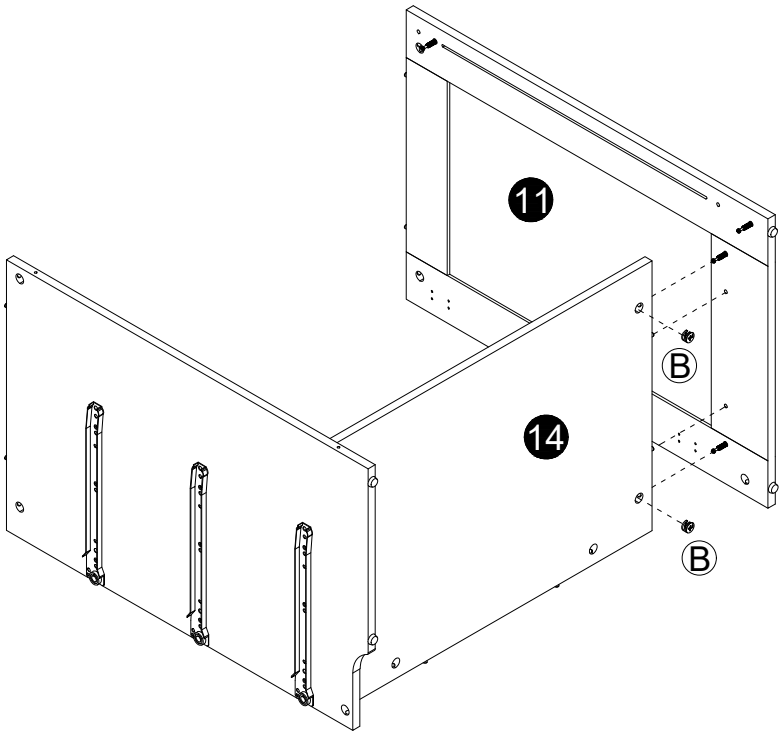

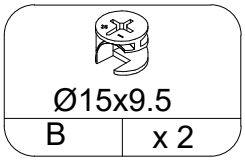


STEP18

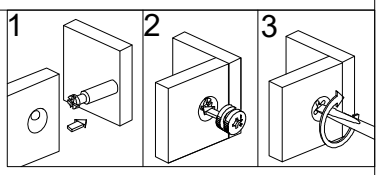

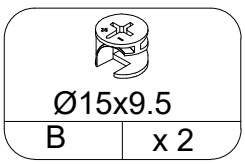



INSTALLATION INSTRUCTION


STEP19

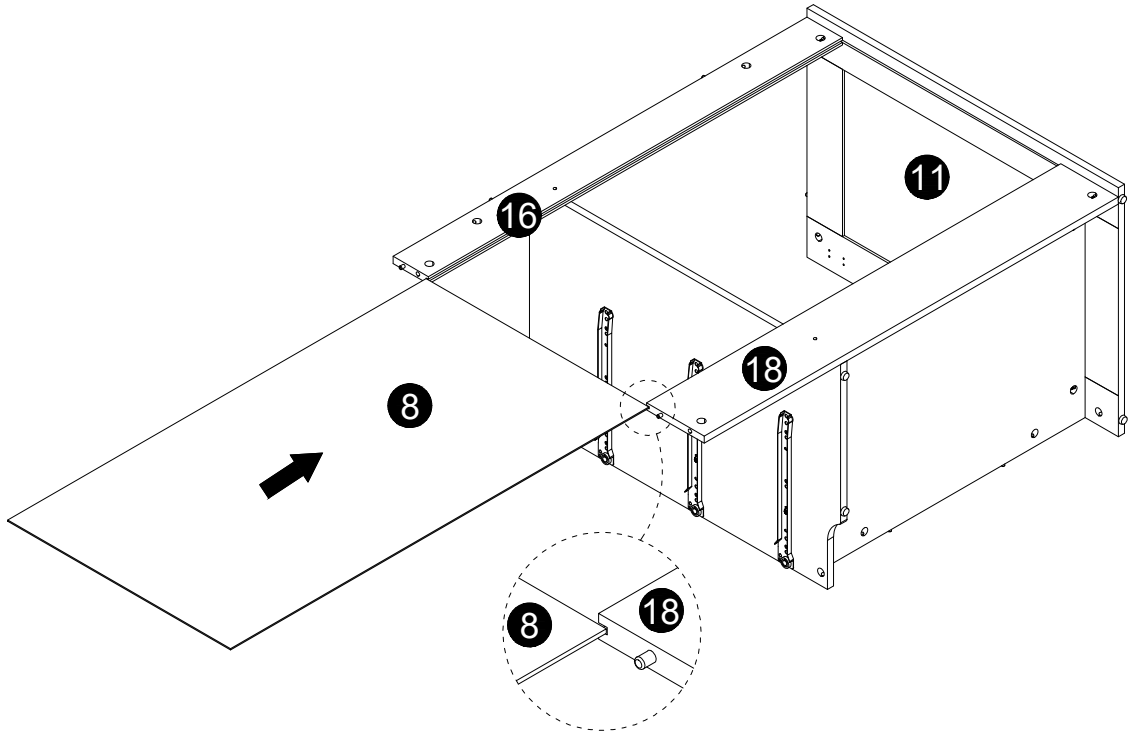

STEP20

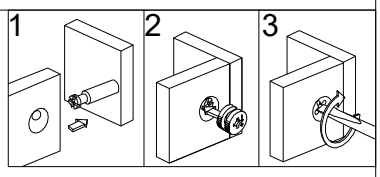


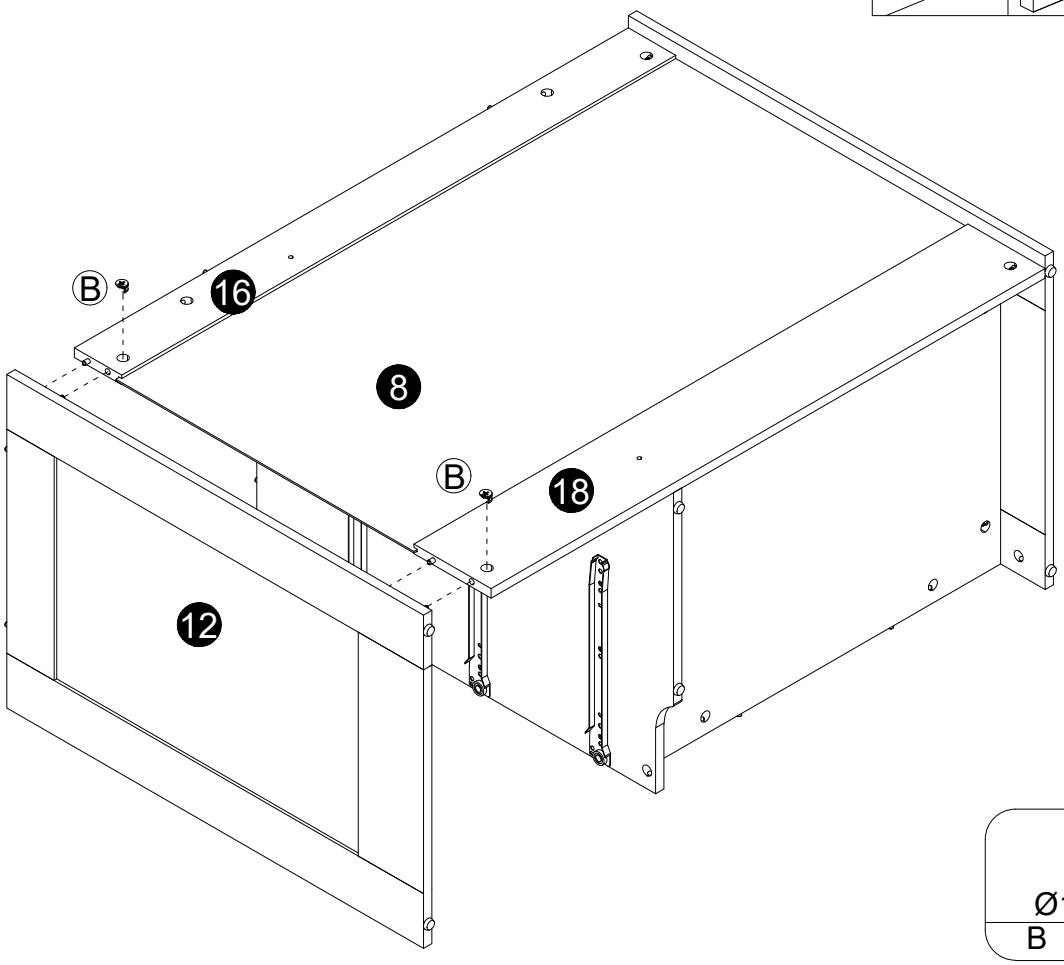


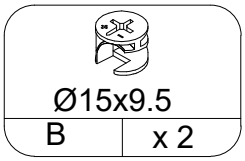


INSTALLATION INSTRUCTION

STEP21

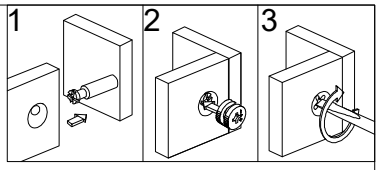

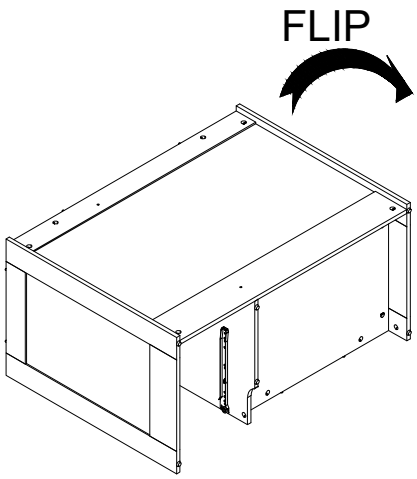

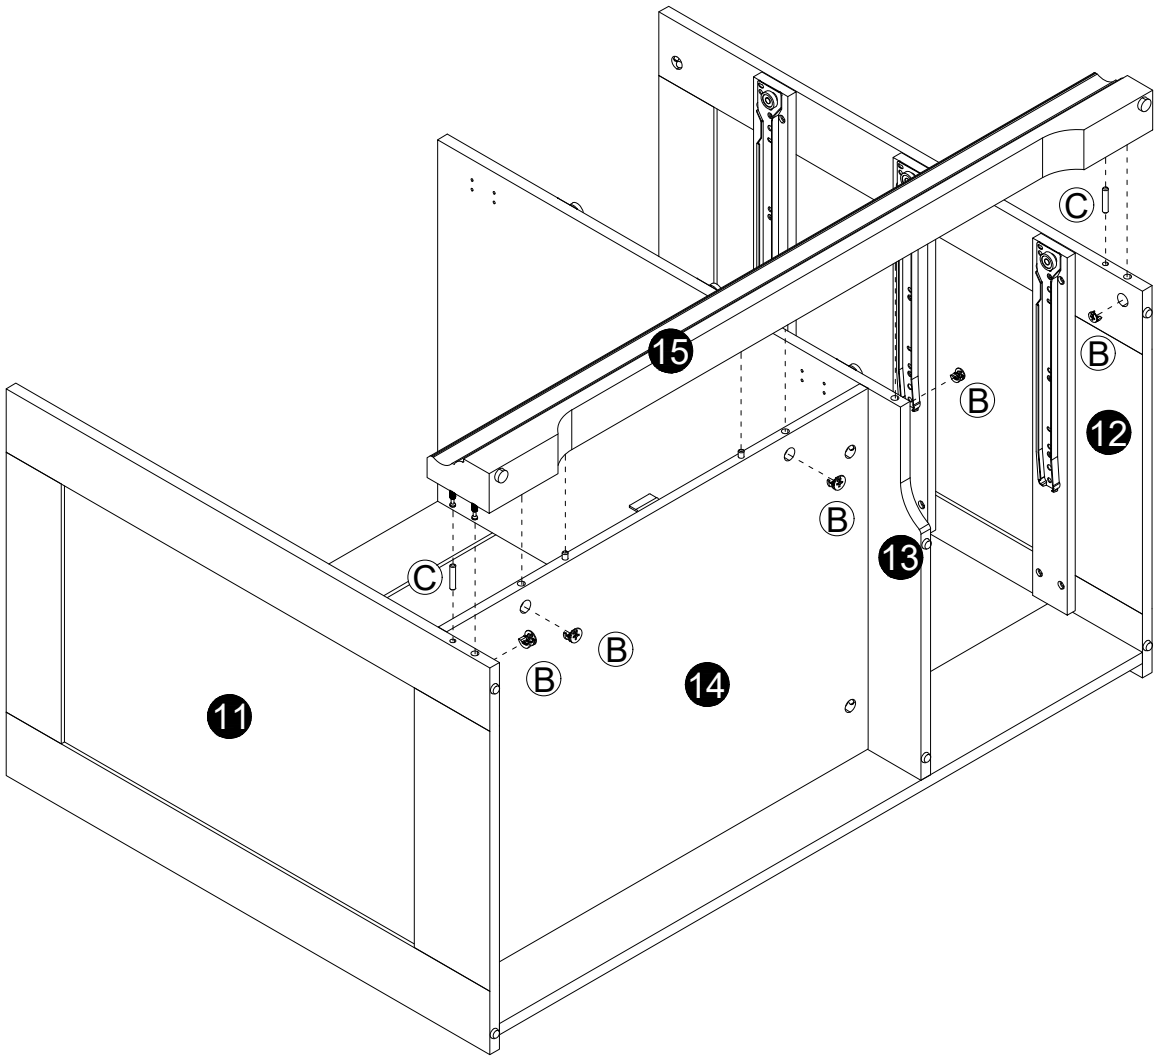



Ø6X30	
C	x 2

Ø15x9.5	
B	x 5

INSTALLATION INSTRUCTION

STEP22

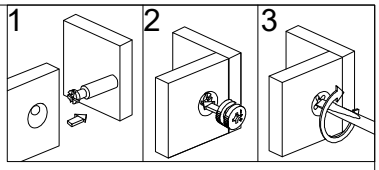


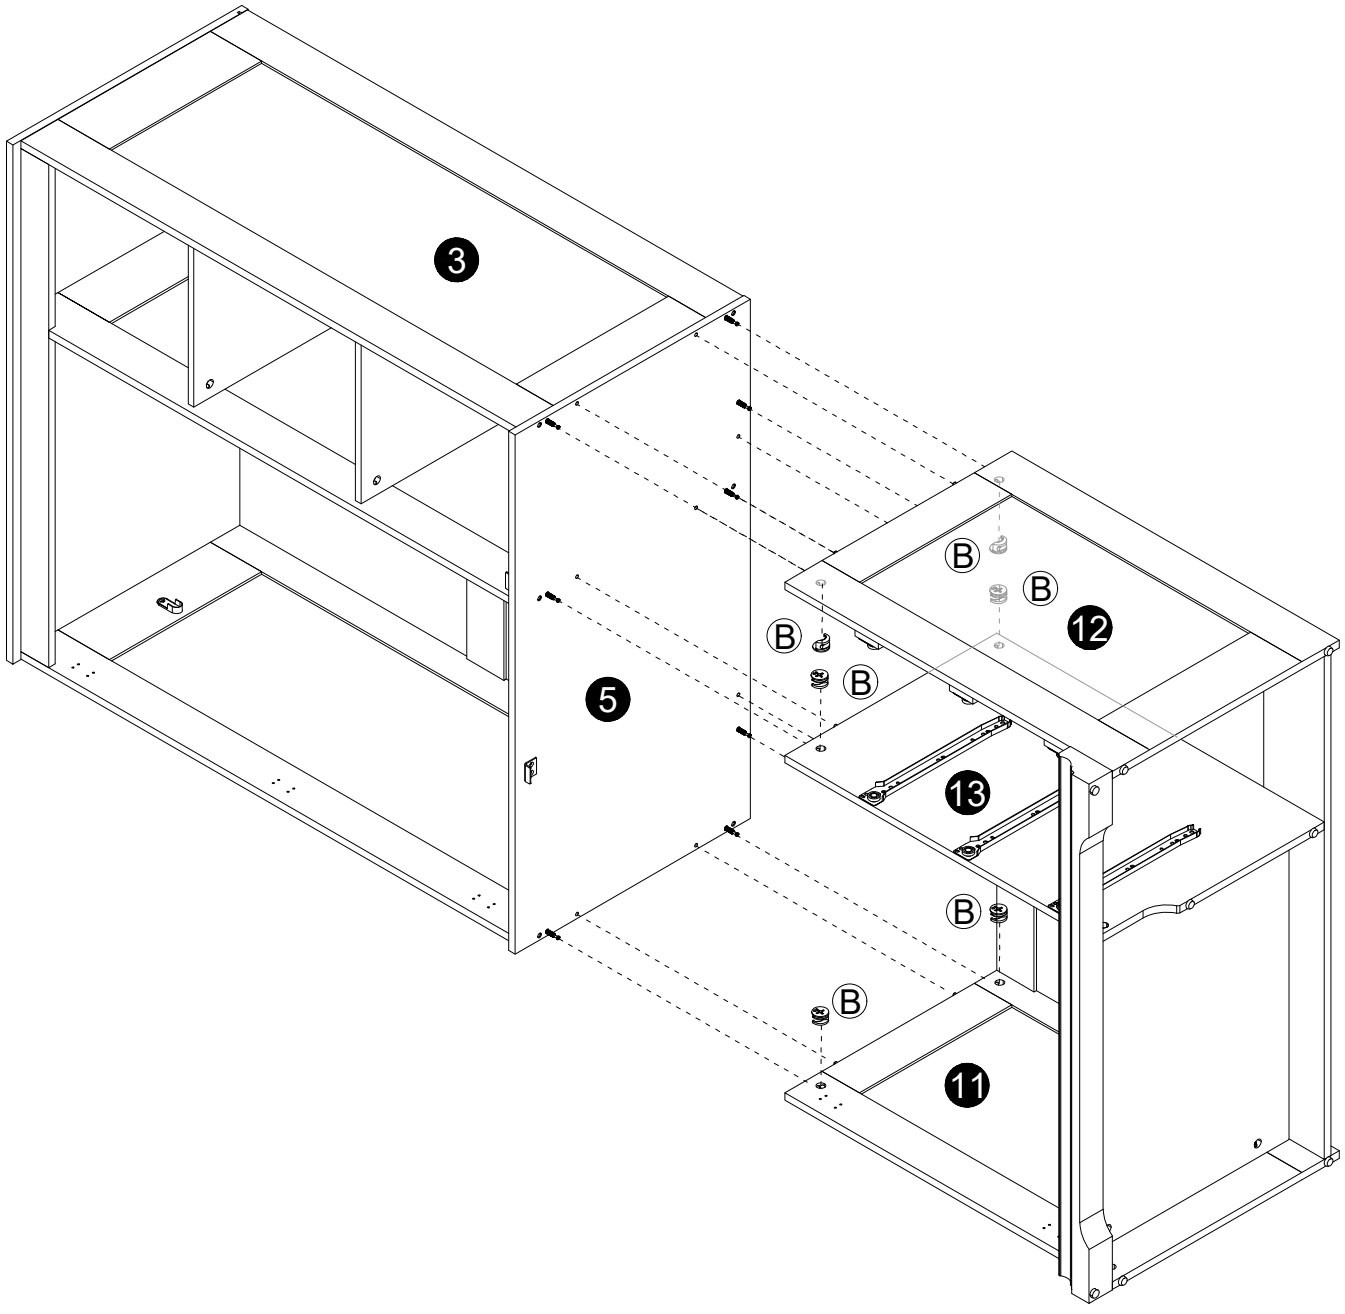



INSTALLATION INSTRUCTION


STEP23

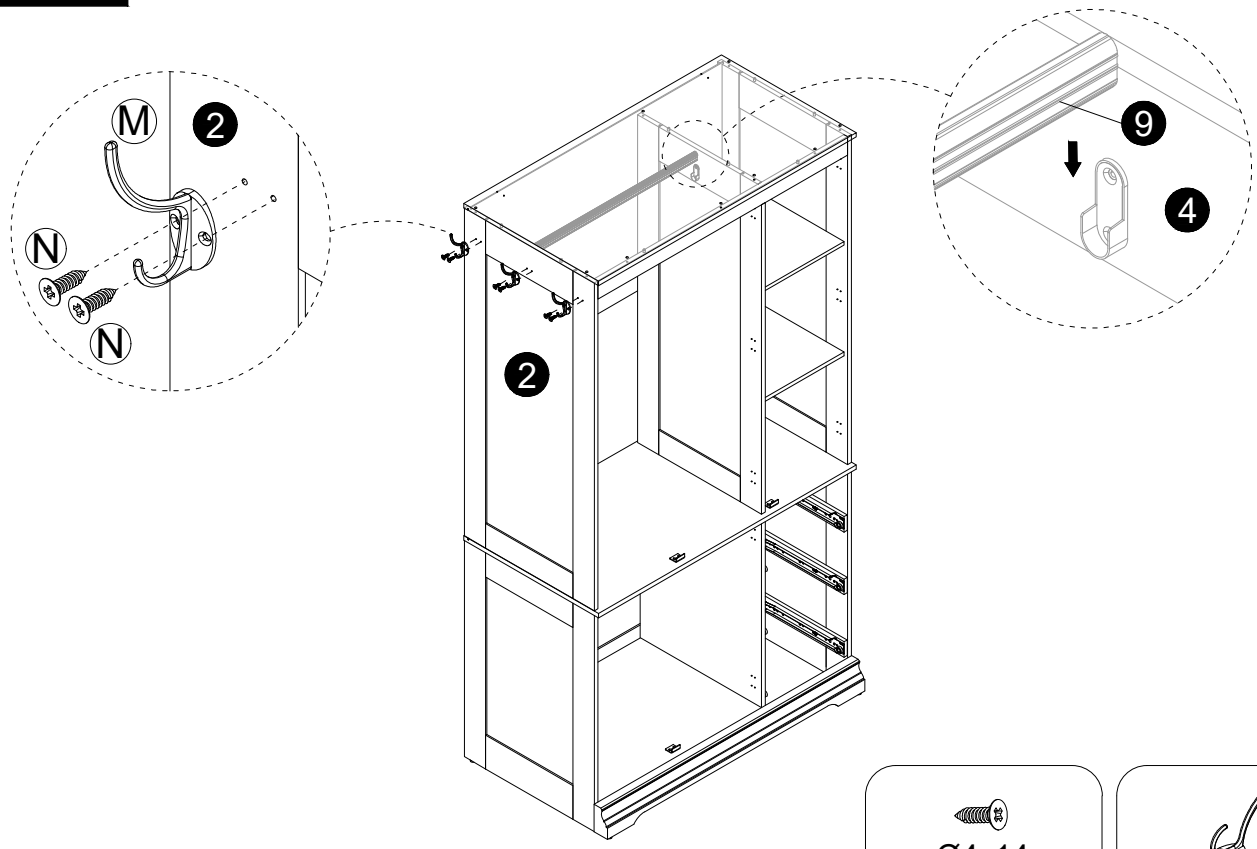


Ø4x14	
N	x 6

M	x 3

STEP24

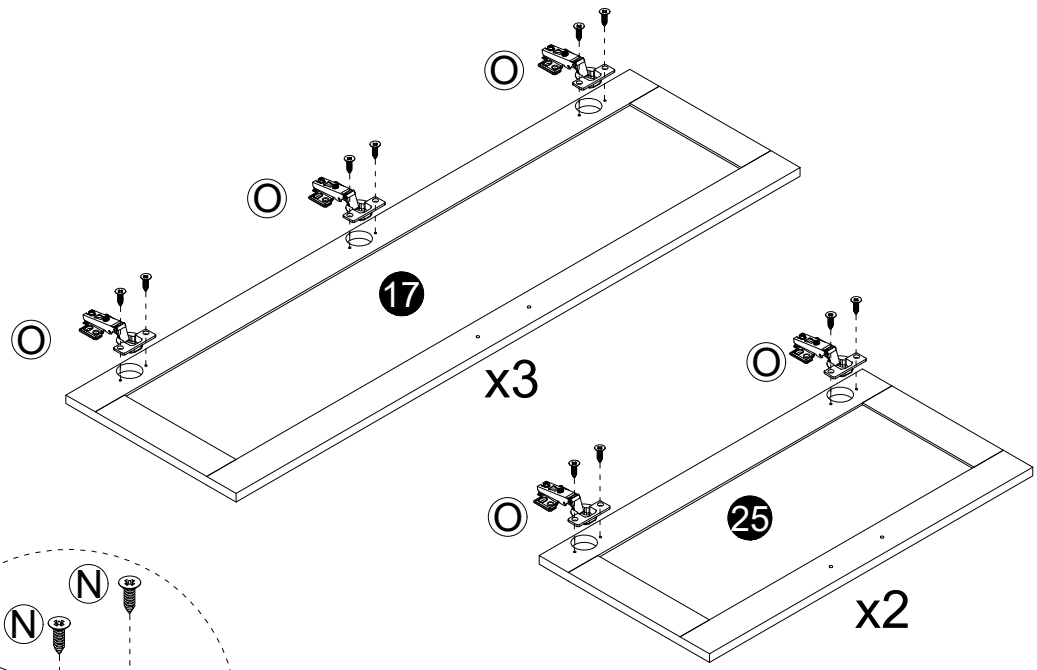

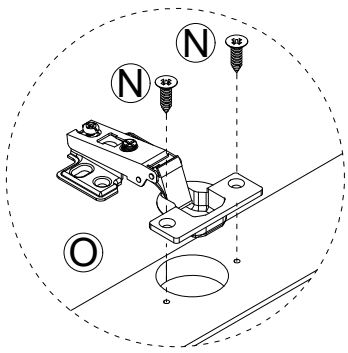


Ø4X14	
N	x 26


O	x 13

INSTALLATION INSTRUCTION

STEP25

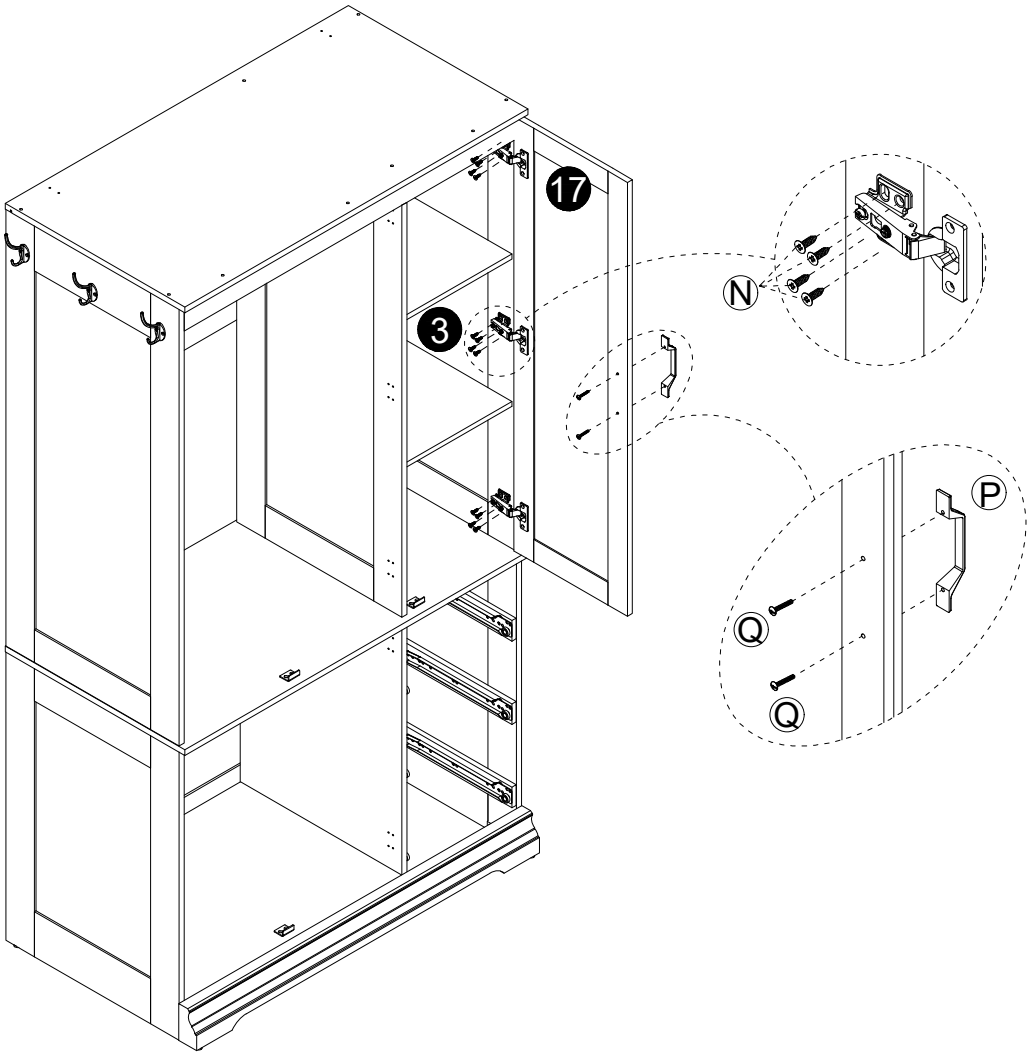

When the hinges are installed, you can refer to the pictures to adjust crevice of the doors till it's perfect

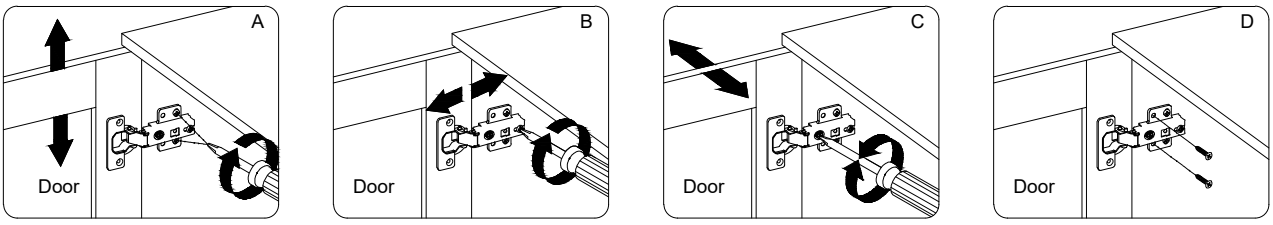


1. To adjust the doors up and down, please refer to step (A)
2. To adjust the distance between the doors and side panels, please refer to (B)
3. To adjust the gap between two doors, please refer to step (C)
4. After the adjustment is finished, please tighten the screws, refer to step (D)


M4*18MM		Ø4x14	
Q	x 2	P	x 1	N	x 12

INSTALLATION INSTRUCTION

STEP26

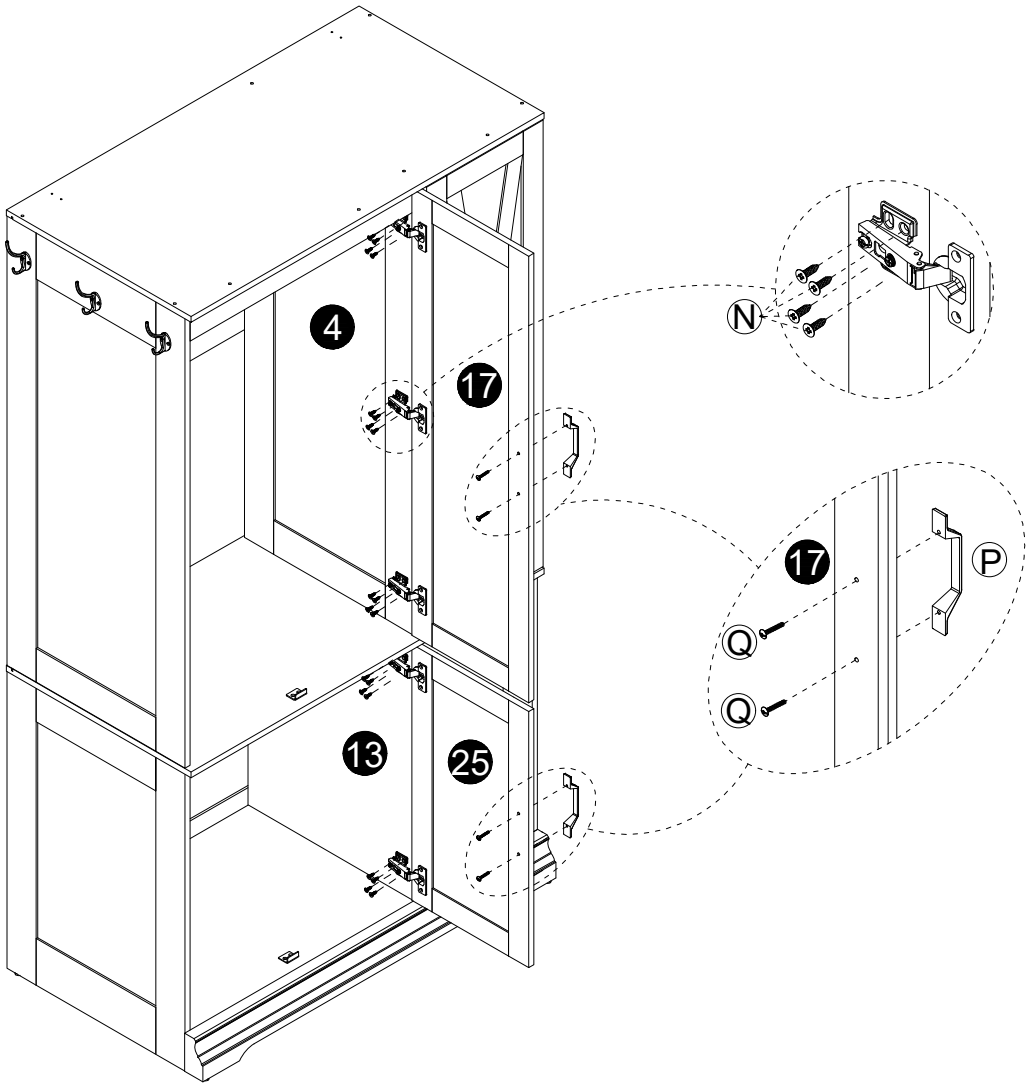

When the hinges are installed, you can refer to the pictures to adjust crevice of the doors till it's perfect

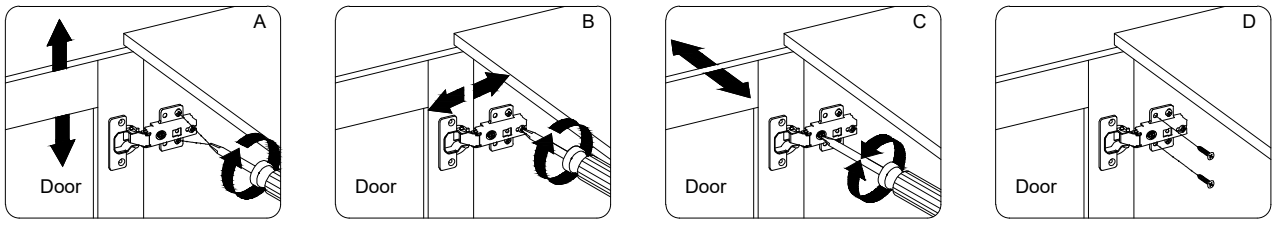


1. To adjust the doors up and down, please refer to step (A)
2. To adjust the distance between the doors and side panels, please refer to (B)
3. To adjust the gap between two doors, please refer to step (C)
4. After the adjustment is finished, please tighten the screws, refer to step (D)


M4*18MM		P	x 2	Ø4x14	
Q	x 4			N	x 20

INSTALLATION INSTRUCTION


STEP27

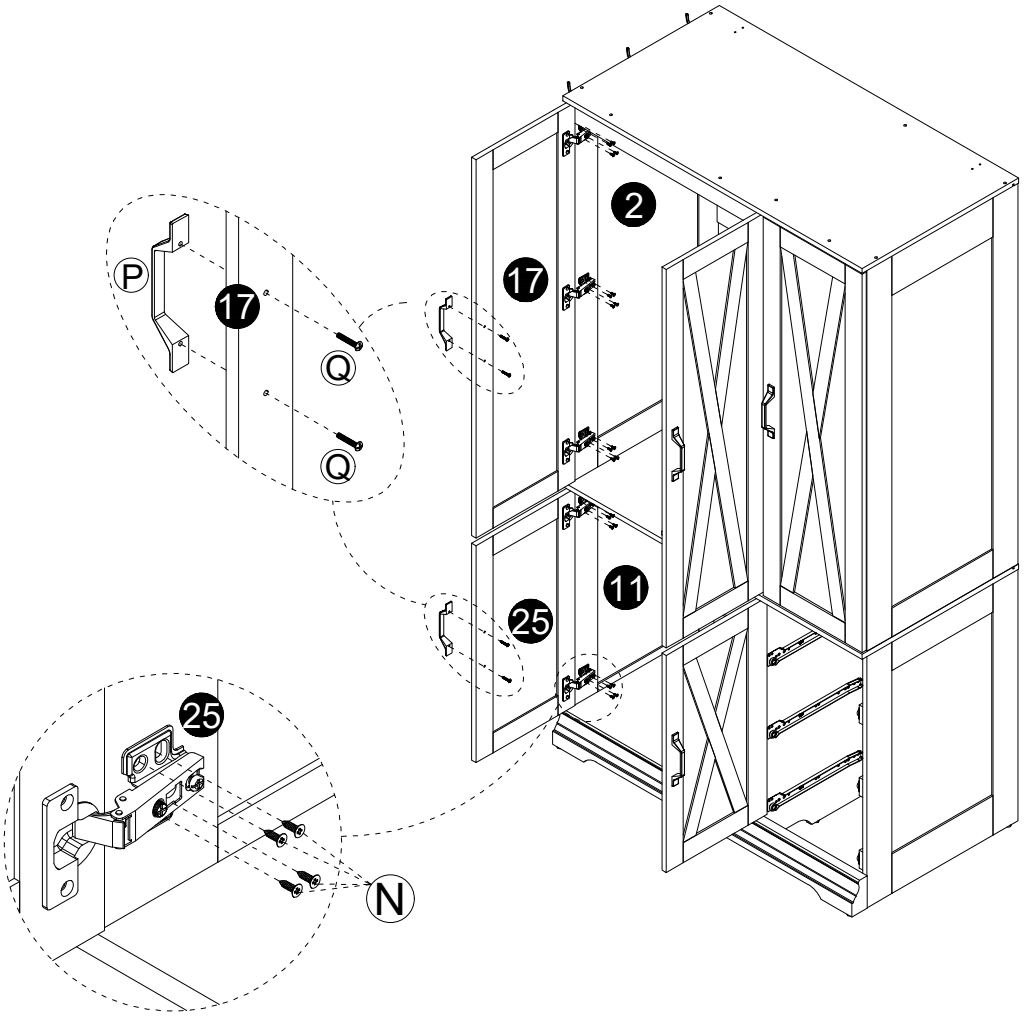

When the hinges are installed, you can refer to the pictures to adjust crevice of the doors till it's perfect

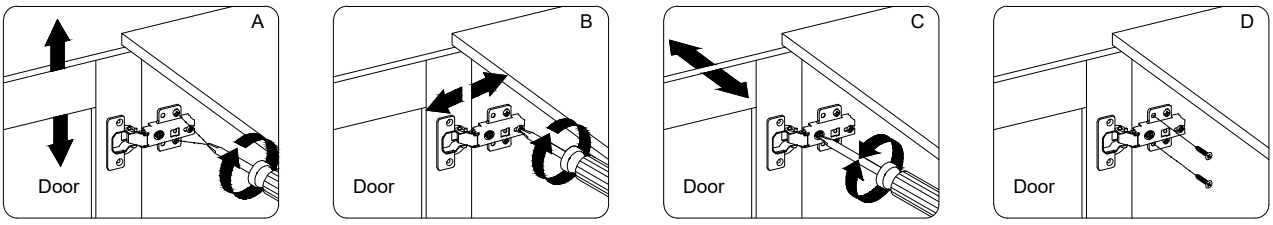



1. To adjust the doors up and down, please refer to step (A)
2. To adjust the distance between the doors and side panels, please refer to (B)
3. To adjust the gap between two doors, please refer to step (C)
4. After the adjustment is finished, please tighten the screws, refer to step (D)

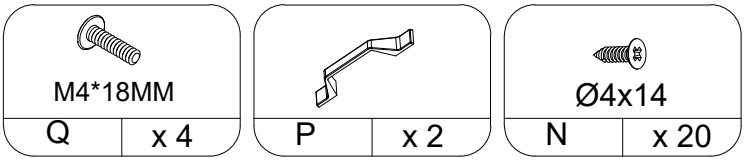


INSTALLATION INSTRUCTION


STEP28

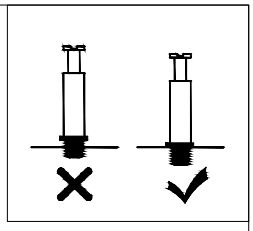


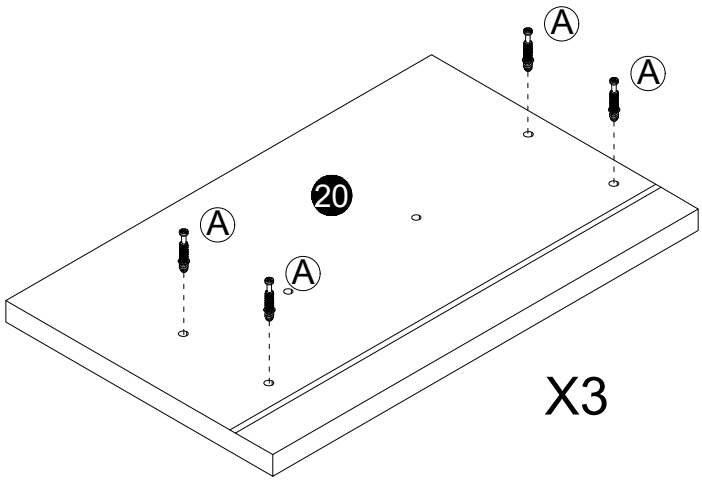

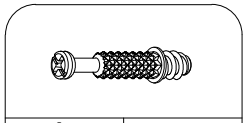


STEP29

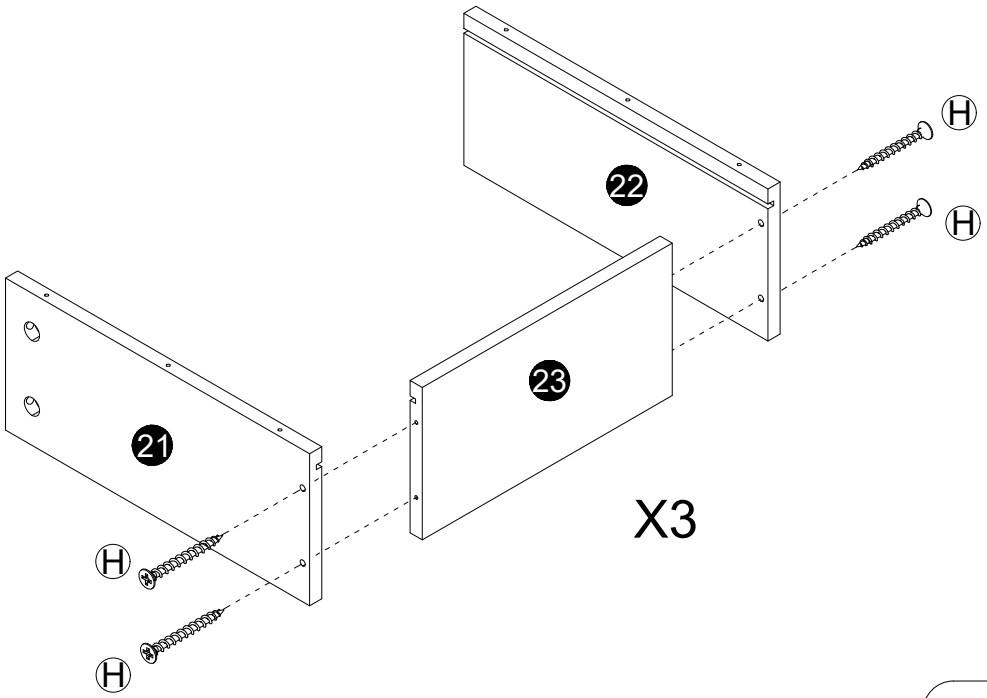

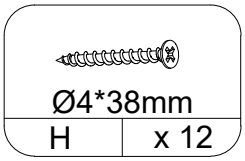


INSTALLATION INSTRUCTION


STEP30

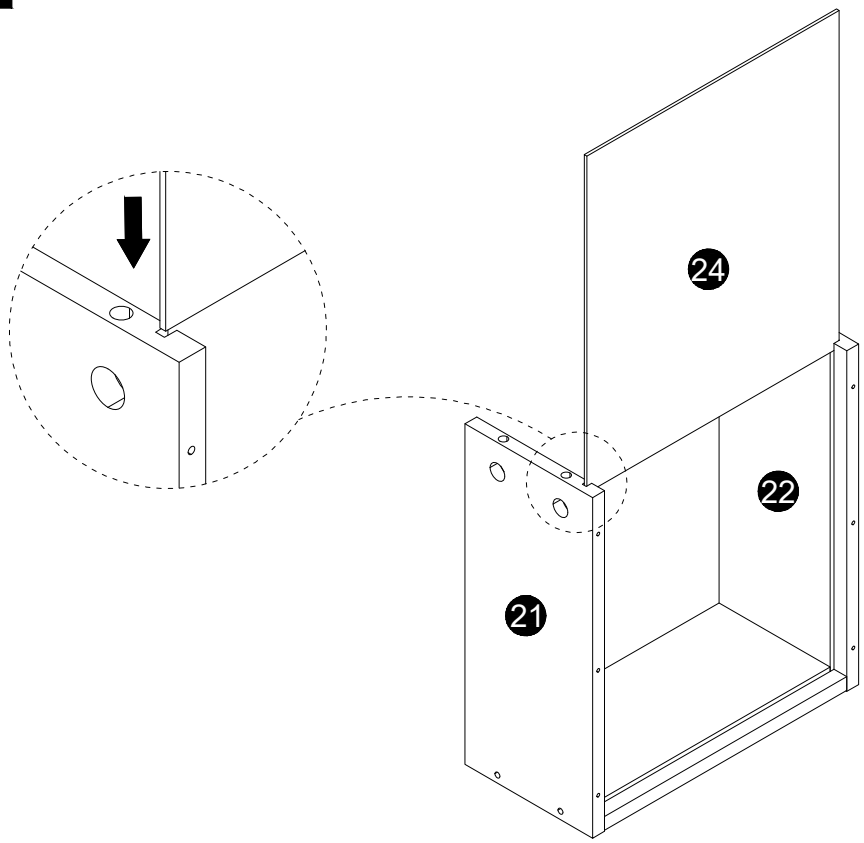

X3

STEP31

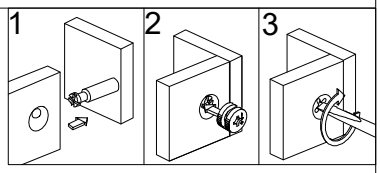

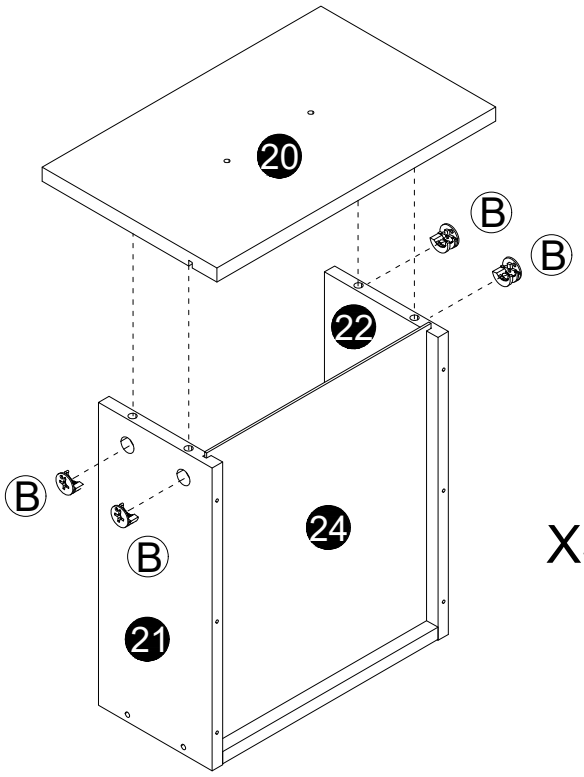

X3




Ø15x9.5


B	x 12

INSTALLATION INSTRUCTION

STEP32

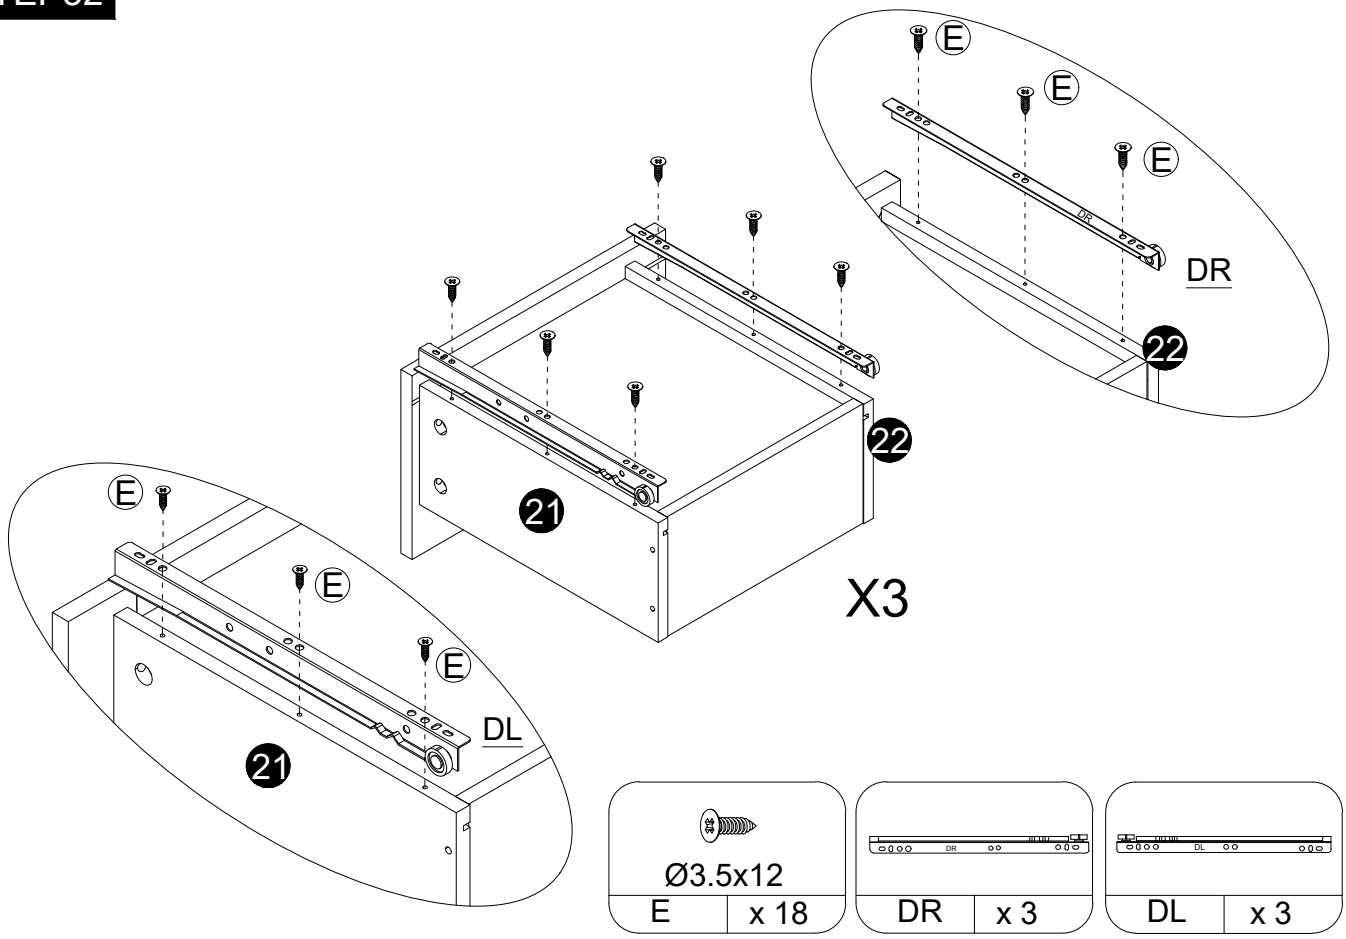



STEP33

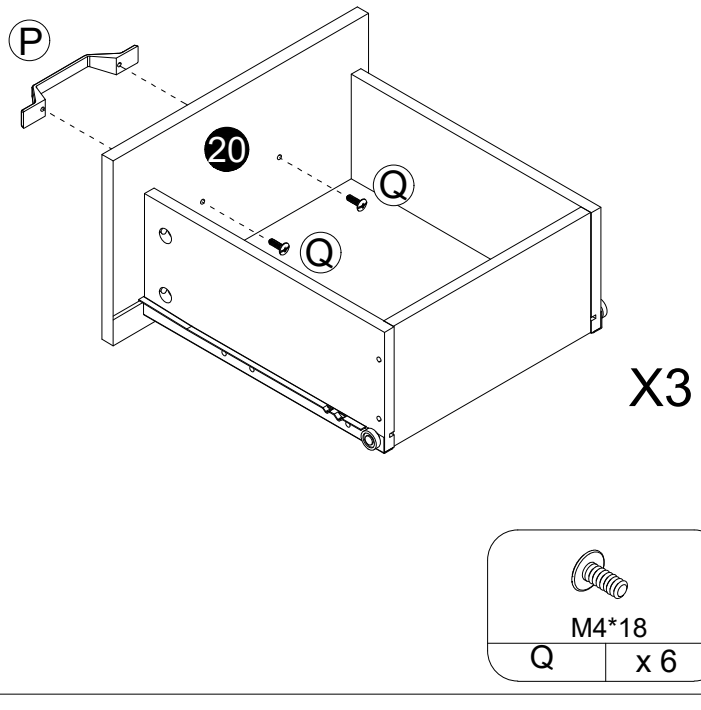


INSTALLATION INSTRUCTION


STEP34

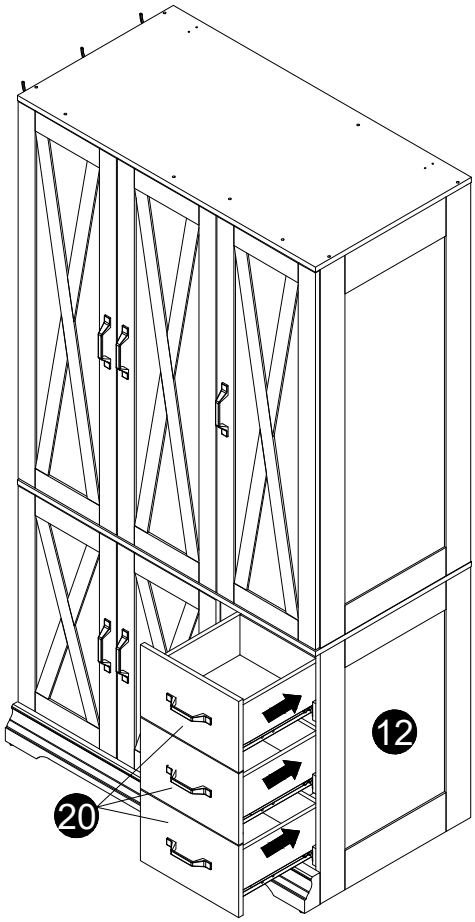

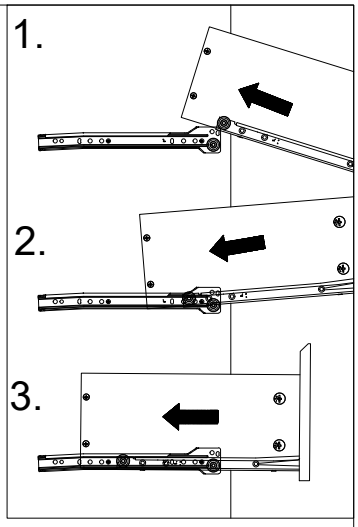

STEP35

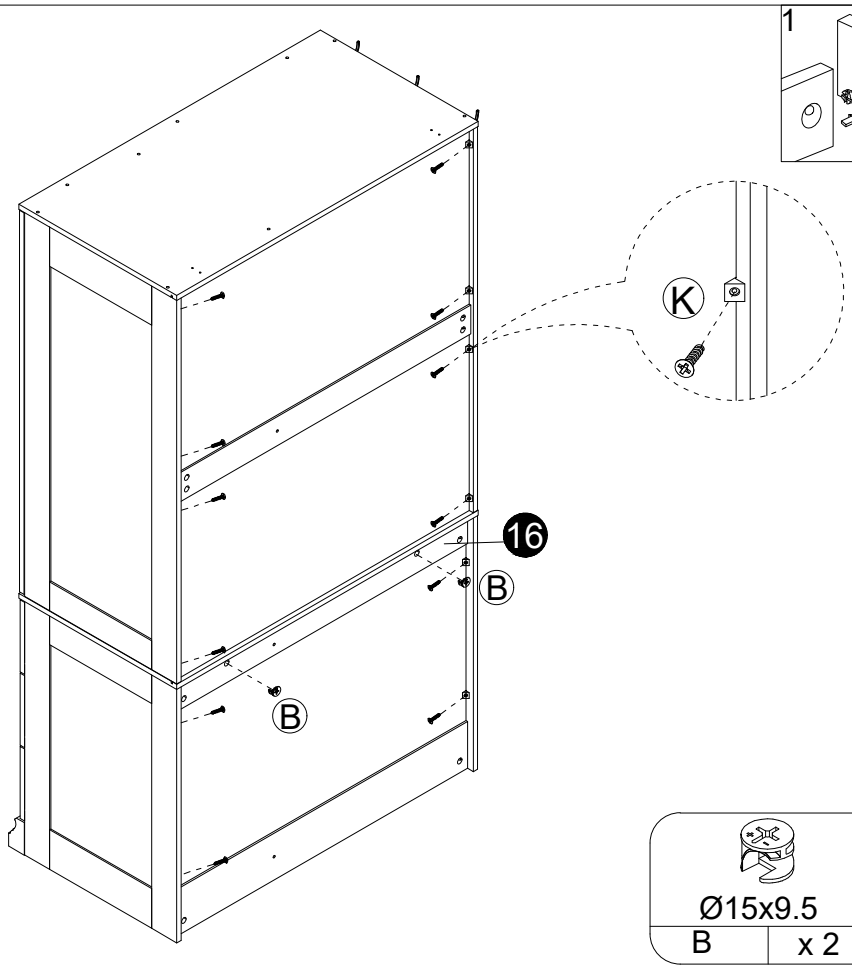

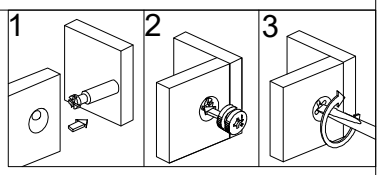



Ø15x9.5	
B	x 2

Ø3x15	
K	x 12


INSTALLATION INSTRUCTION

STEP36

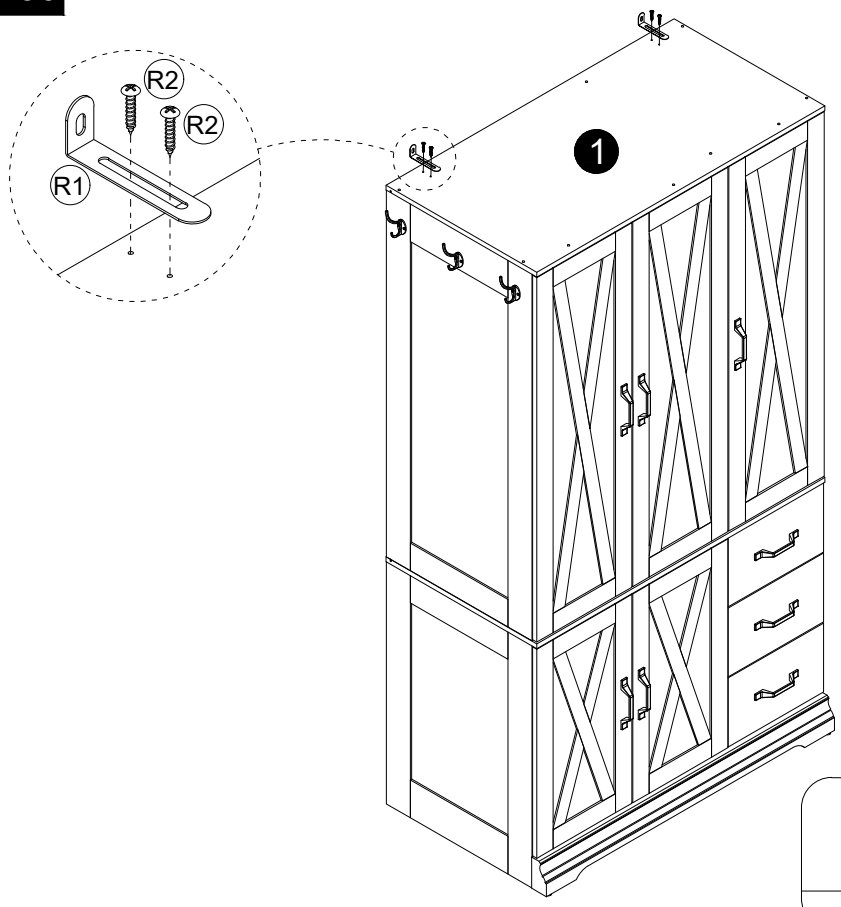


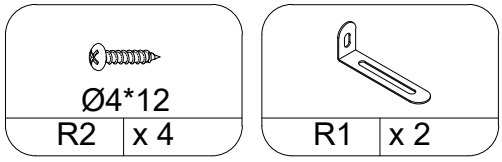


STEP37

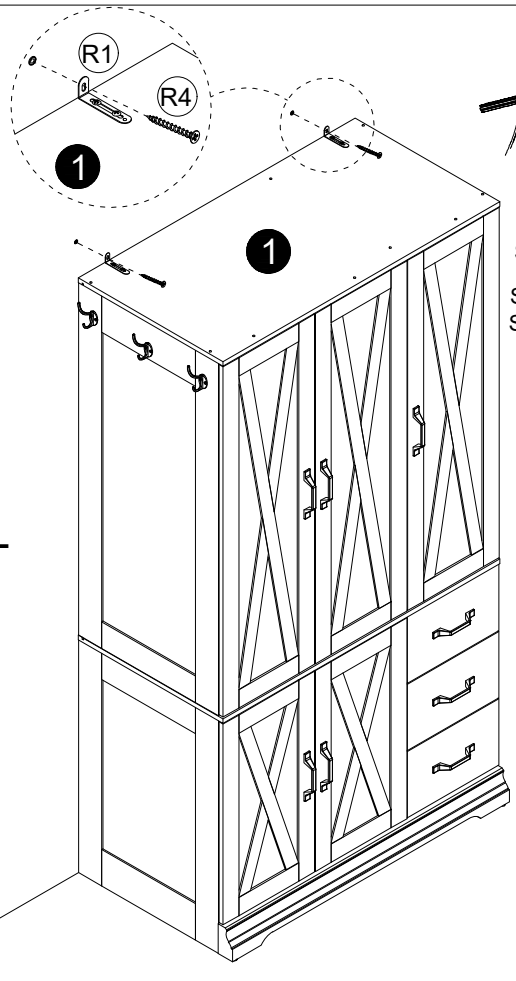

WALL

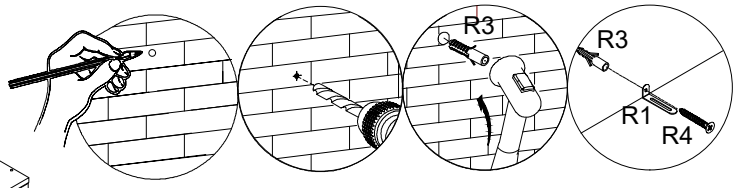


Step1: Determine the location of the anti-overturning on the wall and then mark the position after confirming the product has been balanced.
Step 2: Drill the hole and then fixed the tacke (R3) on the wall.
Step 3: Use screw (R4) to fix the pat L (R1) on the wall.

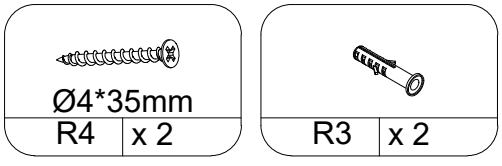

INSTALLATION INSTRUCTION

STEP38

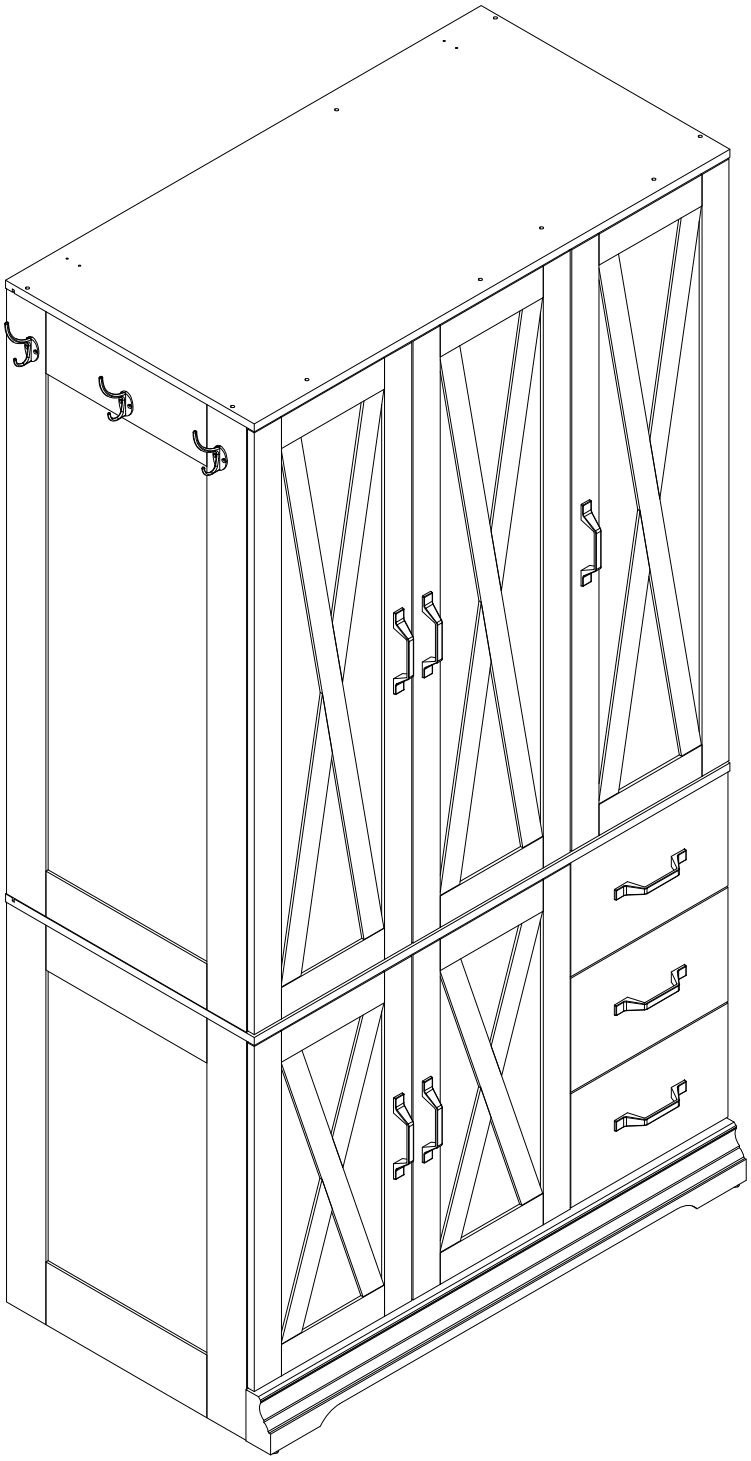

Made in Vietnam