



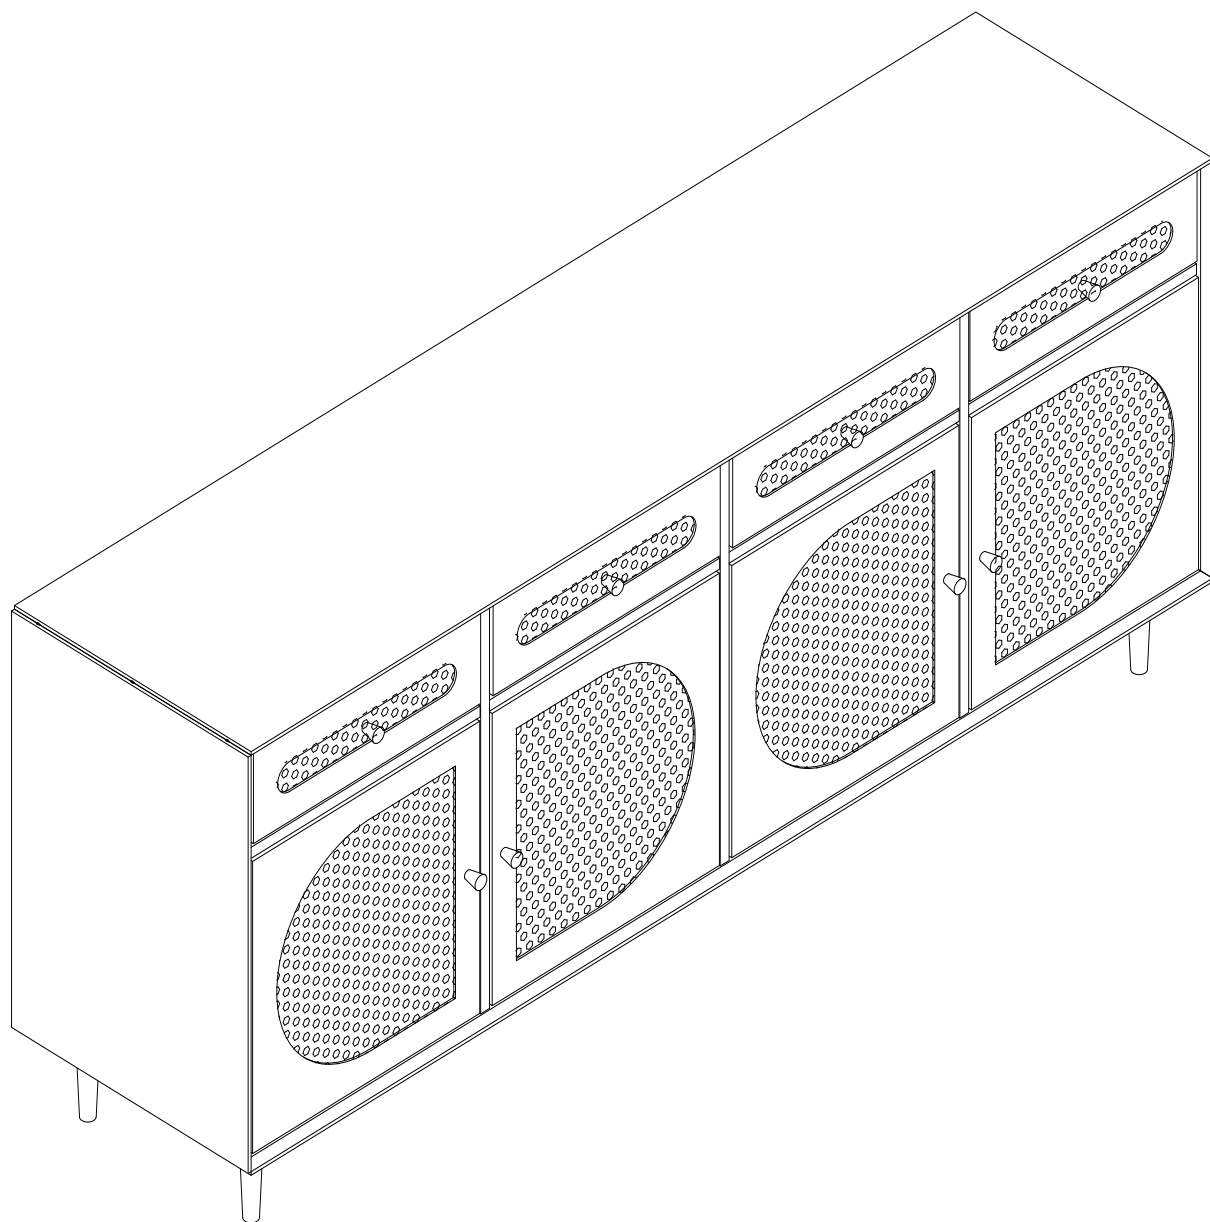

UESR'S MANUAL

TV stand

Exploded Views

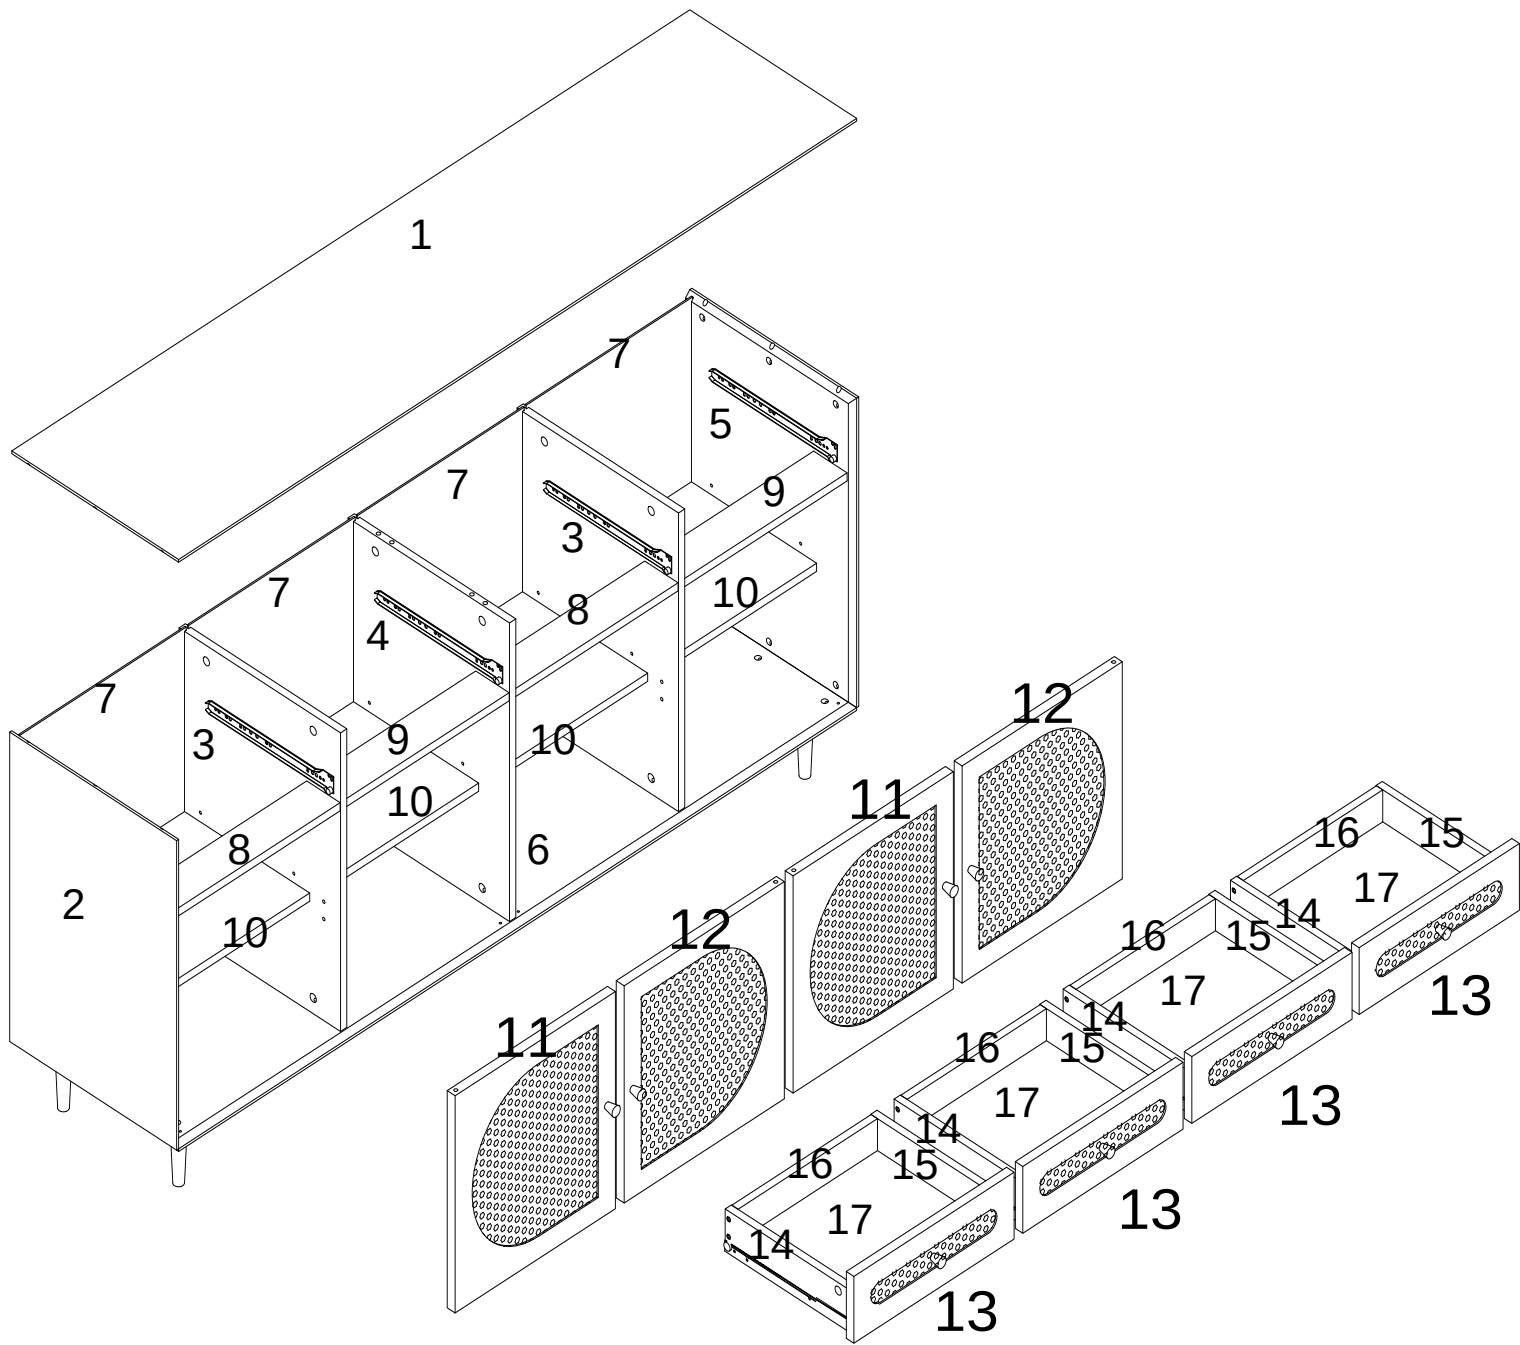

A*28



Φ6*30

B*28



Φ15*10

C*28



Φ8*30

D*16



Φ4*30

E*40



Φ3.5*12



F*8



G*24




H*8



M4*24


J*12




K*20




L*4



M*16



N*4



CL*4



CR*4





DL*4



DR*4









Assembling the unit with camlocks and wood dowels.

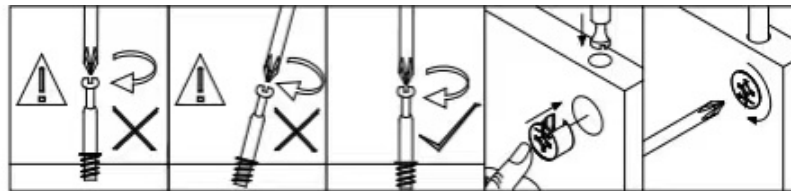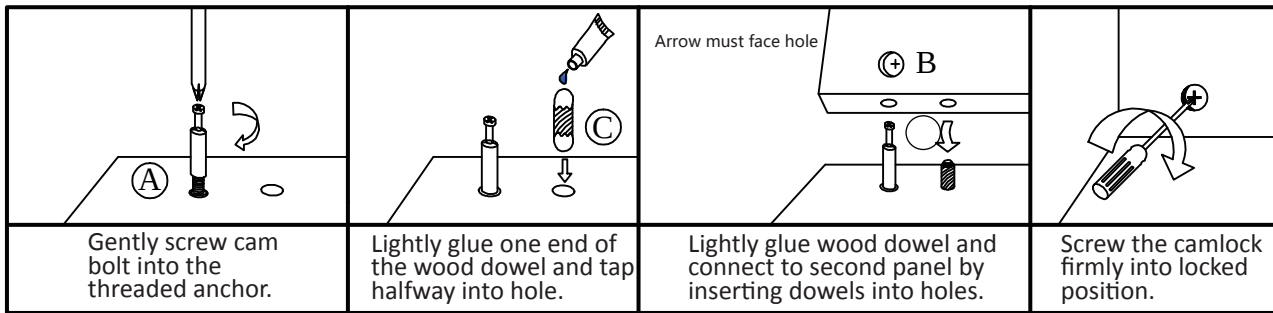





Dear customer, when you use the connector cam fitting to install this product please align the hole vertically and screw it in slowly.
If you use an electric drill, please adjust it to a gear with a lower speed, and then screw it in vertically. Doing this can make your installation smoother.
Thank you for your cooperation.

Step1 Schritt1

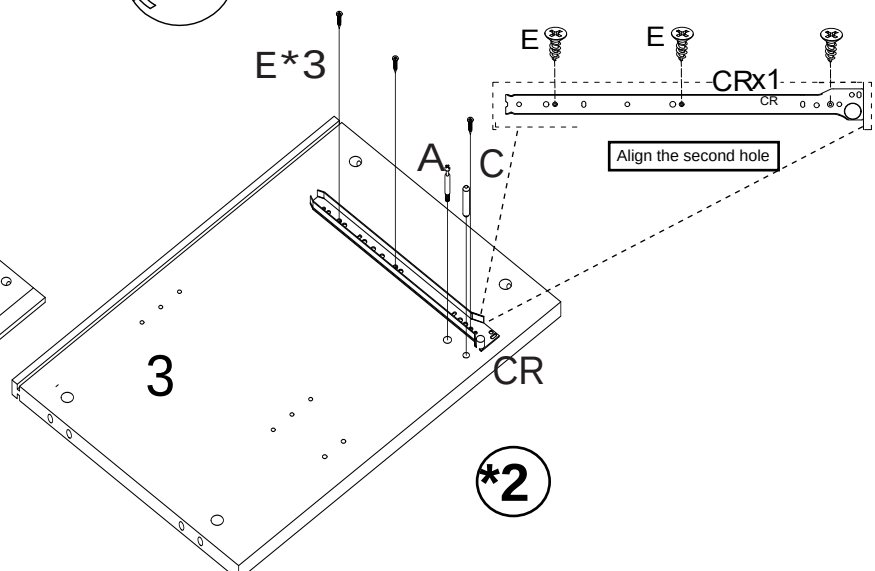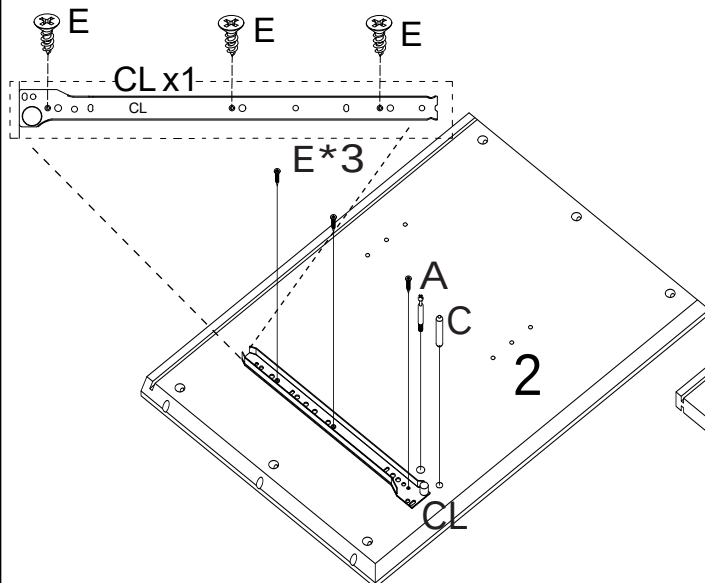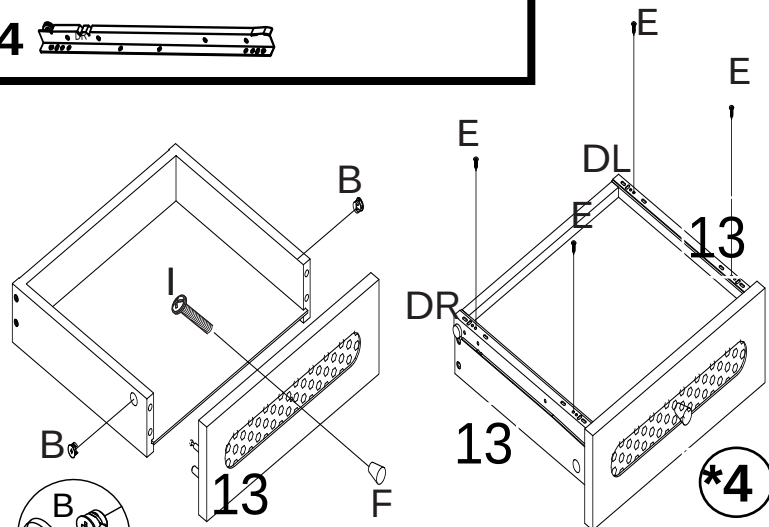
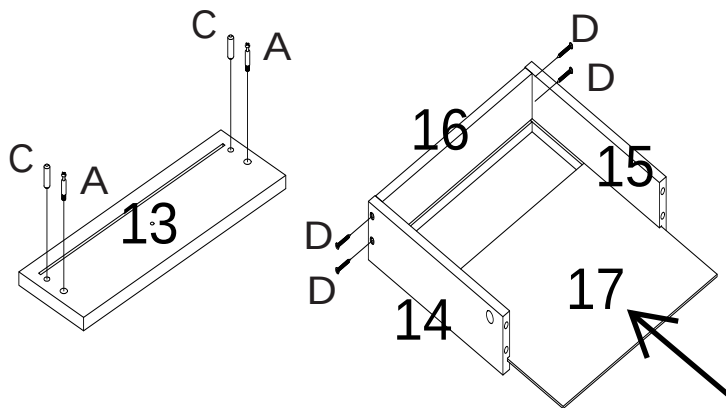
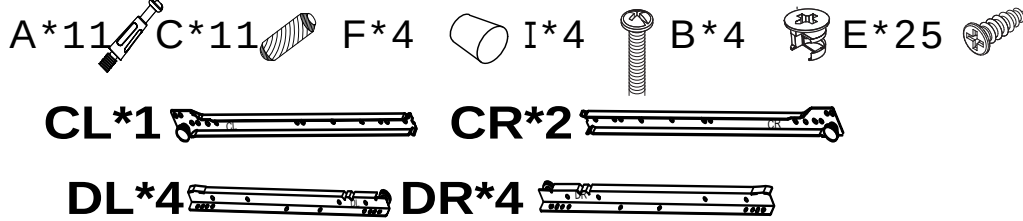
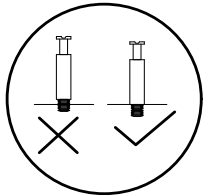


Step2
Schritt2


A*5  C*5  E*15  CL*3  CR*2 

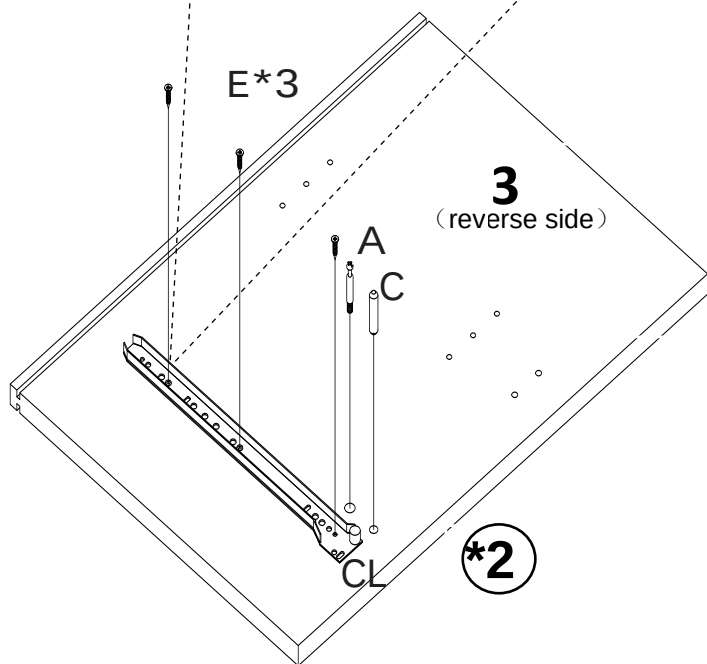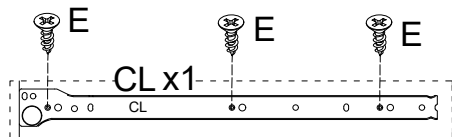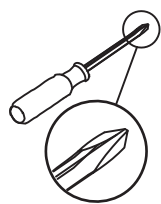

Align the second hole

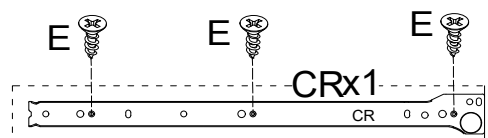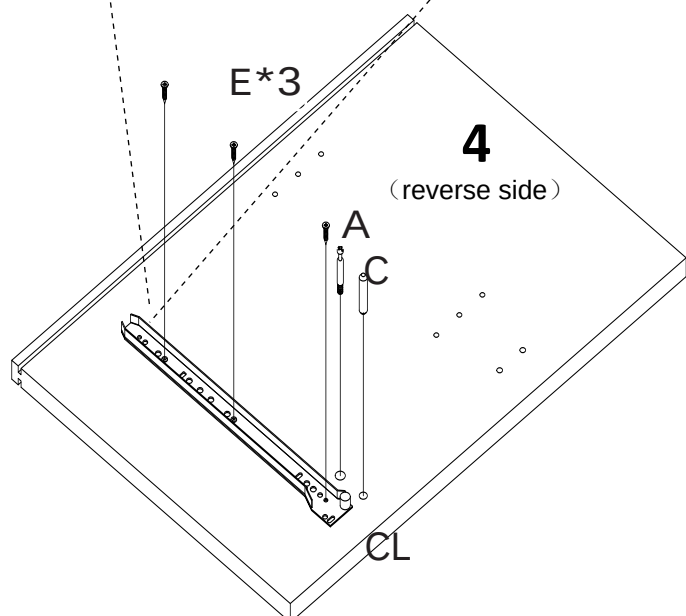
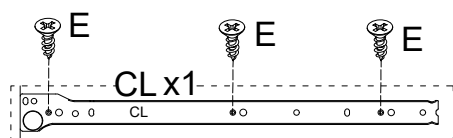
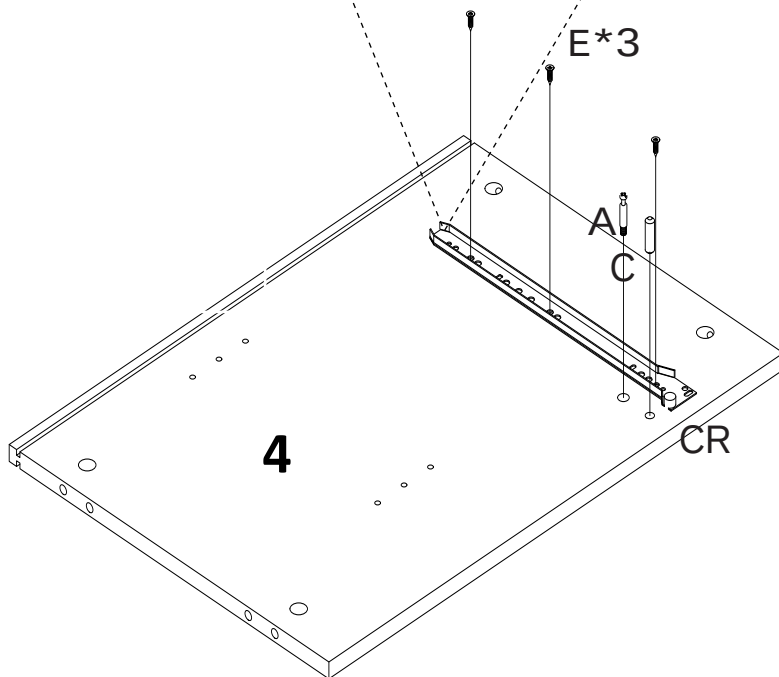


Align the second hole

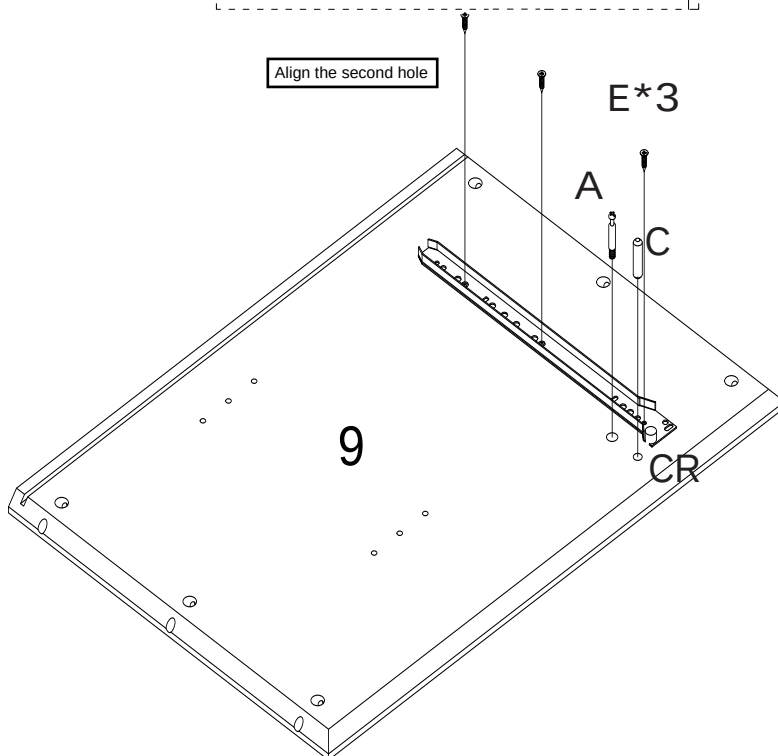

Step3
Schritt3

B*4

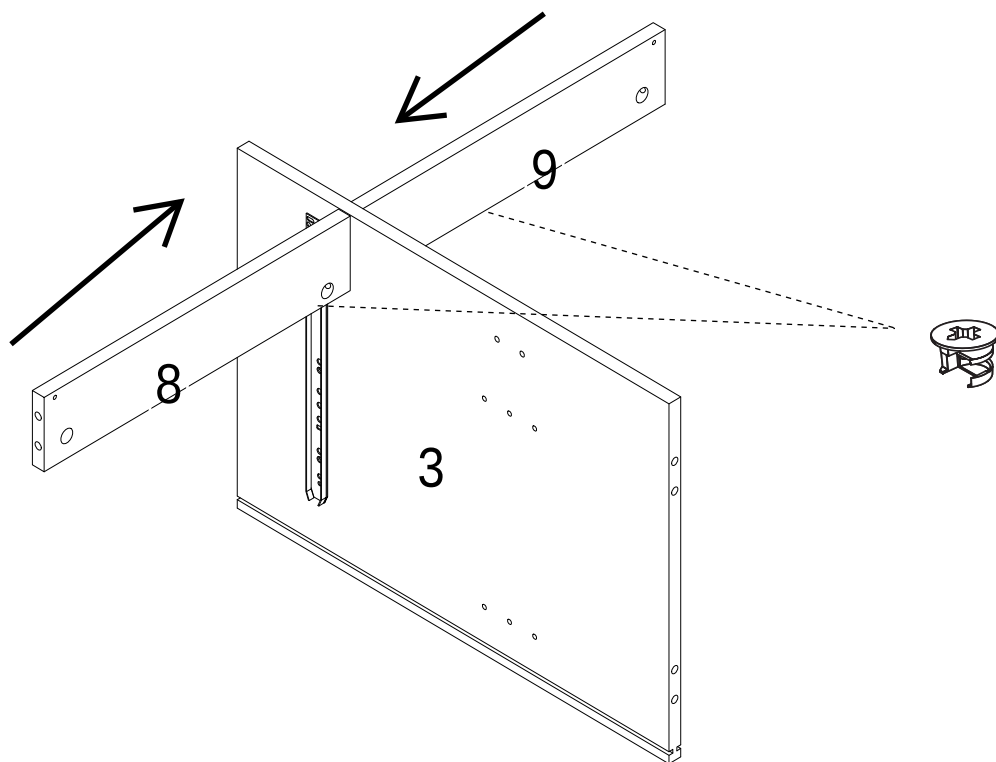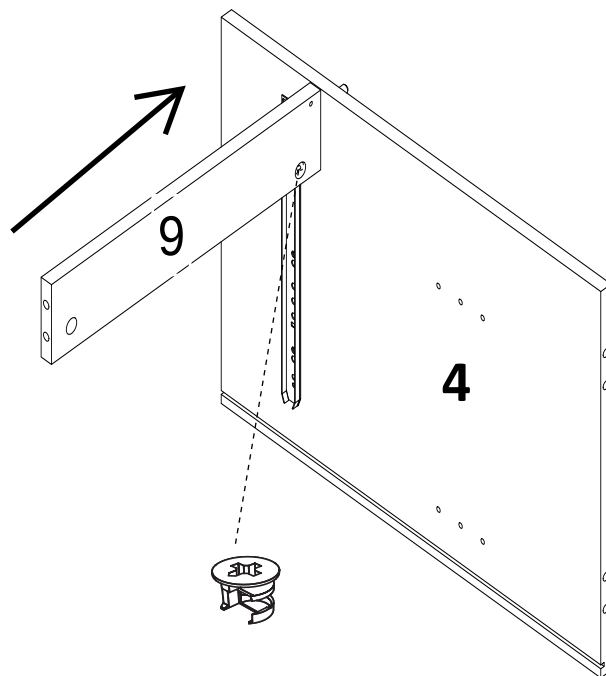
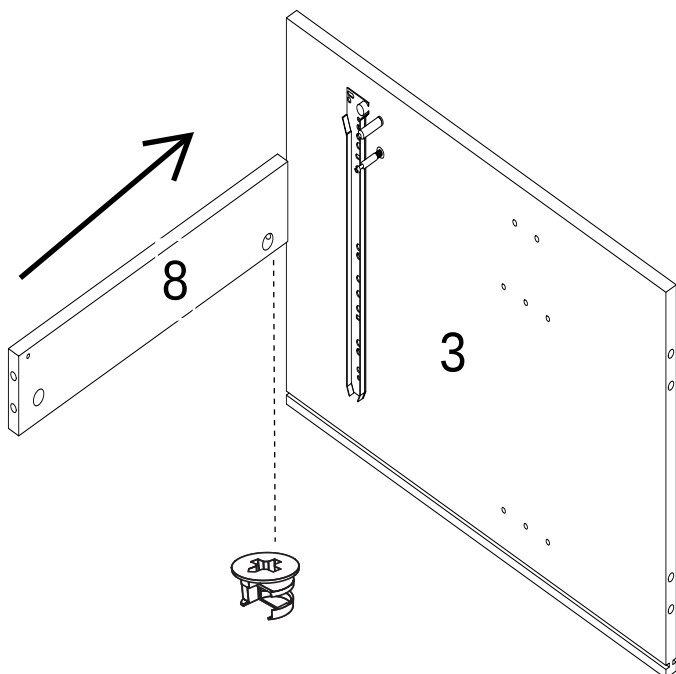


Step4
Schritt4


B*4





B*2

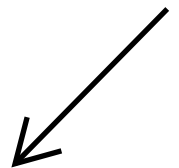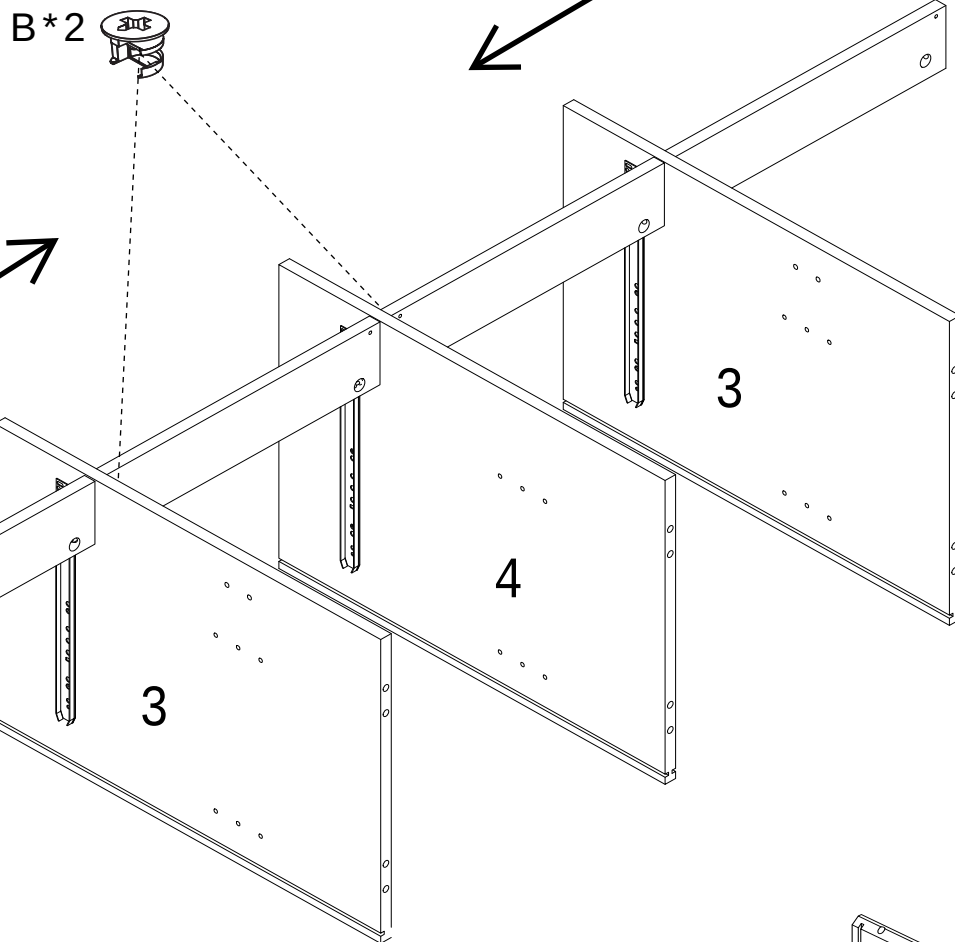



5

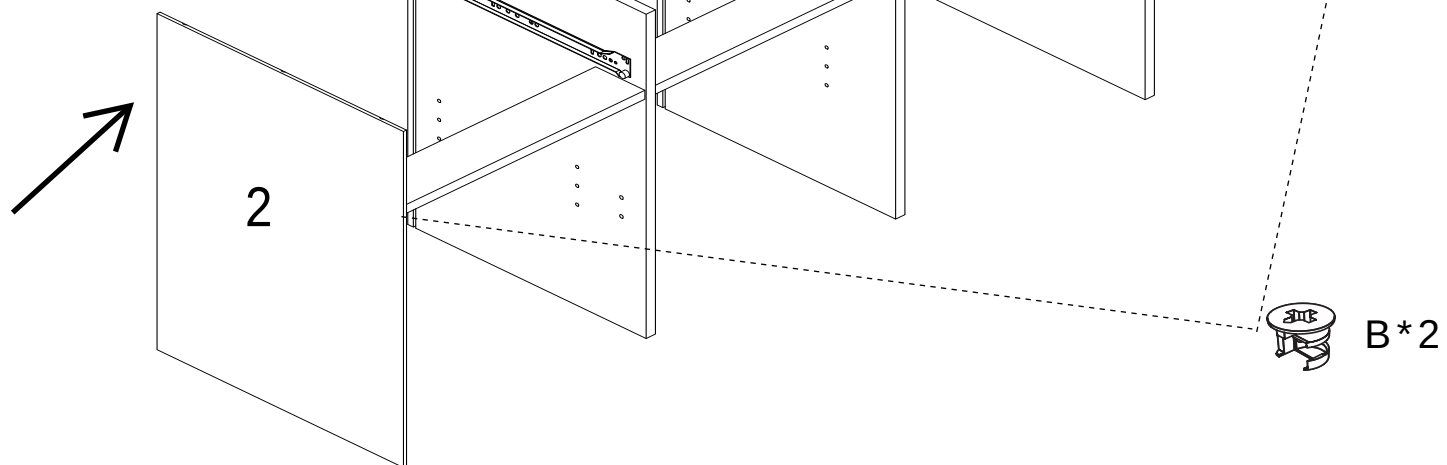

Step5
Schritt5

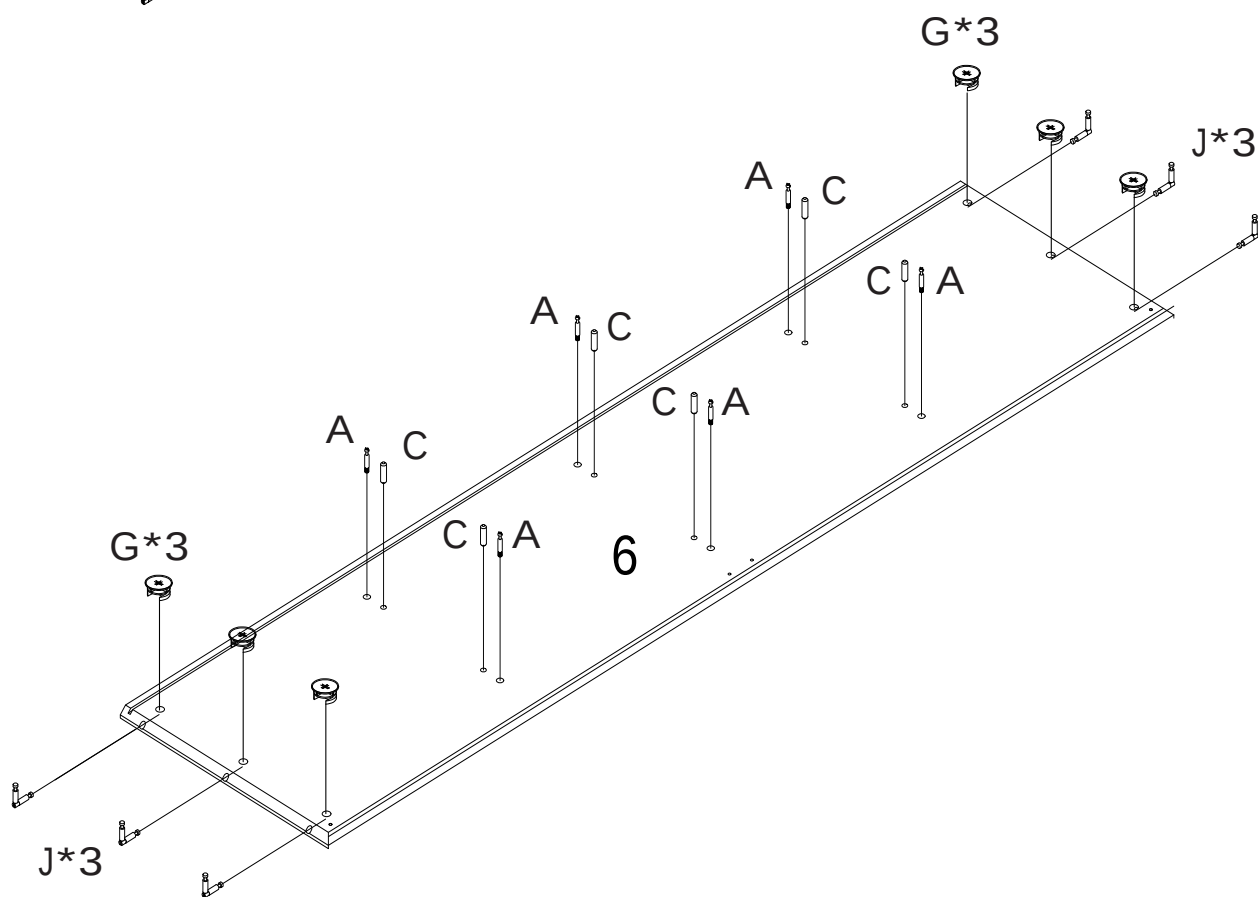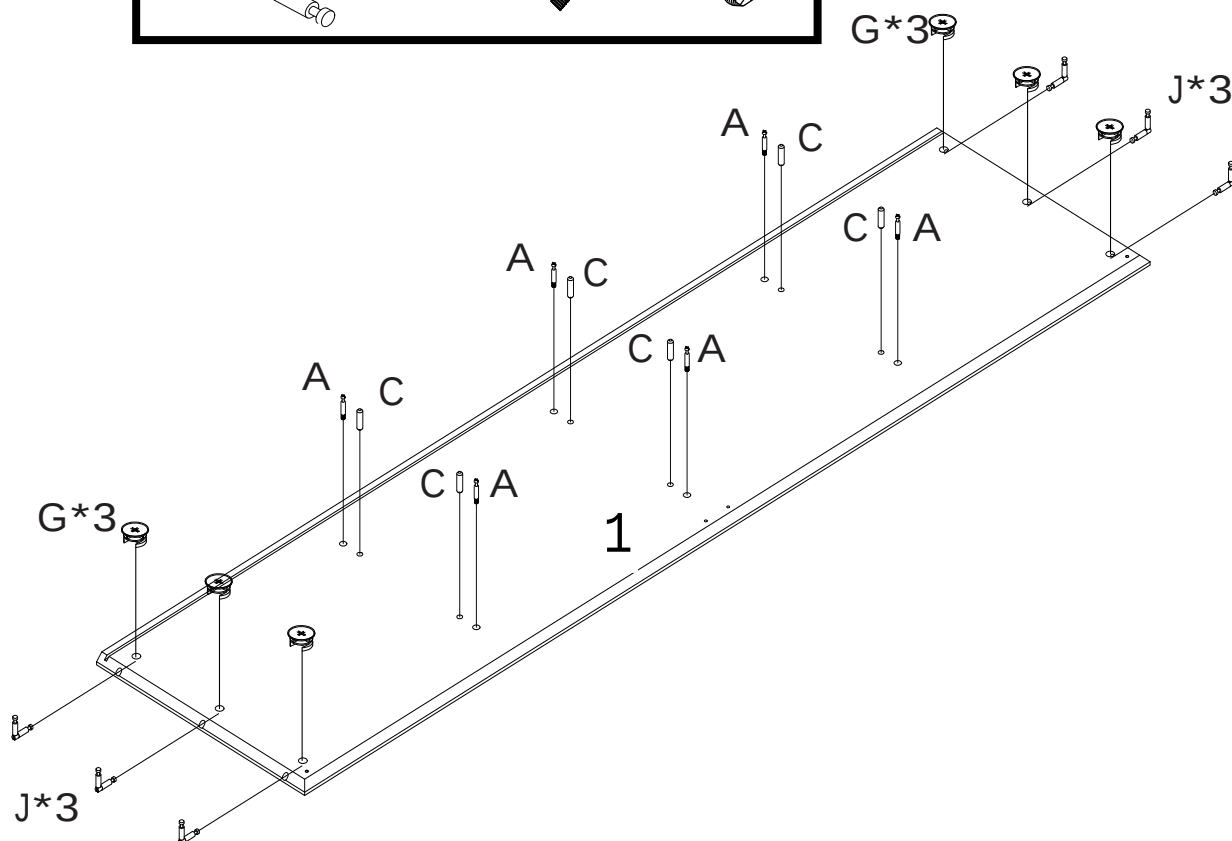


Step6
Schritt6

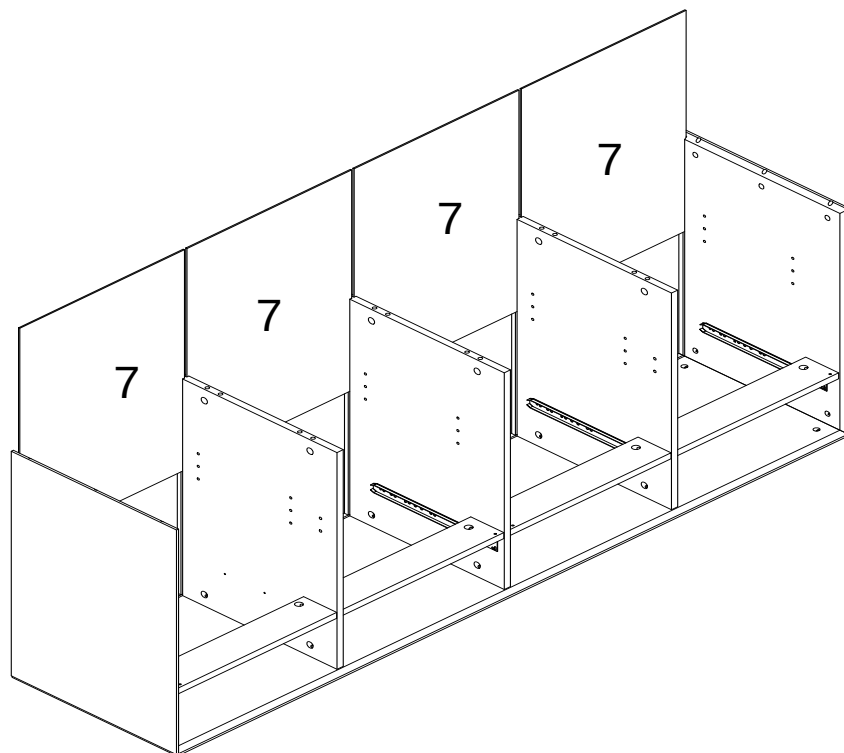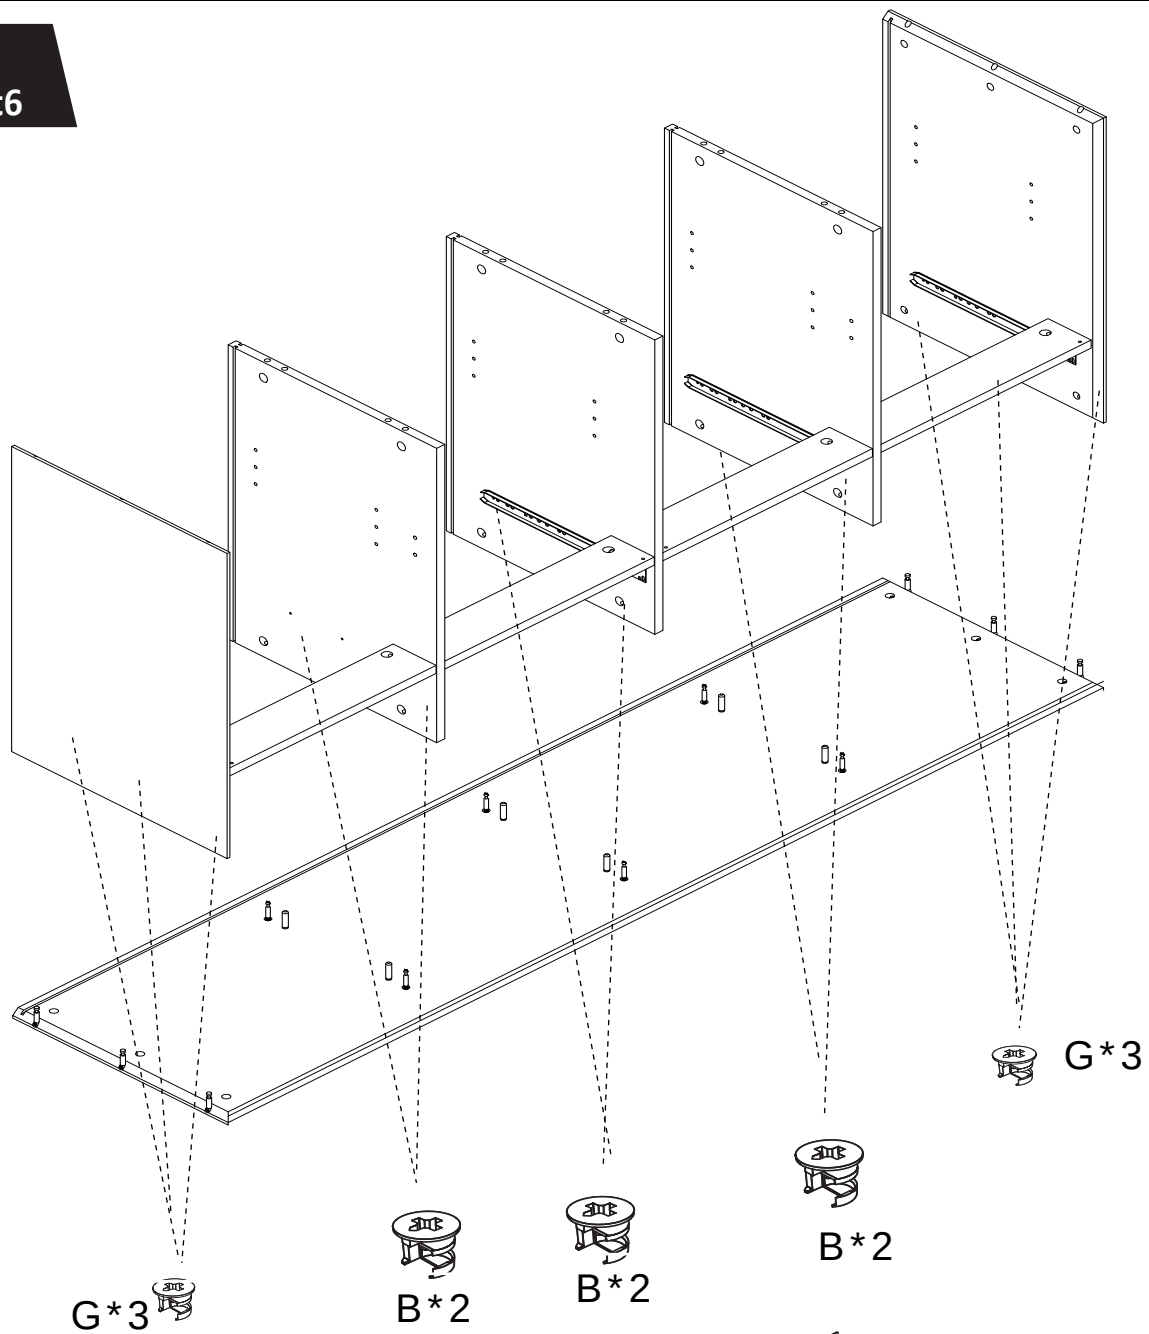

Step6
Schritt6

K*20  G*6  B*6 


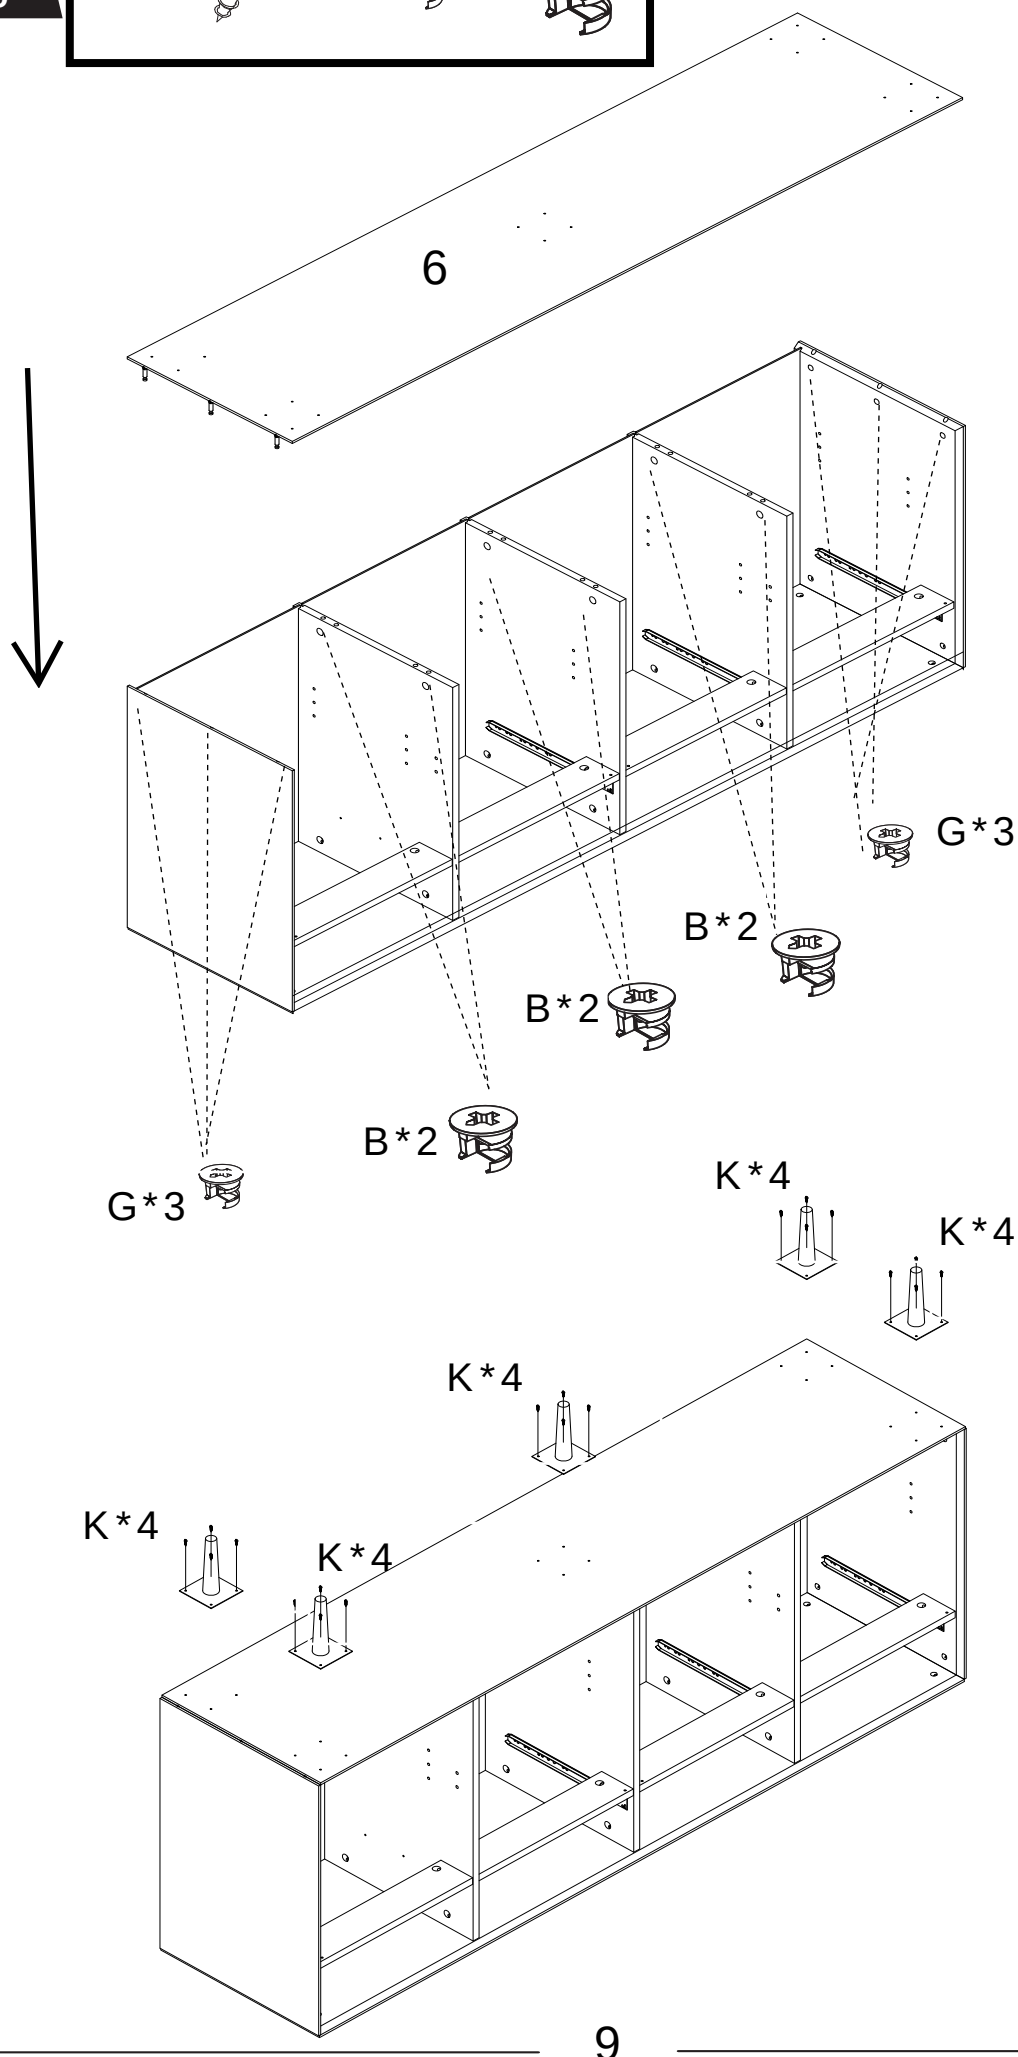


Step7
Schritt7

M*16




L*4

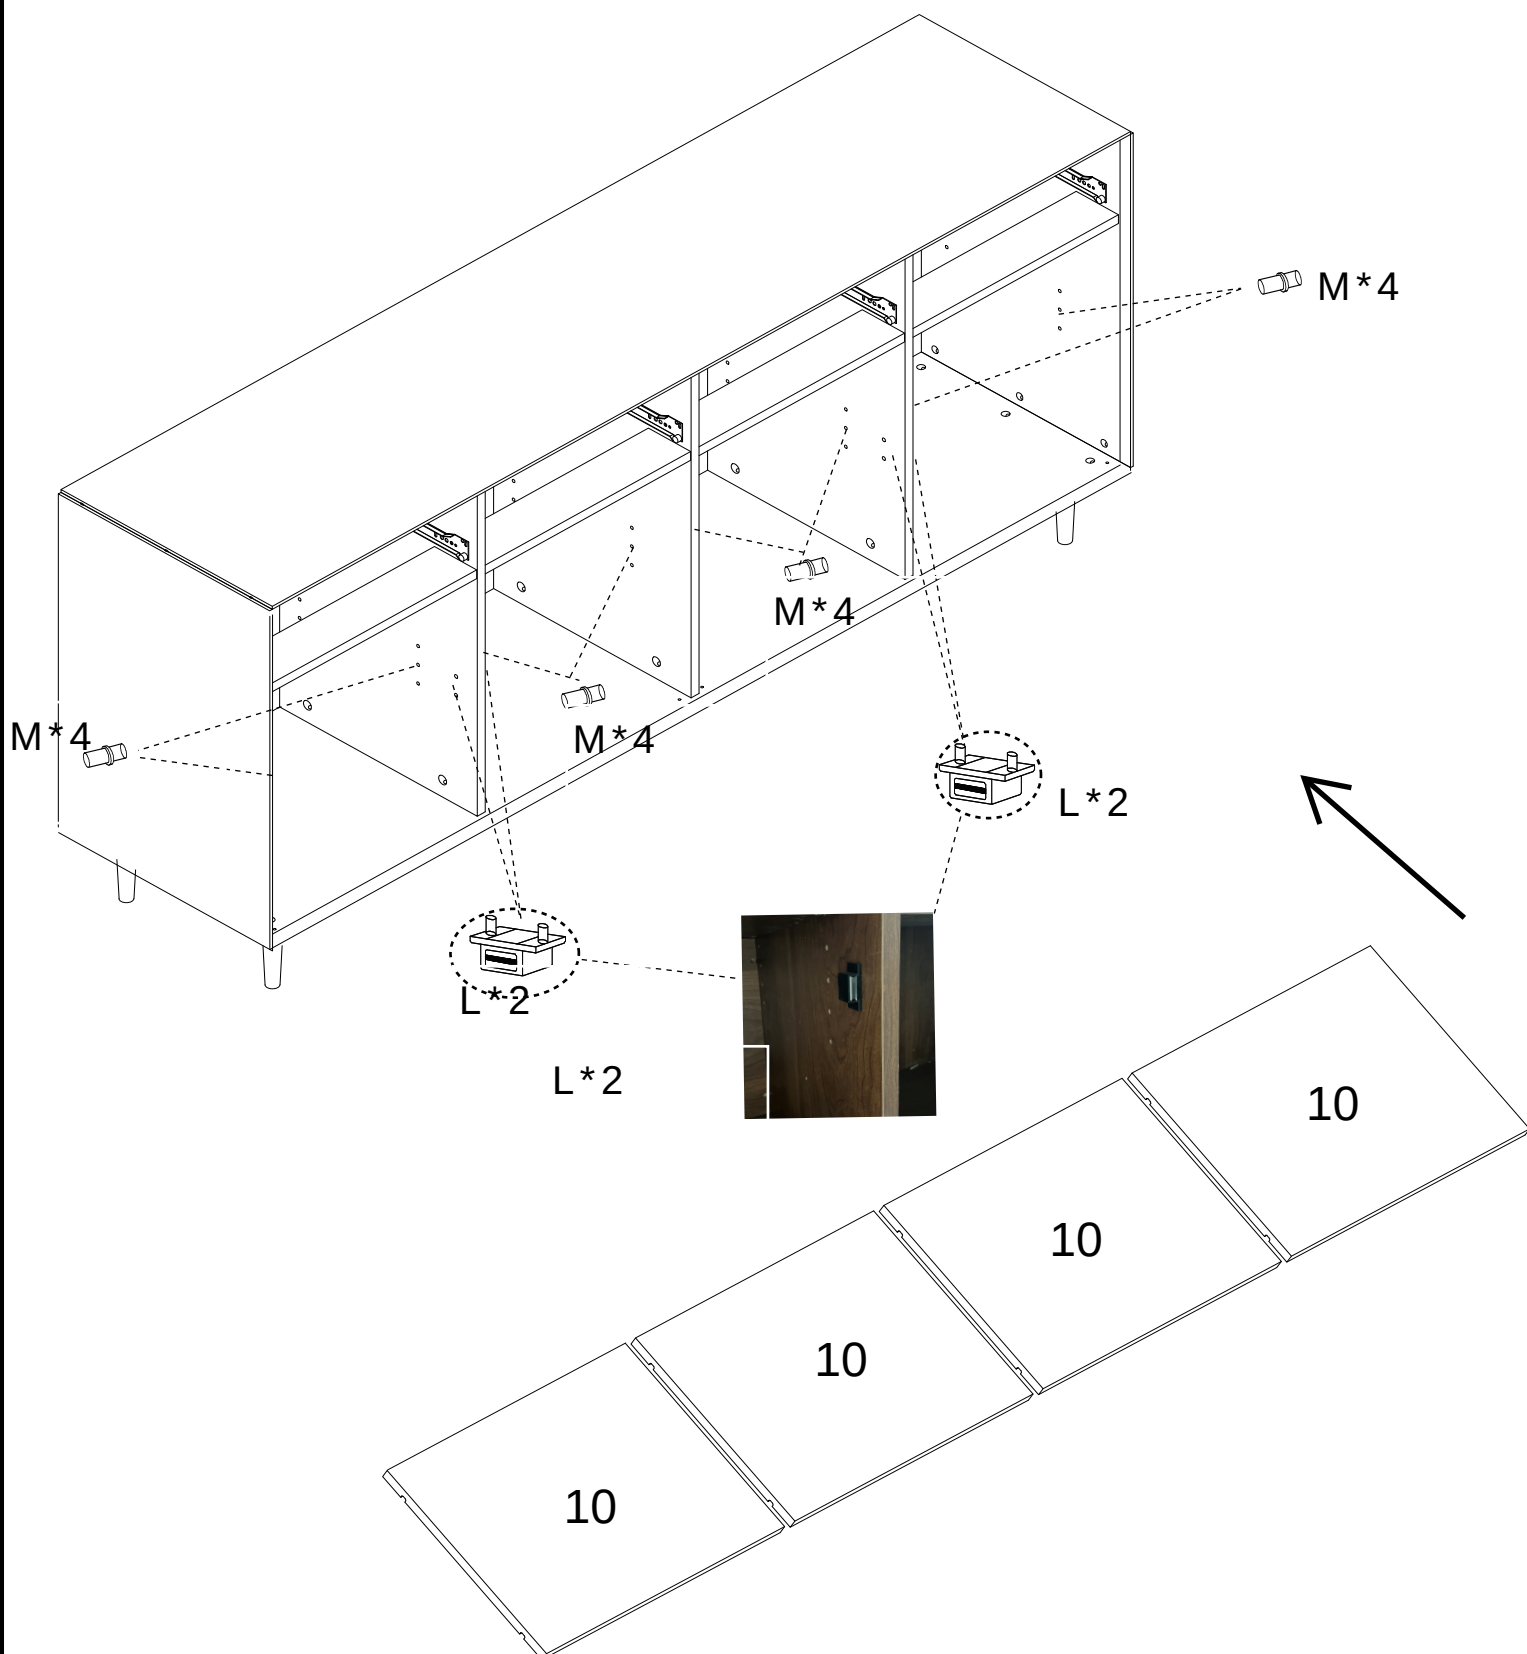

Step8
Schritt8


N*4



H*8



I*4



F*4

