






User Manual





ASSEMBLY INSTRUCTION

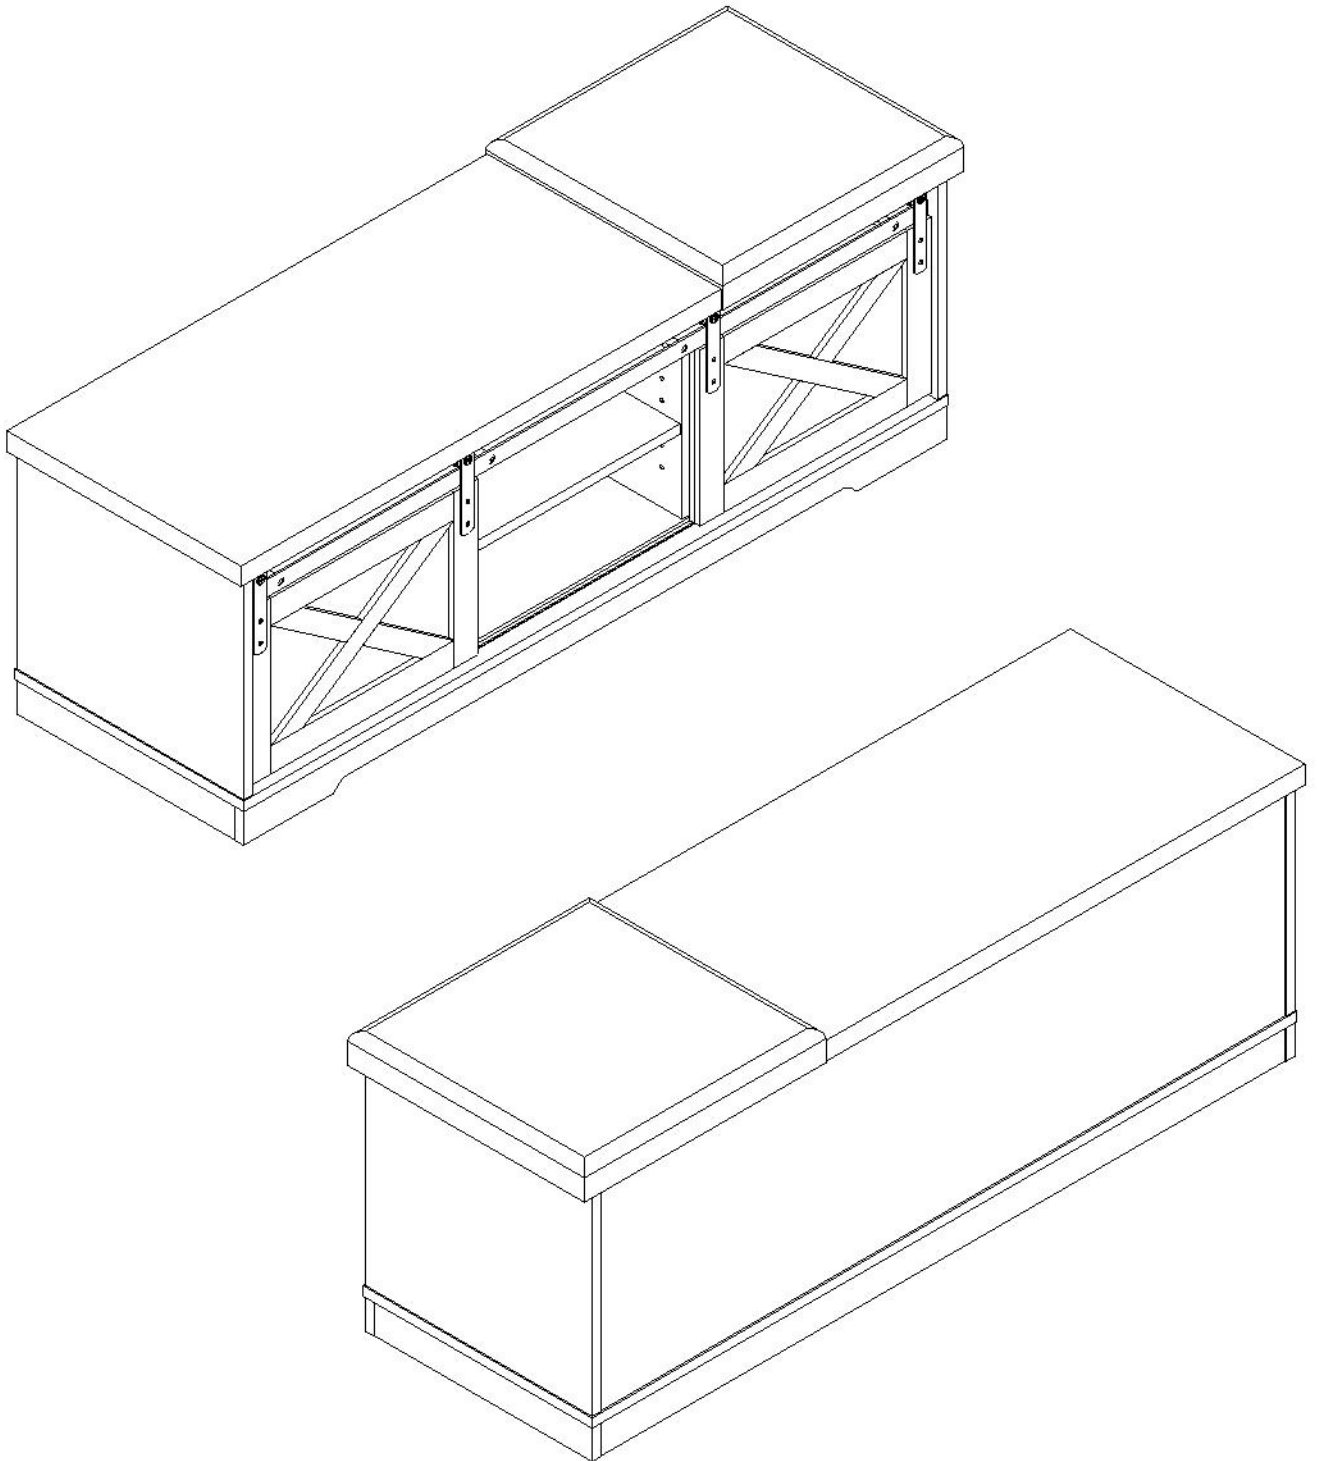


CD-086




Parts List



No.	Drawing	Dimension	QTY
1		1140*50*15mm	*1
2		363*50*15mm	*1
3		363*50*15mm	*1
4		347*50*15mm	*1
5		1172*50*15mm	*1
6		1174*382*15mm	*1
7		1140*60*15mm	*1
8		320*322*15mm	*1
9		320*322*15mm	*1

No.	Drawing	Dimension	QTY
10		1140*320*15mm	*1
11		320*378*15mm	*1
12		320*378*15mm	*1
13		800*390*30mm	*1
14		400*390*60mm	*1
15		368*320*15mm	*3
16		385*254*18mm	*1
17		385*254*18mm	*1


Hardware Fitting

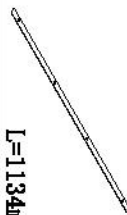NO.	Drawing	QTY
A		*40
B		*40
C		*2
D		*2
E		*4
F		*1
G		*4


NO.	Drawing	QTY
H		*4
I		*4
J		*1
K		*4
L		*40
M		*12
N		*4

NO.	Drawing	QTY
O		*4
P		*8
Q		*8
		*1
		*1
		*42

Split Graph

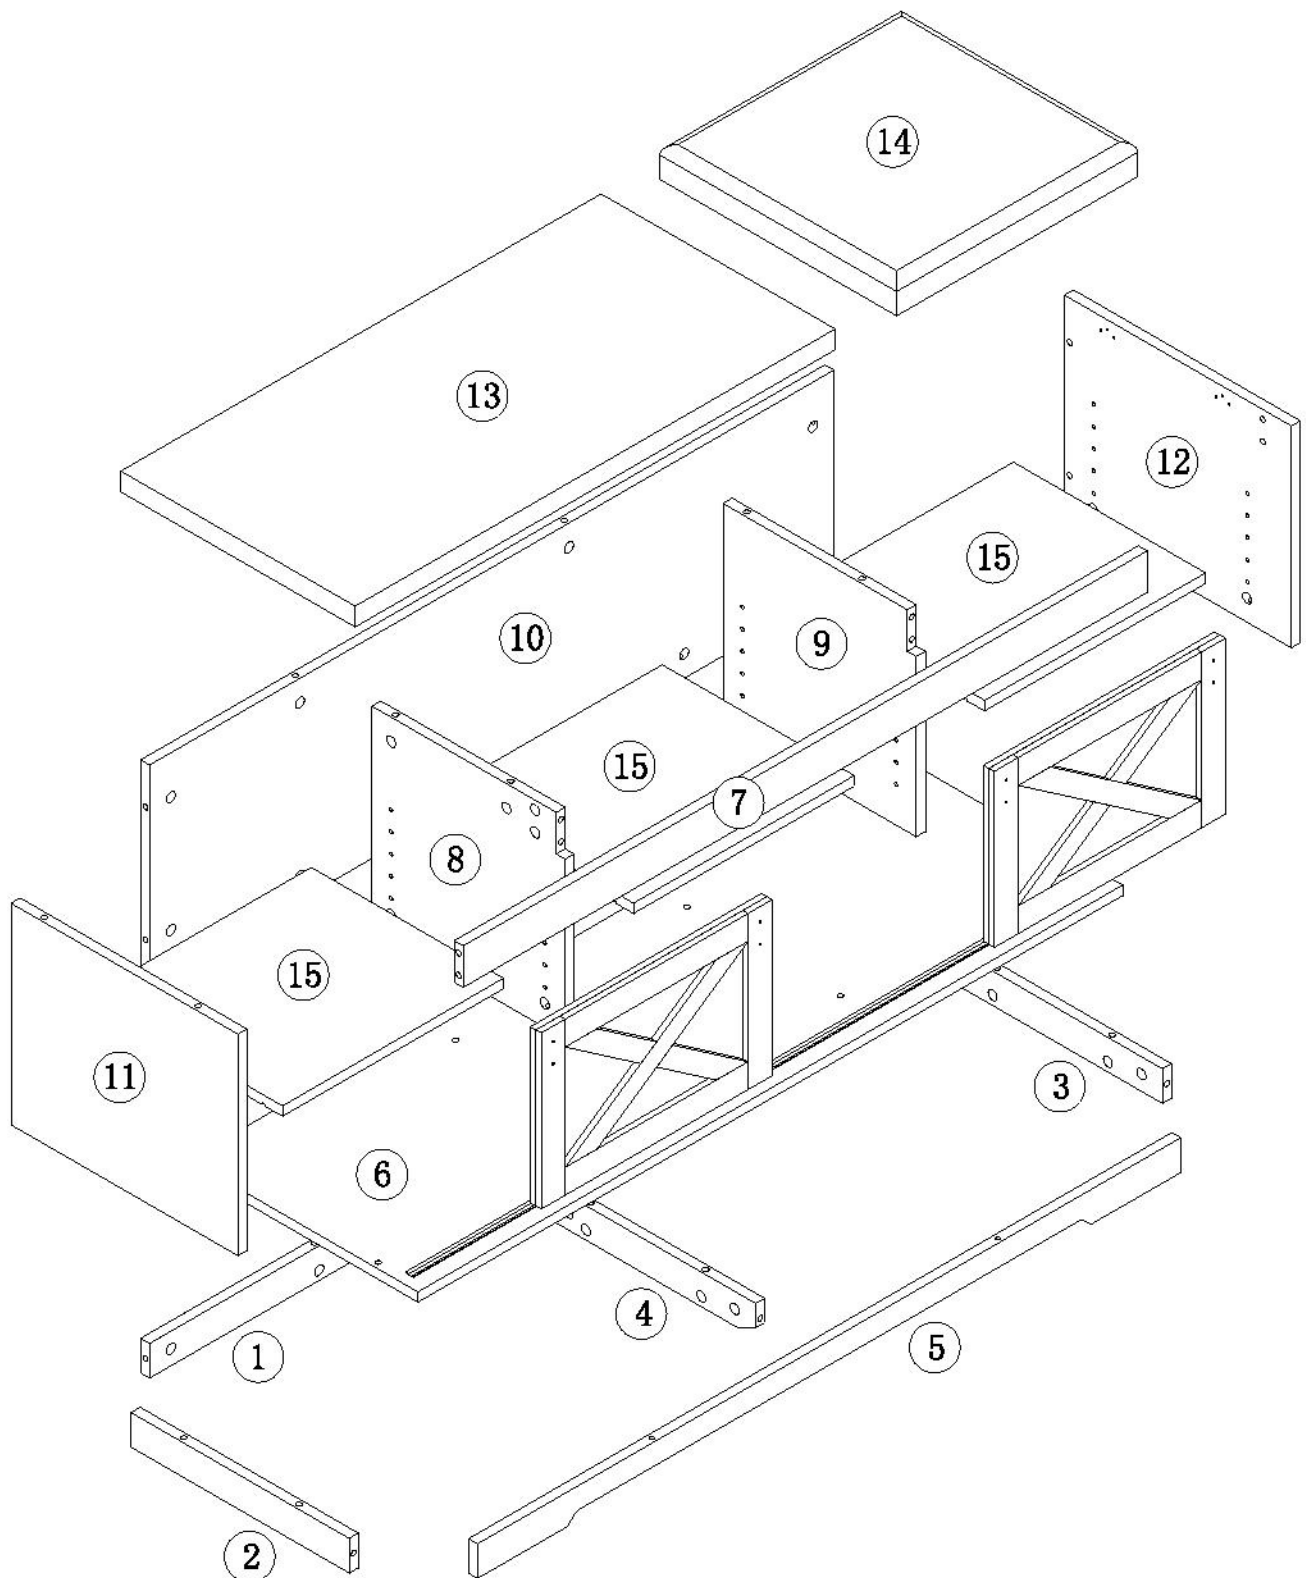


Cam Coupling Using Methods

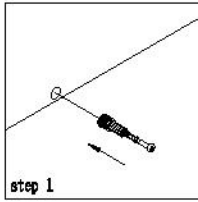


Step1.

Connect the cam coupling A as directed in the assembly instructions using hand.

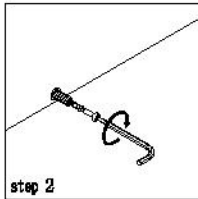


Step2.

Screw the cam coupling A as directed in the assembly instructions.

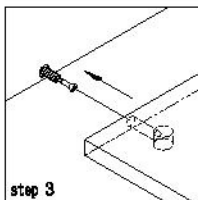


Step3.

Push the cam coupling A into the entry hole.

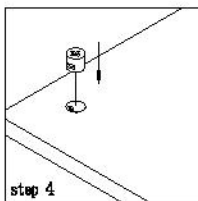


Step4.

Insert the cam coupling B as shown in the instructions.

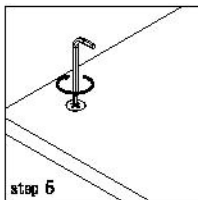


Step5.

Turn the cam coupling B clockwise with a screwdriver.

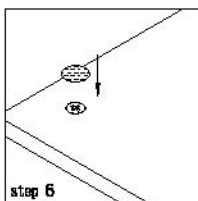

Step6.

Put on Beautycam.

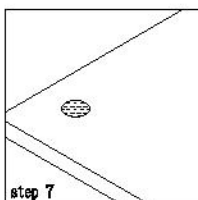


Step7.

Finished.

You should feel a click when the camlock is locked in place.


The joint is now secure.

Note: Cam Coupling Using Methods, please refer to Page No.5

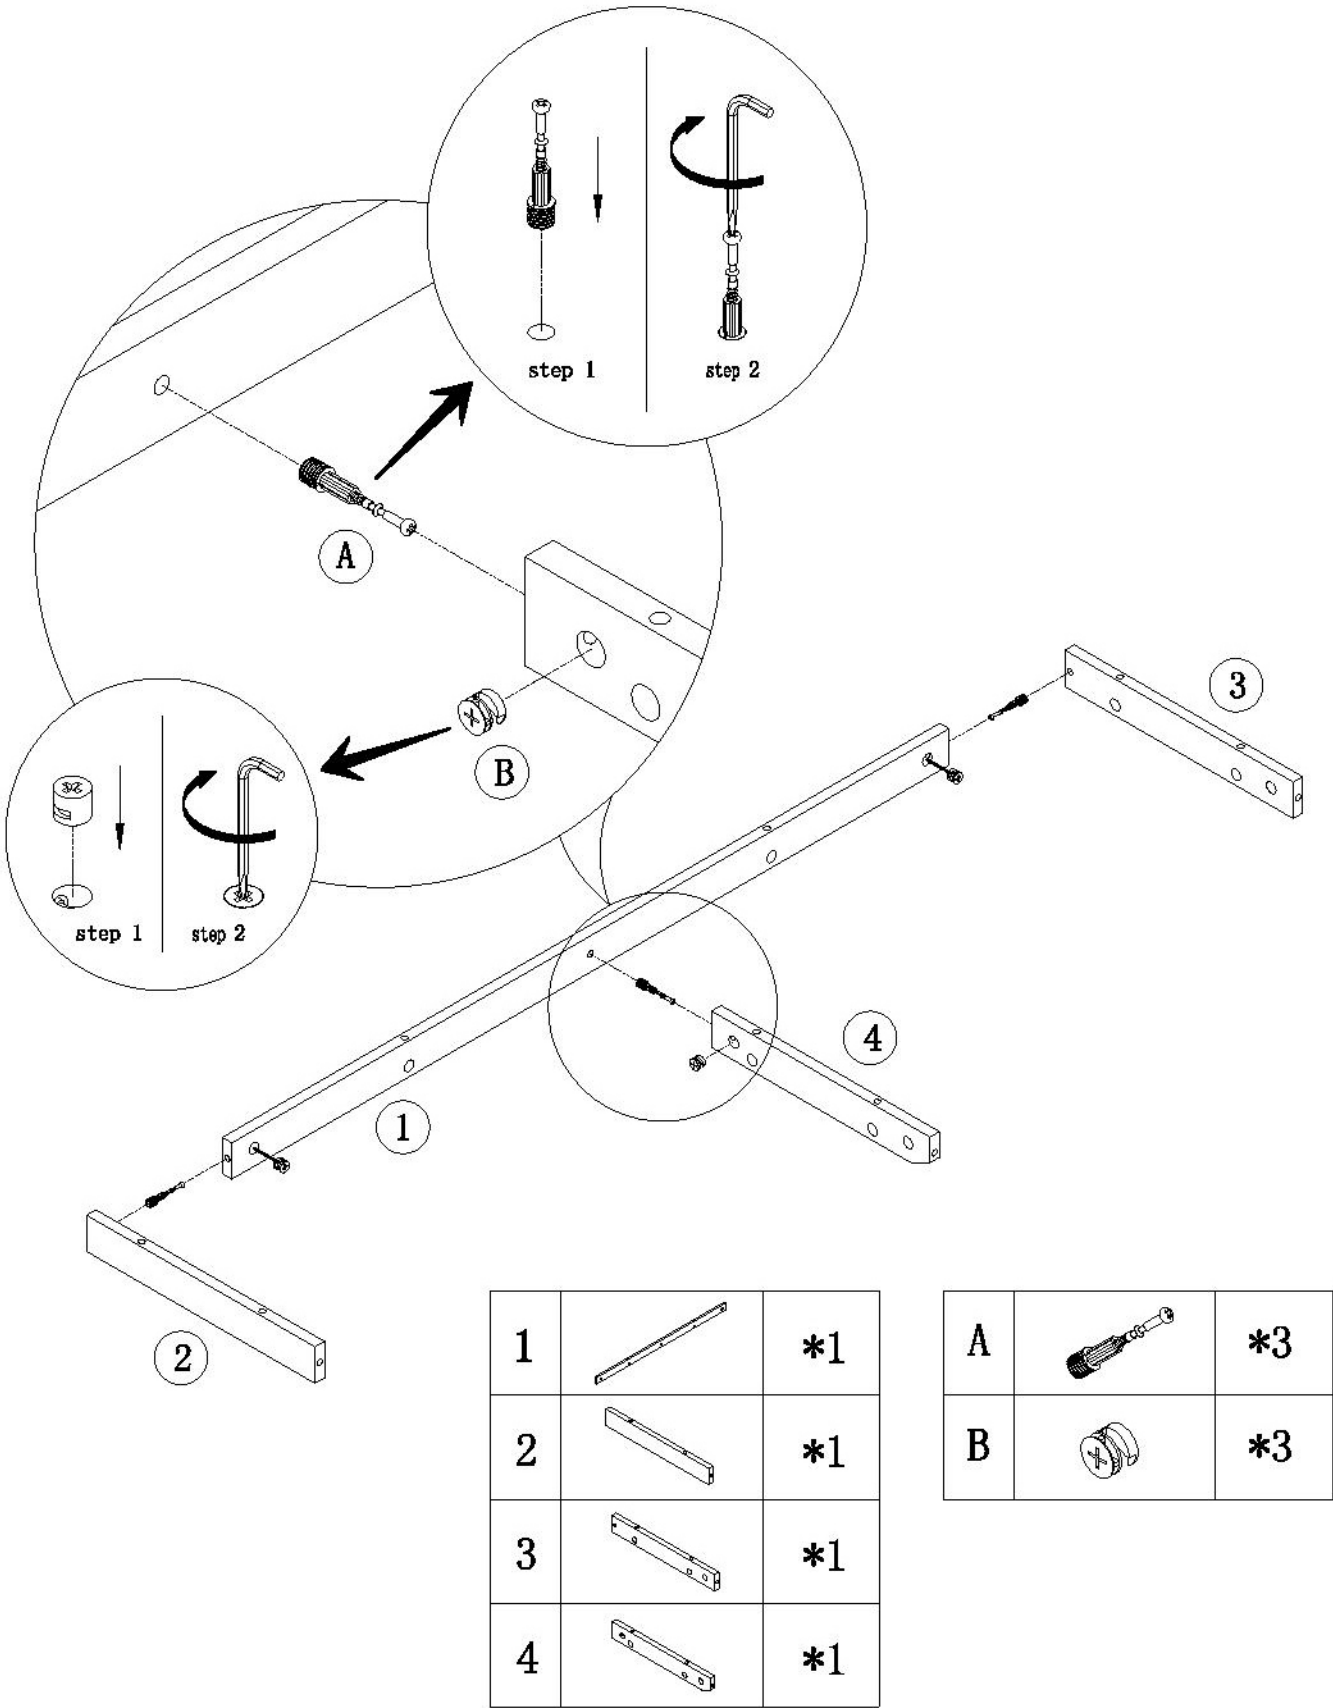

Step 1.

Connect Panel 2,3,4 to Panel 1 with Cam Coupling A&B.

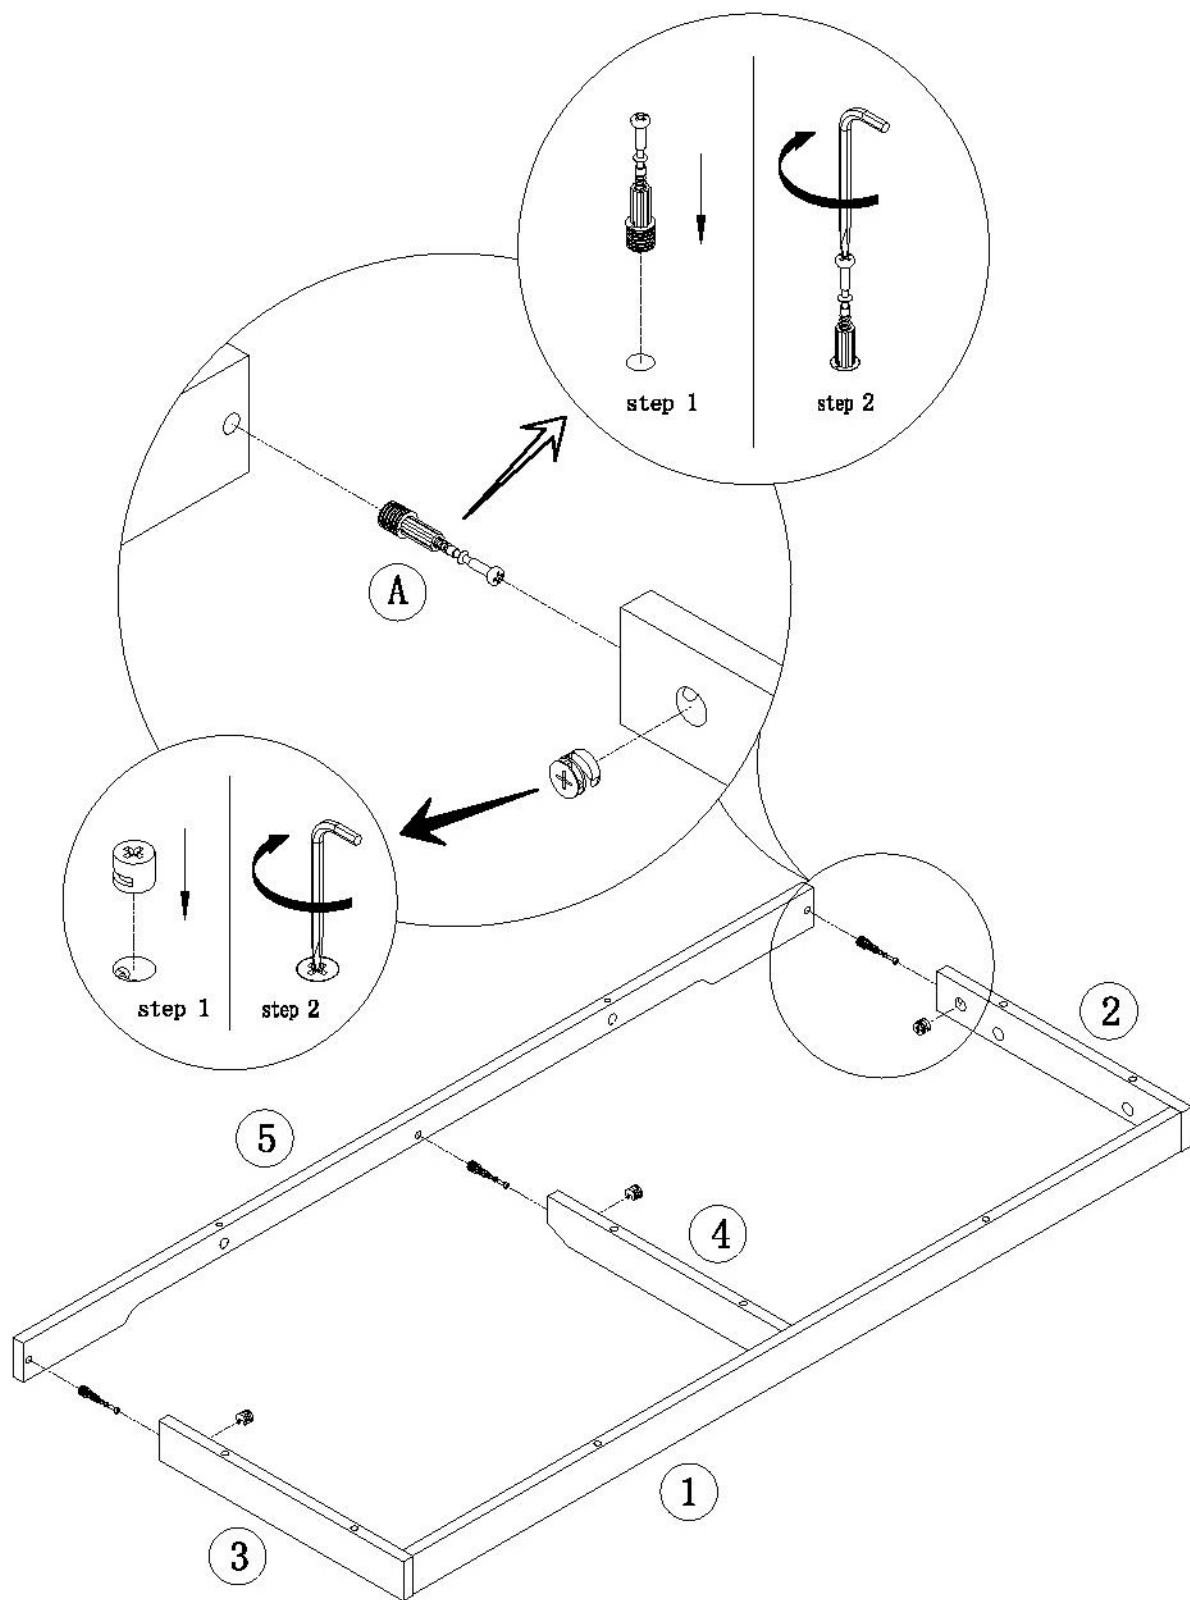


5		*1
---	---	----

A		*3
B		*3


Step 2.


Connect Panel 2,3,4 to Panel 5 with Cam Coupling A&B.

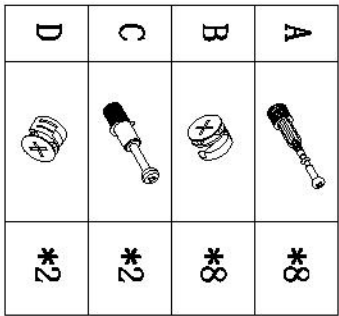

Connect Panel 1,2,3,4,5 to Panel 6 with Cam Coupling A&B.


7		*1
---	---	----

E	 6*55mm	*4
F	 L=1134mm	*1
G		*4
H		*4
I		*4
	 4mm	
	 6mm	

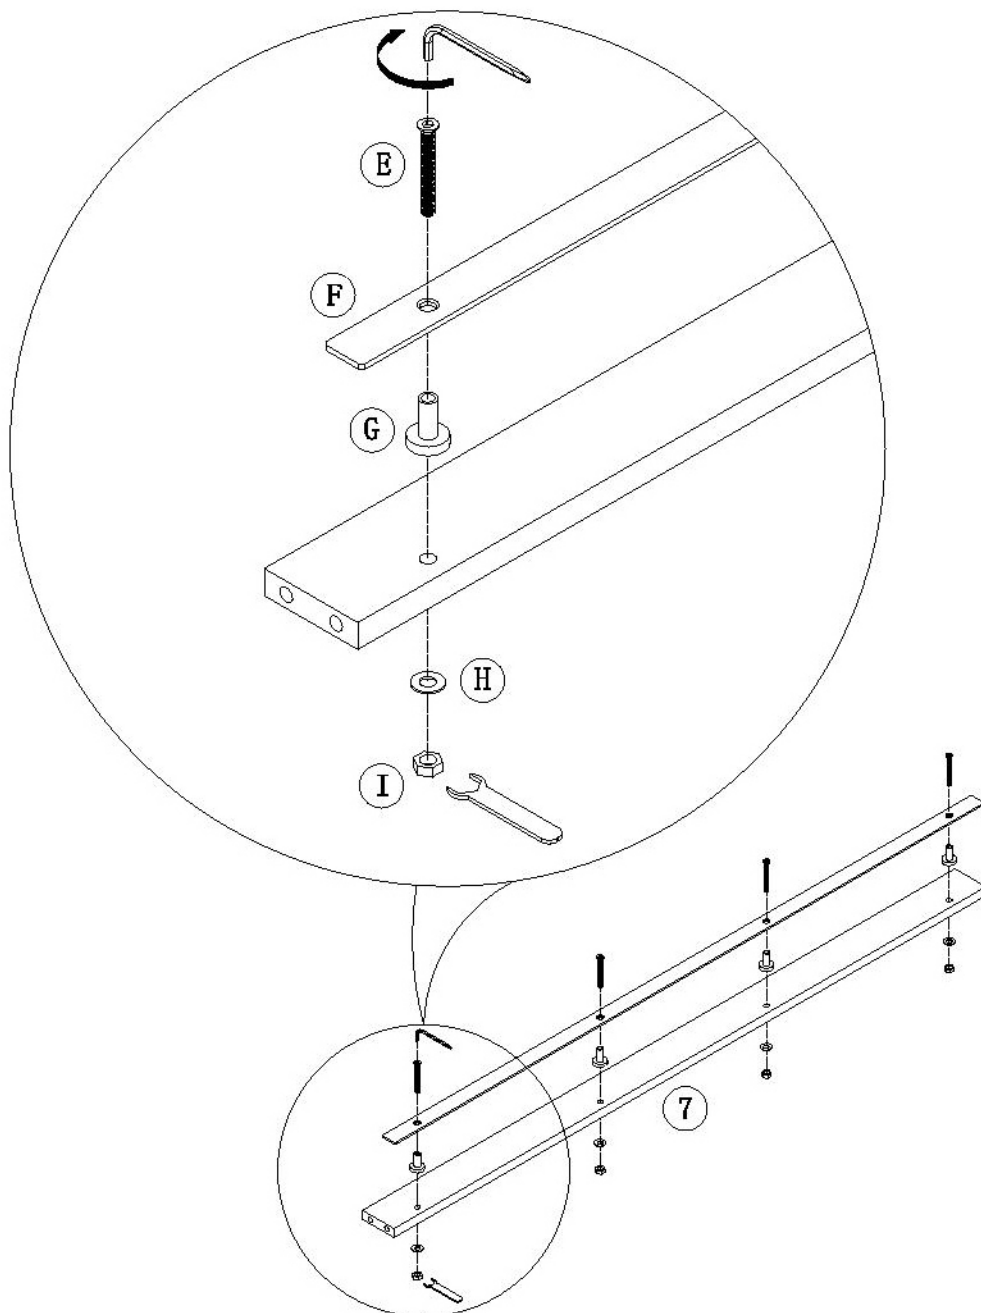

Step 4.


Combine Iron slide rail F on Panel 7 with E, G,H,I.

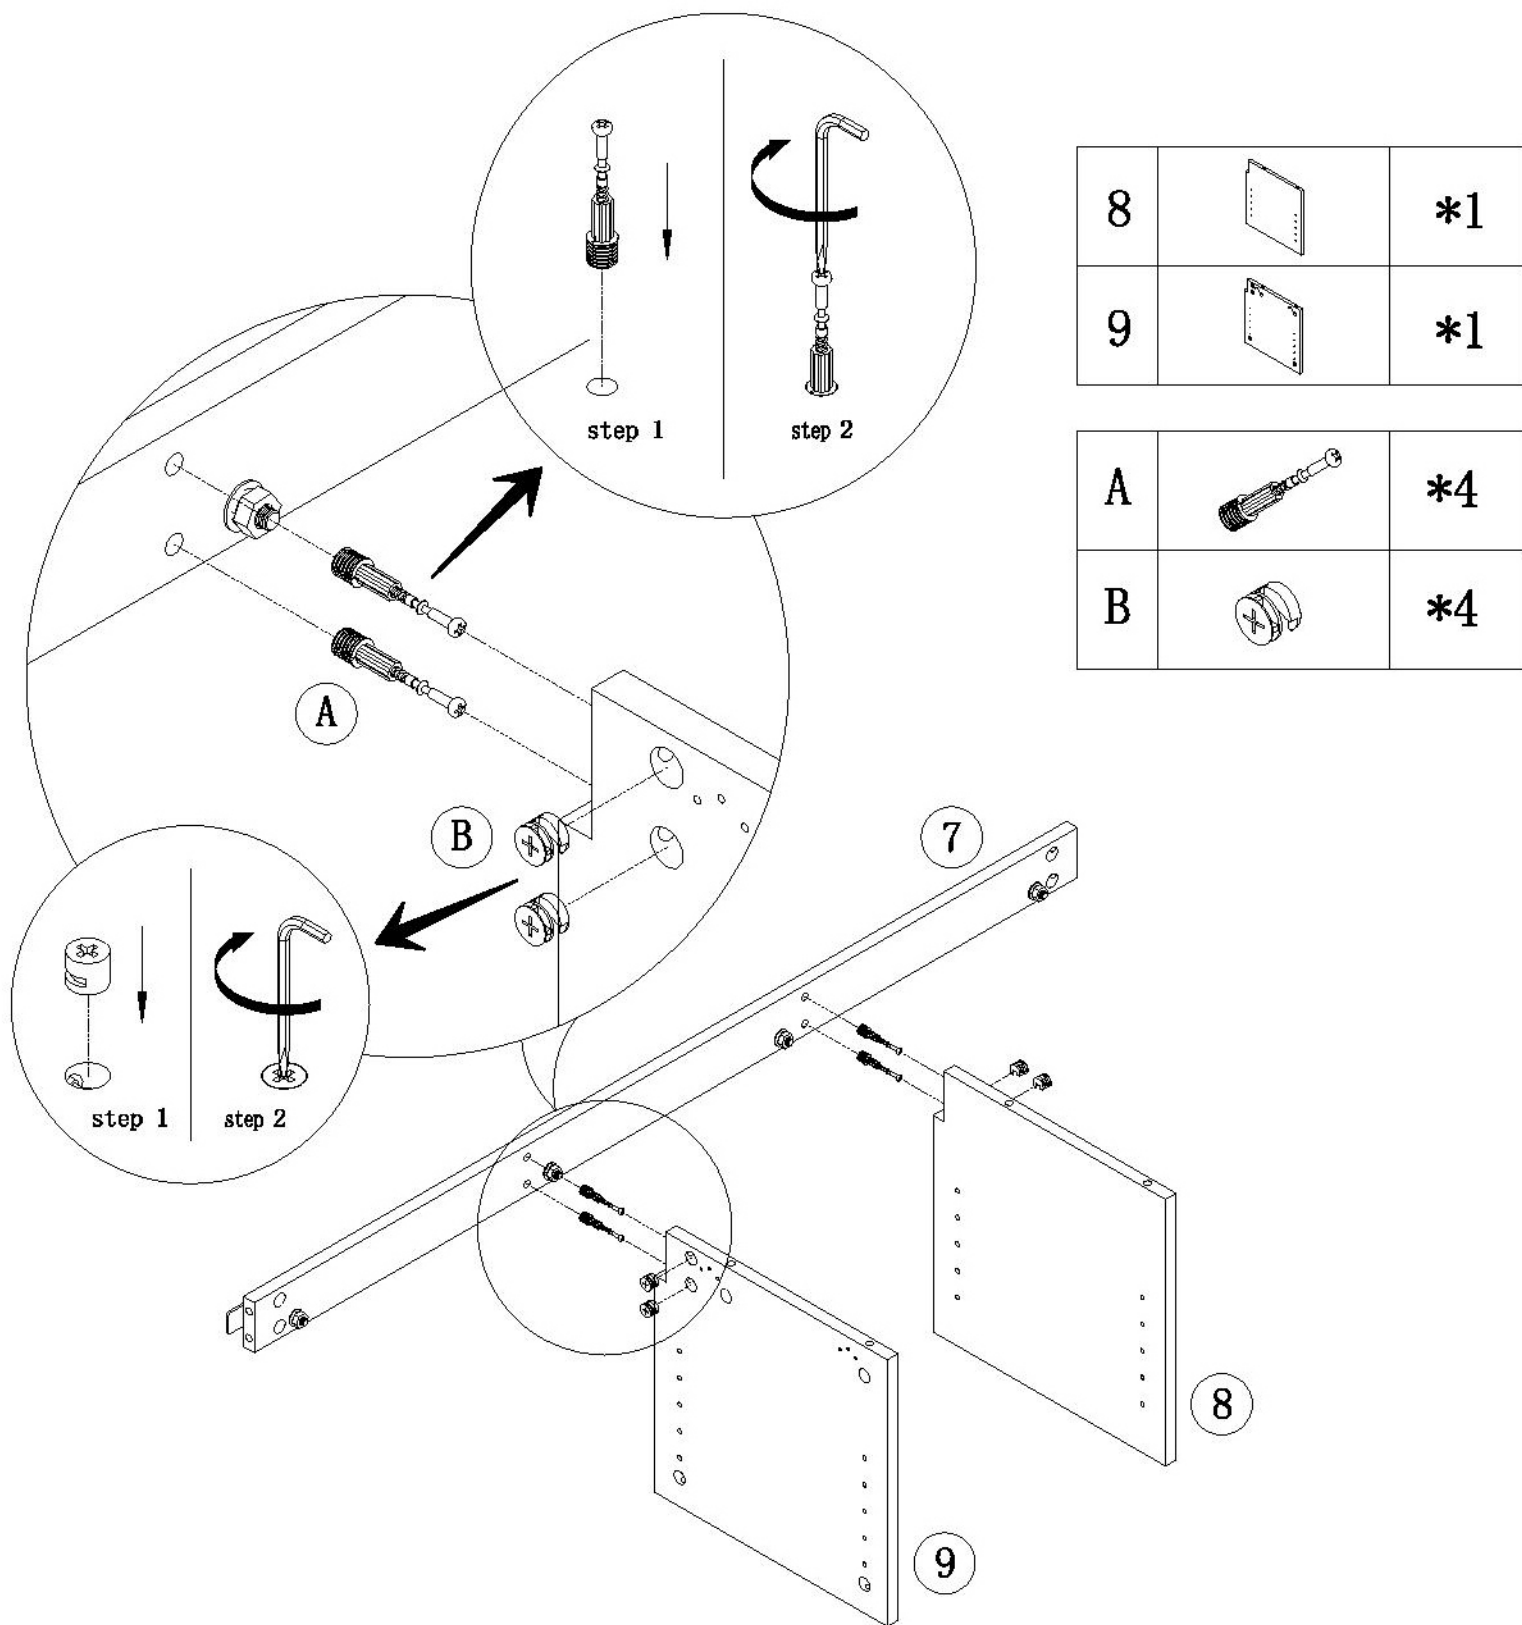

Step 5.
Connect Panel 8,9 to Panel 7 with Cam Coupling A&B.


10		*1
11		*1
12		*1

A		*4
B		*4

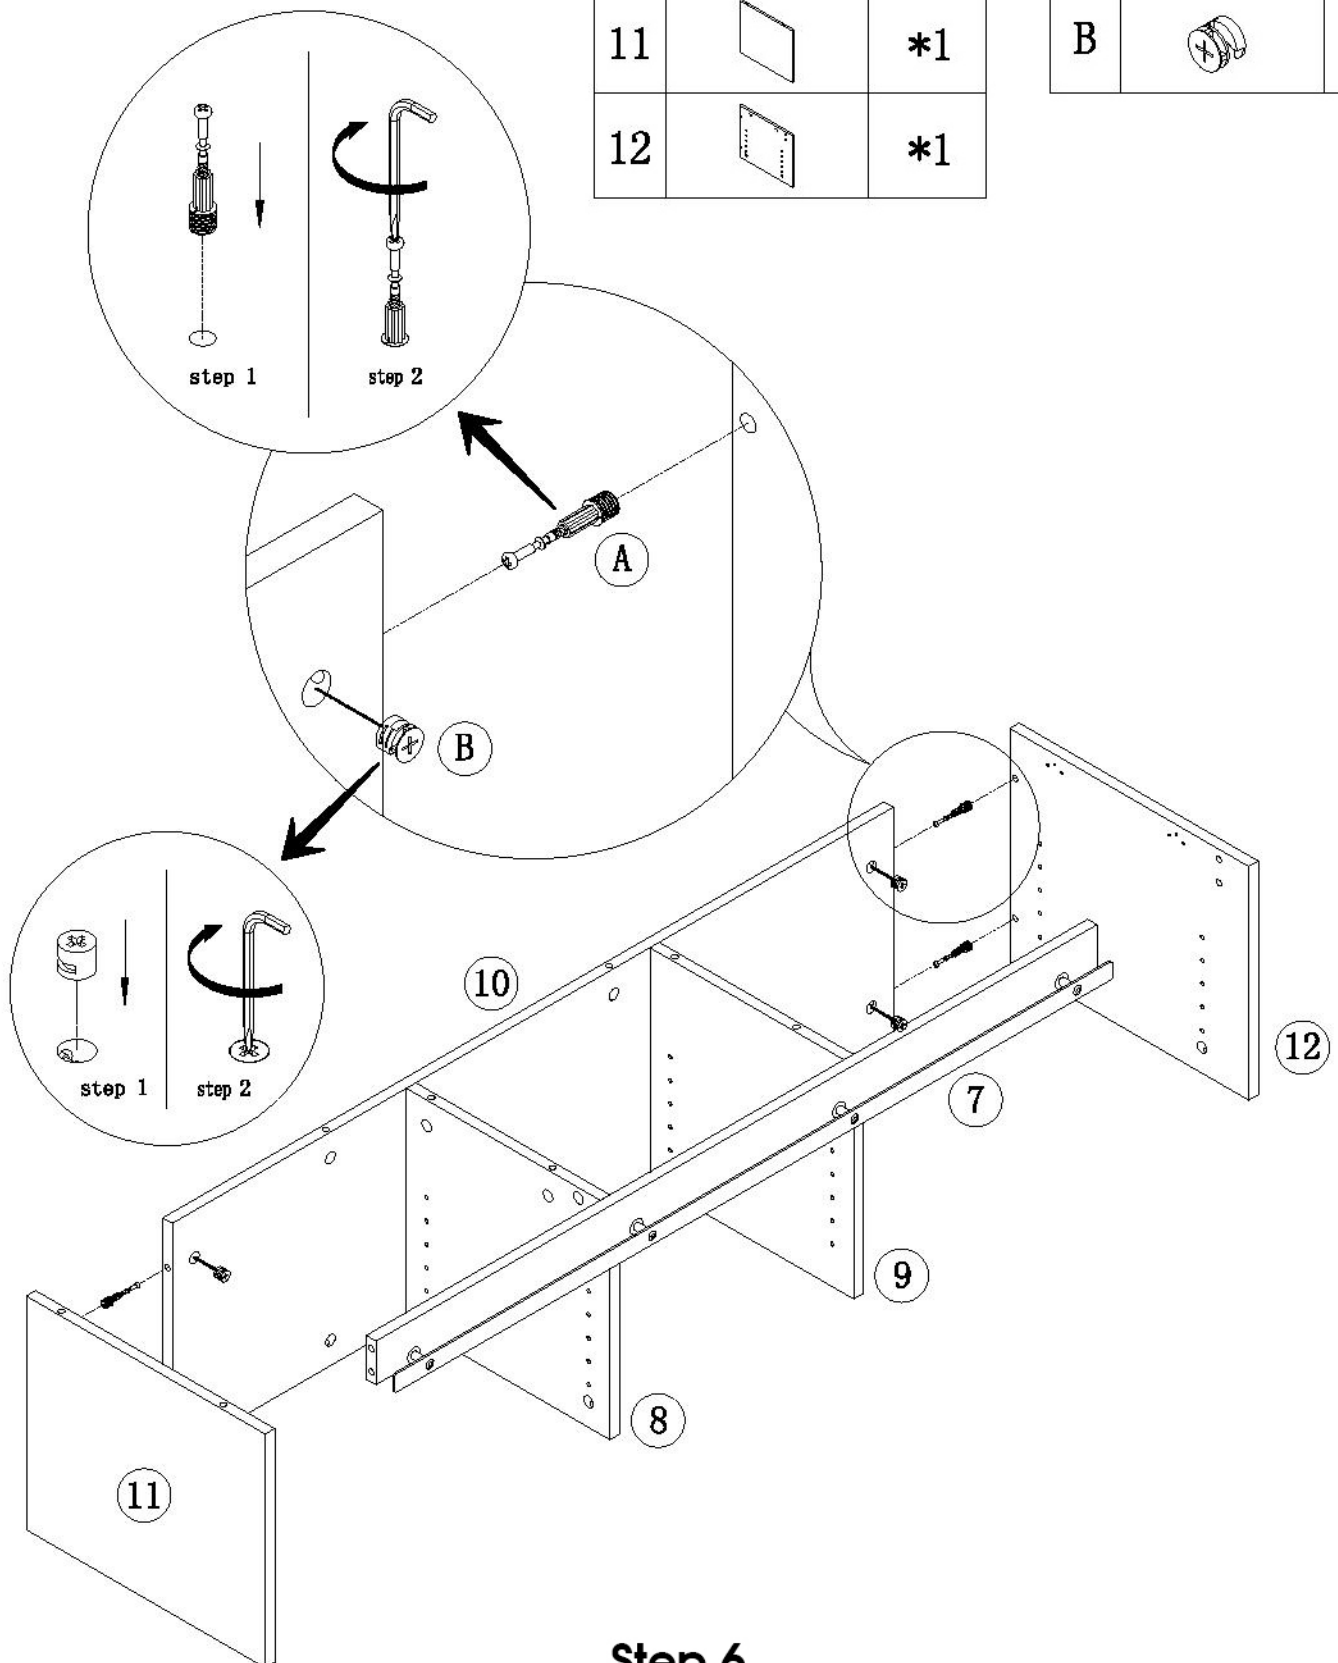


Step 6.

**Connect Panel 8,9 to Panel 10 with Cam Coupling A&B;
Connect Panel 7,10 to Panel 11 with Cam Coupling A&B;
Connect Panel 7,10 to Panel 12 with Cam Coupling A&B;**

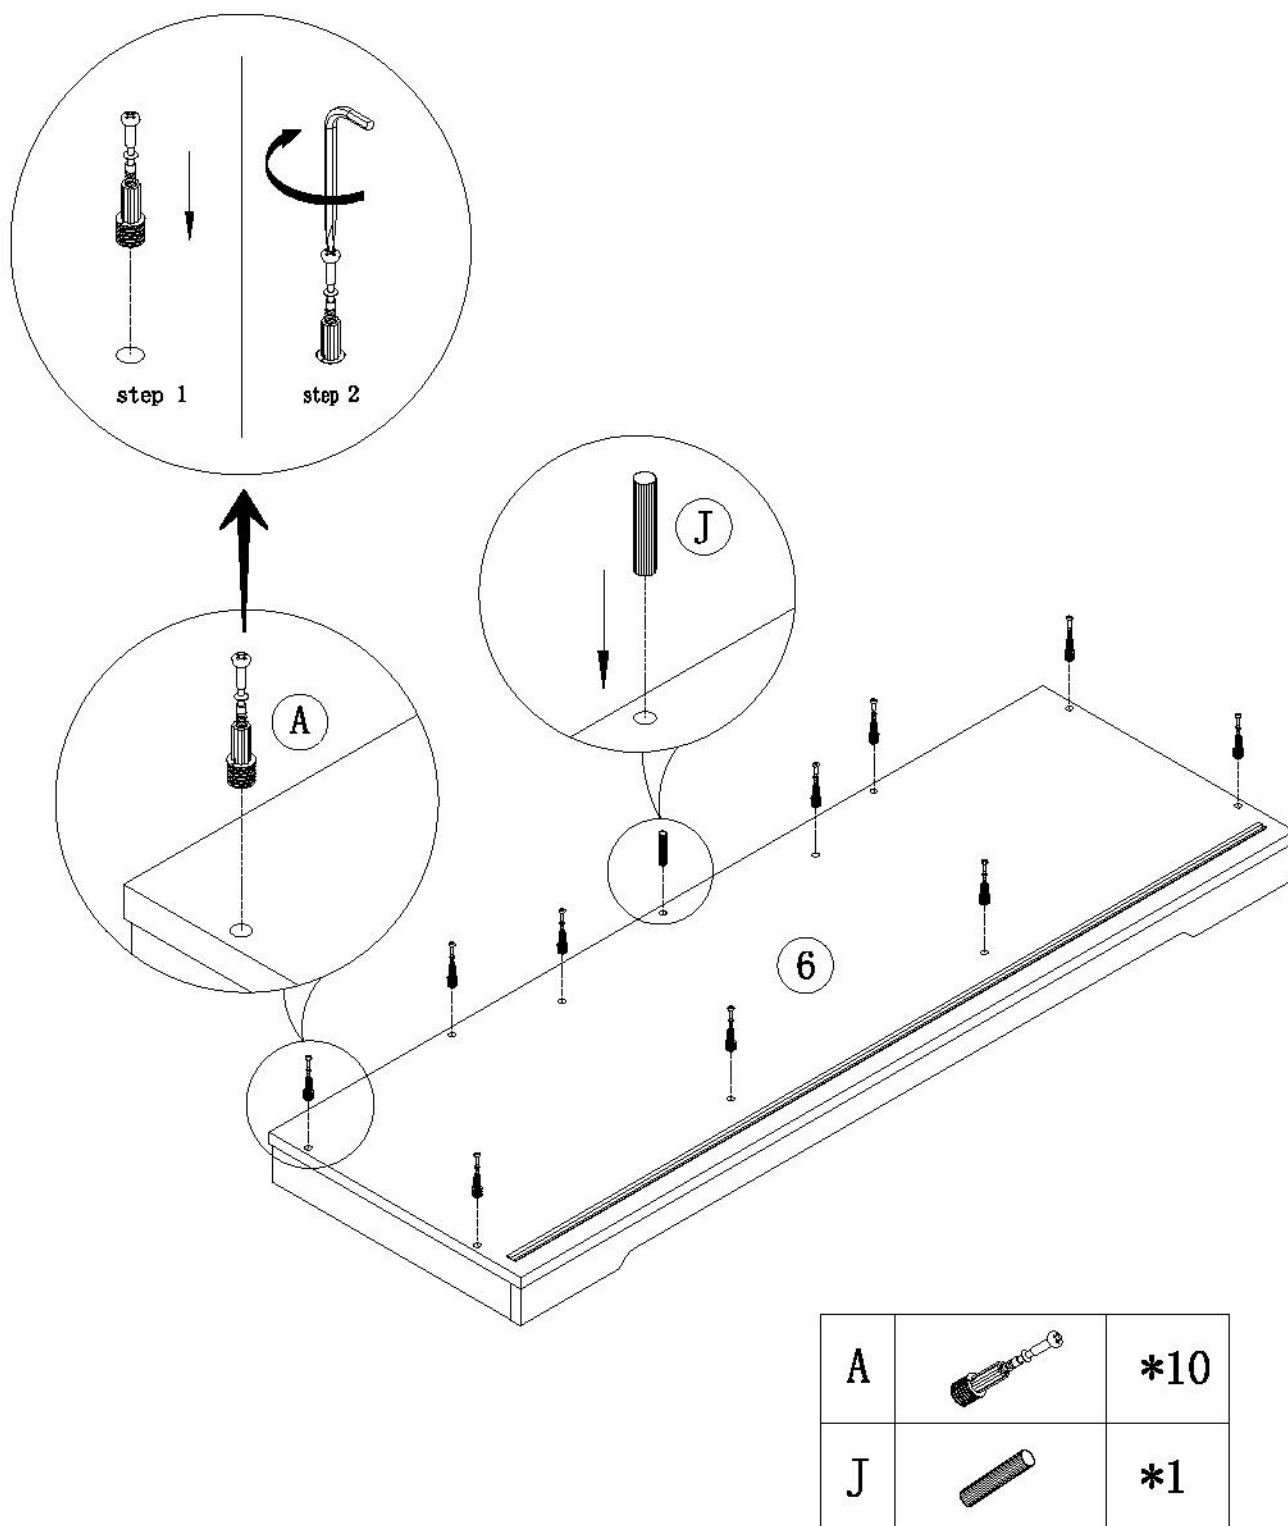


Step 7.
Insert J and A into Panel 6.

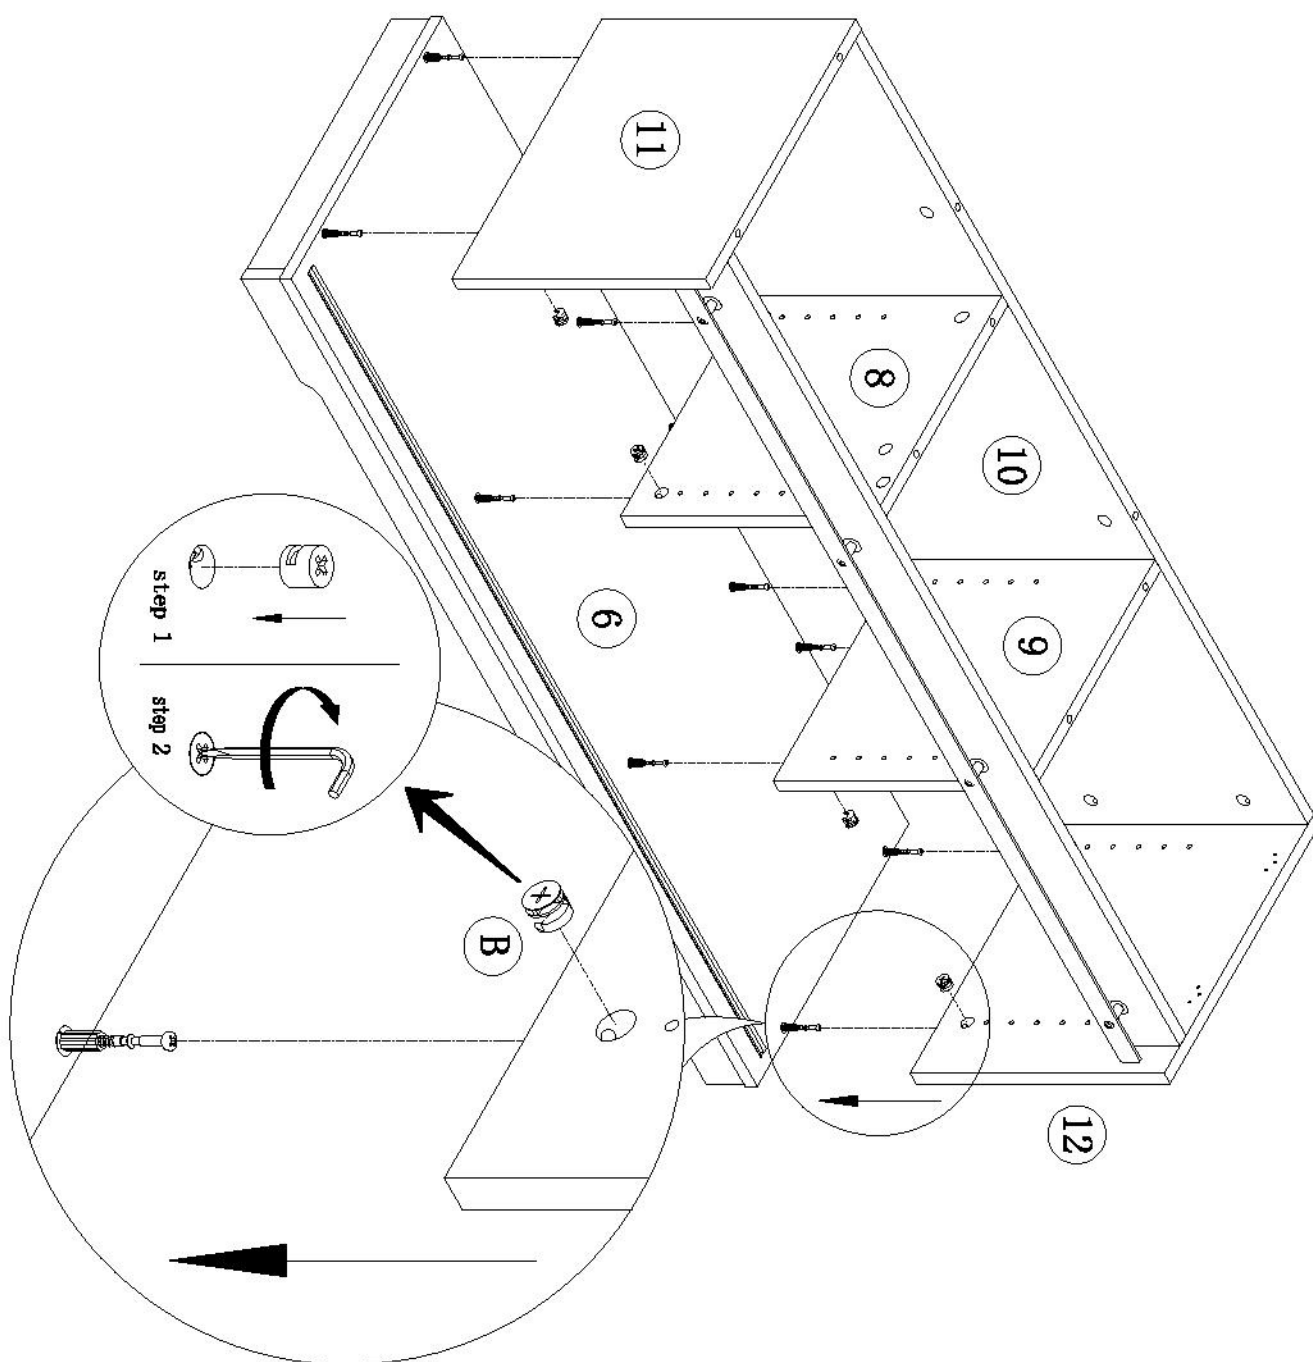

Step 8.


Connect Panel 8,9,10,11,12 to Panel 6 with Cam Coupling A&B.

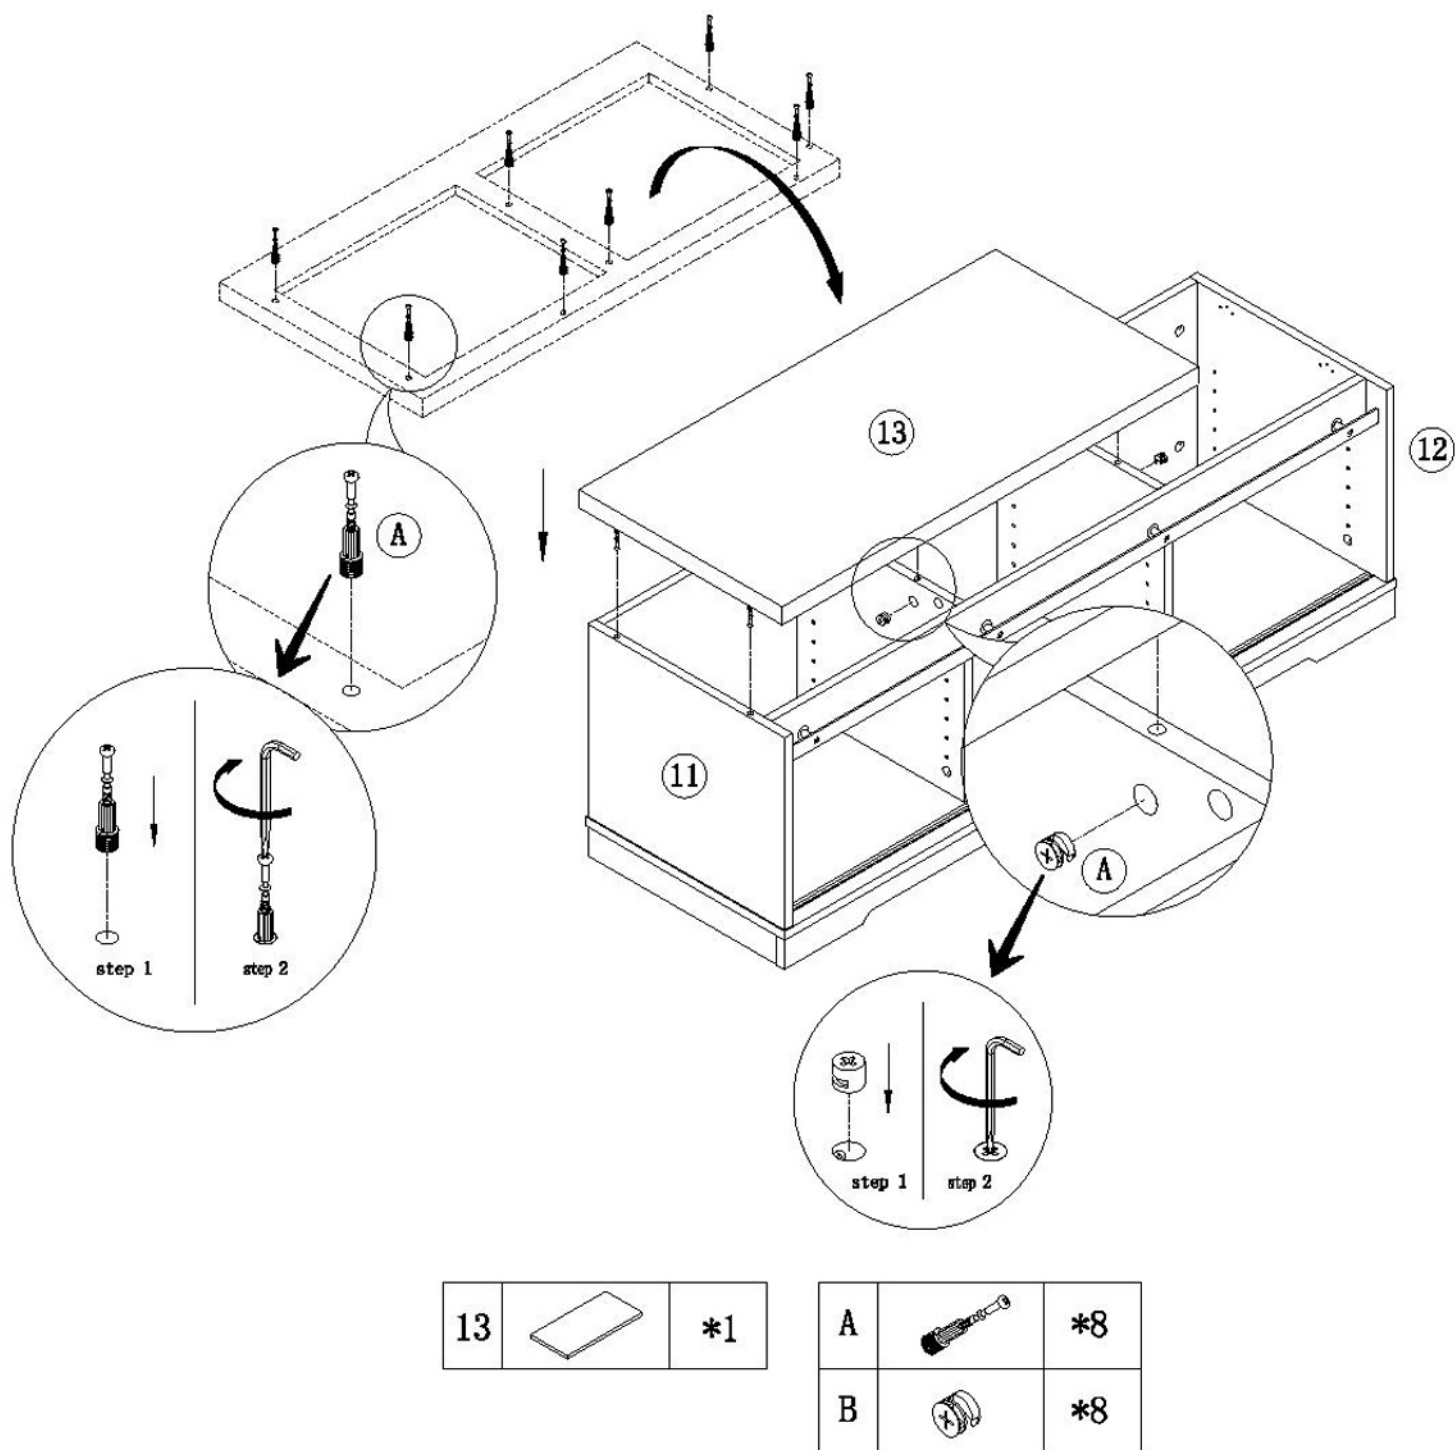

Step 9.


Connect shoes cabinet top Panel

13 to the shoes cabinet body with Cam Coupling A&B.

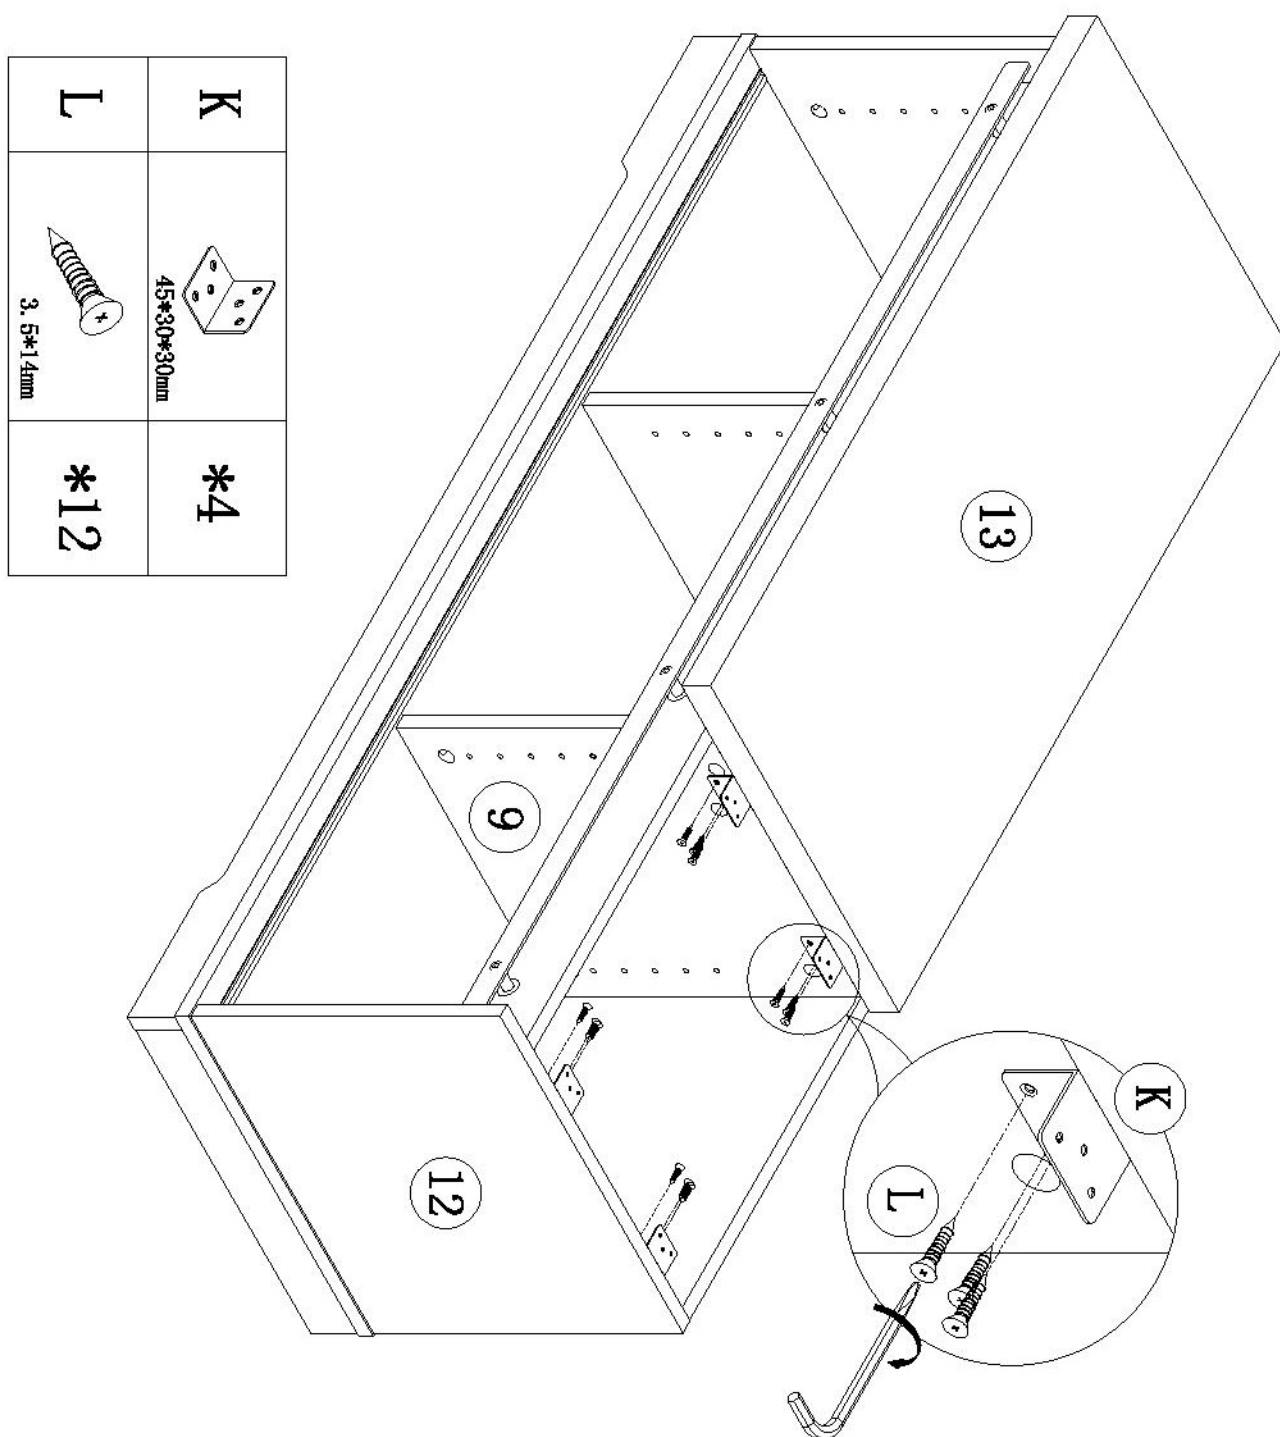


Step 10.


Fix bracket K on Panel 9,10,12 by Screw L.

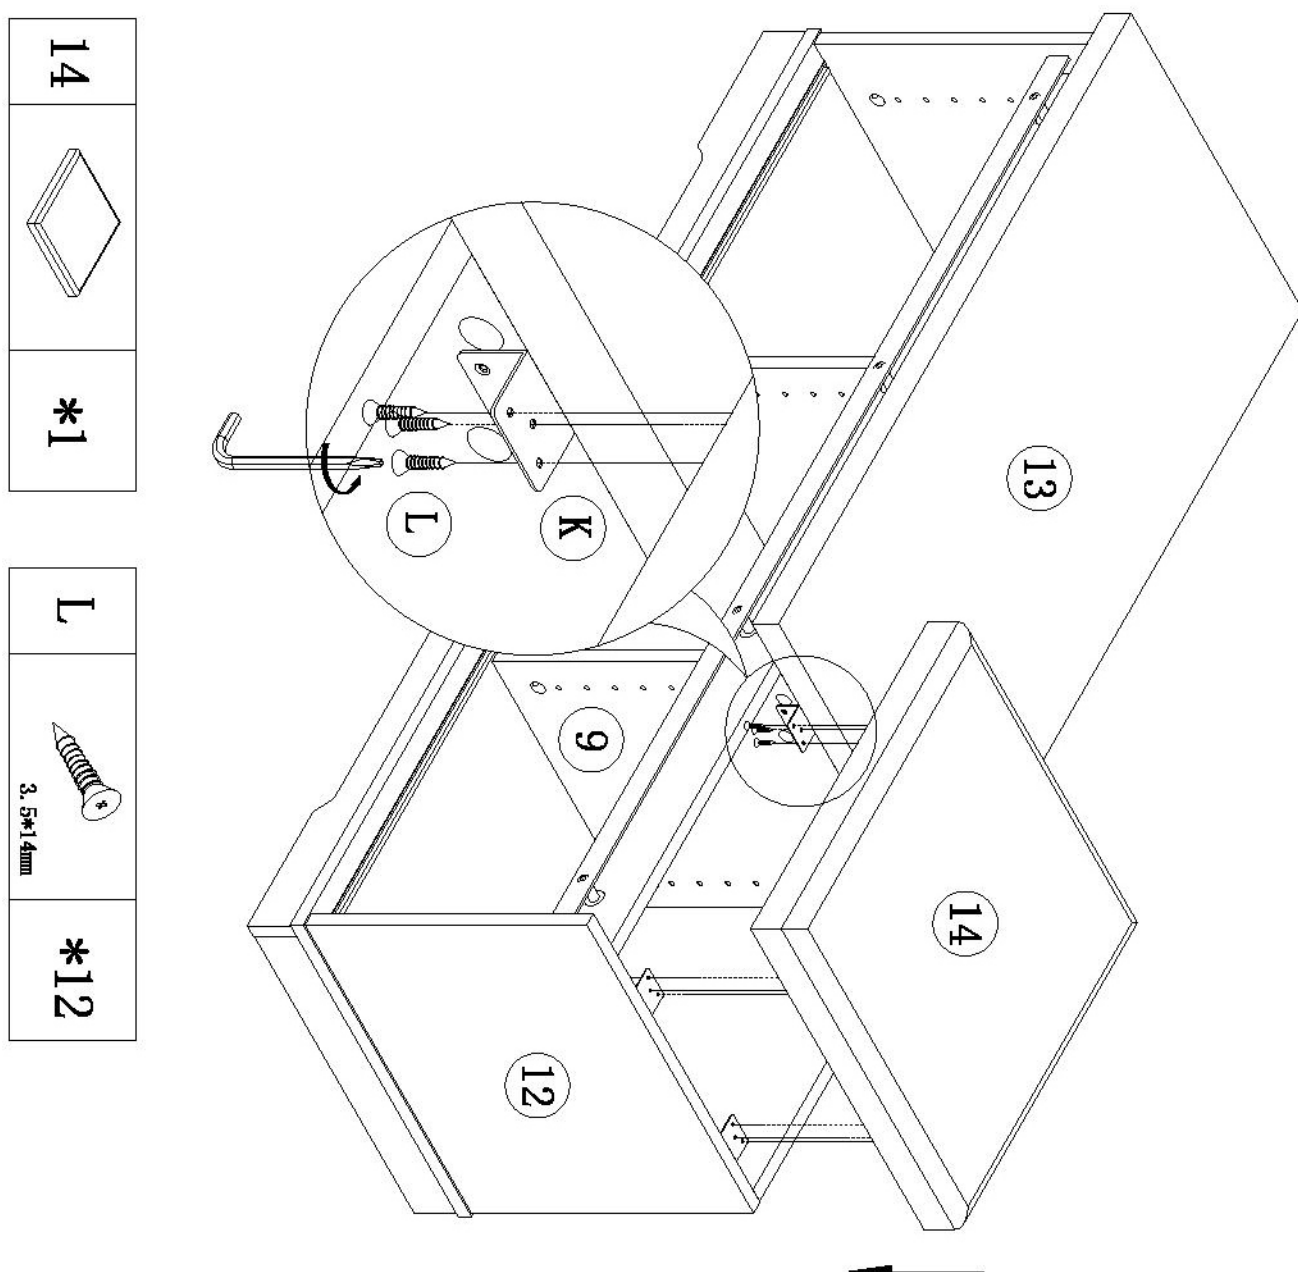

Step 11.
fix K on panel 14 by Screw L.

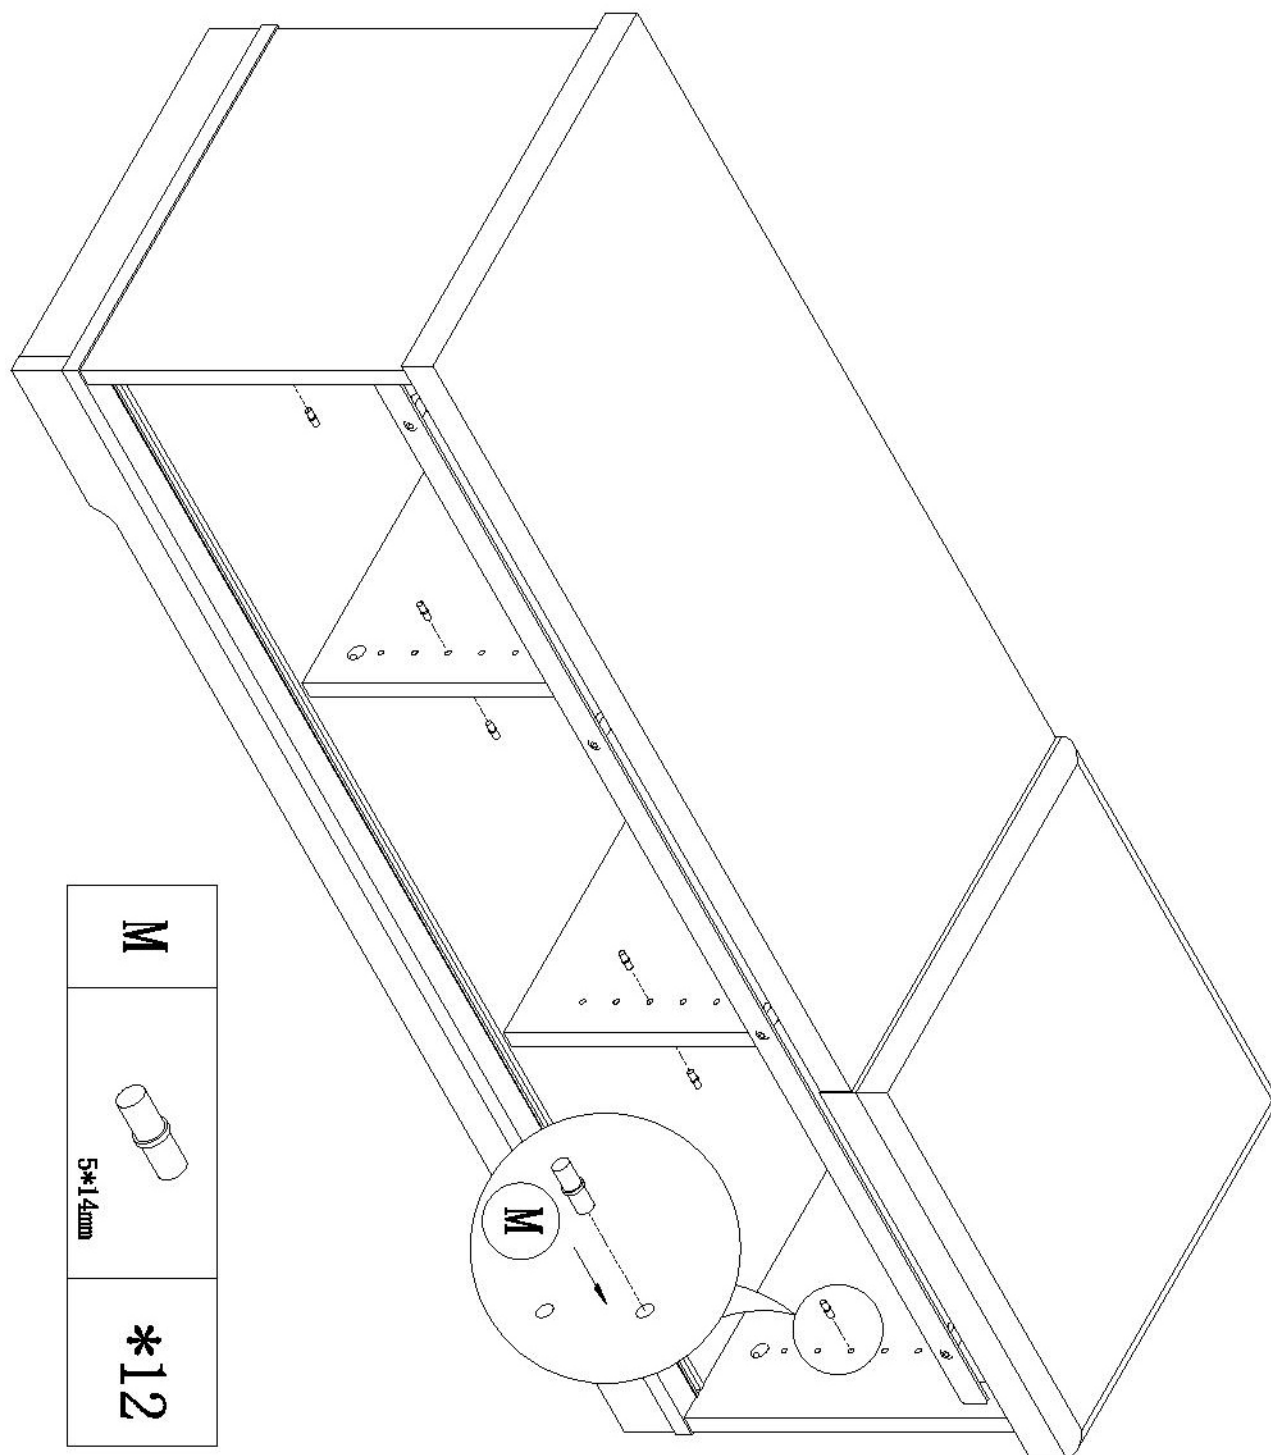




Step 12.
Insert metal part M into Panel 8,9,11,12.

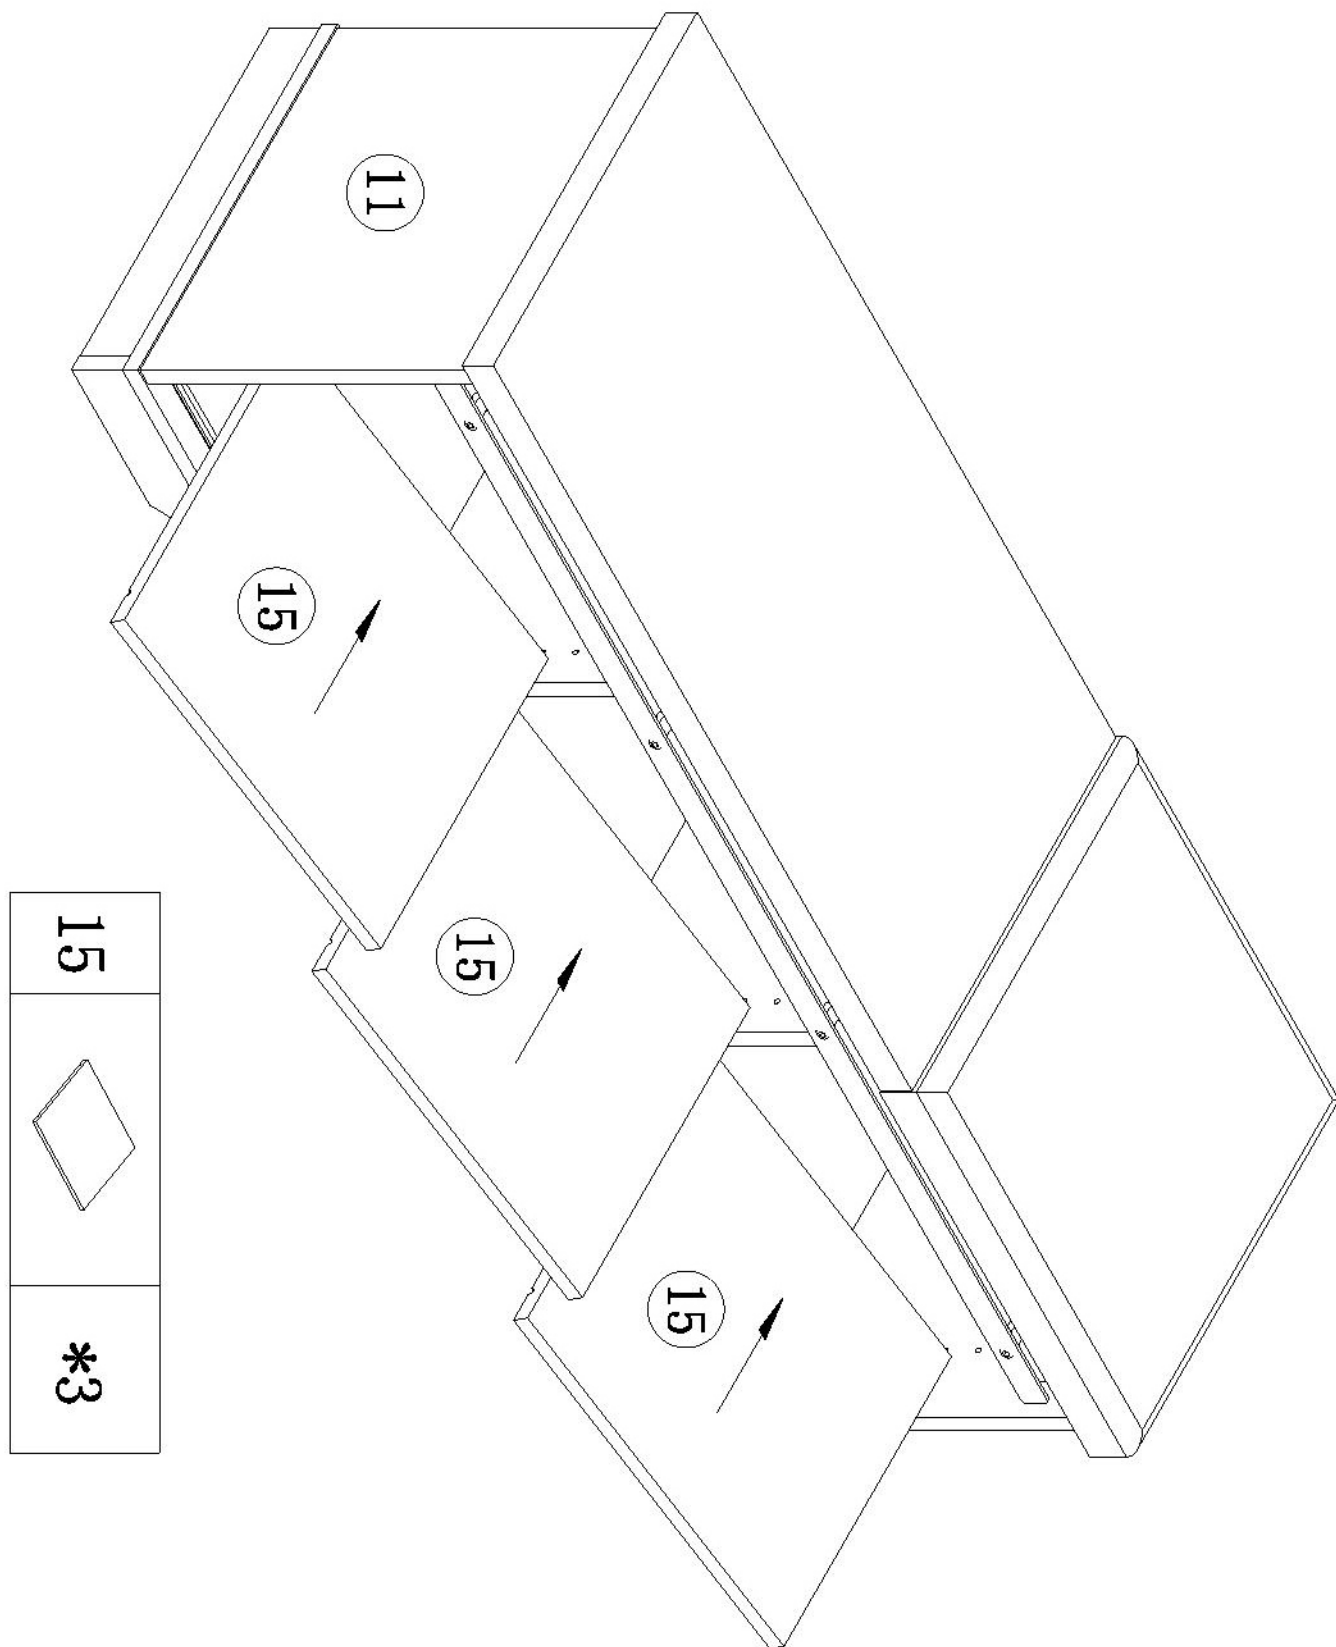


Step 13.

Put on Panel 15 on the metal part M.


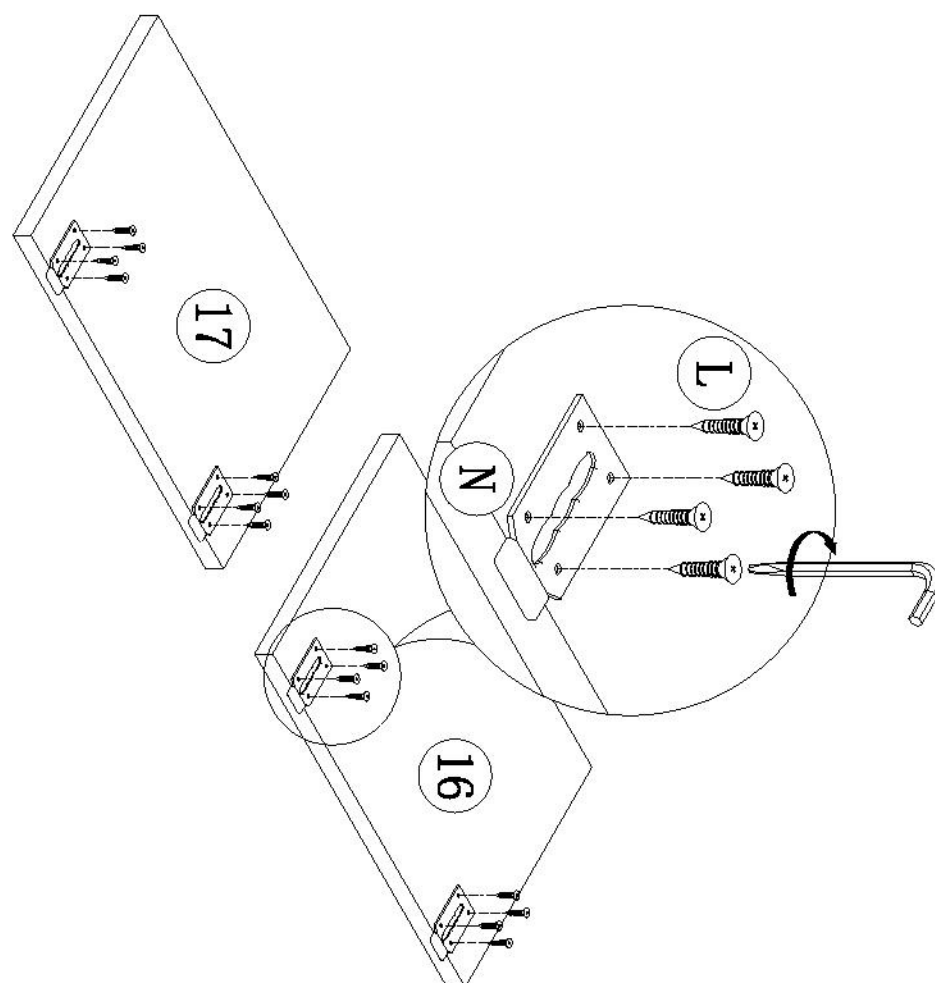



16		*1
17		*1

N		*4
L	 3.5*14mm	*16

Step 14.





Fix N on the door Panel 16 (left door),
door Panel 17(right door) with Screw L separately.

O		*4
P	 3.5*14mm	*8

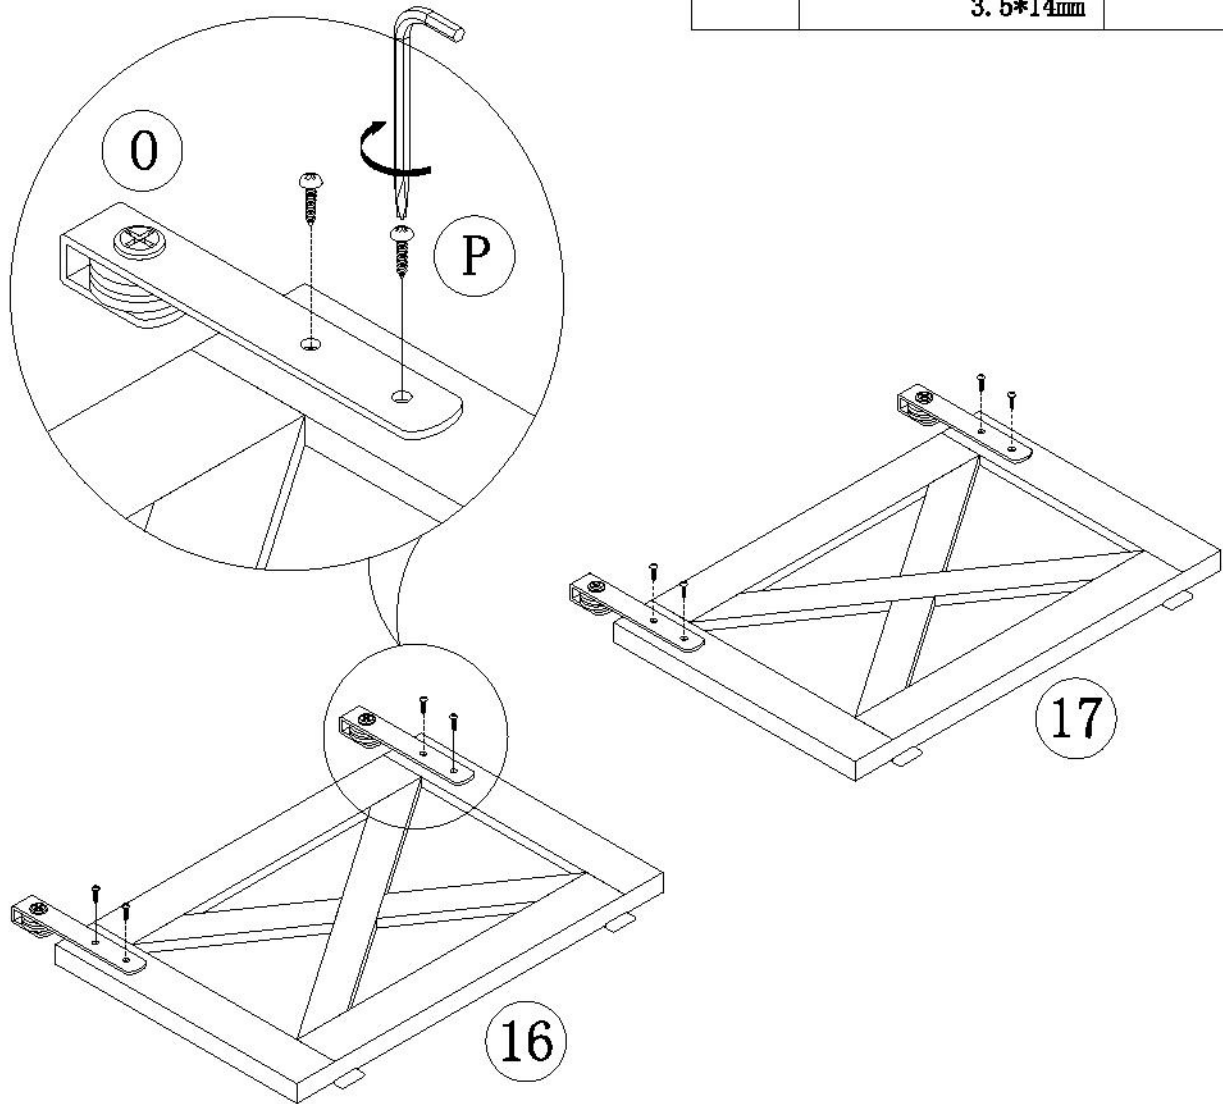


Step 15.

Fix O on the door Panel 16 (left door),
door Panel 17(right door) with Screw P separately.

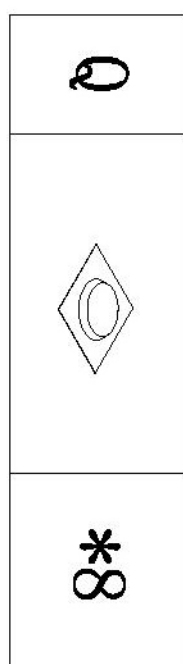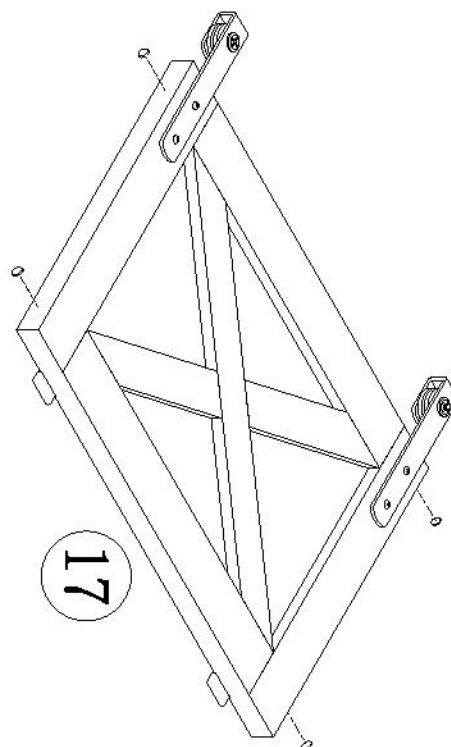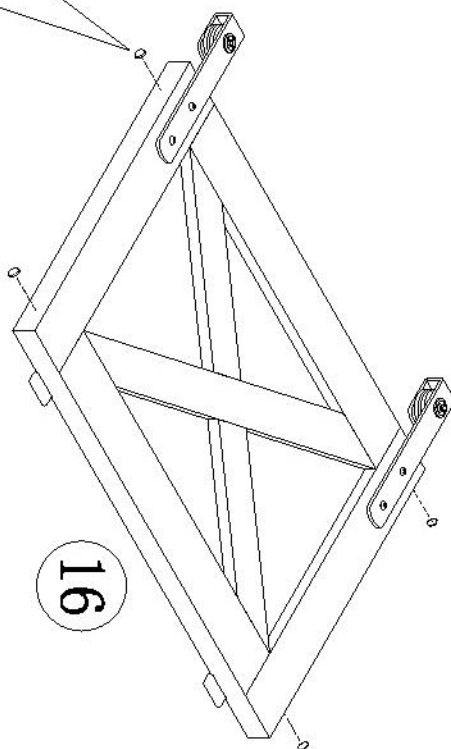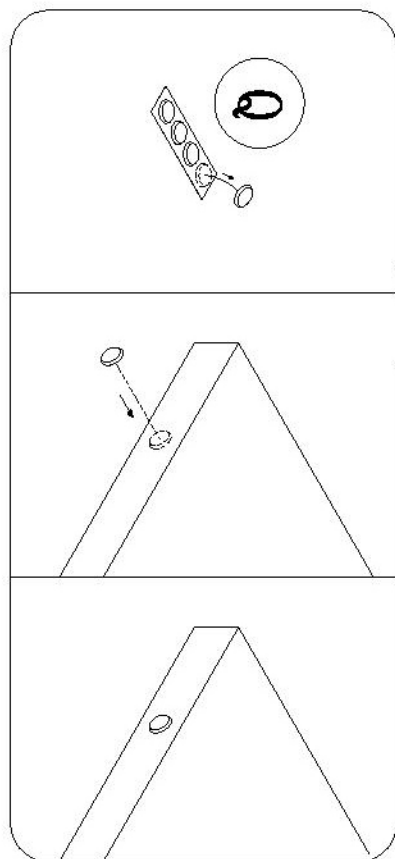

Step 16.


**Paste P on the door Panel 16 (left door),
door Panel 17(right door).**

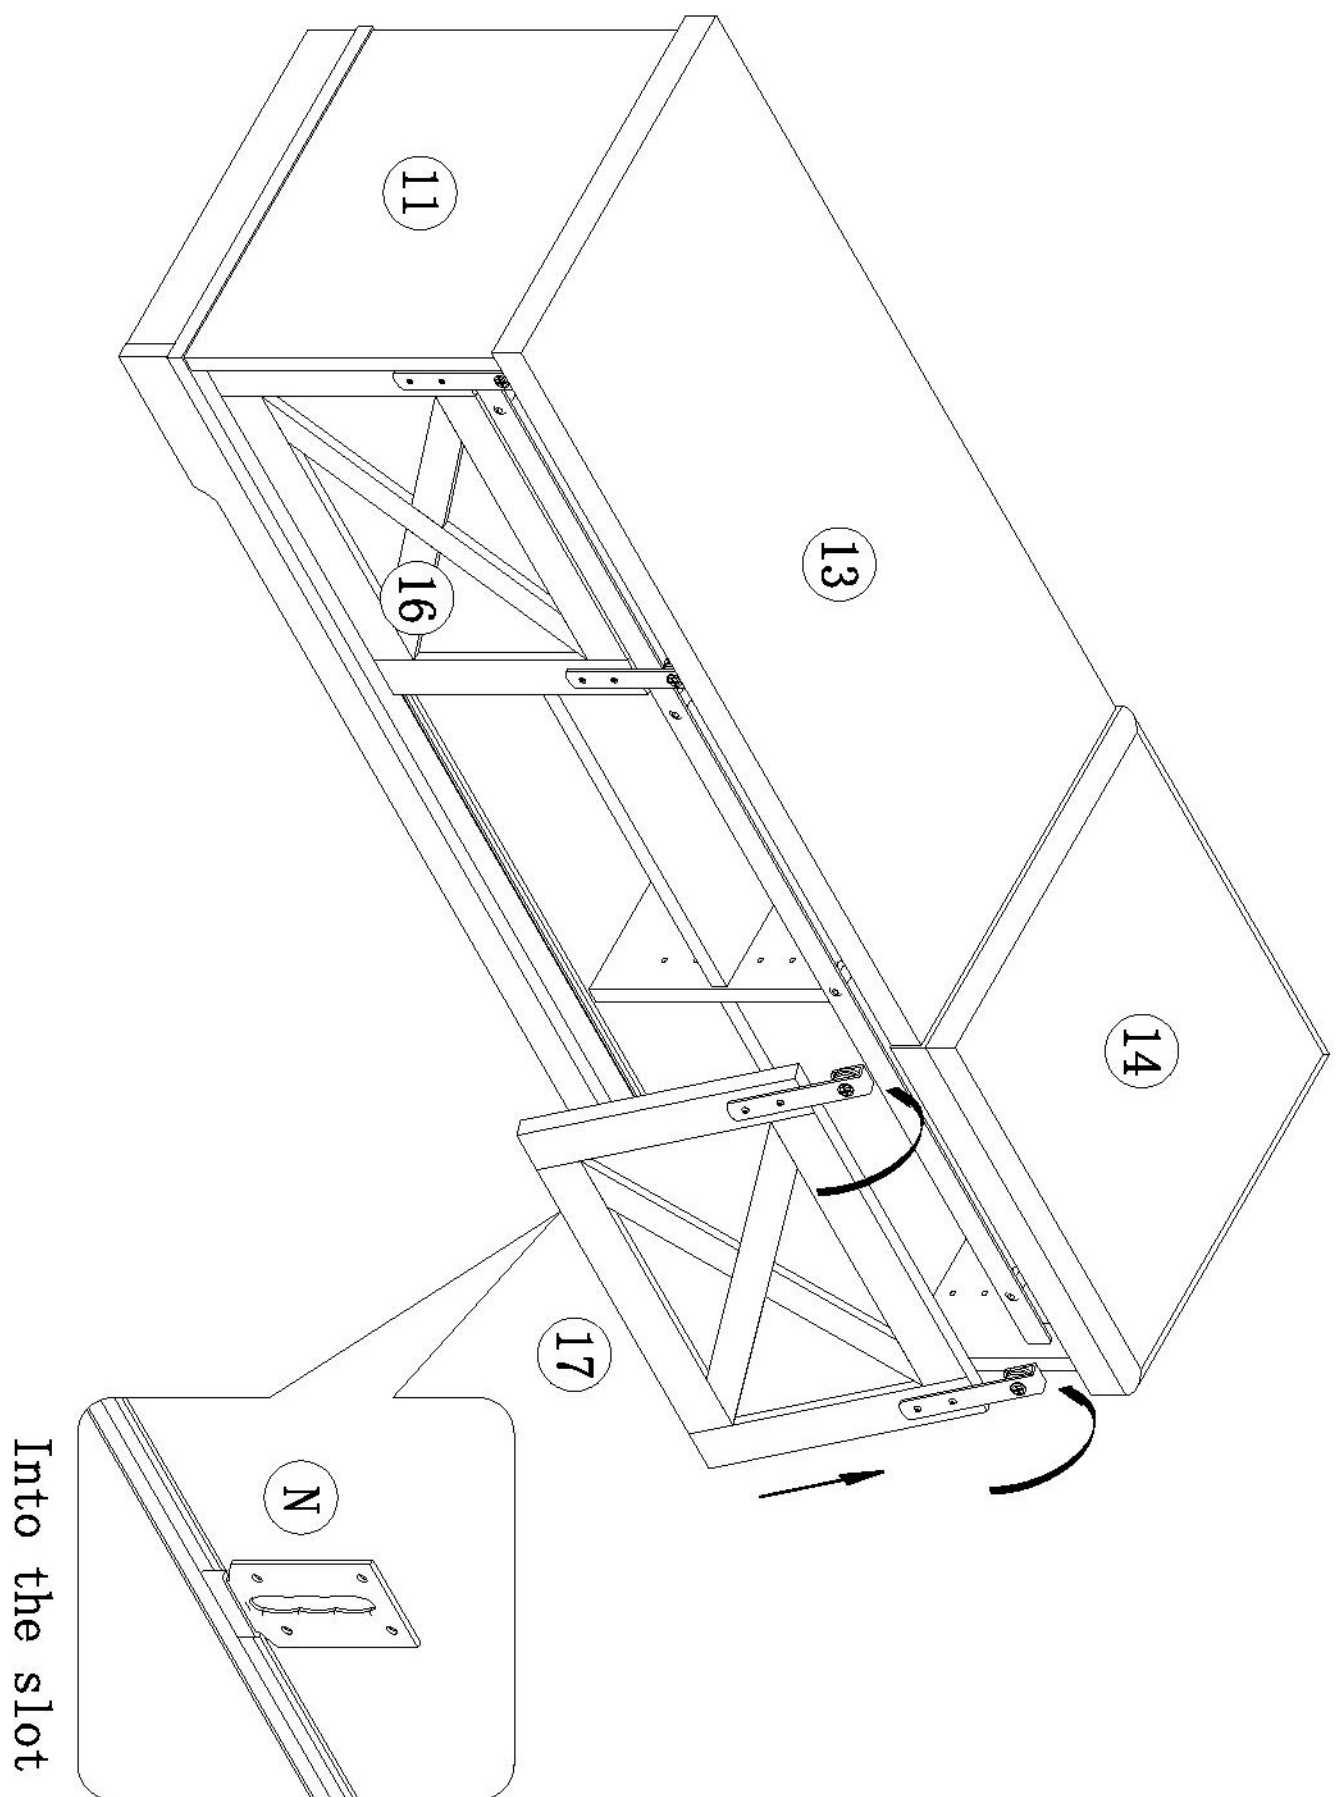

Step 17.

**Hang the door Panel 16 (left door),
door Panel 17(right door) on Iron slide rail F.**

Enjoy Your Life

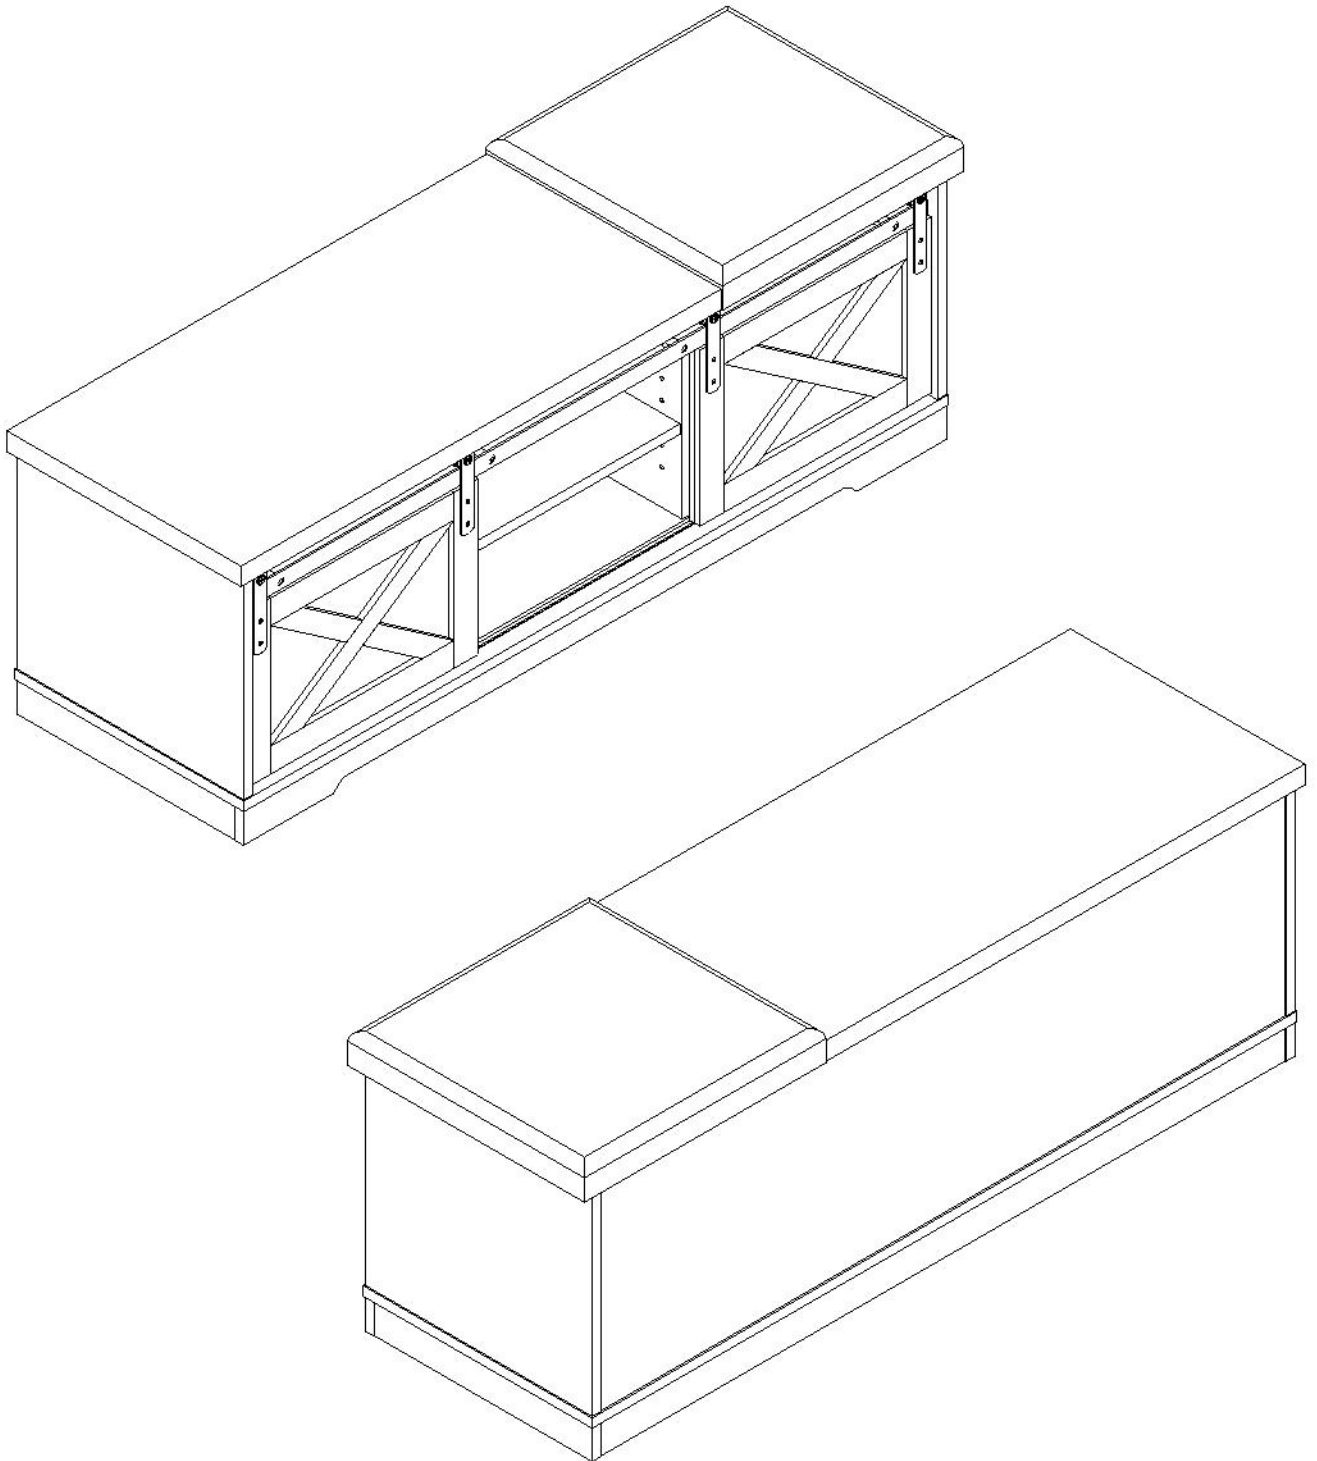

CD-086