

## Product accessories



Eccentric screw



Eccentric bolt




4CM self-tapping screws

Tips: It is best to tighten the screws into the seven-point tightening during installation, and tighten them after all are completed!


# Eccentric installation principle




Do not tighten too tightly when screwing the eccentric screw to the board or it will not lock

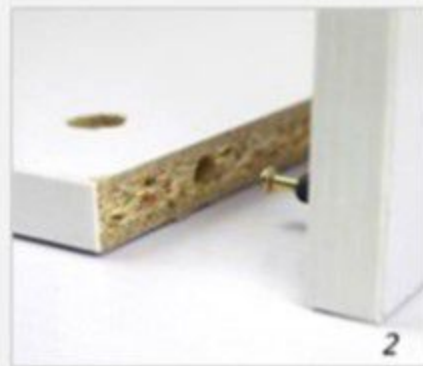

Find the corresponding board to insert

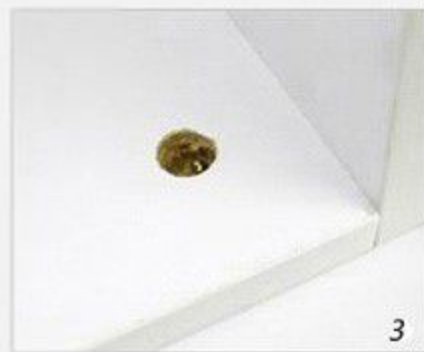

Put the eccentric bolt into the round hole

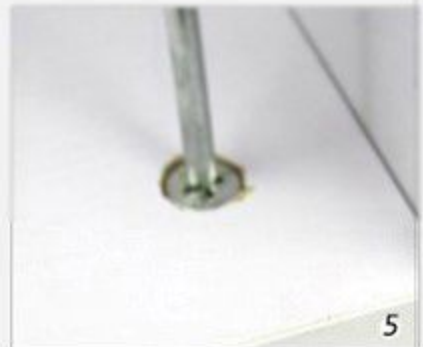

Rotate clockwise about 180 degrees to lock the screw



# installation steps




All non-penetrating holes are  
screwed into the eccentric  
screw




Upper Board


Universal

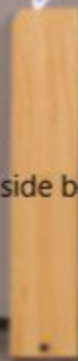


Left side board

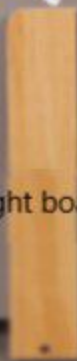

Right board

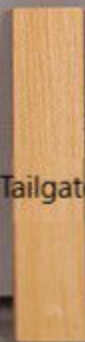

Tailgate

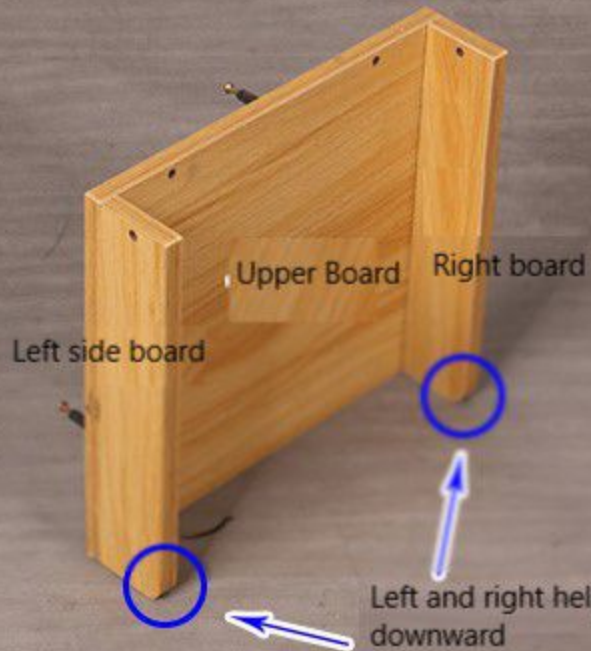

Upper Board

Right board

Left side board


Left and right help board arc downward

4cm self-tapping screws



Tailgate

4cm self-tapping screws

Three vertical wooden planks are positioned against a grey wall. Each plank has a white dot near the top and several black dots along its length. The planks are labeled from left to right as 'Left riser', 'Rear riser', and 'Right force plate'.


Left riser

Rear riser

Right force plate



There are two small holes on both sides of the bottom plate

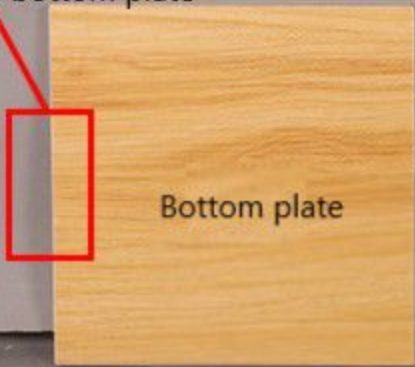


Bottom plate



There is a small hole on both sides of the shelf



Shelf

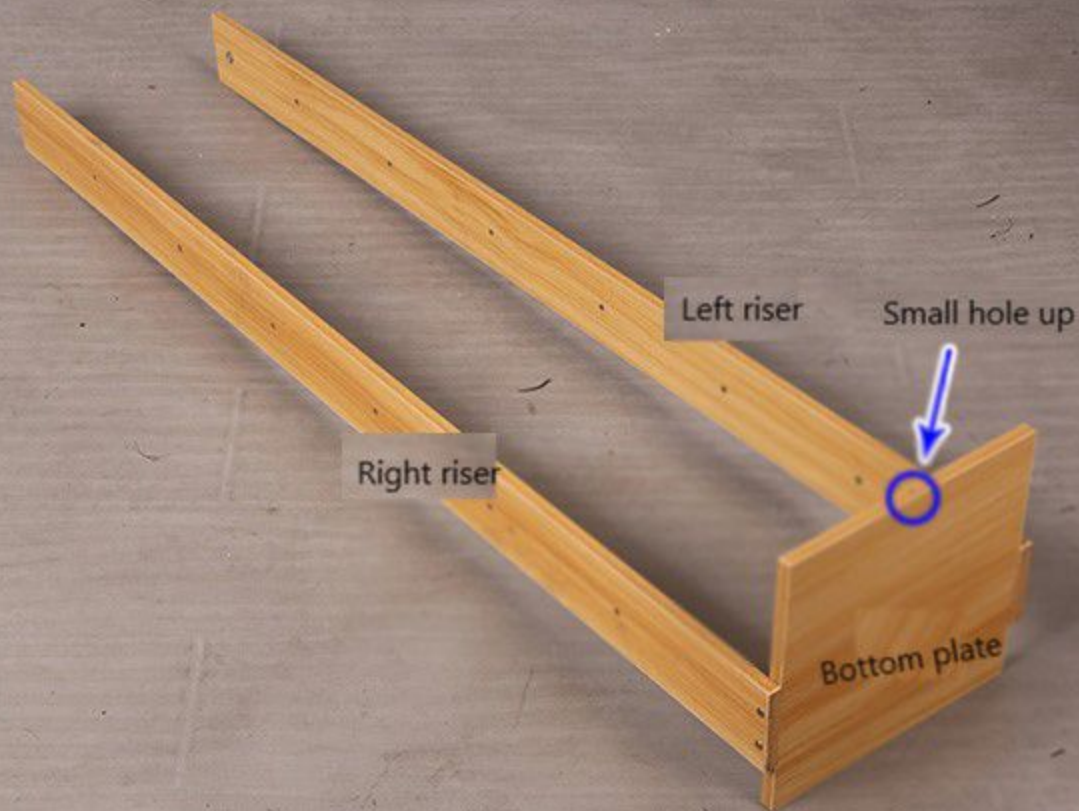

Left riser

Small hole up

Right riser

Bottom plate

4cm self-tapping screws




Small hole up

Shelf

4cm self-tapping screws

Note: Install the remaining shelves in the same way!

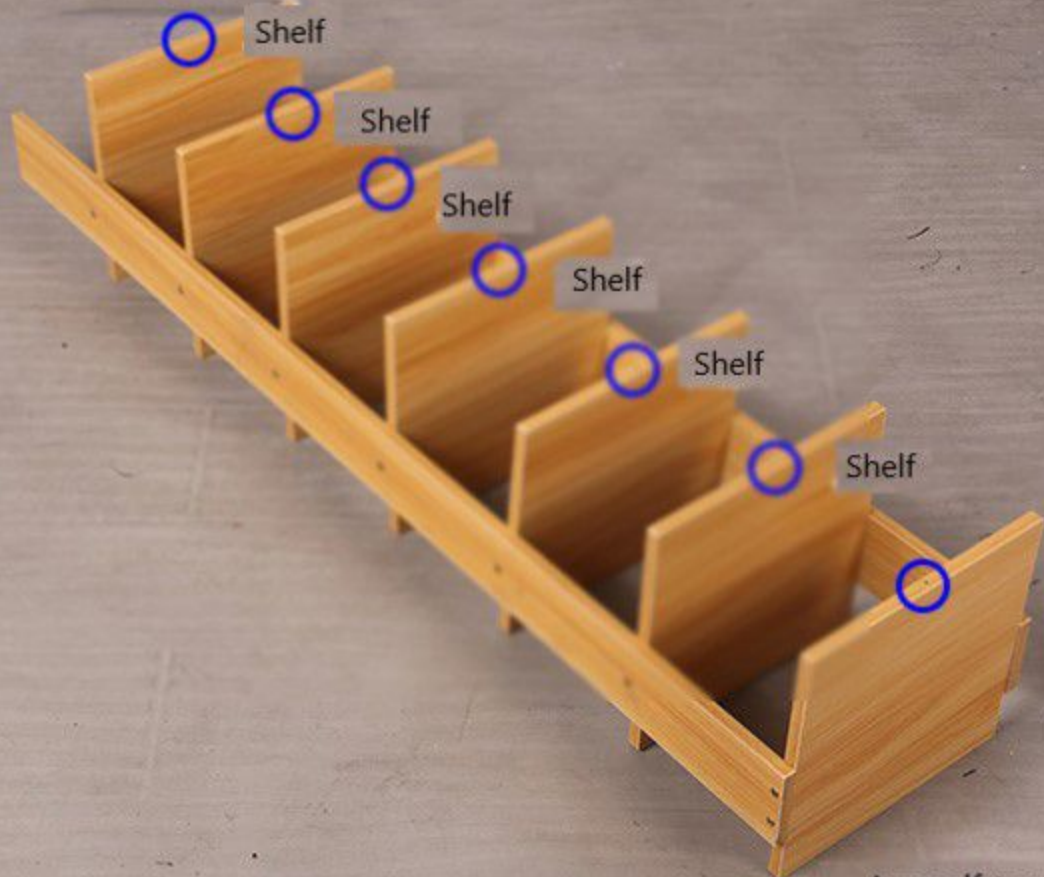

4cm self-tapping screws



Rear riser

4cm self-tapping screws

After the installation is complete, the overall arrangement is as follows!





Turn the eccentric bolt  
clockwise to lock the board

Eccentric parts fixed



Producer: Meng Xianyi  
Auditor 1: Wu Yiting  
Auditor 2: Sun Yanting

The installation is  
complete!