




Installation Instructions

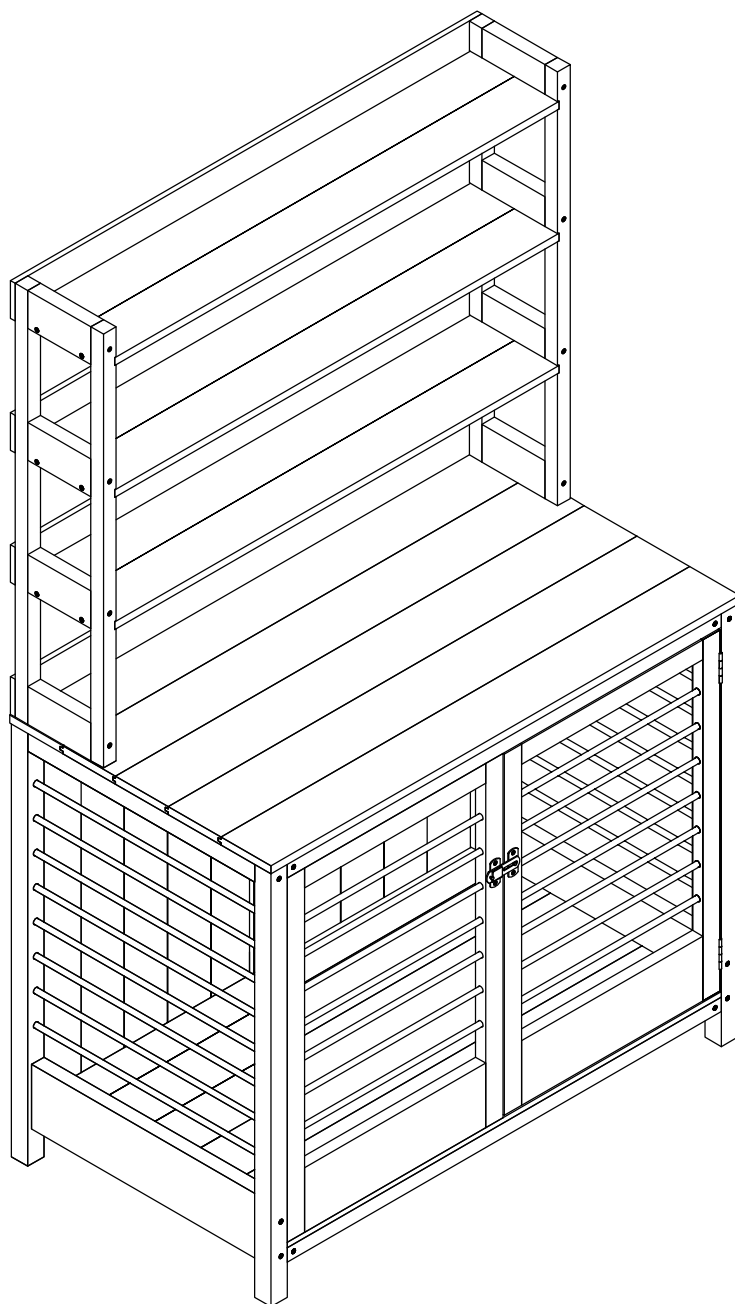


Board Identification

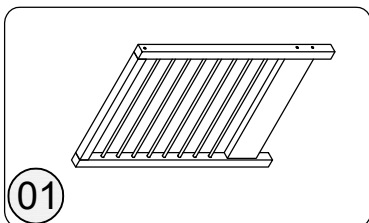


left sider
Qty:1

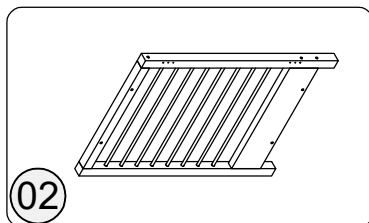


right side
Qty:1

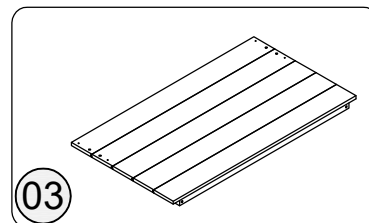


Panel
Qty:1

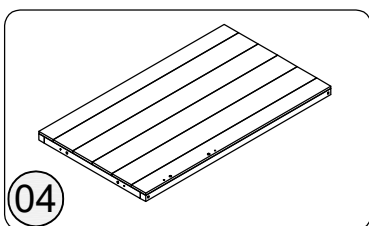


baseboard
Qty:1

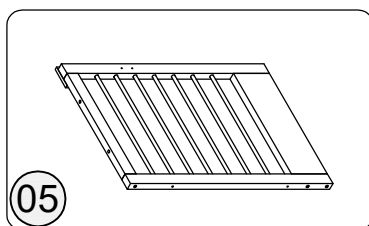


Fixed door panel
Qty:1

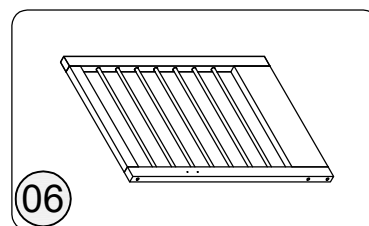


Right door pane
Qty:1

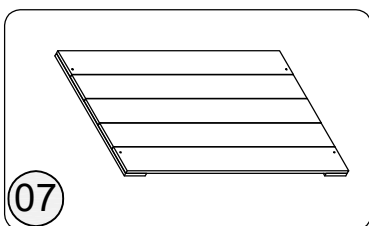


backboard
Qty:2

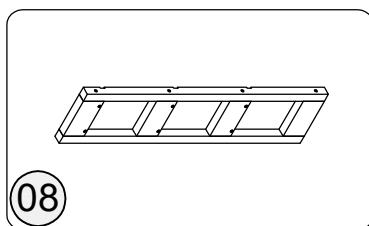


Upper left side
Qty:1

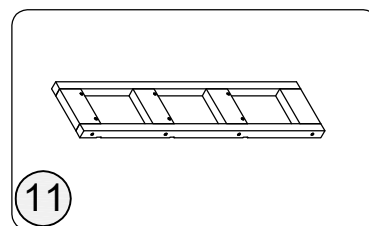


Upper right side
Qty:1

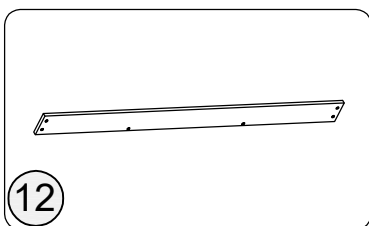

Upper back strap
Qty:3

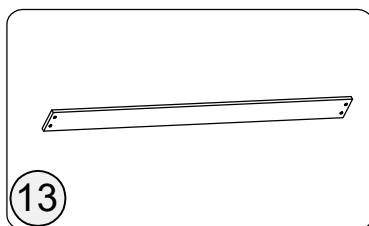

Lower back strap
Qty:1

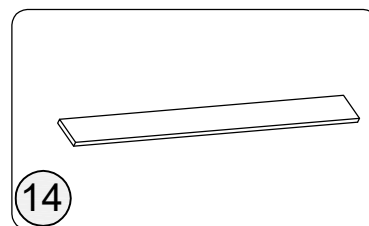

shelf
Qty:6

Hardware Identification



3.0*14

A

x 12+1

Screw




3.5*16

B

x 4

Black screw




4*25

C

x 22+2

Screw




4*40

D

x 24+2

Screw




4*45

E

x 8

Screw



4*60

F

x 4

Screw




8*30

G

x 16+1


Wood dowel



H

x 2

Hinge




J




x 1

Latch hook


Explosion diagram

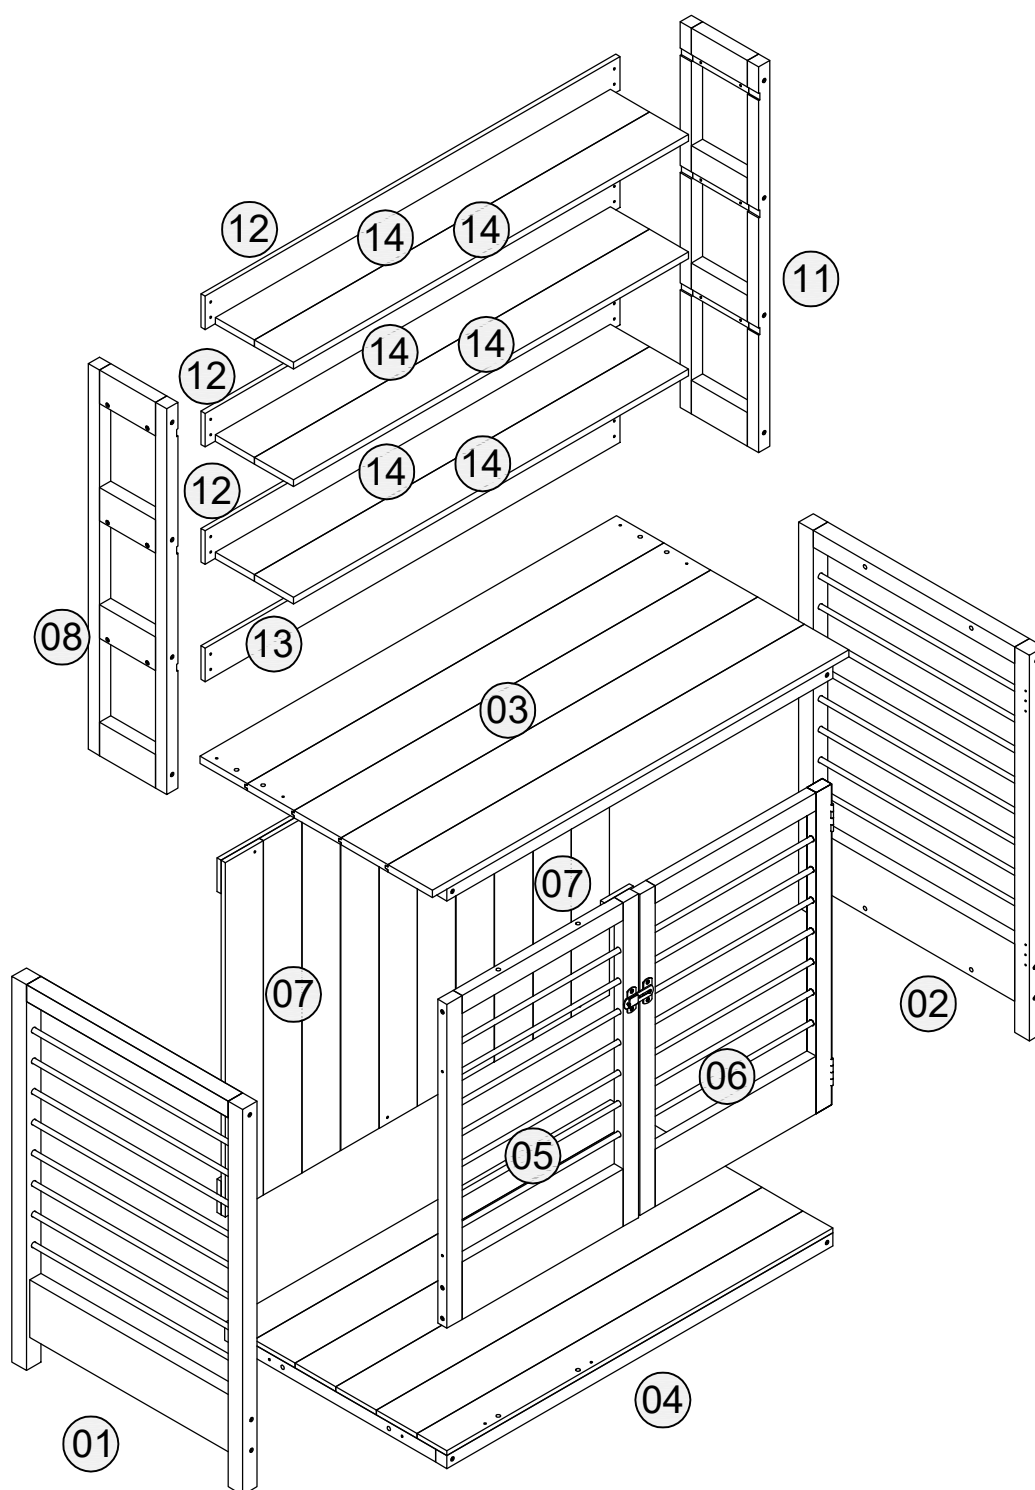


Step 1

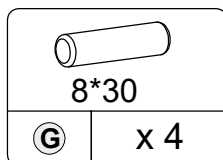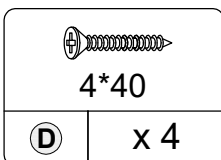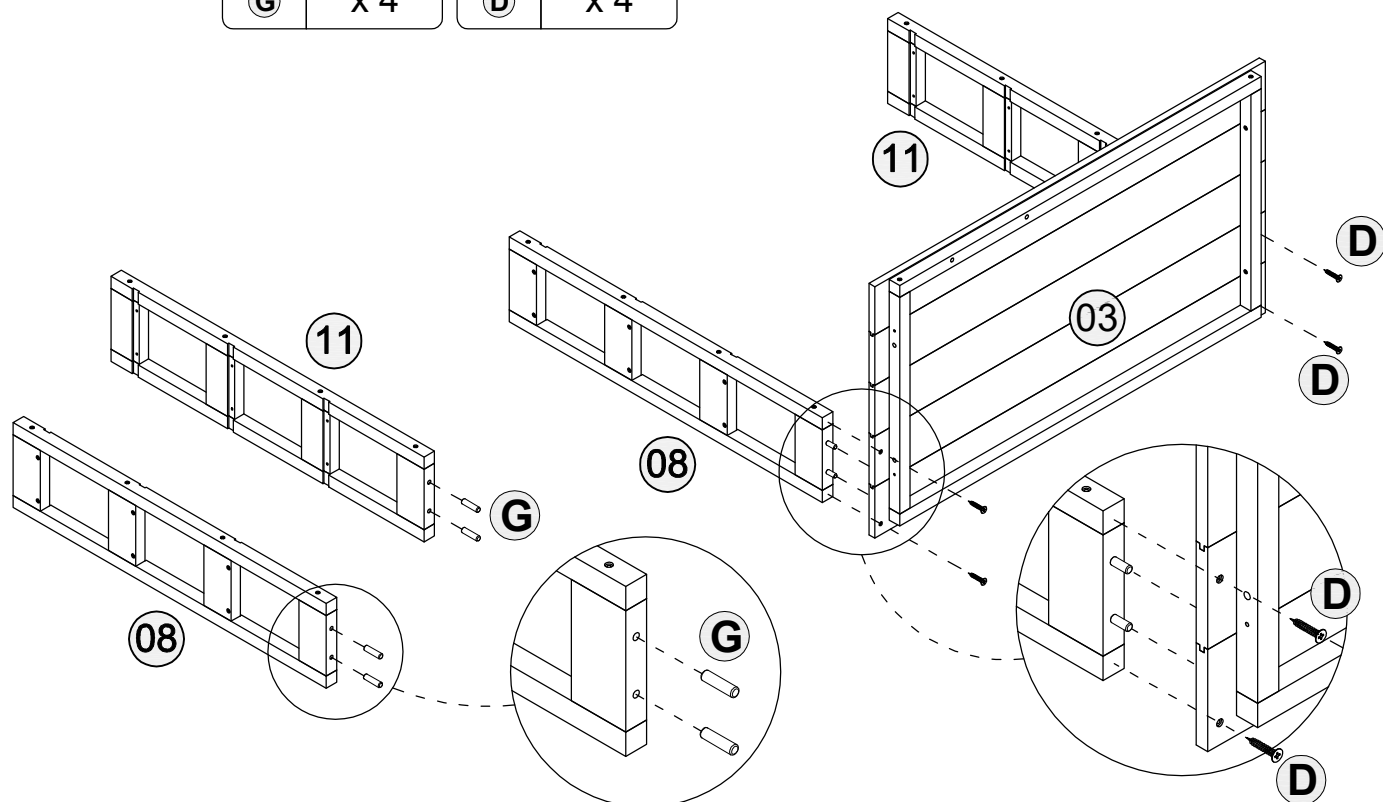


Step 2

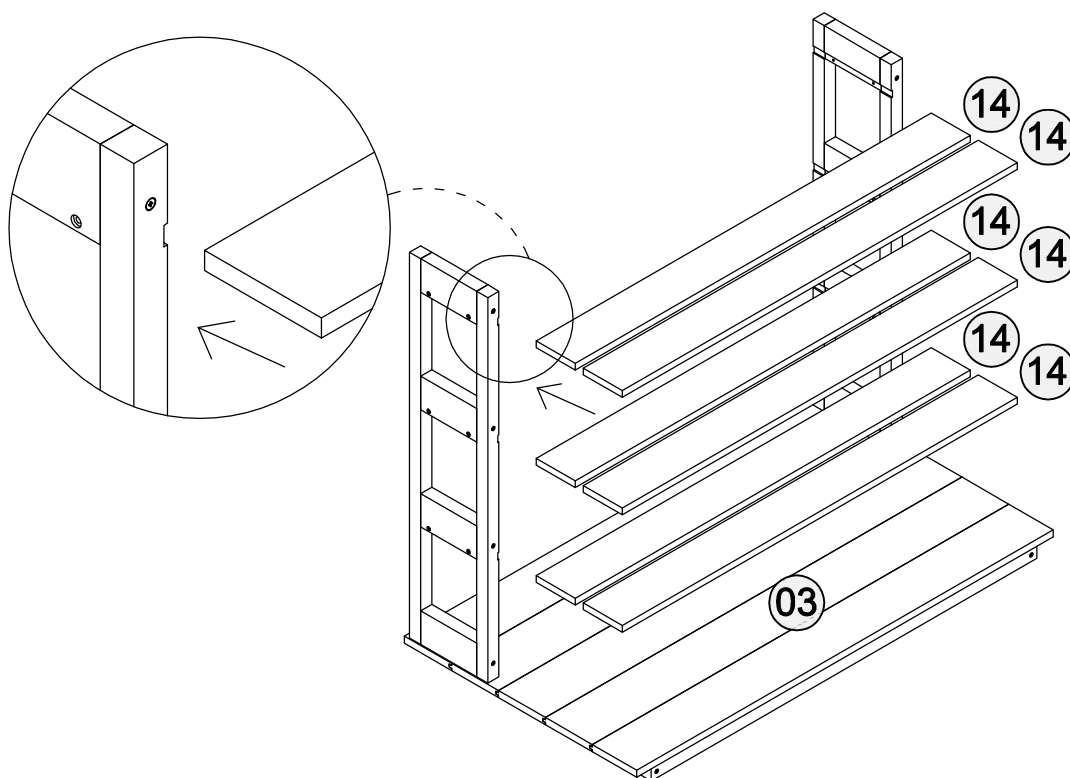


Step 3

	
4*40	
D	x 6


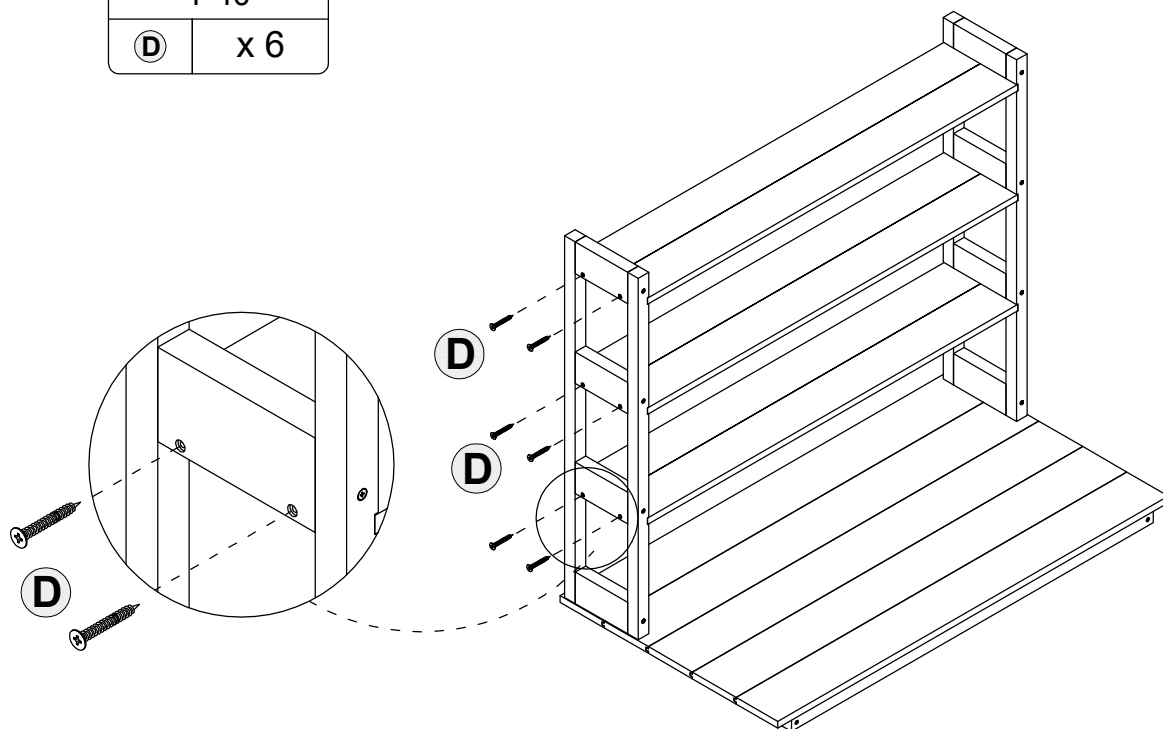


Step 4



	
4*40	
D	x 3

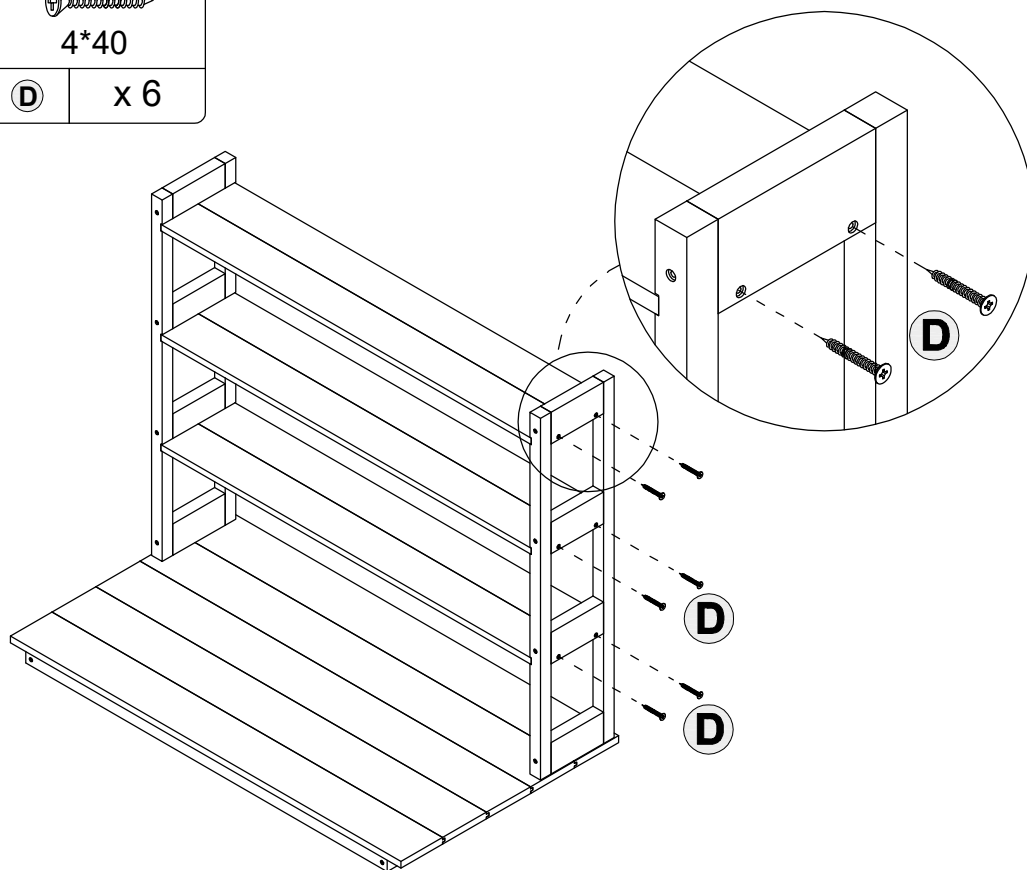


Step 5

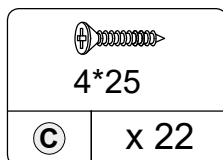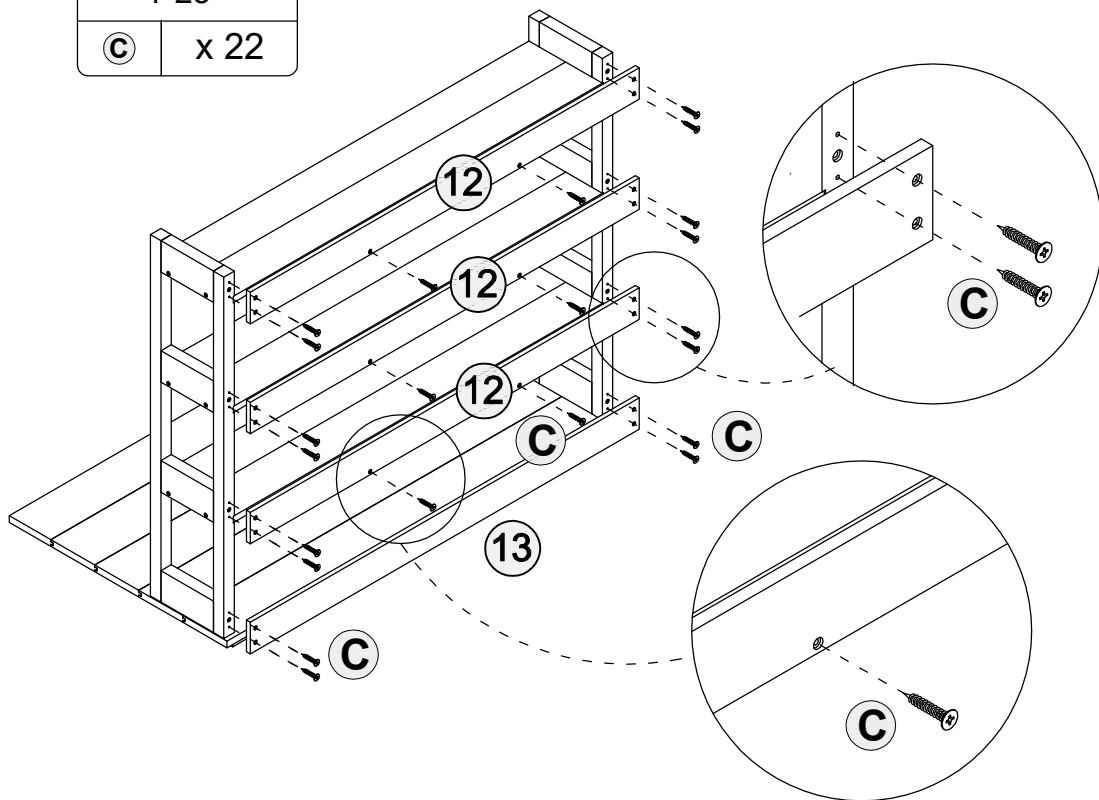


Step 6

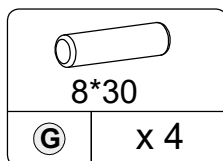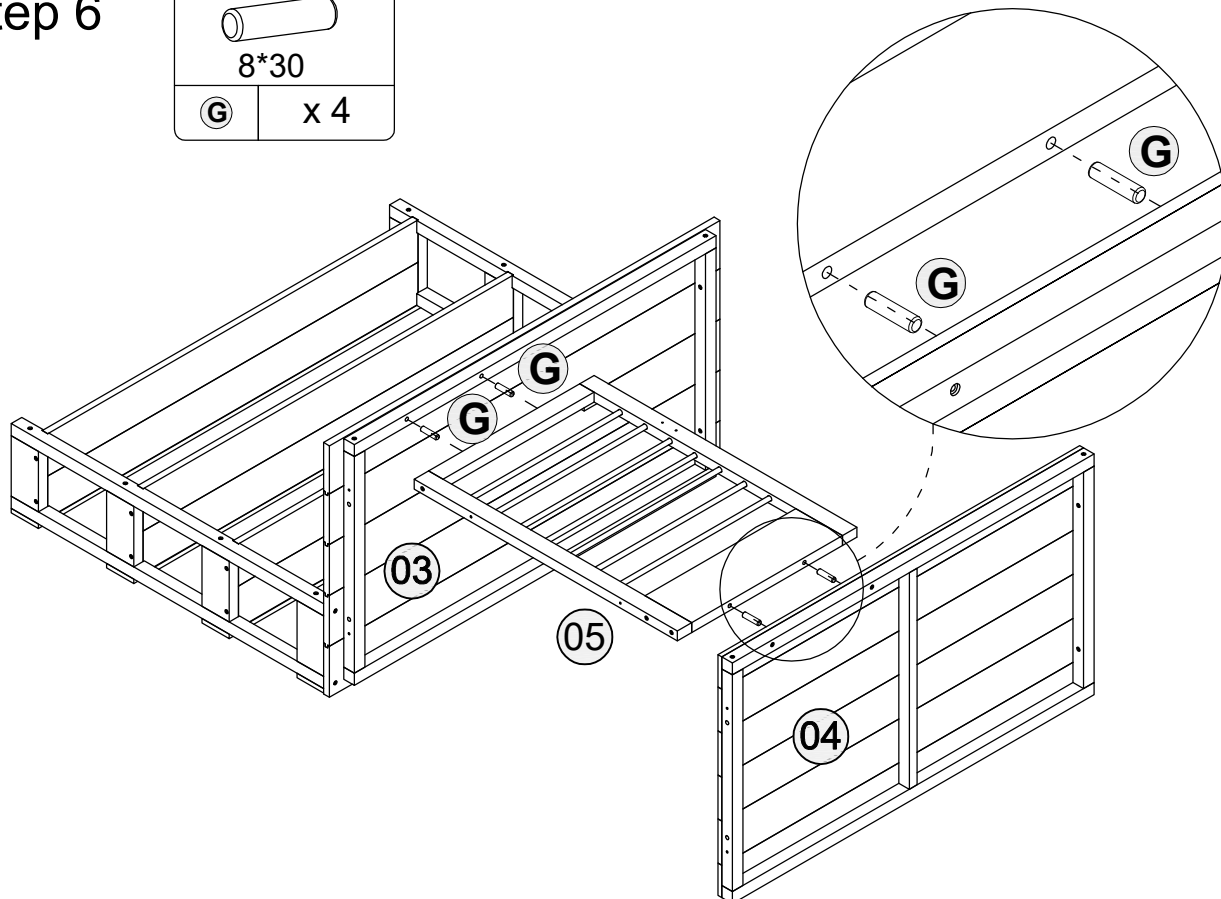


Step 7


	
4*60	
F	x 2

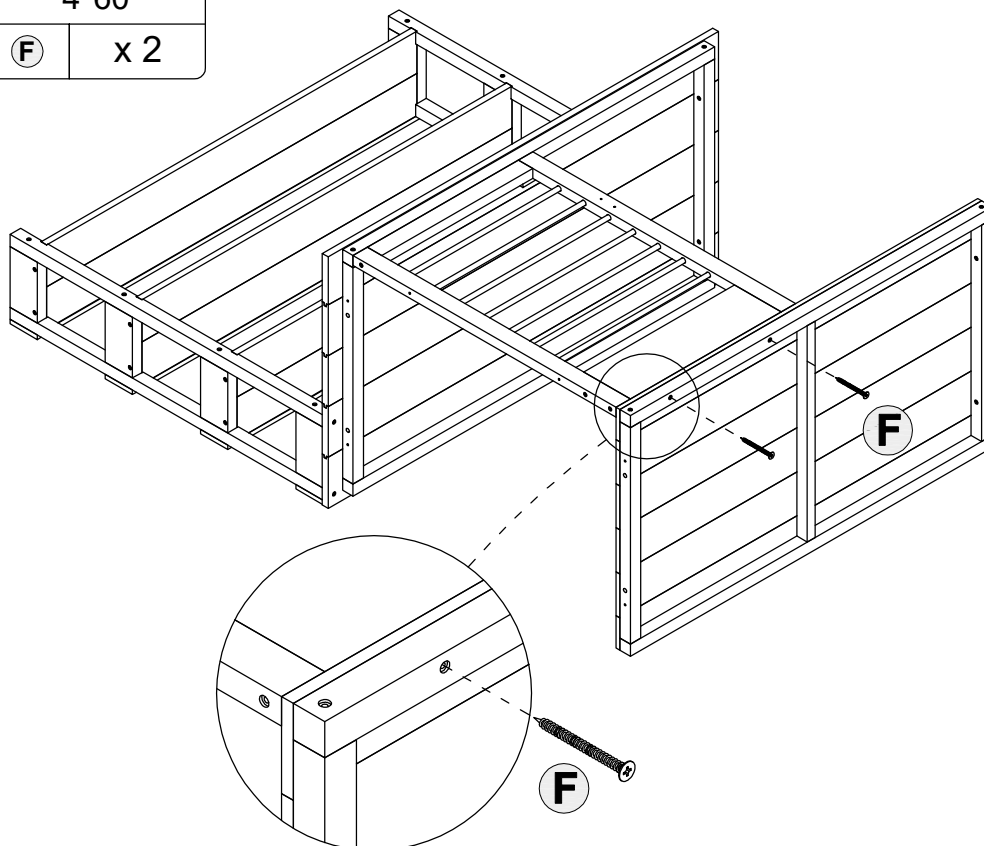




Step 8

	
8*30	
G	x 4



	
4*45	
E	x 4

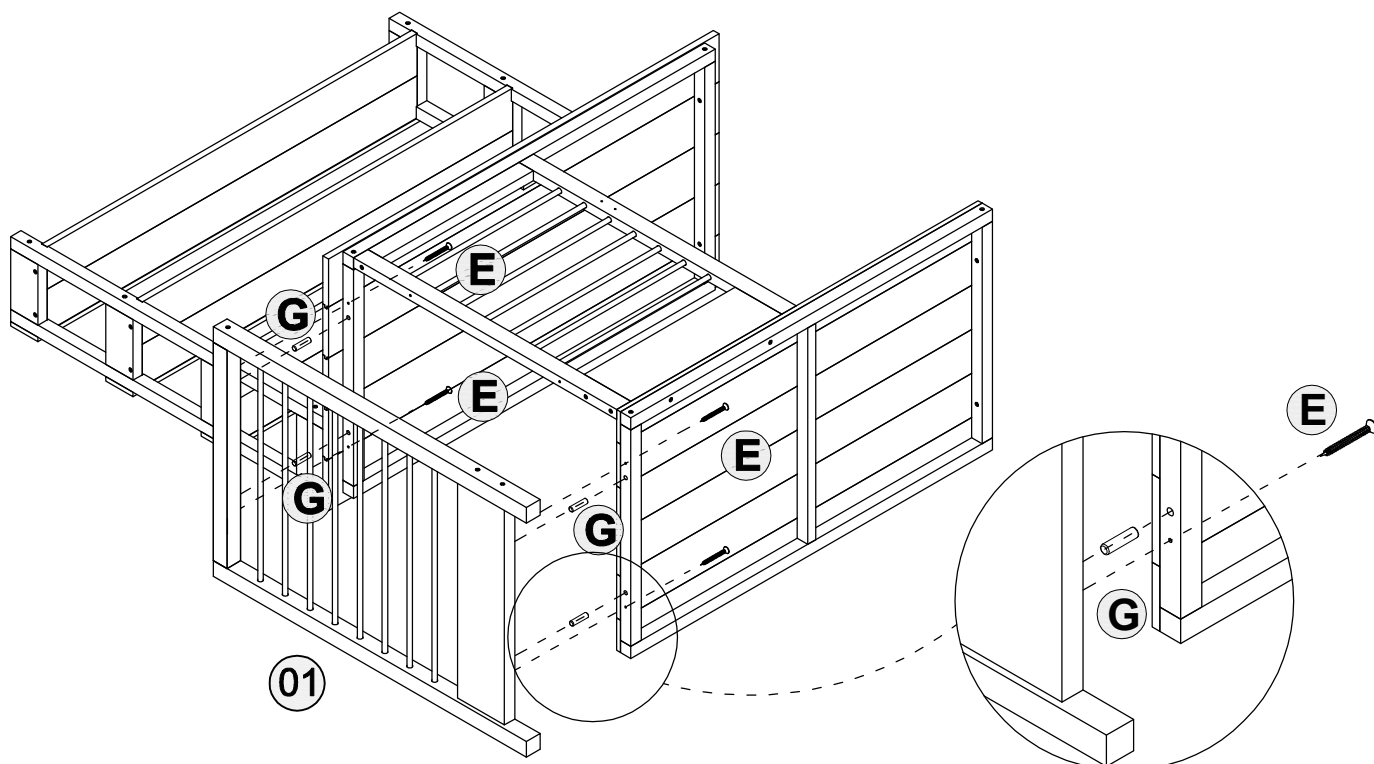



Step 9

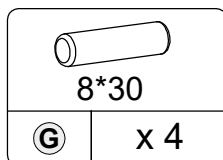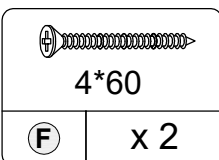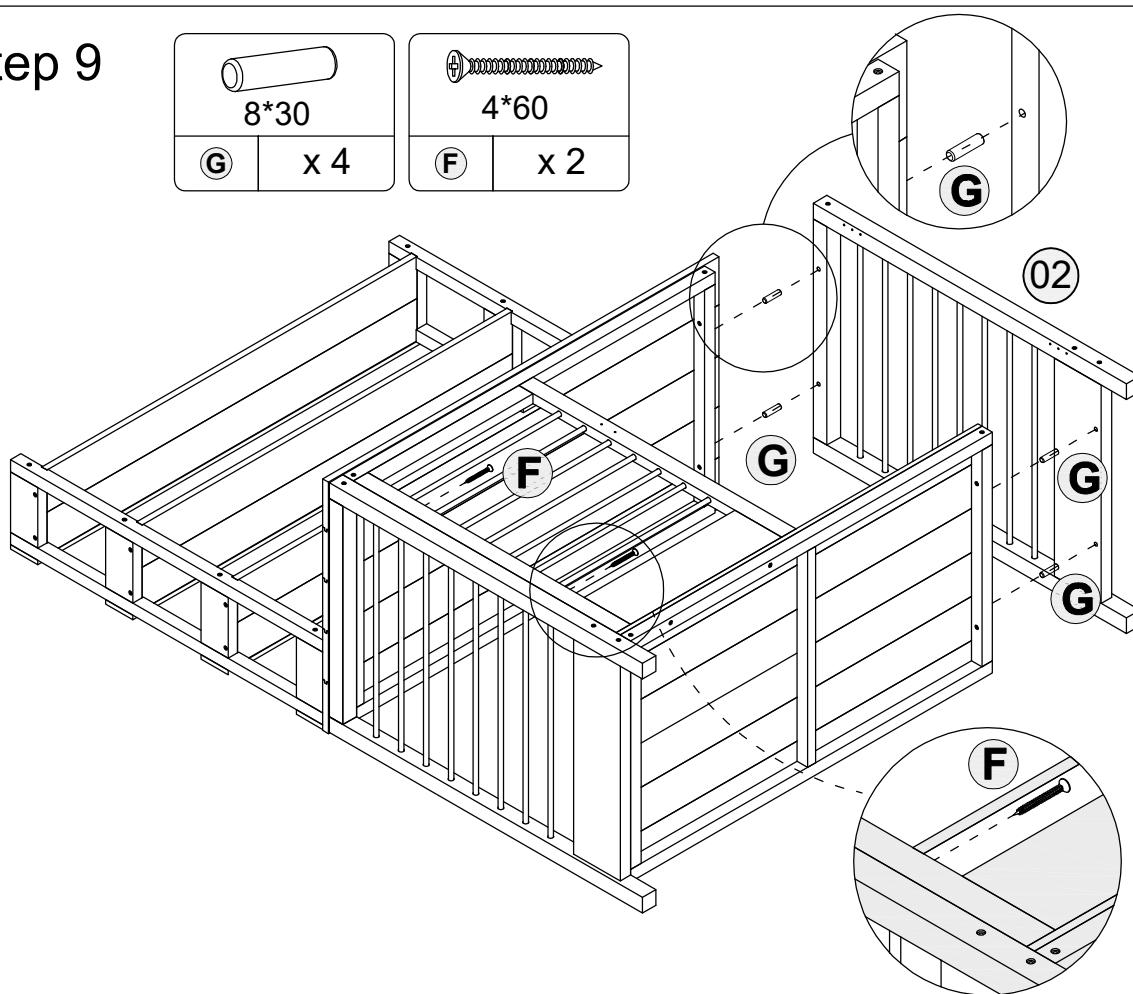




Step 10

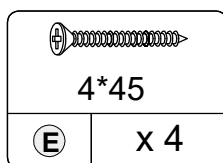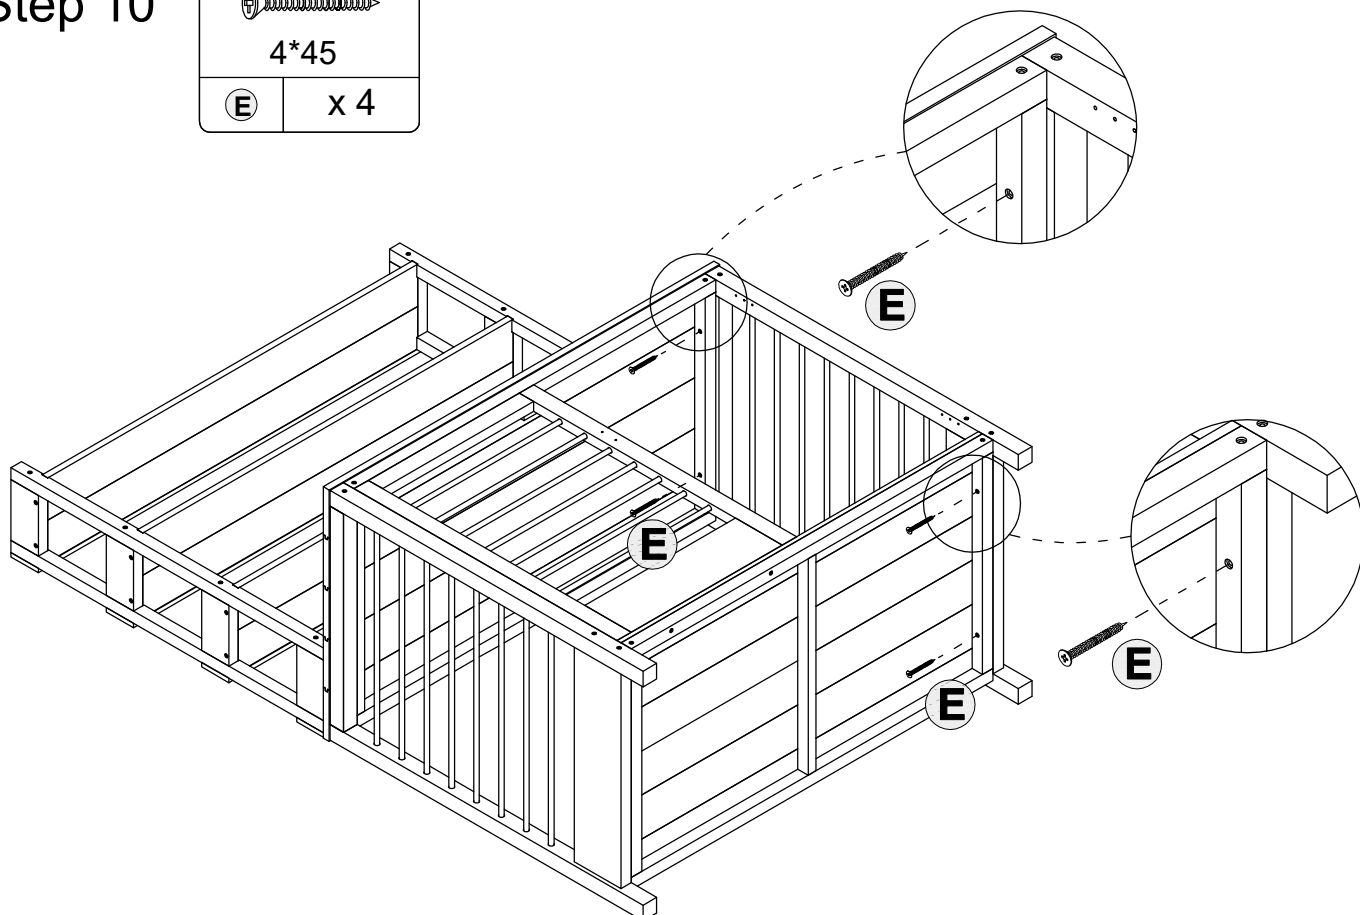



Step 11

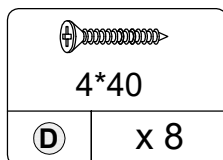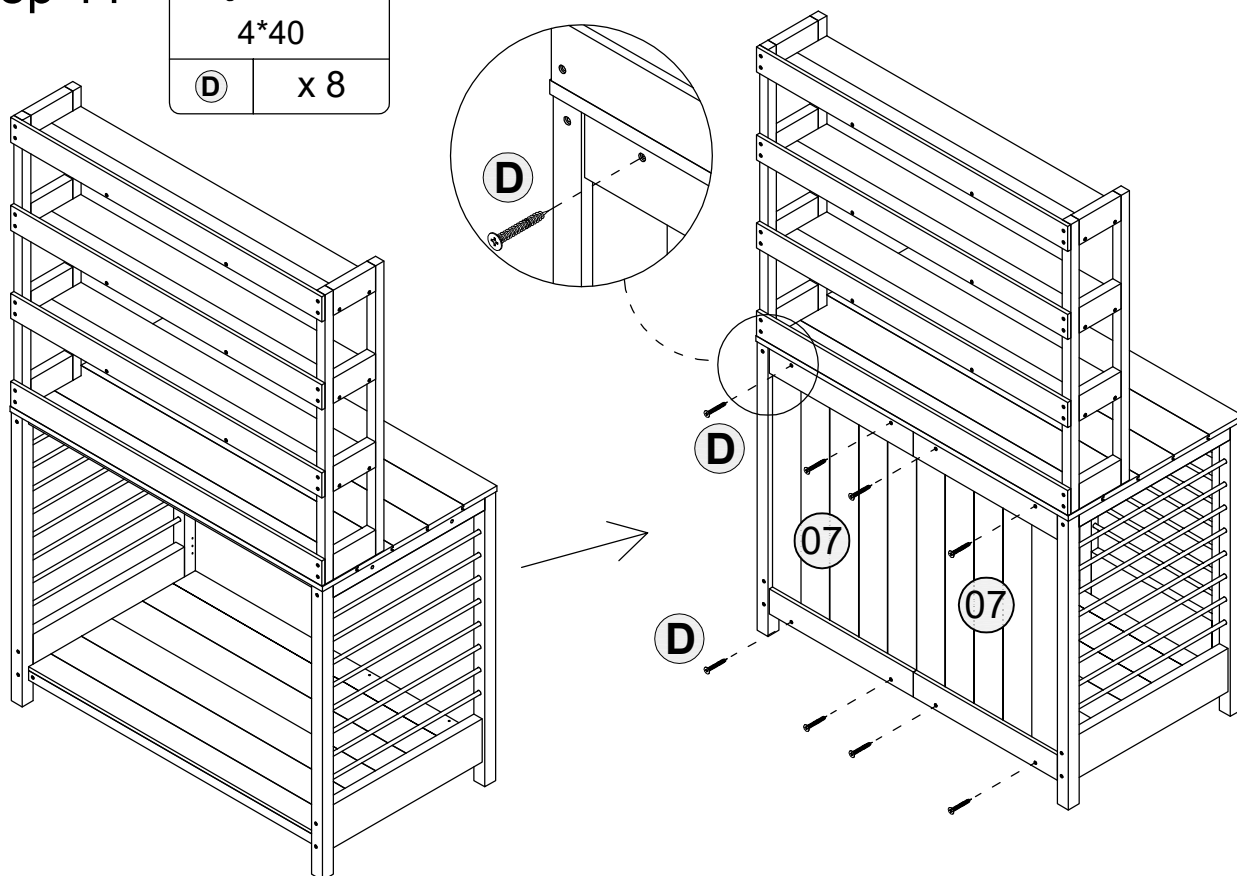




Step 12

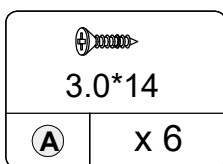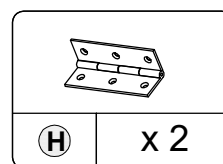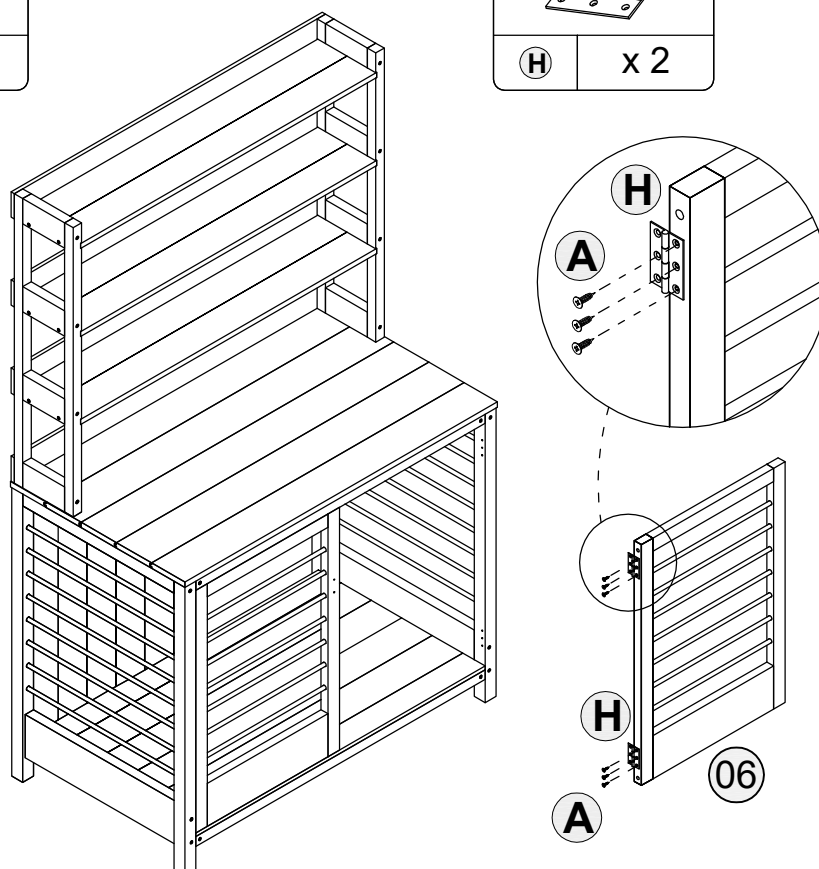

Step 13

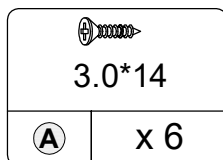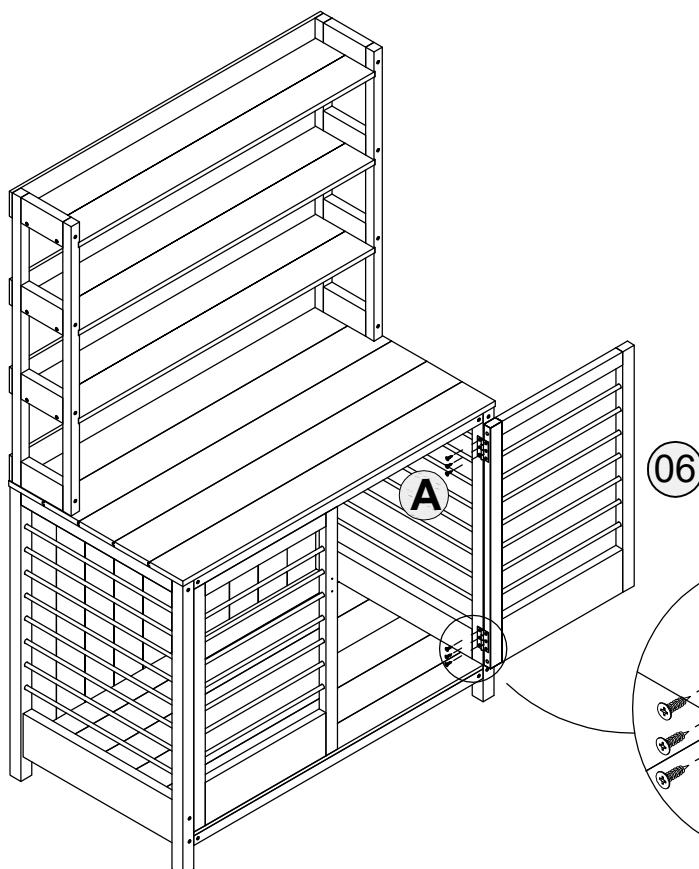

Step 14

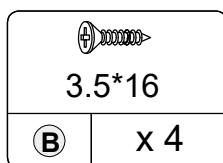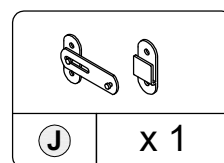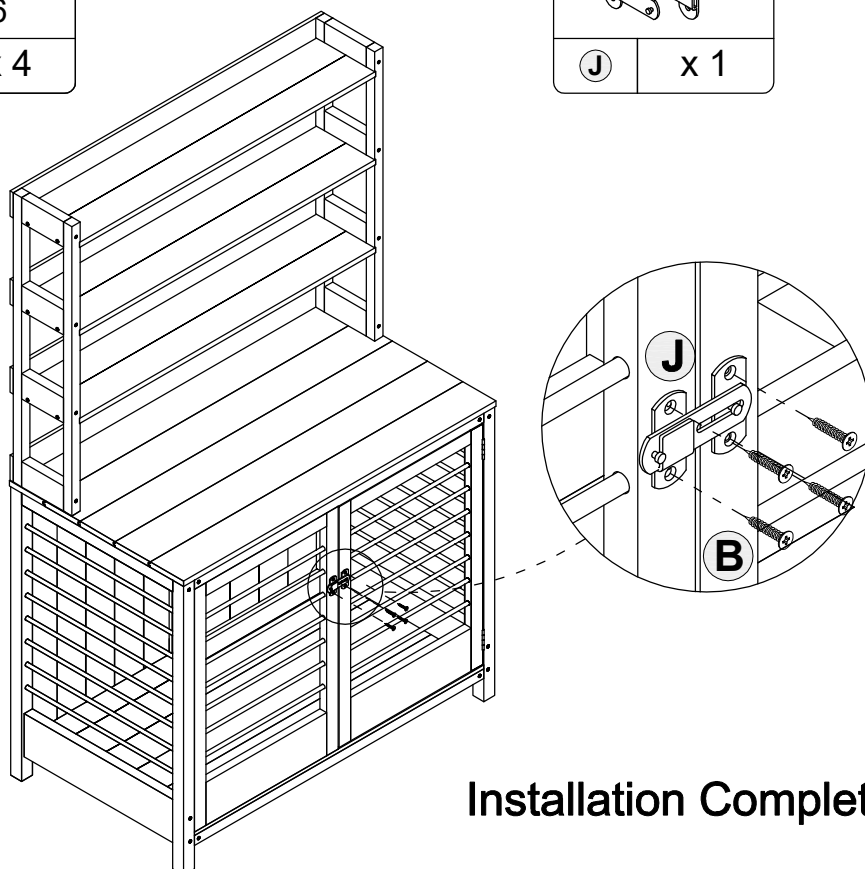

Installation Completed