




ASSEMBLY INSTRUCTION | INSTRUCTIONS DE MONTAGE

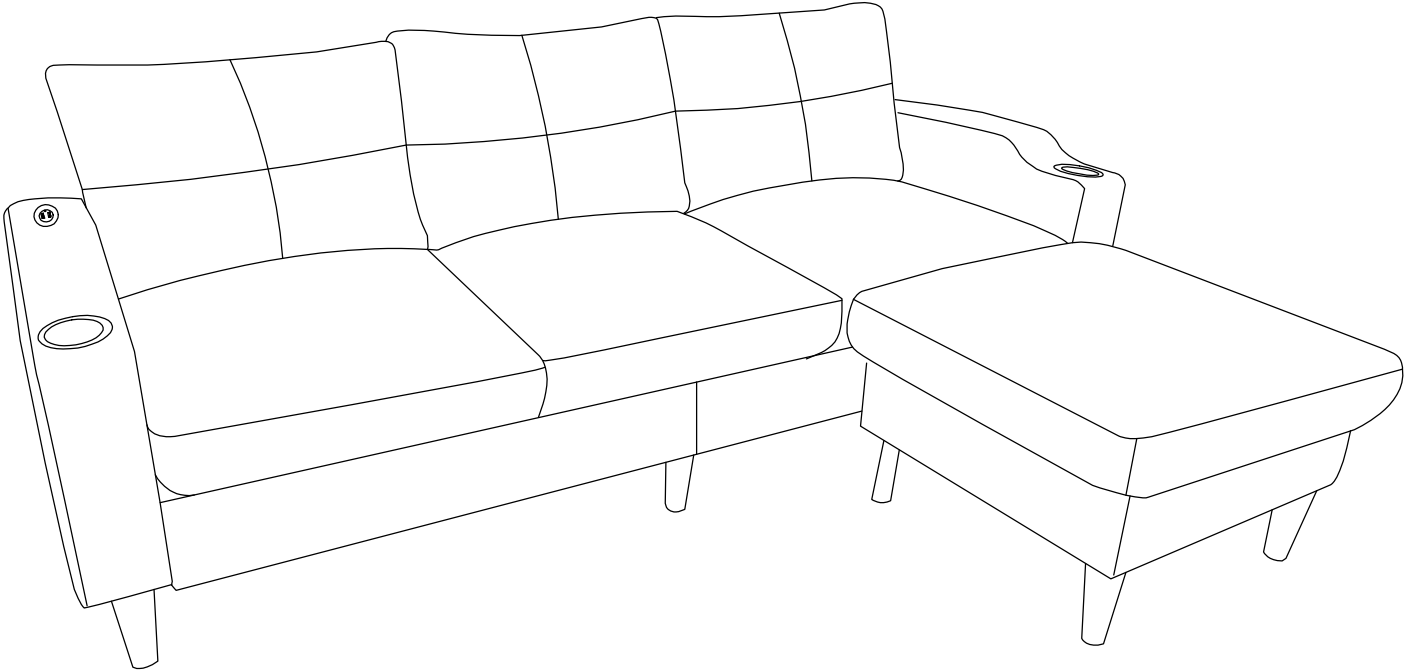


A*1

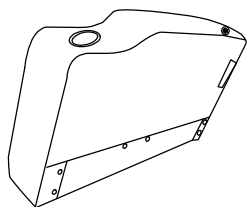


B*1

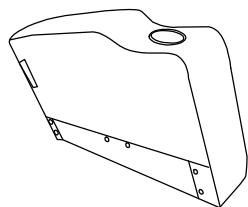


C*1

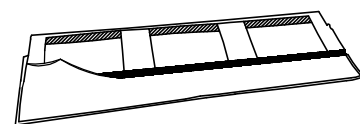

D*1

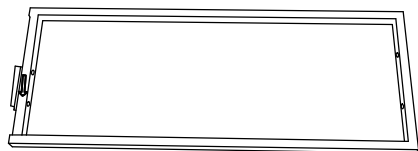


E*2

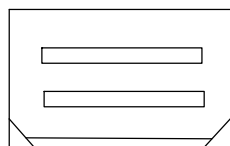

F*2



G*2



H*40




M6*16


I*1





J*2




K*2




L1*8 
M6*40

L2*2 
M6*35

M*1




N*6




P*10




Q*4




R*2

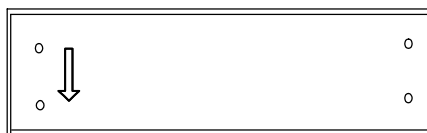


S*2

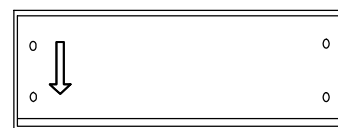


T*1

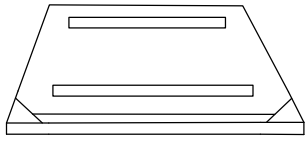


U*1

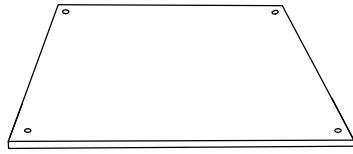


V*1

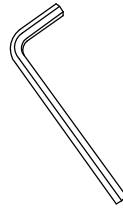


W*3

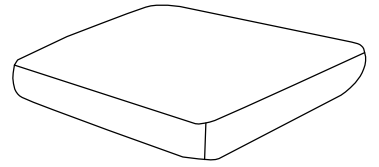


X*3

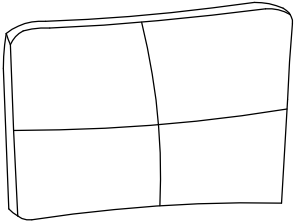

Y*1

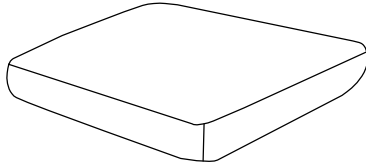


Z*10




O*10





STEP1

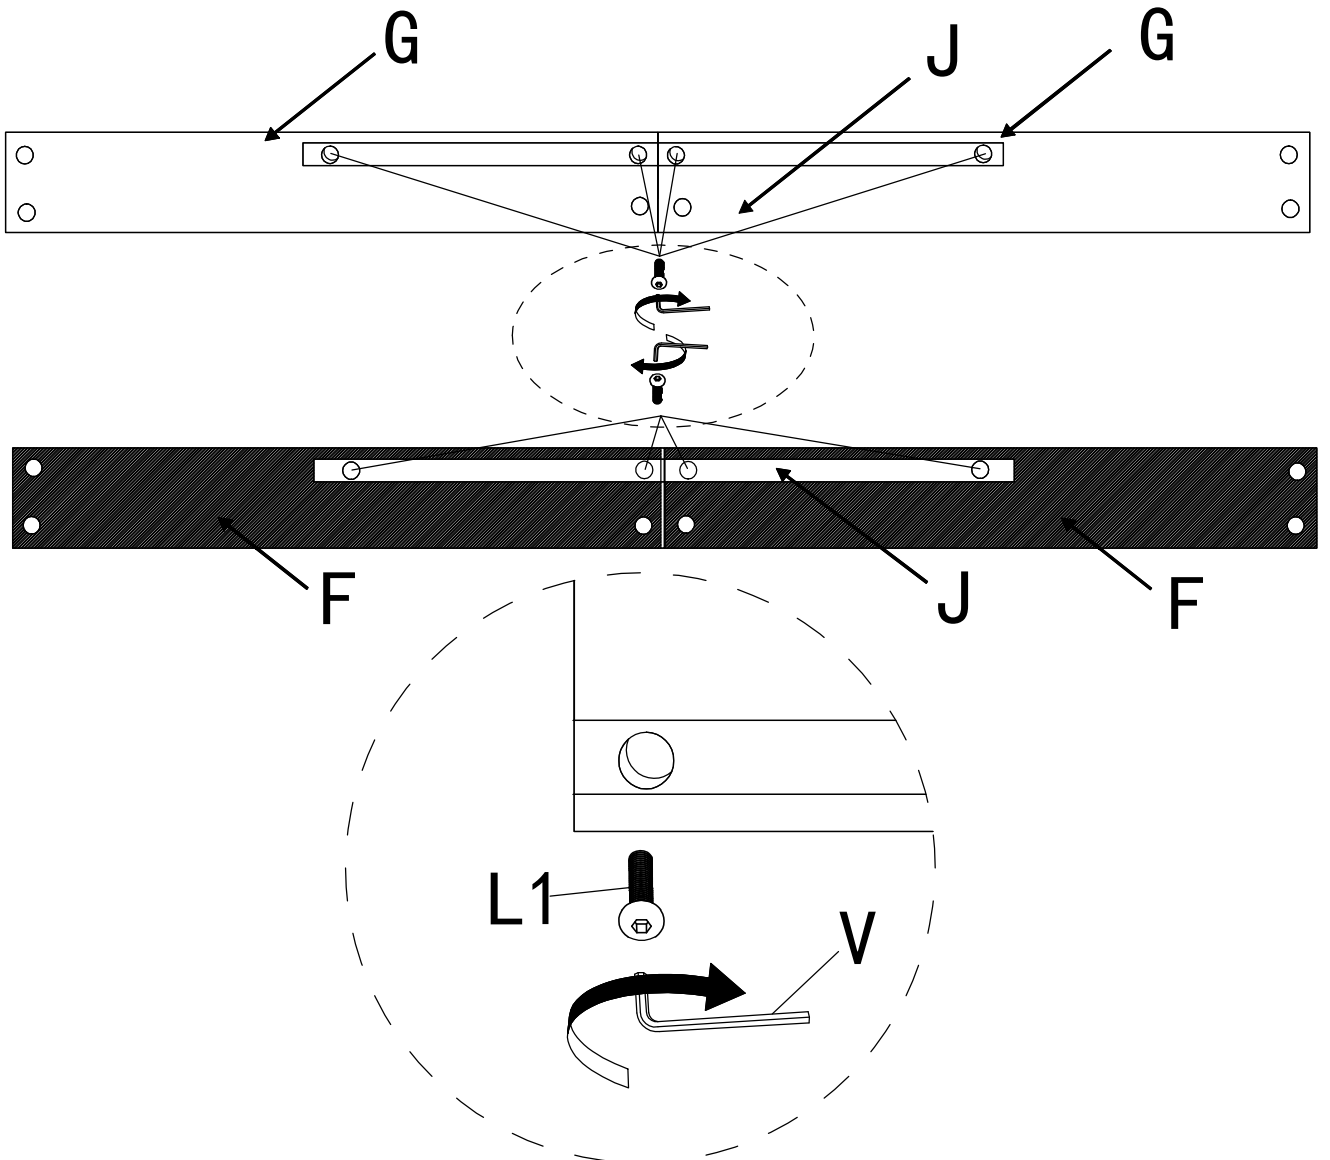


STEP 2

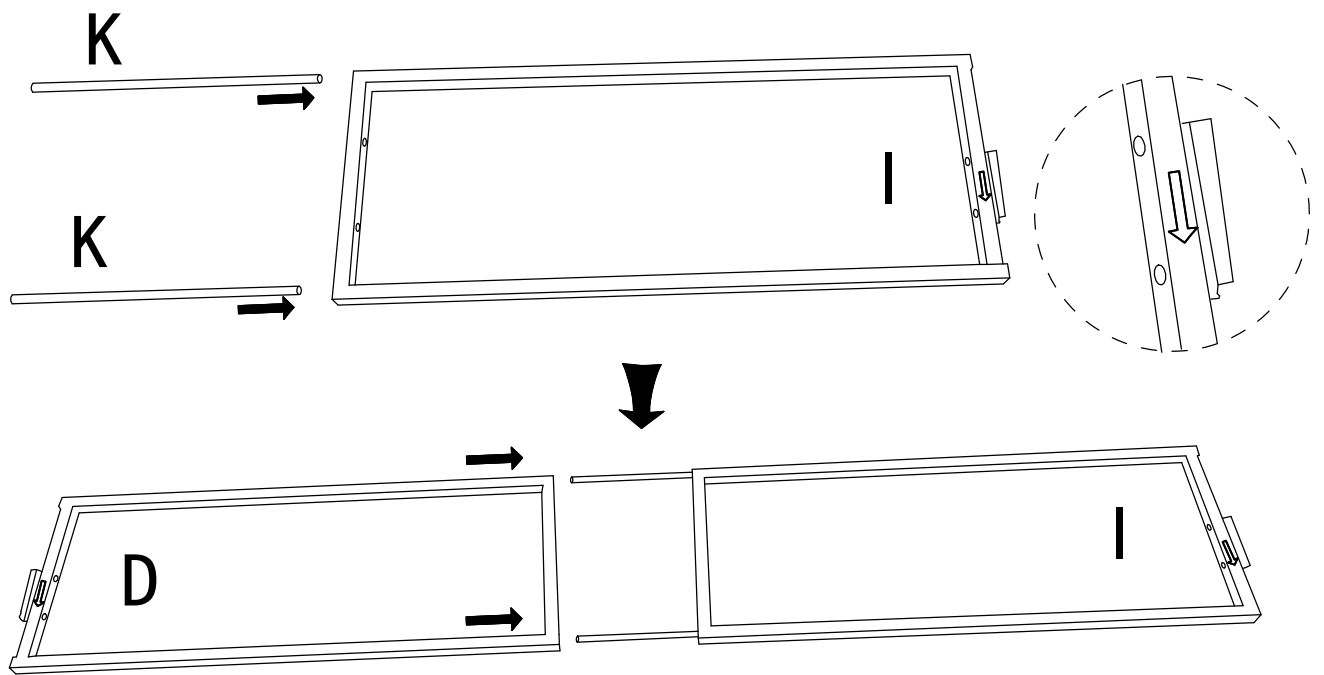


STEP 3

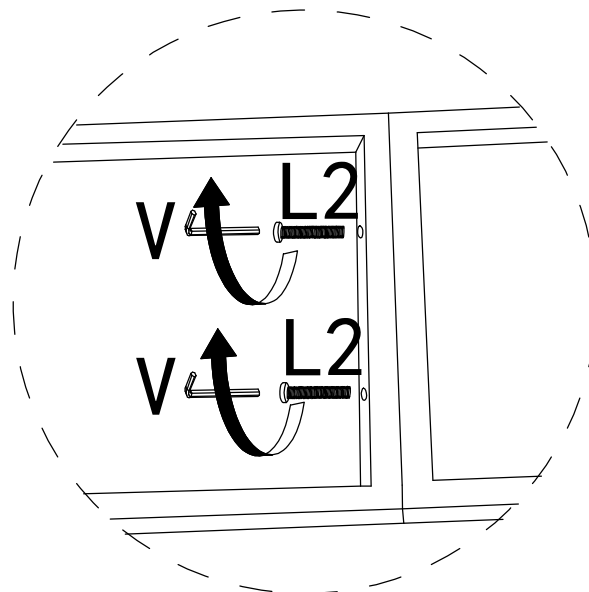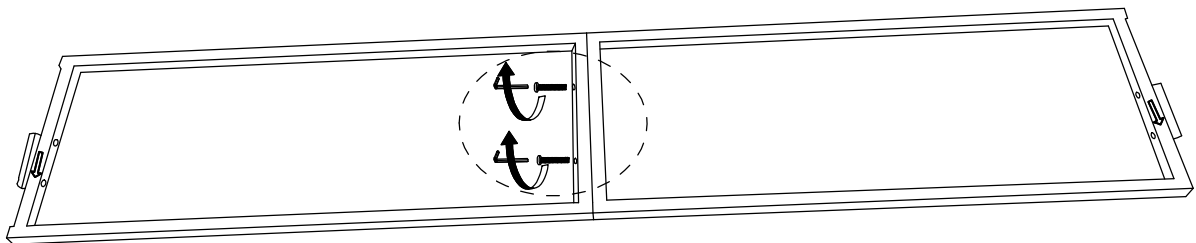


STEP4

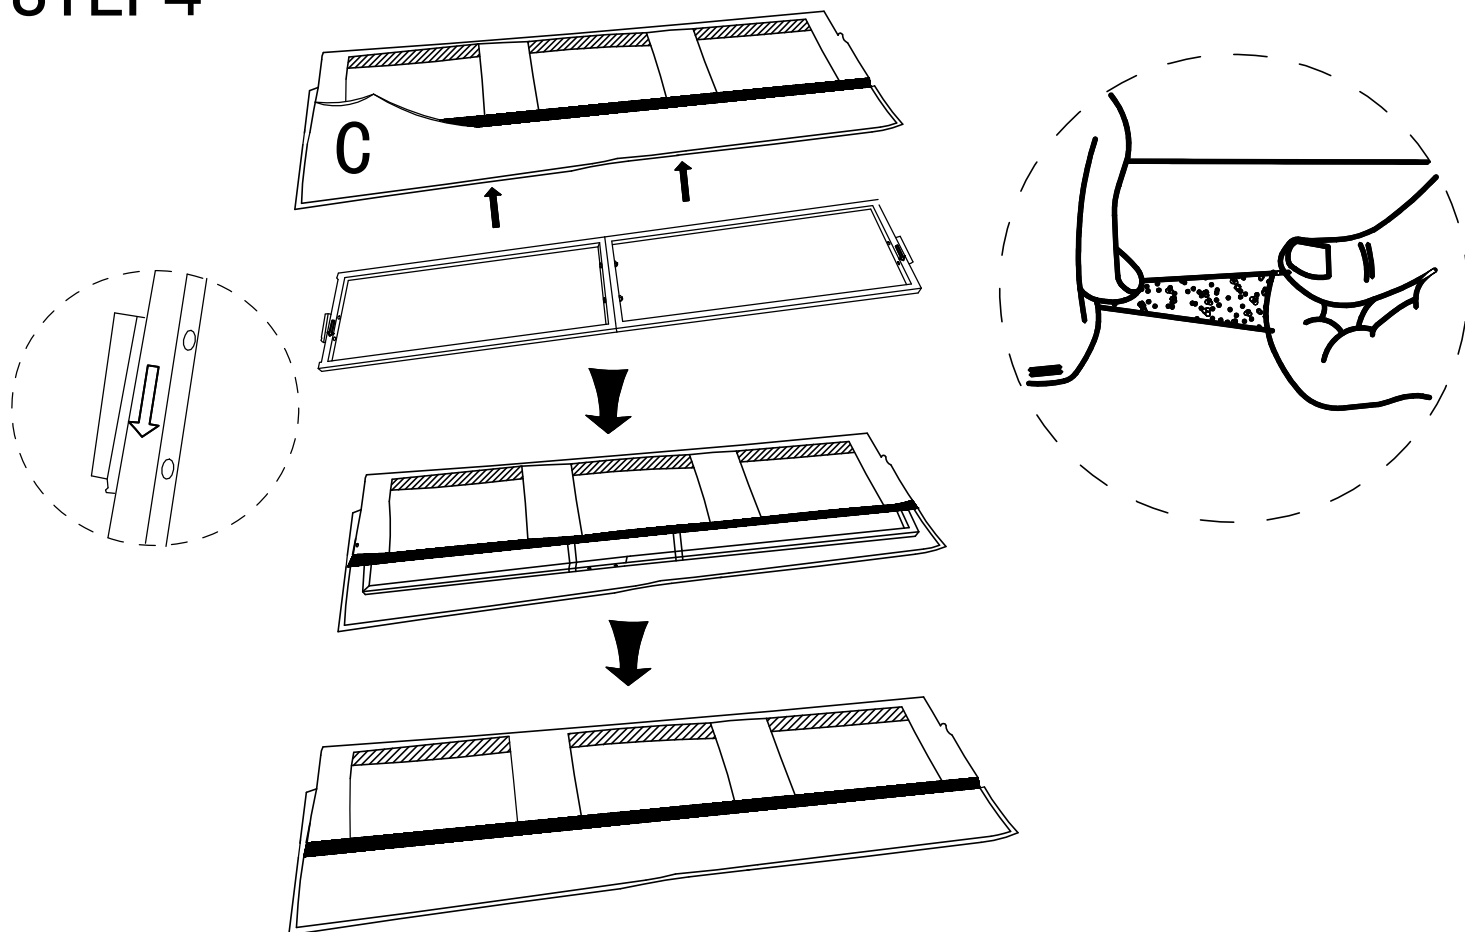


STEP5

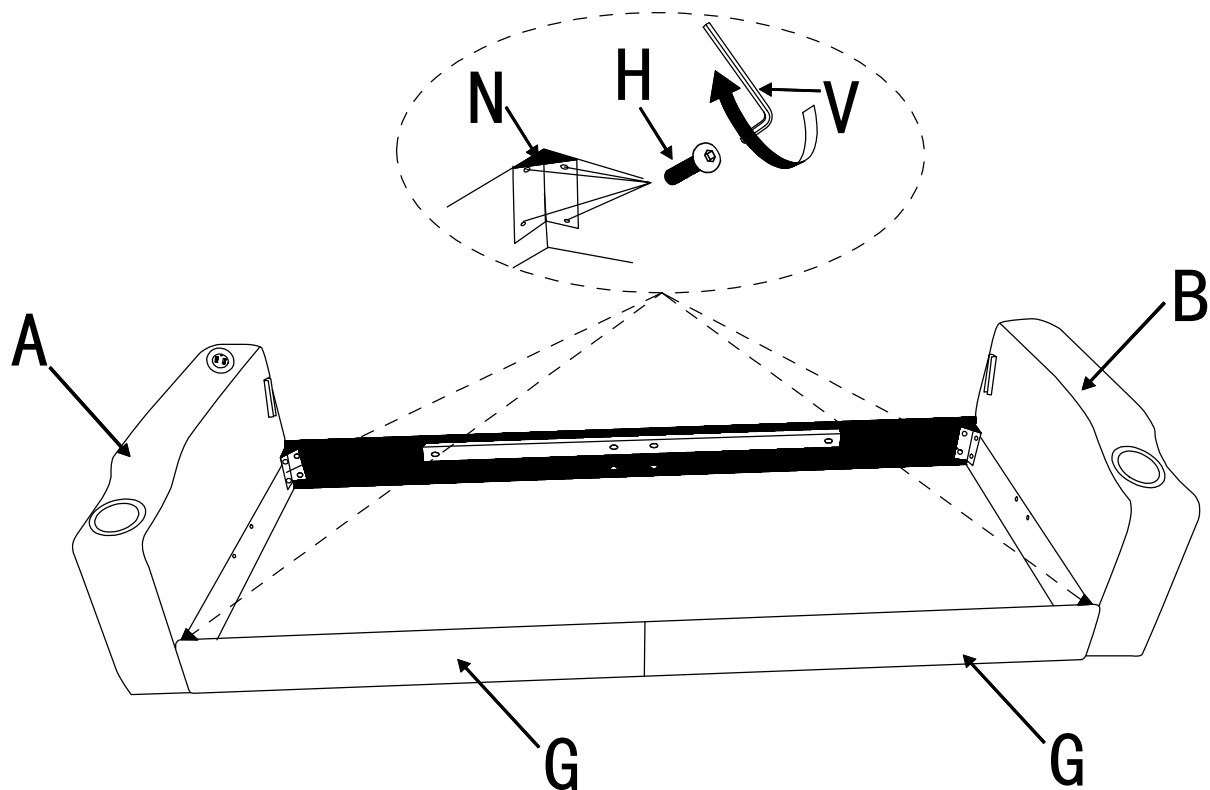


STEP6

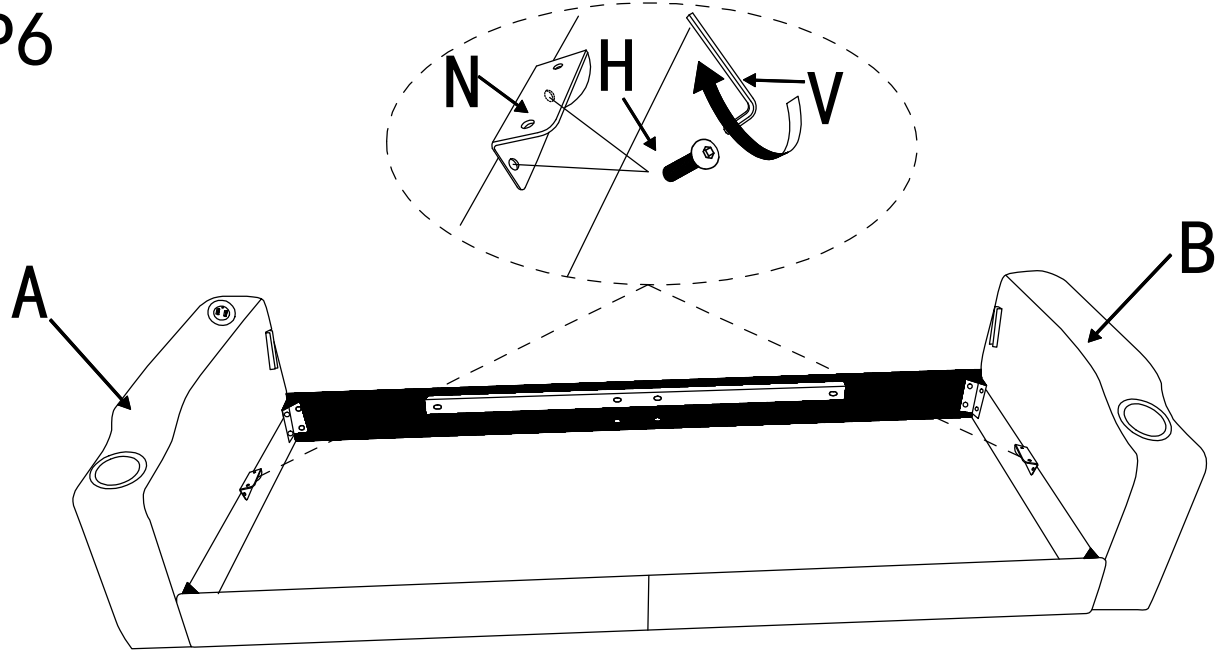


STEP7

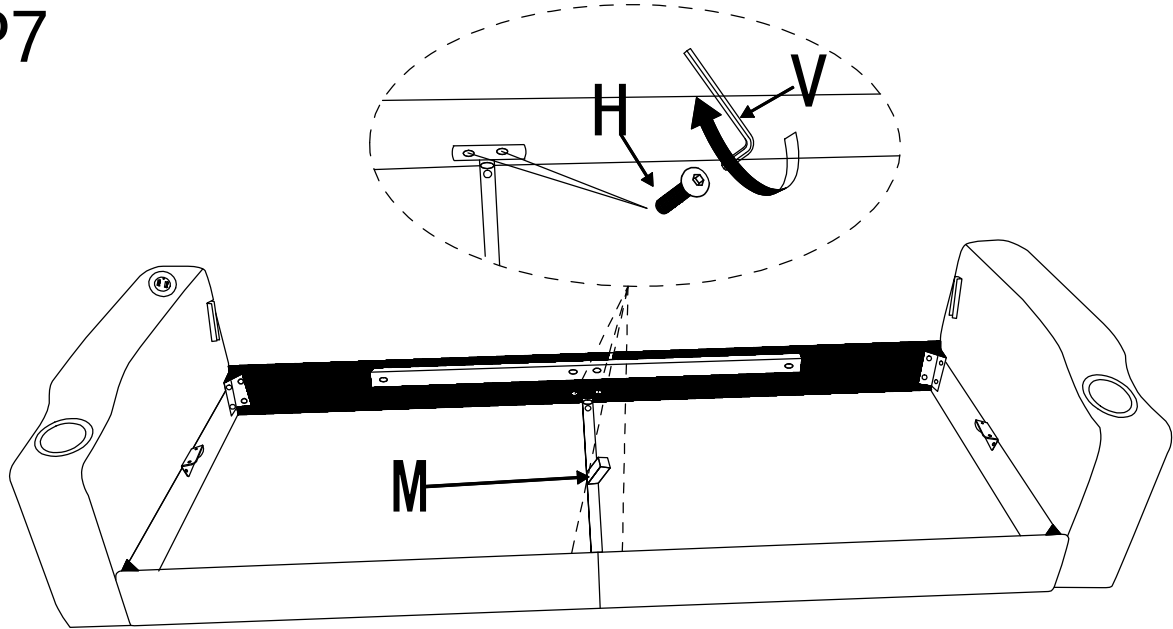


STEP8

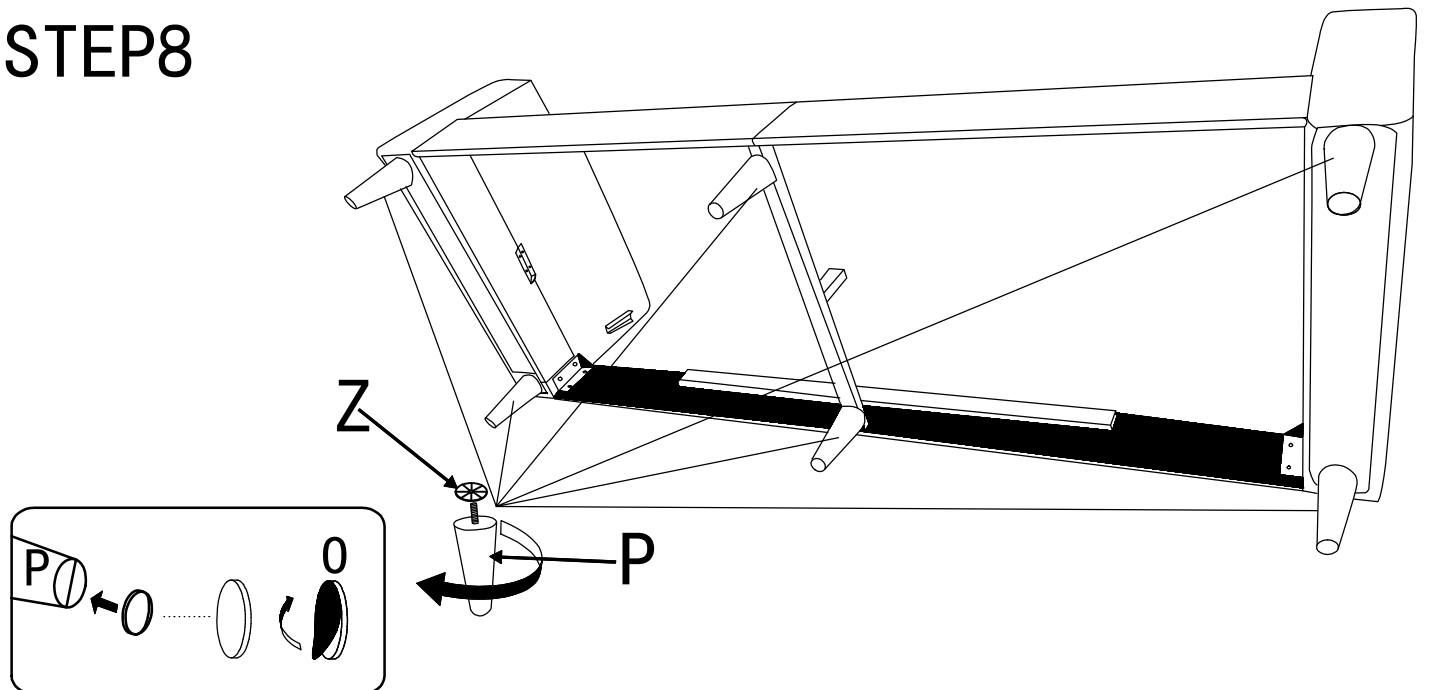

STEP9

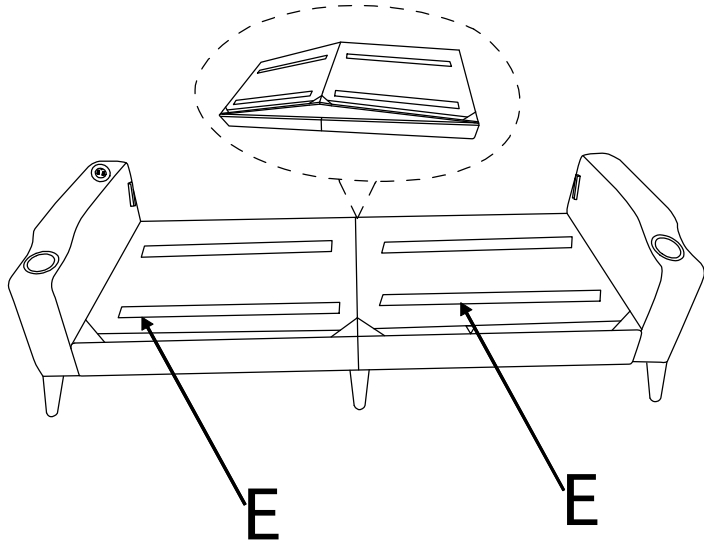


STEP10

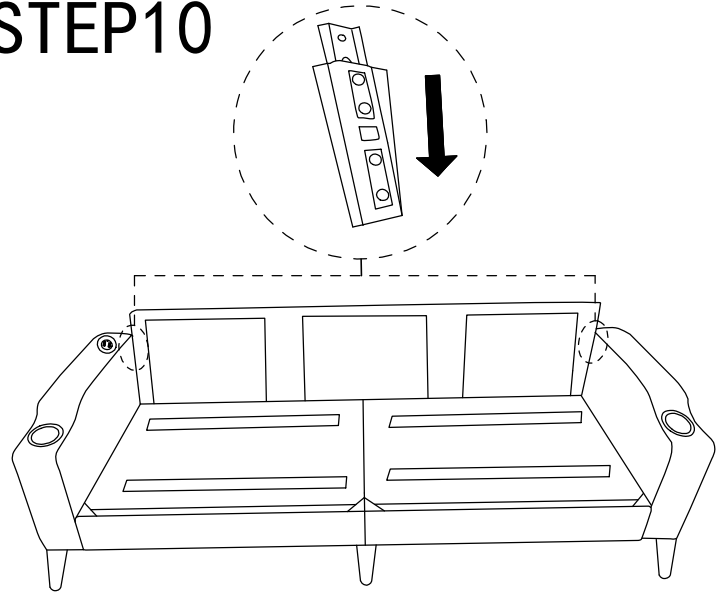


STEP11




STEP12

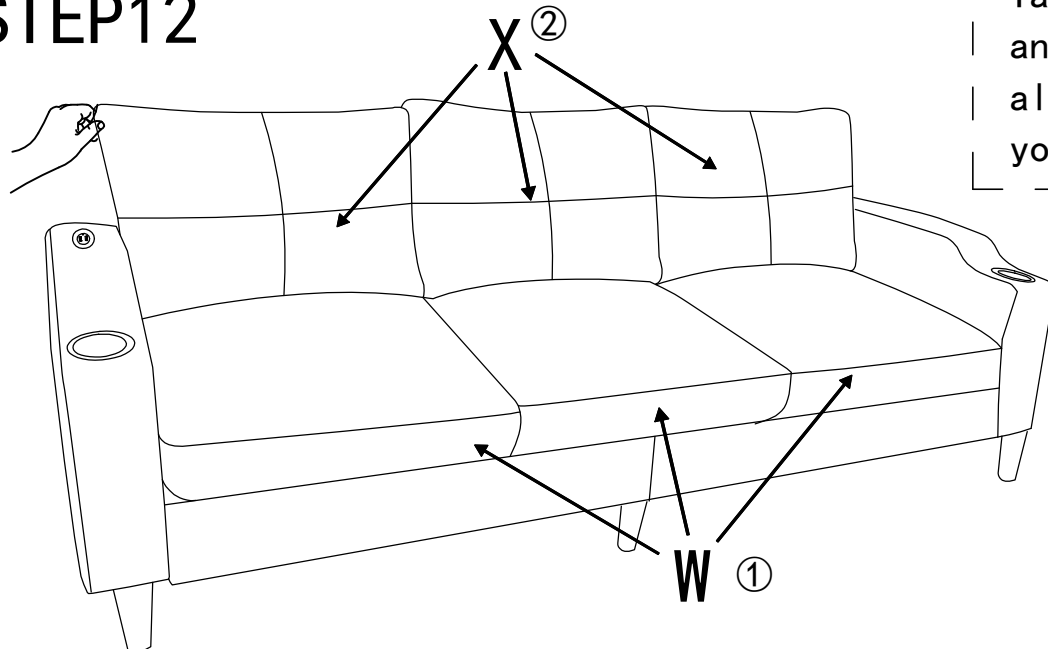


Take out the backpack and seat bag, and pat all four corners with your hand.

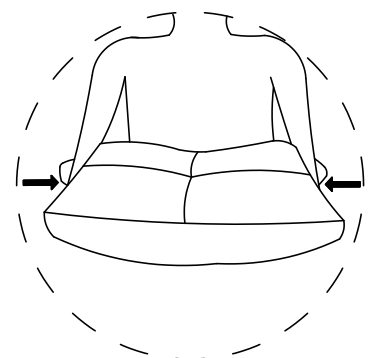


STEP13

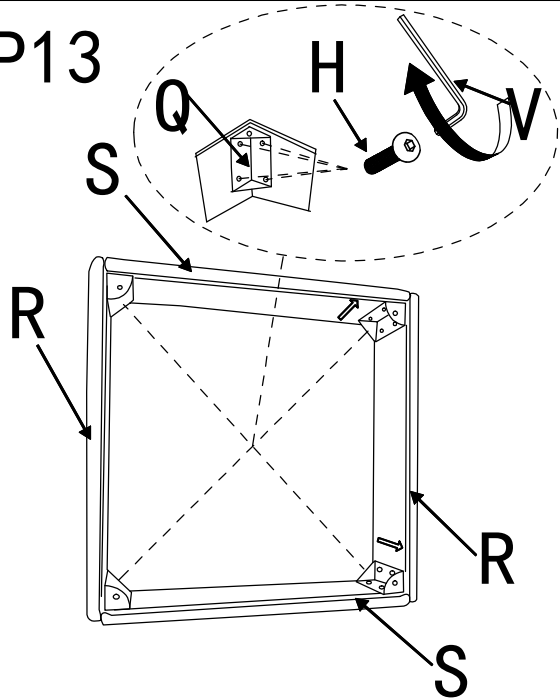


STEP14

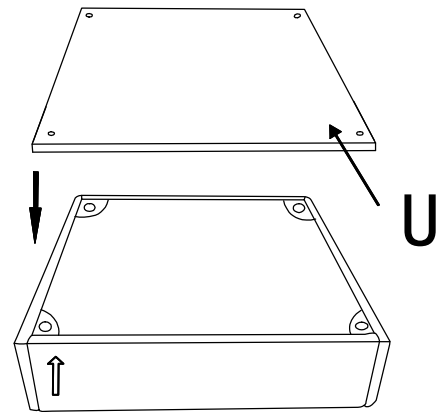

STEP15

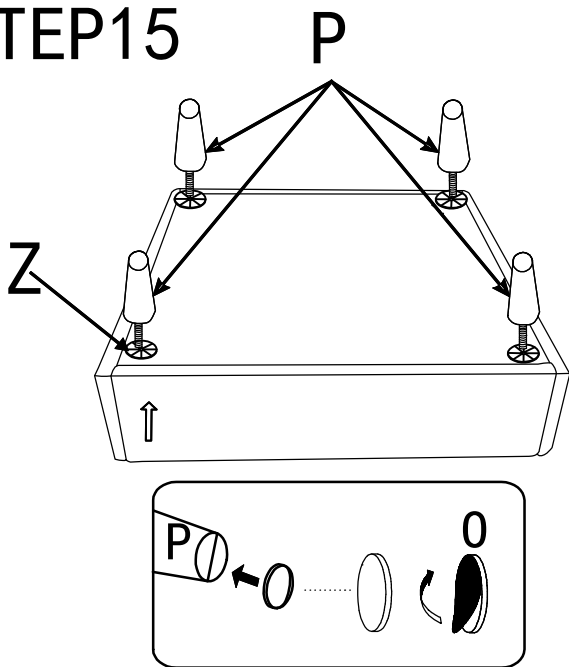

STEP16

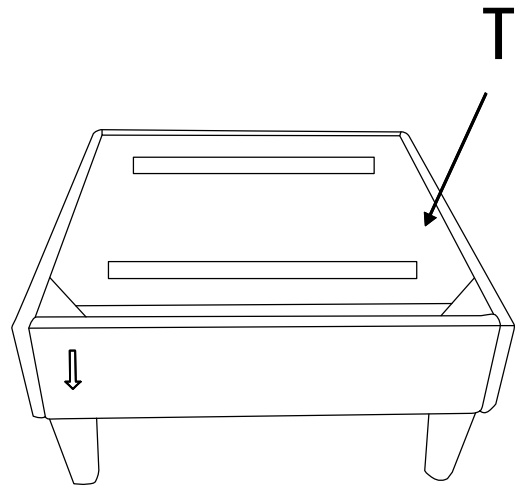

STEP17

