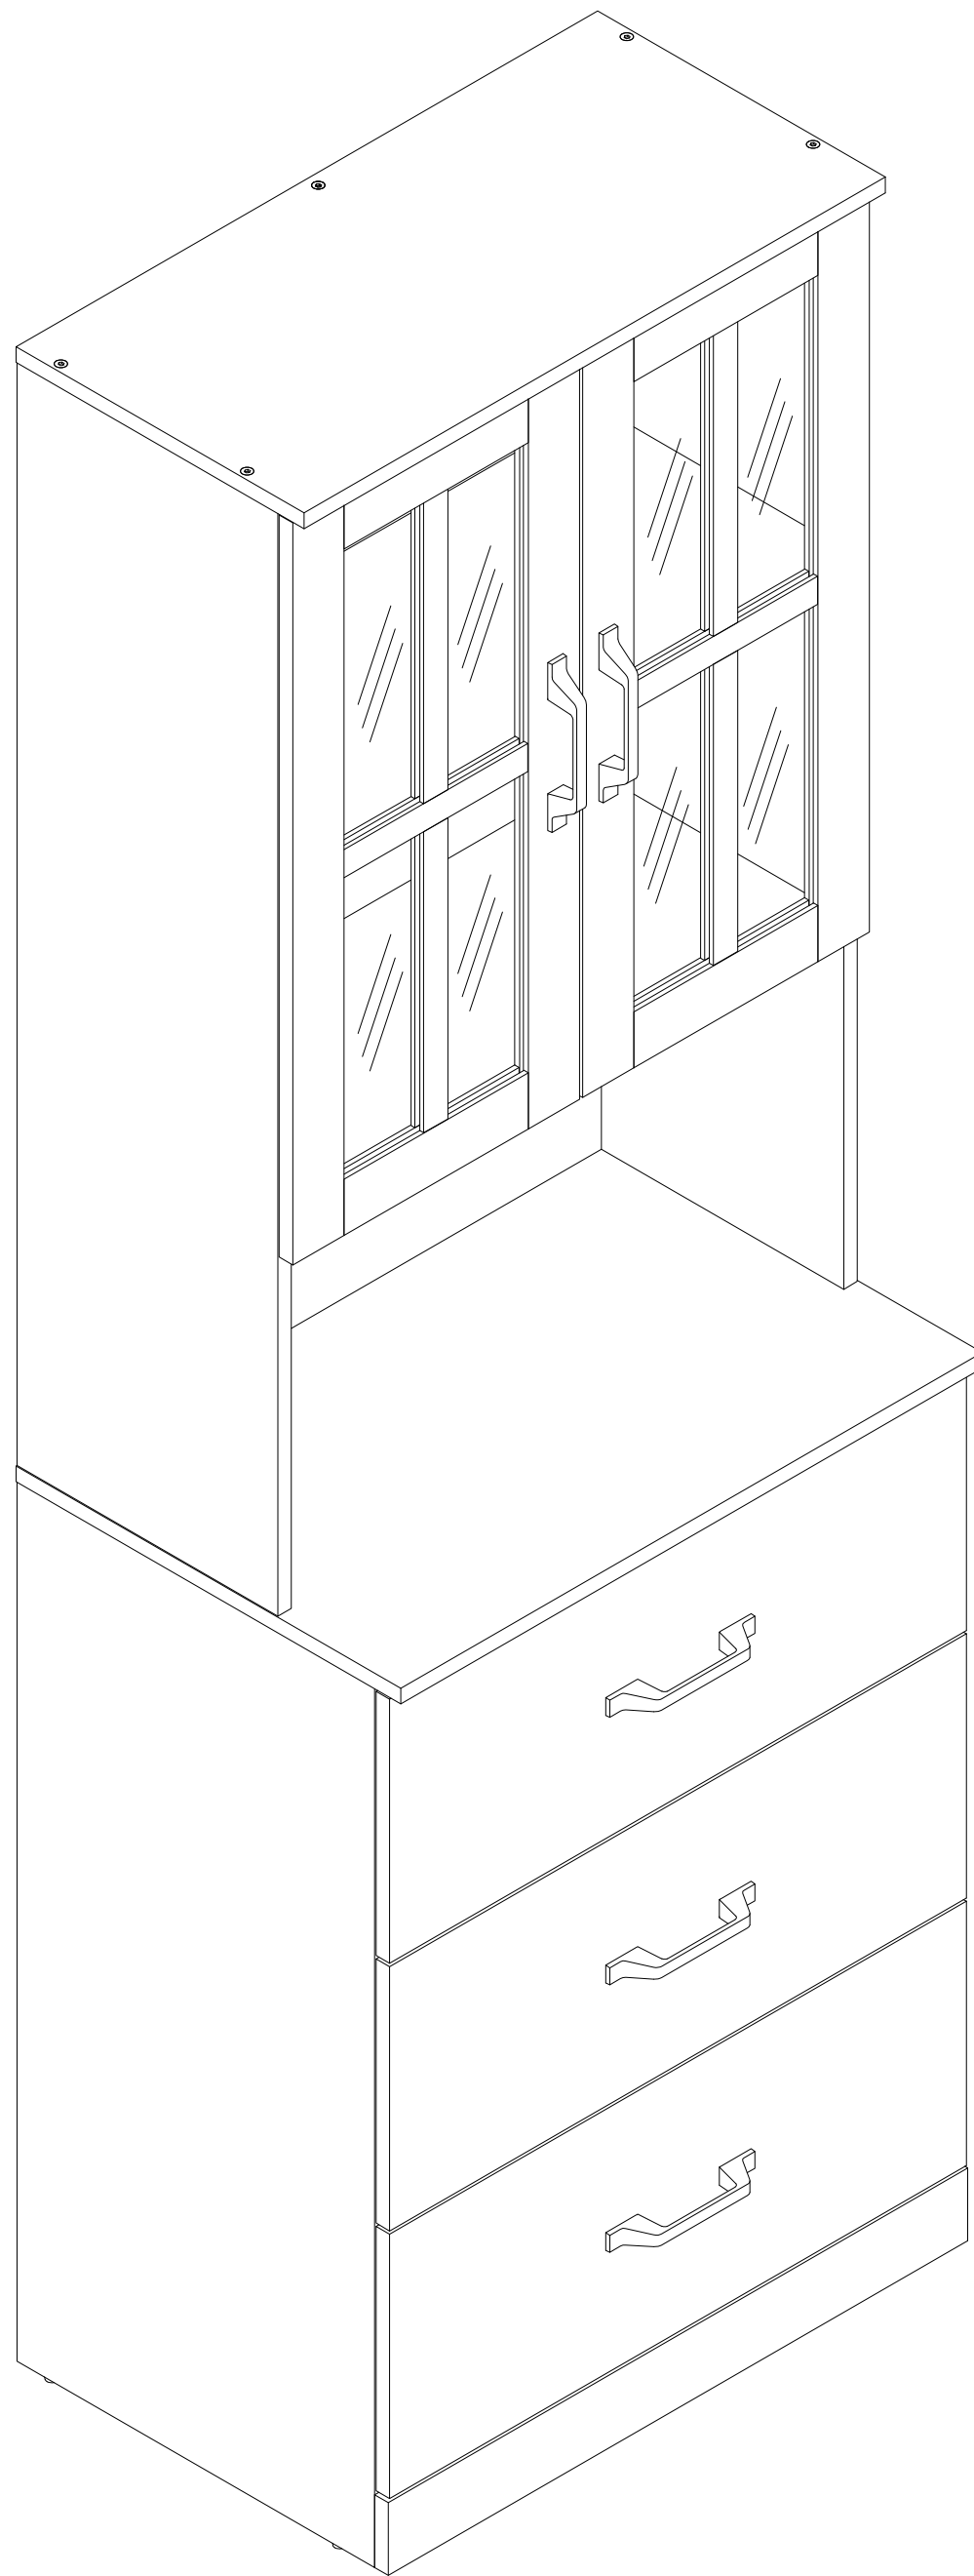




STORAGE CABINET

User Manual

INTRODUCTION

Thank you for choosing the Storage Cabinet. Please read this user manual carefully and keep it for future reference. If you need any assistance, please contact us by email with your order number and details.

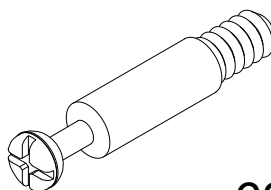
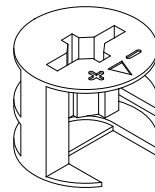
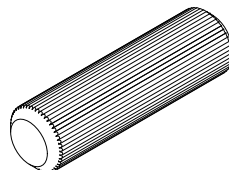
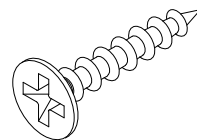
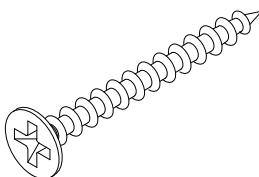


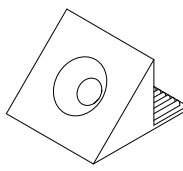
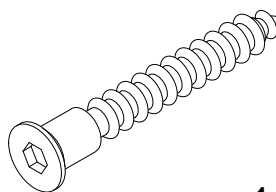
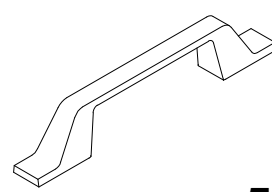
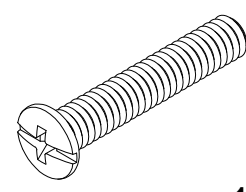
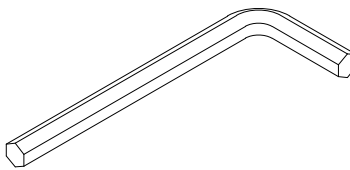
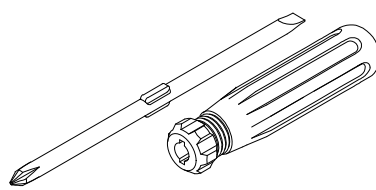
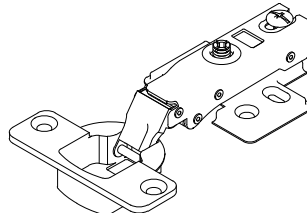
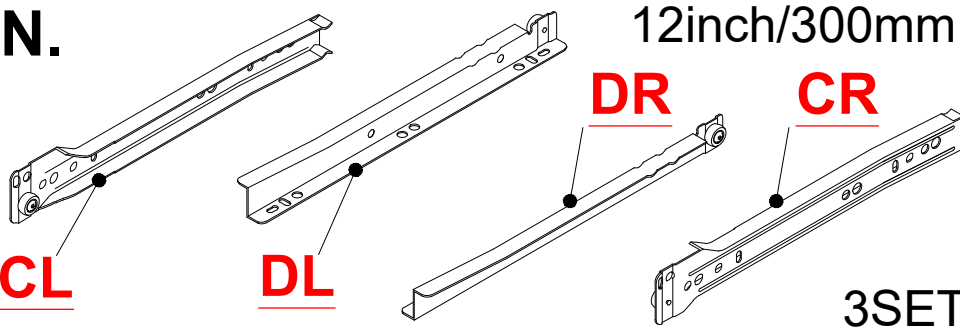
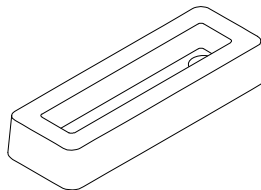


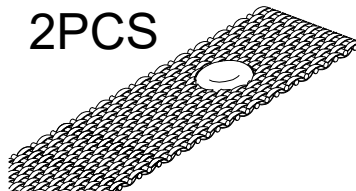
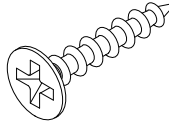
PACKAGE CONTENTS


- ☐ 1 x Storage Cabinet
- ☐ 1 x Pack of Accessories
- ☐ 1 x User Manual









PRODUCT CARE

















- ☐ Please follow the instruction to assemble this item correctly.
- ☐ Don't make the screws be too loose or too tight.
- ☐ Please put the screws into the holes' position just as shown in the arrows of the image, and then clockwise rotate 90° or 180°
- ☐ More product parts, it is recommended that two people install
- ☐ The fittings pack contains small accessories that should be kept away from small children.

HARDWARE SUPPLIED

A. 6.5x35mm  62PCS	B. 15x9.8mm  62PCS	C. Ø6x30mm  22PCS	D. M3.5x14mm  70PCS	E. M4x35mm  19PCS	
F. Ø13.8*18*4mm  4PCS	G. G.1  G.2  20PCS	H. #9.5xM5x46mm  10PCS	I. 142*10*27mm  5PCS	J. M4*16mm  10PCS	
K. Φ4*57*21mm  1PC	L. 140mm  1PC	M.  4PCS	N.  12inch/300mm CL DL DR CR 3SET		
O. 37*13*7mm  1PC	P.1  Ø6x35mm. 2PCS	P.2  Ø8xM4x35mm. 2PCS	Q.1 140*19mm. 2PCS 	Q.2 Ø8xM4x16mm. 2PCS 	Q.3 Ø16xØ6x1mm. 4PCS 

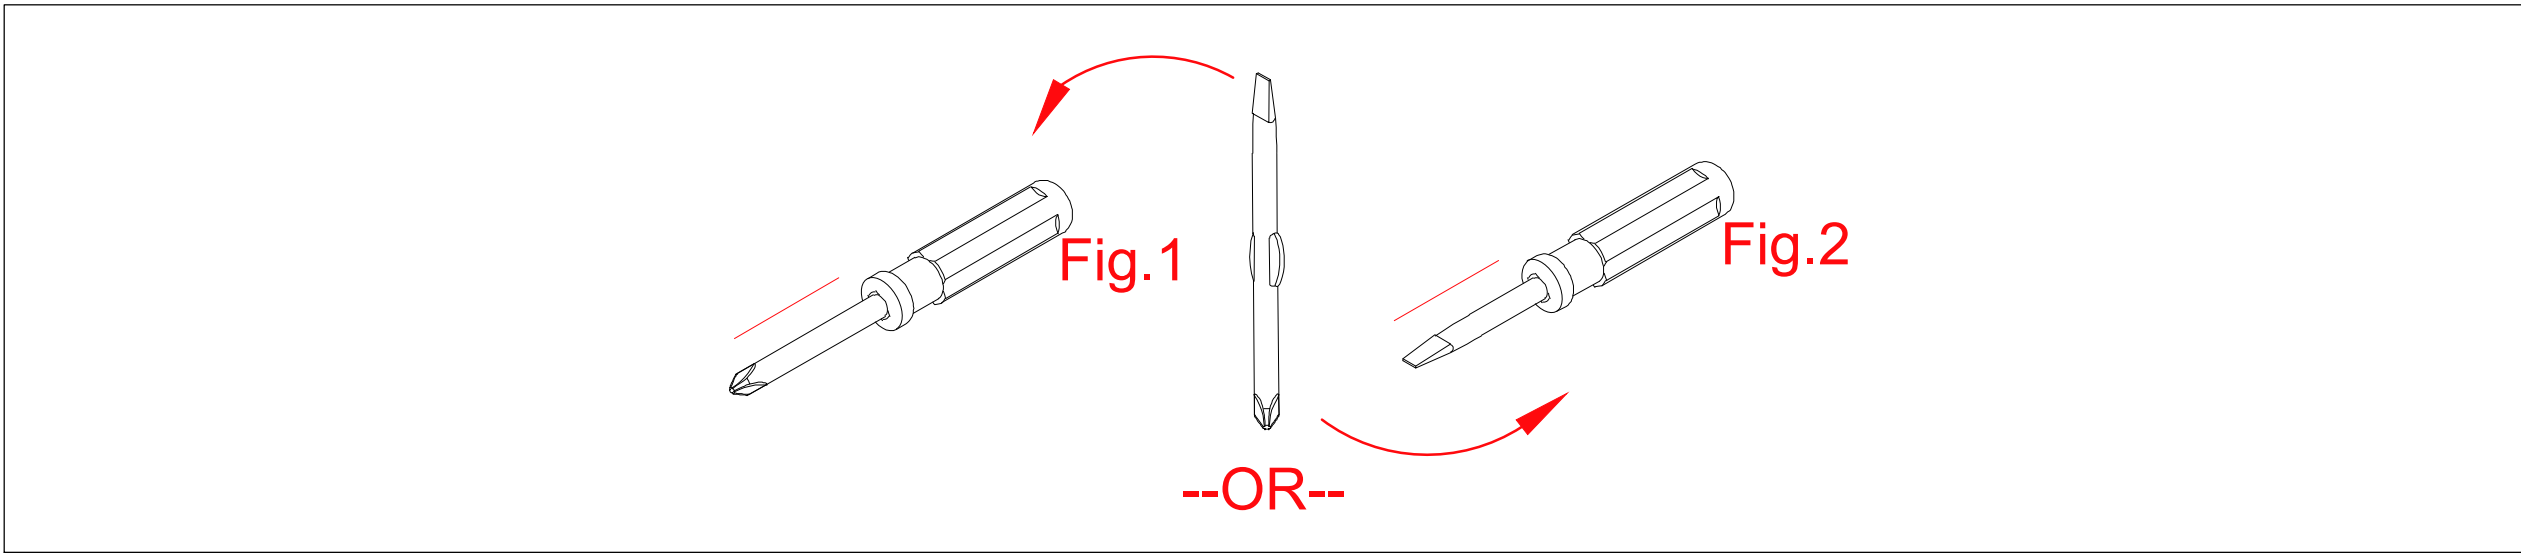


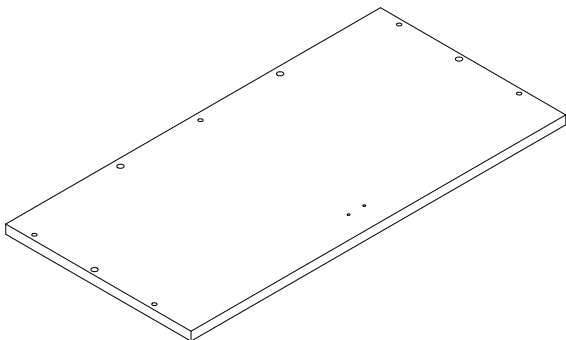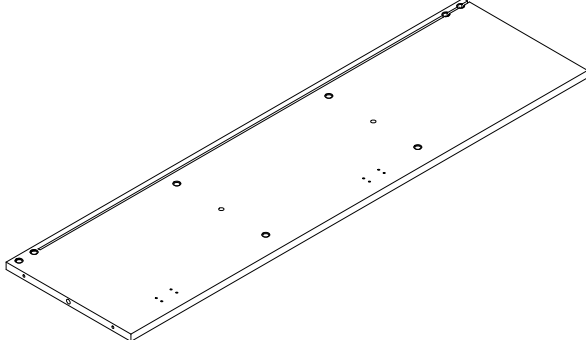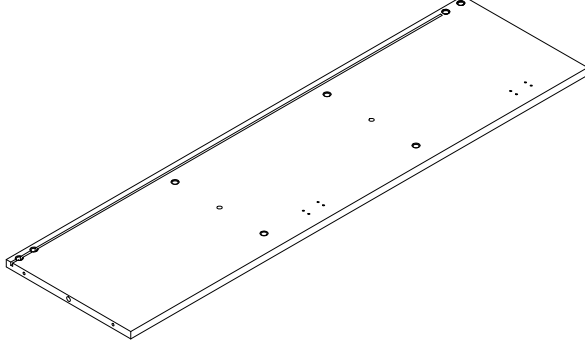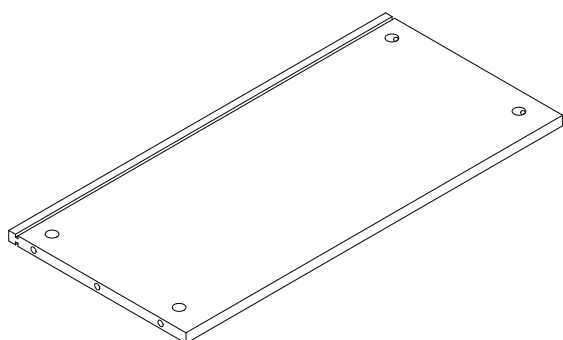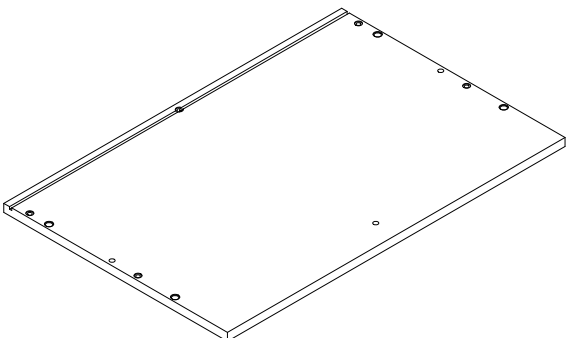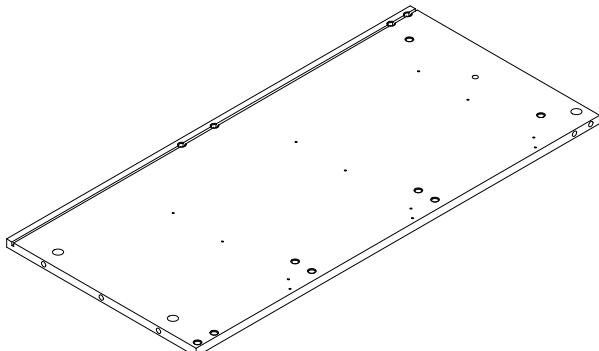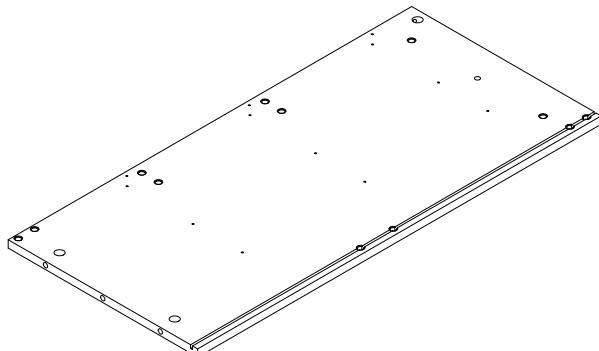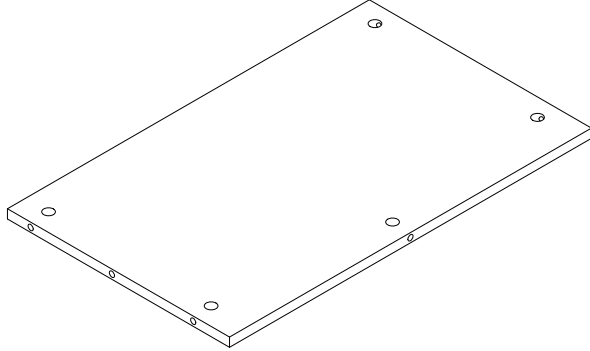PARTS LIST			
Unit: (mm)			
1 600*297  1PC	2 986*269  1PC	3 986*269  1PC	4 568*268  2PCS
5 600*397  1PC	6 786*369  1PC	7 786*369  1PC	8 568*350  1PC

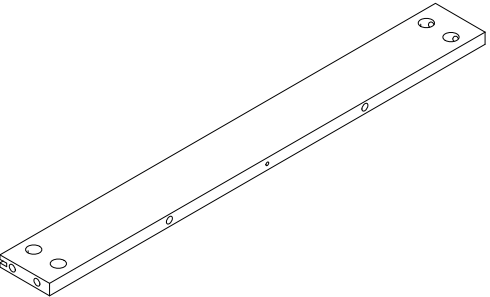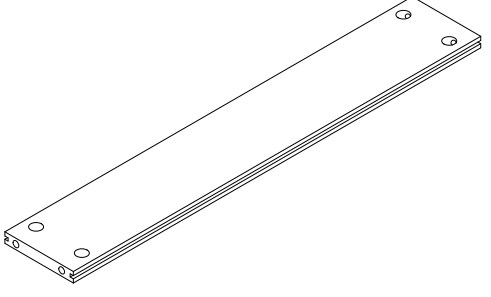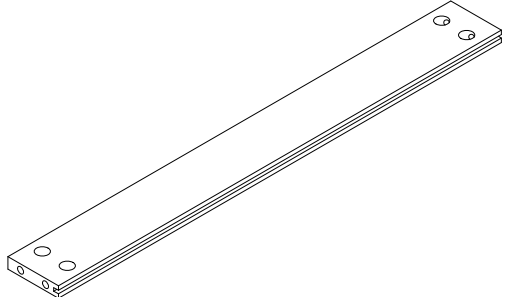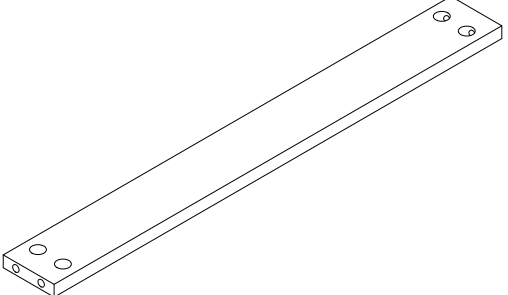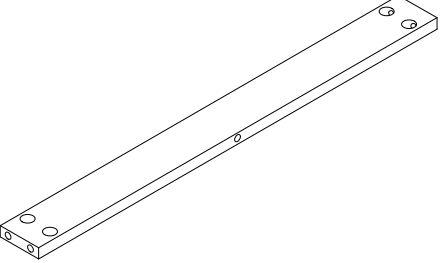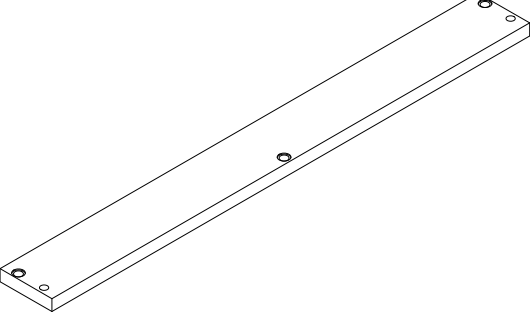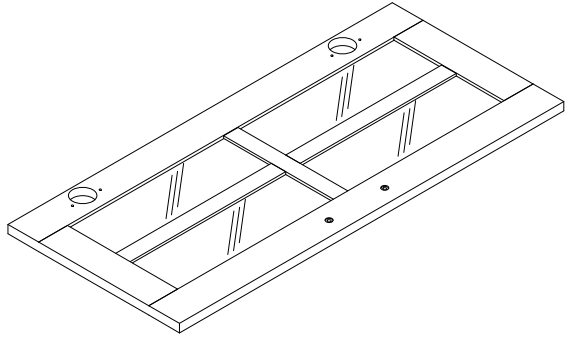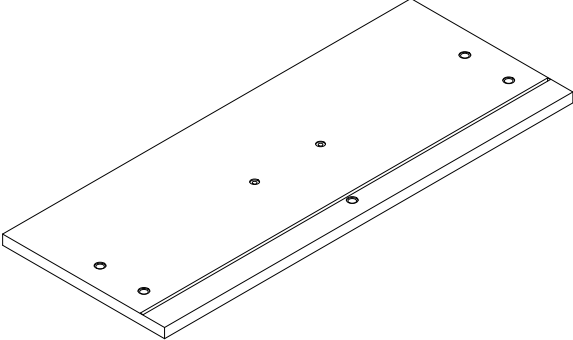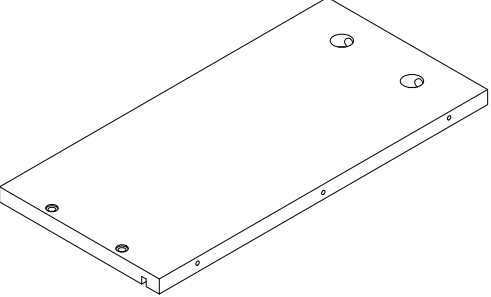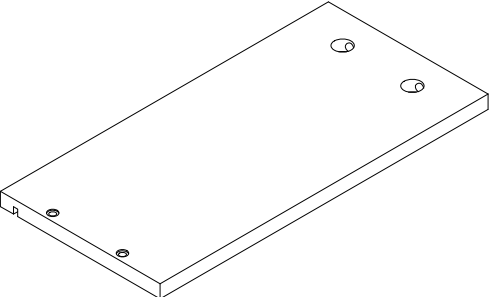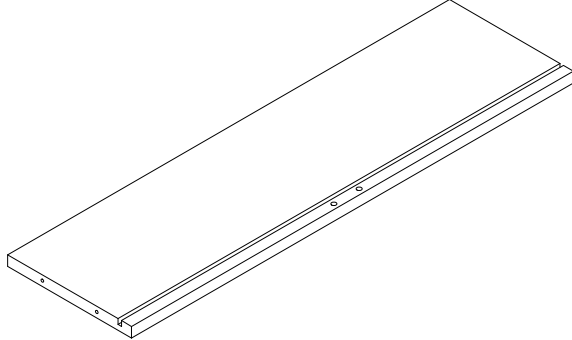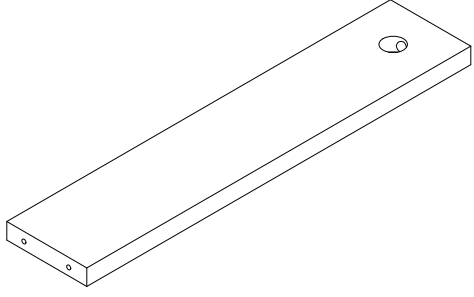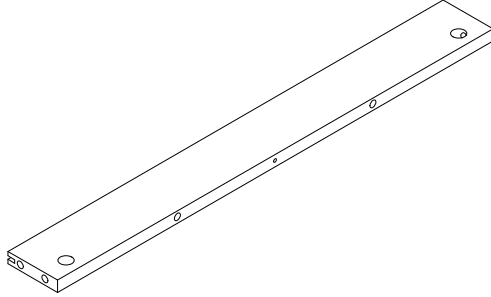
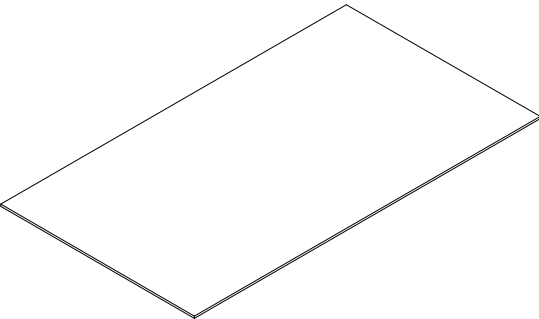
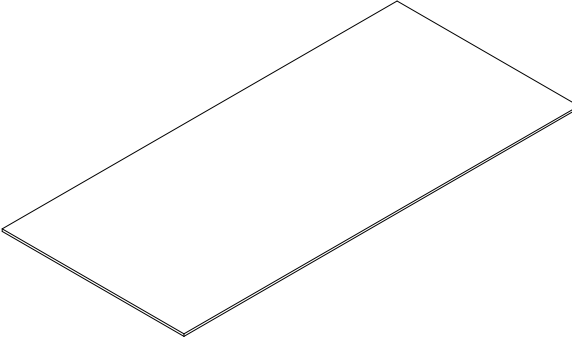
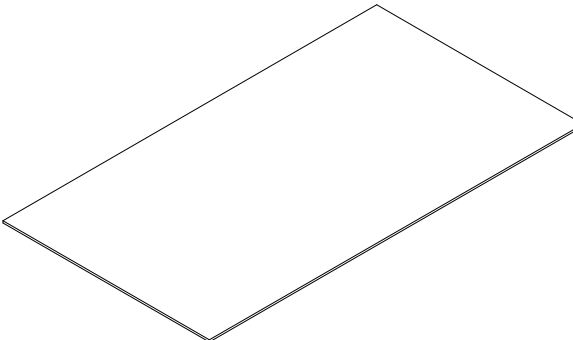
9 568*65  1PC	10 568*96  1PC	11 568*65  1PC	12 568*65  2PCS
13 568*55  1PC	14 598*65  1PC	15 663*296.5  2PCS	16 595*236  3PCS
17 300*146  3PCS	18 300*146  3PCS	19 518.5*146  3PCS	20 286*50  3PCS
21 568*65  1PC	22 528*296  3PCS	23 578*267  2PCS	24 578*320  3PCS



PANEL LAYOUT


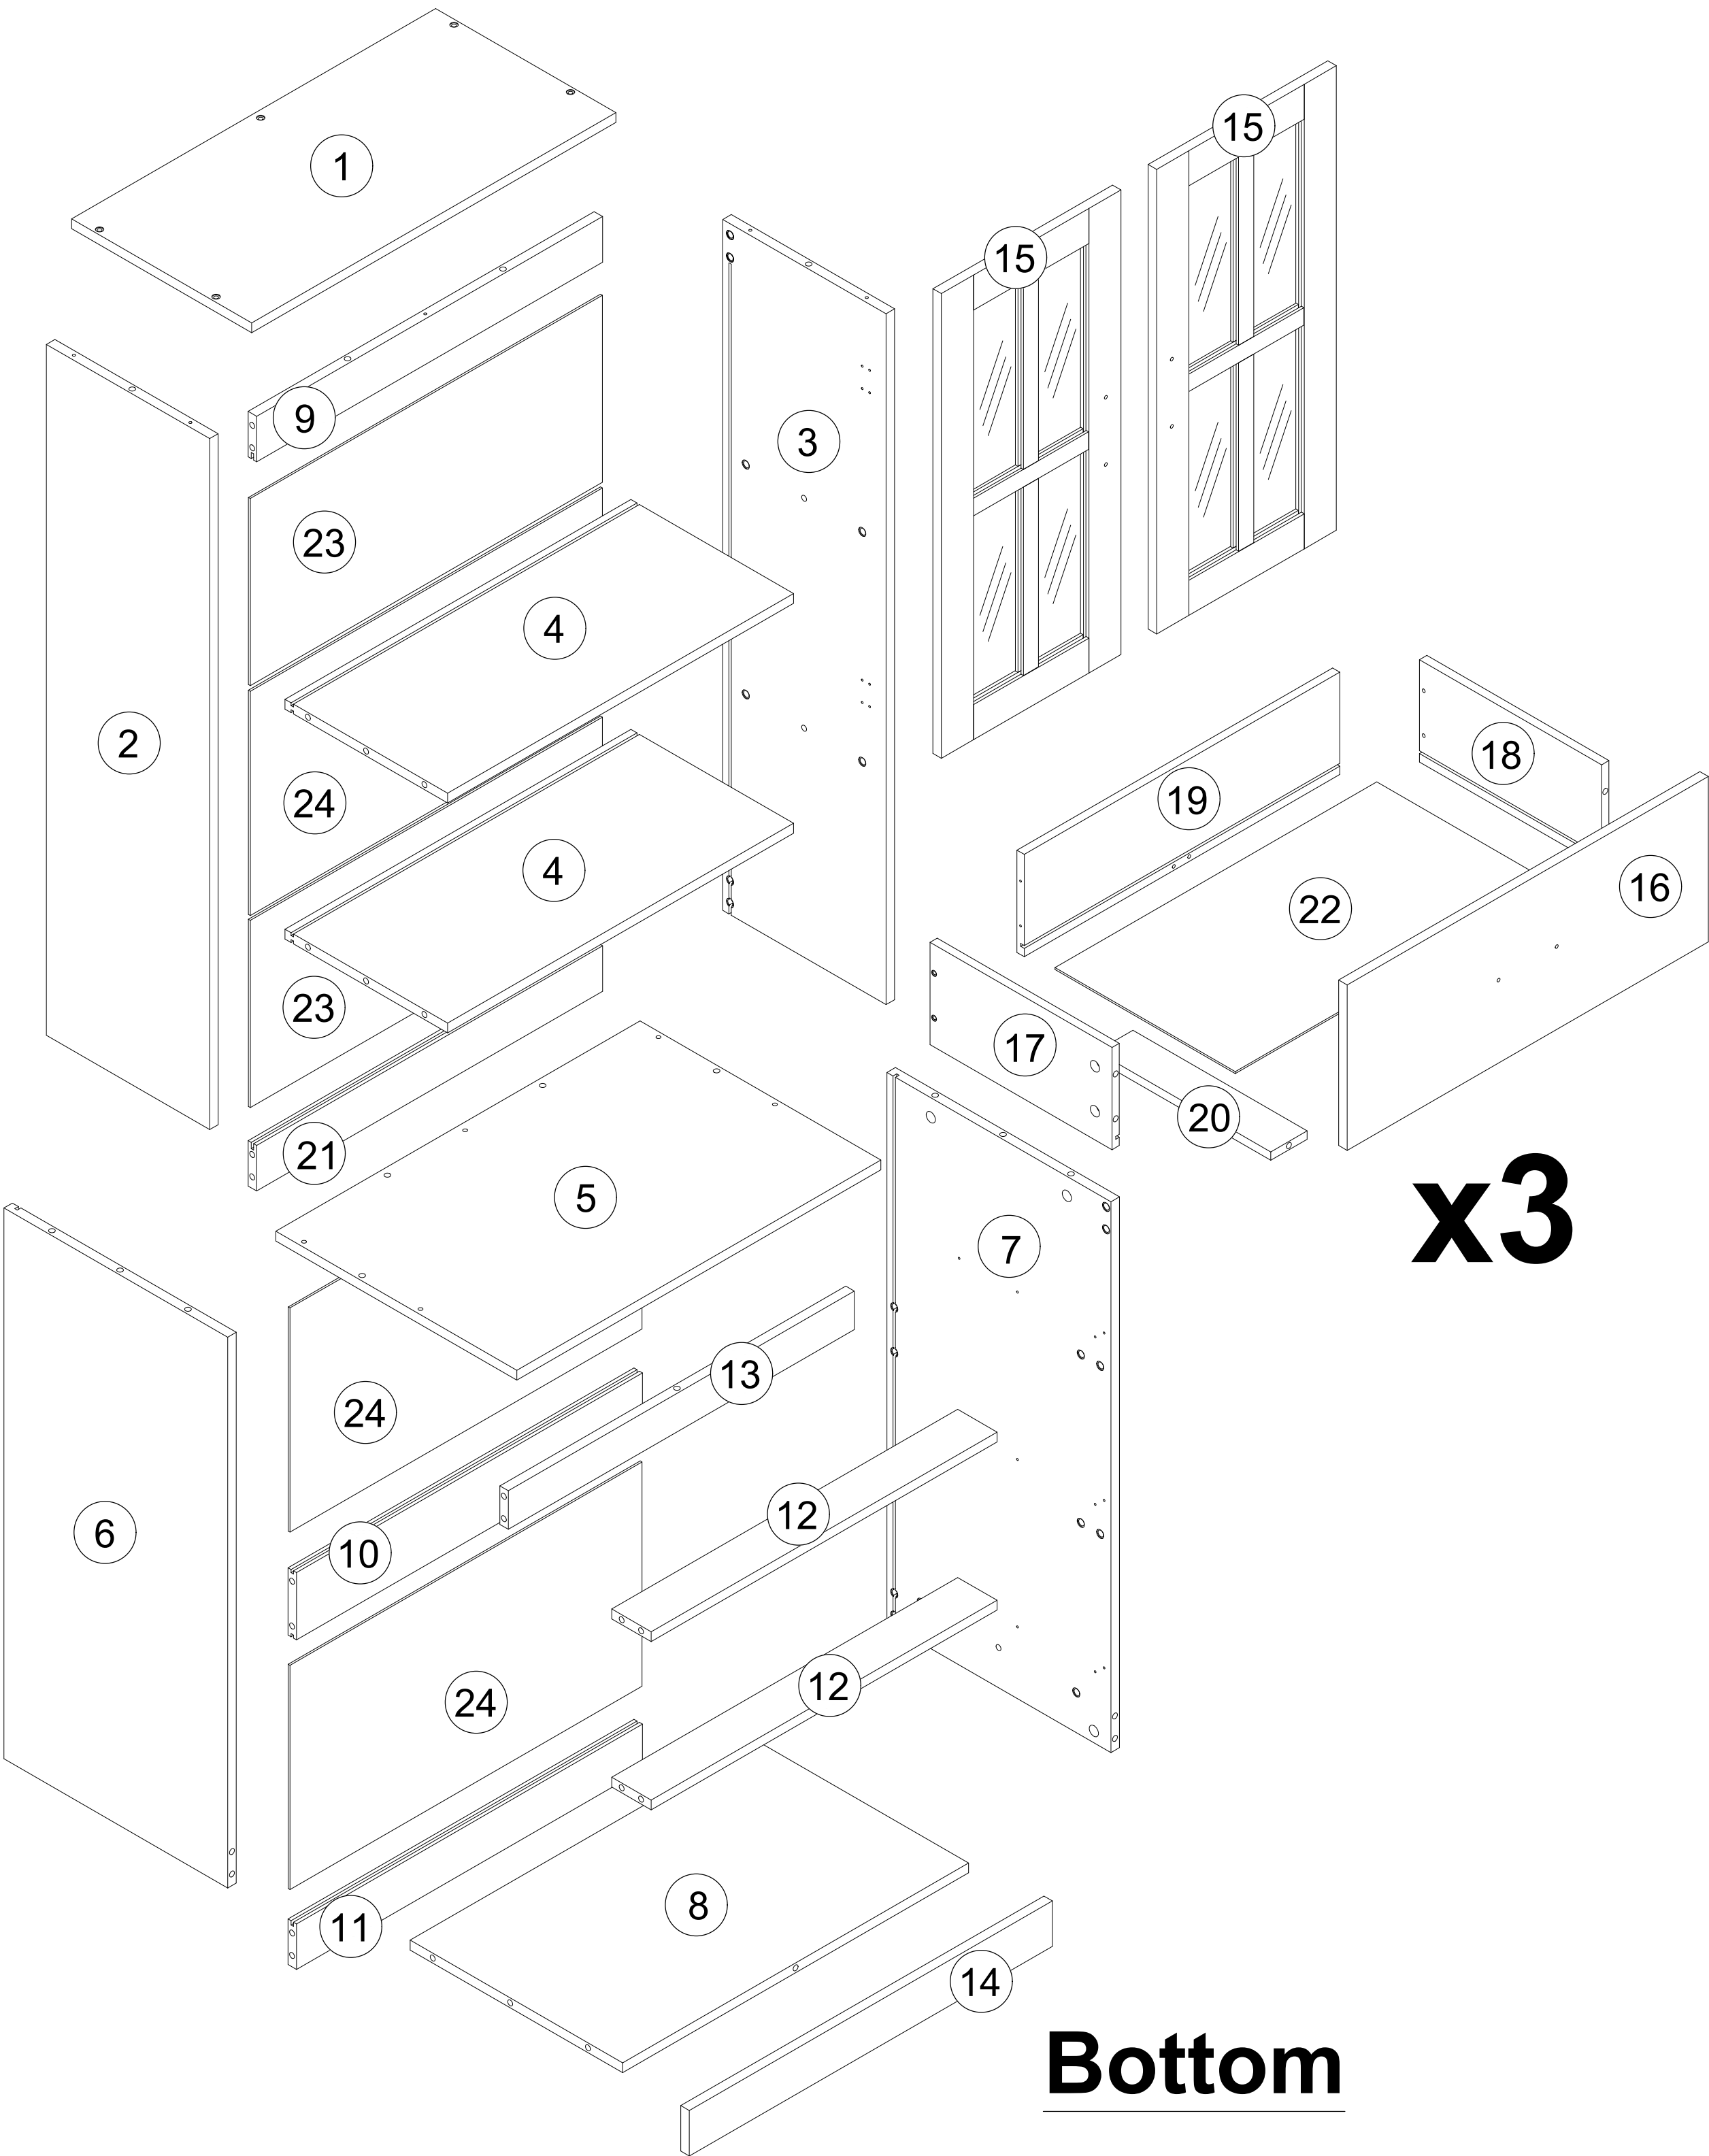
Top



Bottom

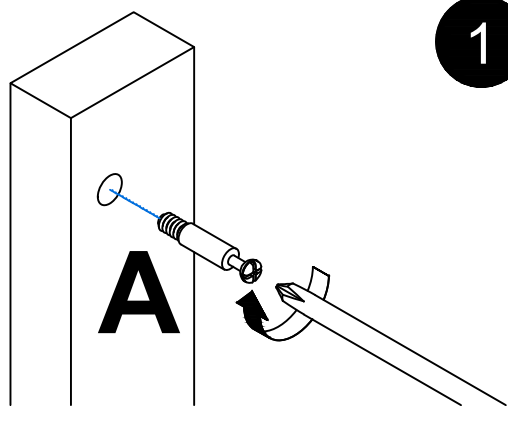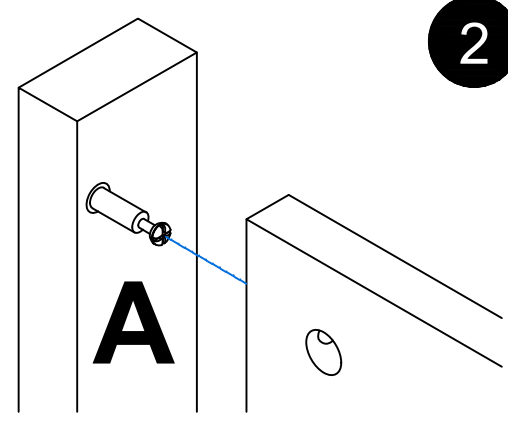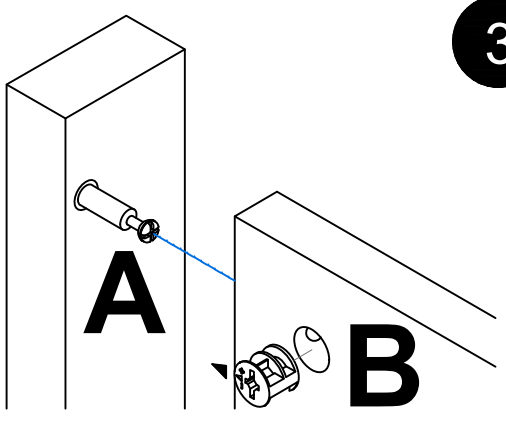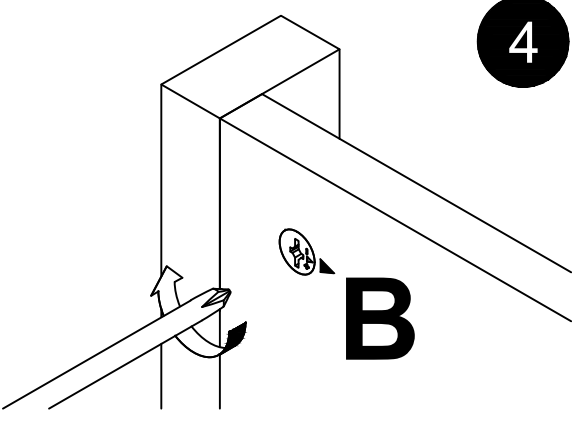
HOW TO  Cam lock Cam bolt	1  A 1. Screw Cam Bolt into panel	2  A 2. Insert Cam Bolt into bolt hole of joining panel.	3  A B 3. Insert Cam Lock with arrow facing bolt.	4  B 4. Gently turn Cam Lock 180° clockwise to lock into position.
---	--	--	---	---

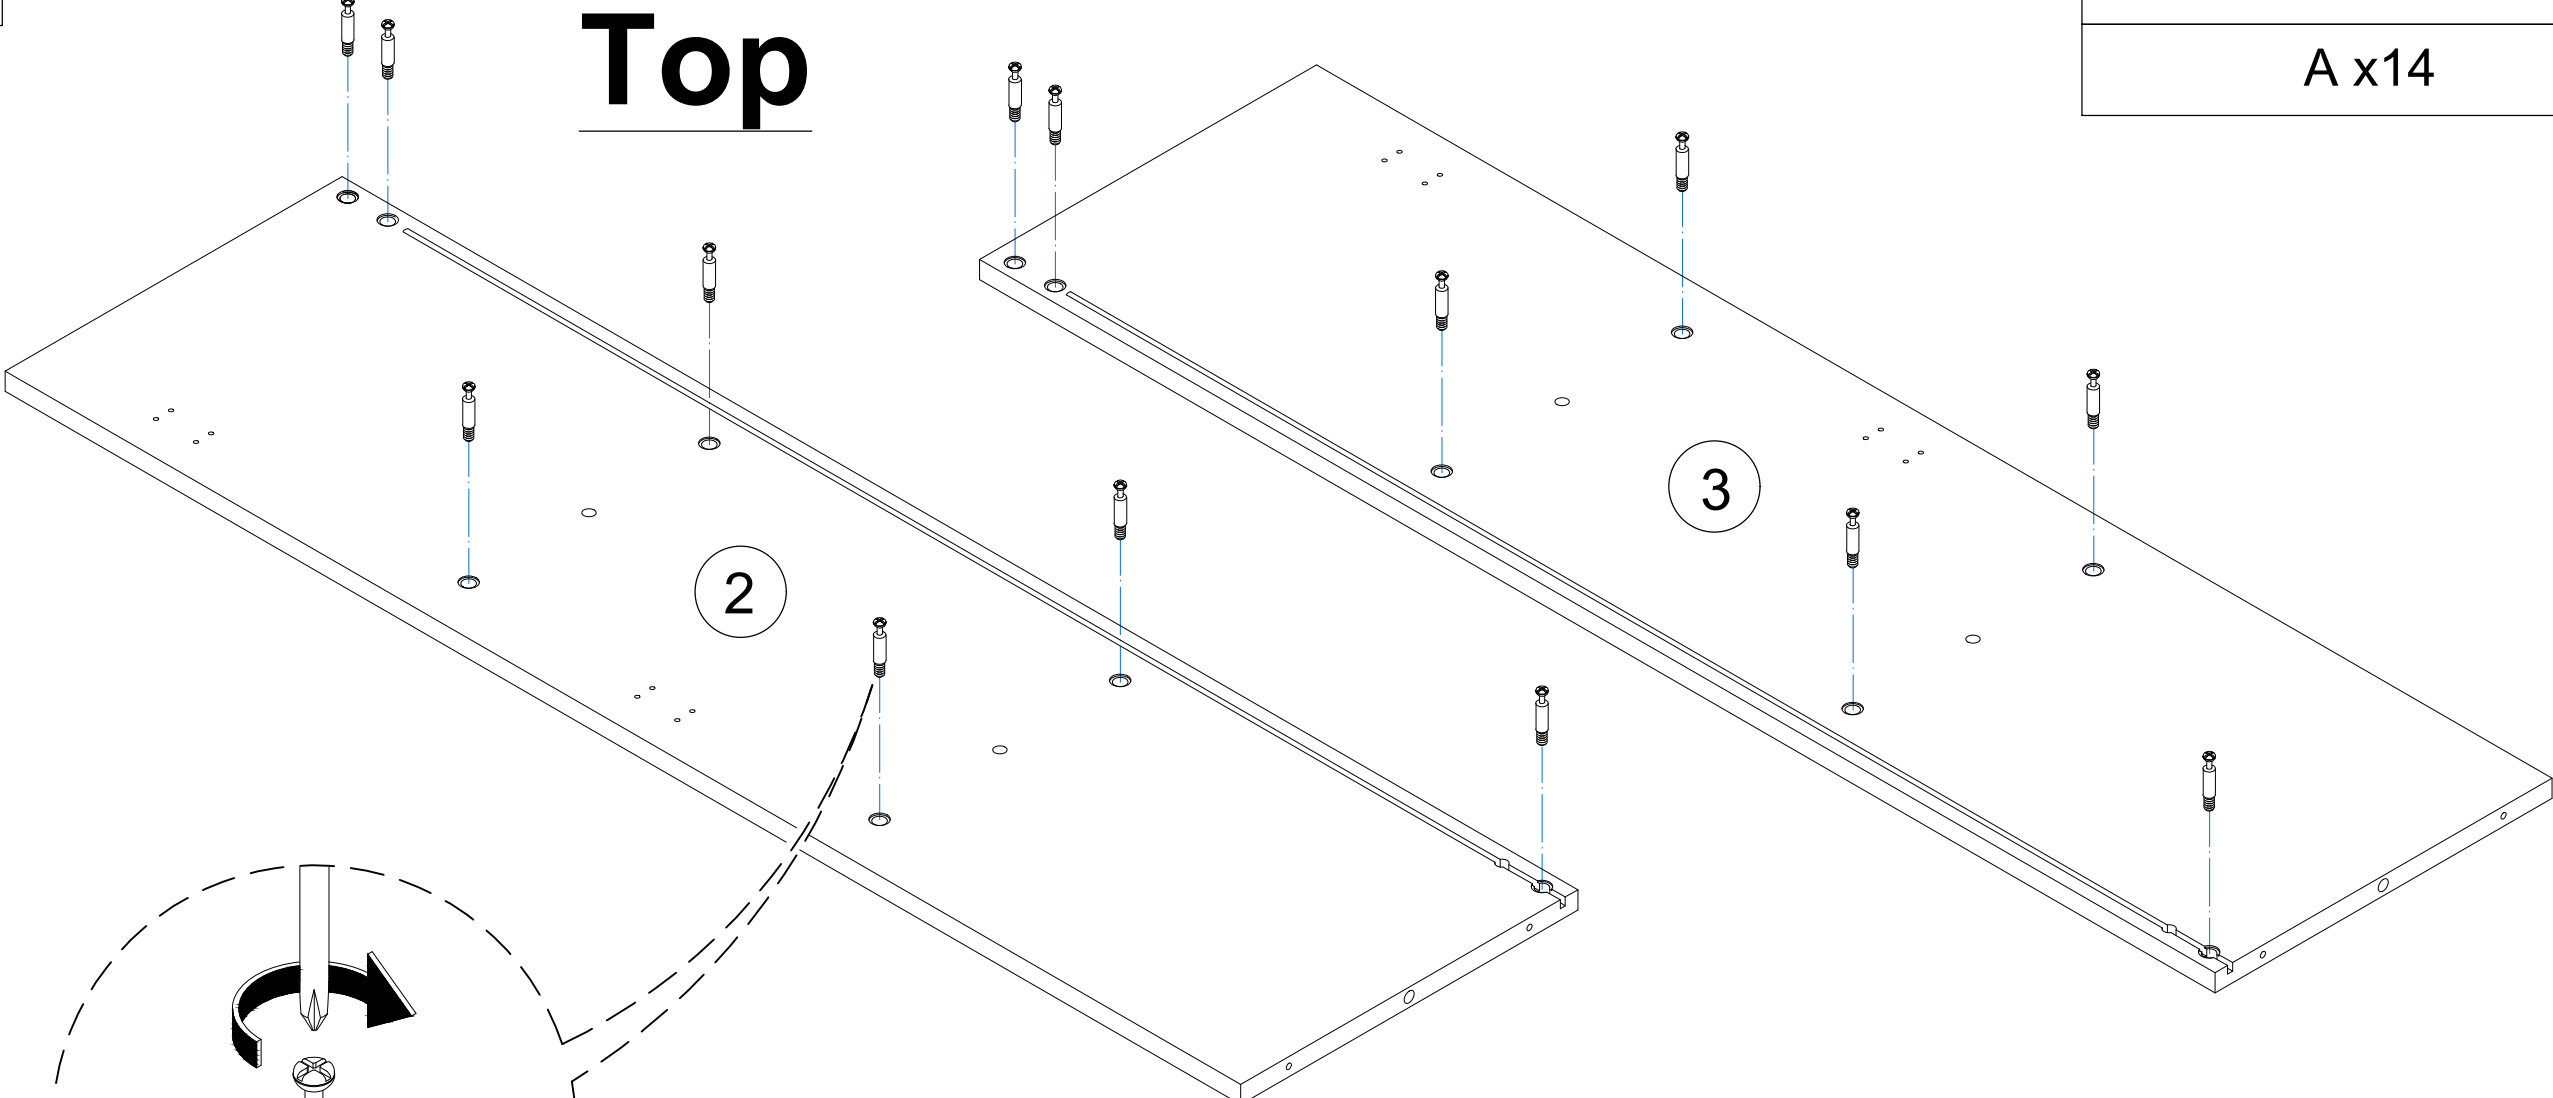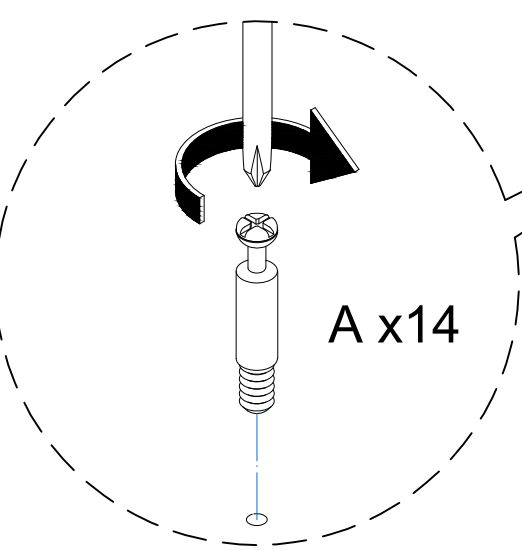1	Top  Bottom  A x14		YOU WILL NEED A x14
---	--	--	---

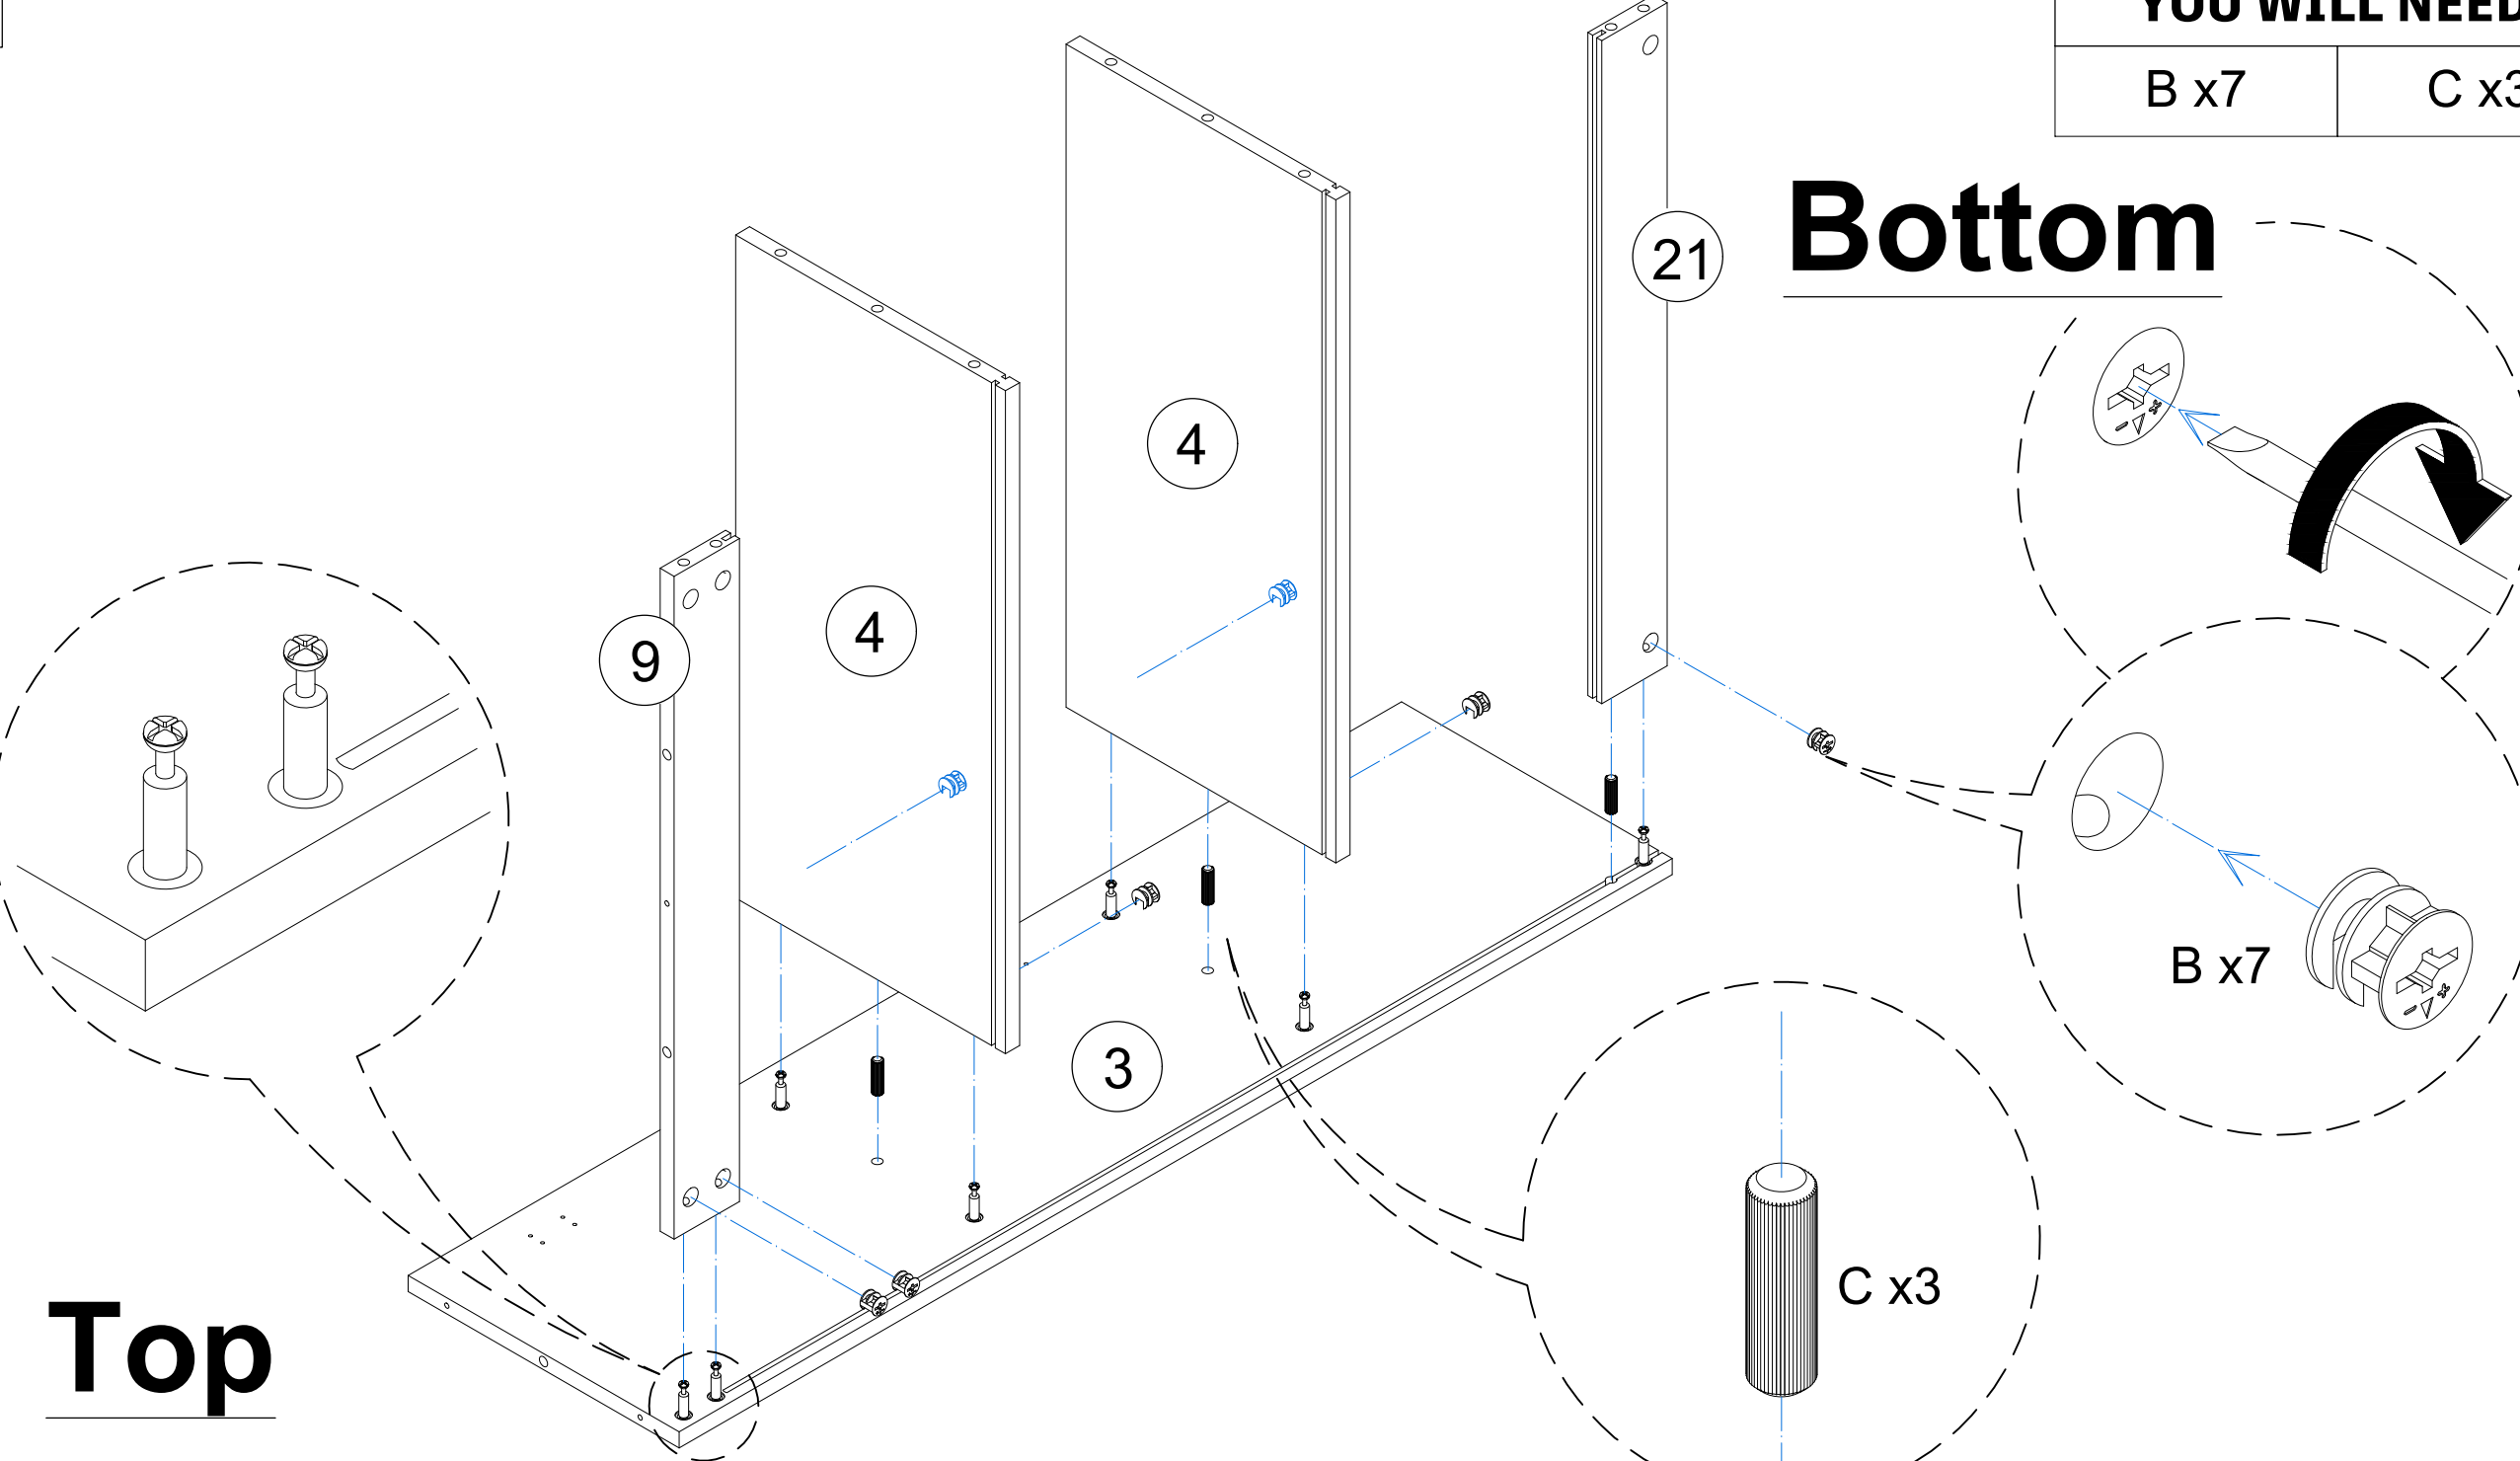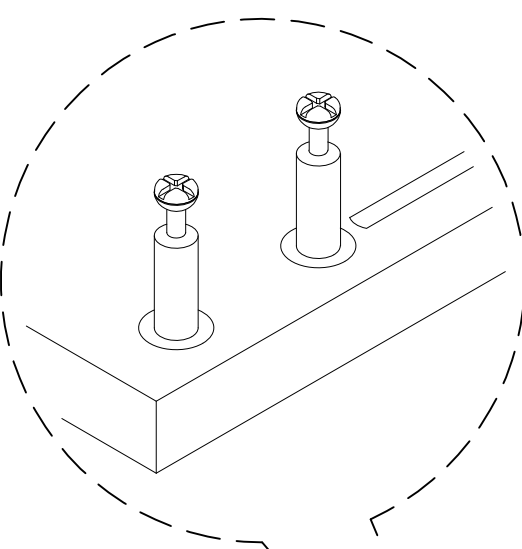2	Bottom  Top  B x7 C x3		YOU WILL NEED B x7 C x3
---	--	--	--


5

YOU WILL NEED	
D x2	O x1

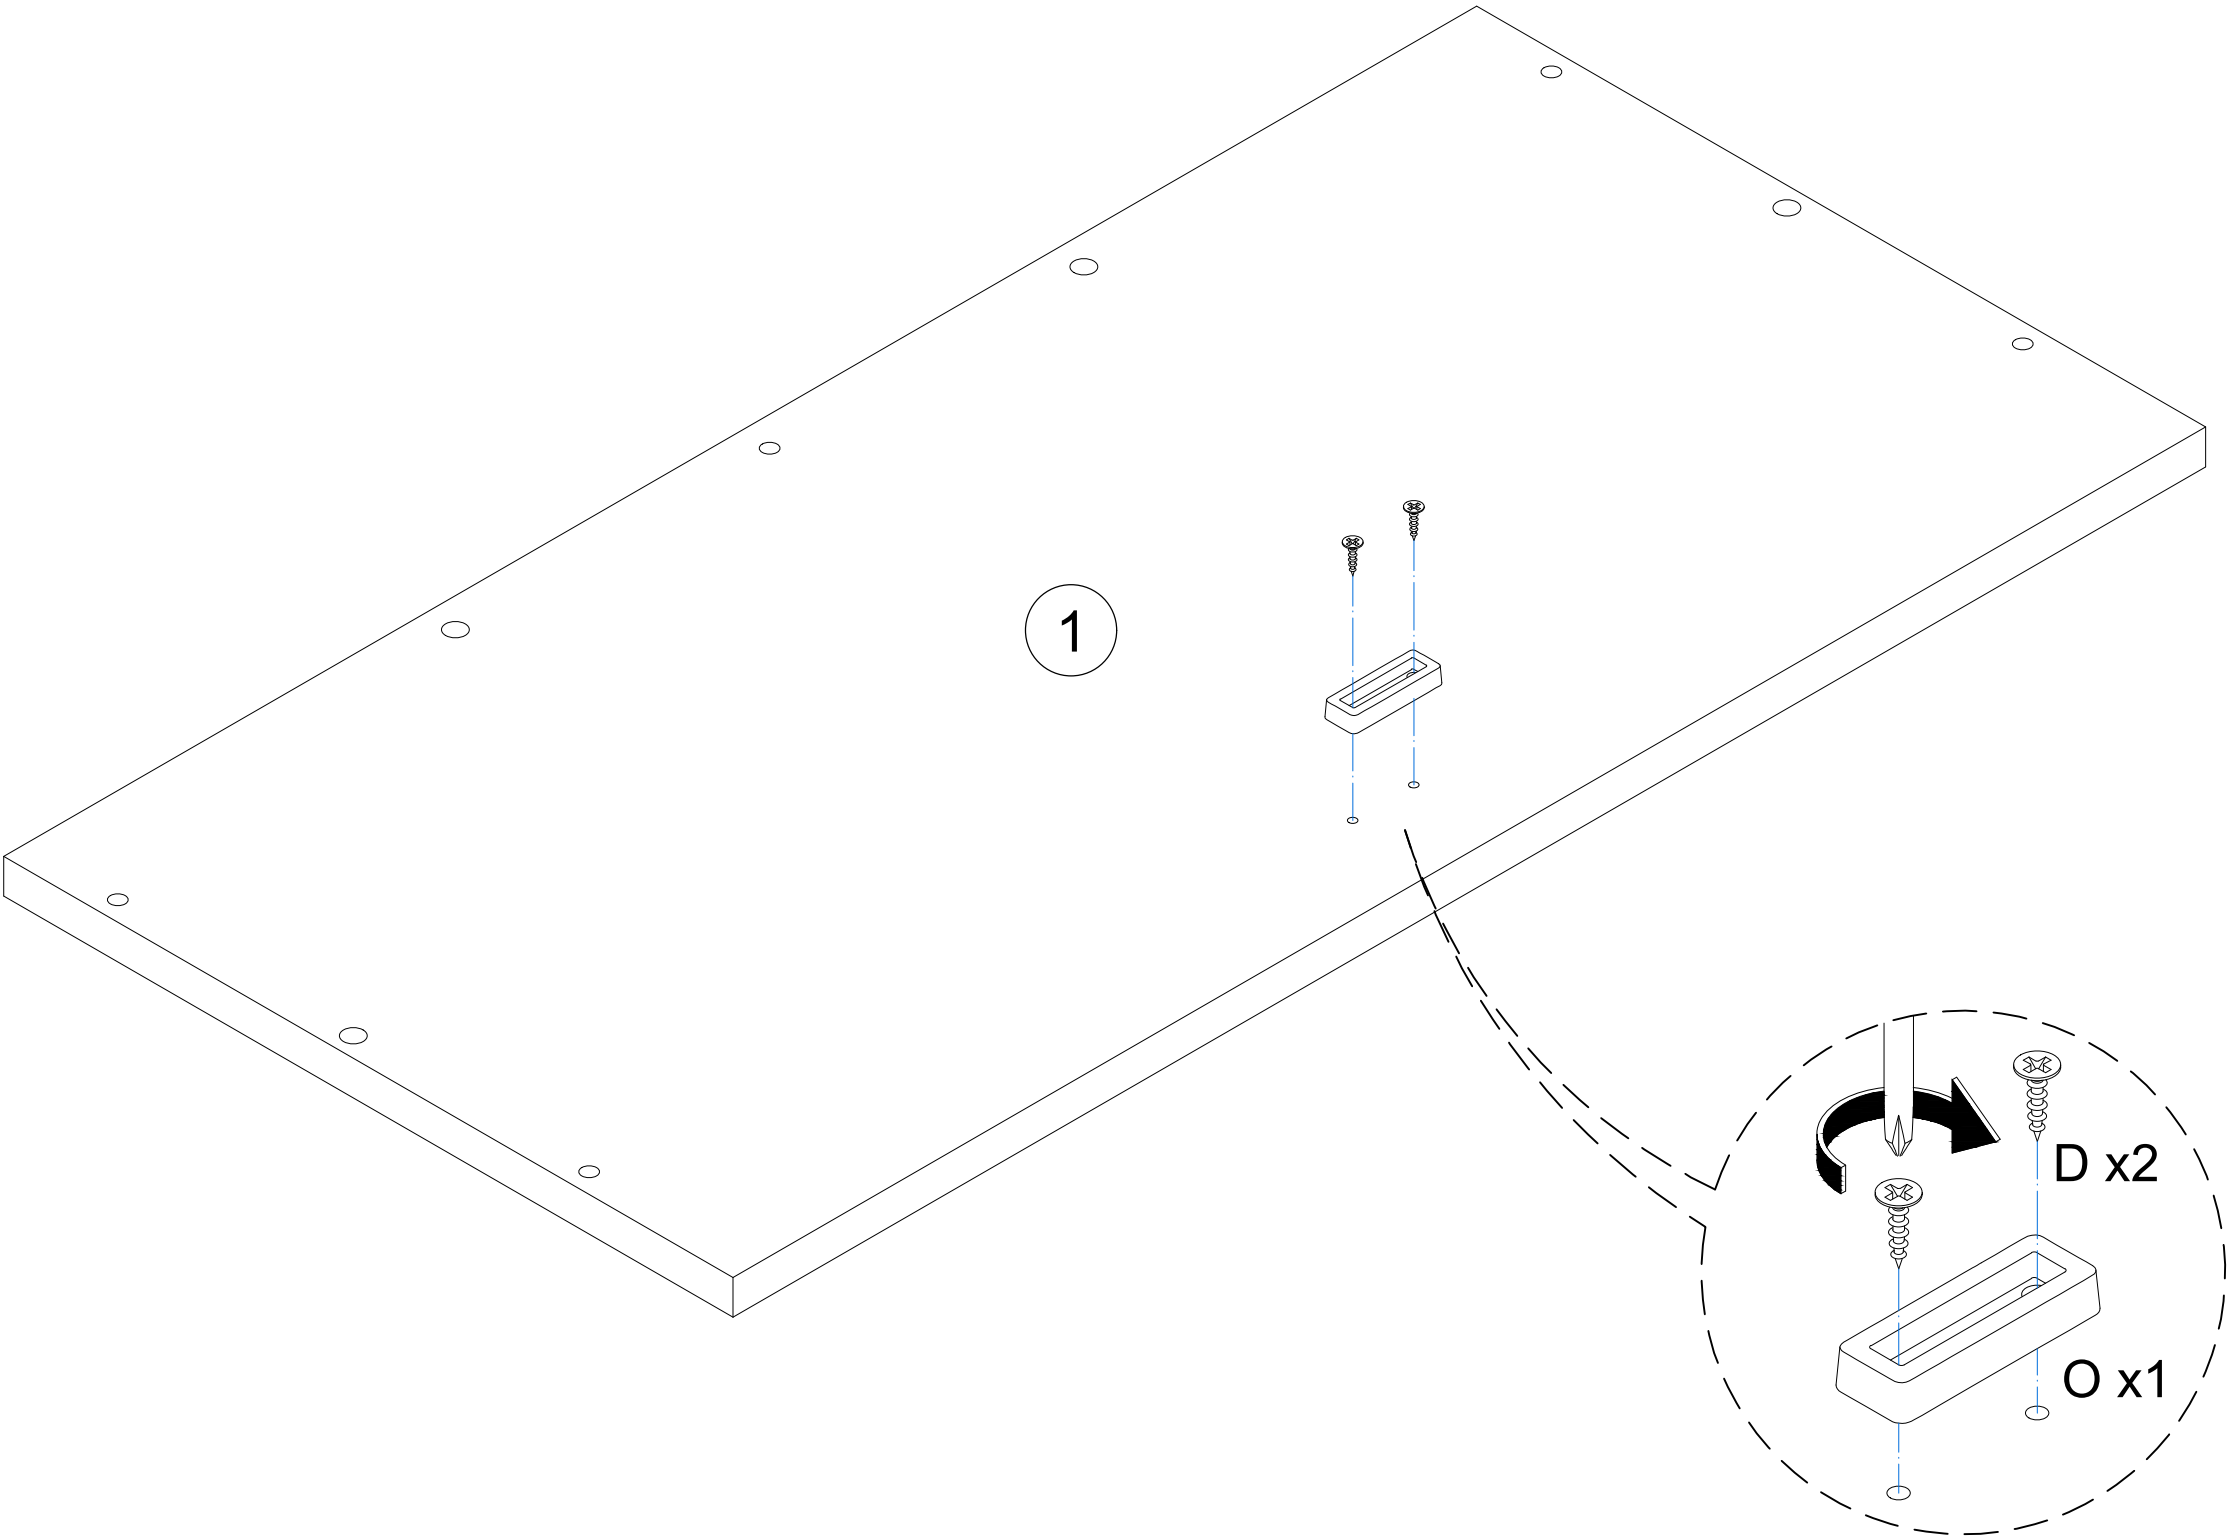

6

YOU WILL NEED	
C x4	H x5

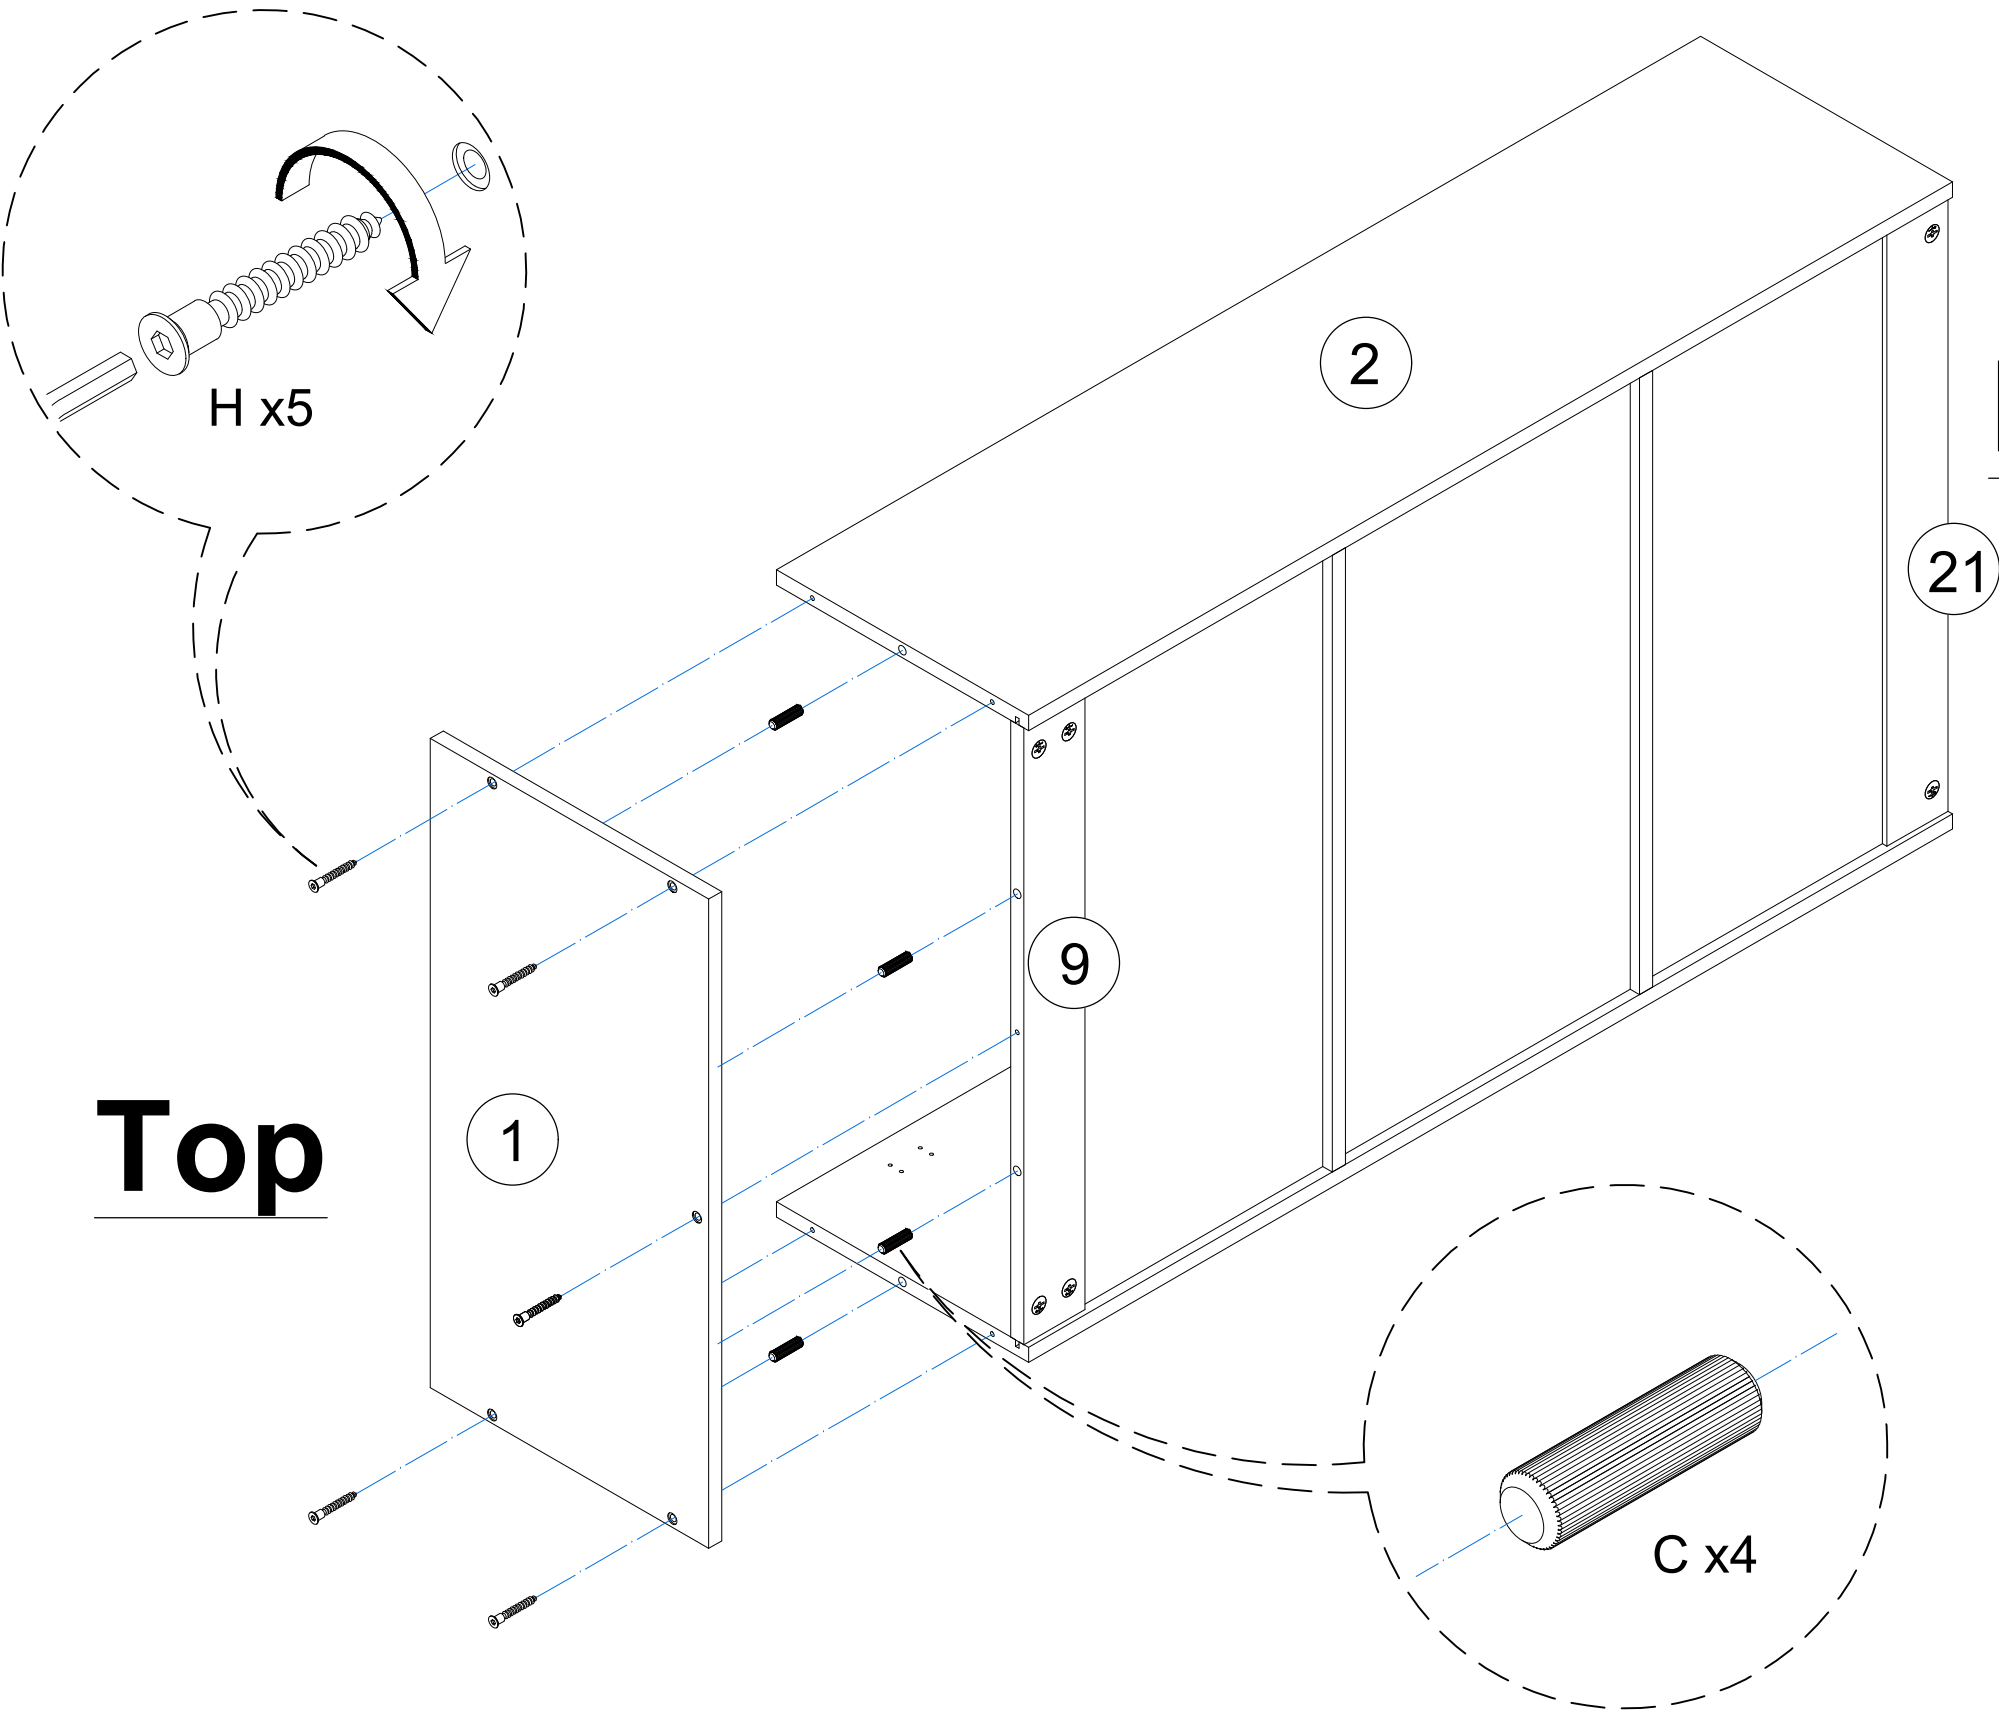

Bottom

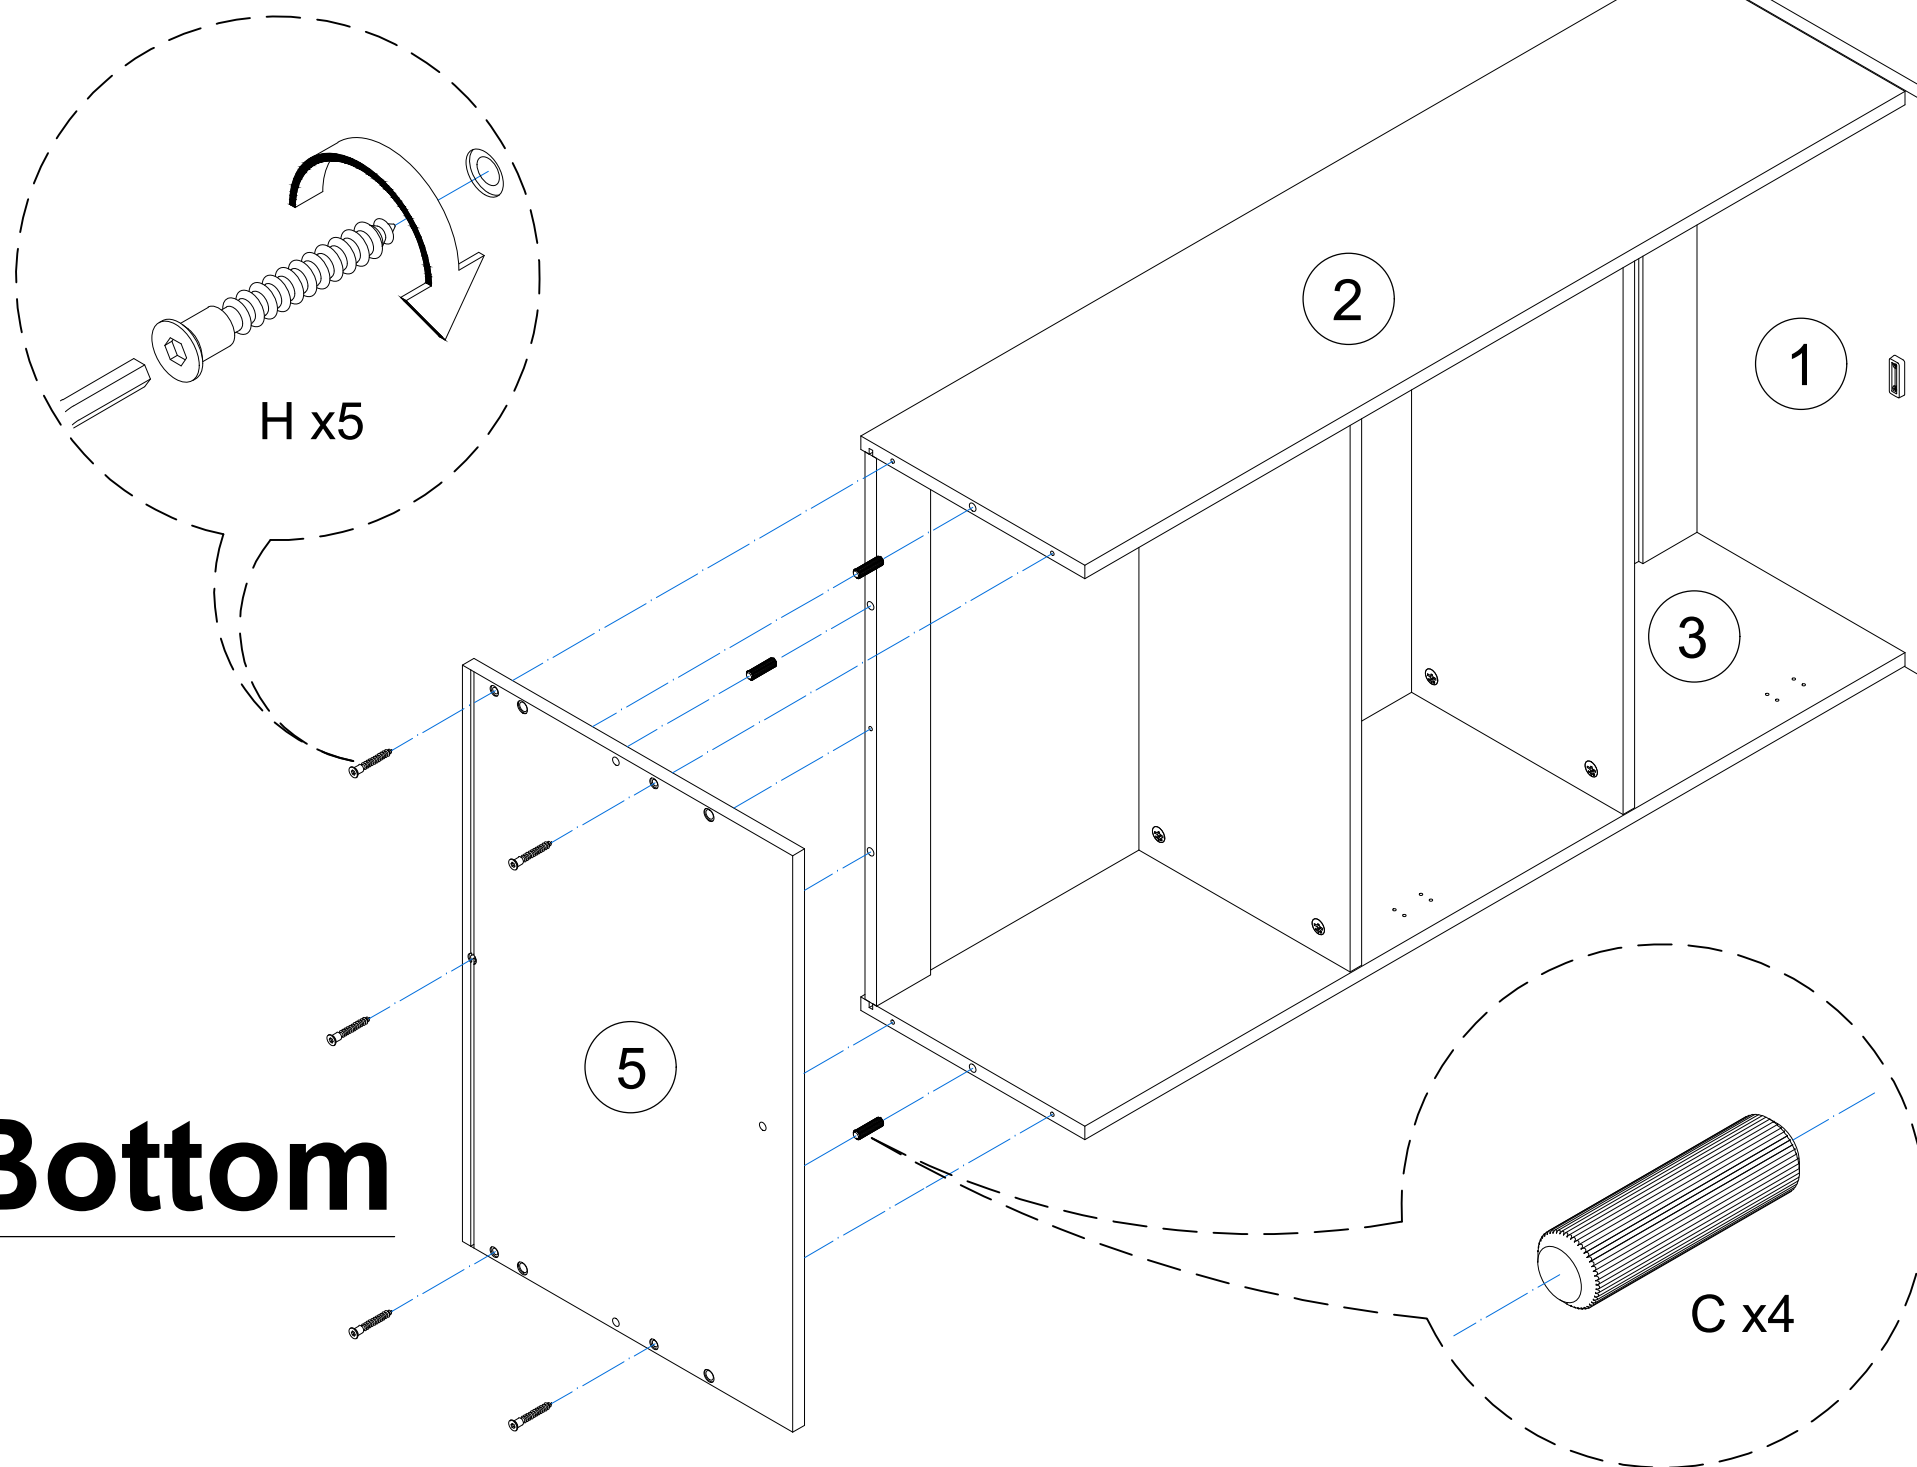

Top

7


YOU WILL NEED

C x4

H x5


Top**Bottom****HOW TO**

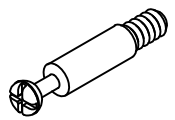Cam lock




Cam bolt

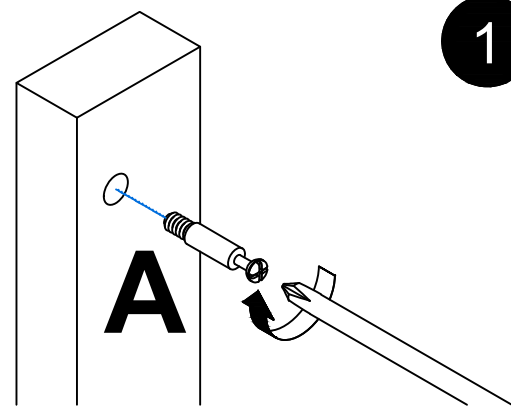1




1. Screw Cam Bolt into panel

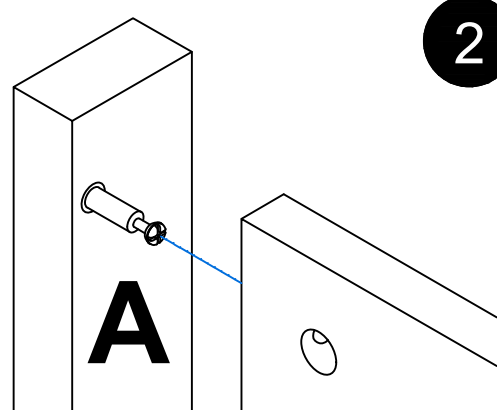2




2. Insert Cam Bolt into bolt hole of joining panel.

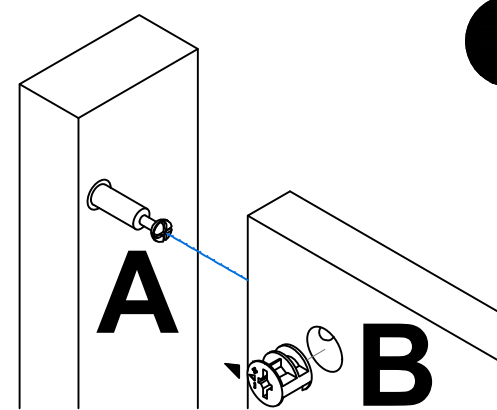3



3. Insert Cam Lock with arrow facing bolt.

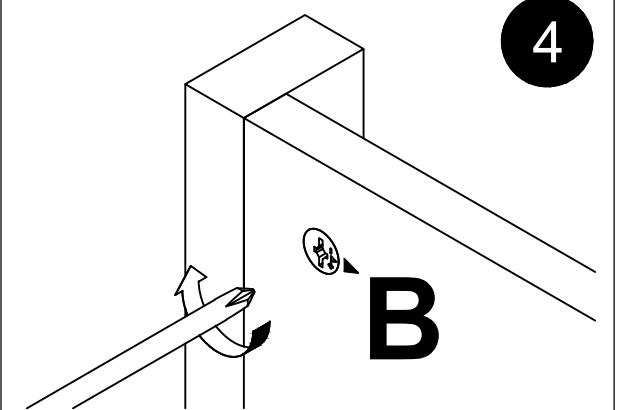4




4. Gently turn Cam Lock 180° clockwise to lock into position.

8

YOU WILL NEED

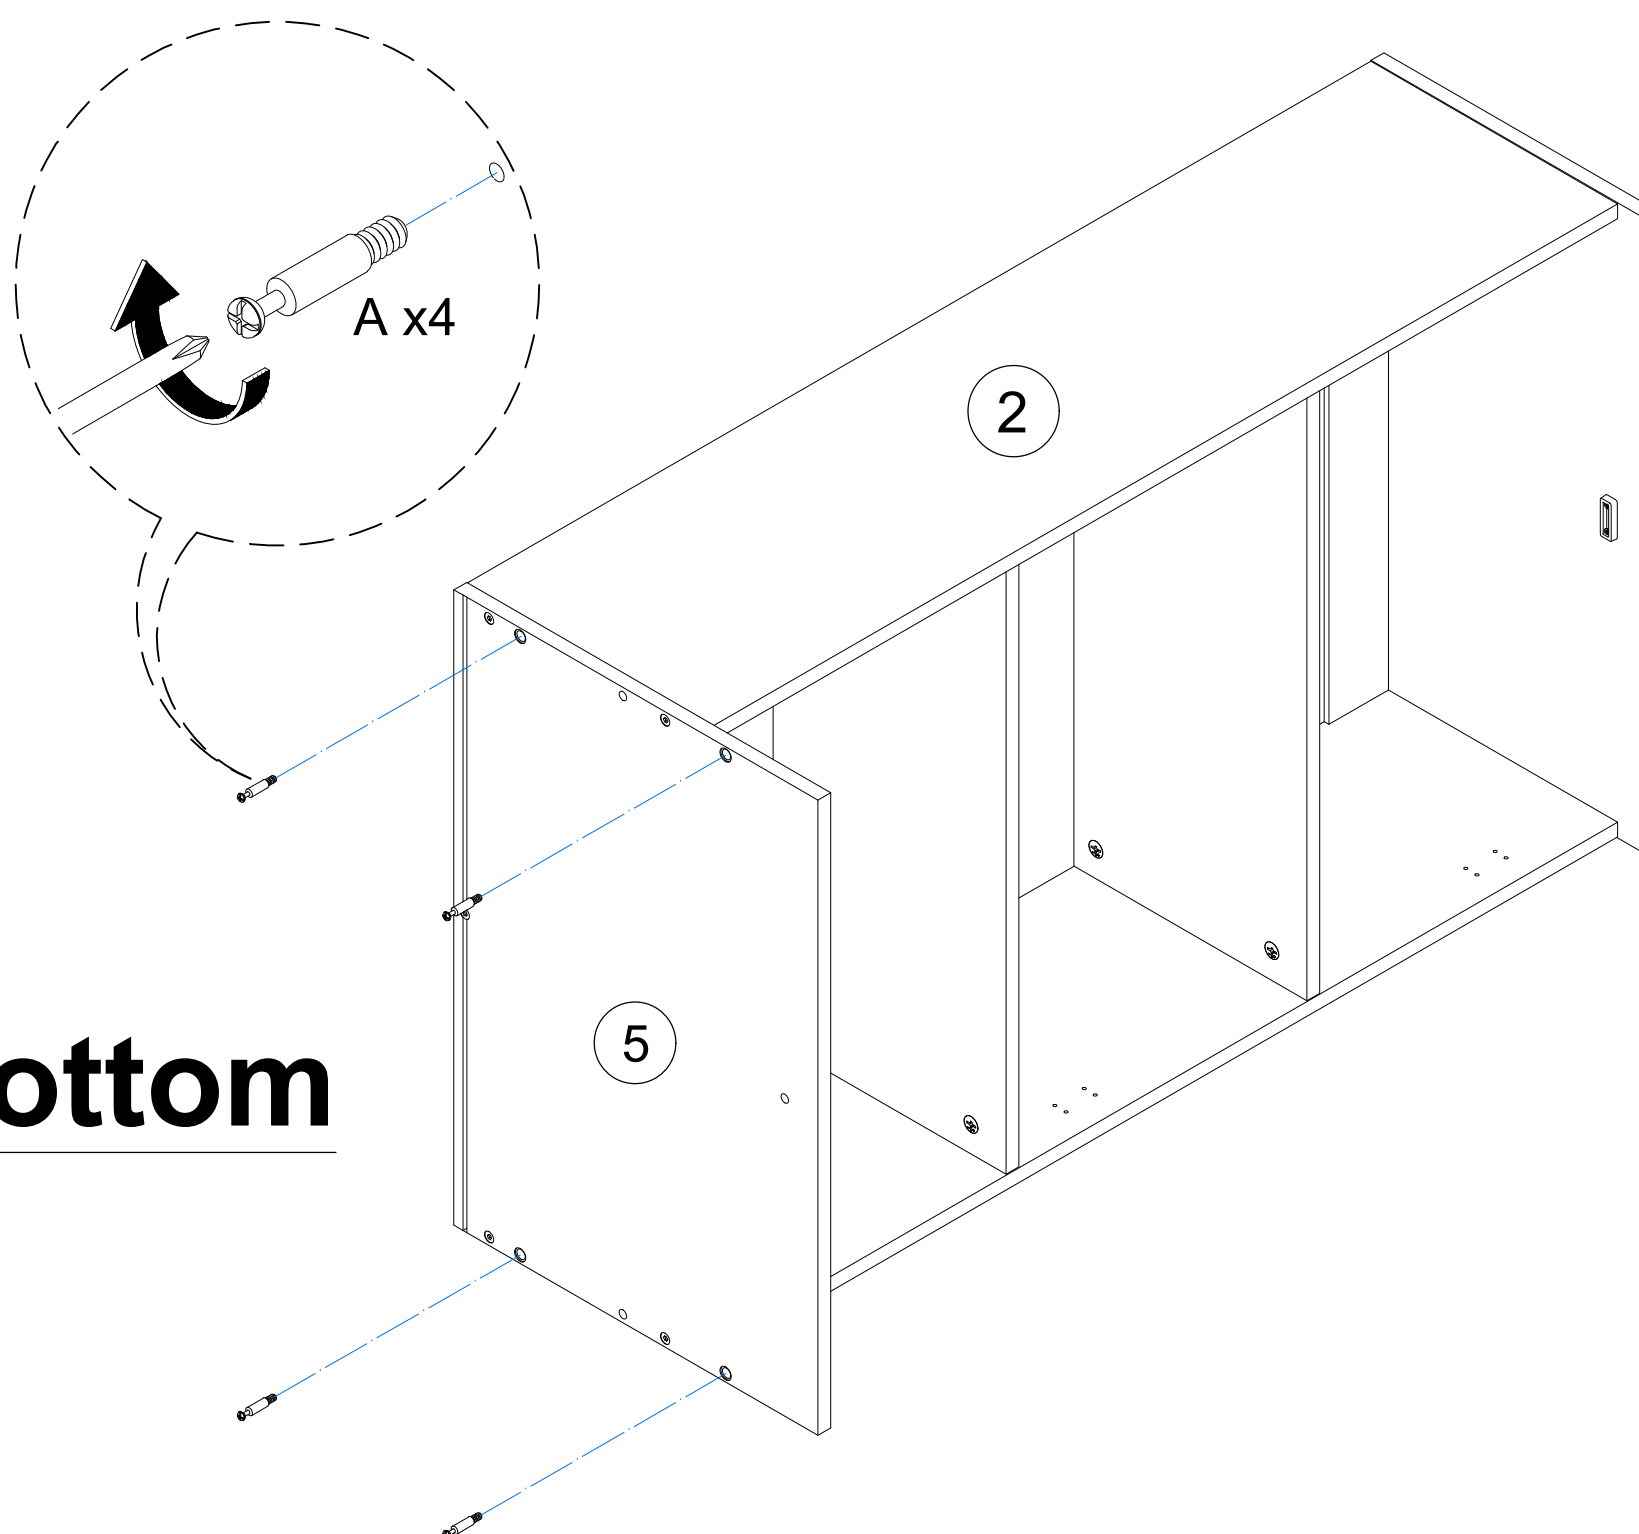A x4

Bottom

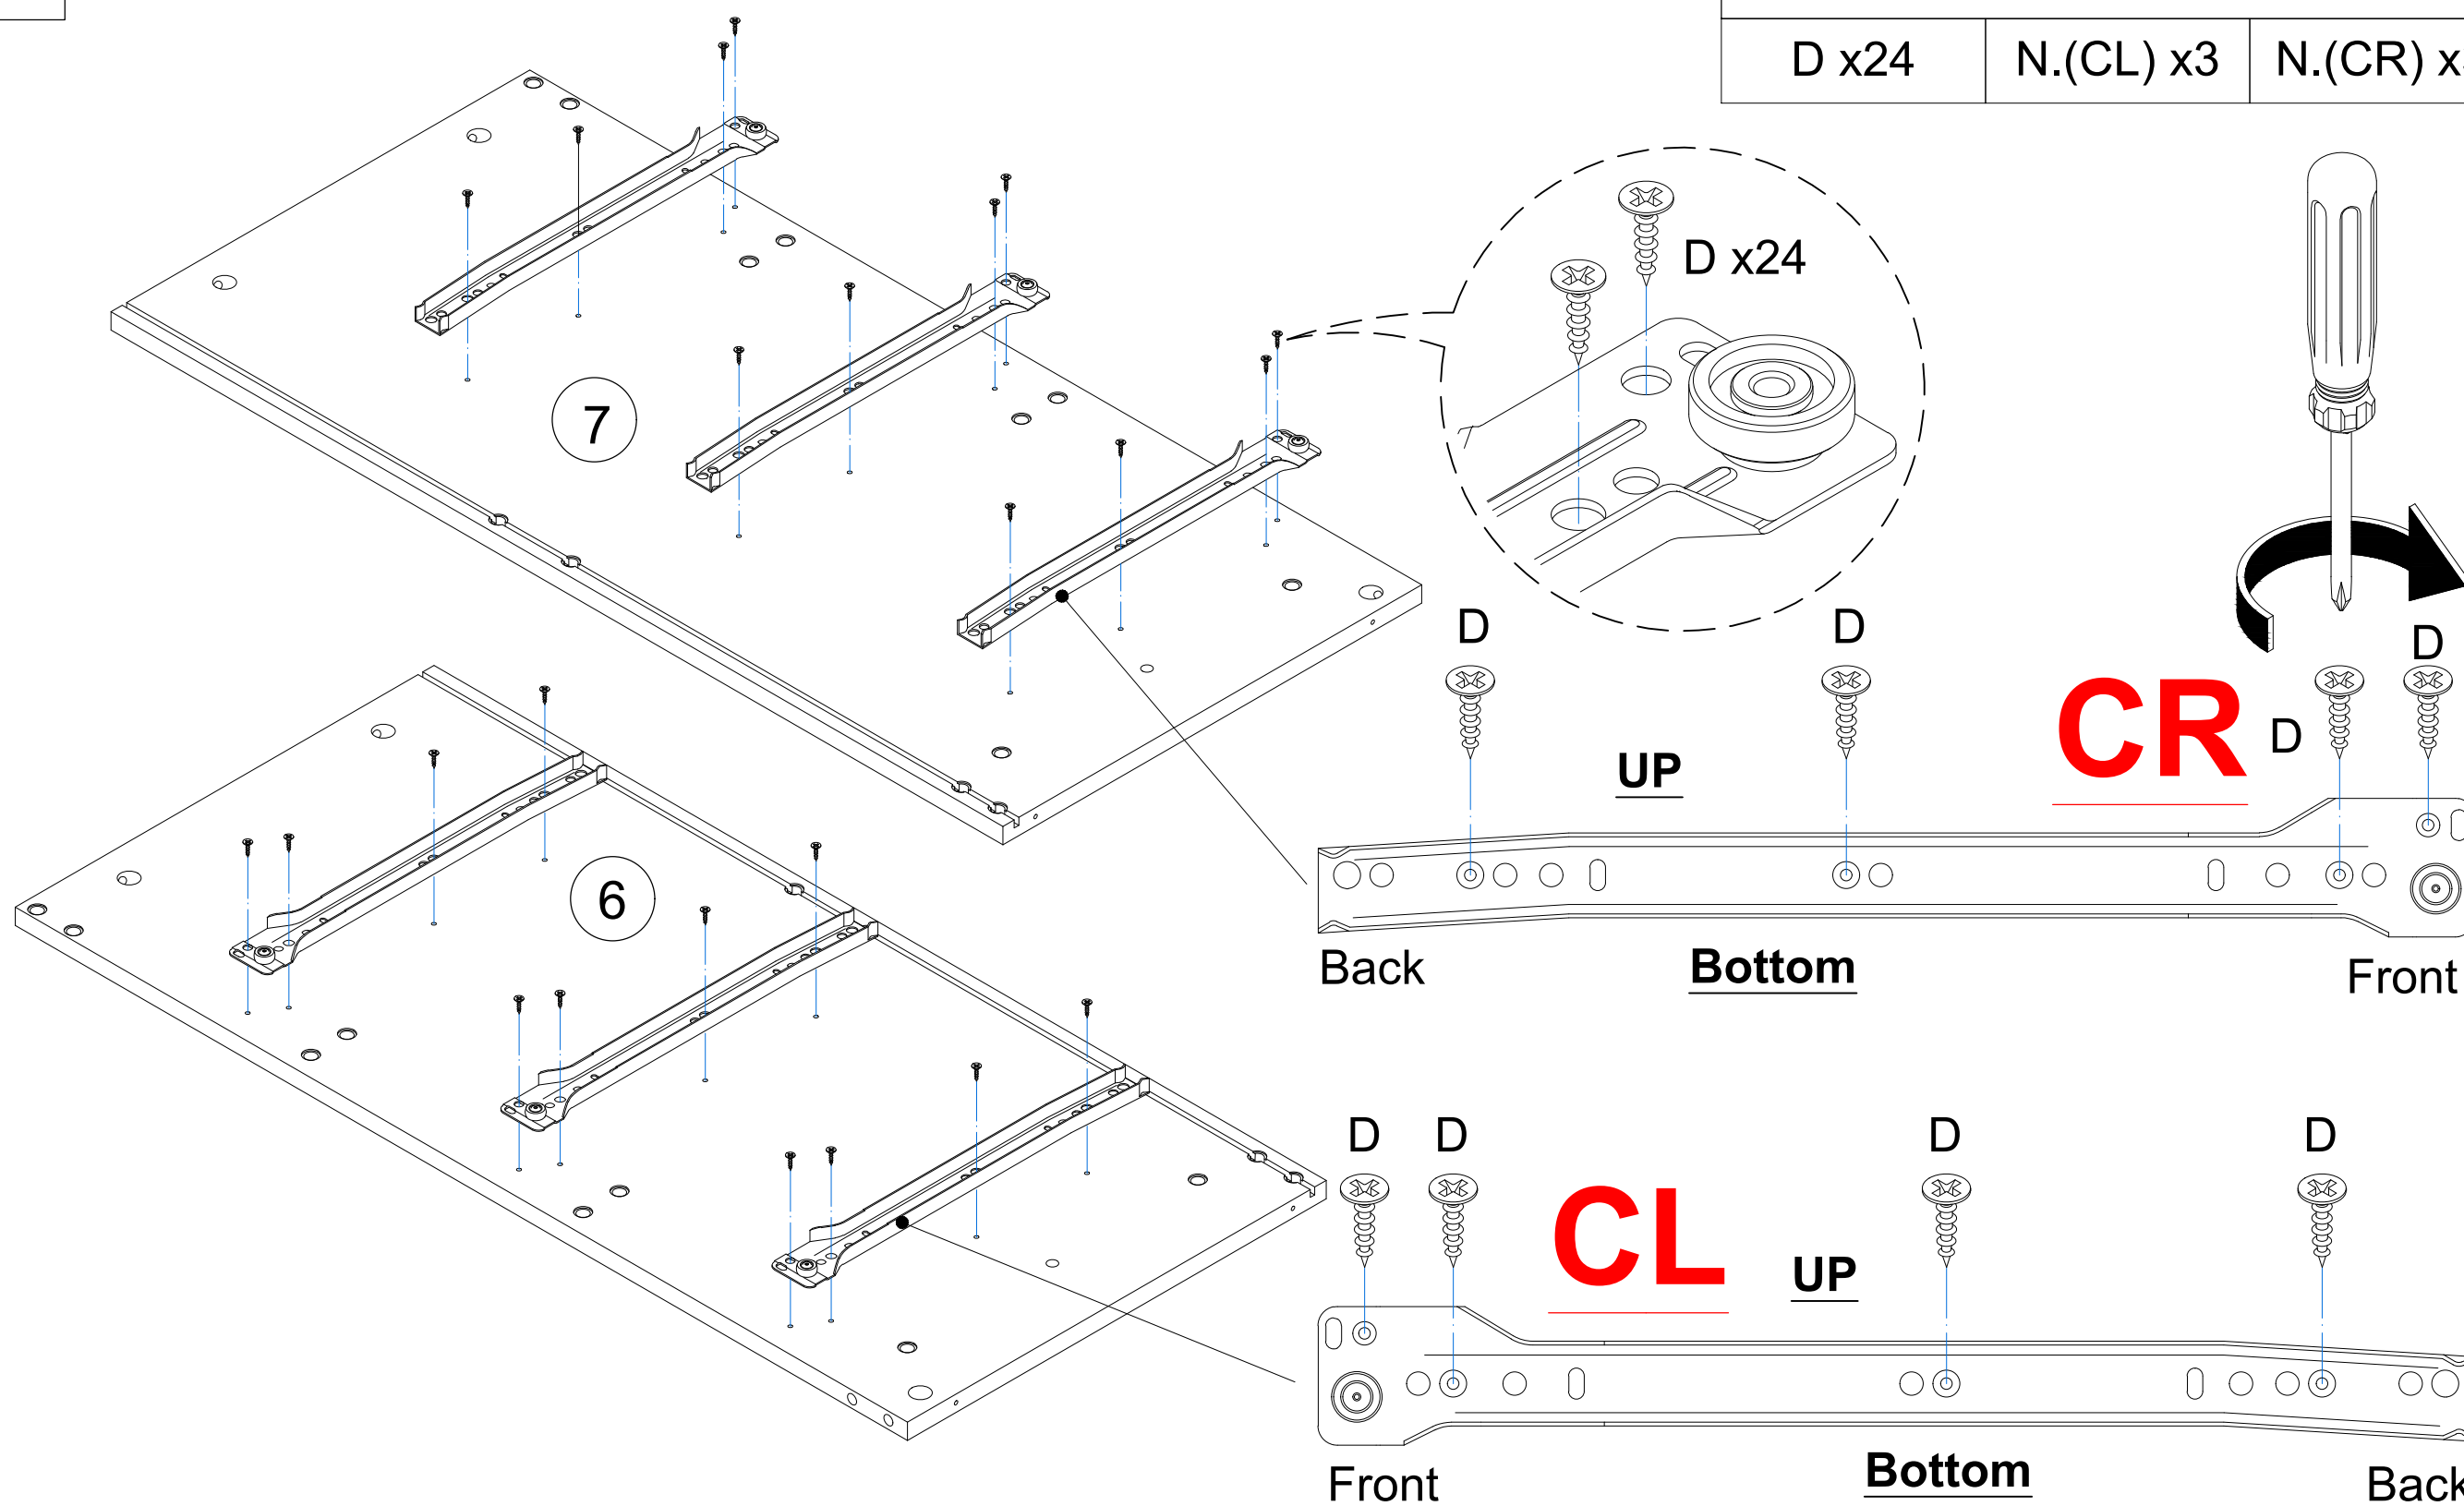
9

YOU WILL NEED



D x24

N.(CL) x3


N.(CR) x3




HOW TO

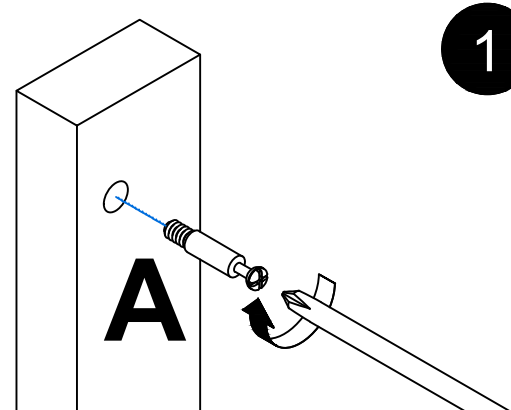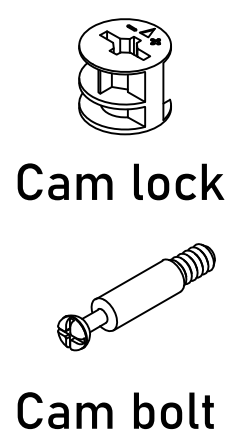

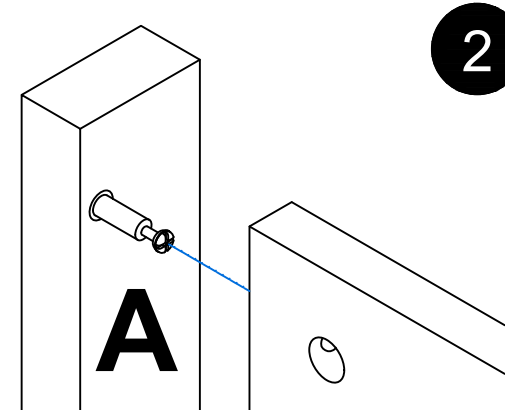
1. Screw Cam Bolt into panel



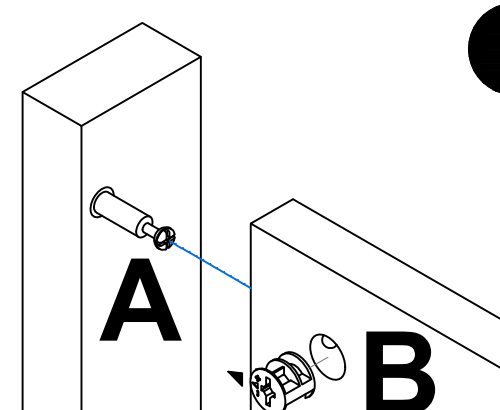2. Insert Cam Bolt into bolt hole of joining panel.



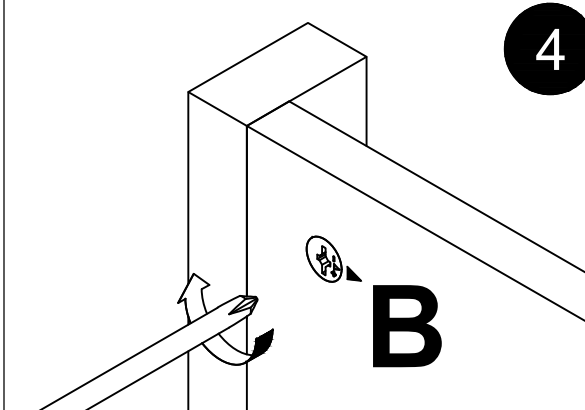3. Insert Cam Lock with arrow facing bolt.




4. Gently turn Cam Lock 180° clockwise to lock into position.






10

YOU WILL NEED

A x24

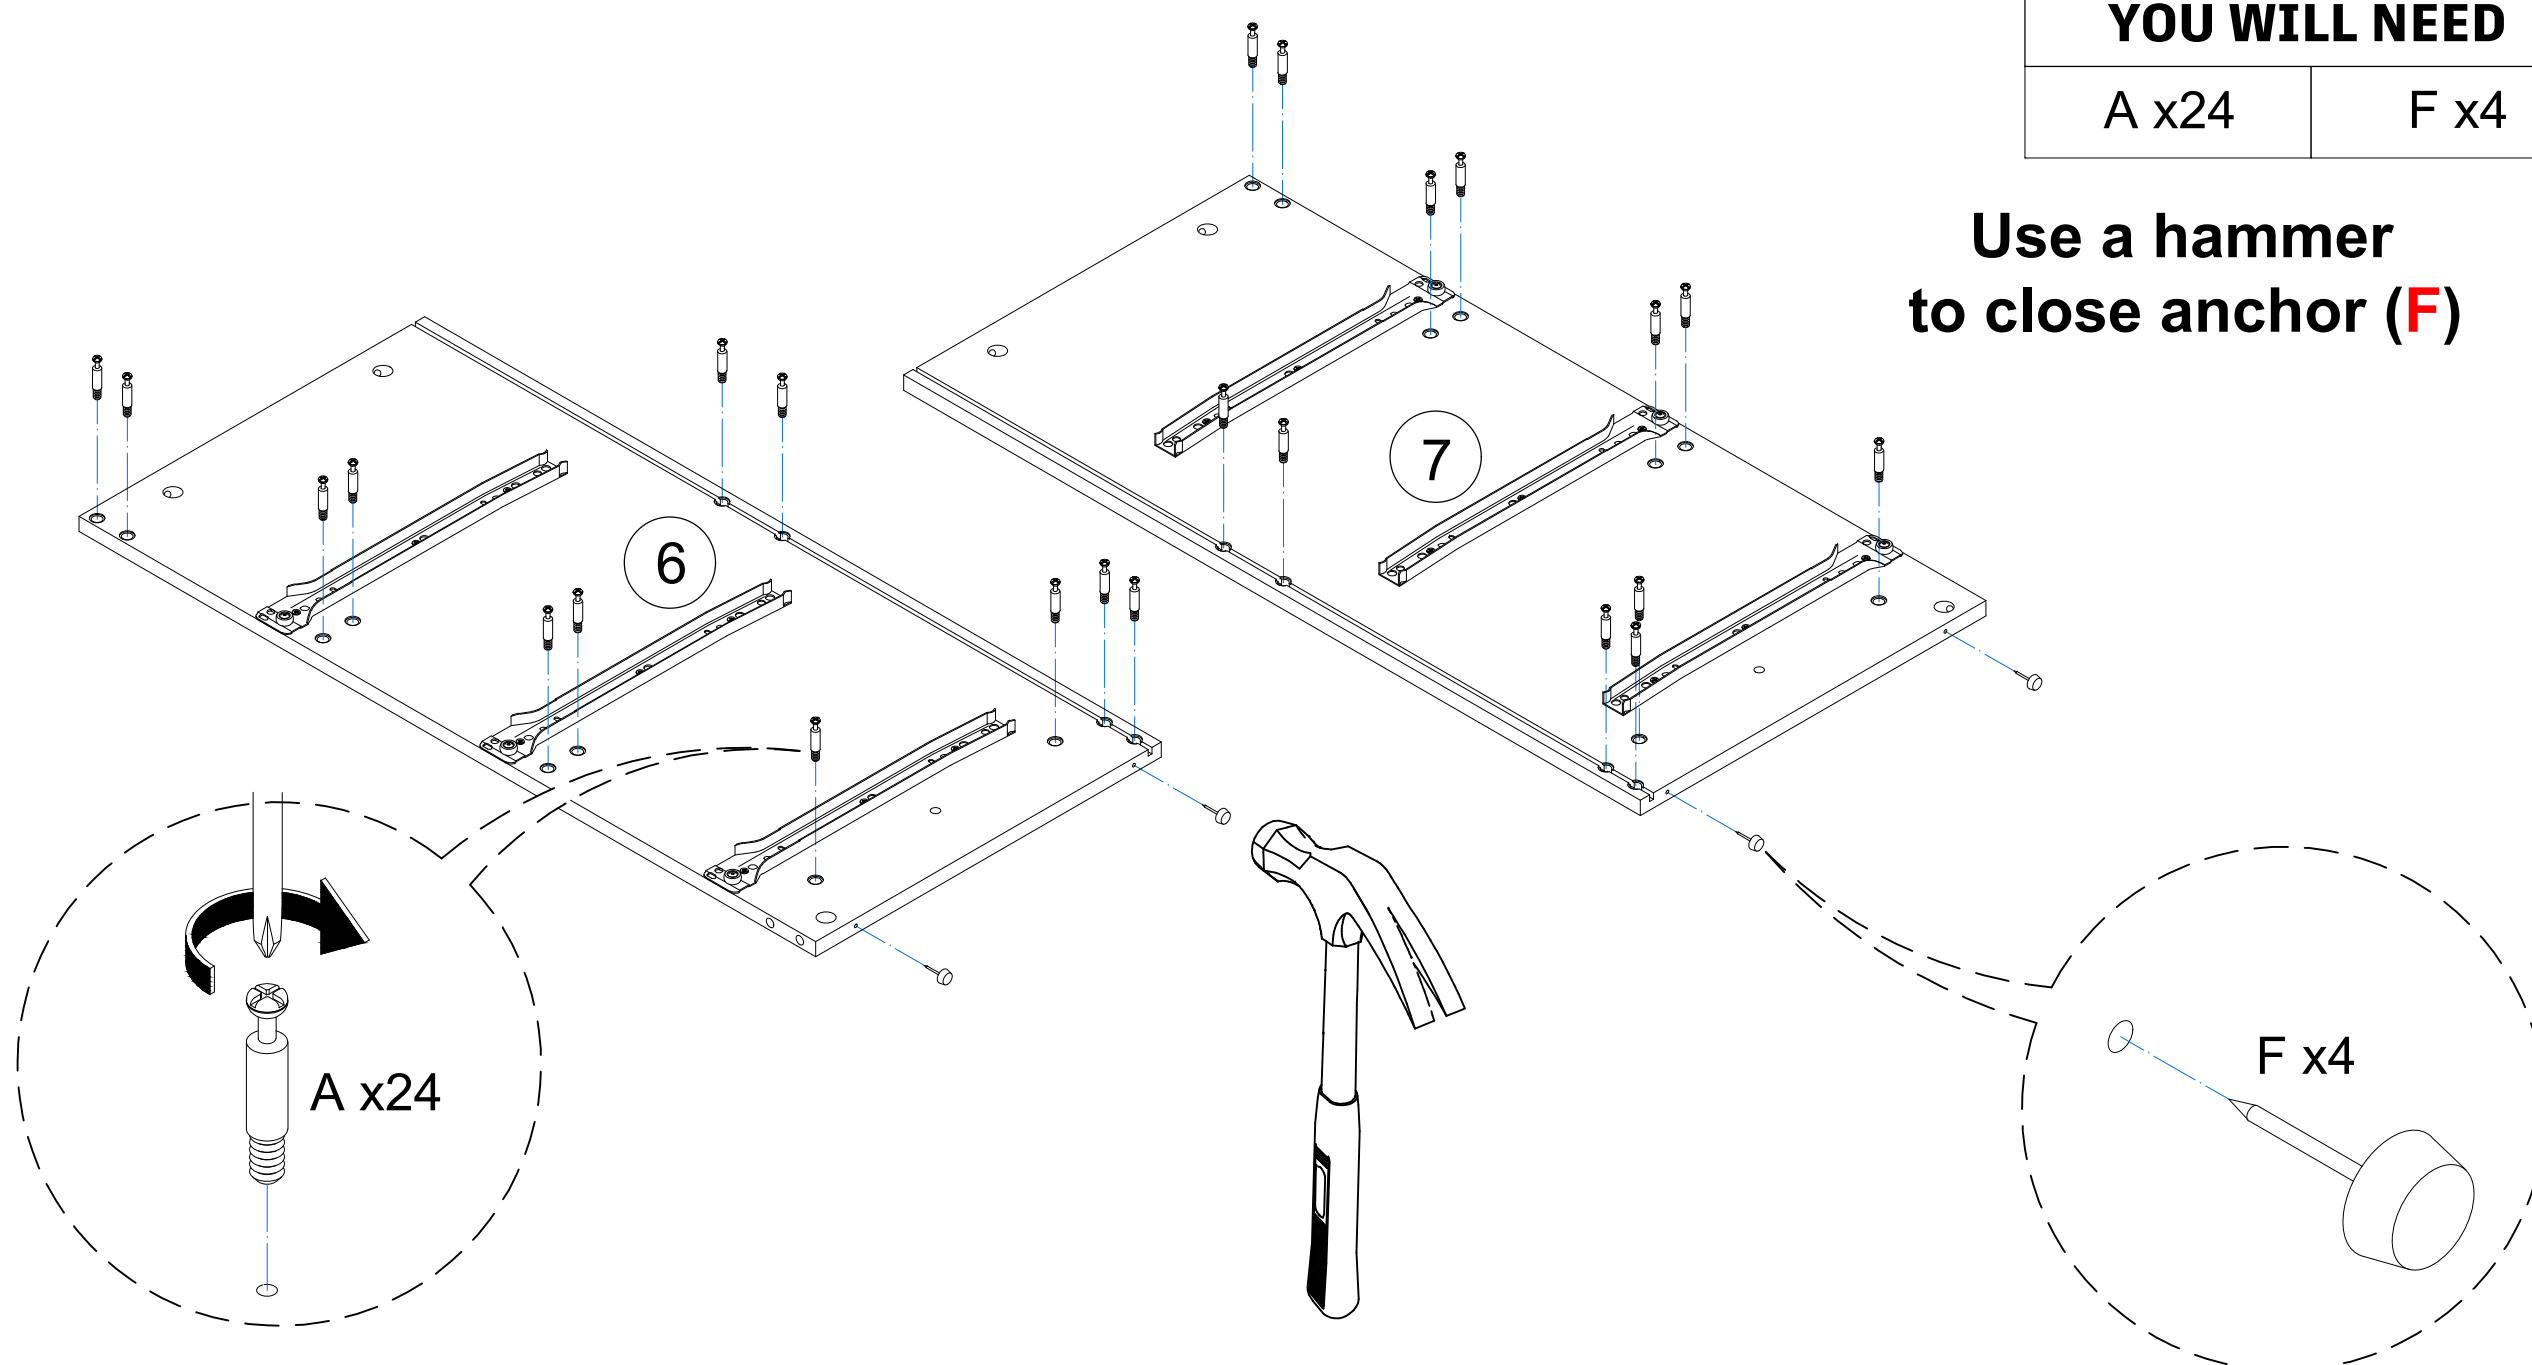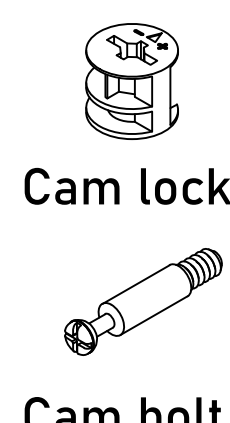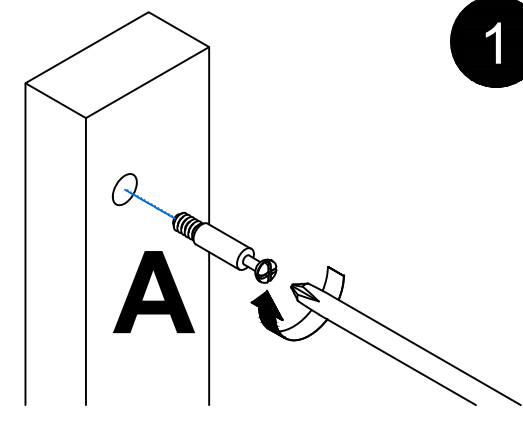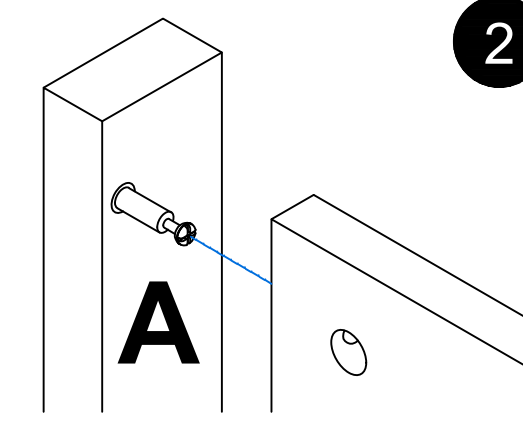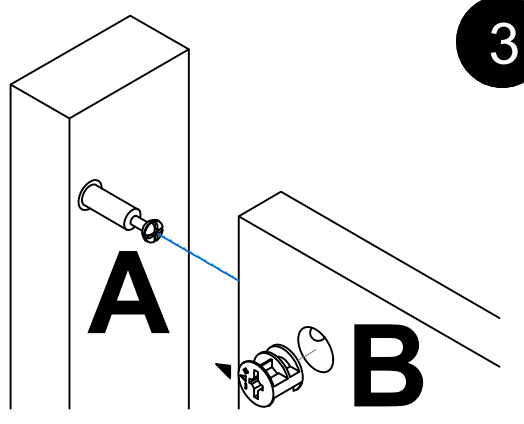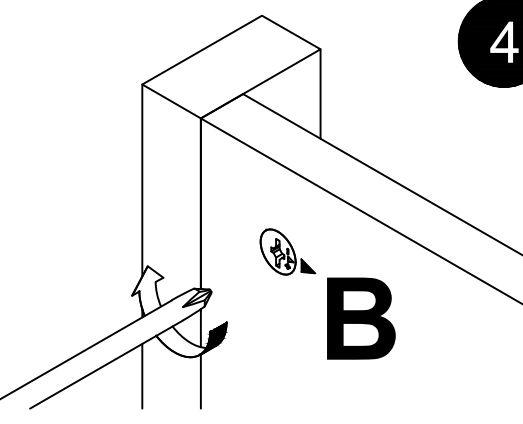F x4




HOW TO  Cam lock Cam bolt	1  A 1. Screw Cam Bolt into panel	2  A 2. Insert Cam Bolt into bolt hole of joining panel.	3  A B 3. Insert Cam Lock with arrow facing bolt.	4  B 4. Gently turn Cam Lock 180° clockwise to lock into position.
---	--	--	---	---

11


YOU WILL NEED

B x12


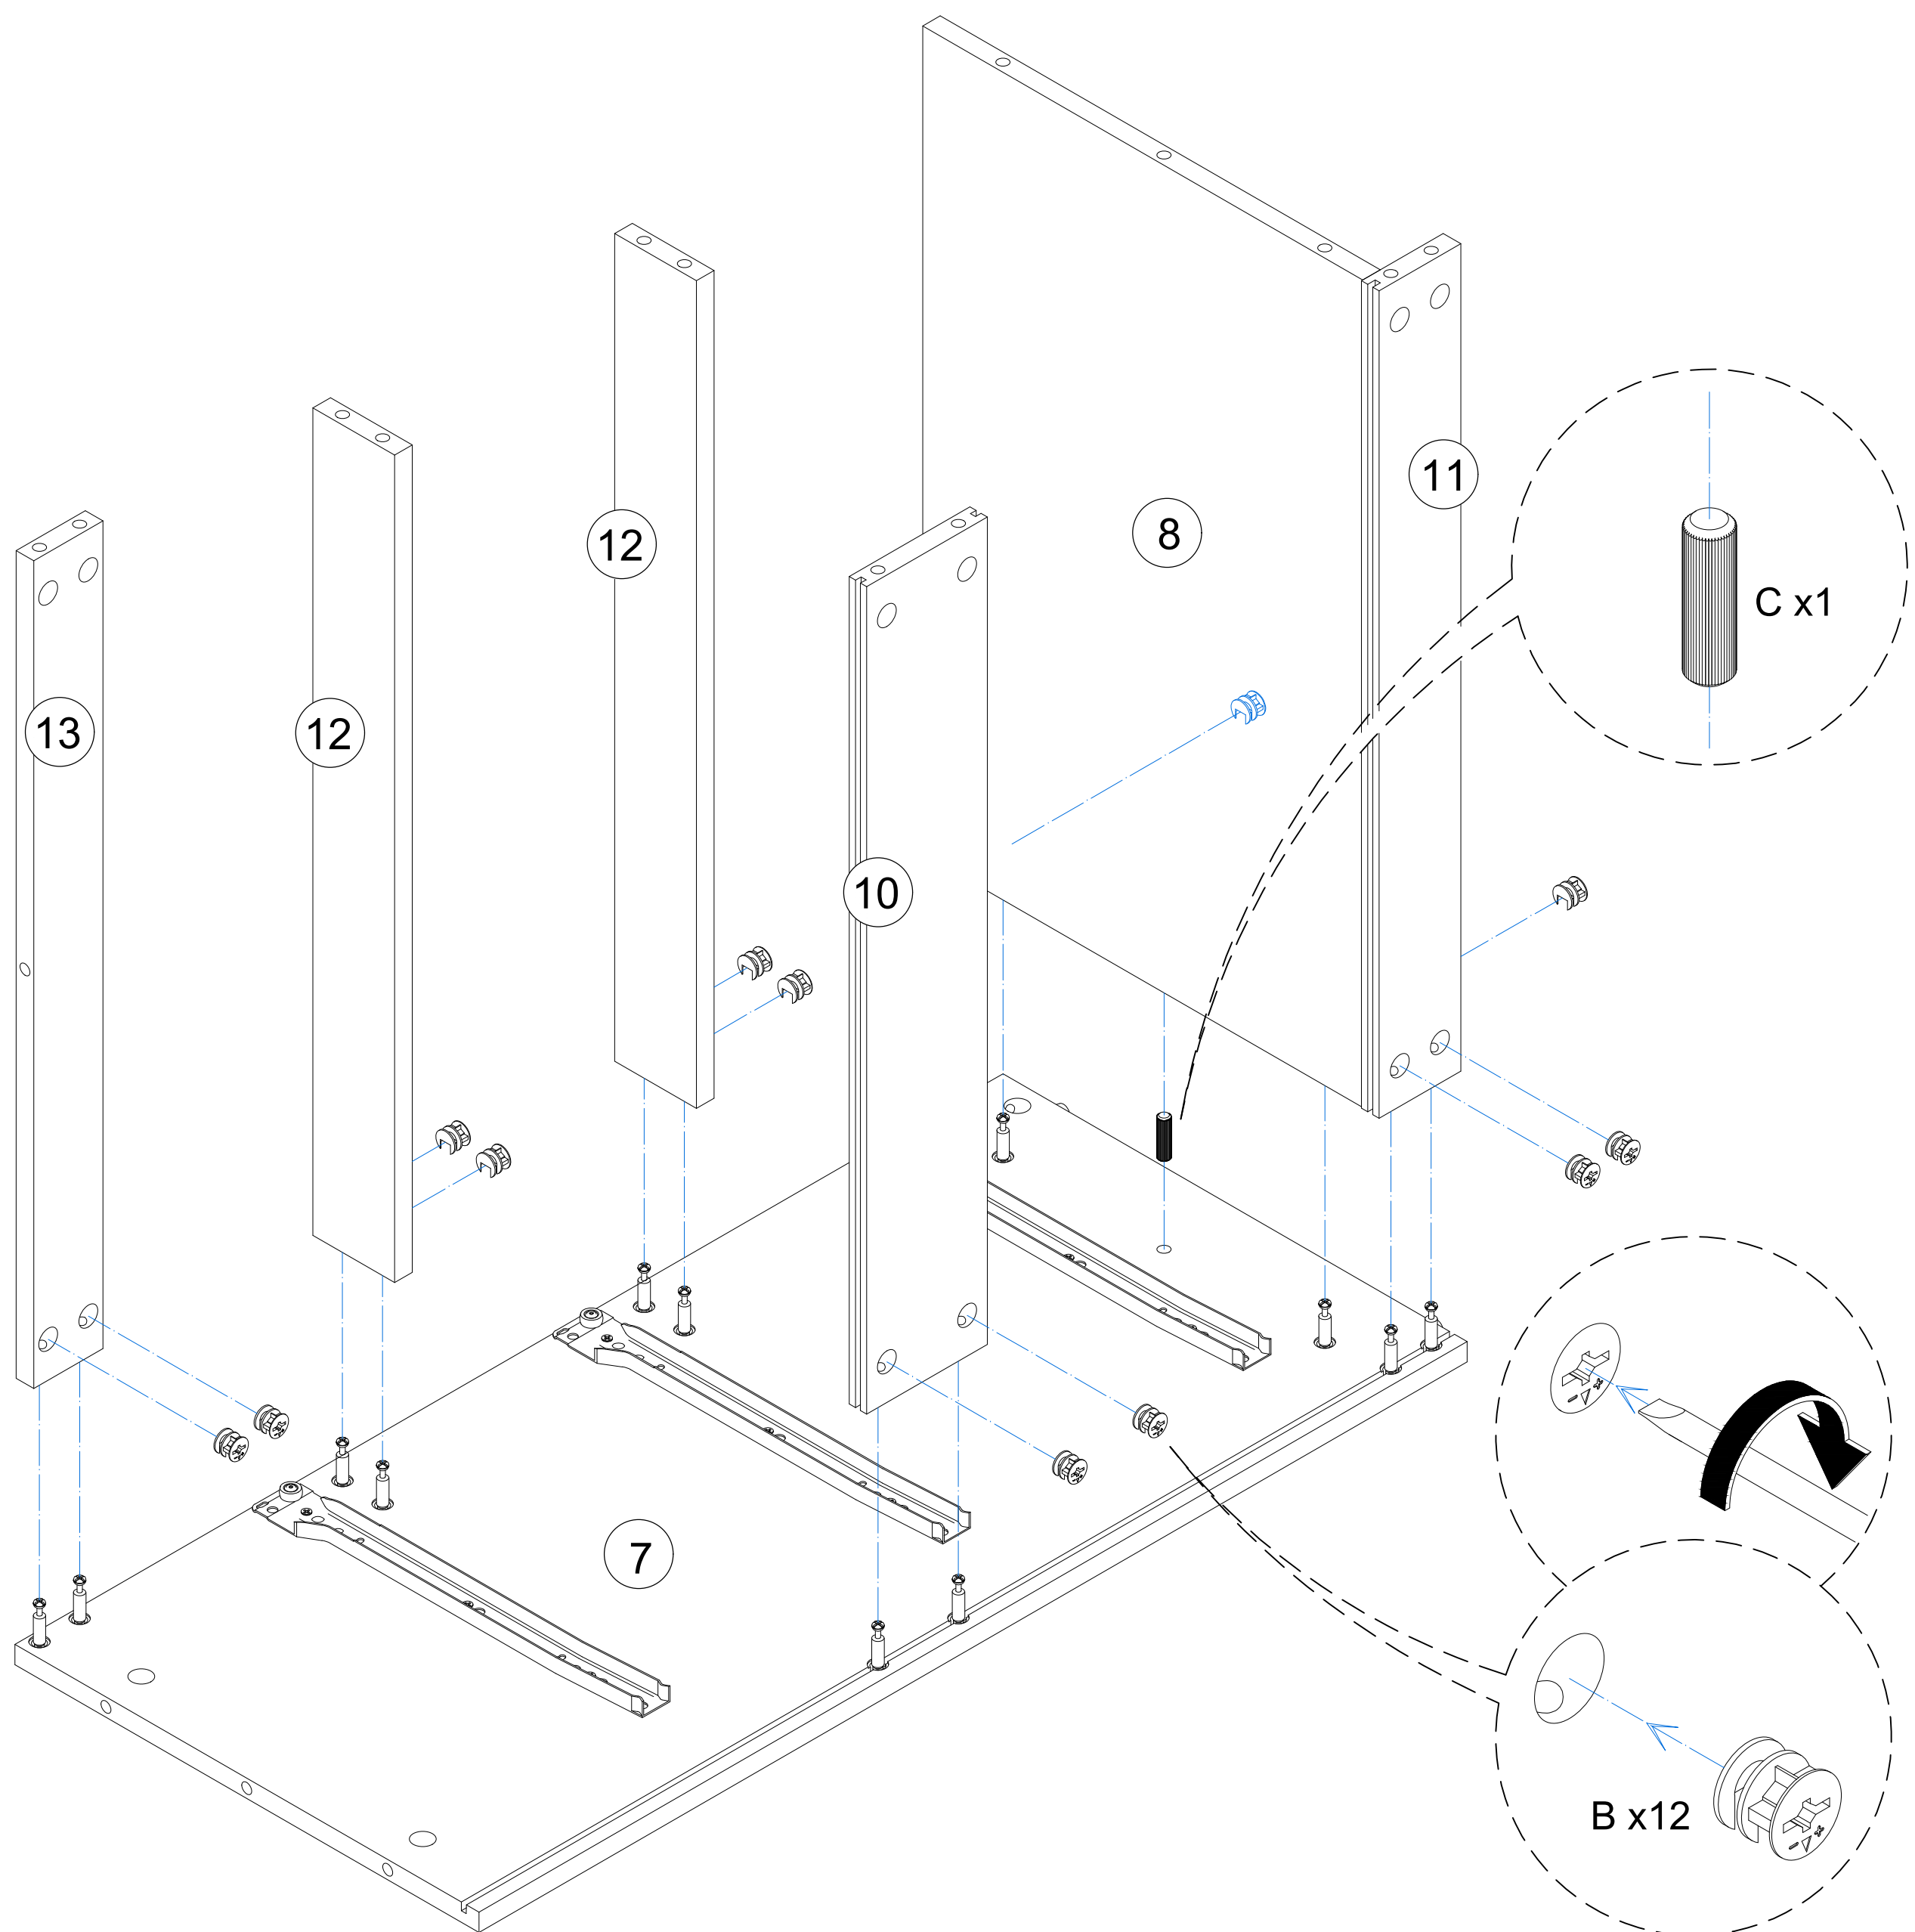
C x1




12

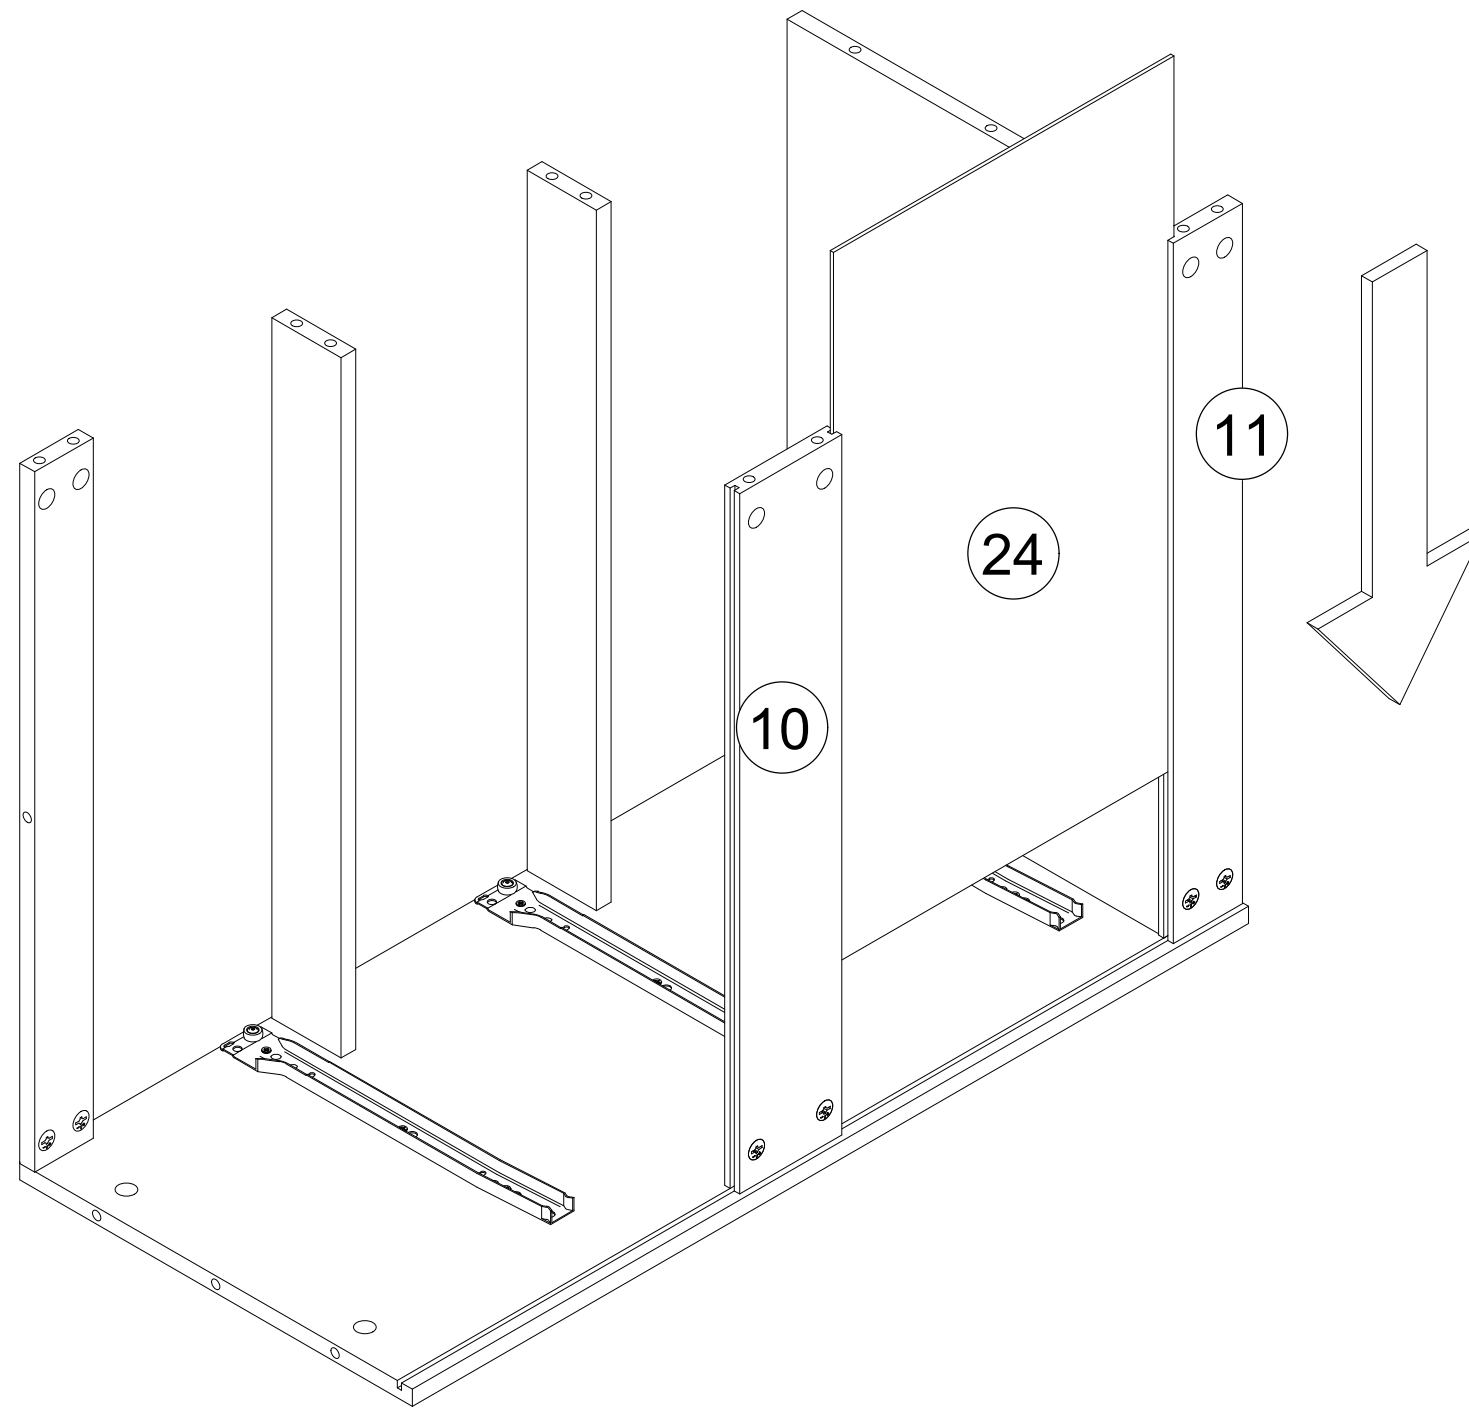


HOW TO

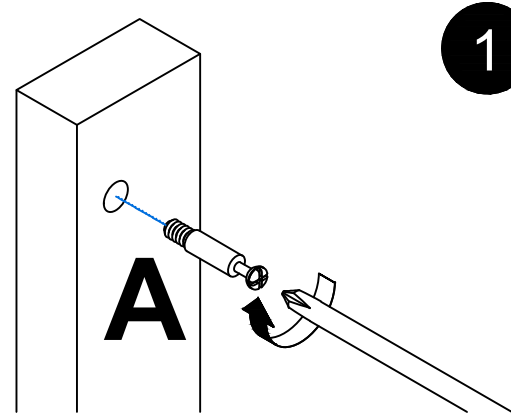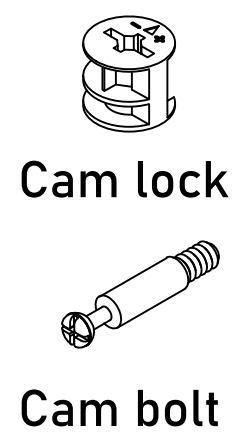

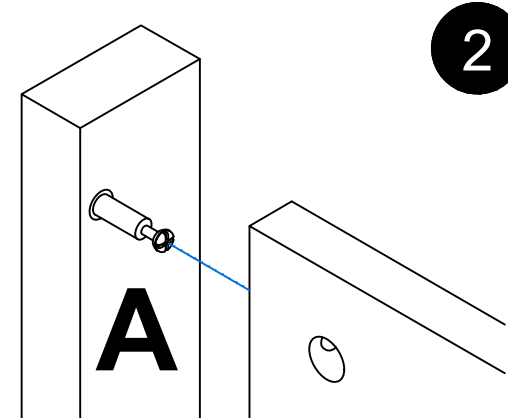
1. Screw Cam Bolt into panel



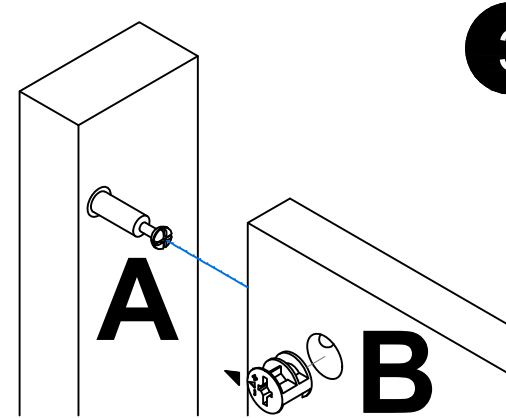2. Insert Cam Bolt into bolt hole of joining panel.




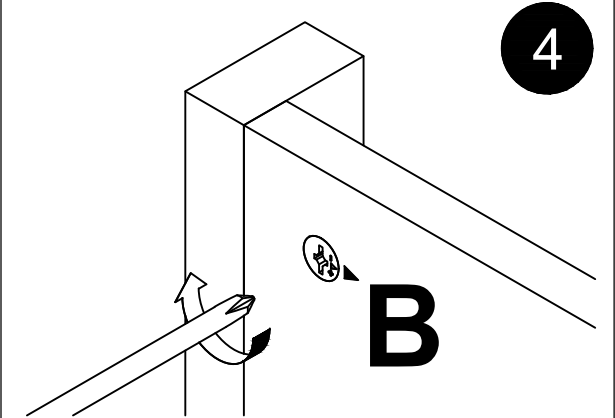3. Insert Cam Lock with arrow facing bolt.



4. Gently turn Cam Lock 180° clockwise to lock into position.




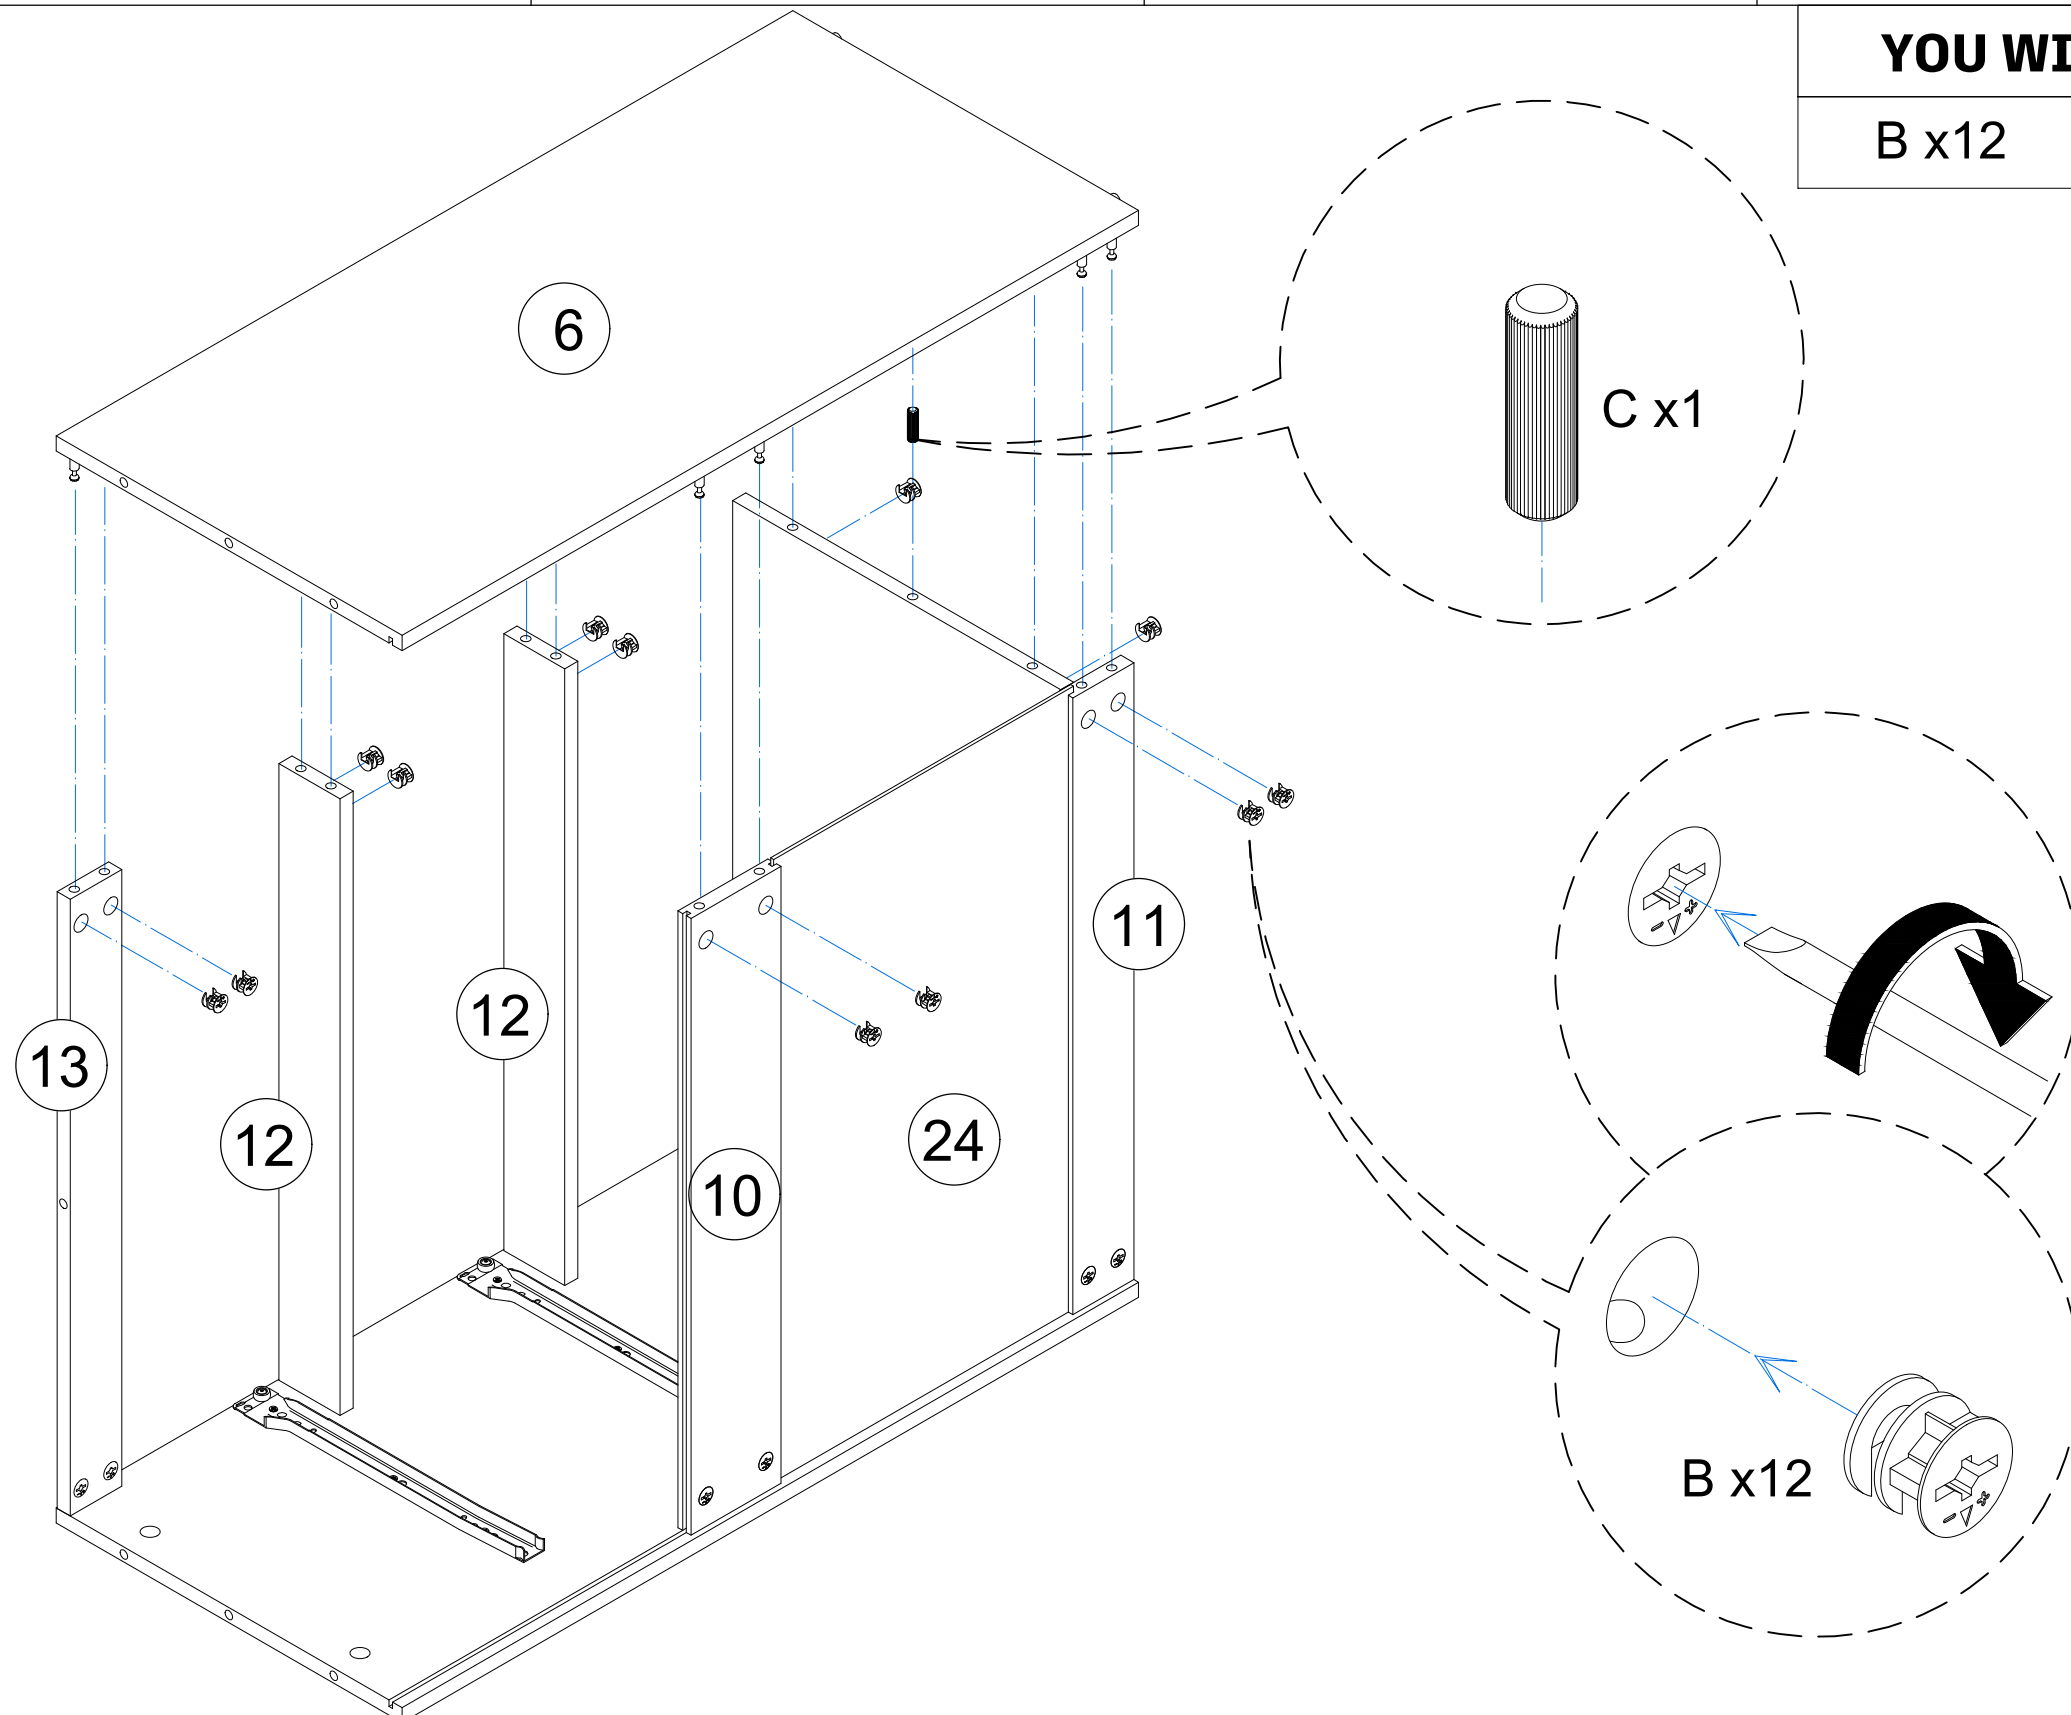
13



YOU WILL NEED

B x12

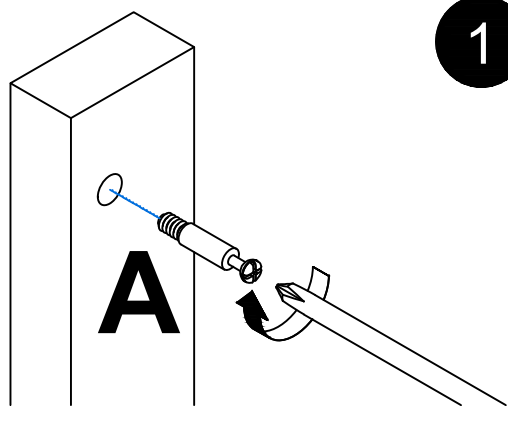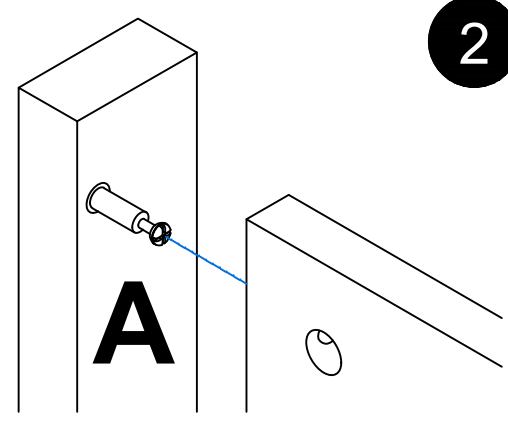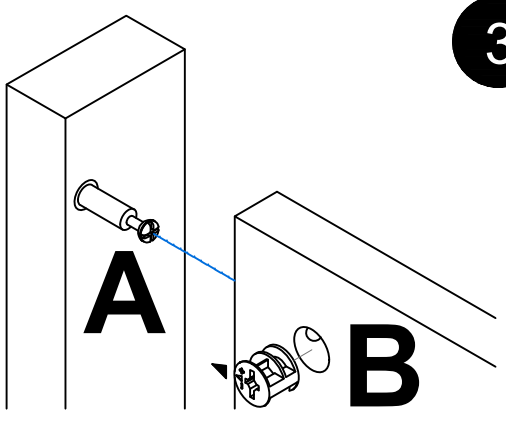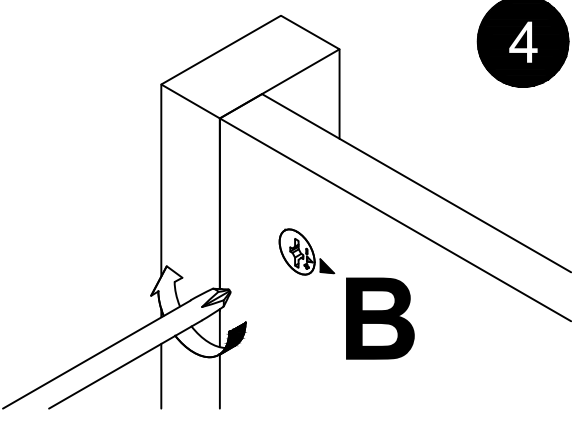
C x1

HOW TO  Cam lock Cam bolt	1  A 1. Screw Cam Bolt into panel	2  A 2. Insert Cam Bolt into bolt hole of joining panel.	3  A B 3. Insert Cam Lock with arrow facing bolt.	4  B 4. Gently turn Cam Lock 180° clockwise to lock into position.
---	---	---	--	--

14

YOU WILL NEED

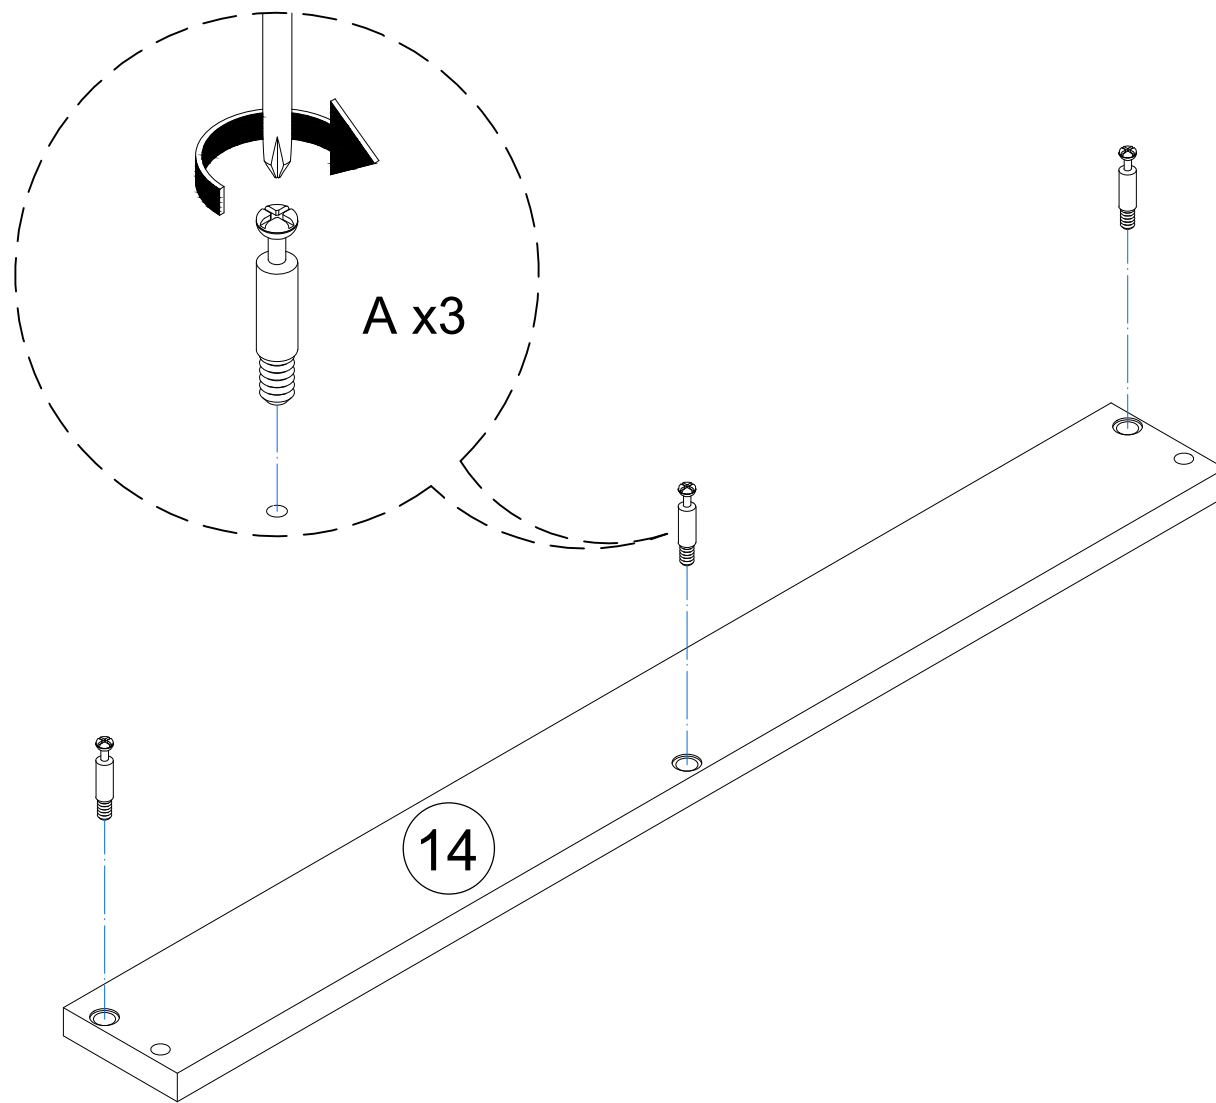A x3








15

YOU WILL NEED

B x3

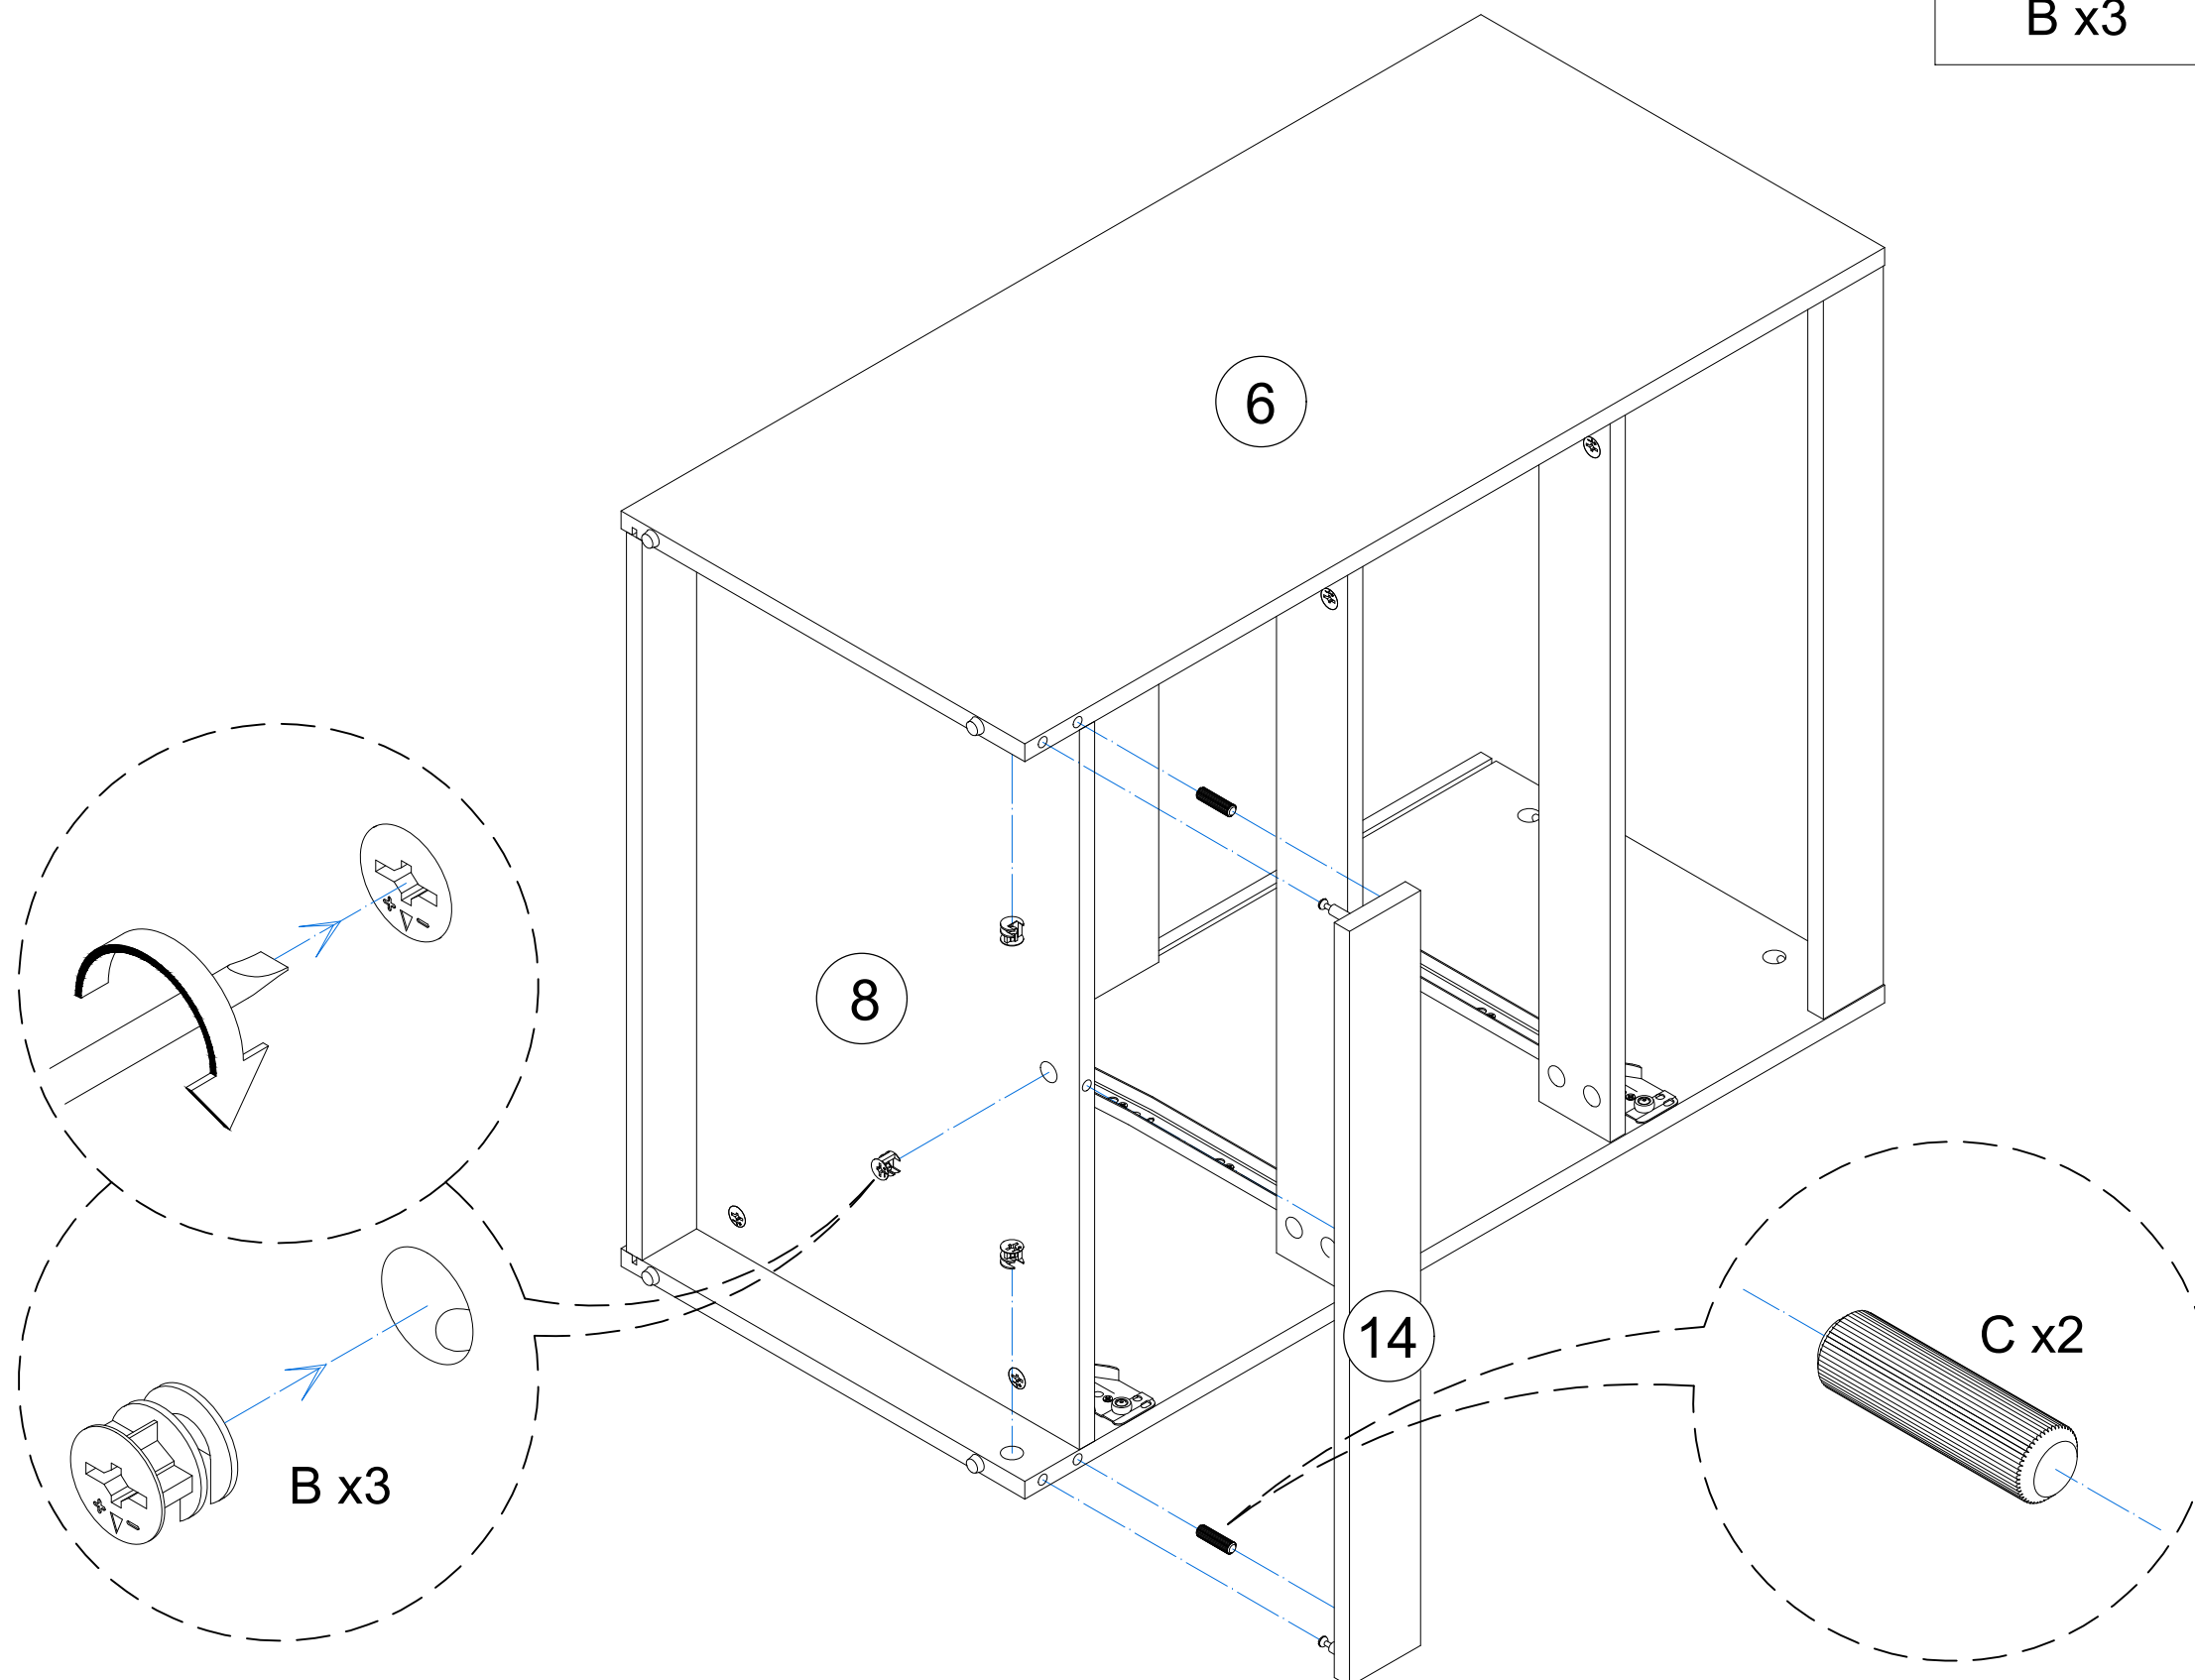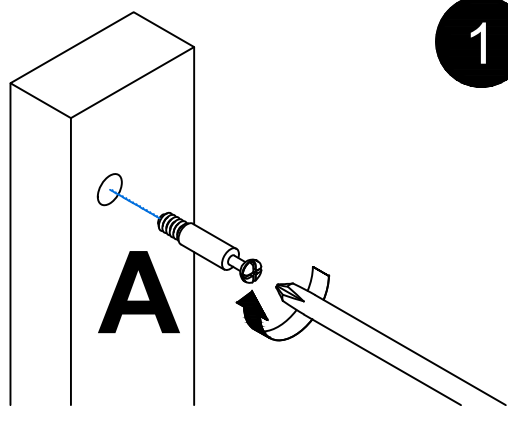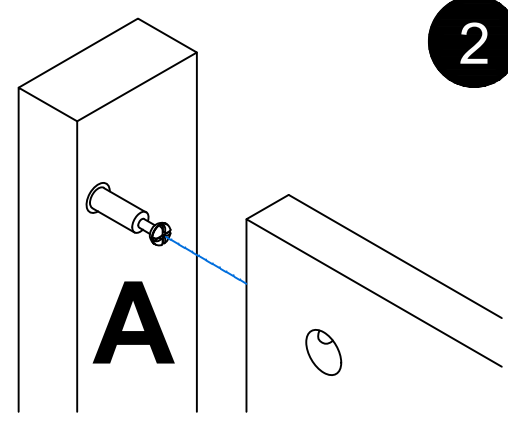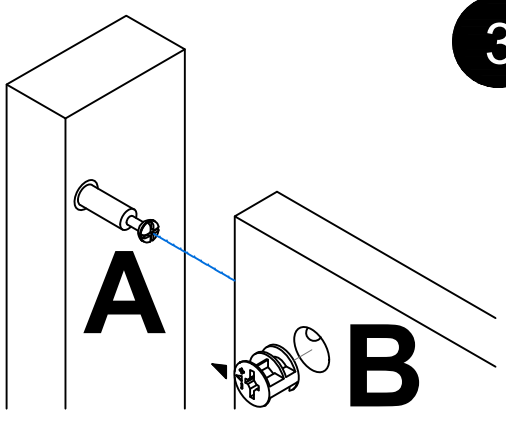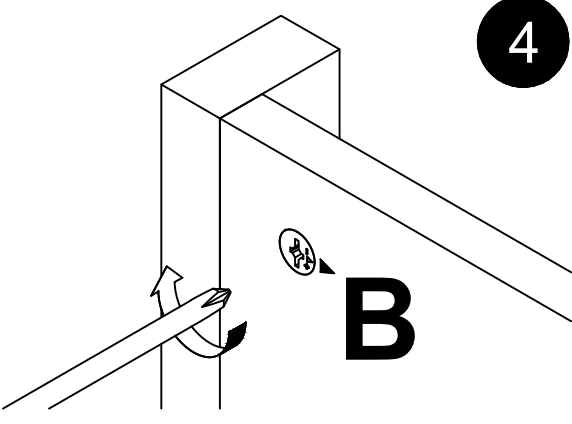C x2




HOW TO  Cam lock Cam bolt	1  A 1. Screw Cam Bolt into panel	2  A 2. Insert Cam Bolt into bolt hole of joining panel.	3  A B 3. Insert Cam Lock with arrow facing bolt.	4  B 4. Gently turn Cam Lock 180° clockwise to lock into position.
---	---	---	--	--






16

YOU WILL NEED

B x4

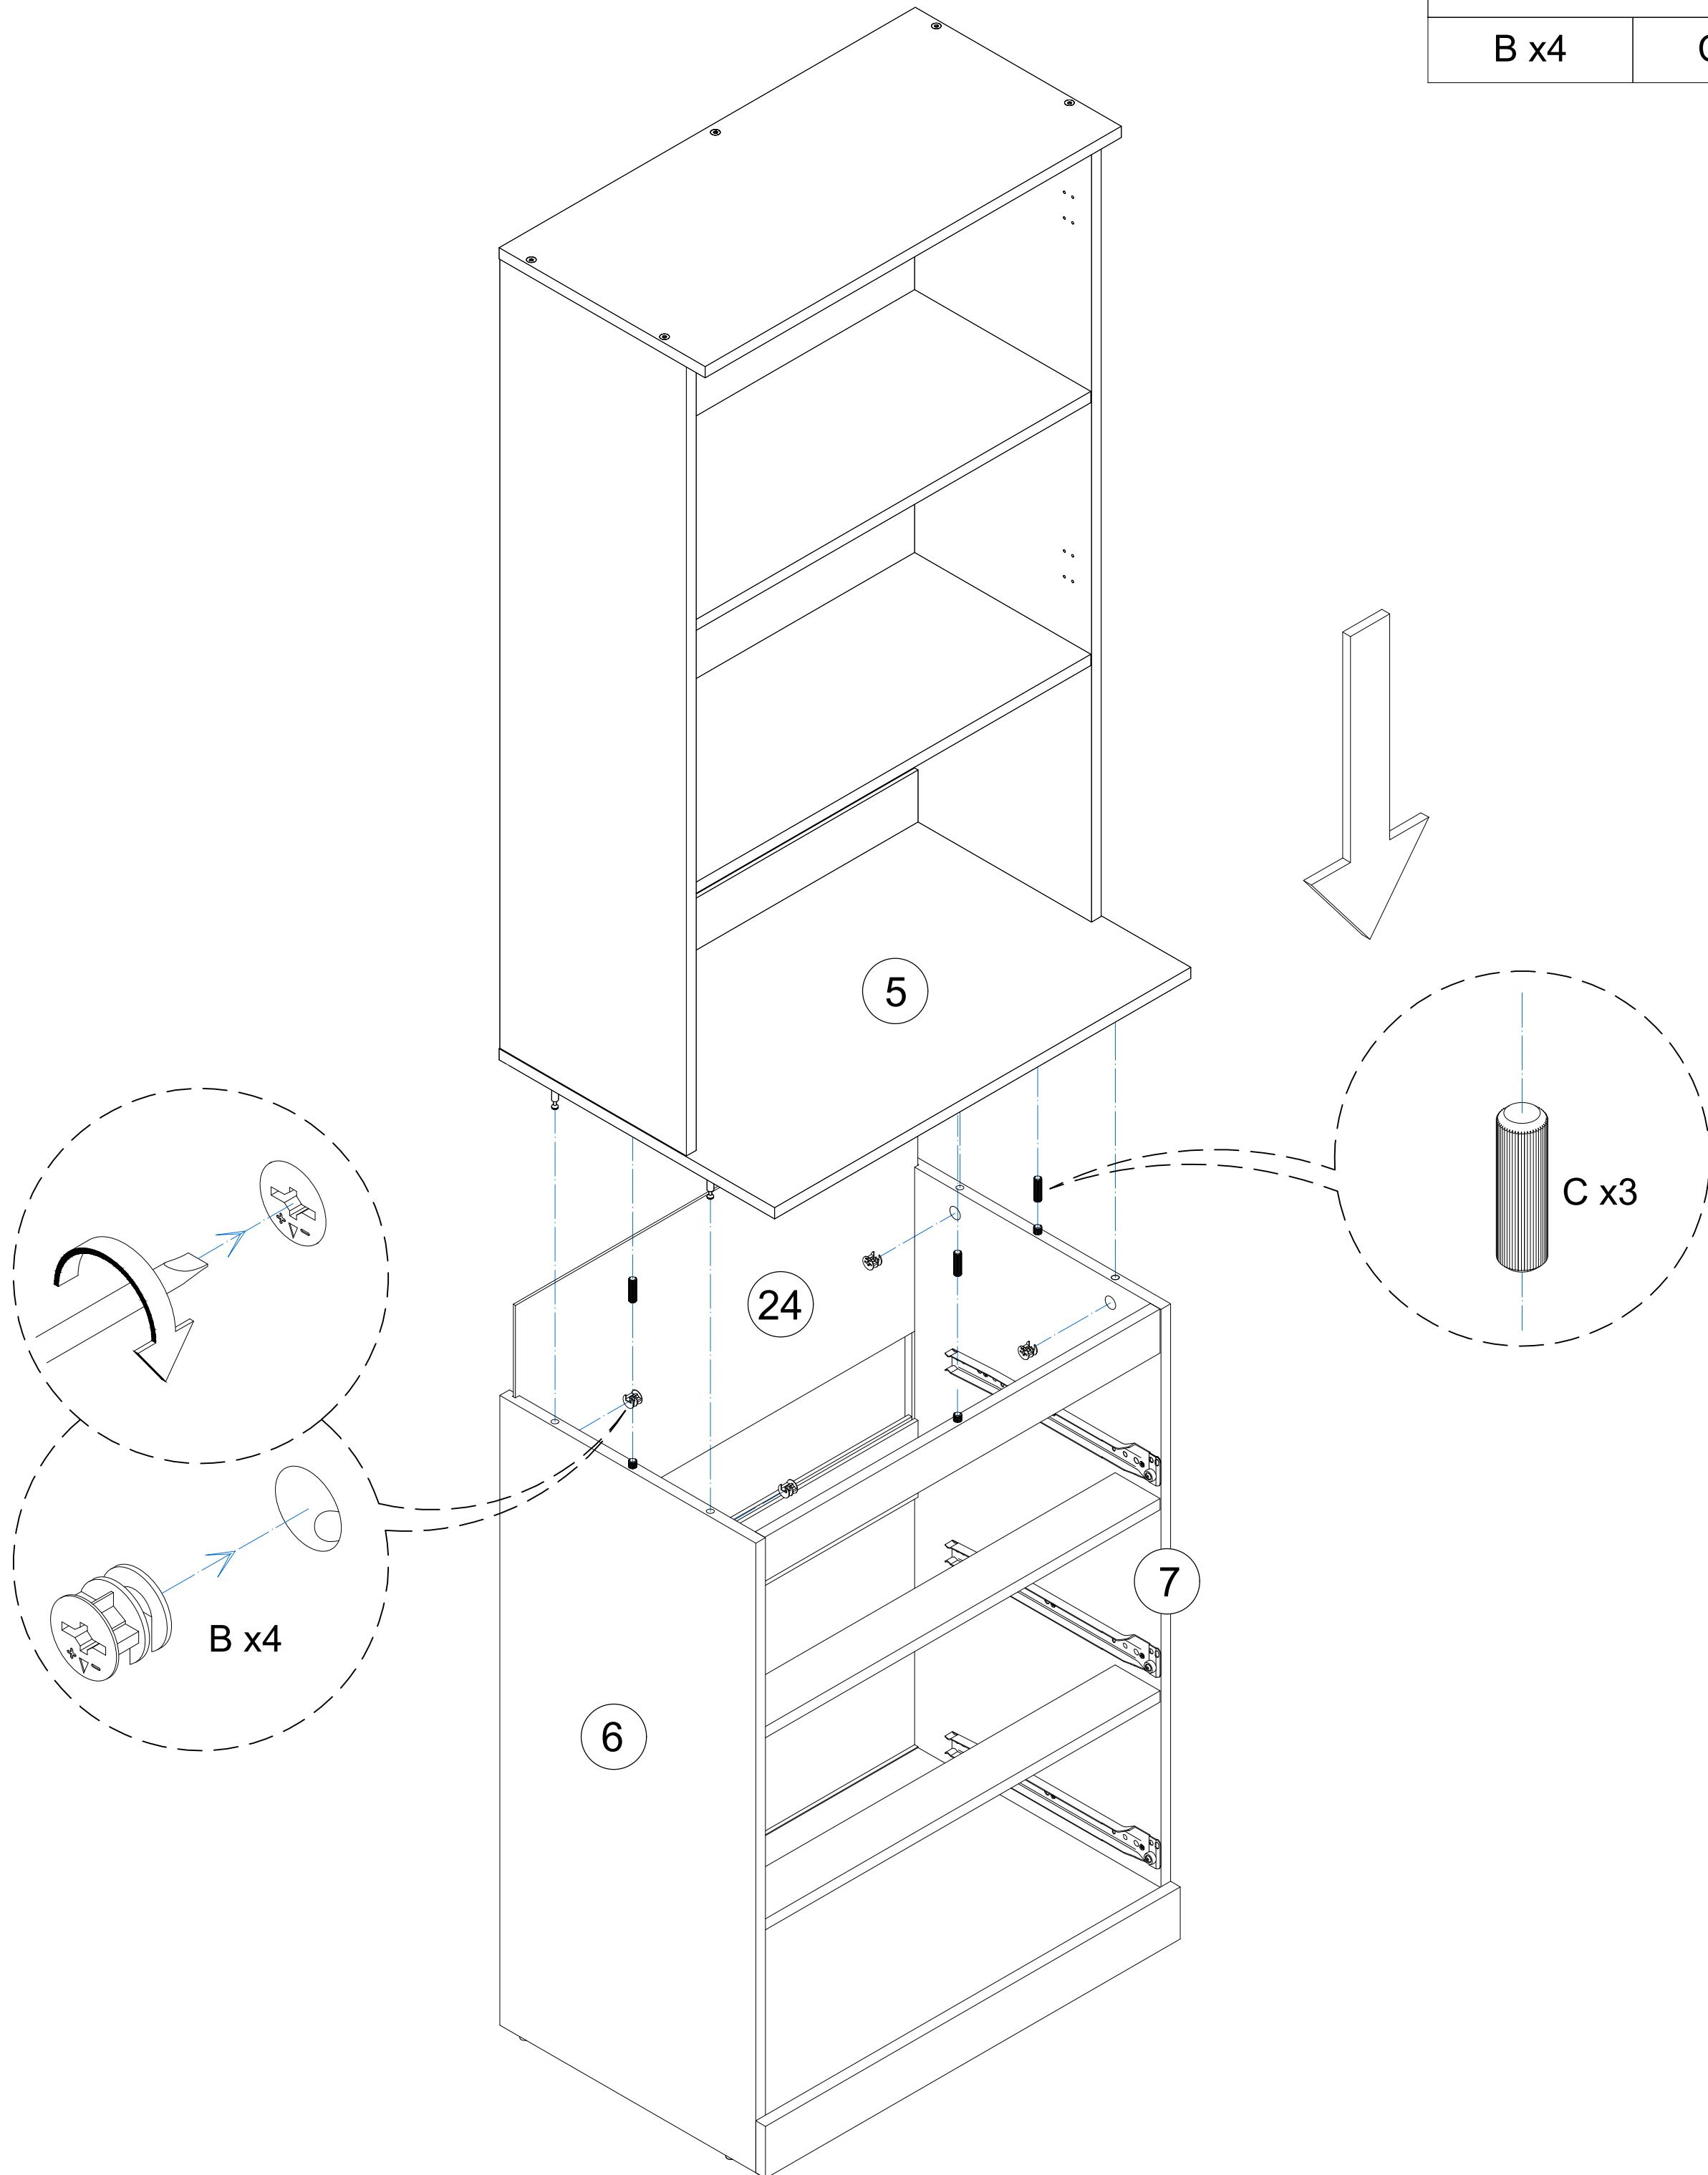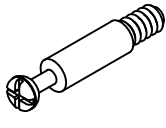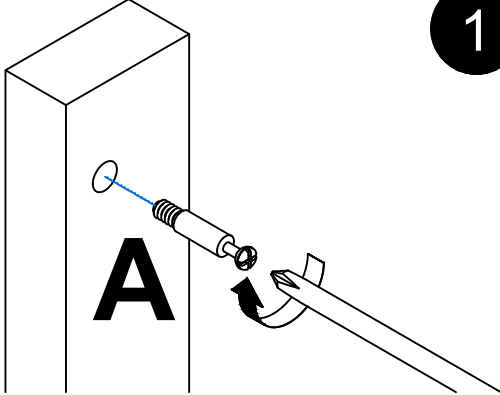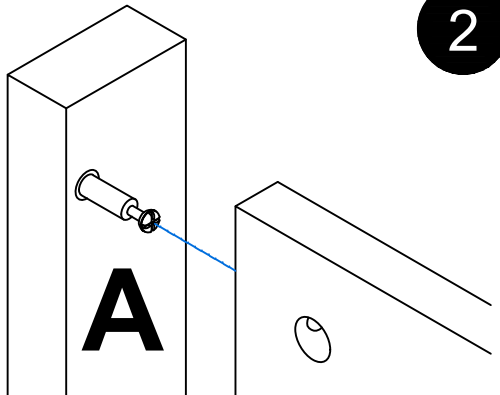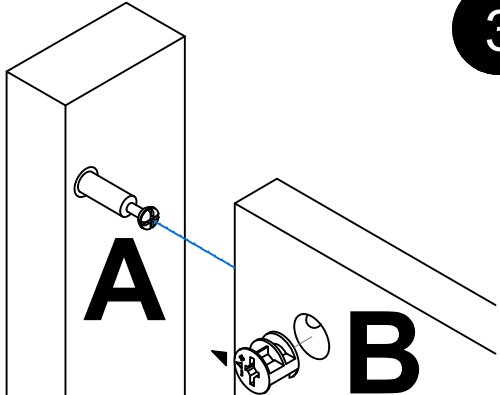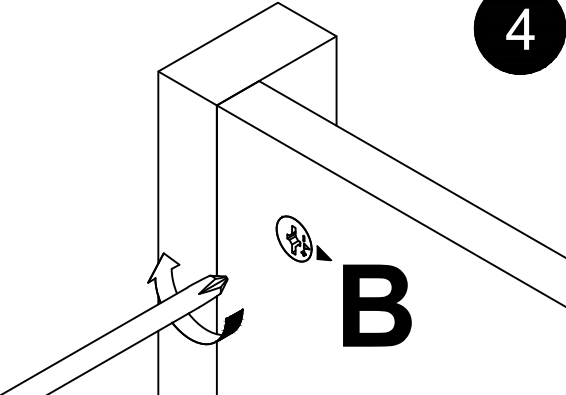C x3



HOW TO  Cam lock  Cam bolt	1  A 1. Screw Cam Bolt into panel	2  A 2. Insert Cam Bolt into bolt hole of joining panel.	3  A B 3. Insert Cam Lock with arrow facing bolt.	4  B 4. Gently turn Cam Lock 180° clockwise to lock into position.
---	--	--	---	---

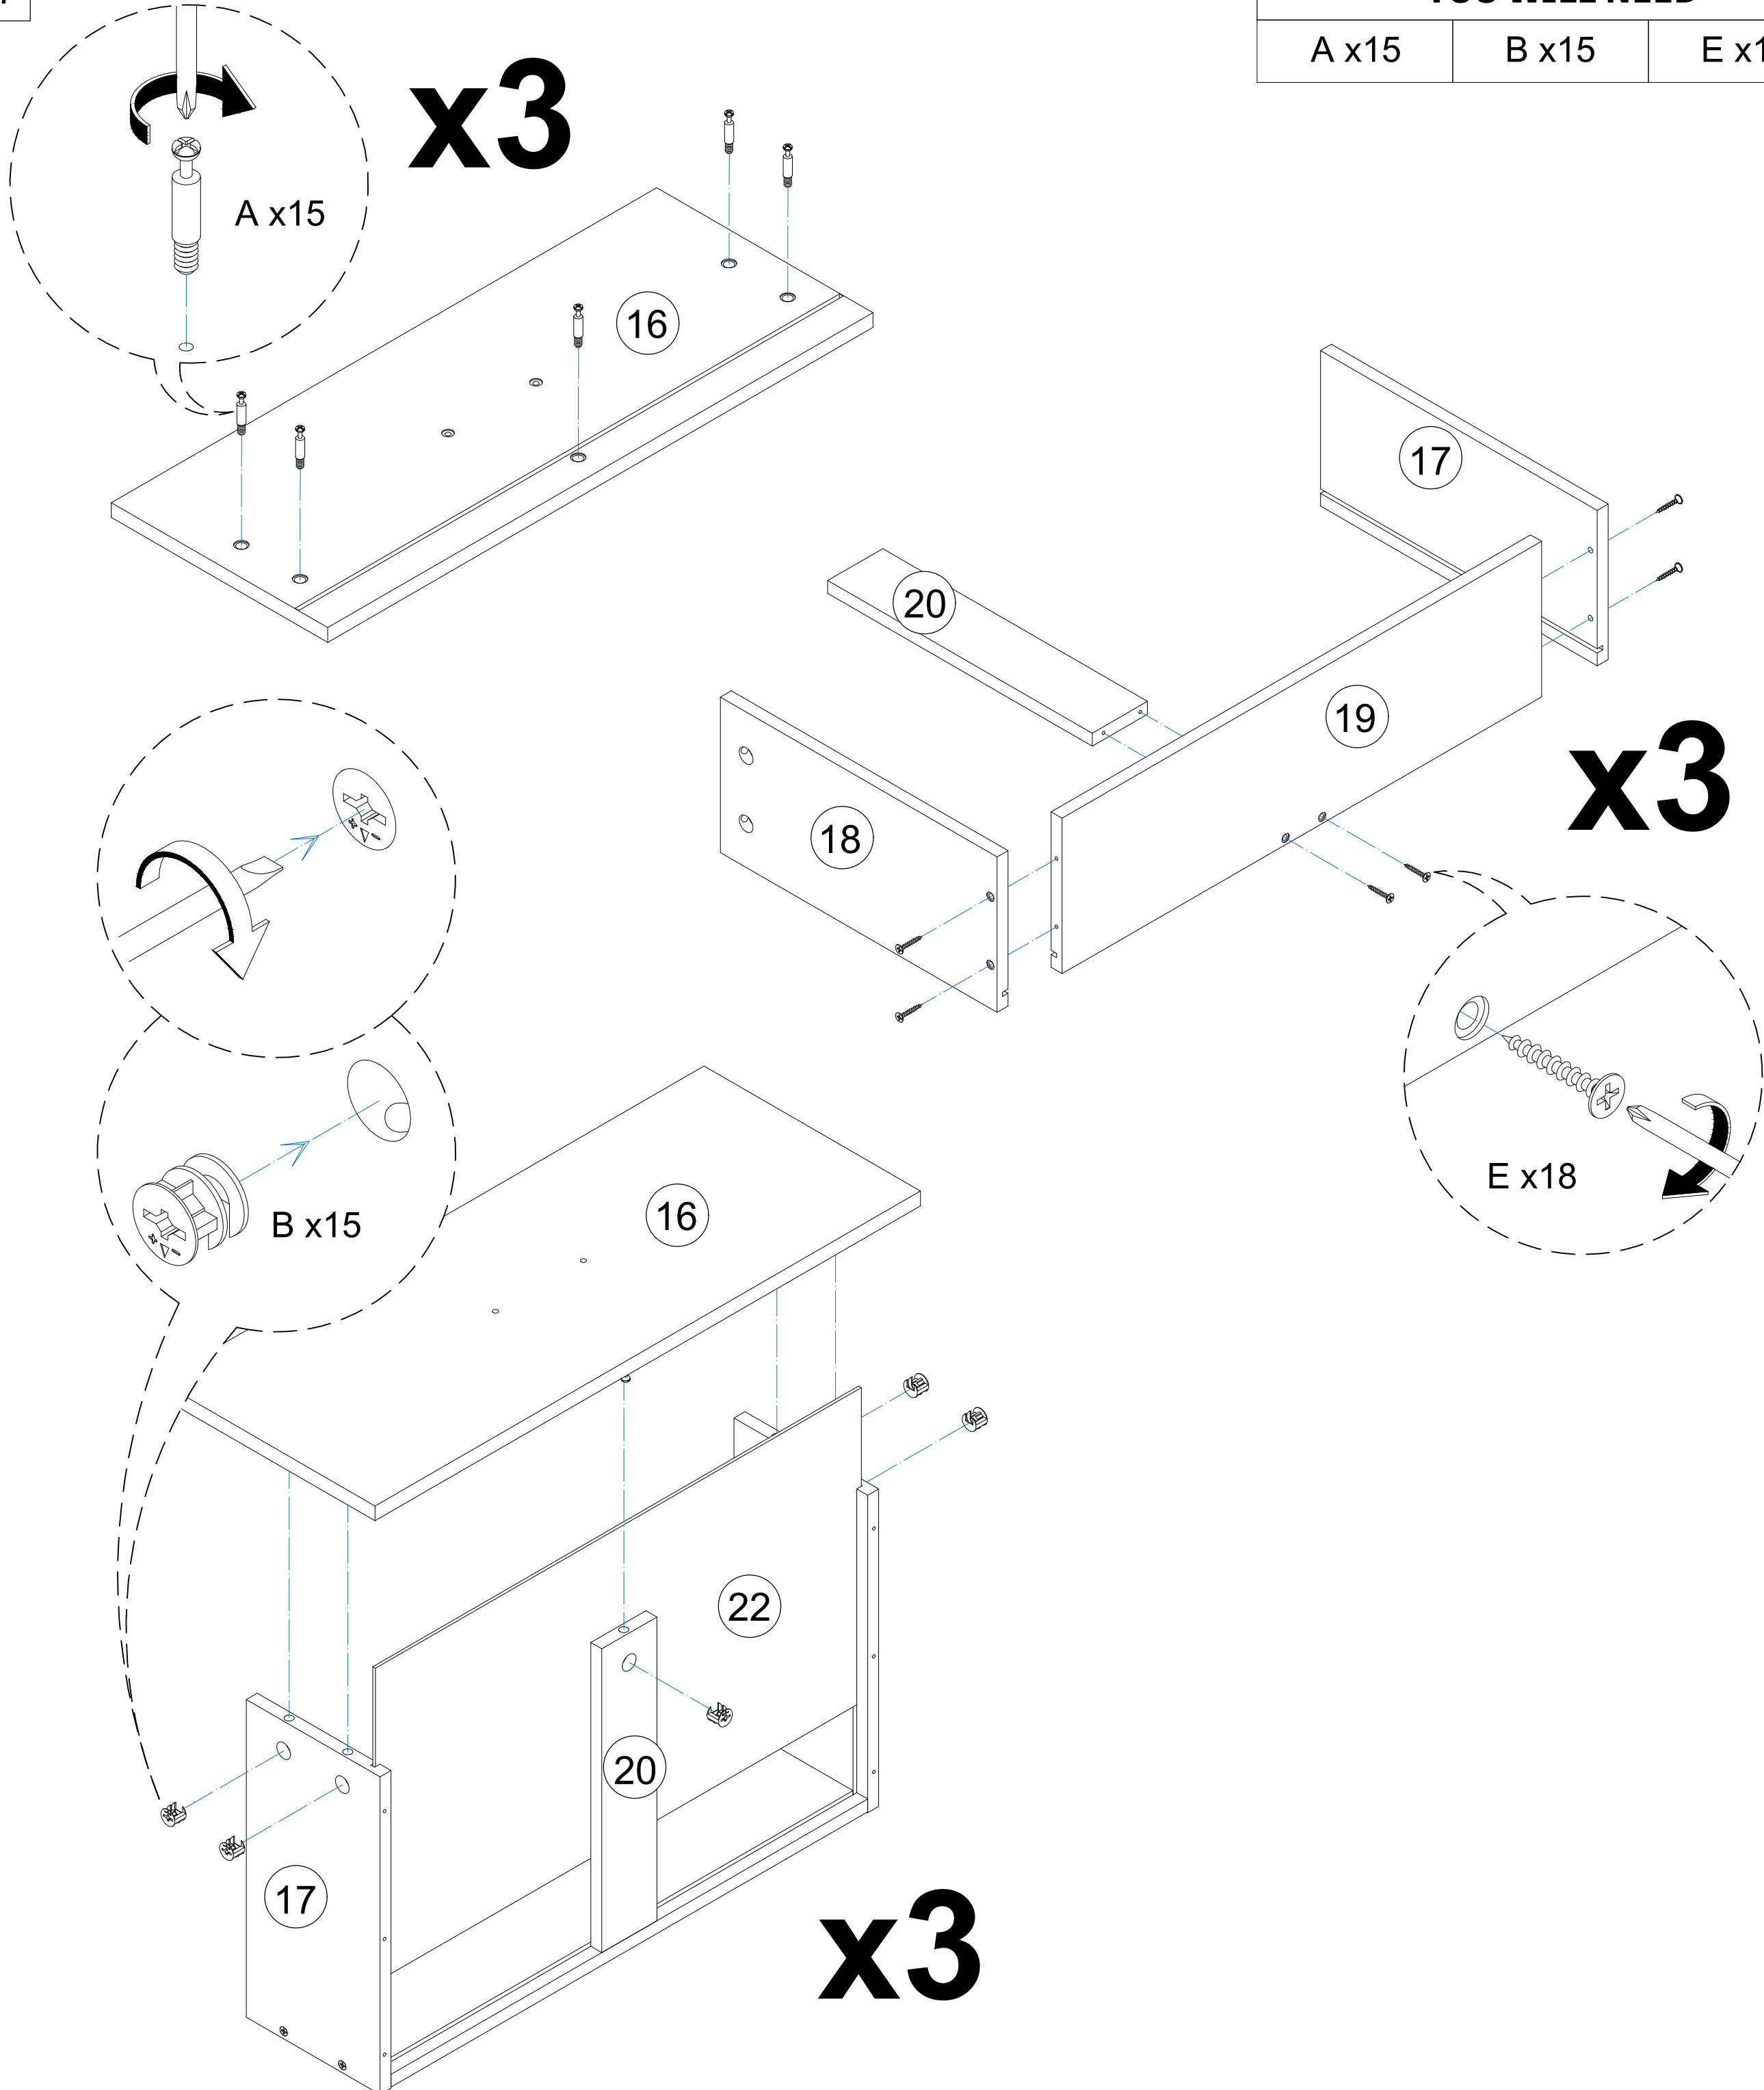
17

YOU WILL NEED

A x15

B x15

E x18



YOU WILL NEED

D x18	I x3	J x6
N.(DL) x3		N.(DR) x3

DL

x3

I x3

J x6

16

19

18

DR

D x18

18

x3

YOU WILL NEED


D x8	M x4
------	------

x2

D x8

M x4

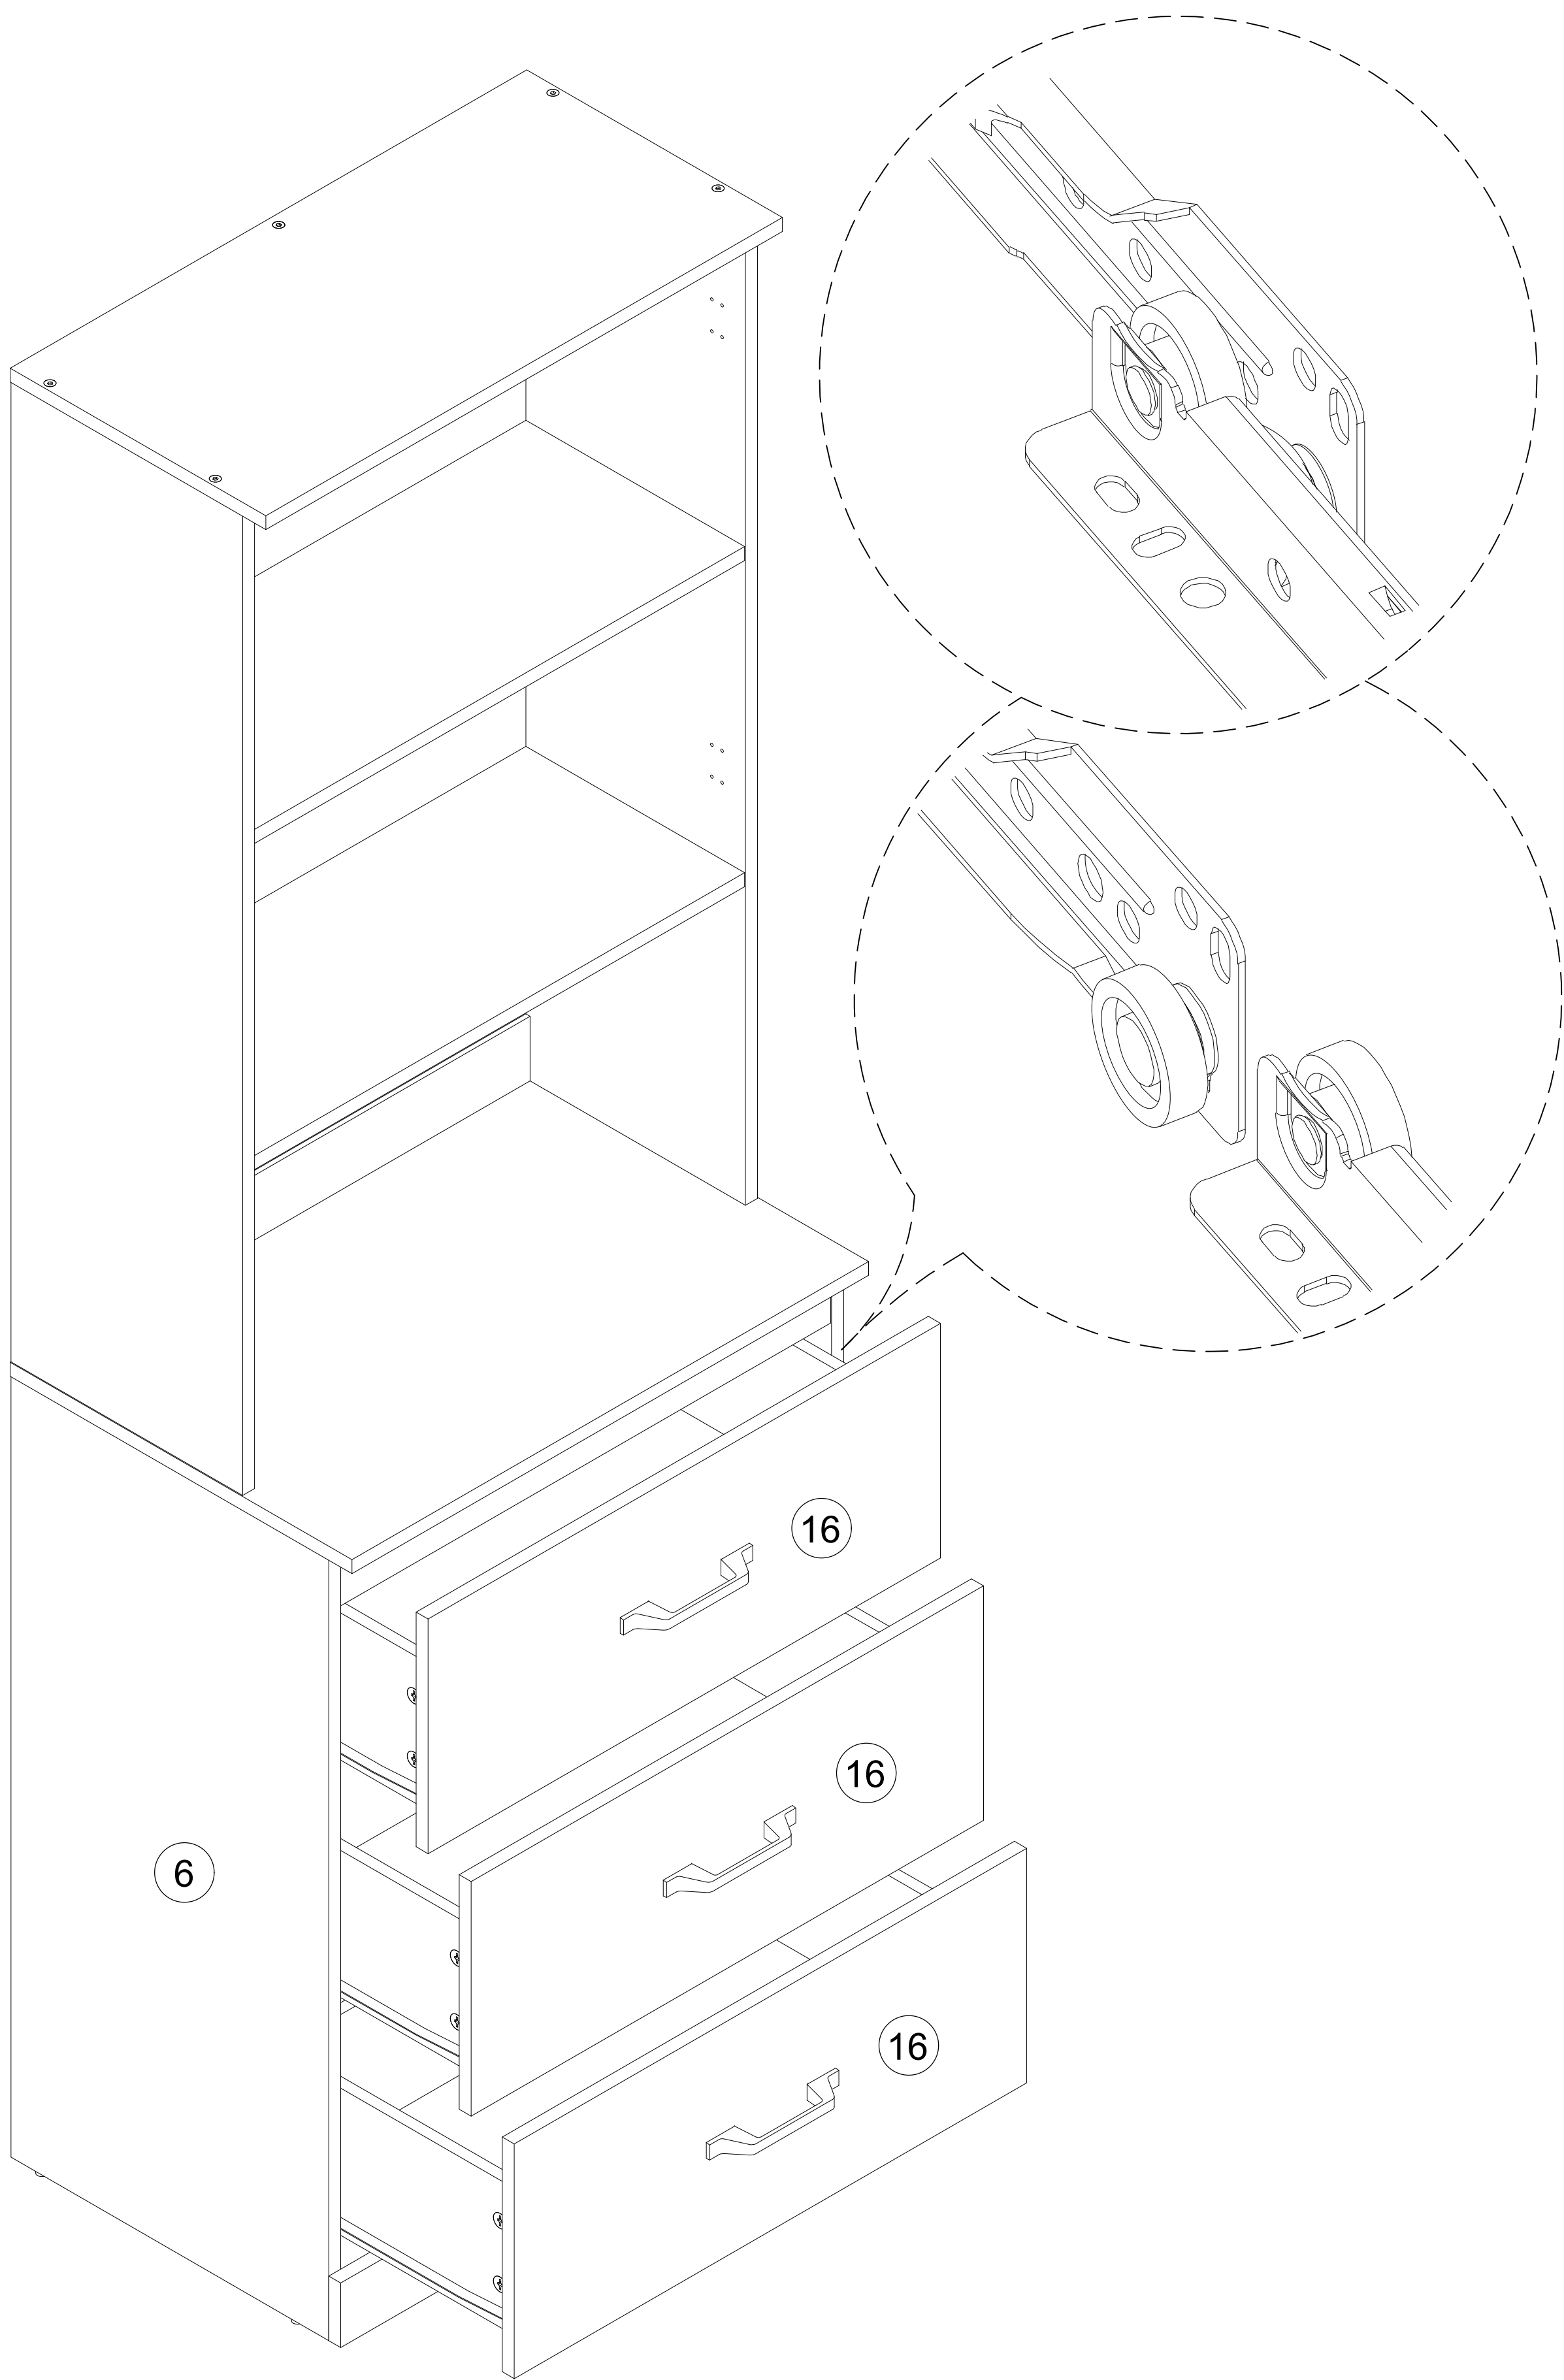15




YOU WILL NEED

D x8

I x1

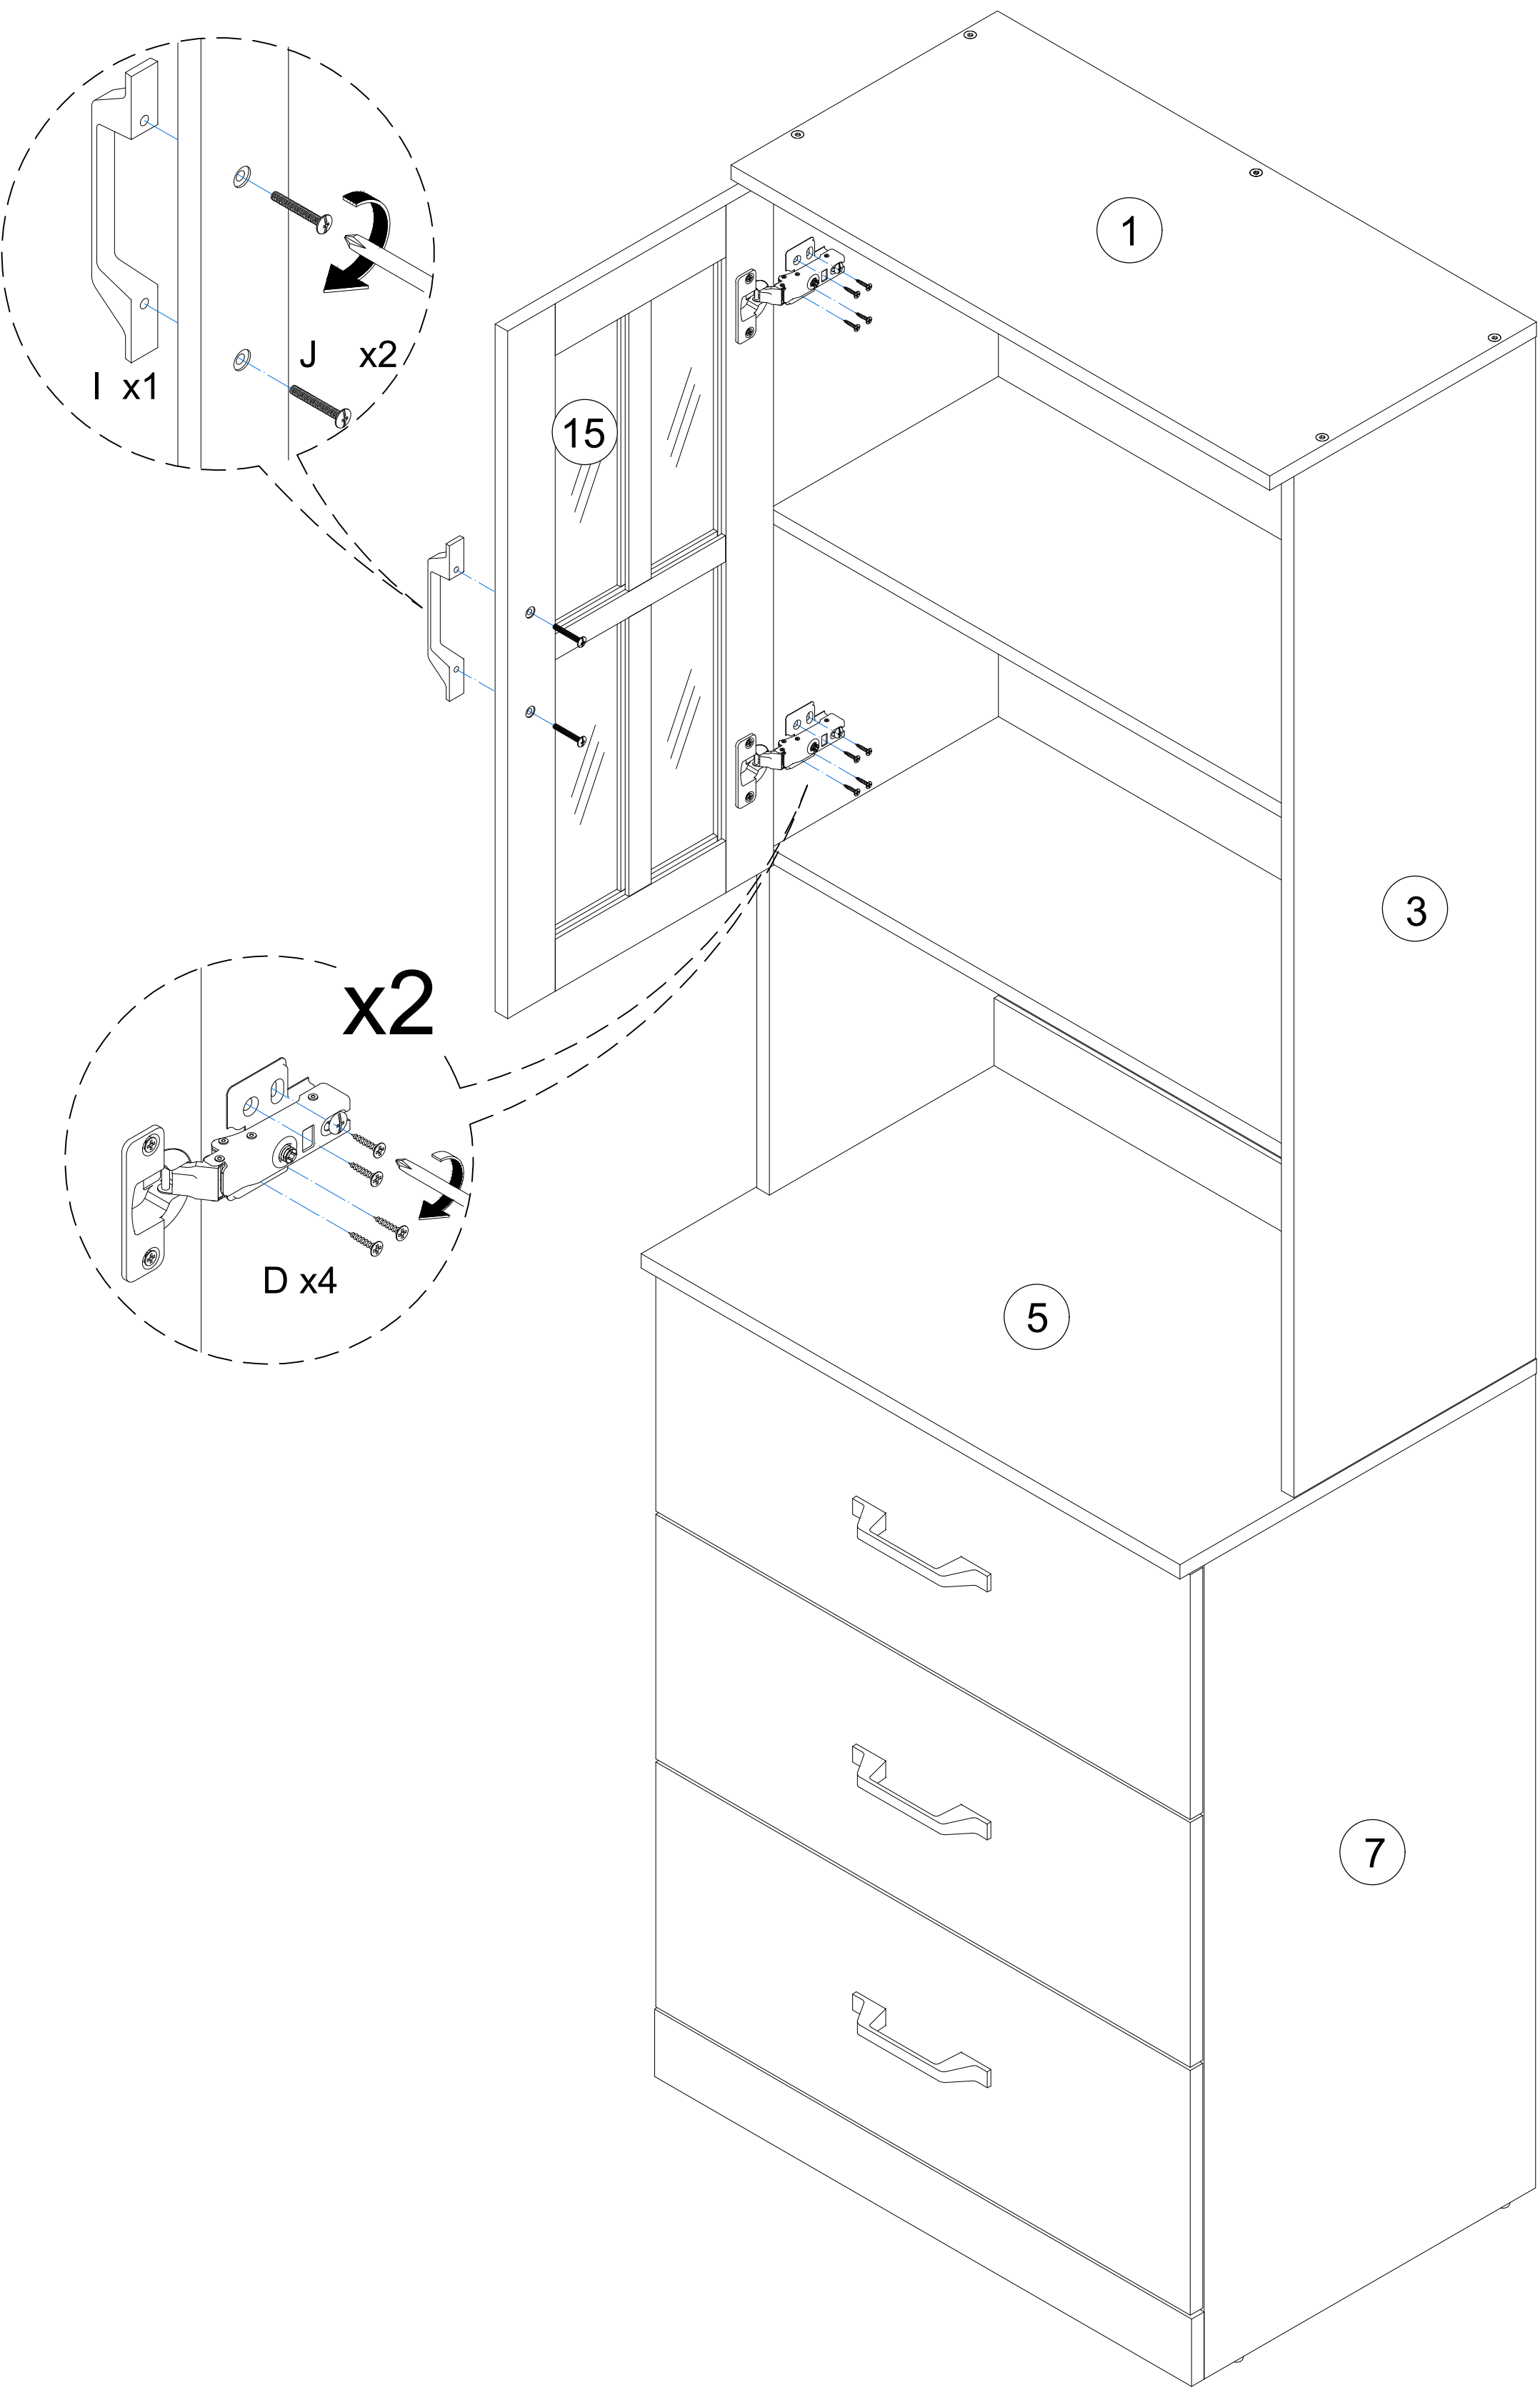J x2




YOU WILL NEED


D x8

I x1

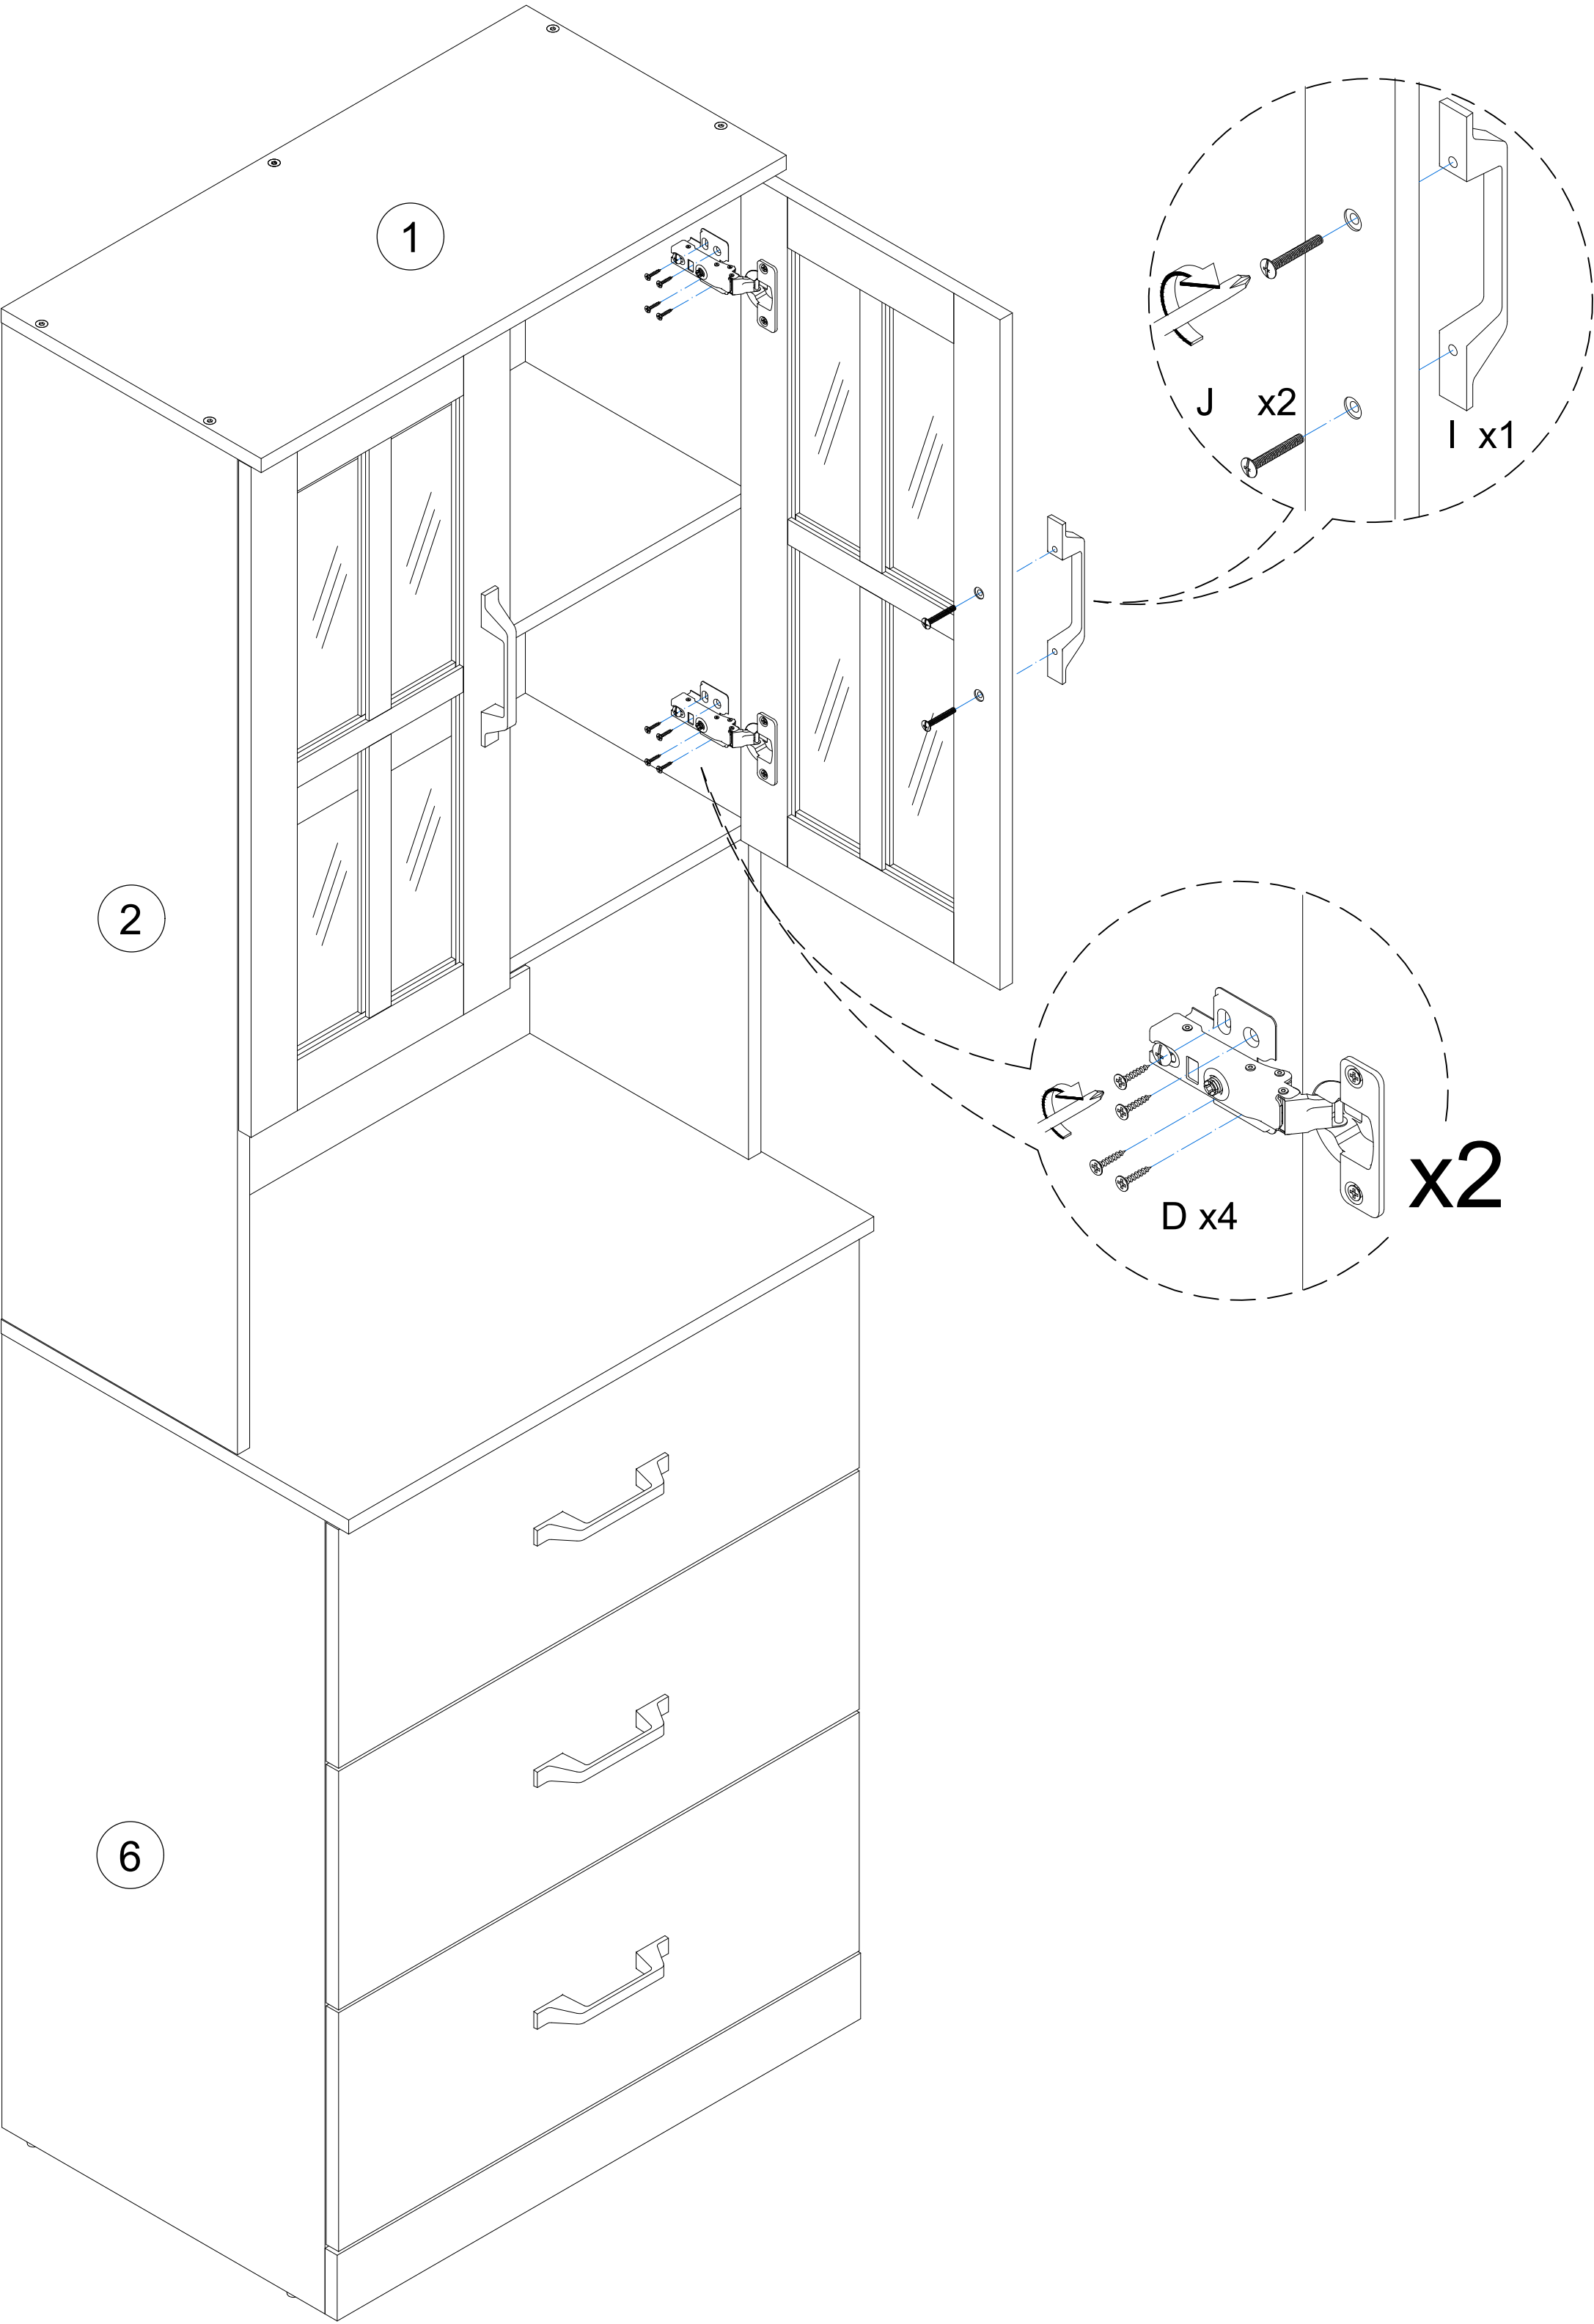J x2



YOU WILL NEED		
G.1 x20	G.2 x20	Q.1 x2
Q.2 x2		Q.3 x2

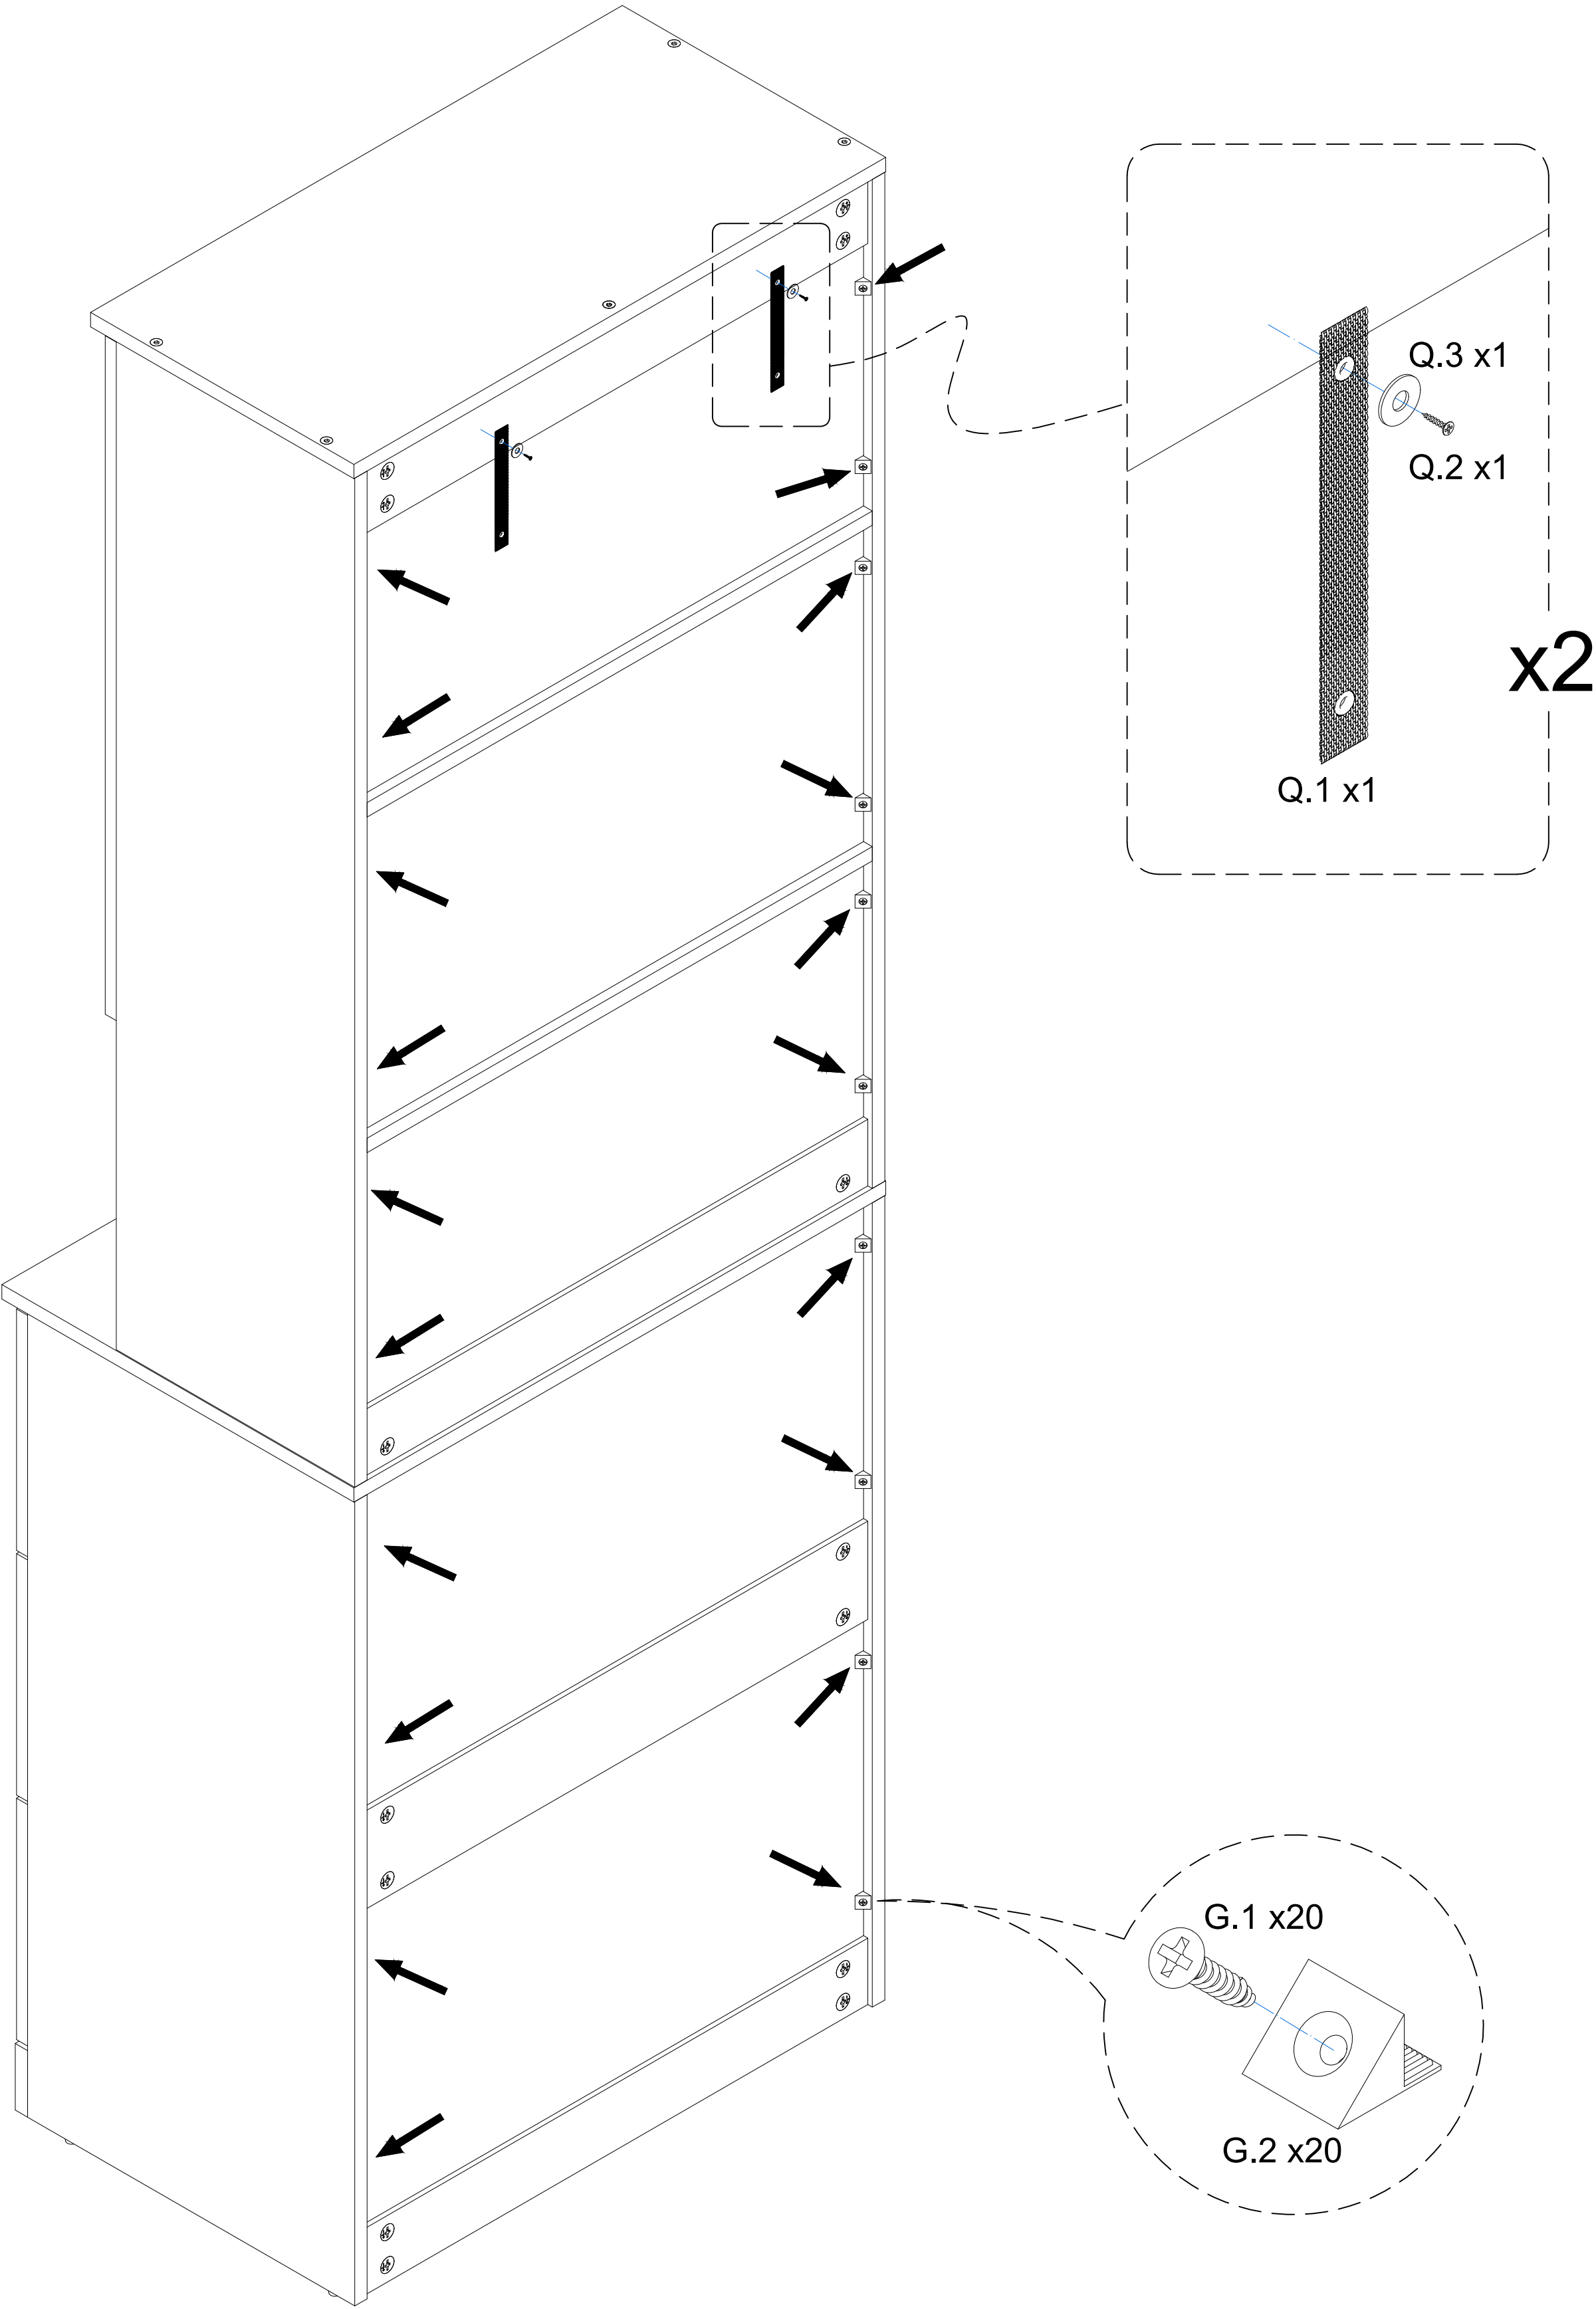

YOU WILL NEED

P.1 x2

P.2 x2

Q.3 x2

Q.1 x1

Q.3 x1

P.2 x1

x2

WALL

Mark the
hole drilling
location

I x2

WALL

Drill a hole

II x2

WALL

P.1

Use a hammer
to close
anchor (P.1)


III x2

Step1: determine the location of the anti-overturning on the wall and then mark the position after confirming the product has been balanced.
Step 2: drill the hole and then fixed the anchor (**P1**) on the wall
Step 3: use screw (**P2**) to fix the strap (**Q1**), and washers (**Q3**) on the wall


***IF THE DOOR ARE NOT BALANCE**

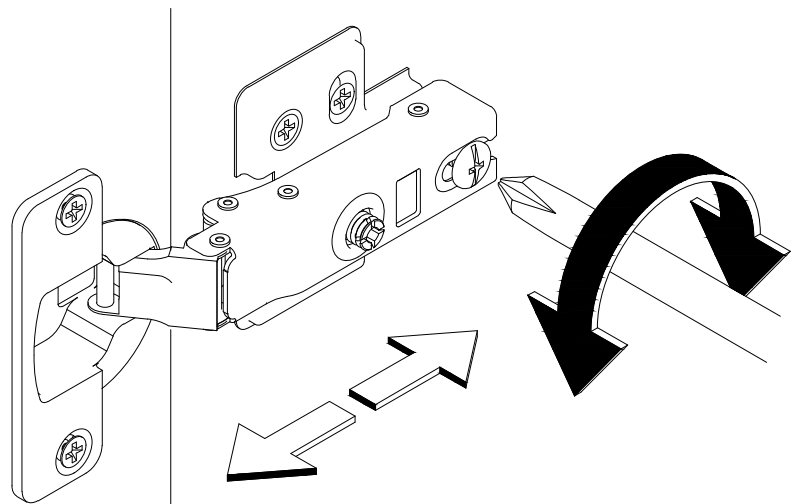Before
adjustment


After
adjustment




Adjust the
door to run
back and
forth

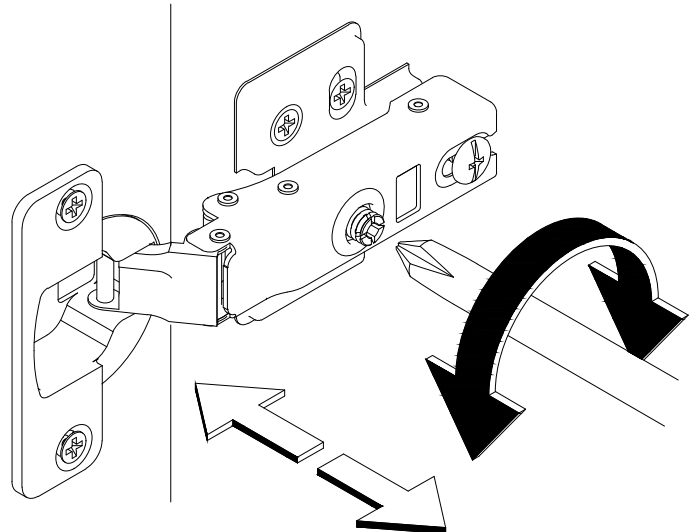

Adjust the
door left
and right

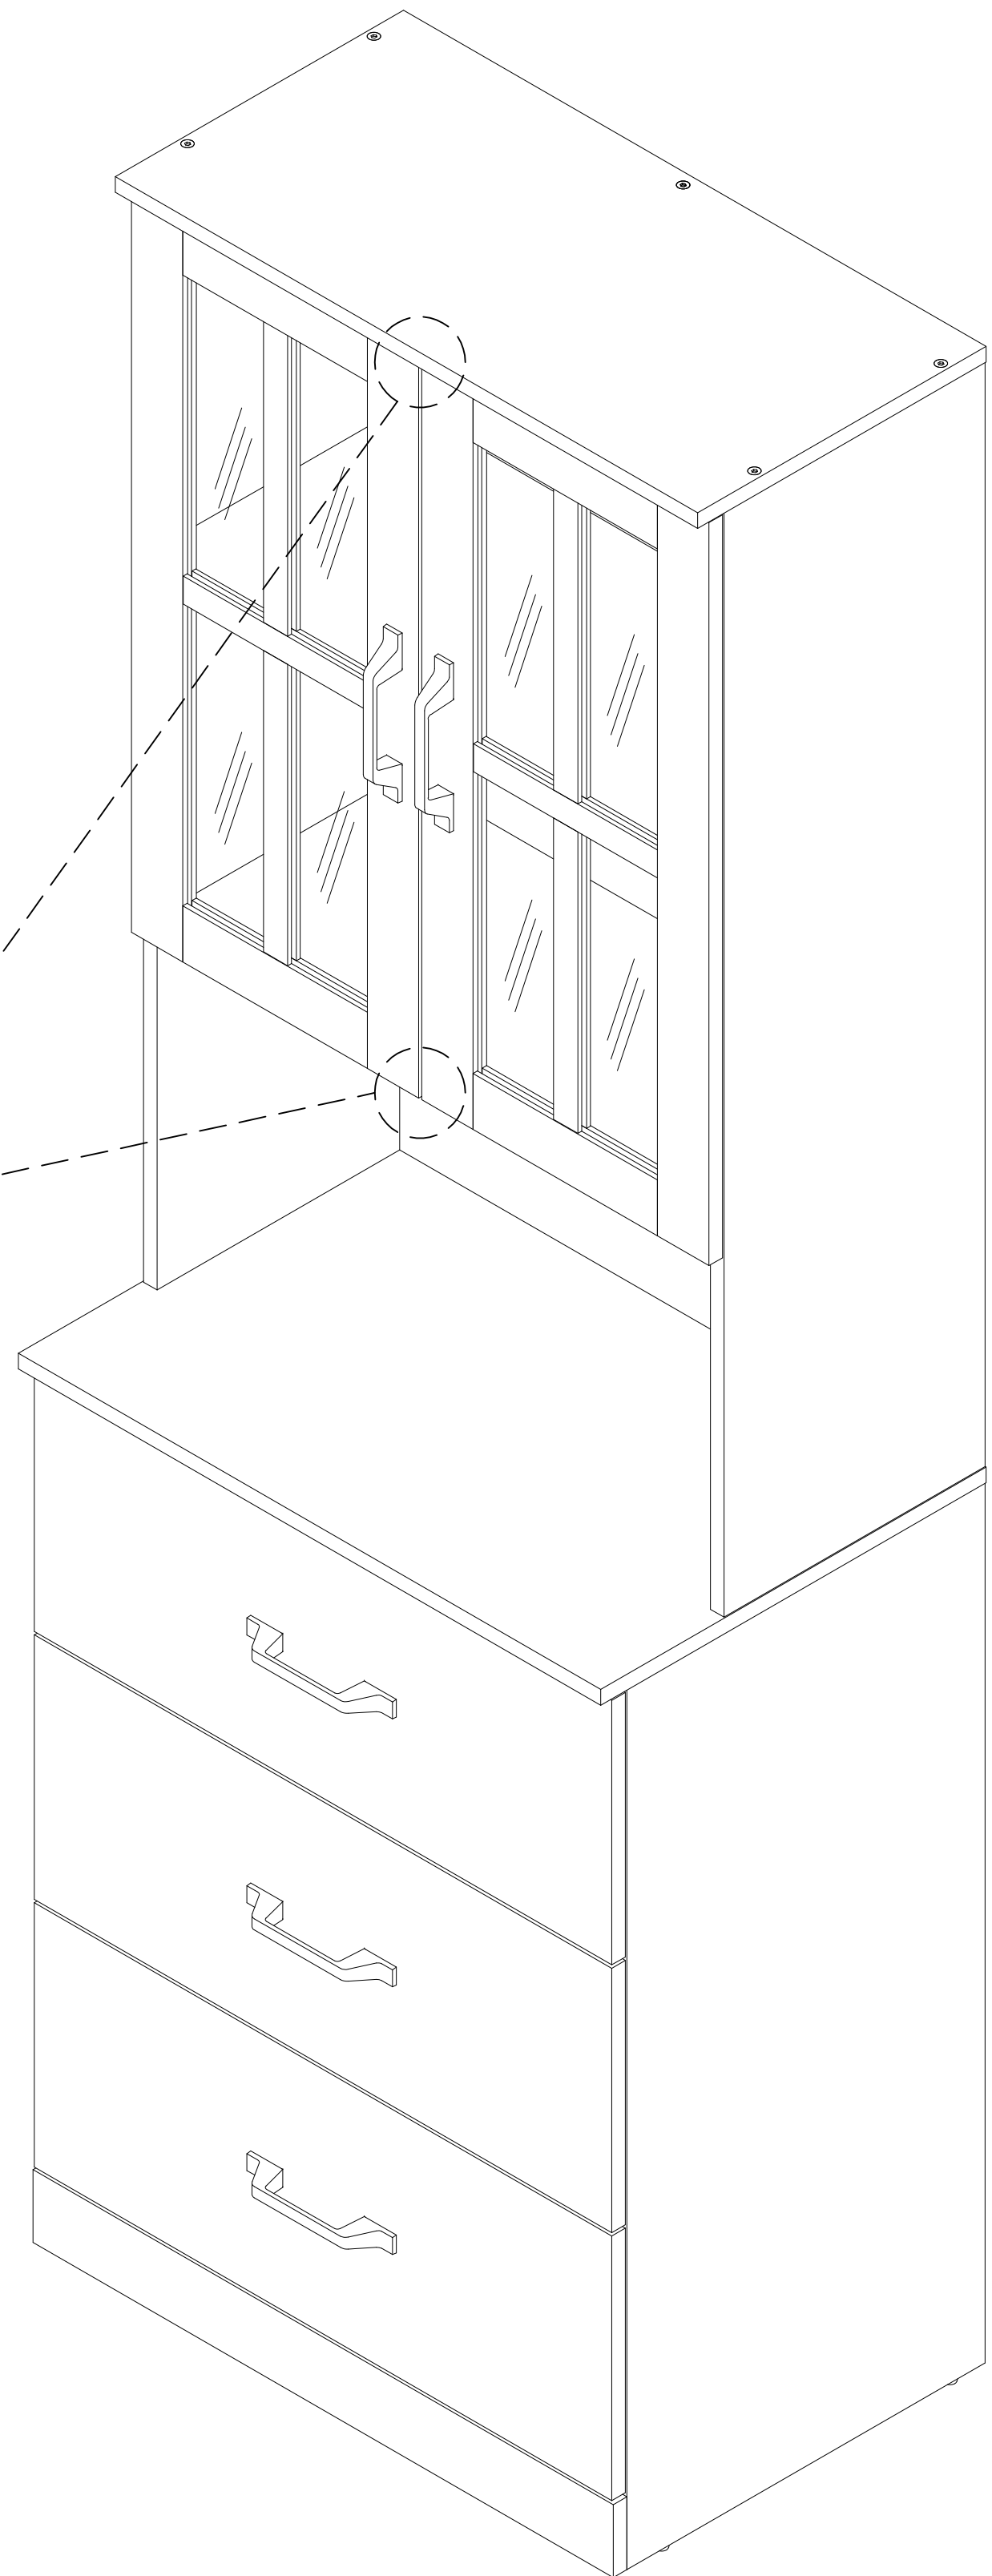

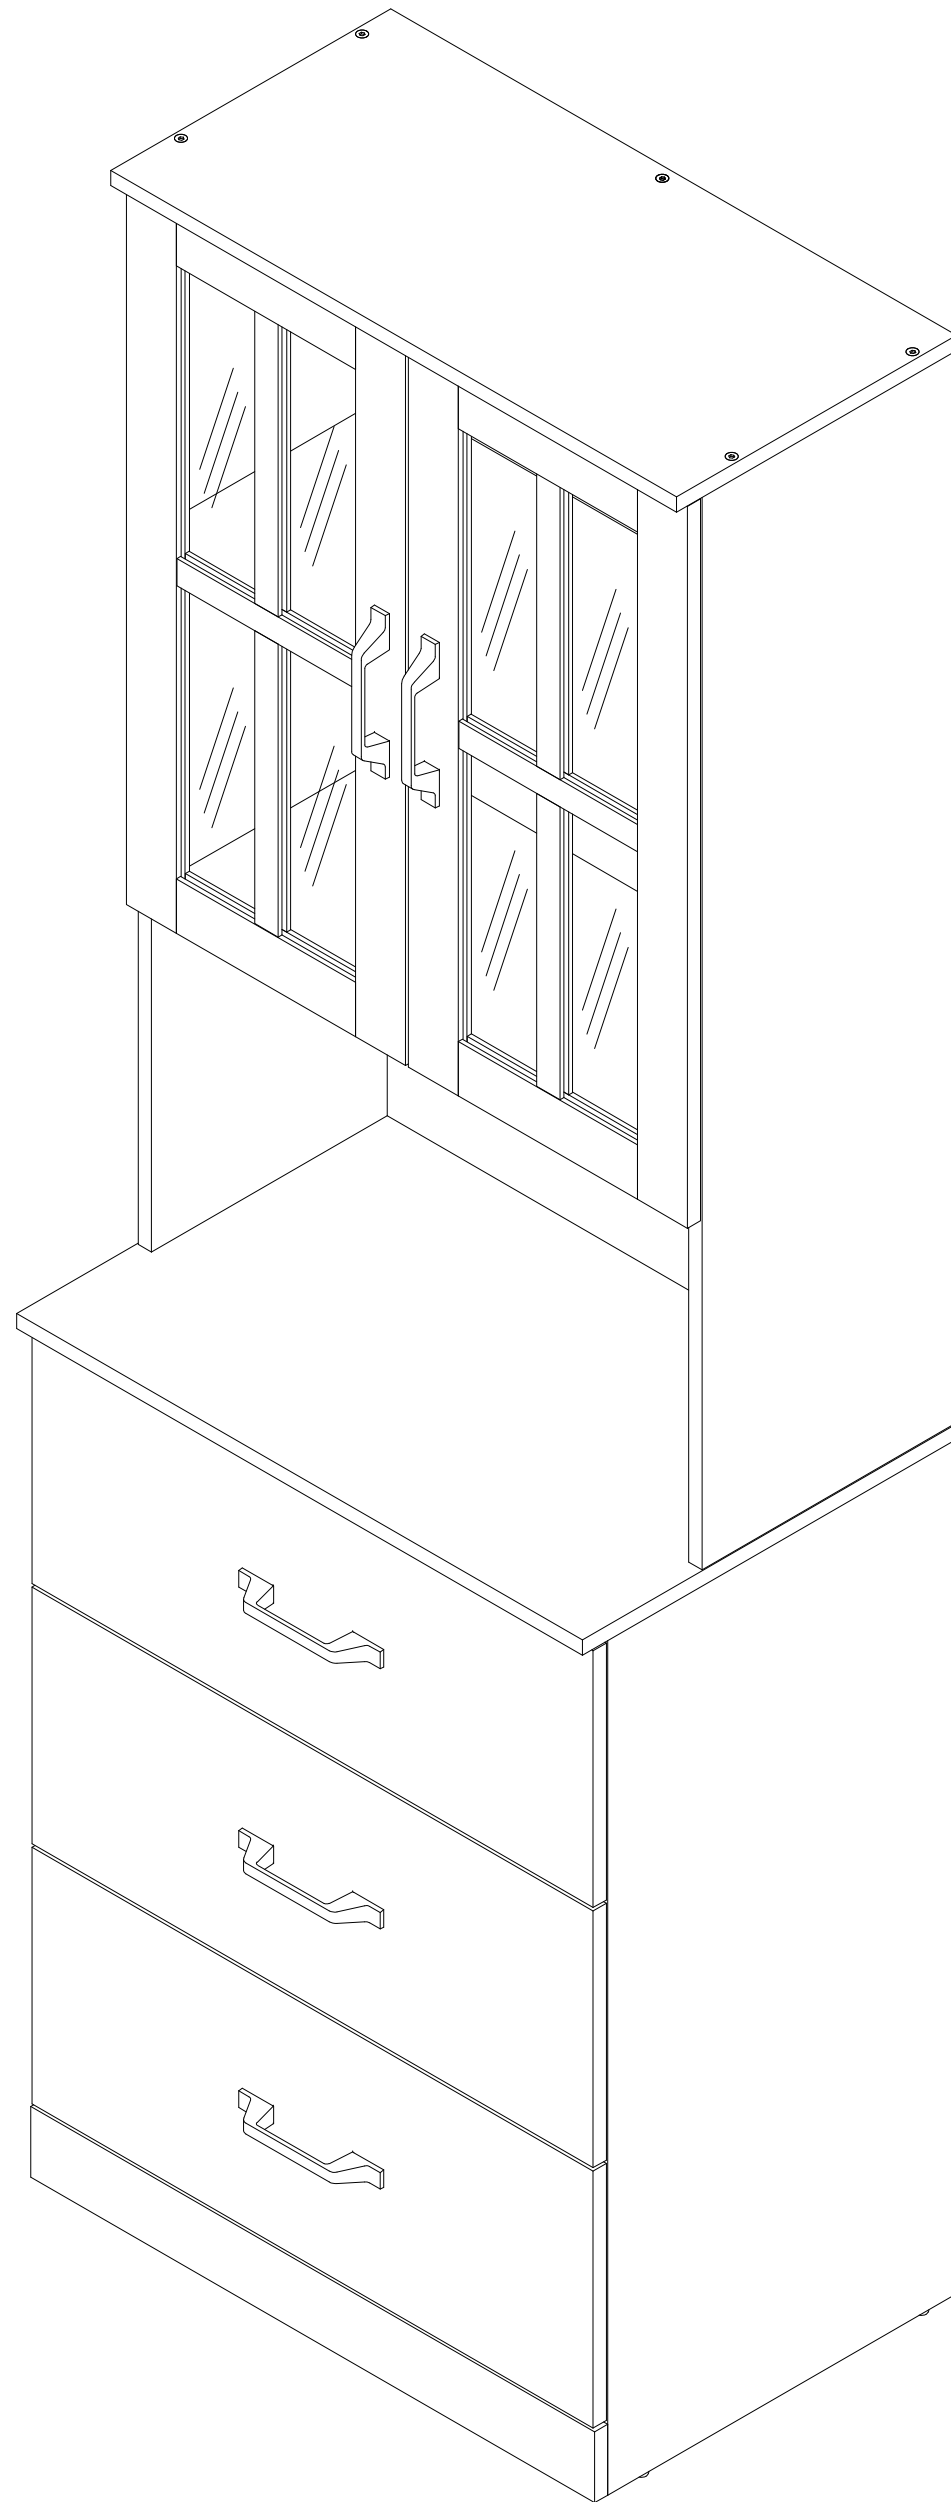

GUARANTEE

Storage Cabinet offers a **90-days** warranty that begins on the date of the original purchase and applies to problems caused by the manufacturer. For questions, assistance, or support, please contact the Customer Service by e-mail with your order number and details. We will send you further information about the solution.