


Assembling Instruction

Generating Drawings

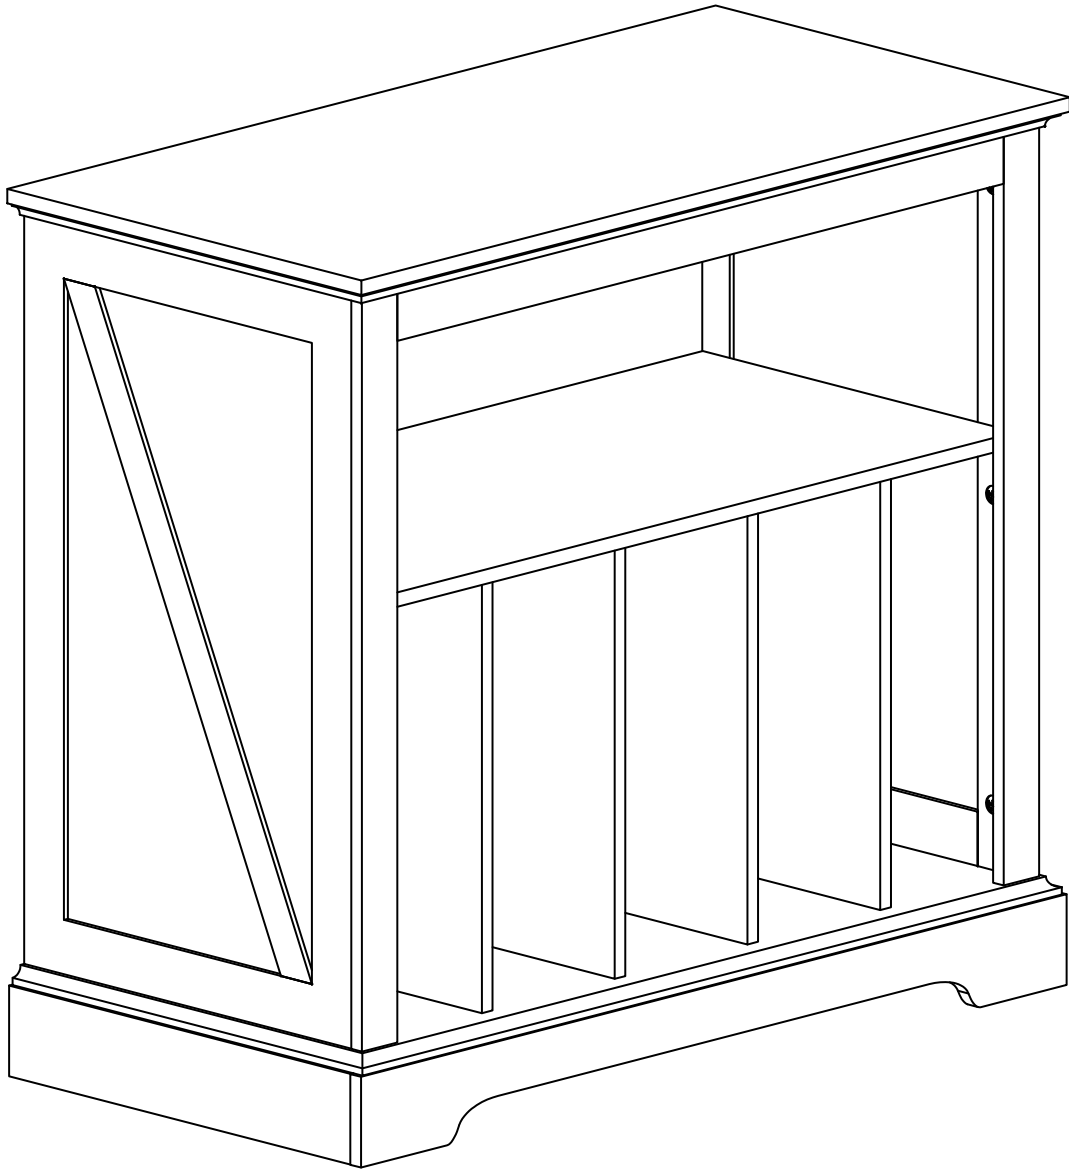


ATTENTION

If there is any missing, please kindly send us messages to let us know the name of missing part regarding to the first page of instructions. We will send replacement to you asap. We are concerned about each customer's experience, if there is any loss or damage, please contact us at any time, we will provide effective solutions.


Please attach your Oder ID so that we can assist you better.

General Assembly Guidelines

- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- VI. A Phillips head screwdriver is required for the assembly of this product .



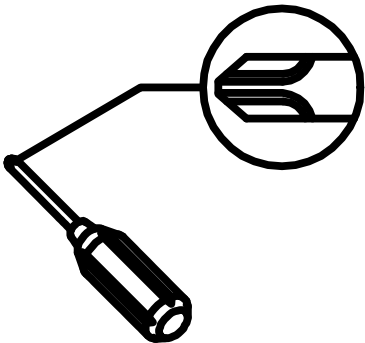


- VII. Power tools should not be used to assemble this product .

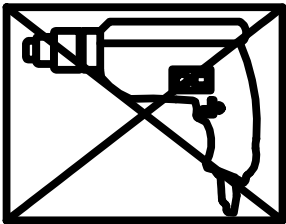


CAM LOCK/BOLT FASTENING INTRODUCTION

(You will use it during assembly)

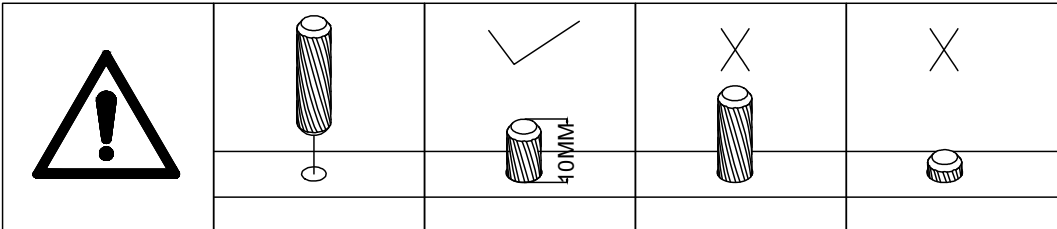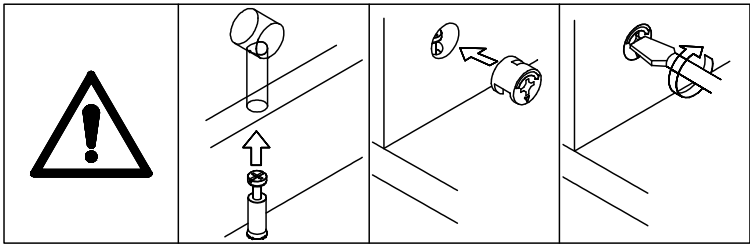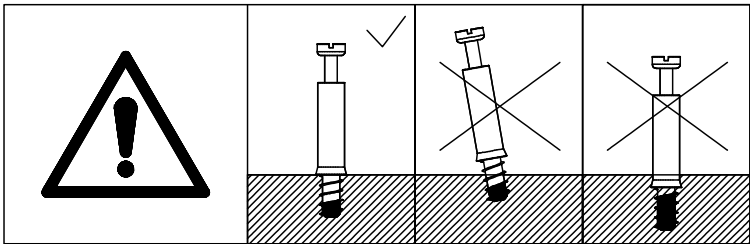

Hardware Provided

A



X28+3

B



X28+3

C



X31+3

D



X12+1

E




X9+1

F



X18+2

G



X8+1

H



X8+1

I



X22+2

J



X2+1


K



X1


Parts Identification

1

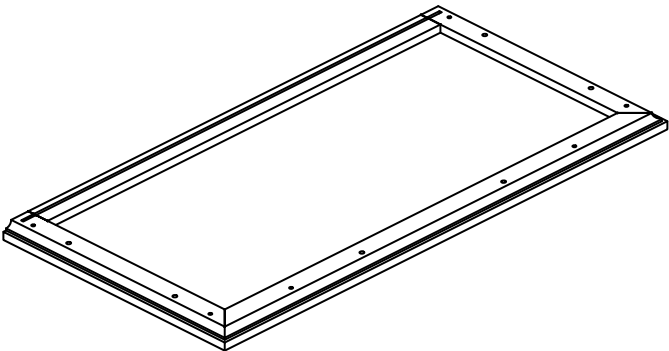


X 1

2

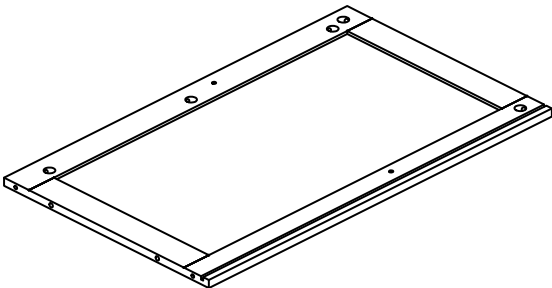


X 1

3

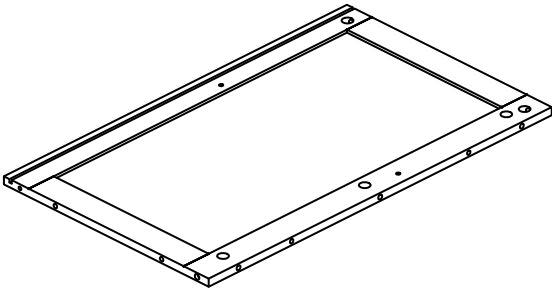


X 1

4

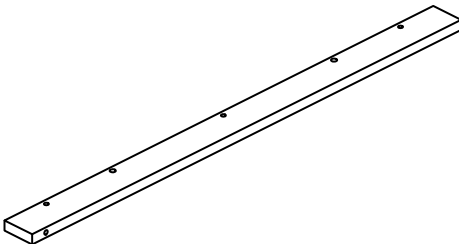


X1

5

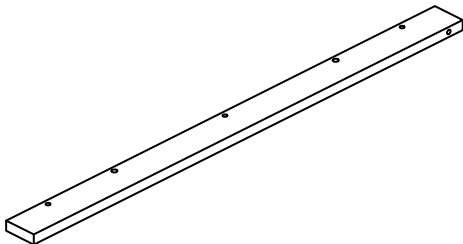







X 1

6

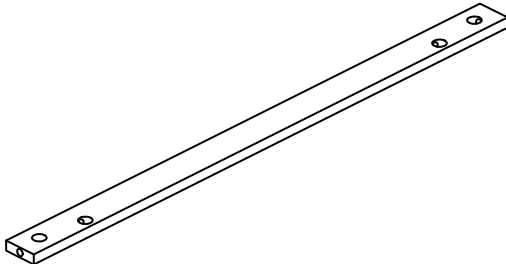


X1

Parts Identification

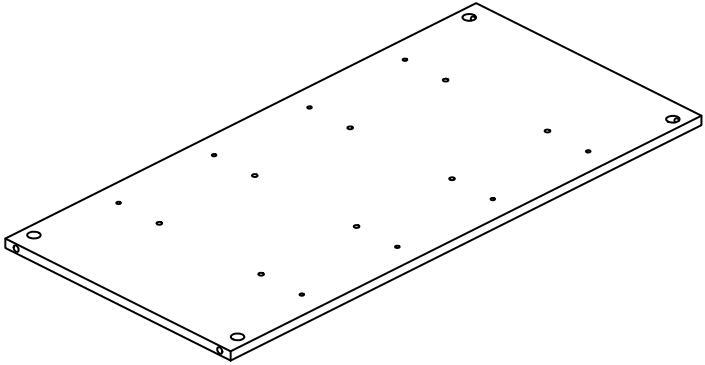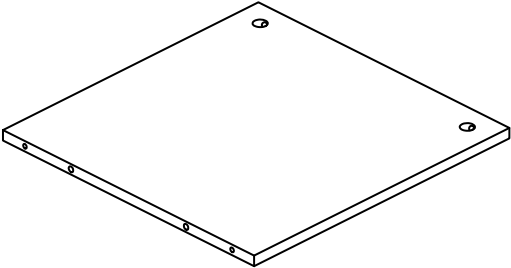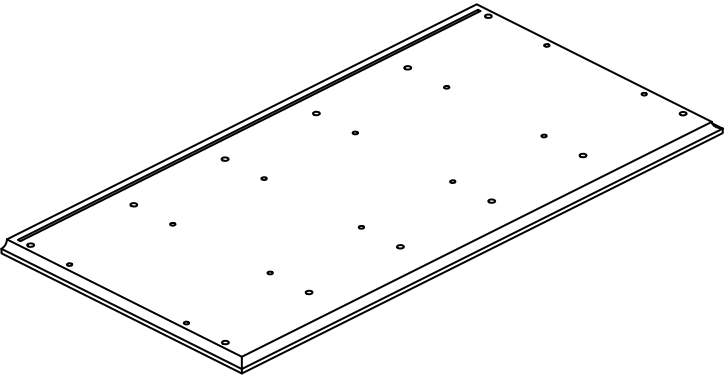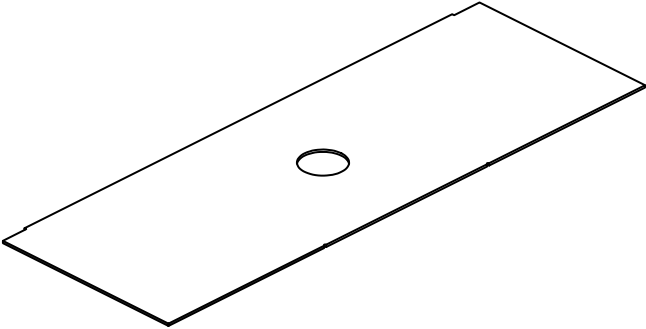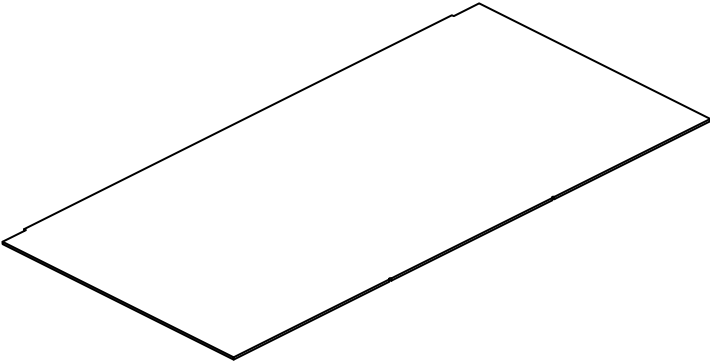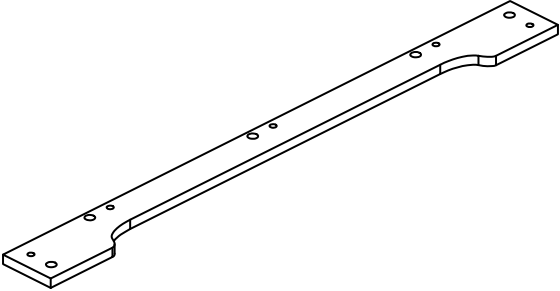7  X 1	8  X4
9  X1	10  X1
11  X 1	12  X 1


Parts Identification

13

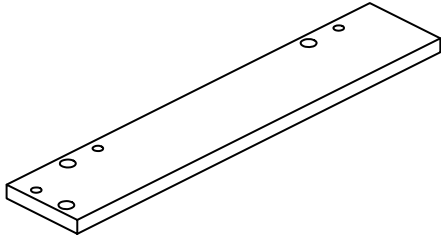


X 1

14

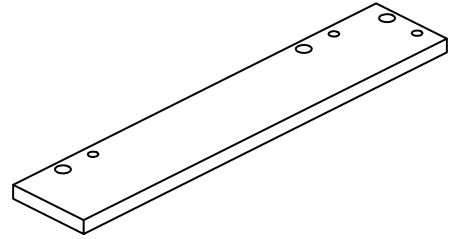


X 1

15

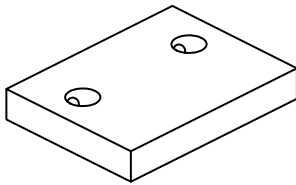

X 1


Exploded View

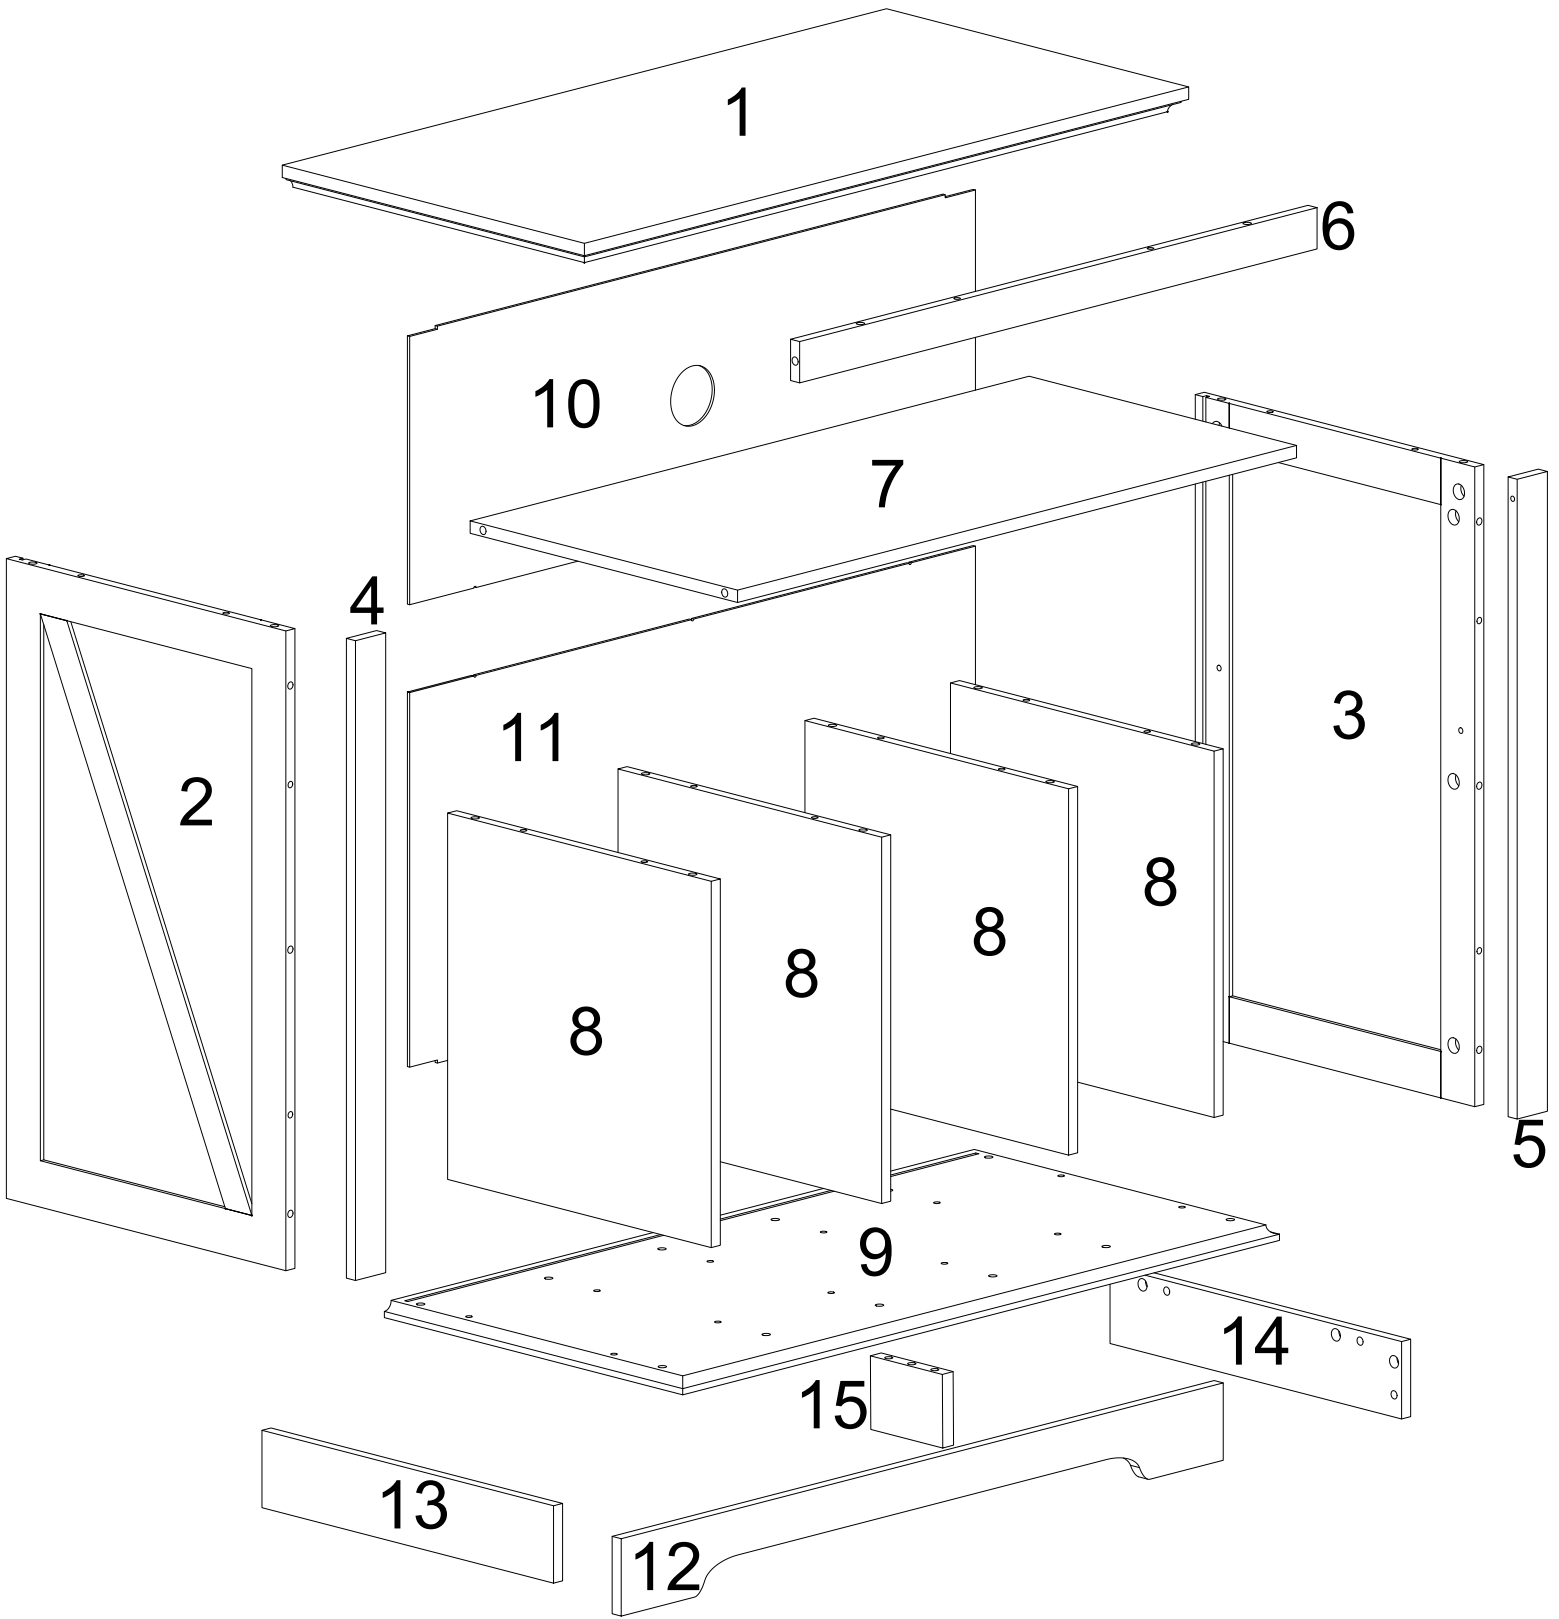

Step 1

A


x8

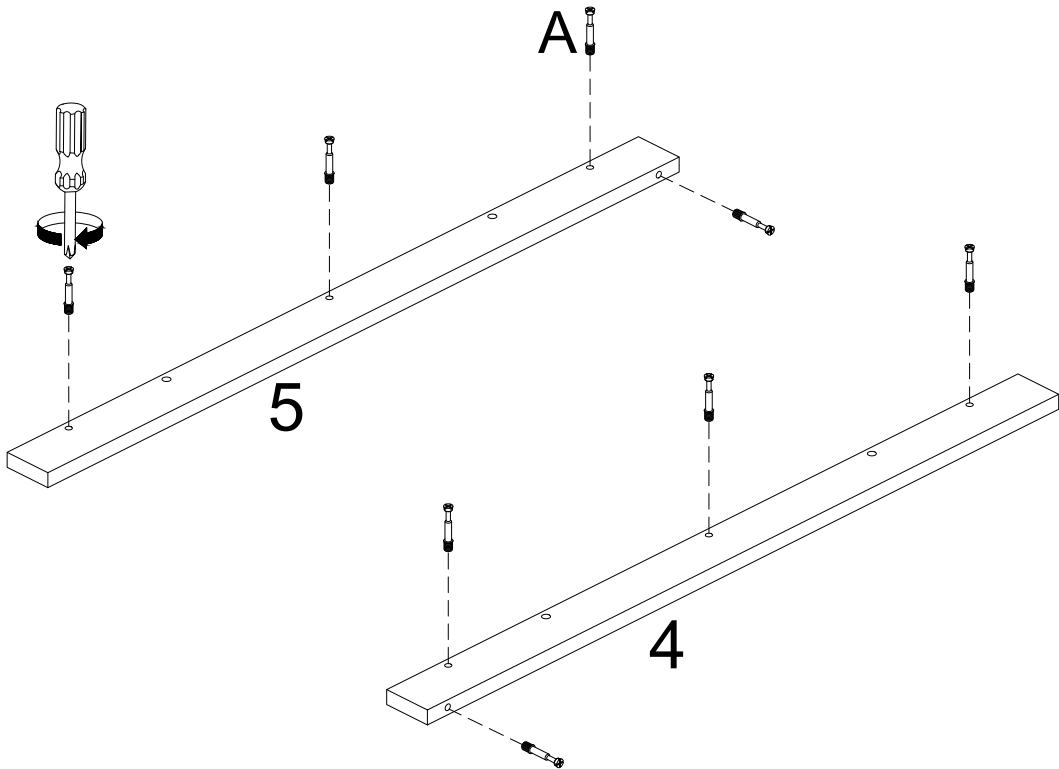

Step 2

A


x8

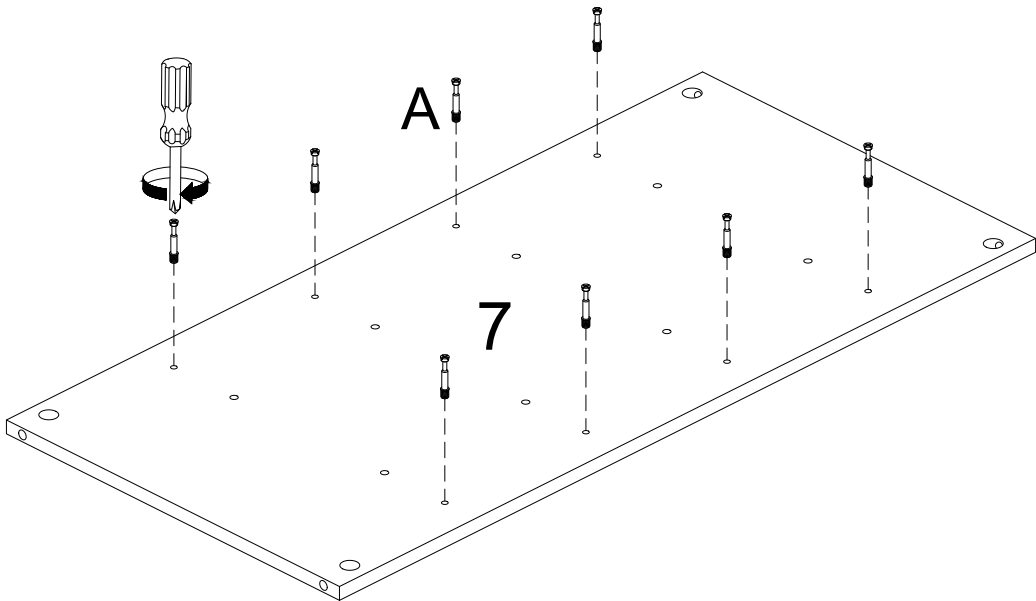

Step 3

A


x4

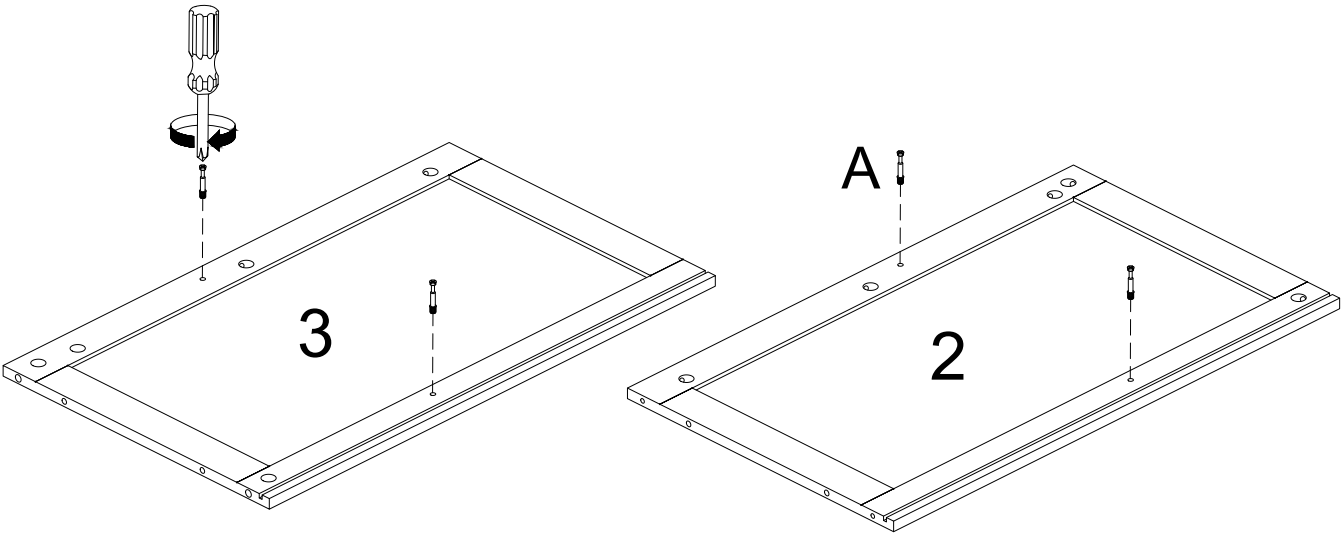

Step 4

A

x6

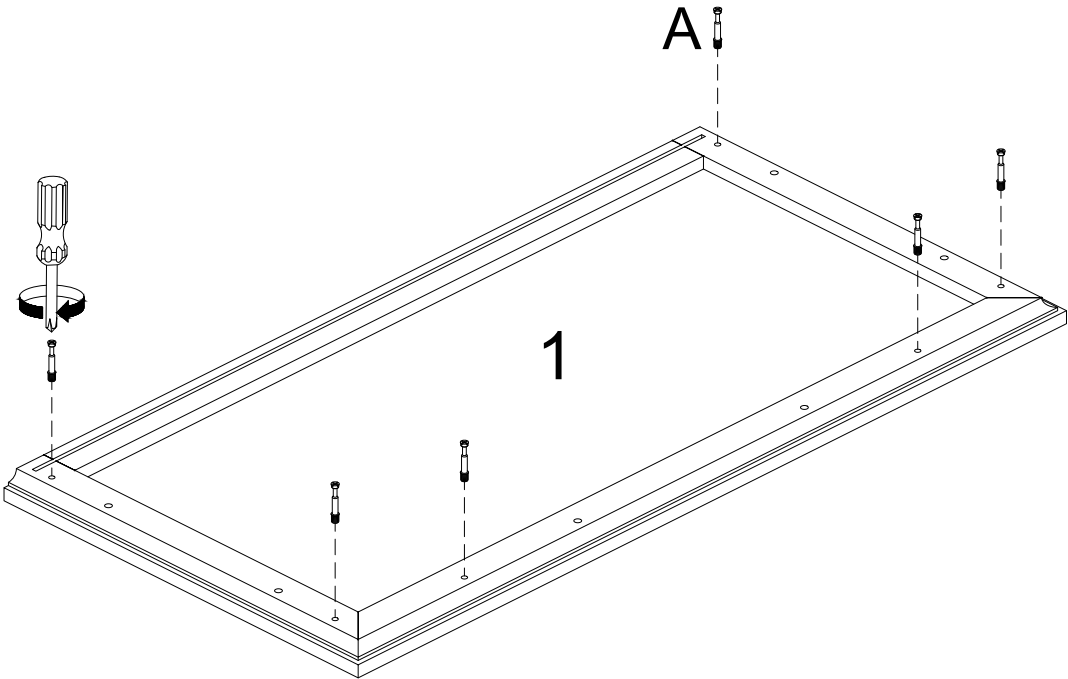


Step 5

Attach #4to #2, Pay attention to the direction of # 4 board


Attach #5to #3,Pay attention to the direction of # 5 board


B	C
	 Ø6*30mm
x6	x4

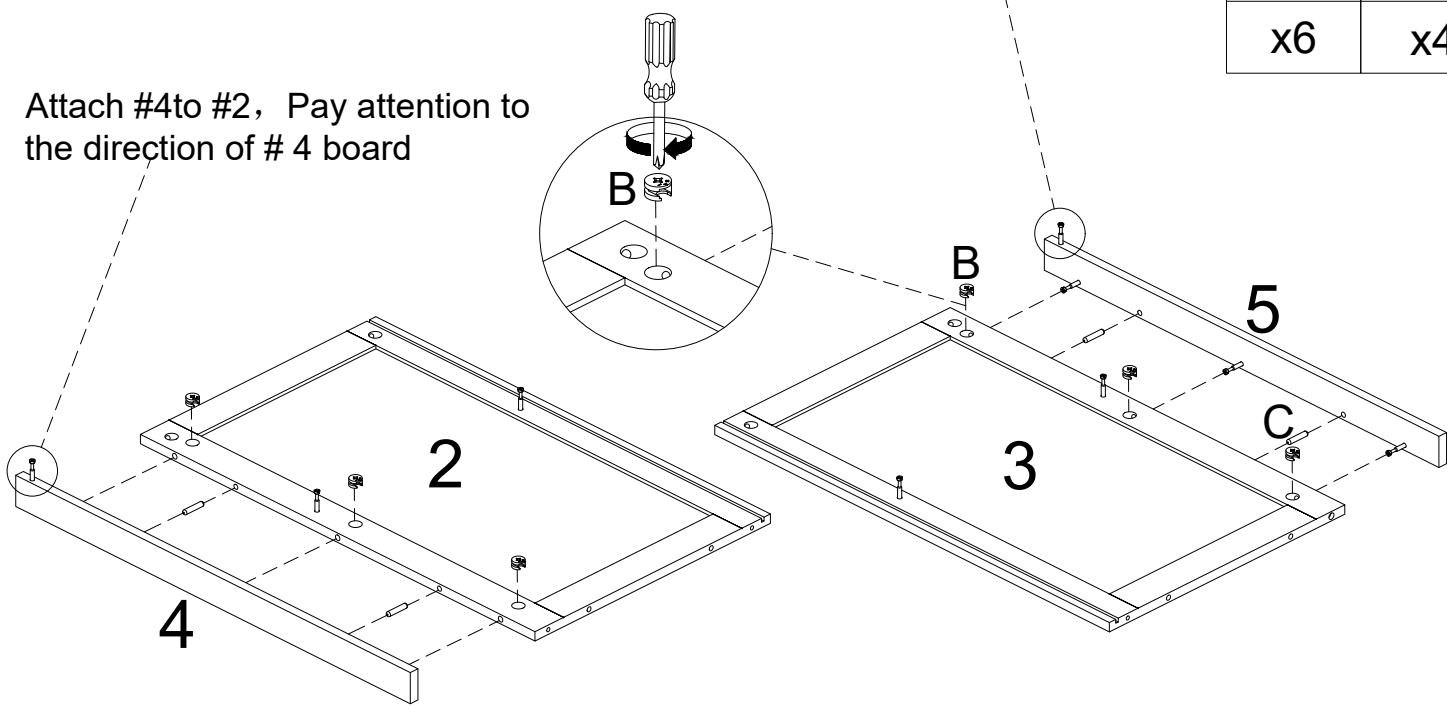

Step 6


NOTE: The two holes on the side of #7 are facing upwards.

B	C
	 Ø6*30mm
x8	x8

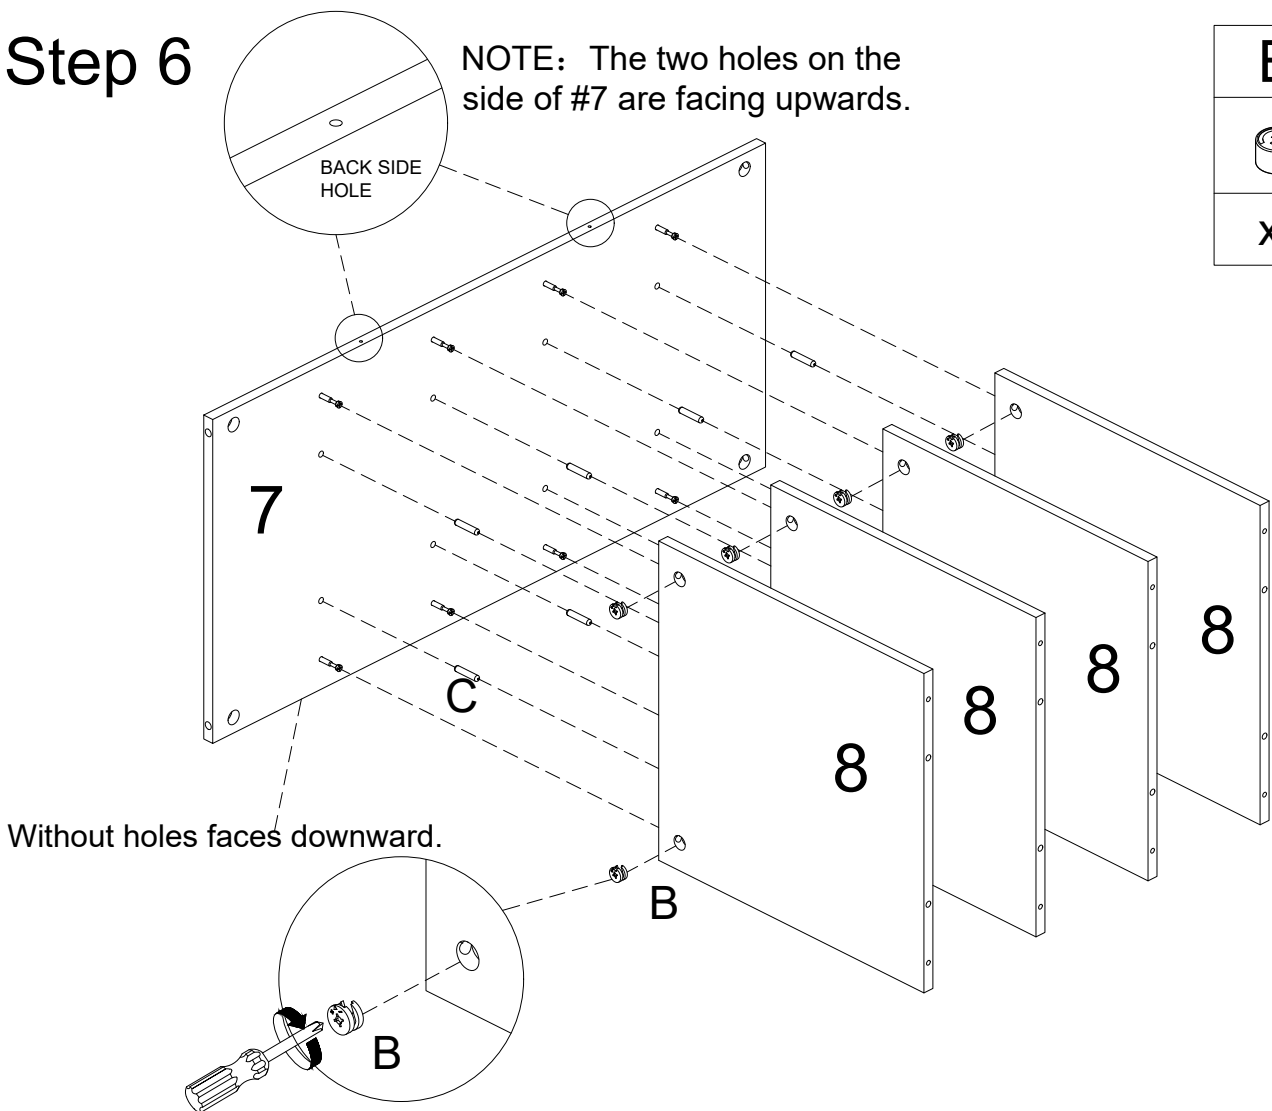

Step 7

The groove on board #2 faces upward.

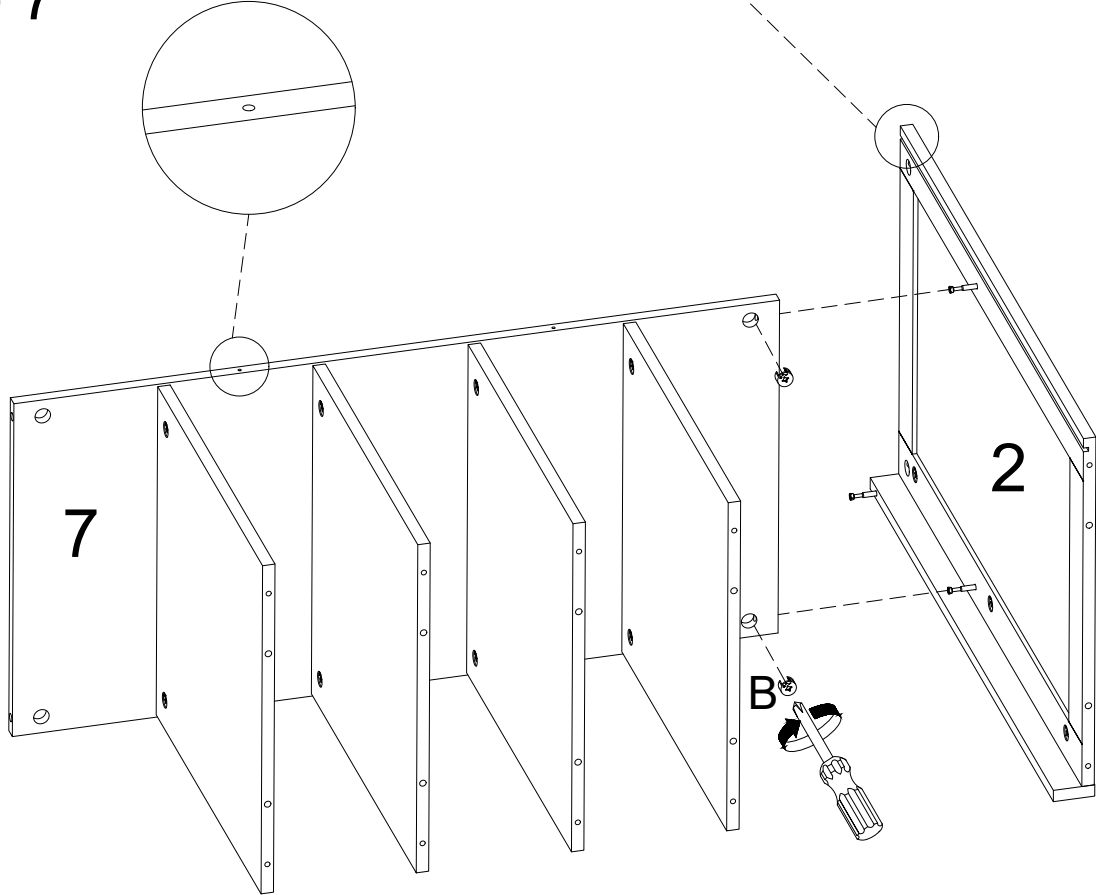


B



x2

Step 8

Note: Four holes on side of board 6 should be outward

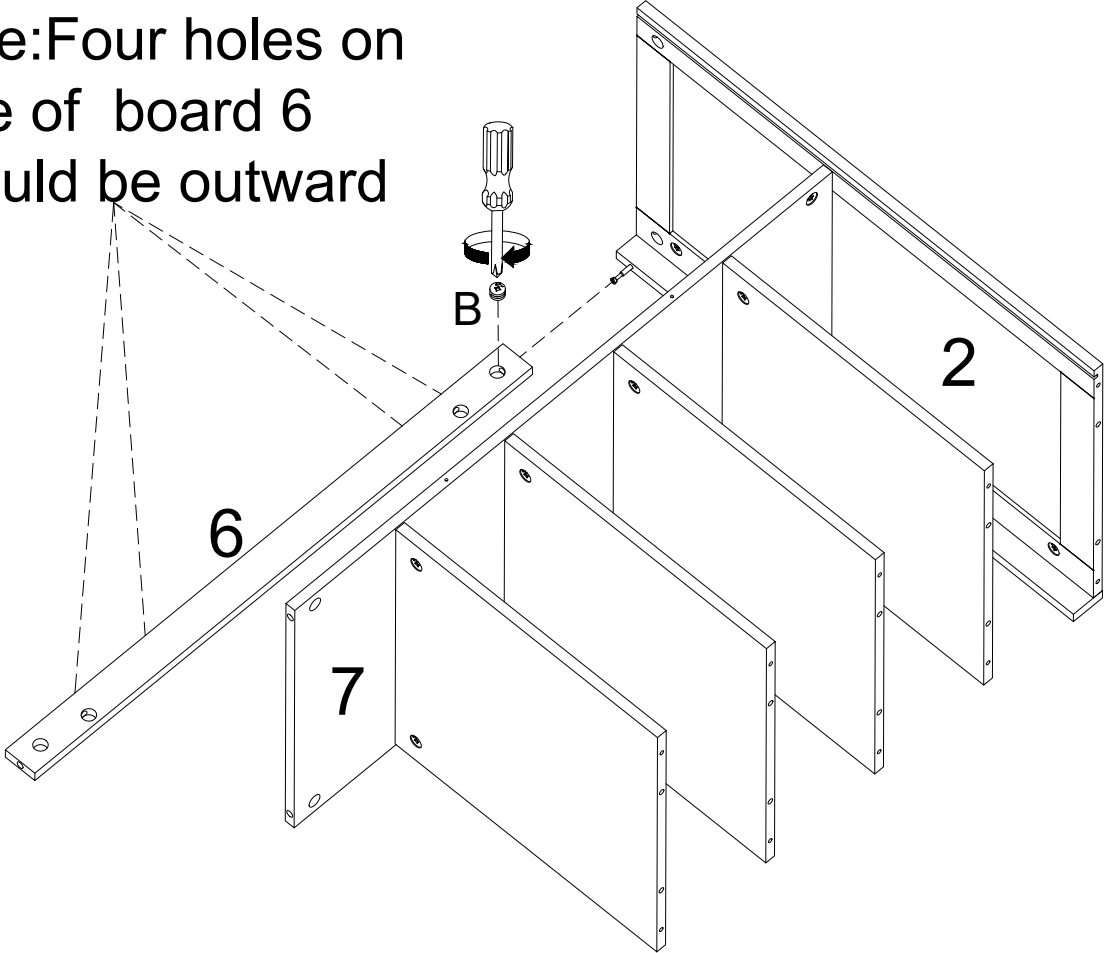


B




x1

Step 9

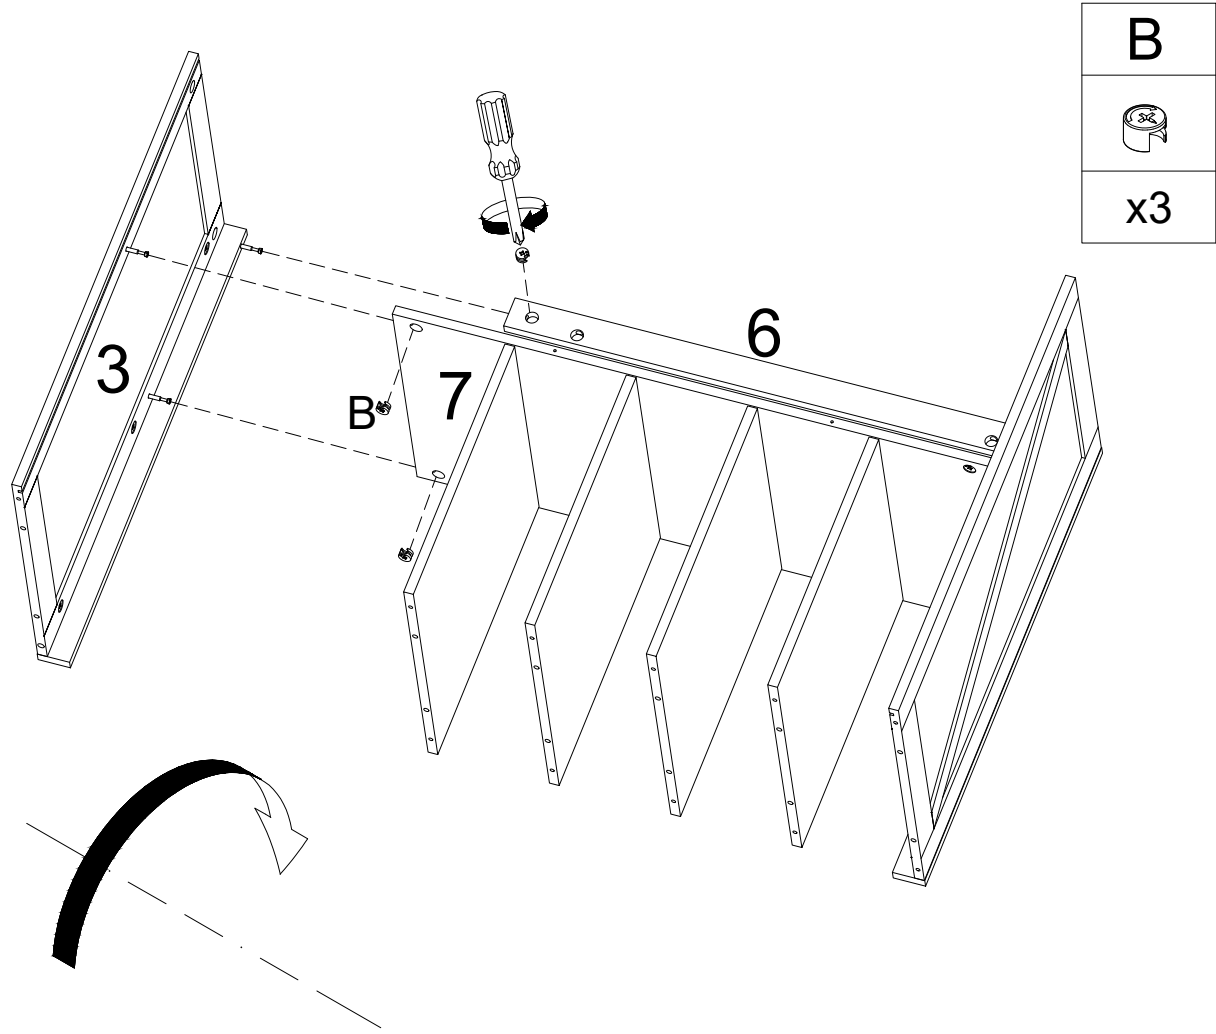


Step 10

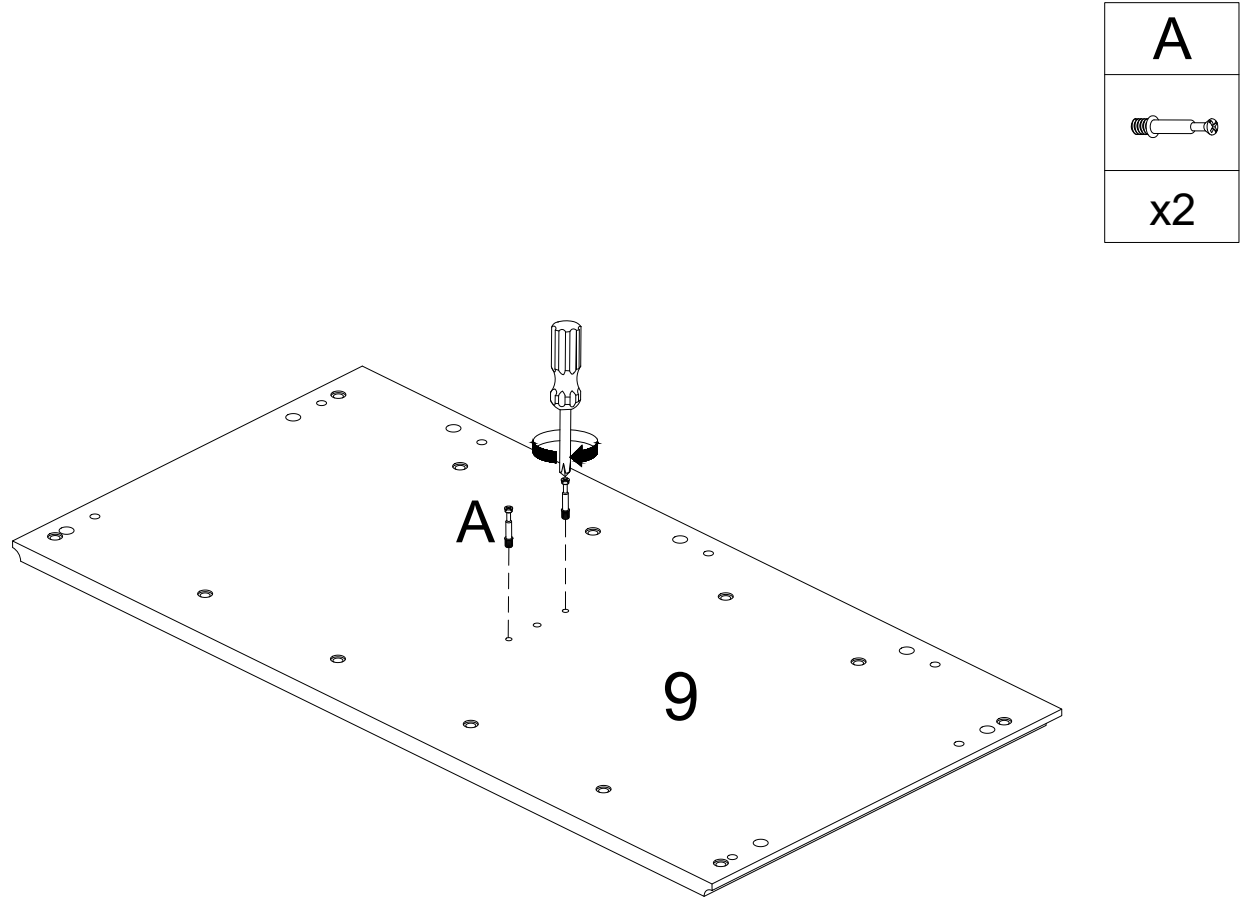



Step 11

B	C
	 Ø6*30mm
x2	x1

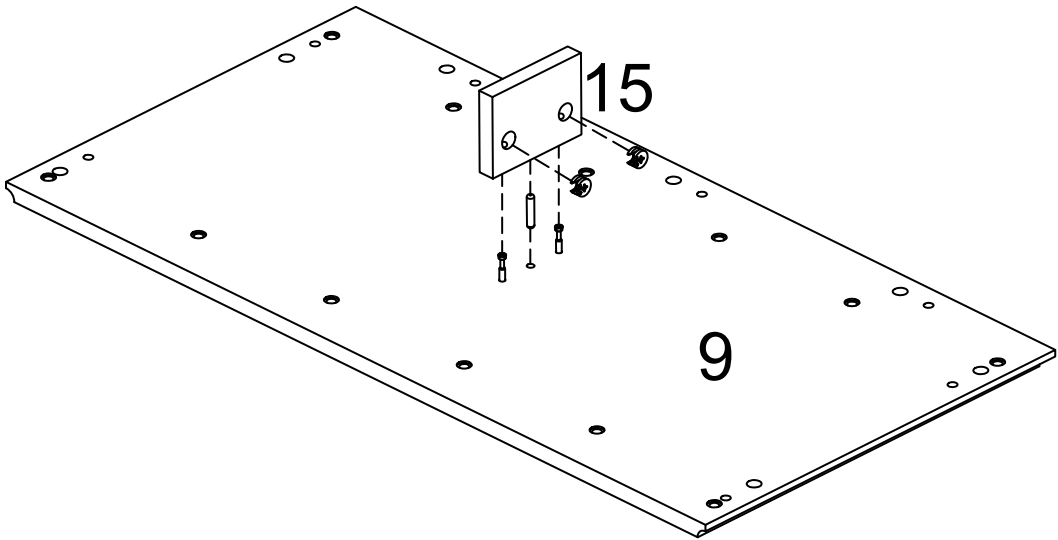




Step 12

C	D
 Ø6*30mm	
x12	x12
shape ont.	K
	
	x1

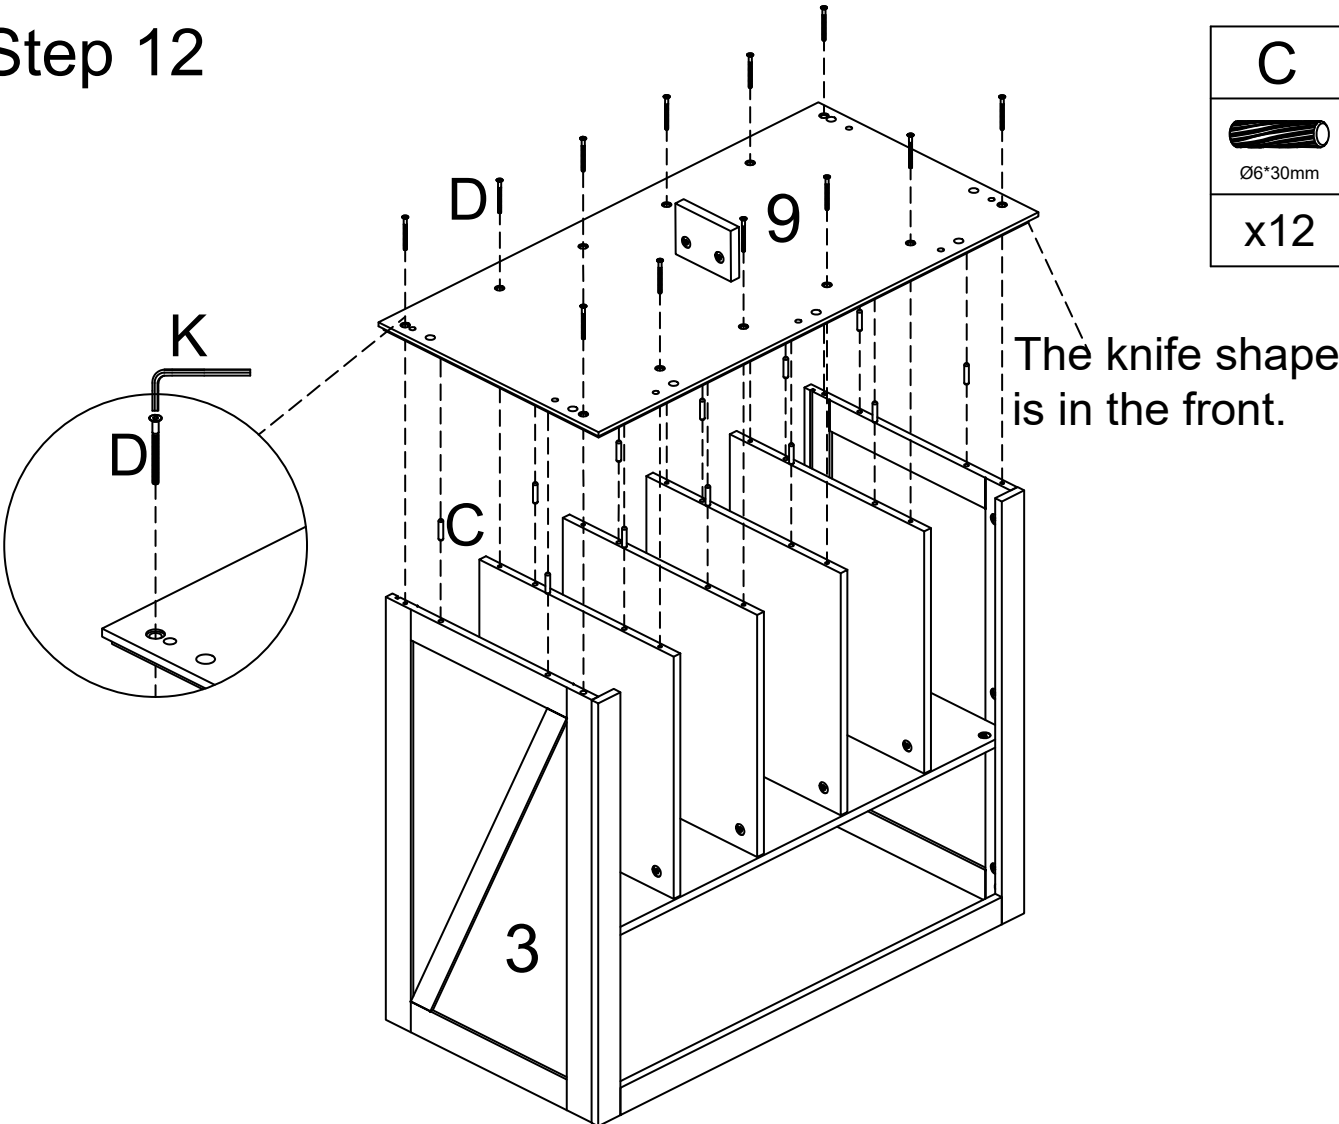



Step 13

E	F
	
x6	x6

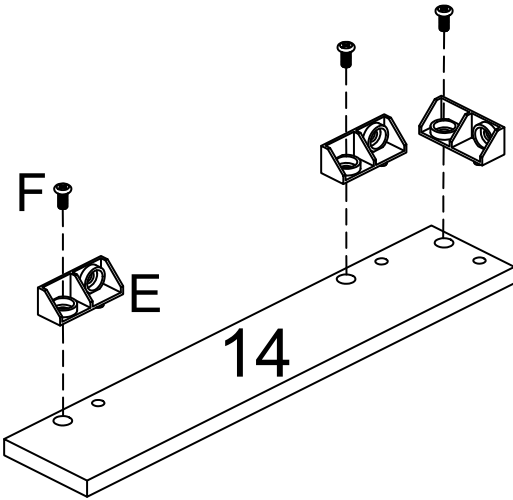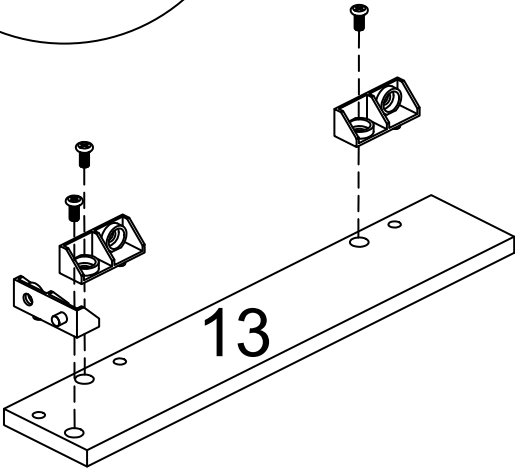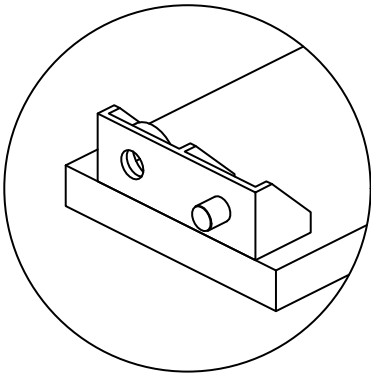

Step 14


E	F
	
x3	x3

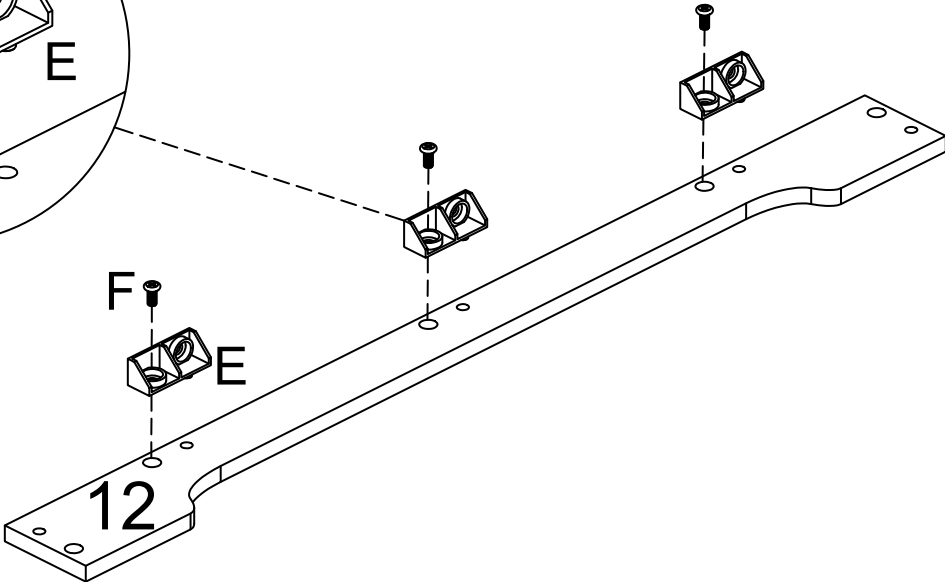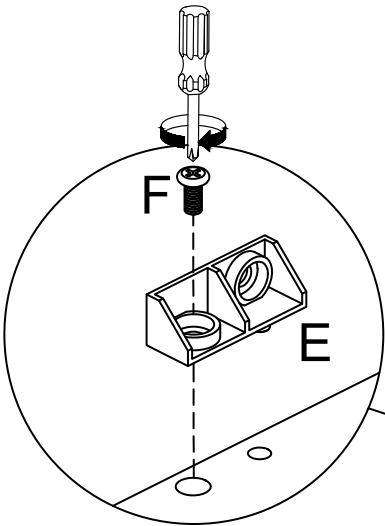

Step 15

F



x2

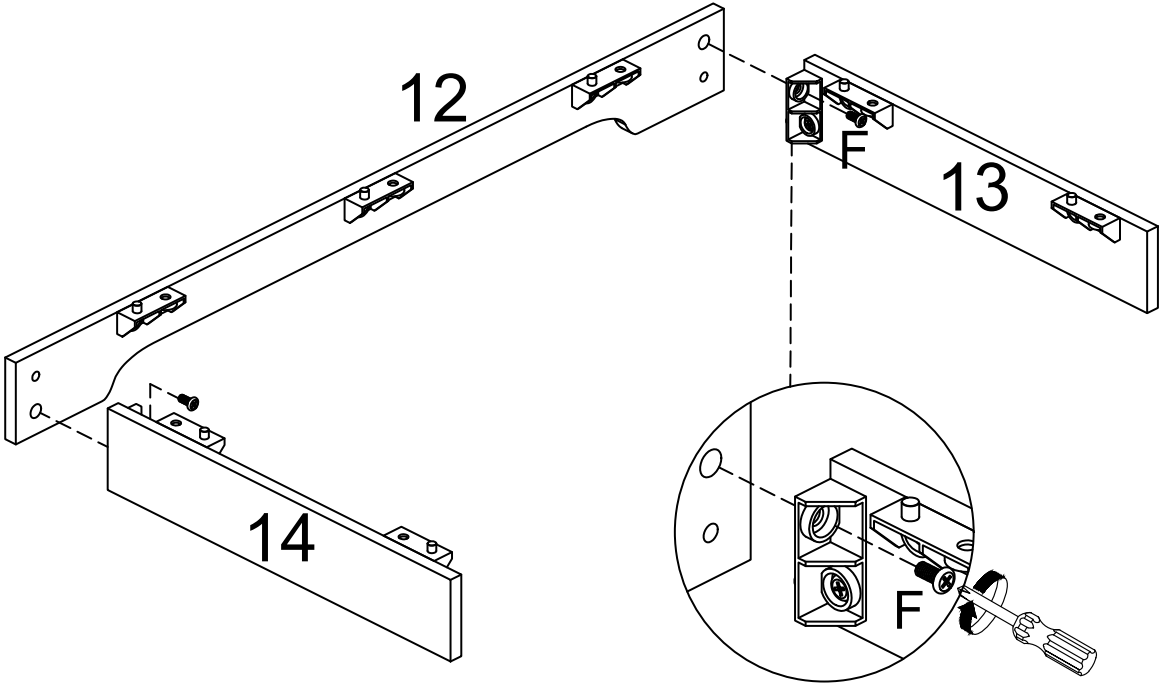


Step 16

F


x7

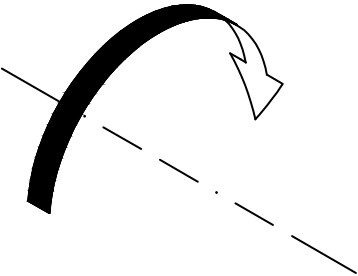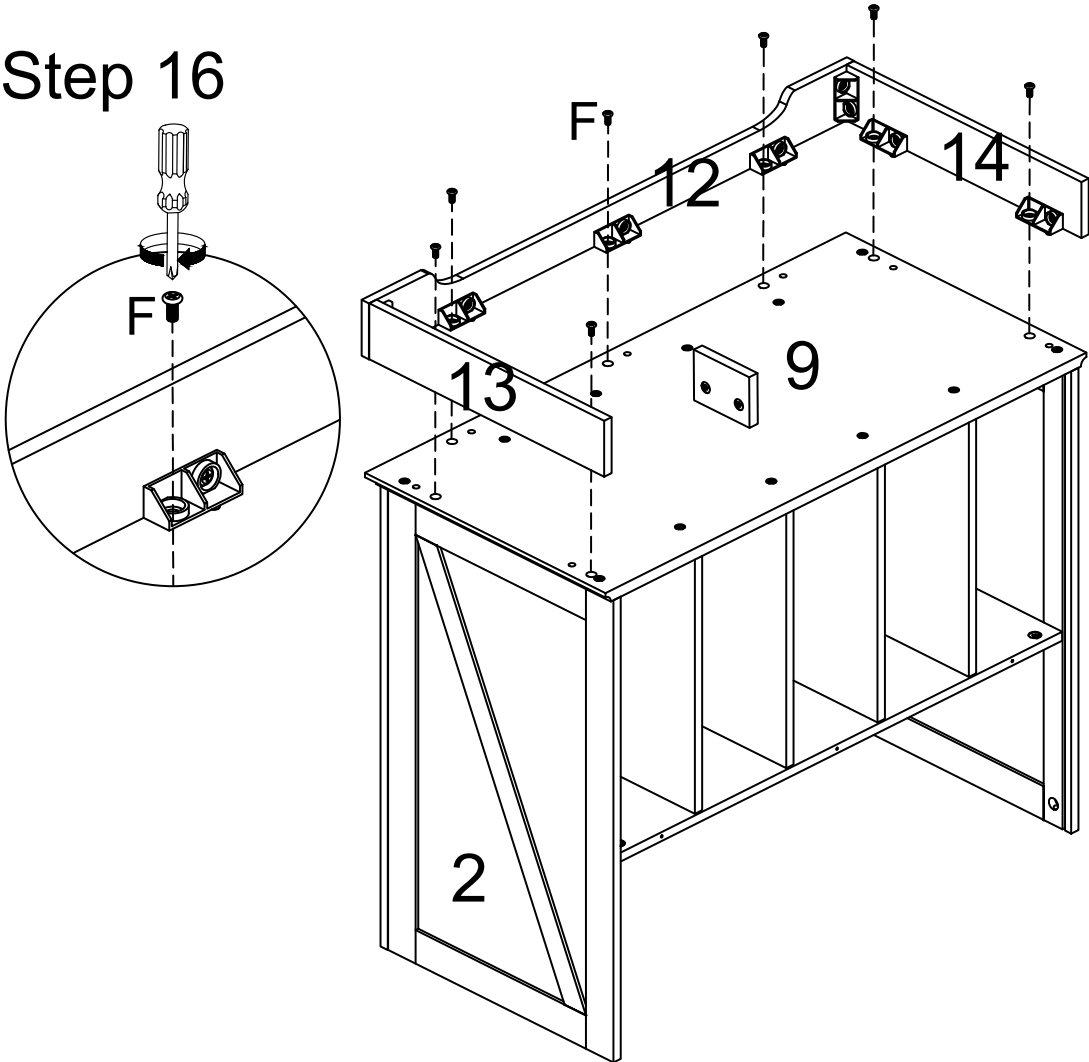


Step 17

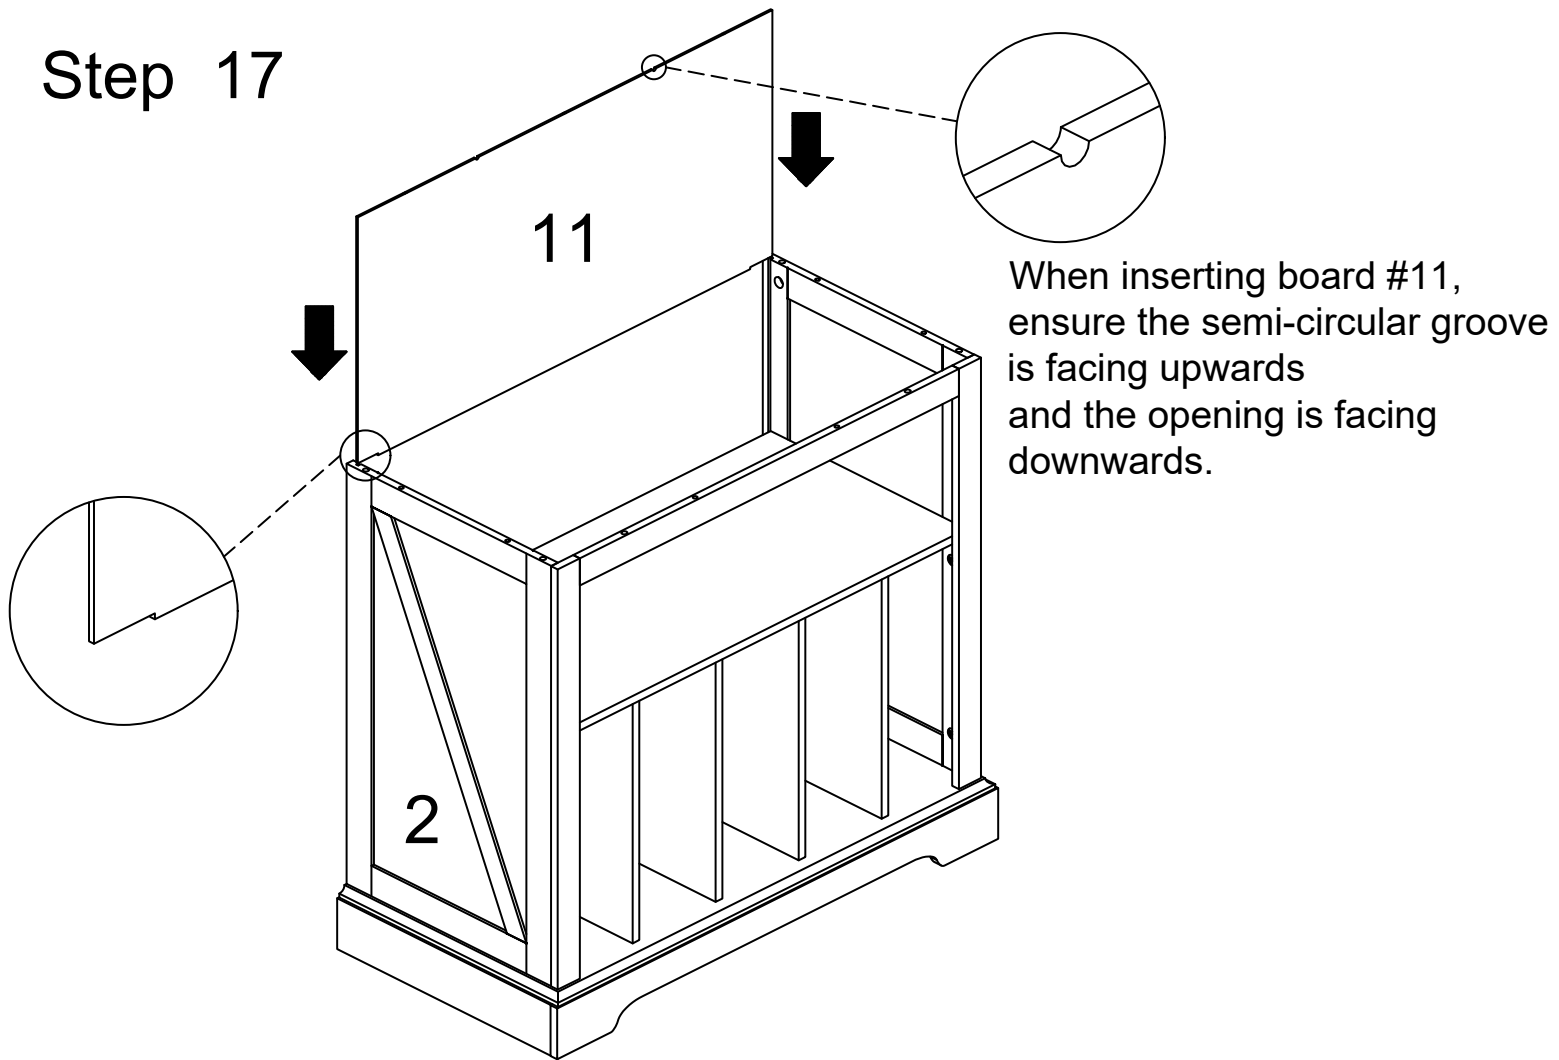

Step 18

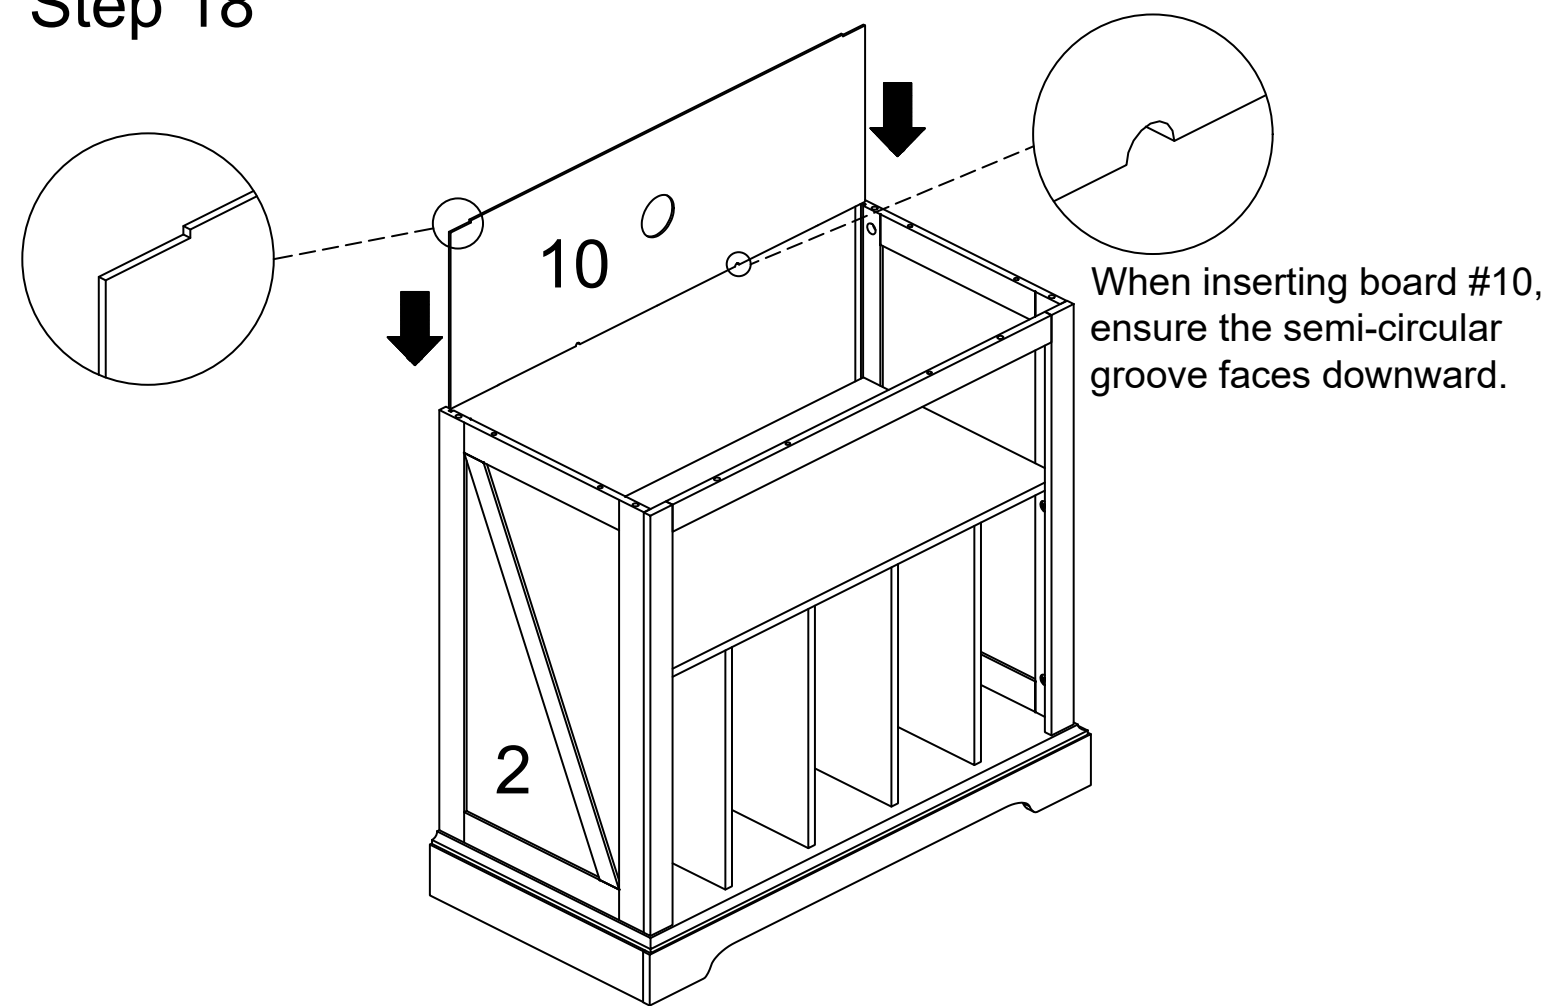


Step 19

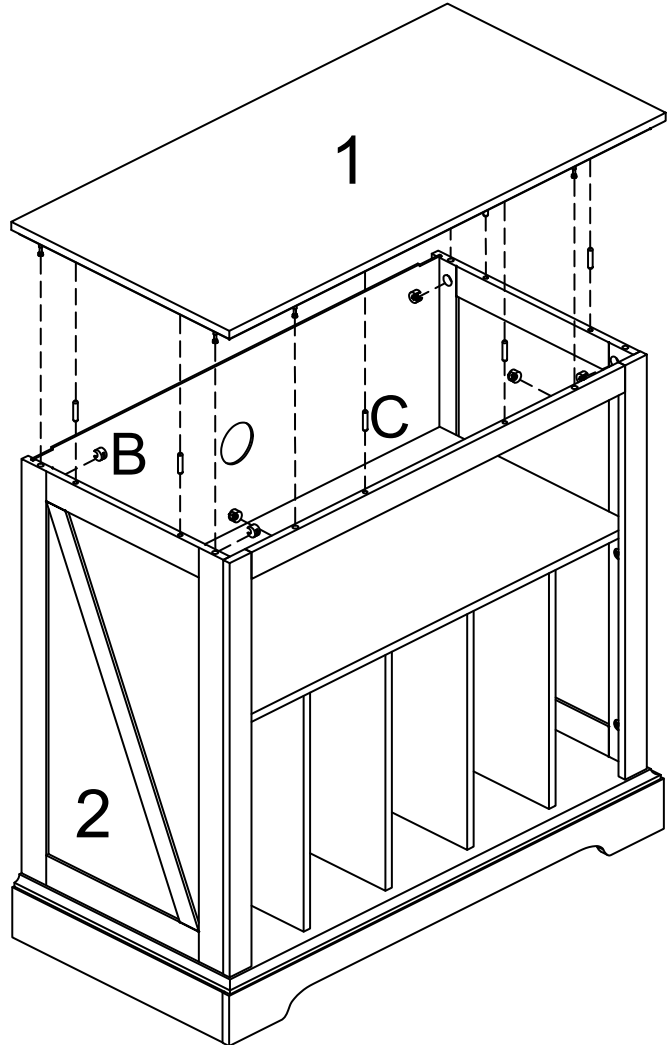


B	C
	 Ø6*30mm
x6	x6

Step 20

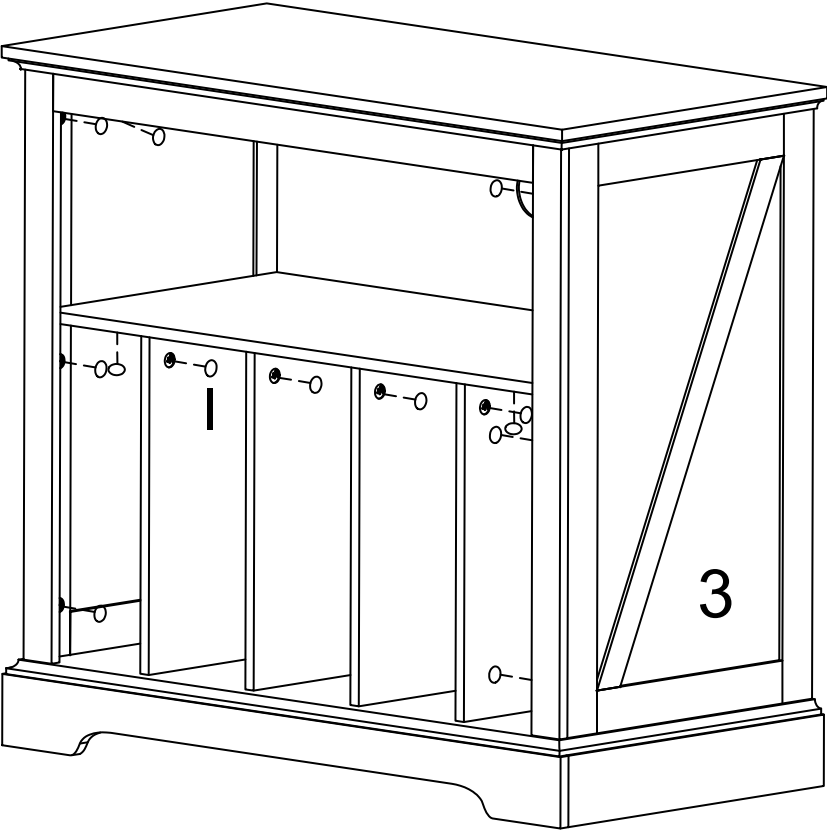


I

x22

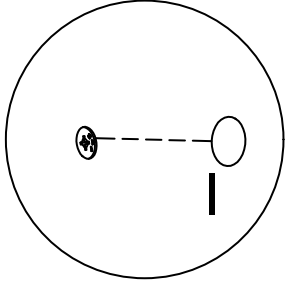


Step 21

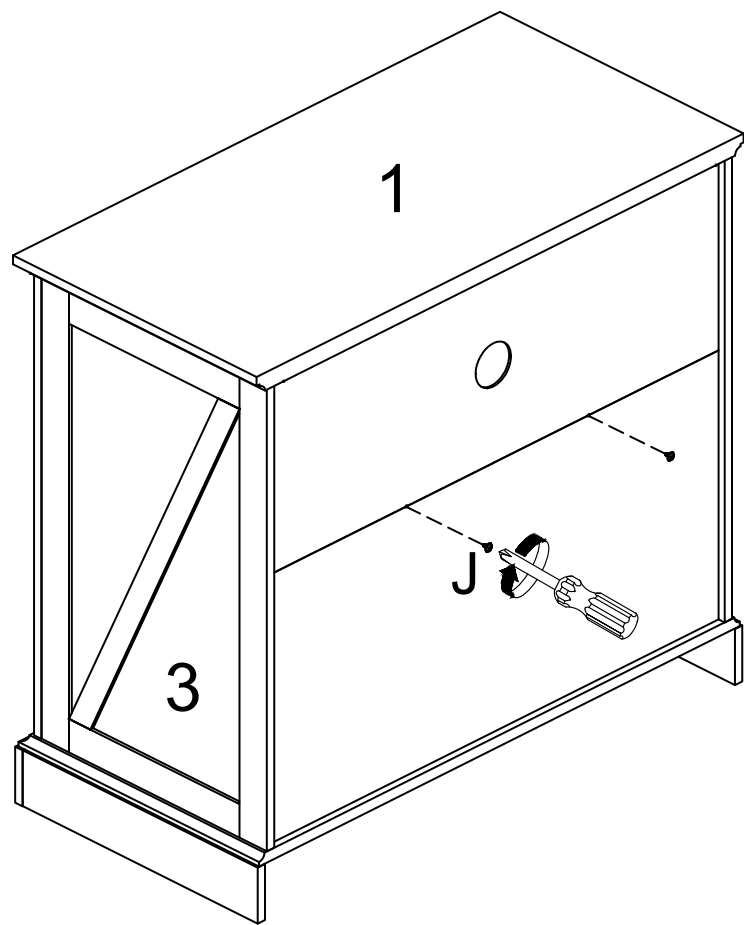


J
 Ø3*15mm
x2

Step 22

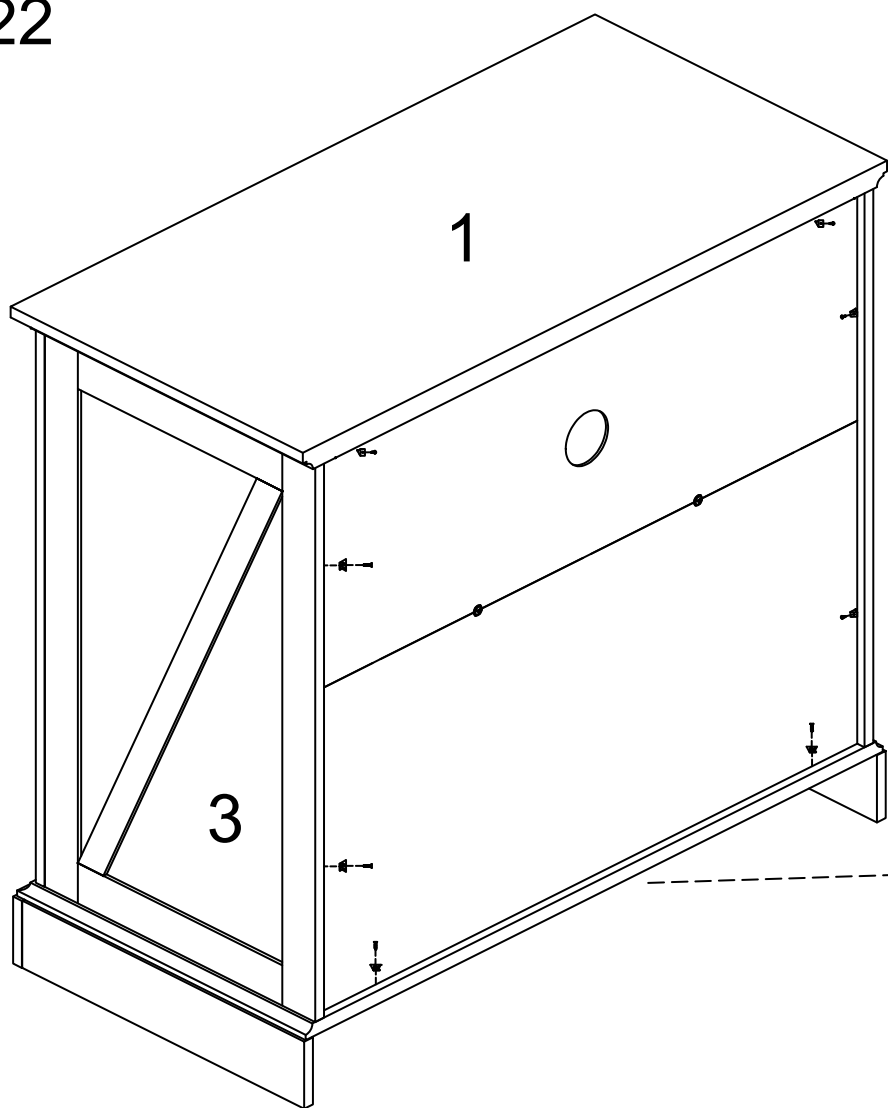

G	H
	 Ø3*16mm
x8	x8

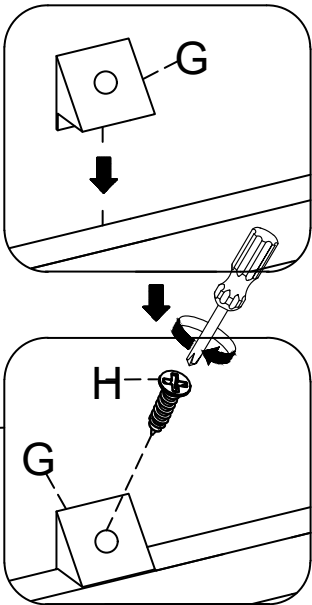

Step 23

