


ASSEMBLY**INSTRUCTION**

Thank you for purchasing

Please read the instructions carefully to ensure safe operation of the product

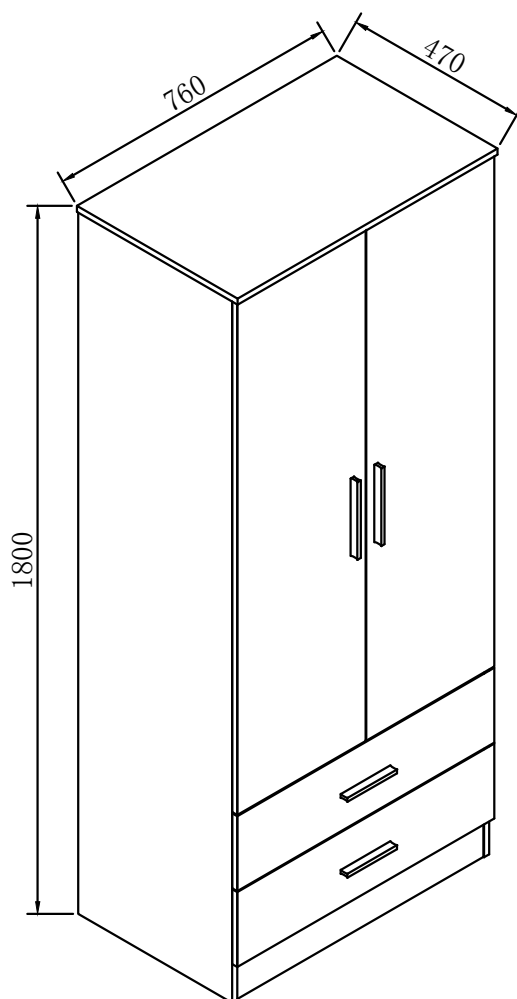


Size:(W)760 x (D)470 x (H)1800mm

PLEASE READ this sheet prior to assembly to familiarise yourself with the various stages of construction .

Carefully open the pack supplied and check the contents against the parts and fittings check list. Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.

CAUTION : there are small components used in the construction of this unit . these loose items should be kept away from young children whilst assembling your unit to avoid the danger of choking hazards

**Tools Required
(NOT PROVIDED)**

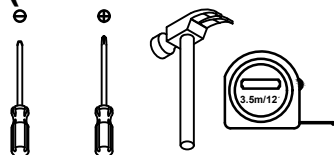

Person Required



X 2

1/18

**Approximate
Assembly Time**



1 Hour

IMPORTANT-READ CAREFULLY RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE .

INFORMATION

- This product is intended for a maximum weight of 50kgs . do not exceed this weight.
- Due to the size of this product we recommend that it is assembled in the room intended for use
- When you are ready to start , make sure that you have the right tools , plenty of space and a clean , dry area for assembly.
- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent it from scratching.
- Check the pack and make sure you have all the parts listed.
- Ensure that this product is fully assembled as illustrated before use.
- Check all screws or bolts are tightened and inspect regularly .
- This product should only be used on firm , level ground.
- Keep small parts out of reach of children.
- Make sure the legs remain in contact with the ground.
- Tools not included.

WARNINGS


- Do NOT use power tools to construct this product.
- Do NOT tighten screws until fully assembled .
- Do NOT over tighten screws or bolts .
- Do NOT use this product if parts are missing , damaged or worn .
- Do NOT sit or stand on the product .
- We recommend the use of the wall strap provided for safety reasons . N.B. Wall fixings are not included - please source suitable fixings for your wall type . if in doubt please consult a qualified trade person. Warning: Always ensure the area to be drilled is free from hidden electrical wires , water and gas pipes.

CARE INFORMATION



- Never use scourers , abrasives or chemical cleaners.
- To clean wipe with a sponge and warm soapy water . do not use solvent based cleaners or detergents as they can bleach or damage the product.

Please check the pack contents before assembling the product .
 if any components are missing, please contact your retailer.the
 fittings pack contains small items that should be kept away
 from small children.





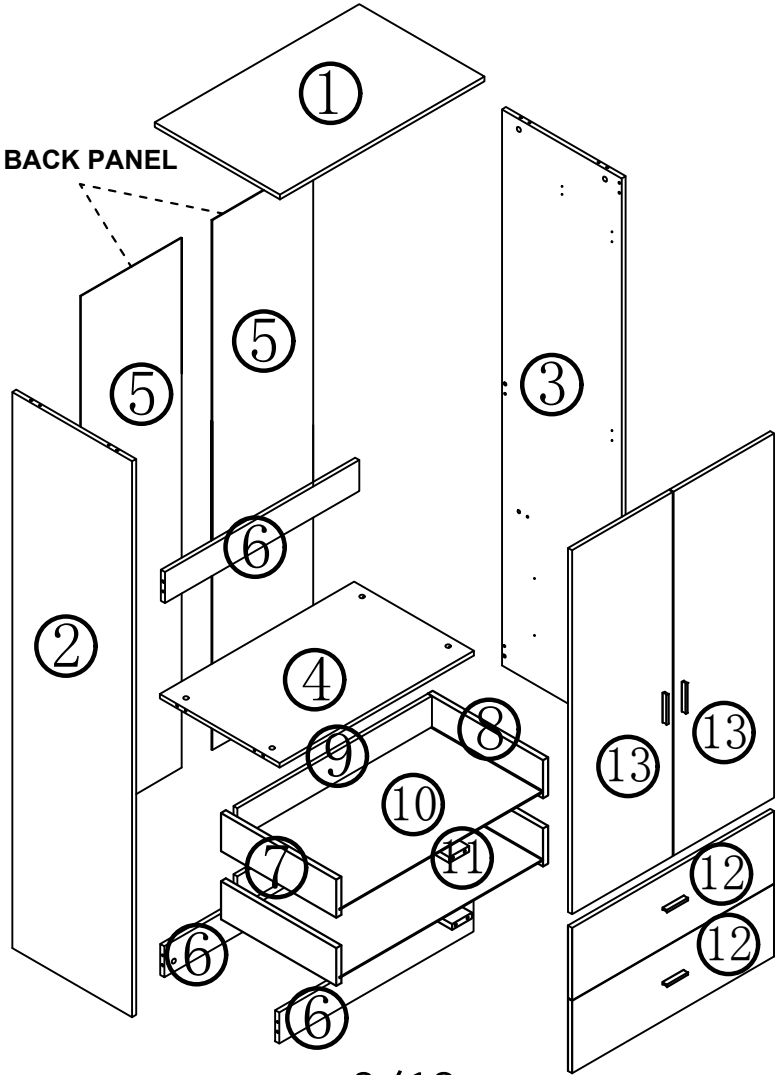


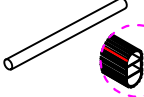


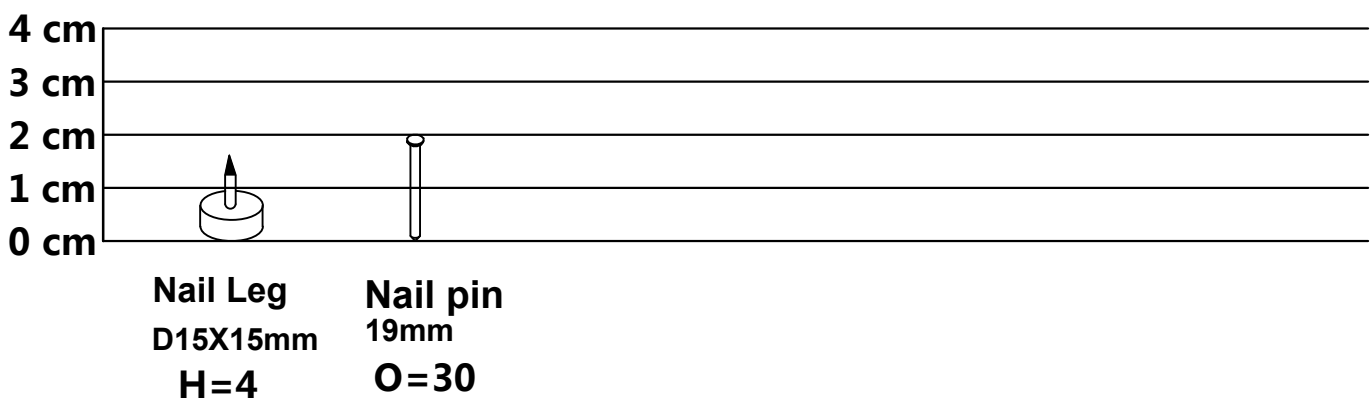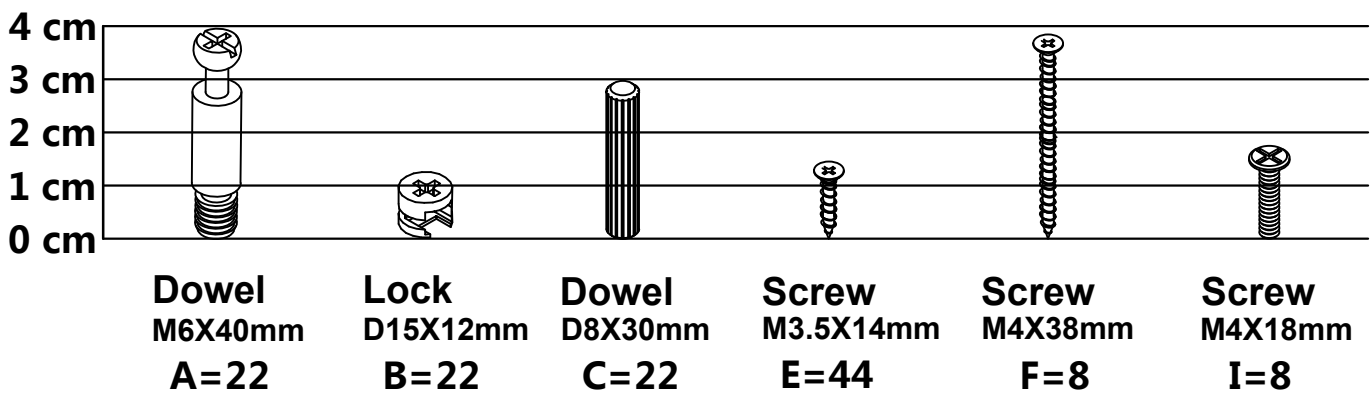
CODE	PART NAME	QTY	CODE	PART NAME	QTY
1	760 X 465 X 15MM TOP PANEL	1PC	8	350 X 140 X 15MM DRAWER RIGHT SIDE PANEL	2PCS
2	1780 X 445 X 15MM LEFT HAND SIDE PANEL	1PC	9	666 X 140 X 15MM DRAWER BACK PANEL	2PCS
3	1780 X 445 X 15MM RIGHT HAND SIDE PANEL	1PC	10	676 X 345 X 3MM DRAWER BASE PANEL	2PCS
4	722 X 444 X 15MM SHELF PANEL	1PC	11	335 X 60 X 15MM DRAWER BOTTOM PANEL	2PCS
5	1705 X 375 X 3MM BACK PANEL	2PCS	12	1689 X 375 X 15MM DRAWER FRONT PANEL	2PCS
6	722 X 100 X 15MM BOTTOM & MIDDLE CROSS BAR	3PCS	13	1300 X 375 X 15MM DOOR PANEL	2PCS
7	350 X 140 X 15MM DRAWER LEFT SIDE PANEL	2PCS			

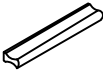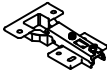





Fixings (to scale)




Fixings (not to scale)

Handle  L128mm	Hinge 	Outer Drawer Runner - Right 	Outer Drawer Runner - Left 	Inner Drawer Runner - Right 	Inner Drawer Runner - Left 
D=4	G=4	J=2	K=2	L=2	M=2
Hanging Rail Support 	Hanging Rail 	OPTIONAL REQUIREMENT Bracket / Strap 	OPTIONAL REQUIREMENT CONNECTING SCREWS  M6X20mm	OPTIONAL REQUIREMENT Spanner  M4	
N=2	P=1	Q=2	R=4	S=1	

Fittings (not to scale)

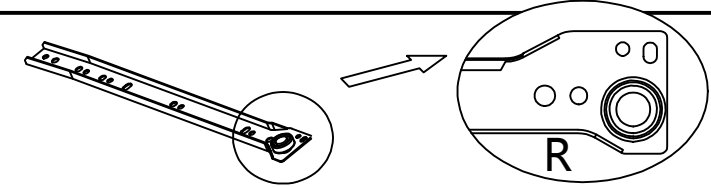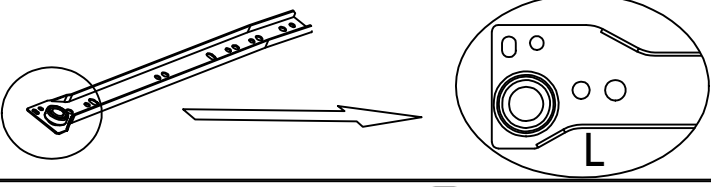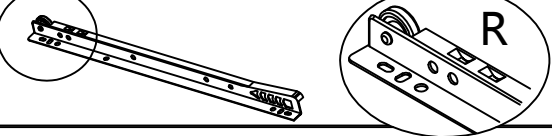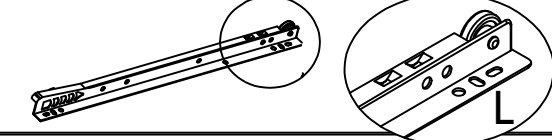



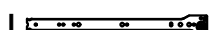

NO.	DESCRIPTION	QTY	
J	Outer Drawer Runner - Right	2PCS	
K	Outer Drawer Runner - Left	2PCS	
L	Inner Drawer Runner - Right	2PCS	
M	Inner Drawer Runner - Left	2PCS	

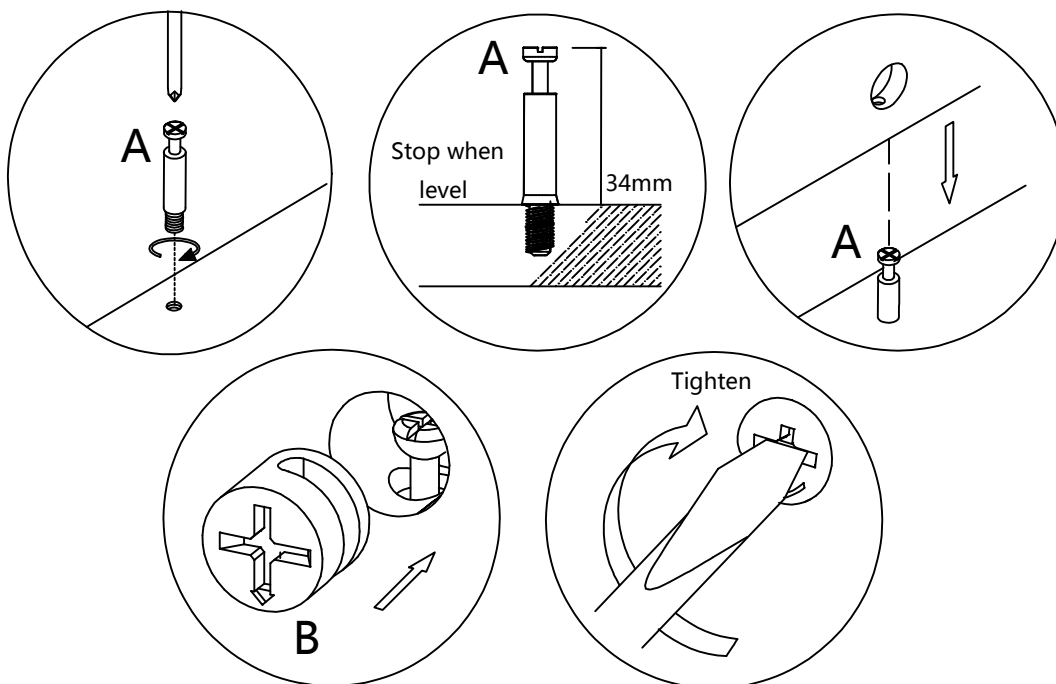
General Hints & Tips



STEP 1

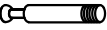
Assembly details
When attaching part (K& J) make sure flat edge of part (K& J) facing towards veneer edge and roller wheel is facing down towards bottom edge.

A		10 PCS
C		4 PCS
E		12 PCS
N		2 PCS
J		2 PCS
K		2 PCS

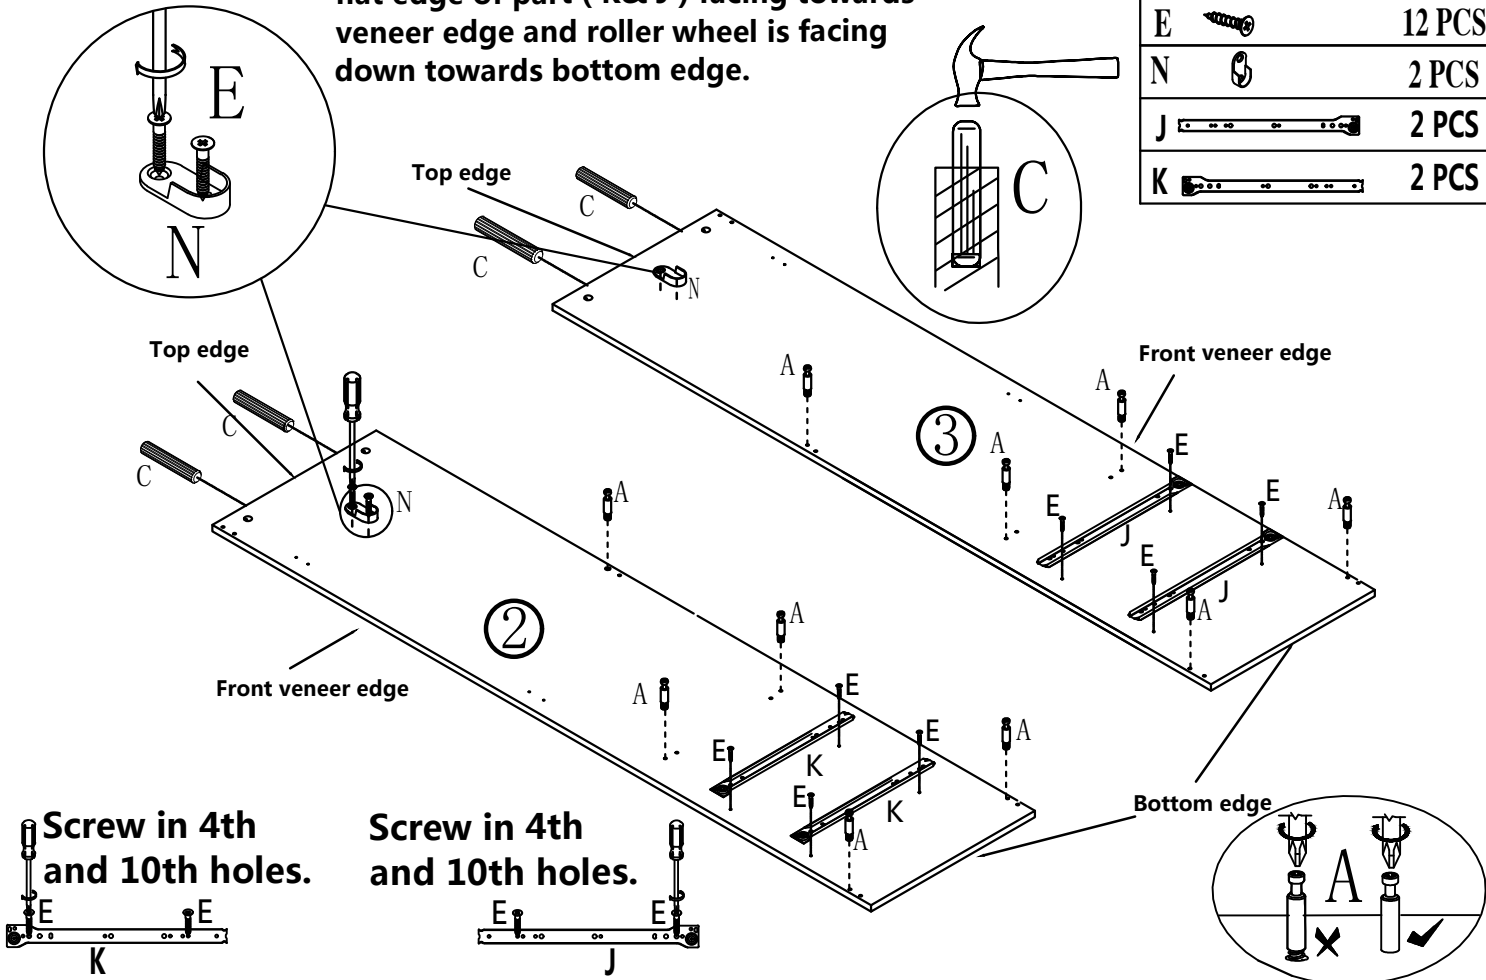



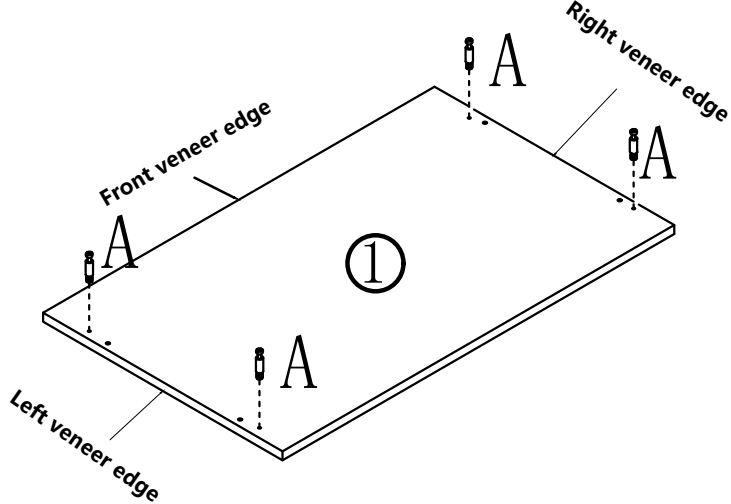
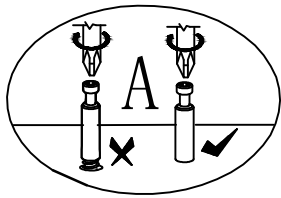
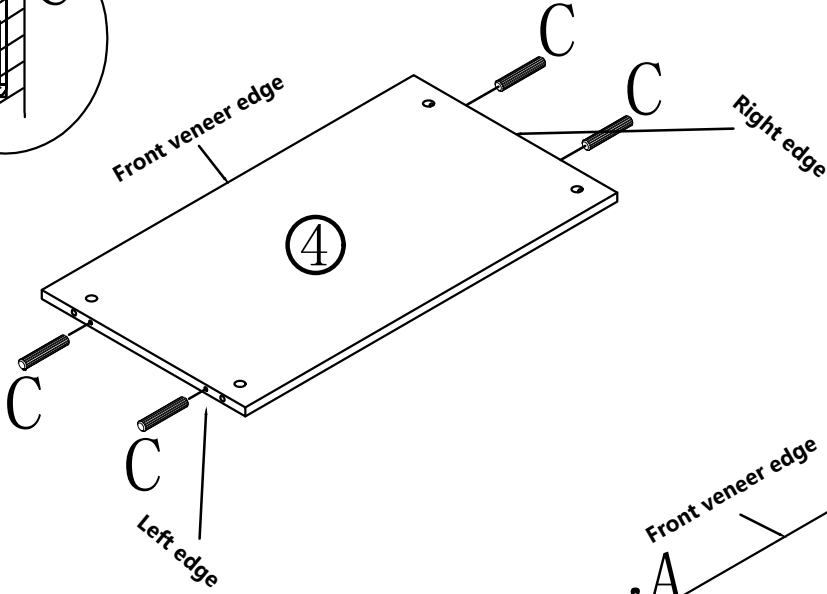
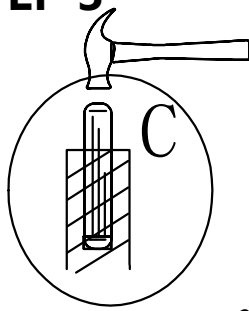
STEP 2

C		6 PCS
---	---	-------

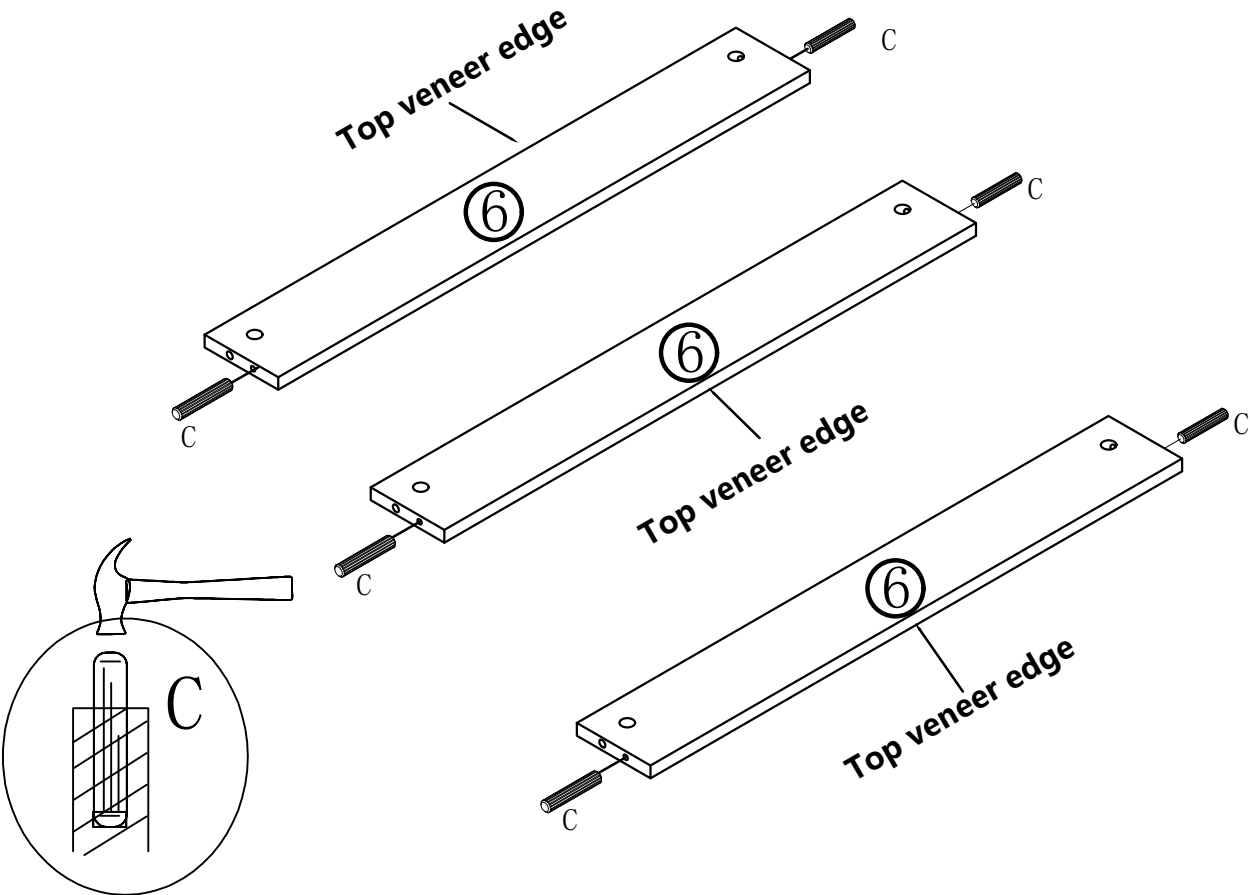


STEP 3

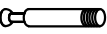A		4 PCS
C		4 PCS




STEP 4

B		5 PCS
---	---	-------

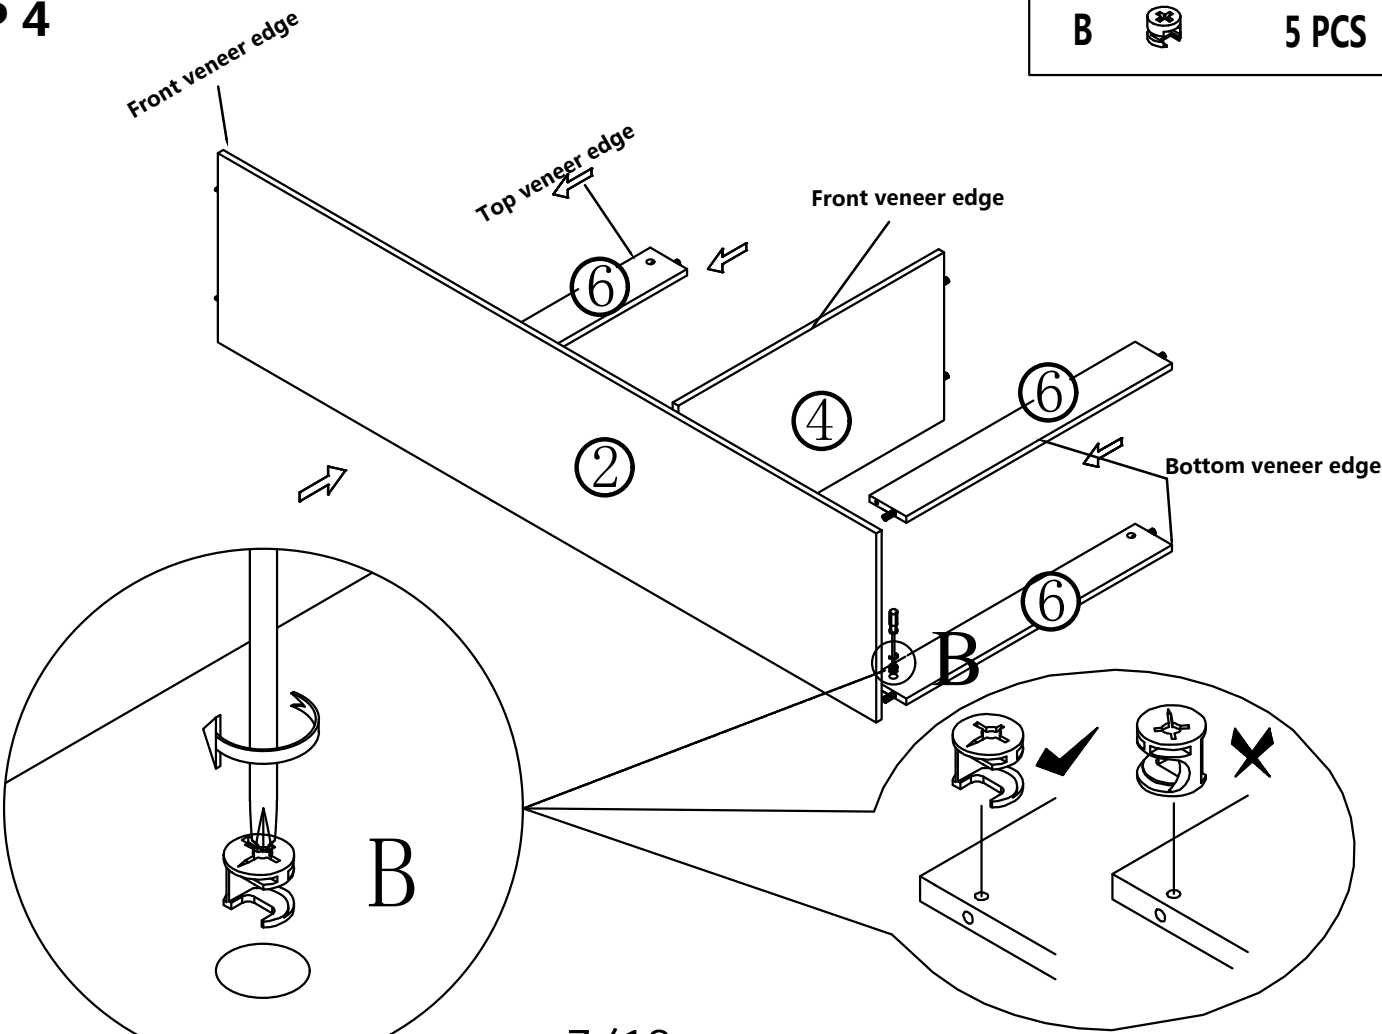


STEP 5

B  5 PCS

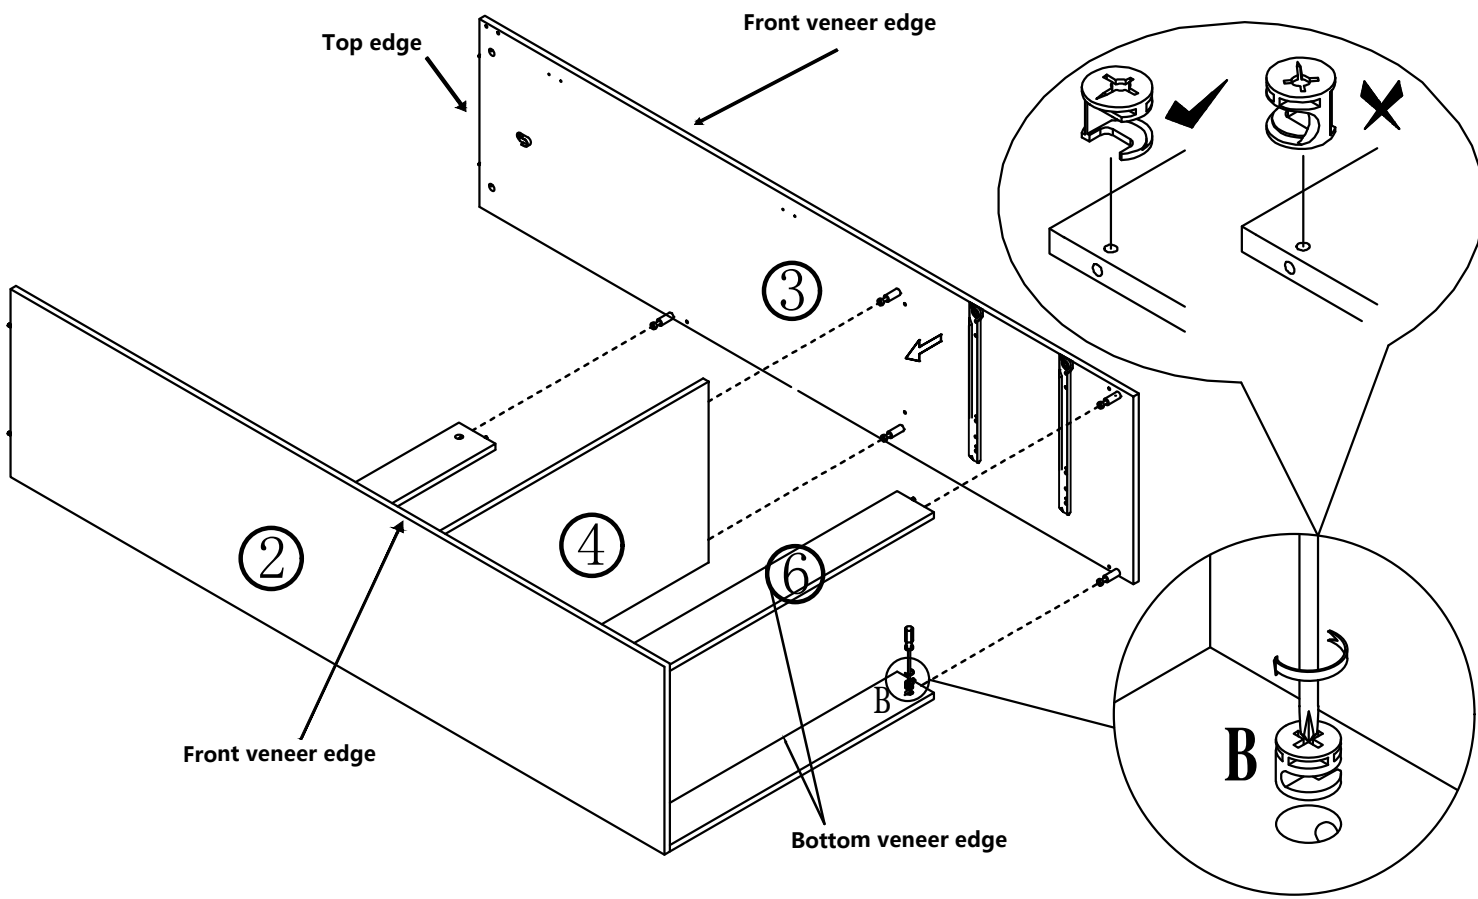



STEP 6

B  4 PCS
H  4 PCS

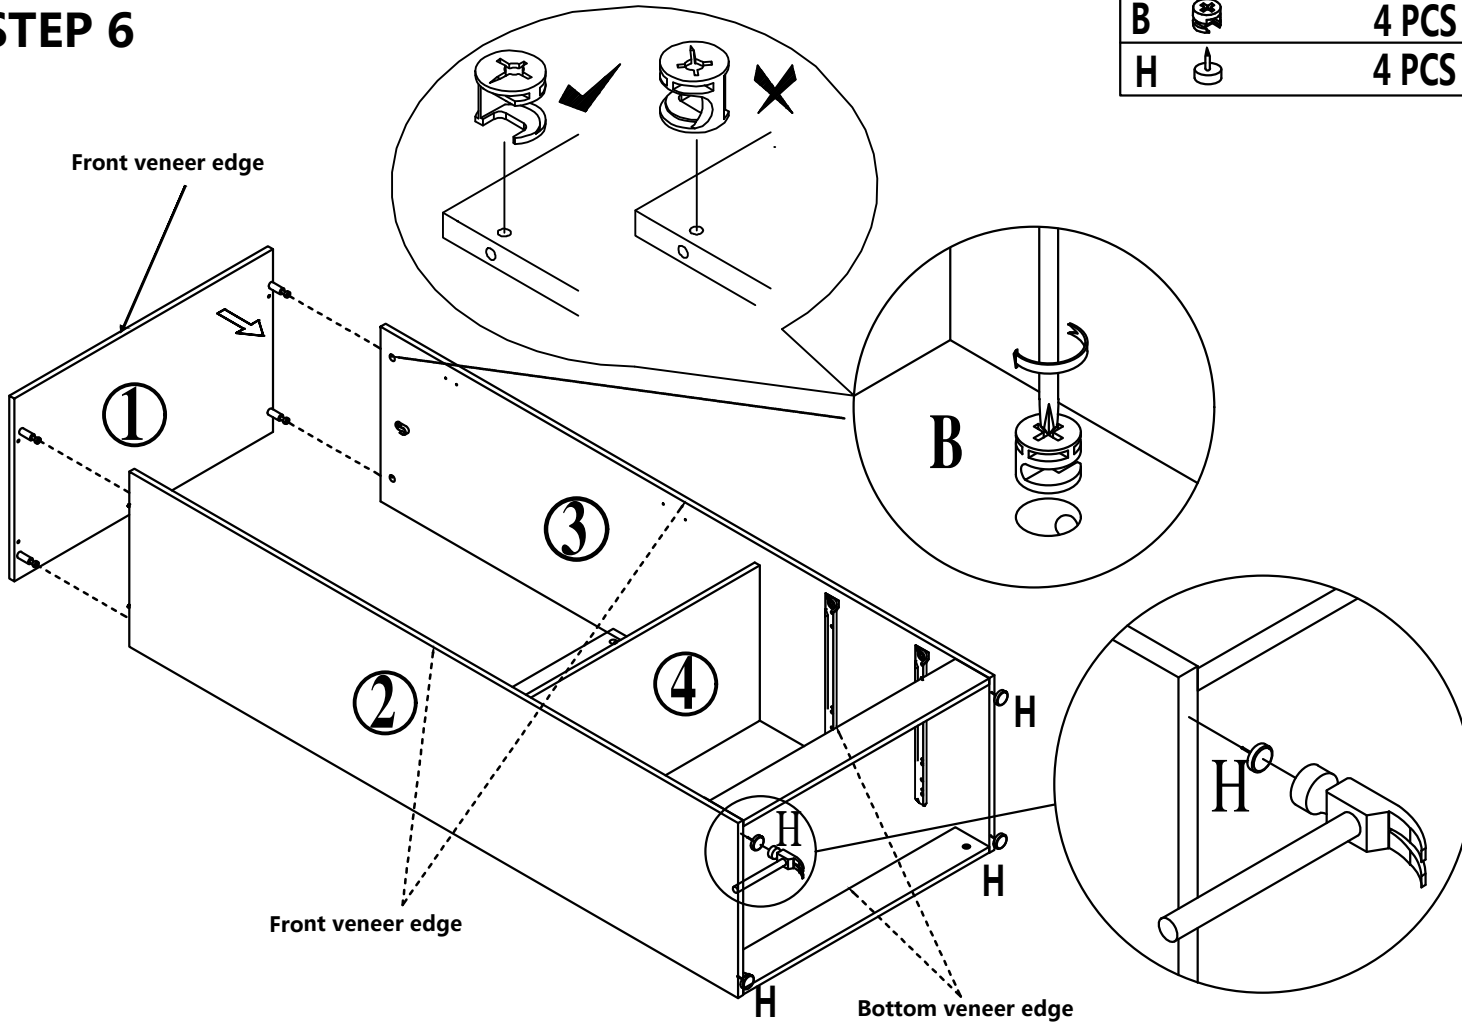



STEP 7

0  30 PCS

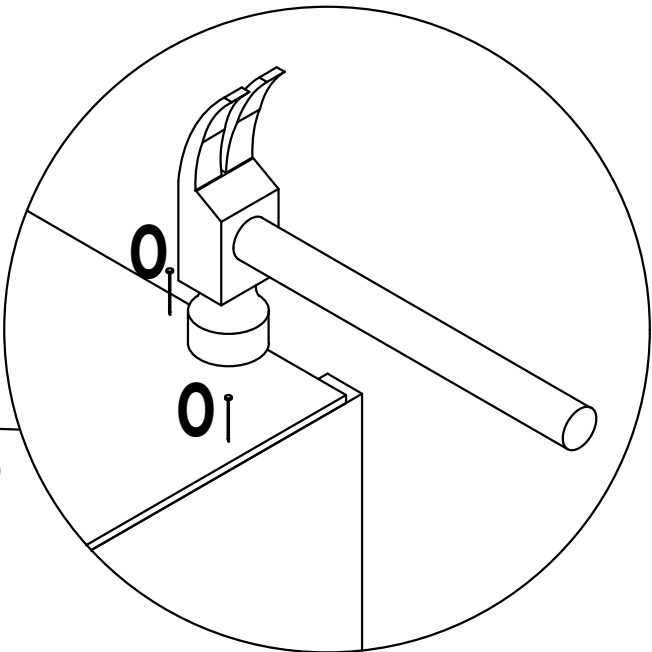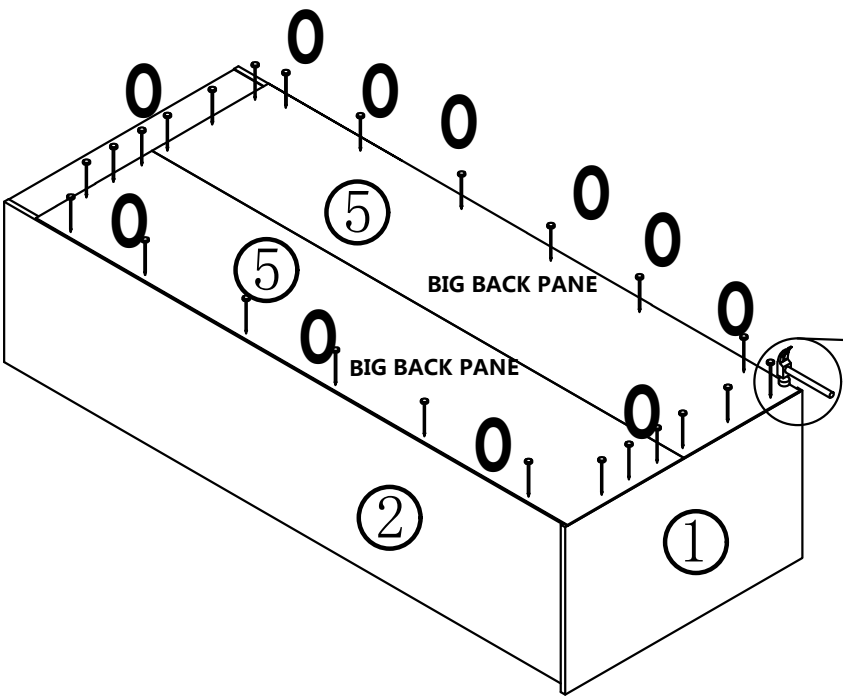


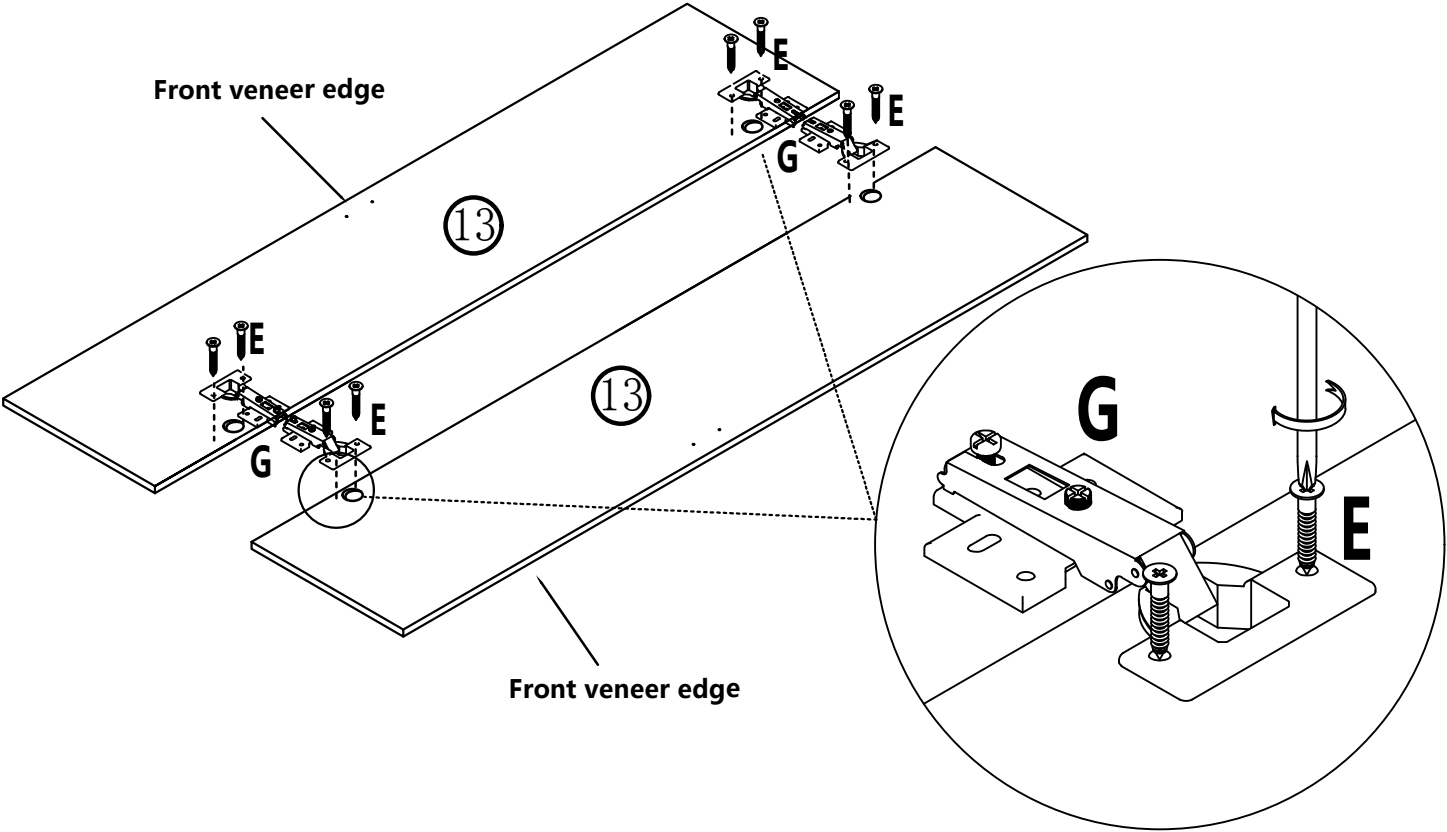
STEP 8

P   1 PC

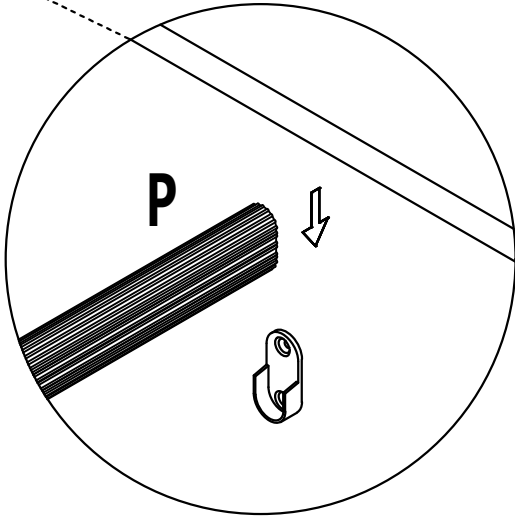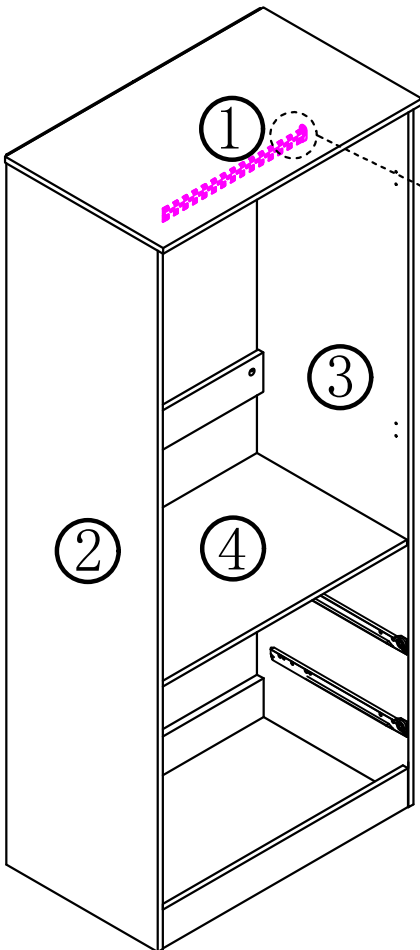




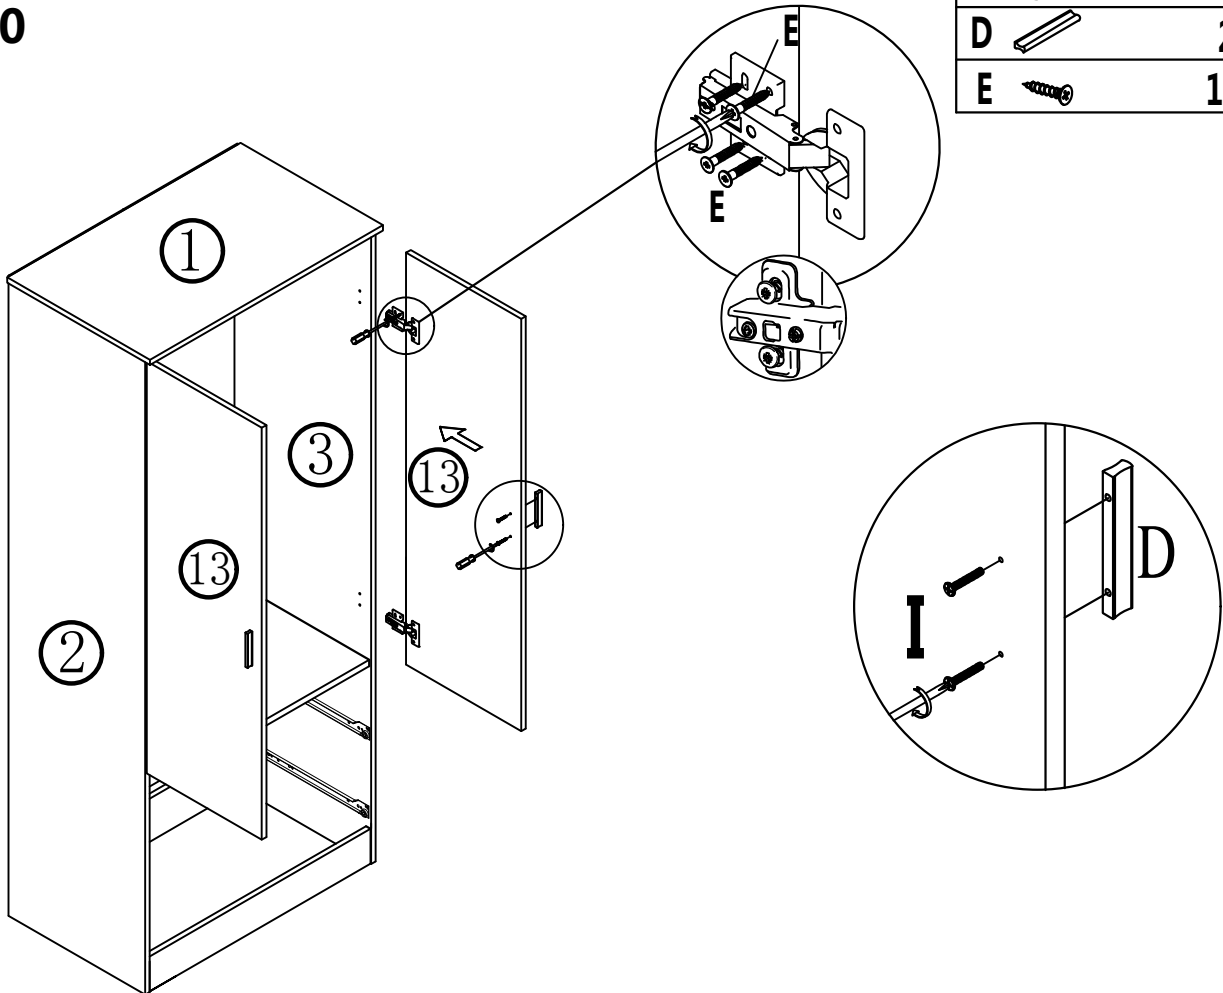
STEP 9

G		4 PCS
E		8 PCS





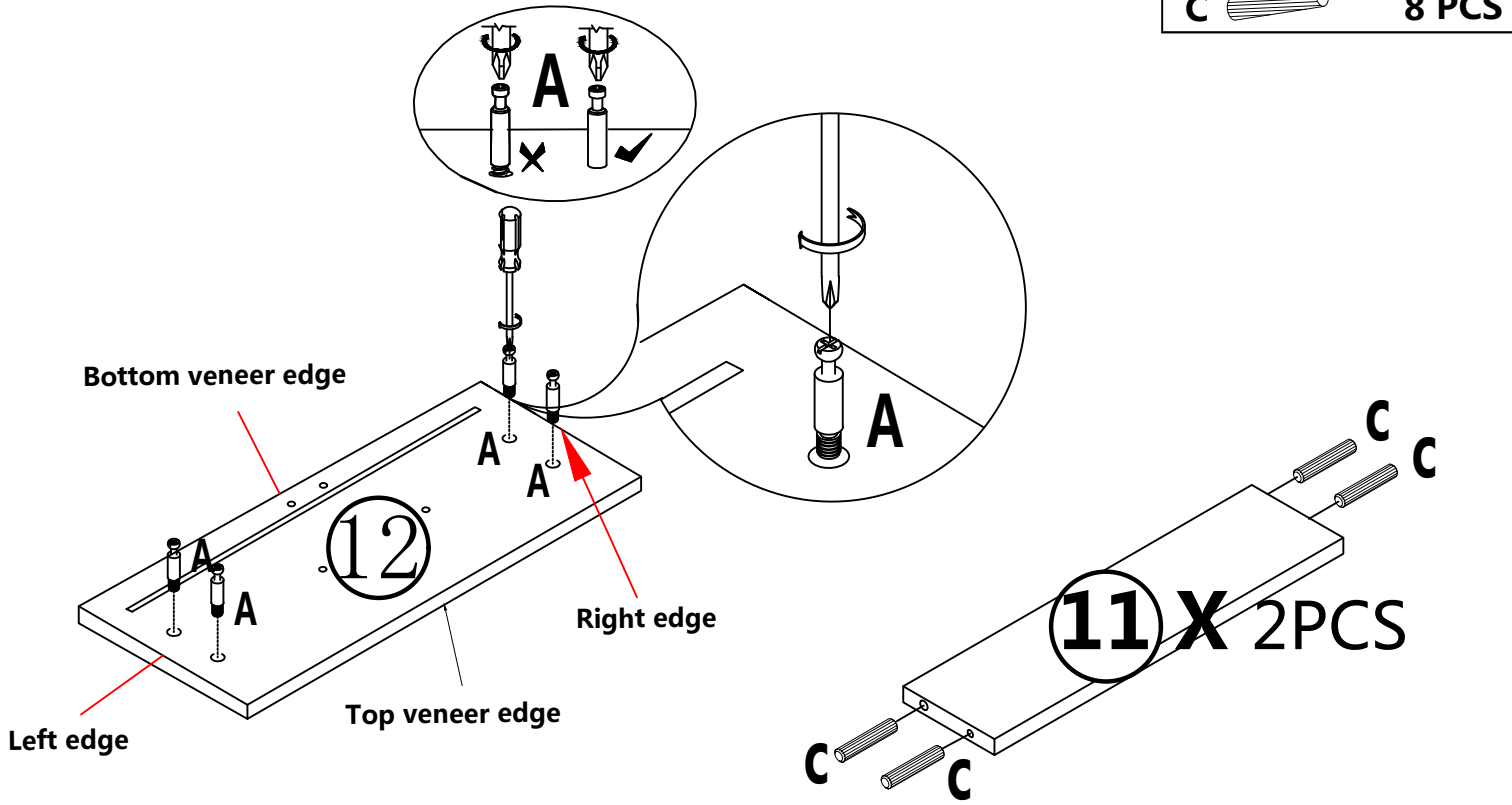
STEP 10

I		4 PCS
D		2 PCS
E		16 PCS



STEP 11

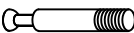
A		8 PCS
C		8 PCS



Repeat the process for all 2 drawers


STEP 12

B		8 PCS
---	---	-------

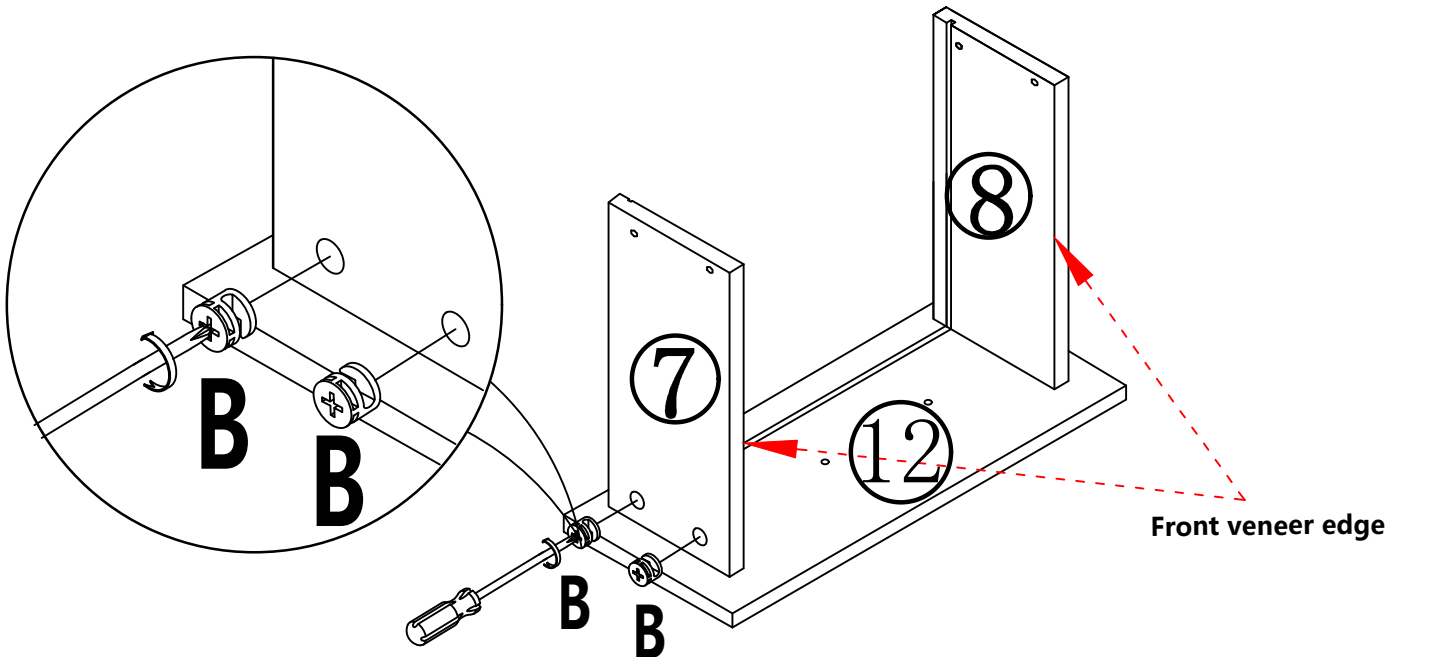

Repeat the process for all 2 drawers


STEP 13

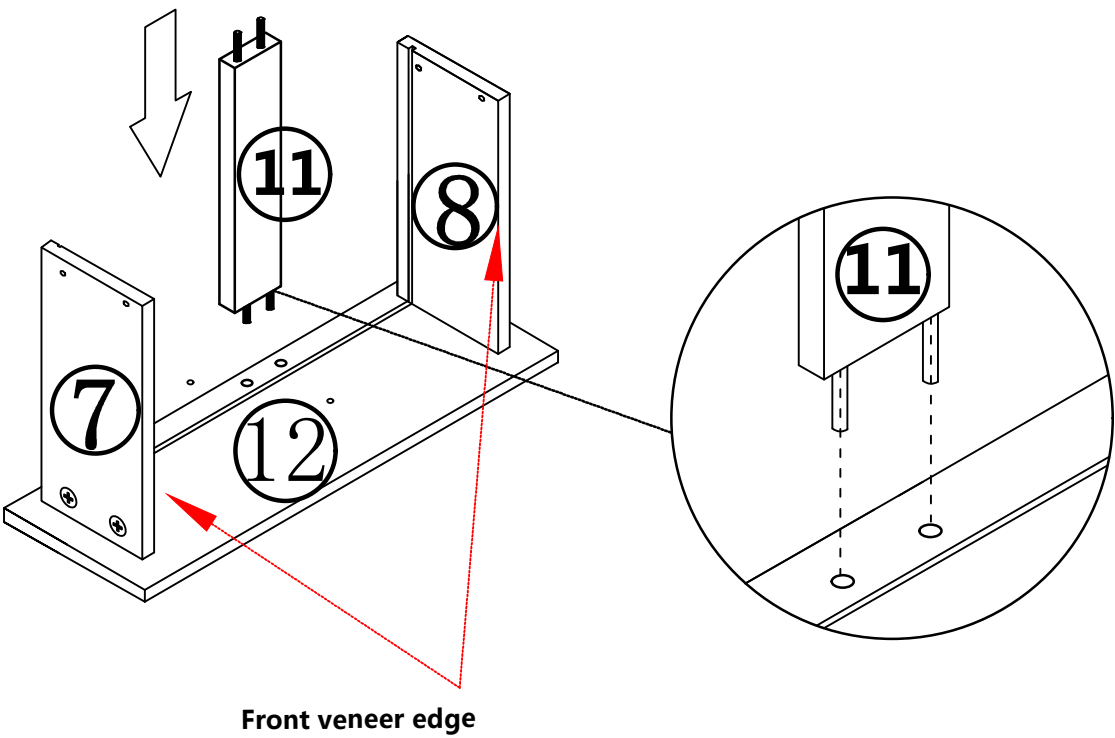

Repeat the process for all 2 drawers

STEP 14

F  8 PCS

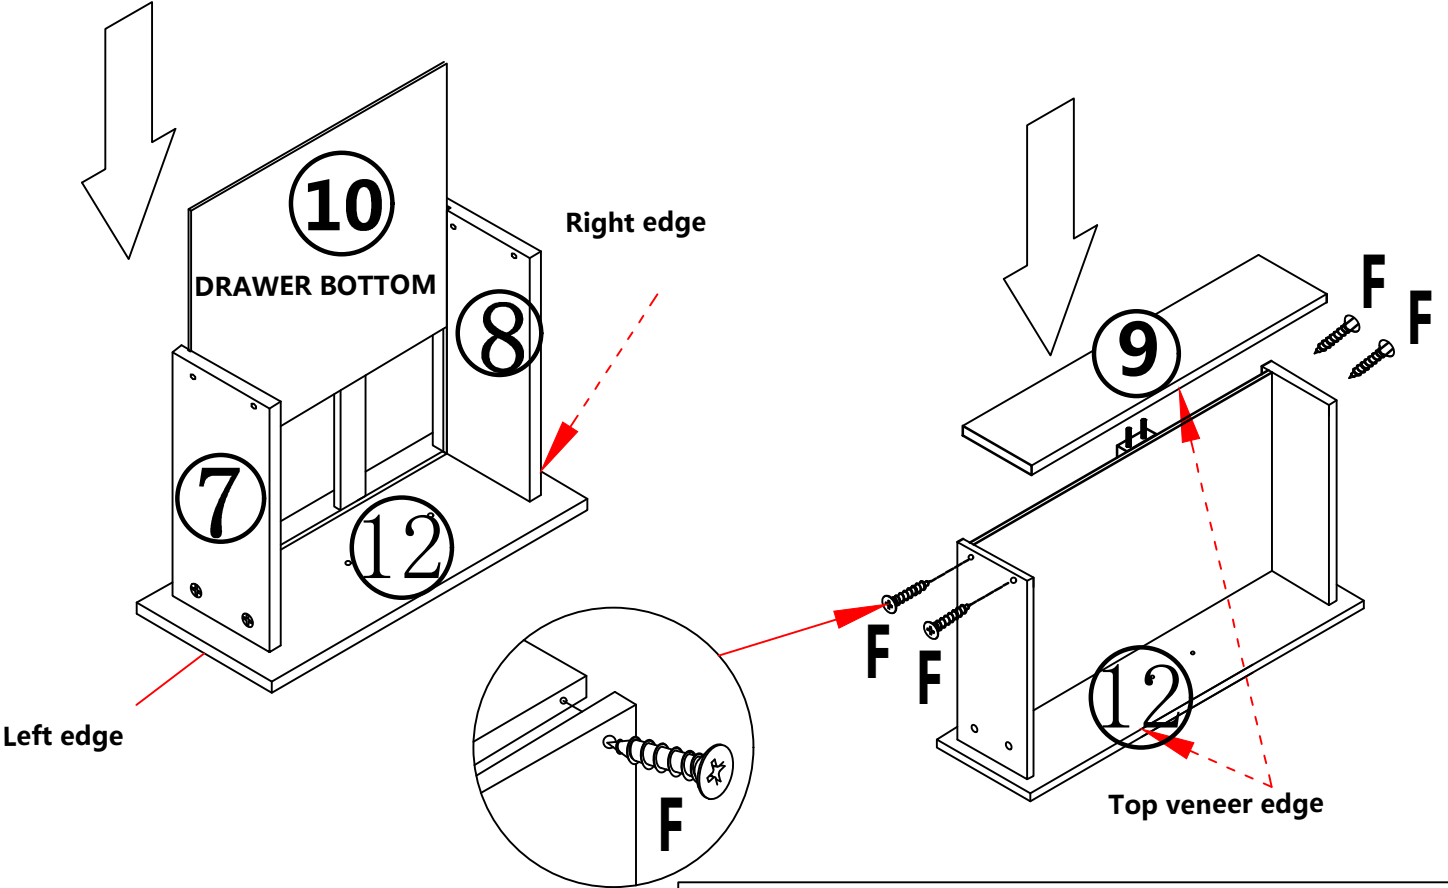








Repeat the process for all 2 drawers

STEP 15


Pls turn the drawer upside down to fit the runners and make sure the runner wheels go at the **BACK** of the drawers, failure to assemble correct way will misaligned the drawers.




E		8 PCS
I		4 PCS
D		2 PCS
L		2 PCS
M		2 PCS

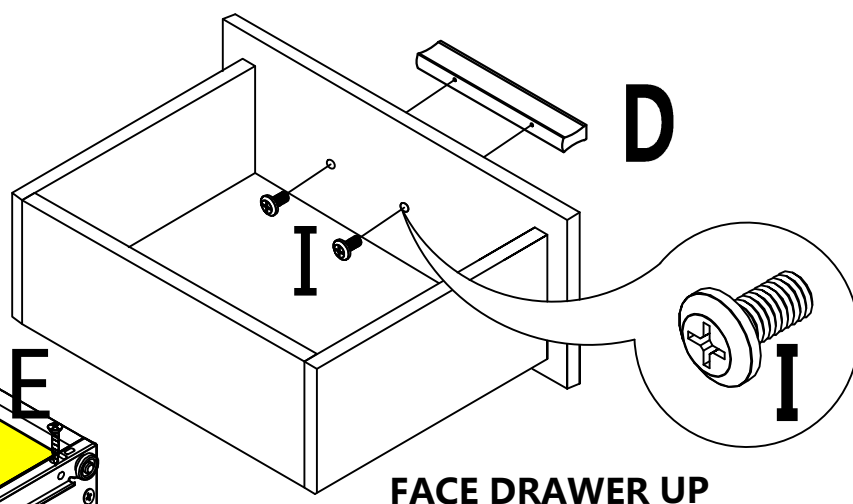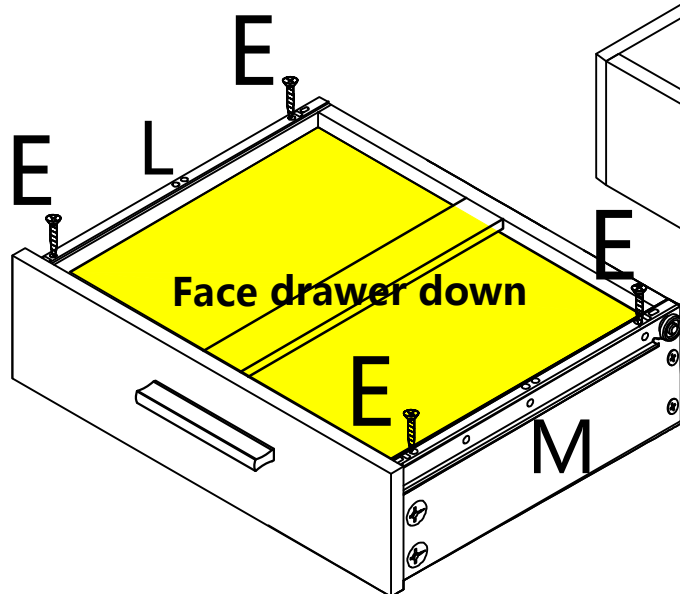

LAST THIRD HOLE


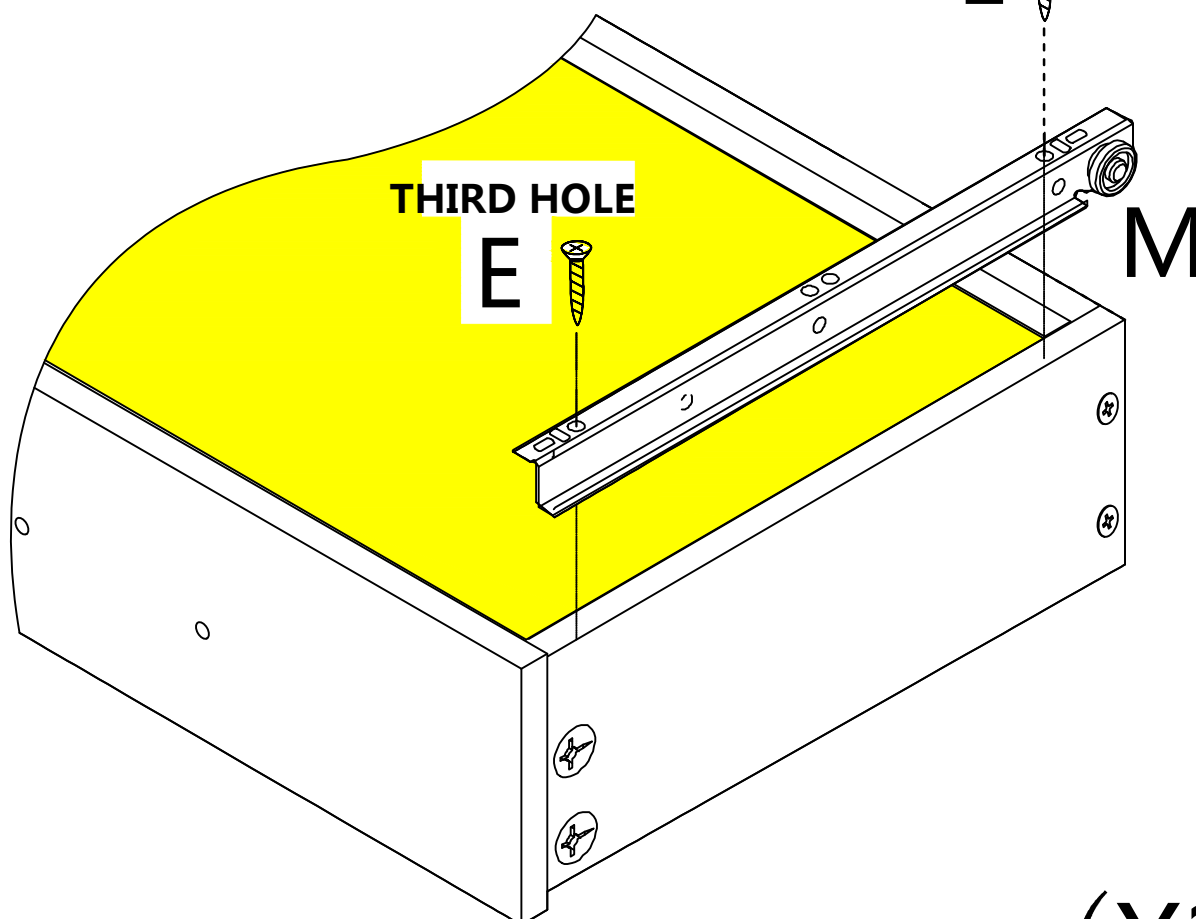


STEP 16


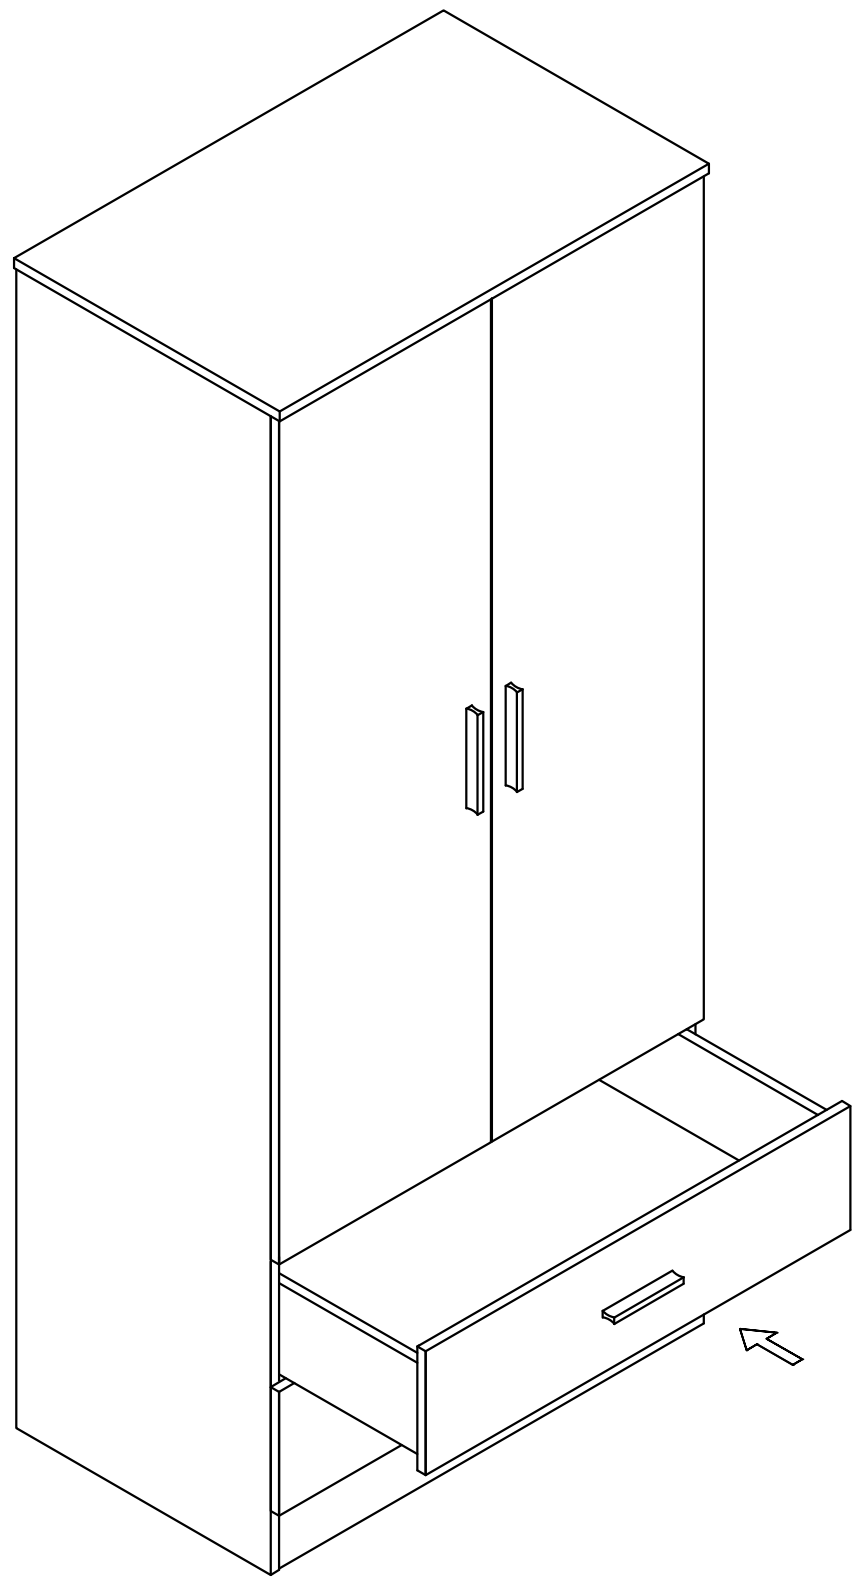






Customer Attention:
To Align Doors & Control Gap In Between Doors.
Product doors may need adjusting during & after
assembly or once wardrobe contains clothing.
This can be done by adjusting appropriate screws.
See below illustration.

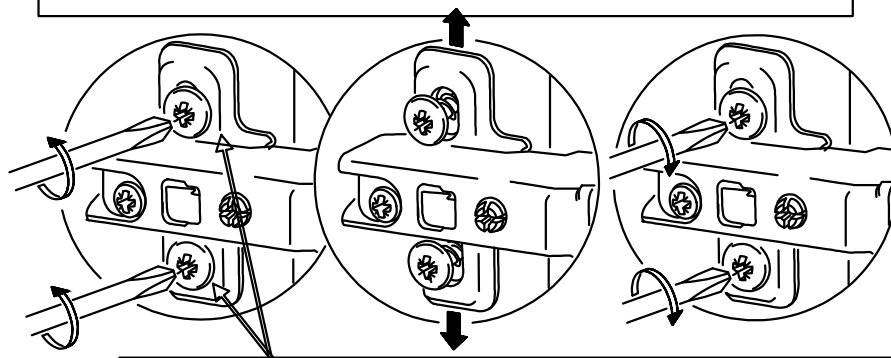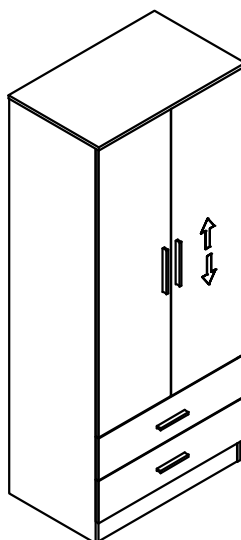

Vertical Door Adjustment:
Loosening both screws on all hinges and lift the door
to desired height. This allows an even space at the
top and bottom between door and wardrobe frame.

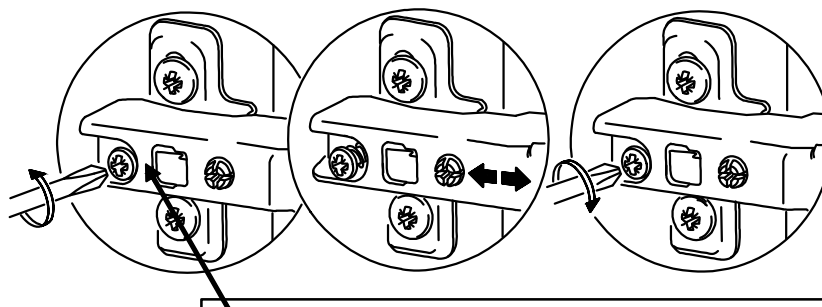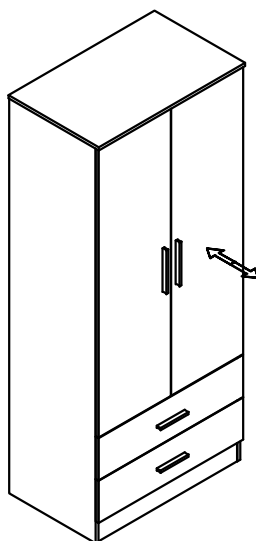

Lateral Door Adjustment:
If door is hinge bound, (rubbing on frame as you
close or open door) loosening screw shown and
move the door in appropriate direction. (In or out)

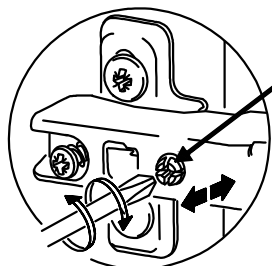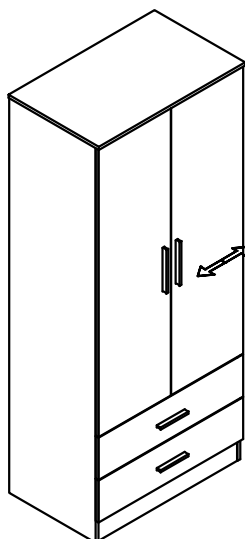


Horizontal Door Adjustment:
Rotate Screw clock wise or anti
clockwise. This
will produce an even gap between doors
and frame.

STEP 17



OPTIONAL:

For Health and Safety reasons we advise you to use Safety Strap supplied.


Bracket/Strap

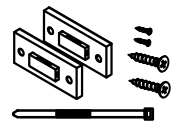


Q=2

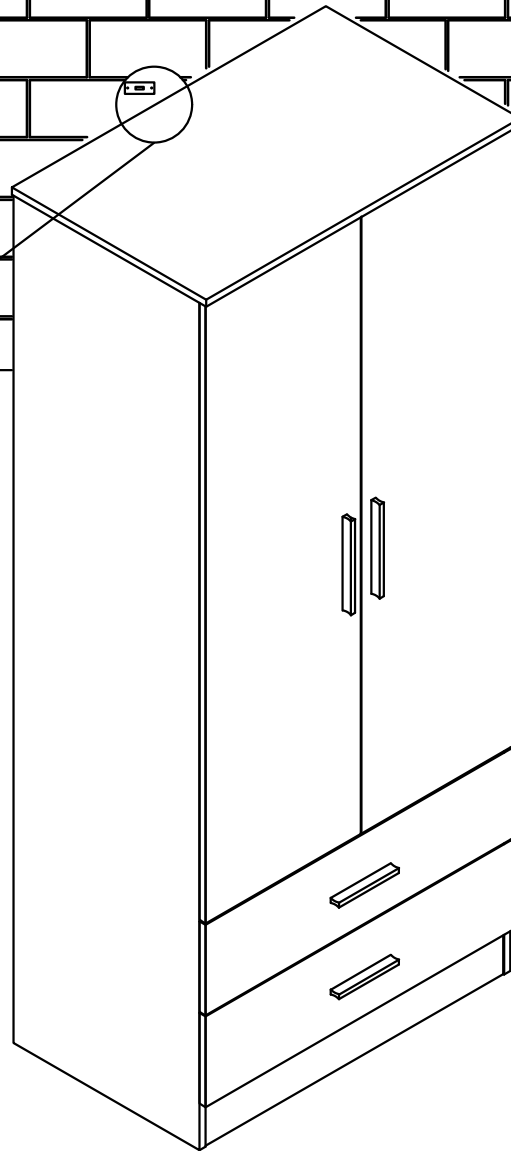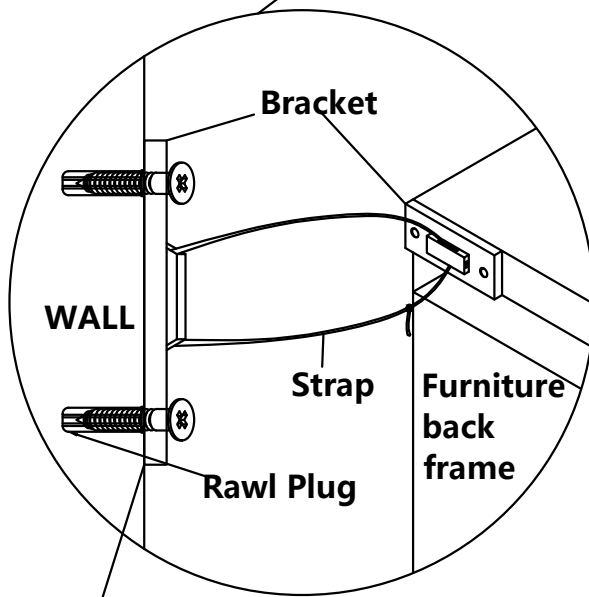

Drill


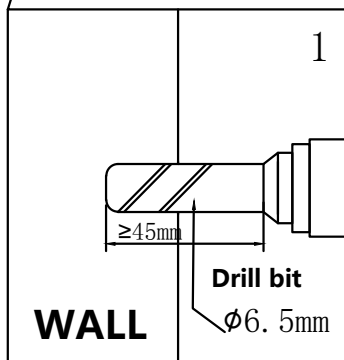


Rawl plug

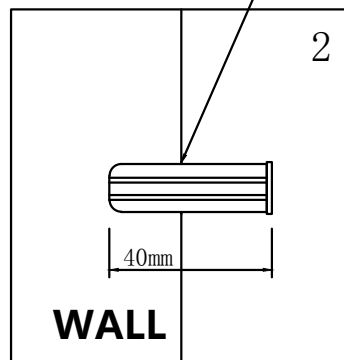

Rawl plug

Bracket

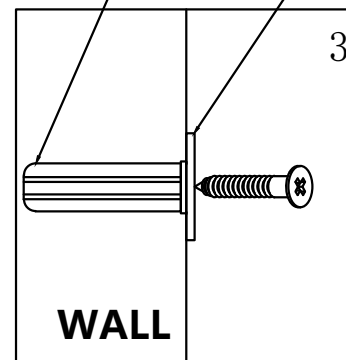

Not provided


(for installation of bracket onto concrete wall)

A Philip screwdriver is required to install the bracket to the wall and furniture back frame.
For concrete wall-a Drill is required.


Note:Screwdriver,Drill&drill bit are not provided.

Your 2 DOOR & 2 DRAWER WARDROBE COMBI is now completely assembled

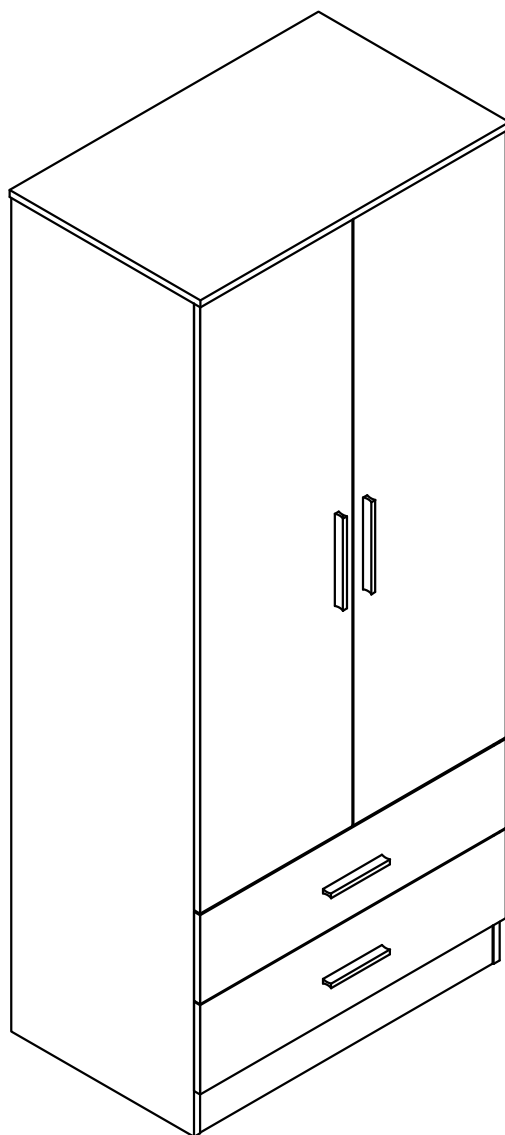

Periodically check to ensure that the components are in their proper position , free from damage Also , make sure the connectors are tight and secure.

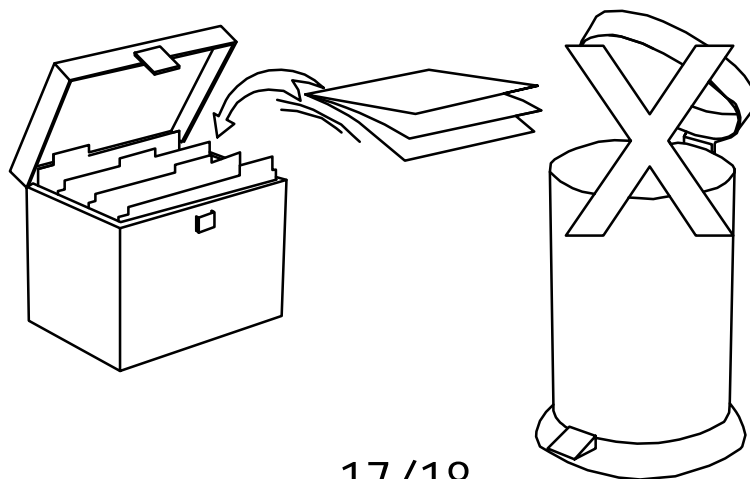


Keep instructions for future reference



Optional step - available to match reflect range wardrobes only


R		4 PCS
S		1 PC

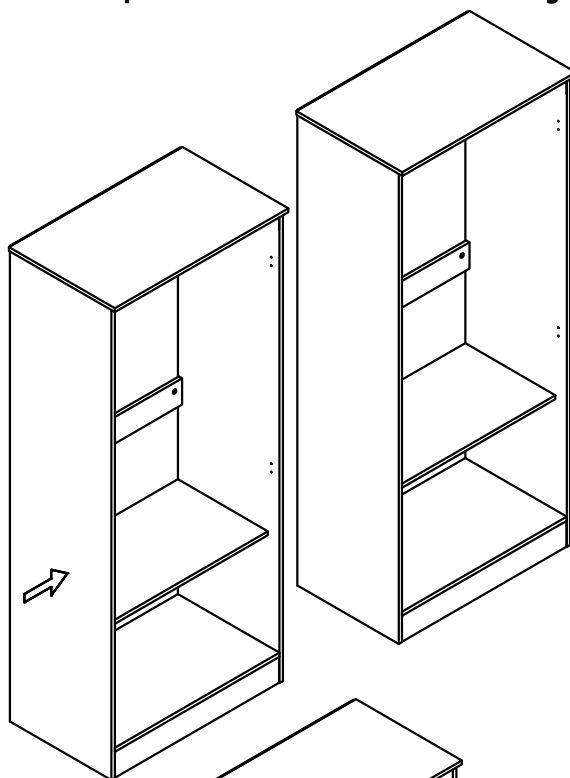

← To Secure multiple pieces of the wardrobes together:



Step 1:
Position the wardrobes together in the location where they will remain

It will be easier to connect the wardrobes with the doors removed

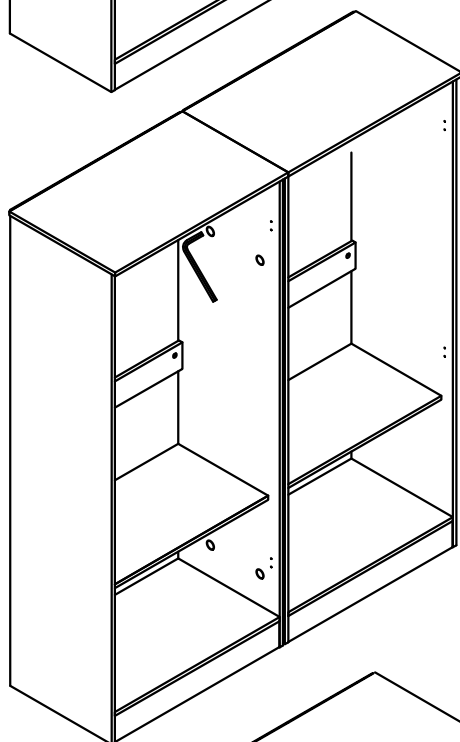

Step 2:
Drill through both side panels as indicated

The holes should be level for the best results.

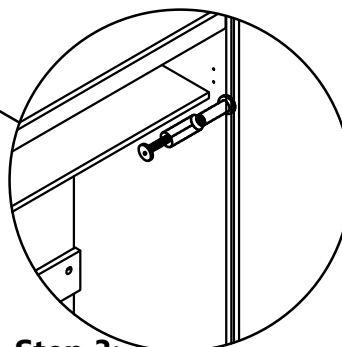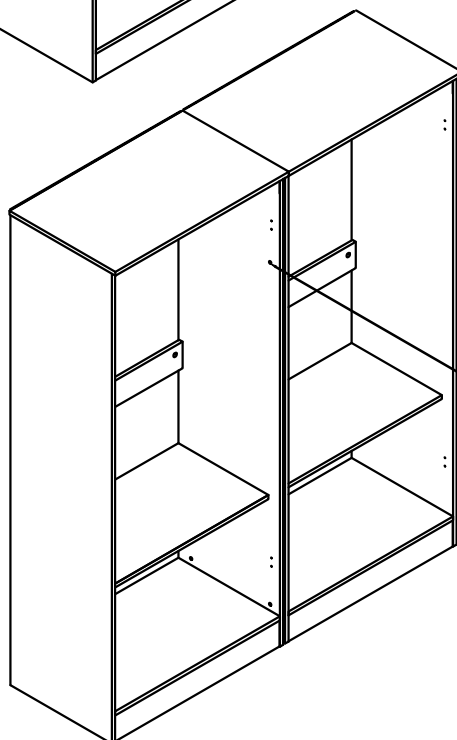

Step 3:
Position the receiving sleeve of the bolt on the right wardrobe.
Then screw the into the receiver .