



Cat House


ASSEMBLY INSTRUCTIONS

N704P333108E
















N704P333109E

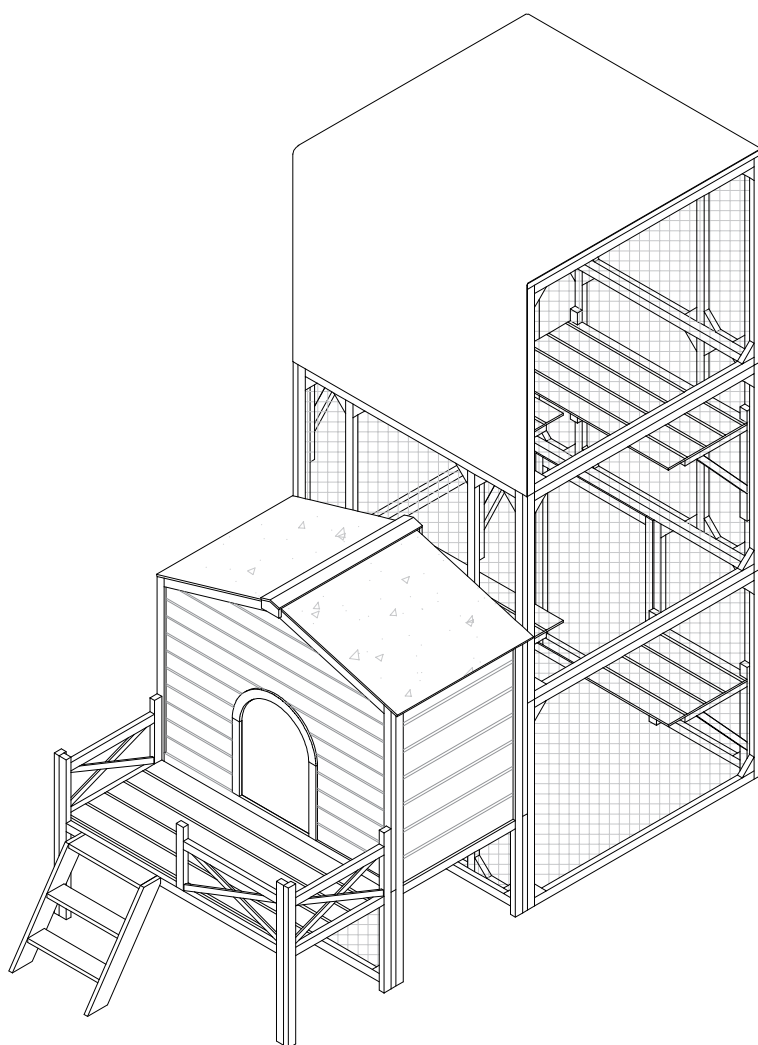



















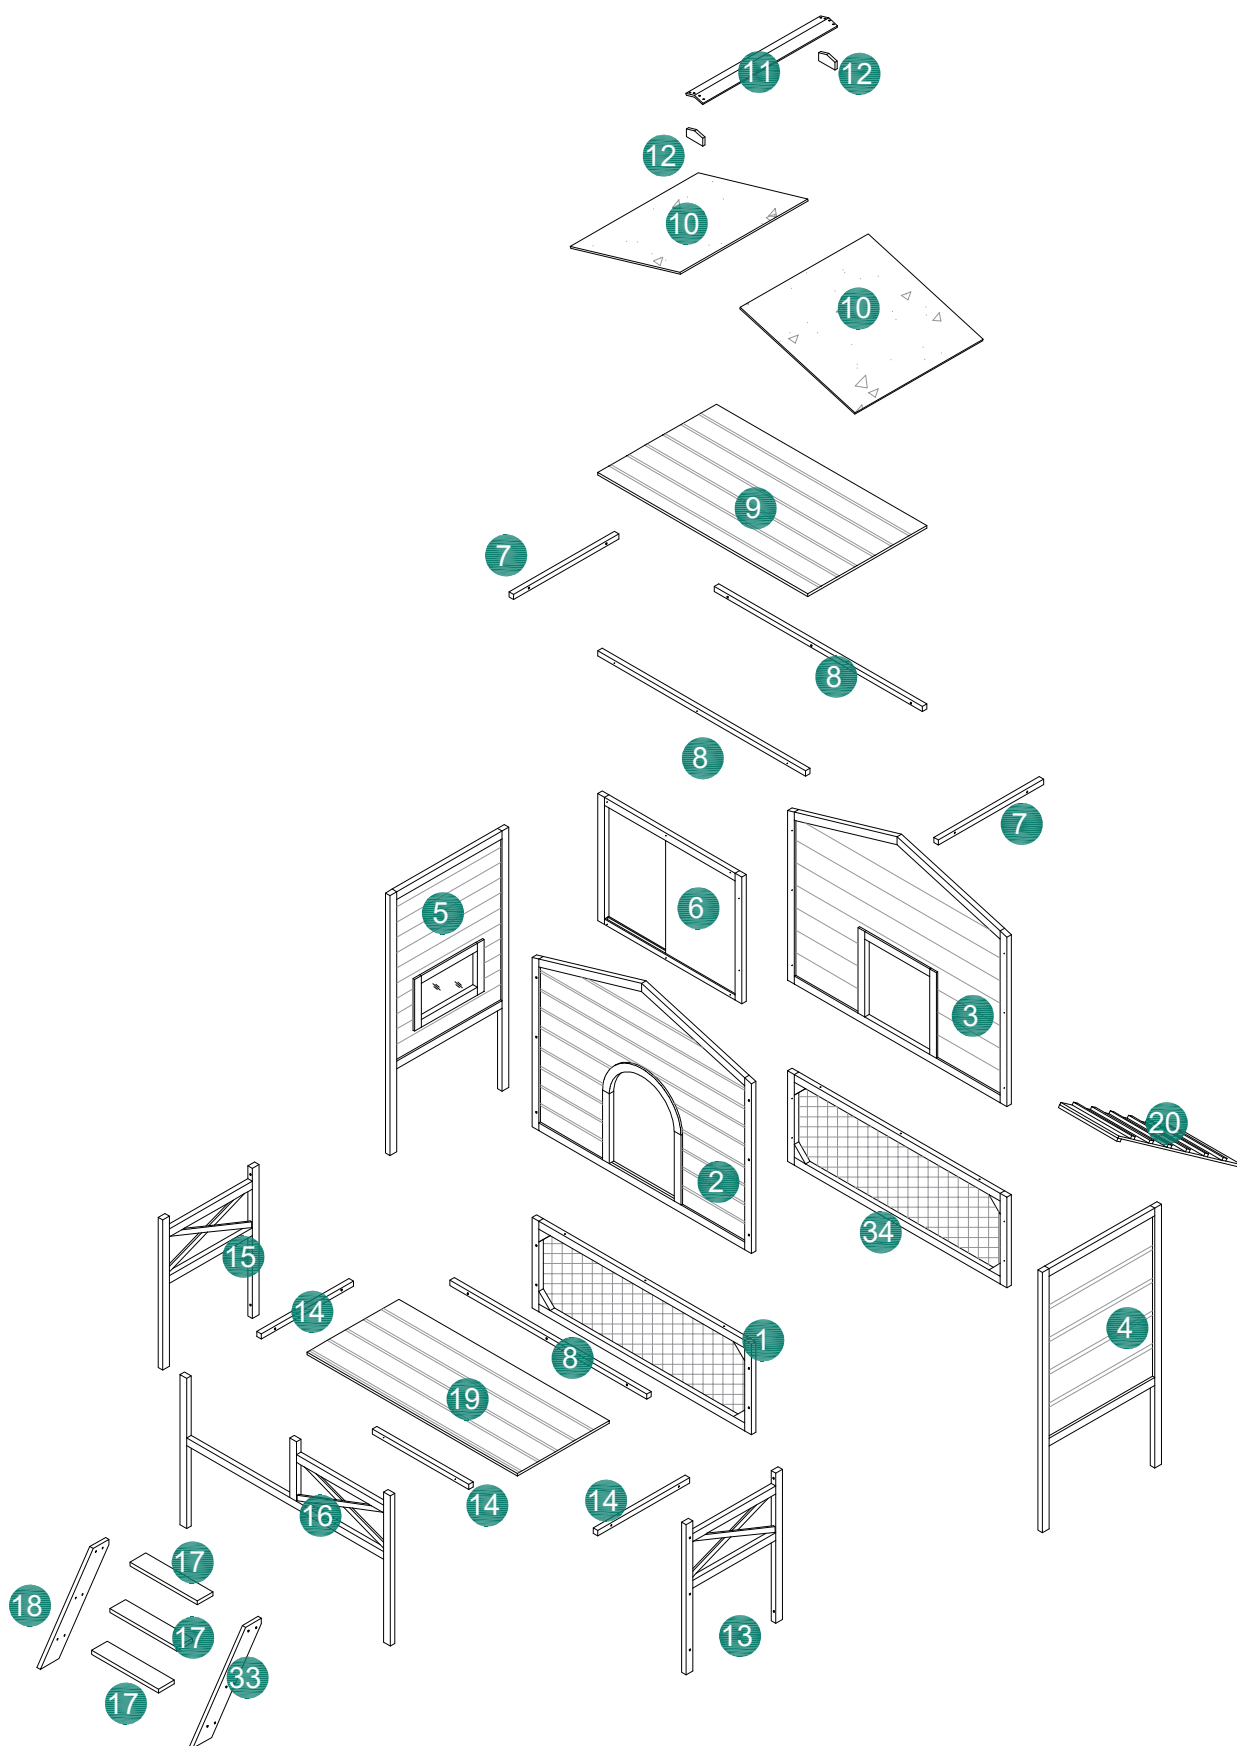


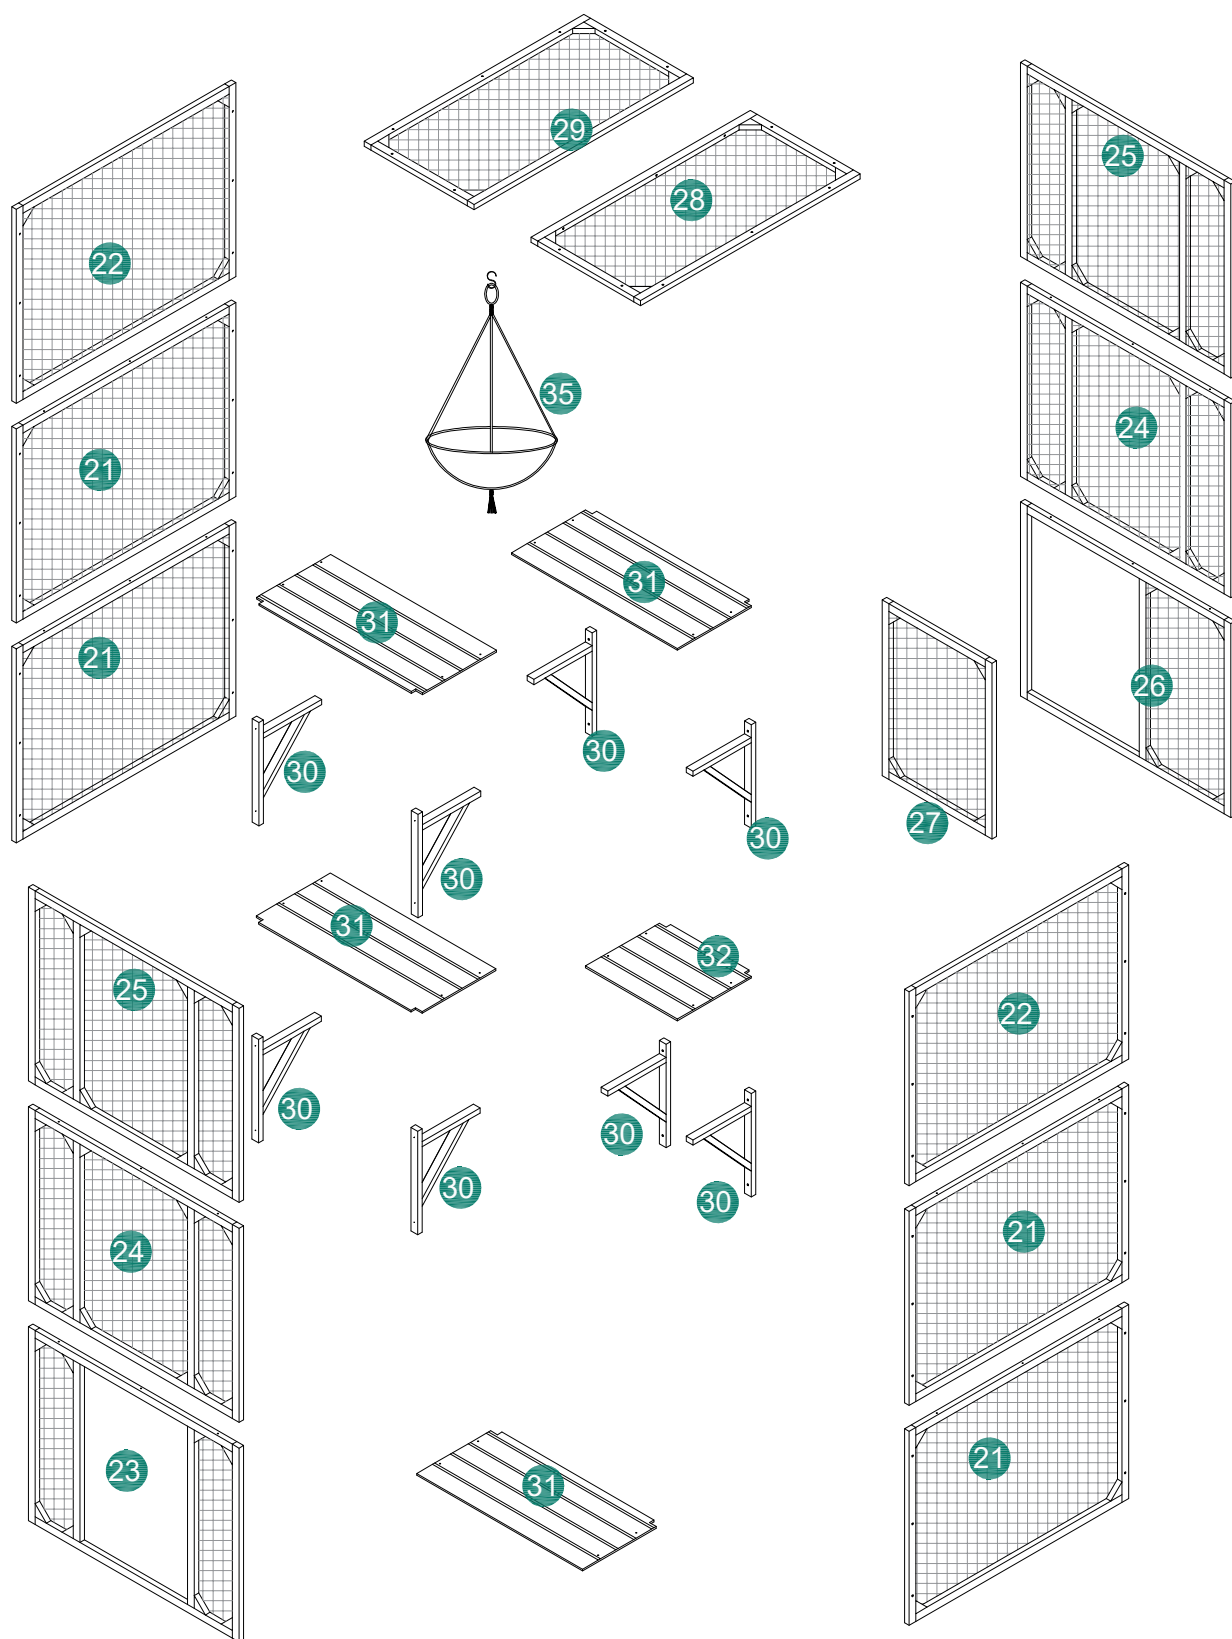











N704P333108E

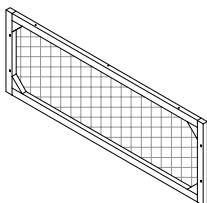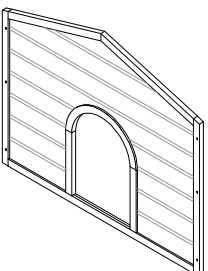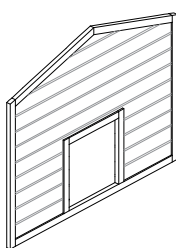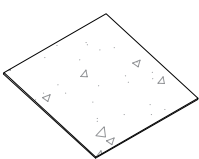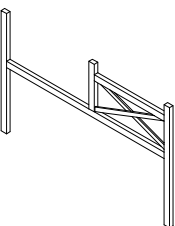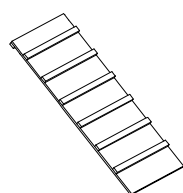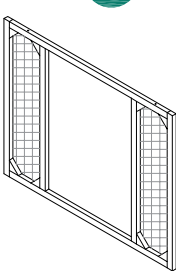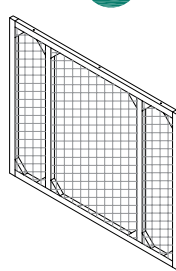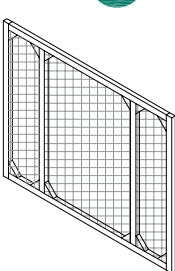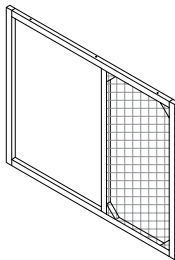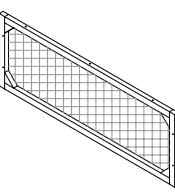1 × 1 	2 × 1 	3 × 1 	10 × 2 
11 × 1 	12 × 2 	13 × 1 	16 × 1 
20 × 1 	23 × 1 	24 × 2 	25 × 2 
26 × 1 	27 × 1 	30 × 8 	34 × 1 



N704P333109E

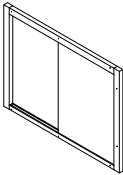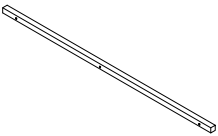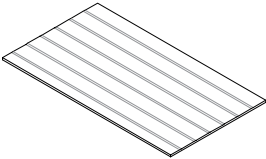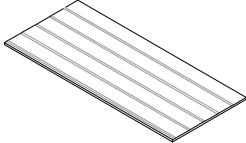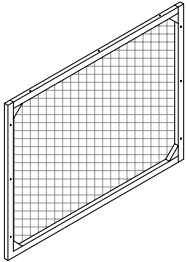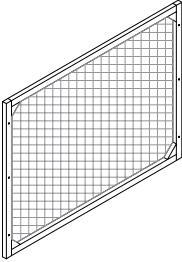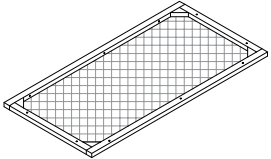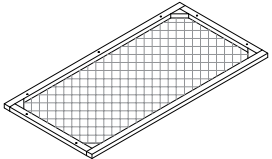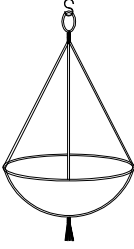4 × 1 	5 × 1 	6 × 1 	7 × 2 
8 × 3 	9 × 1 	14 × 3 	15 × 1 
17 × 3 	18 × 1 	19 × 1 	21 × 4 
22 × 2 	28 × 1 	29 × 1 	31 × 4 
32 × 1 	33 × 1 	35 × 1 	

N704P333108E



A		M3.5x45mm	37
B		M3.5x35mm	118
C		M3.5x25mm	27
D		M3.5x16mm	62
E		M3.5x12mm	6
F			18
G			1
H			2
I			2
J			1
K		2600mm	1
L			1
M			4
N			1

STEP1

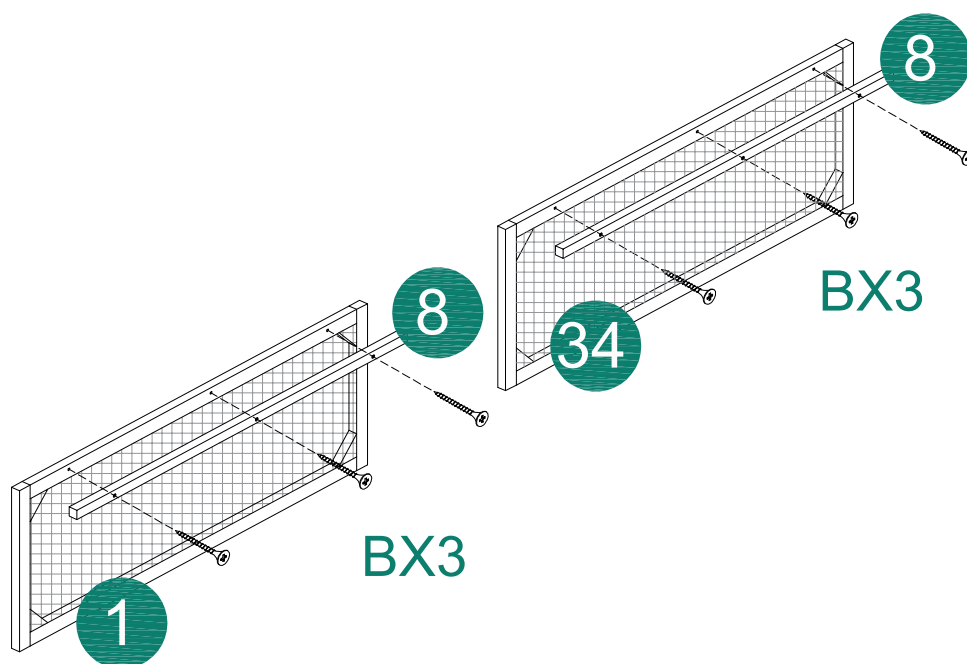



Bx6

STEP2

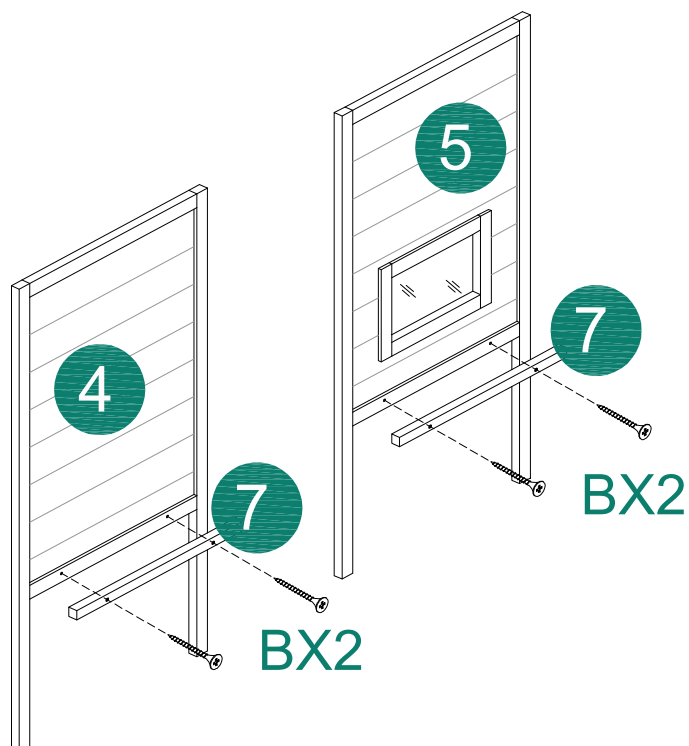



Bx4

STEP3

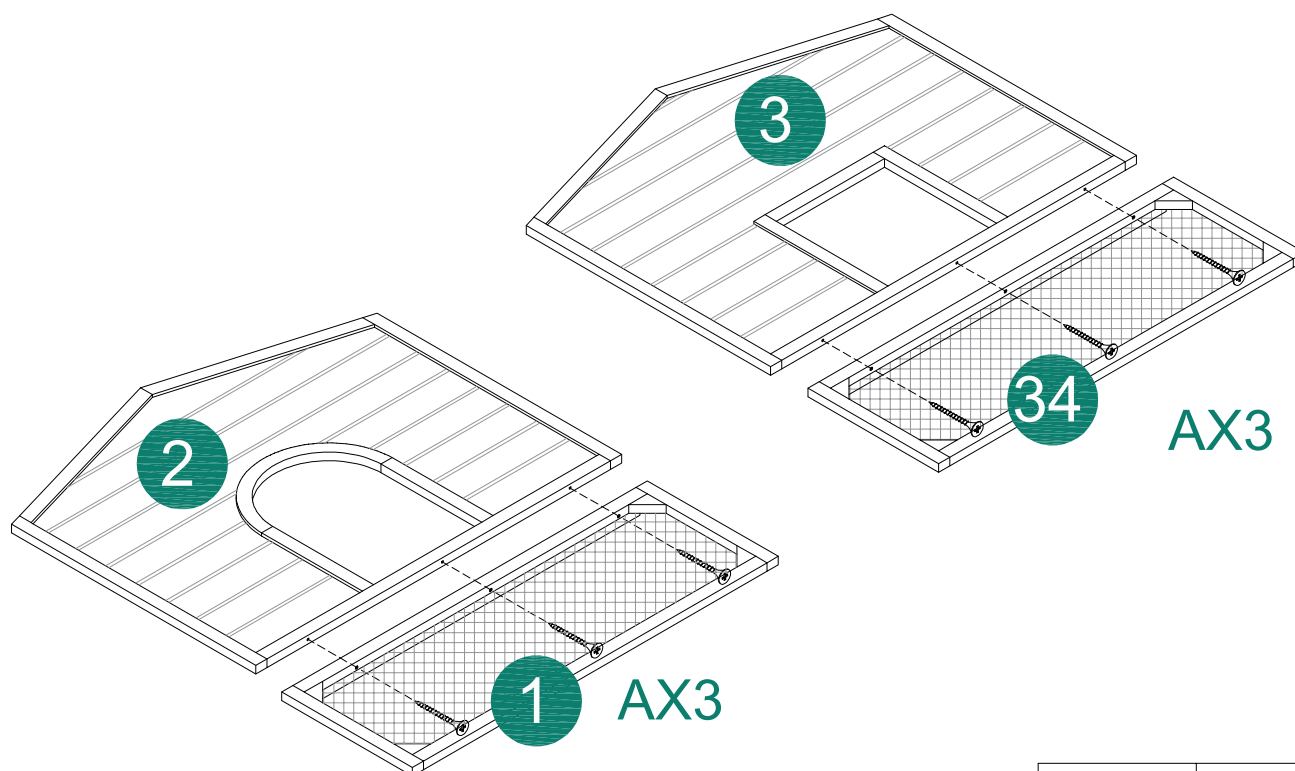


Ax6

STEP4


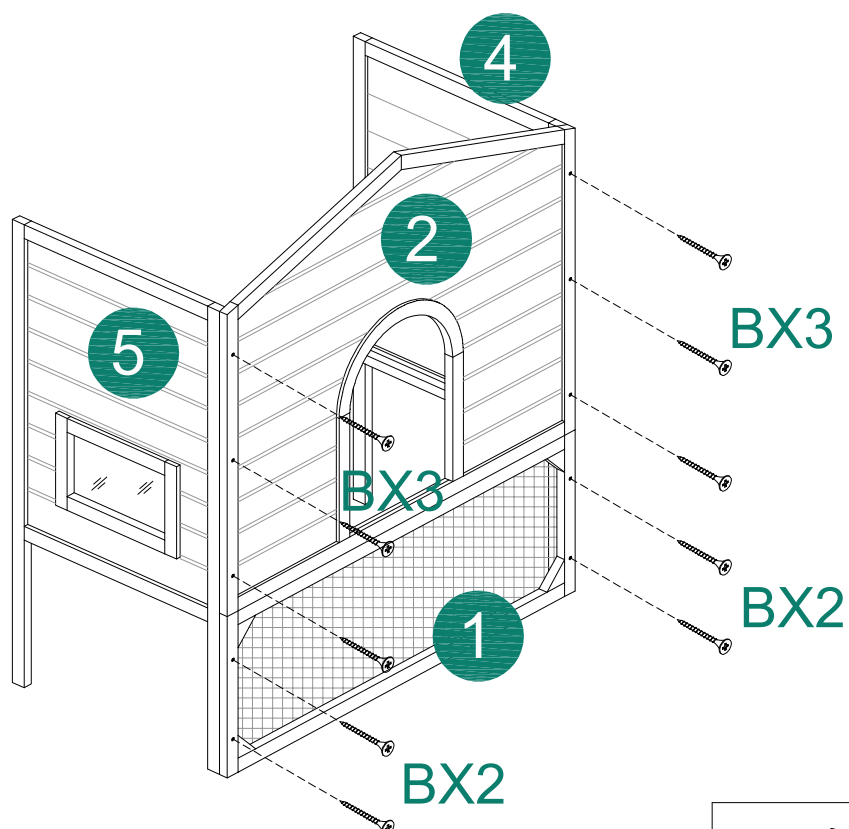




Bx10

STEP5


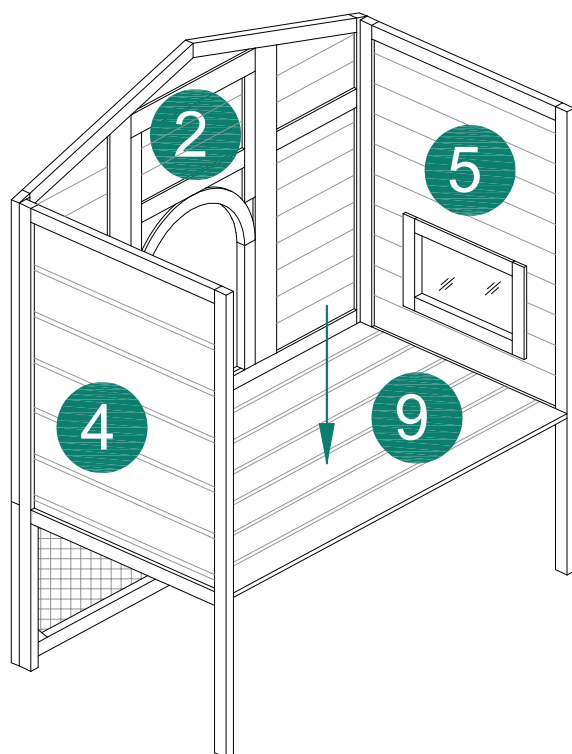


STEP6

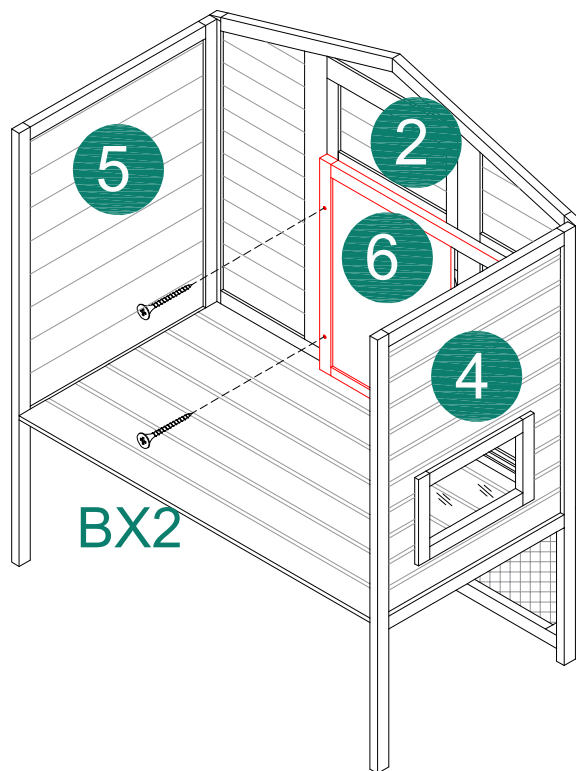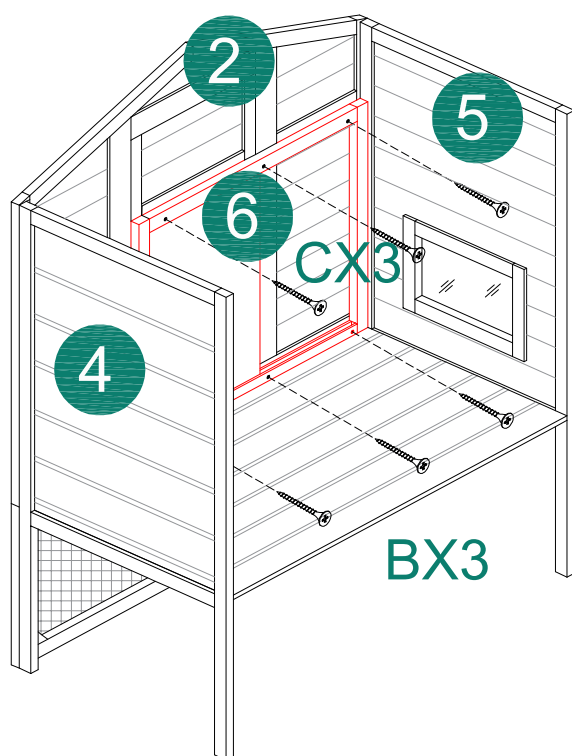



	Bx5
	Cx3

STEP7

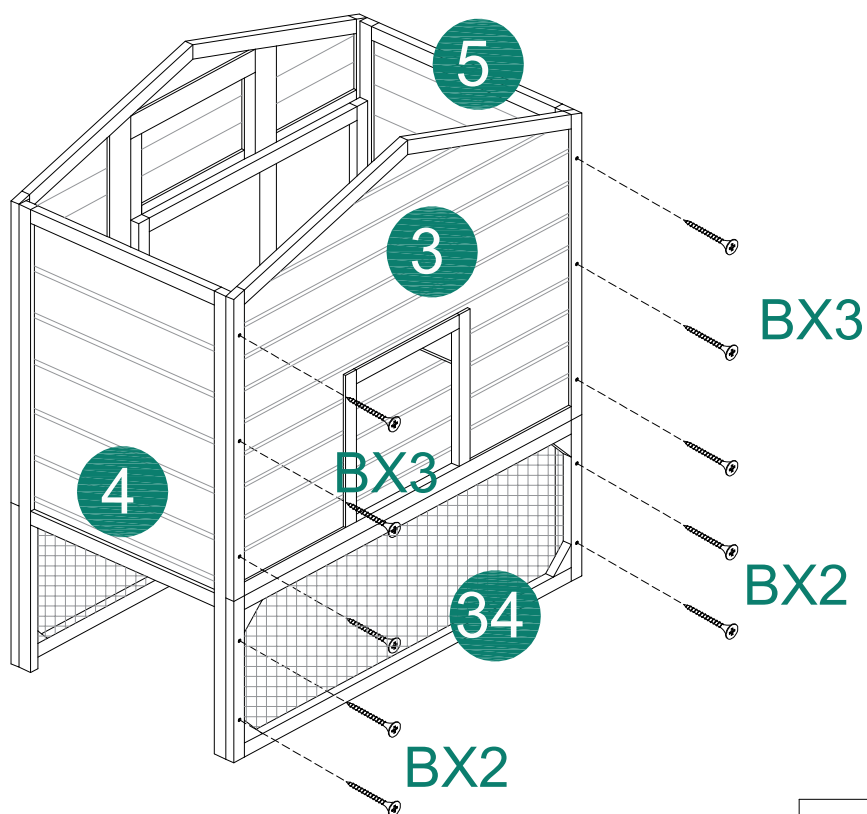



Bx10

STEP8

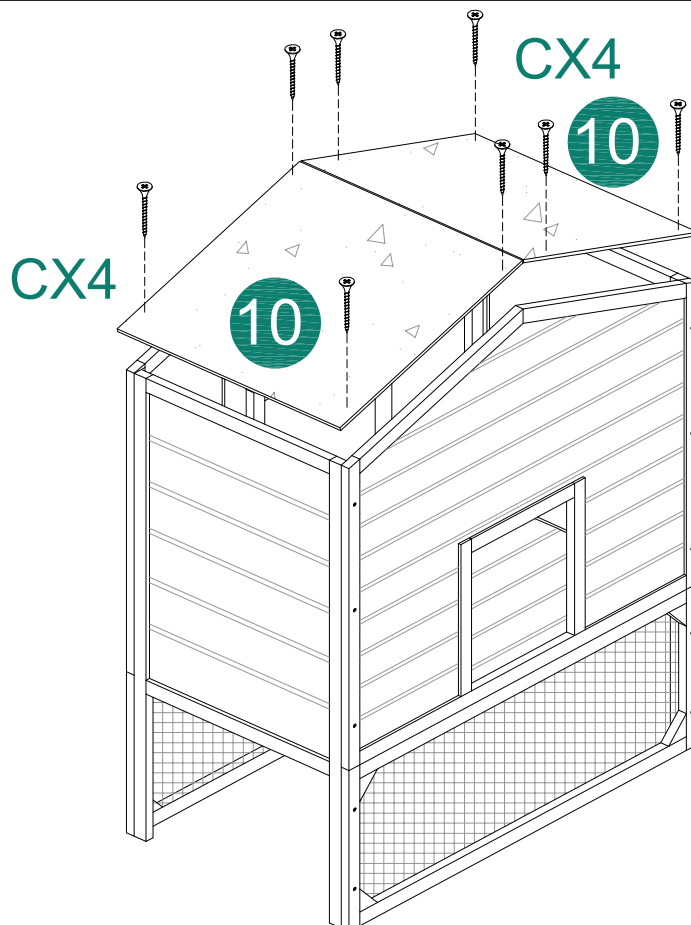



Cx8

STEP9

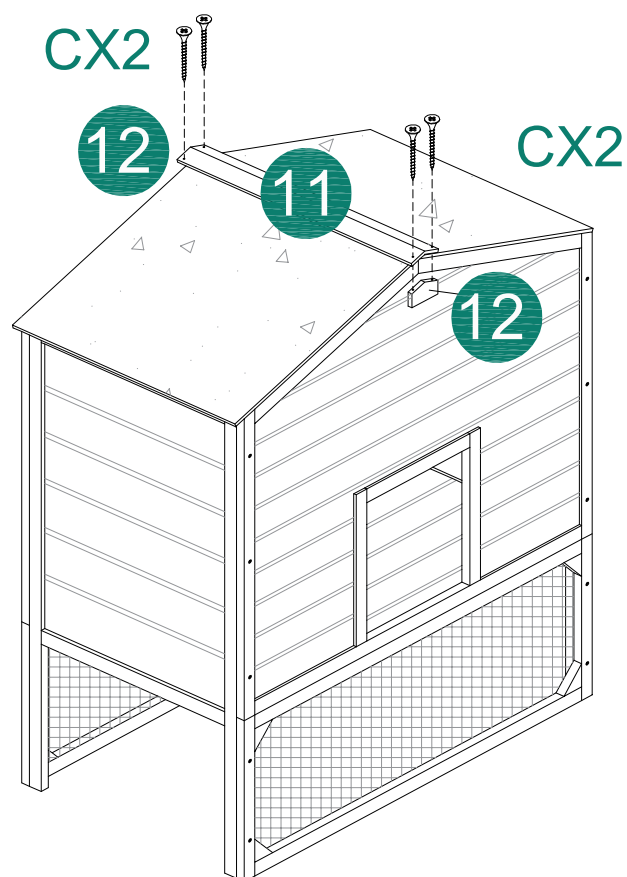


Cx4

STEP10


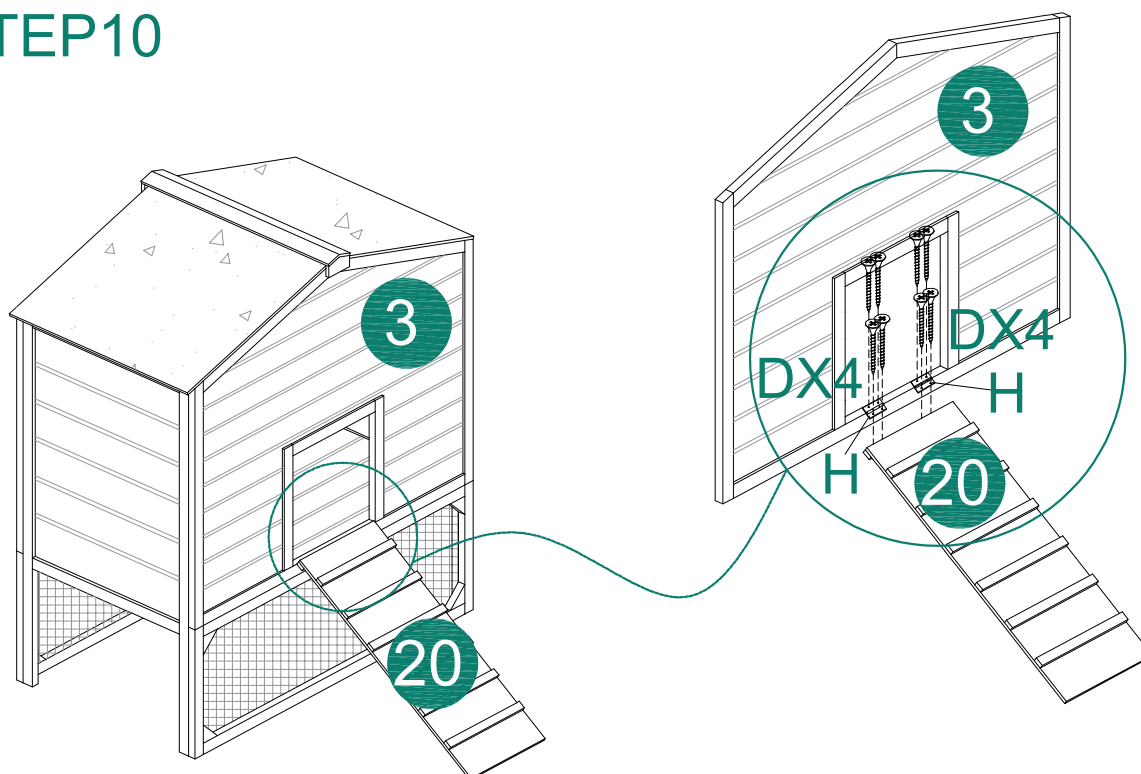


Hx2





Dx8

STEP11

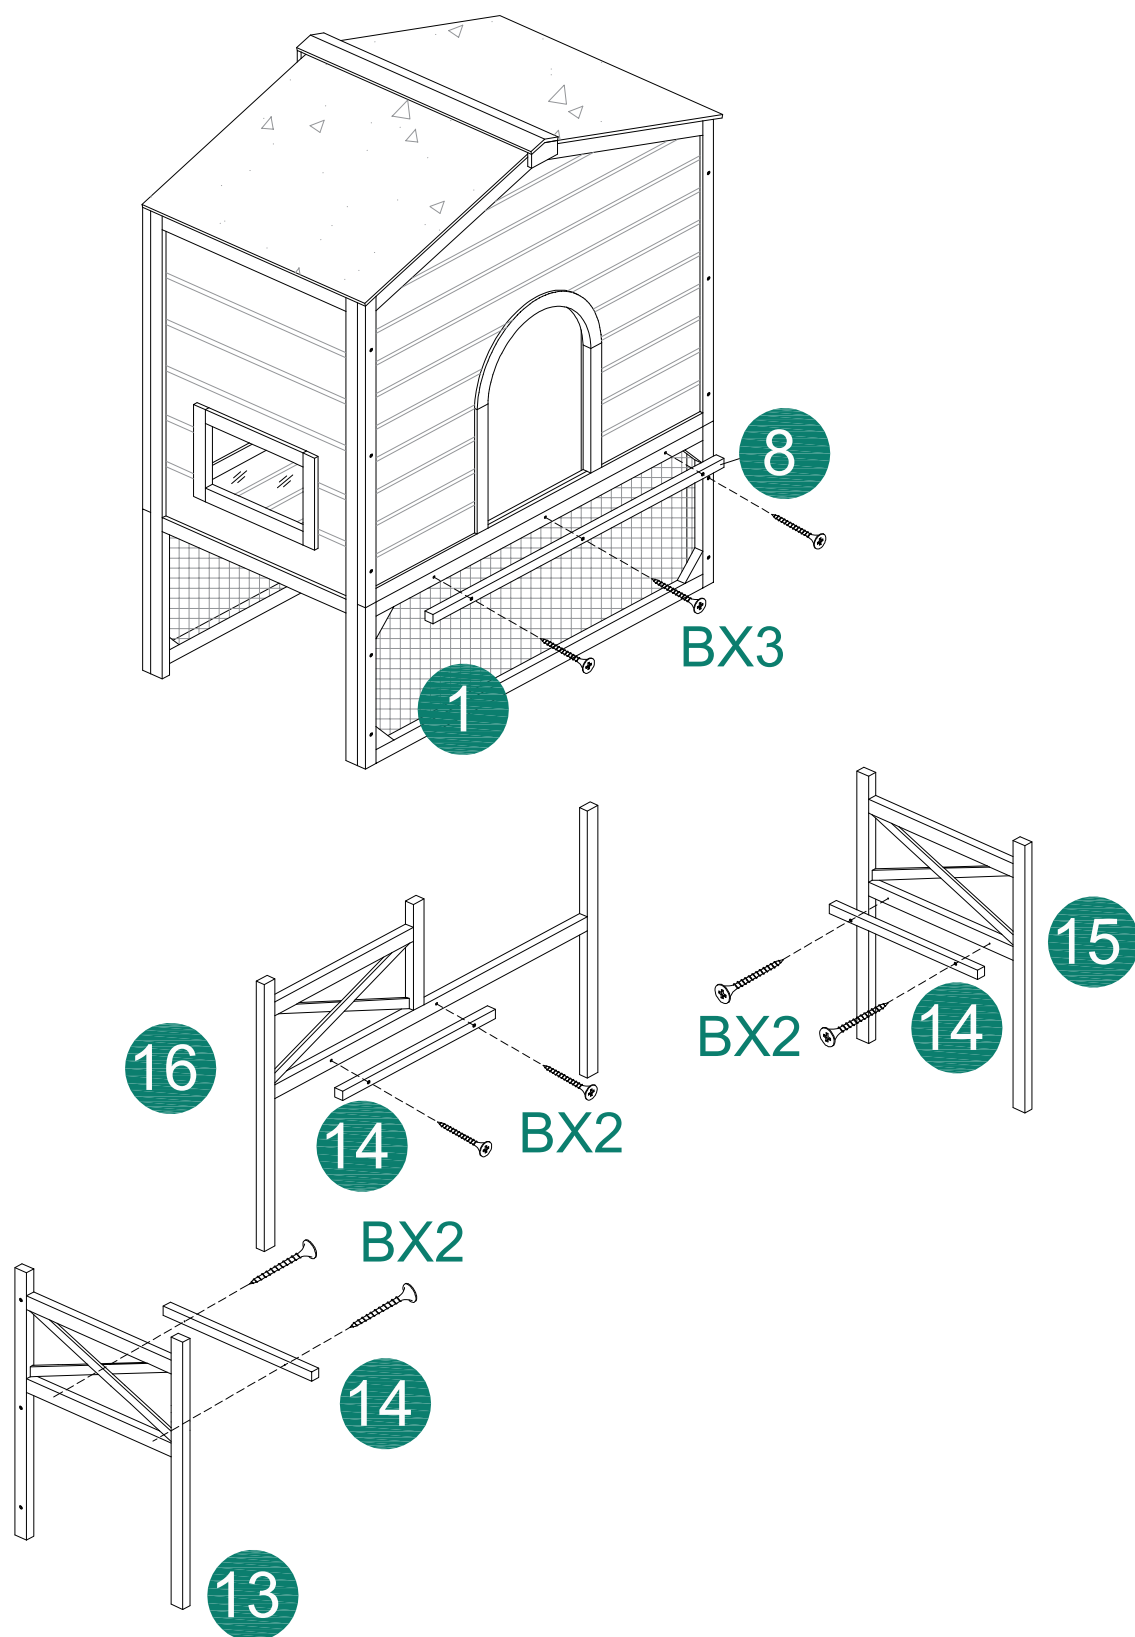



Bx9

STEP12

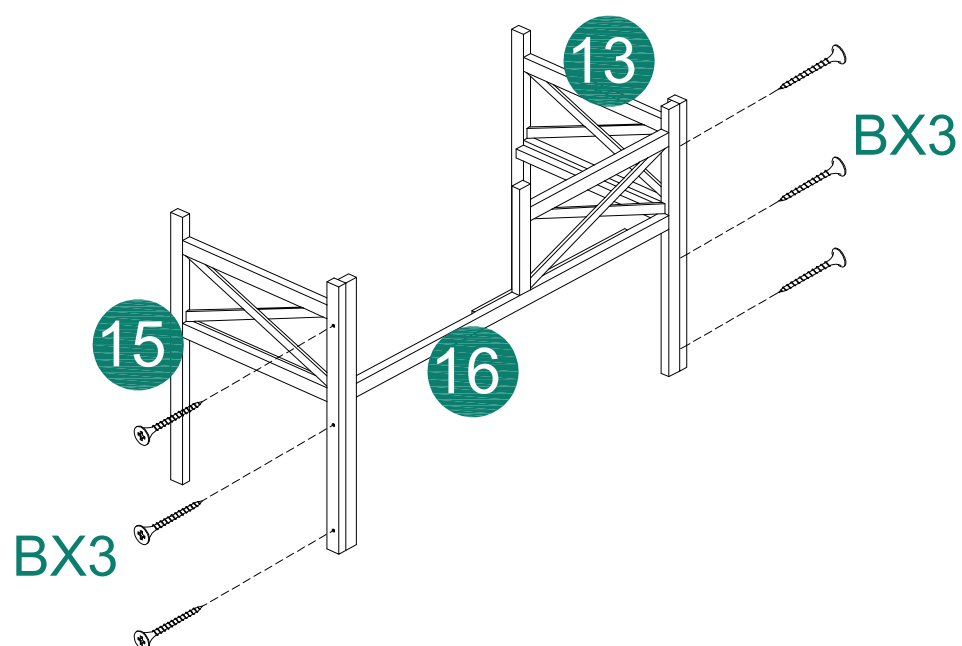



Bx6

STEP13

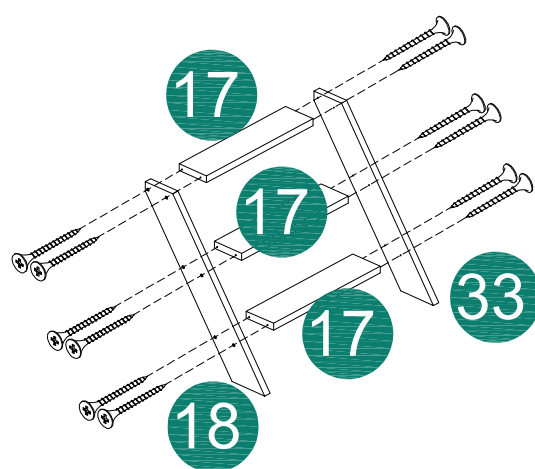


Cx12

STEP14

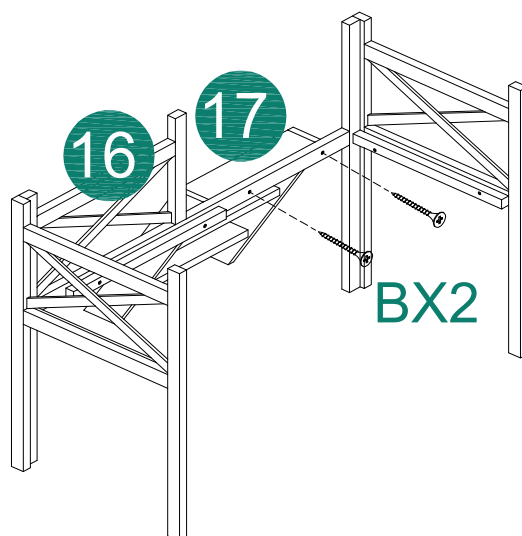


Bx2

STEP15

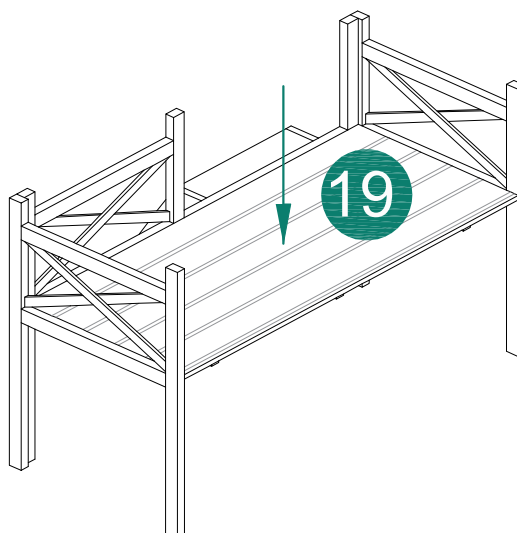


STEP16

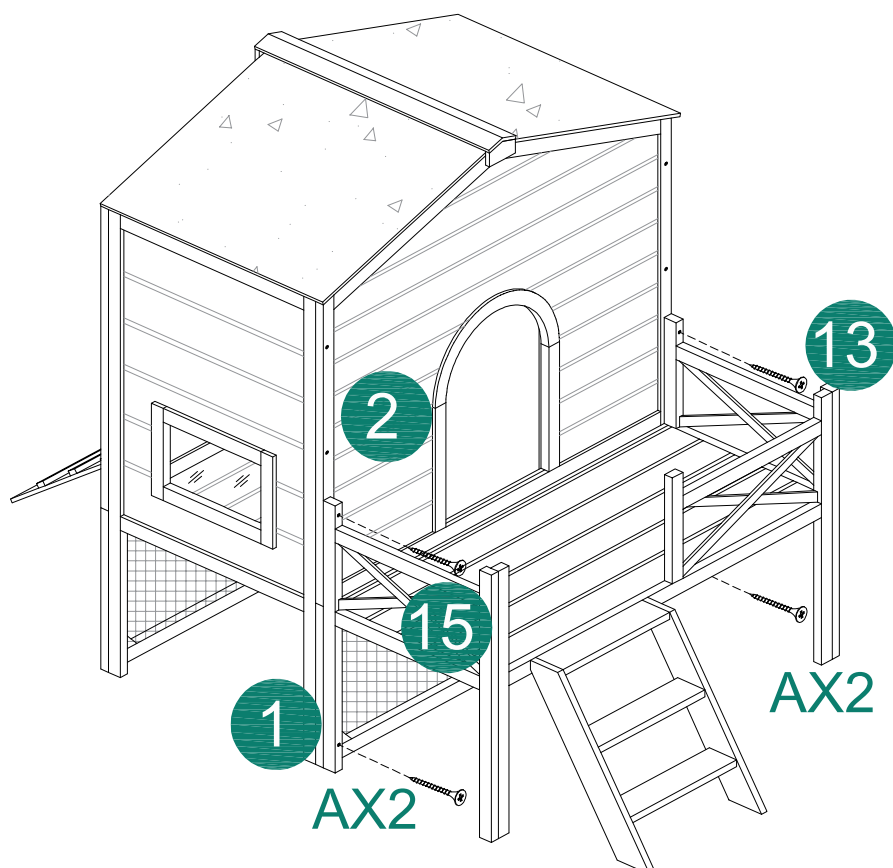


STEP17


The hook in the sheep eye
hook while the door pushes right

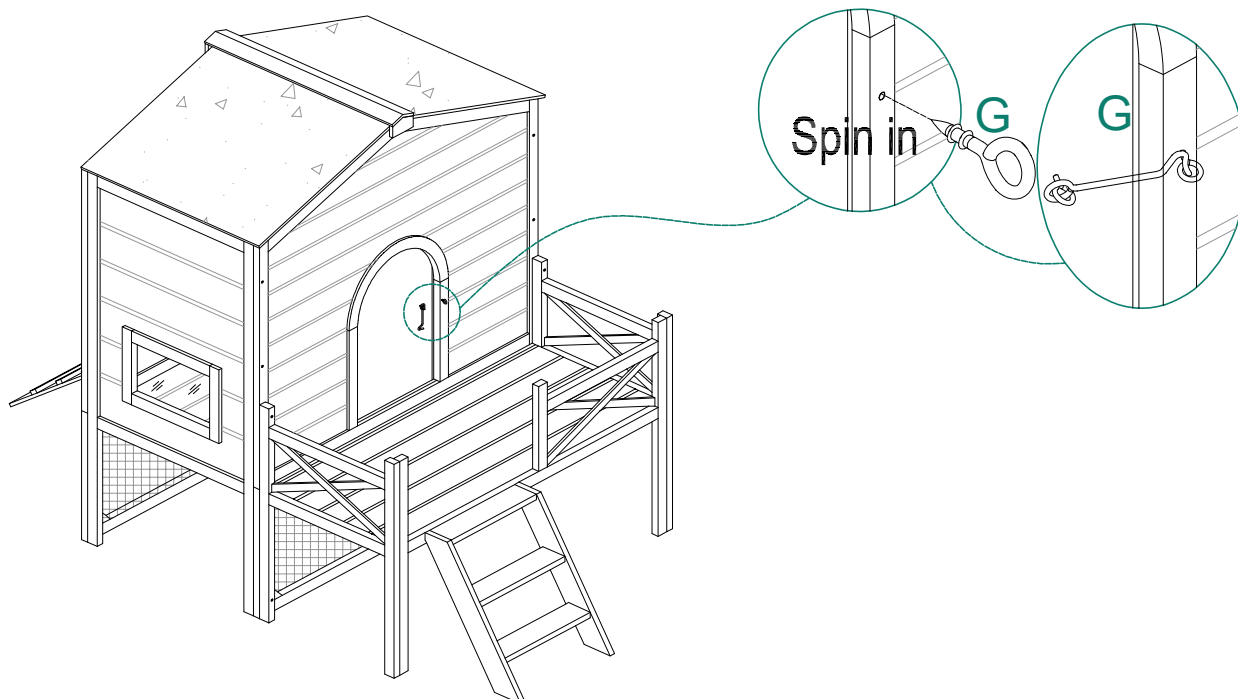

The first
installation method
TYPE-1


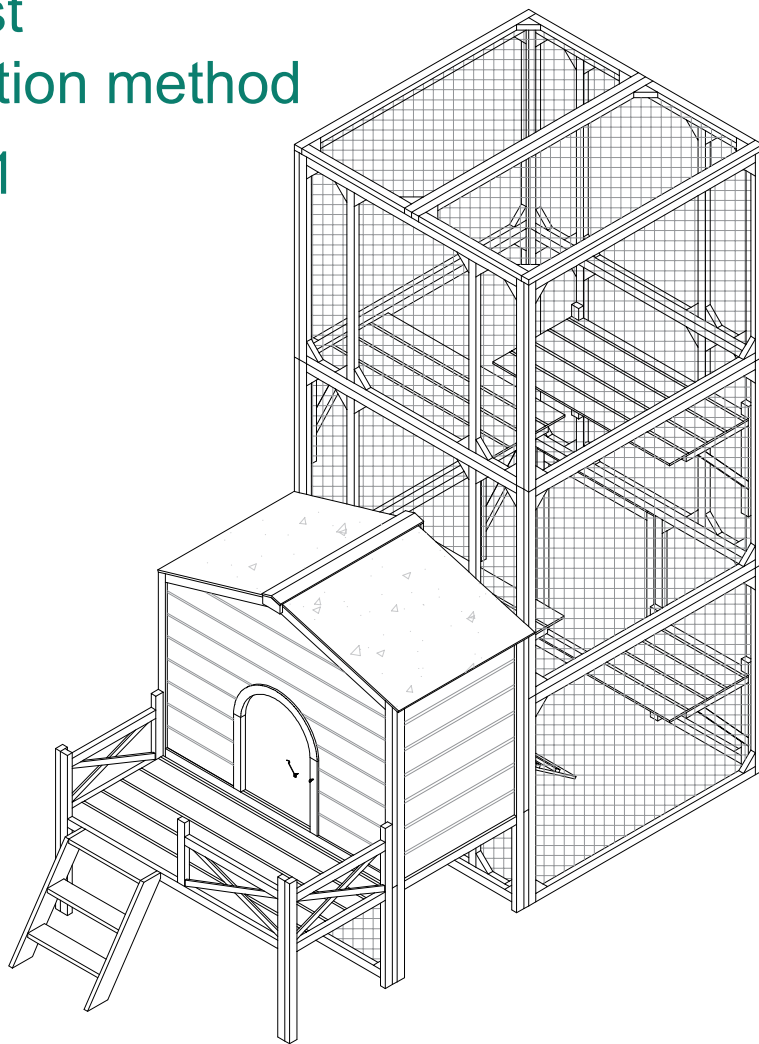


The second
installation method
TYPE-2

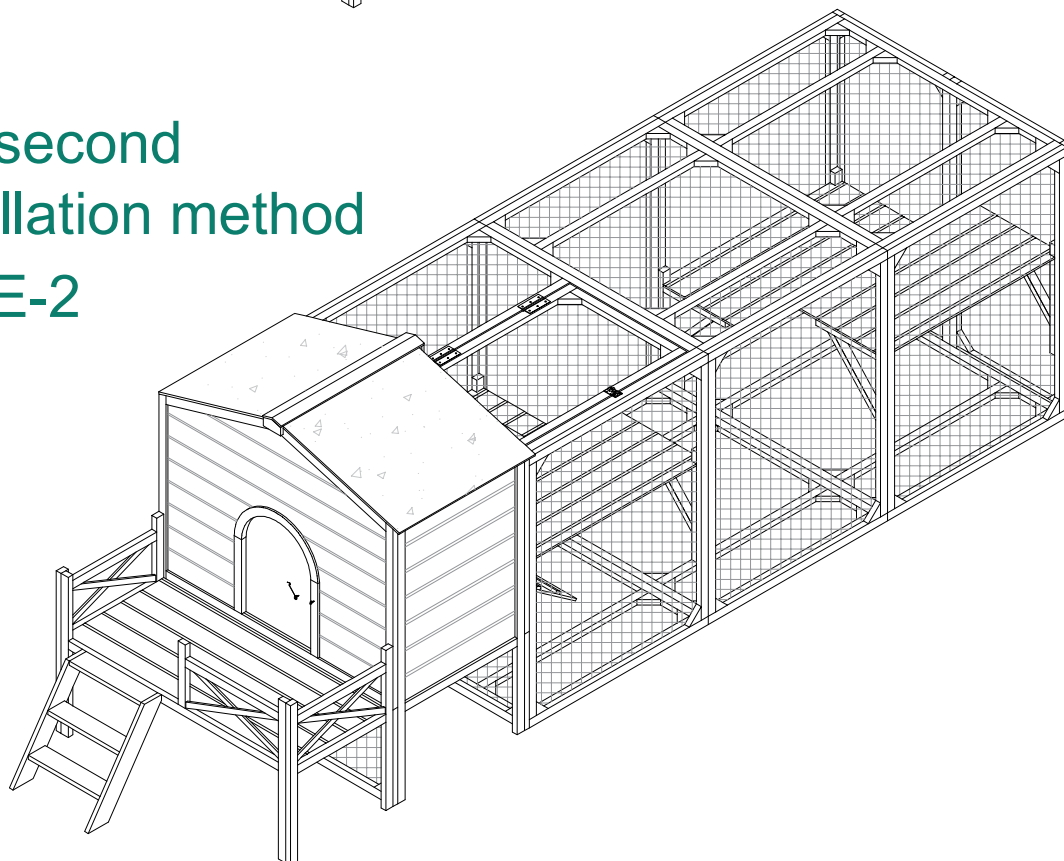



TYPE-1

STEP18-1

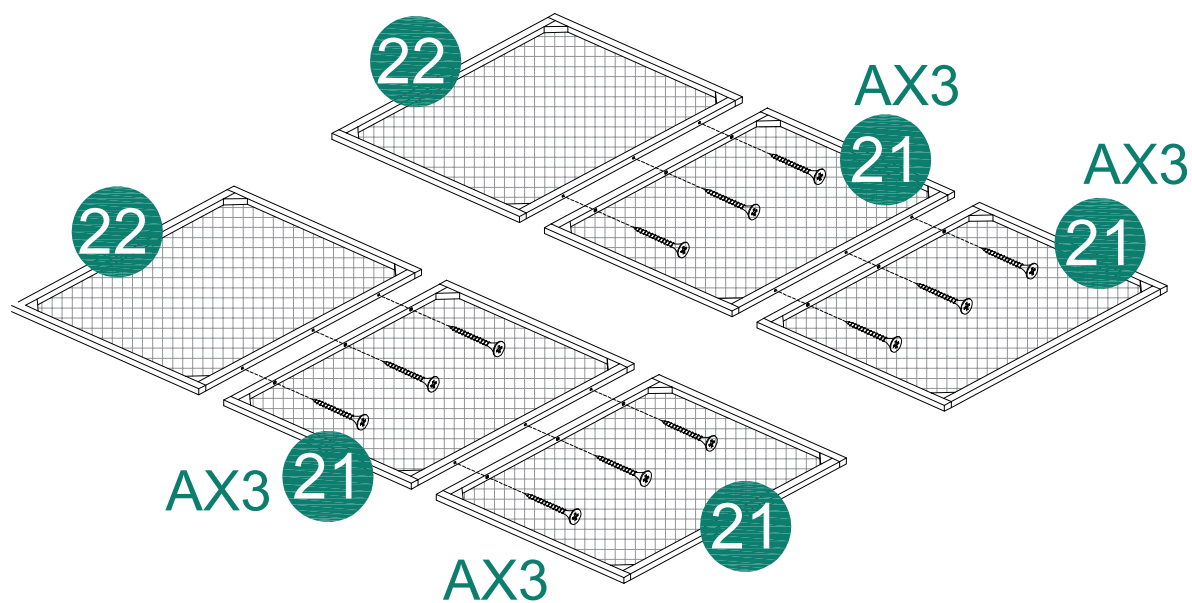

Ax12



STEP19-1

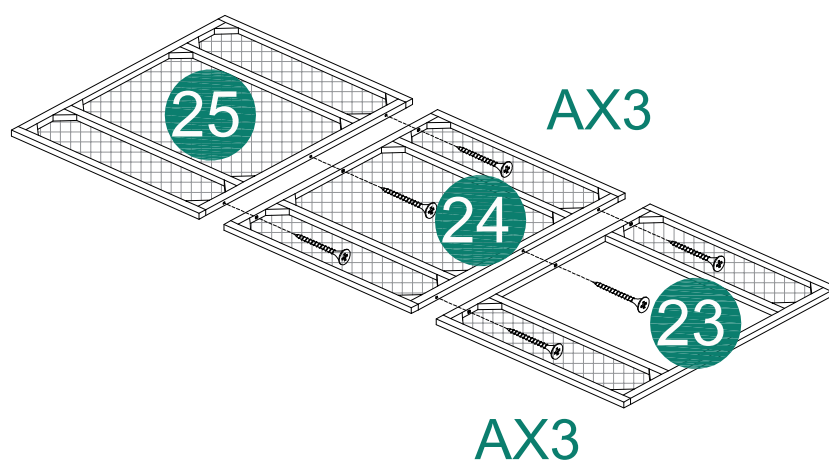

Ax6



TYPE-1

STEP20-1

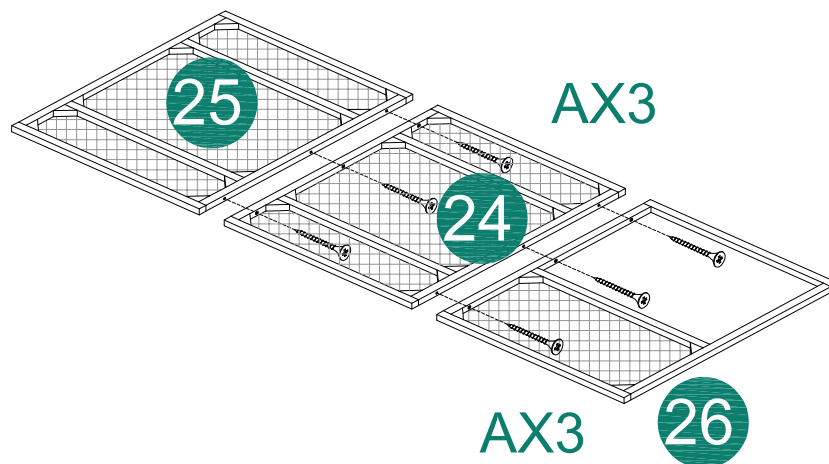

Ax6


STEP21-1


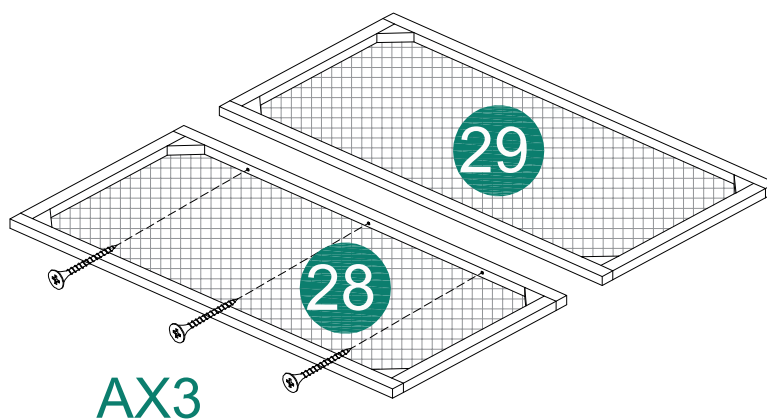


Ax3


TYPE-1


STEP22-1

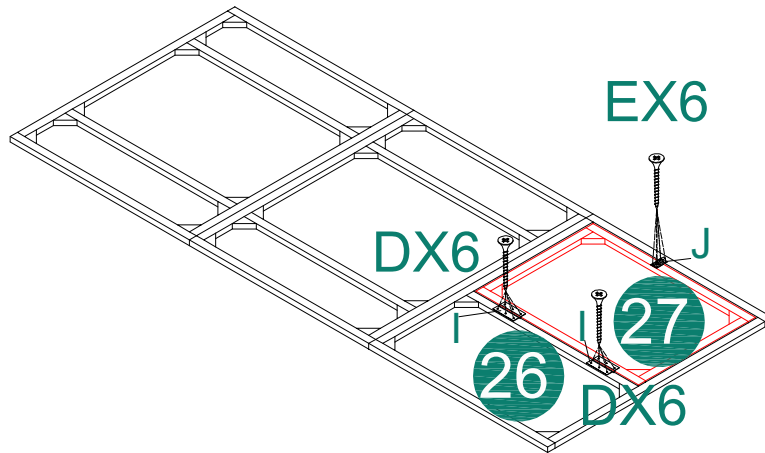

	Dx12		Ex6
	Jx1 (Set)		Ix2


STEP23-1

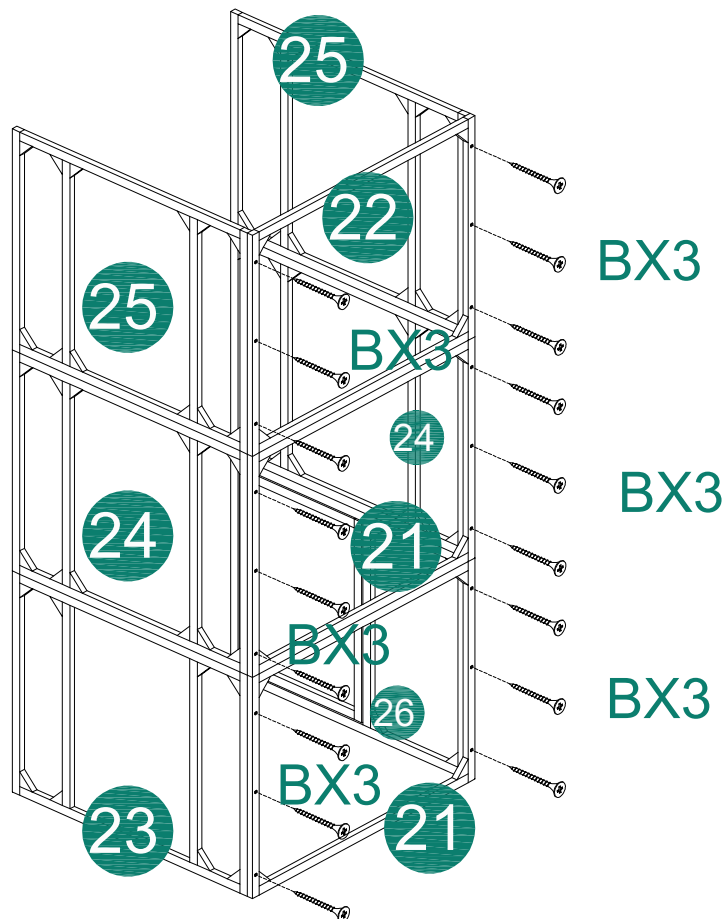


	Bx18
---	-------------

TYPE-1

STEP24-1


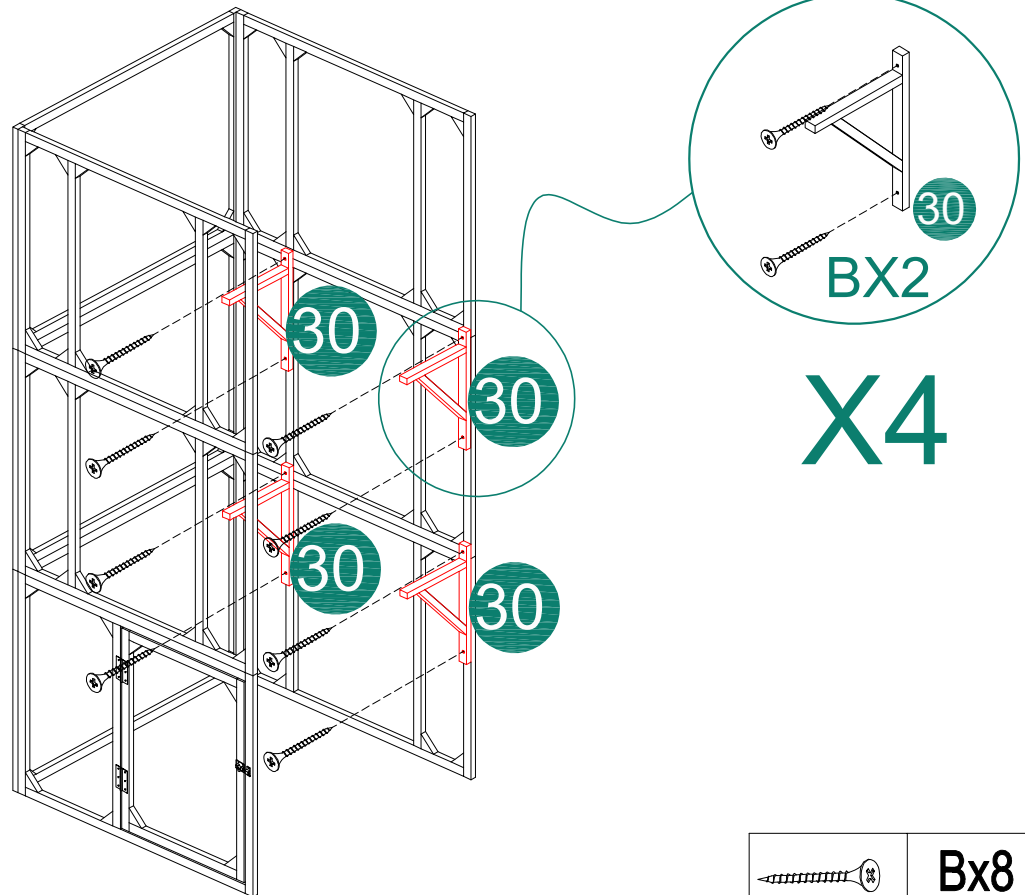


STEP25-1

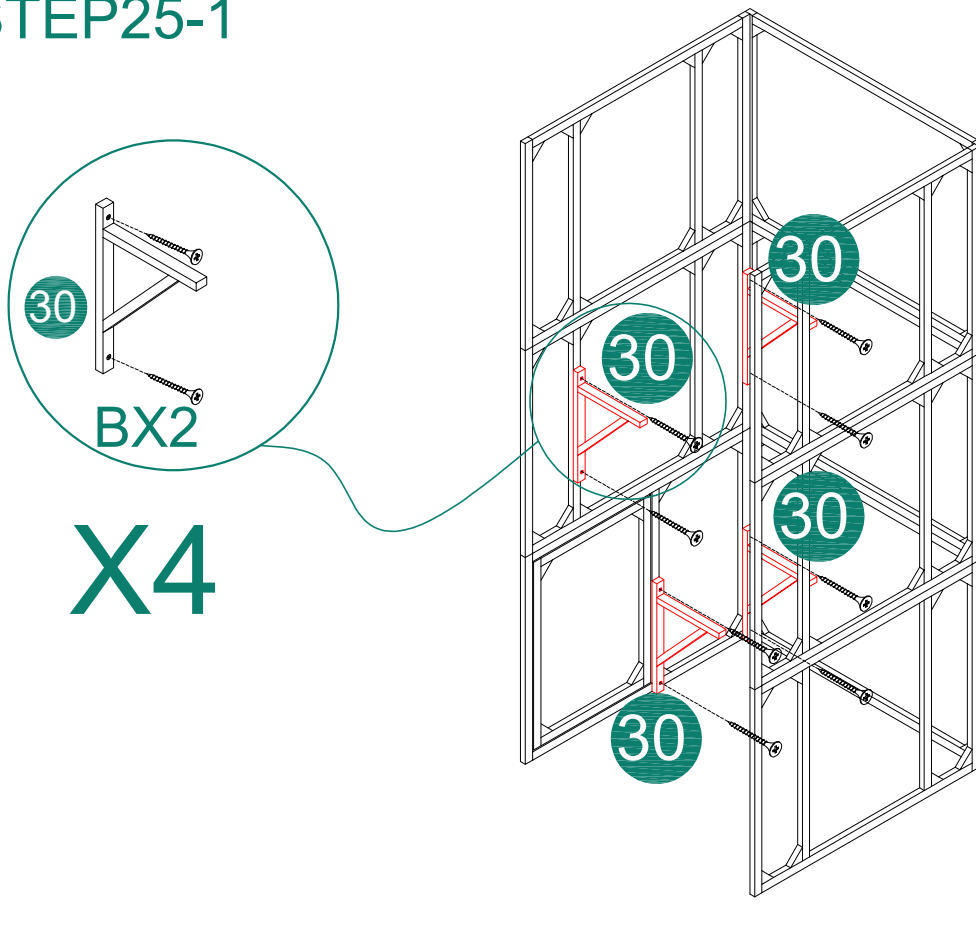



TYPE-1

STEP26-1

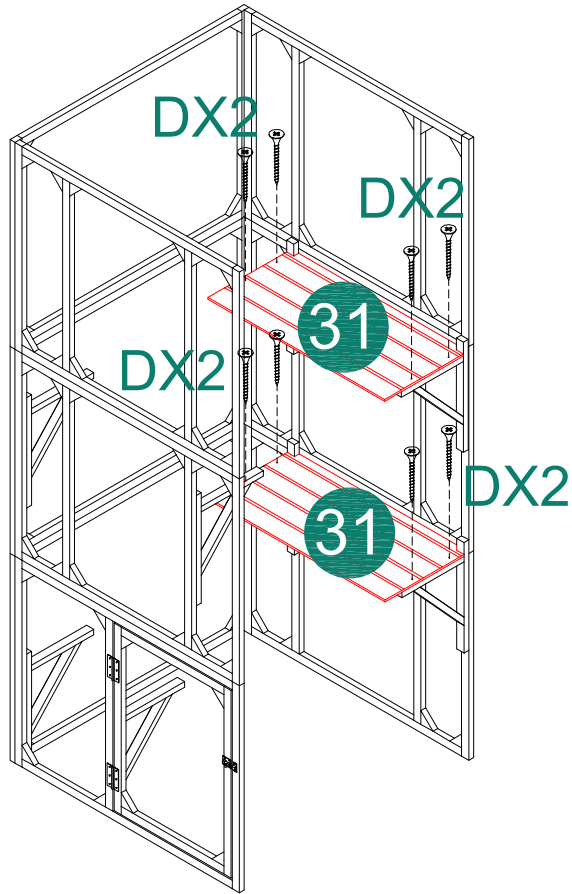

Dx8


STEP27-1

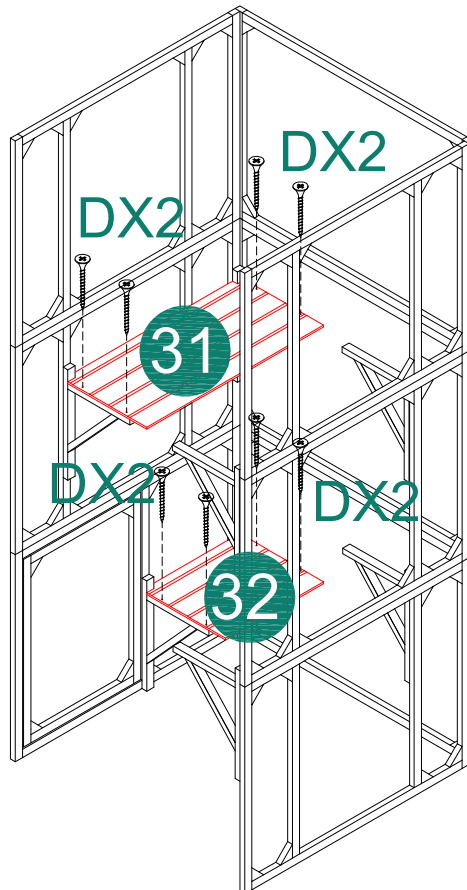


Dx8

TYPE-1

STEP28-1


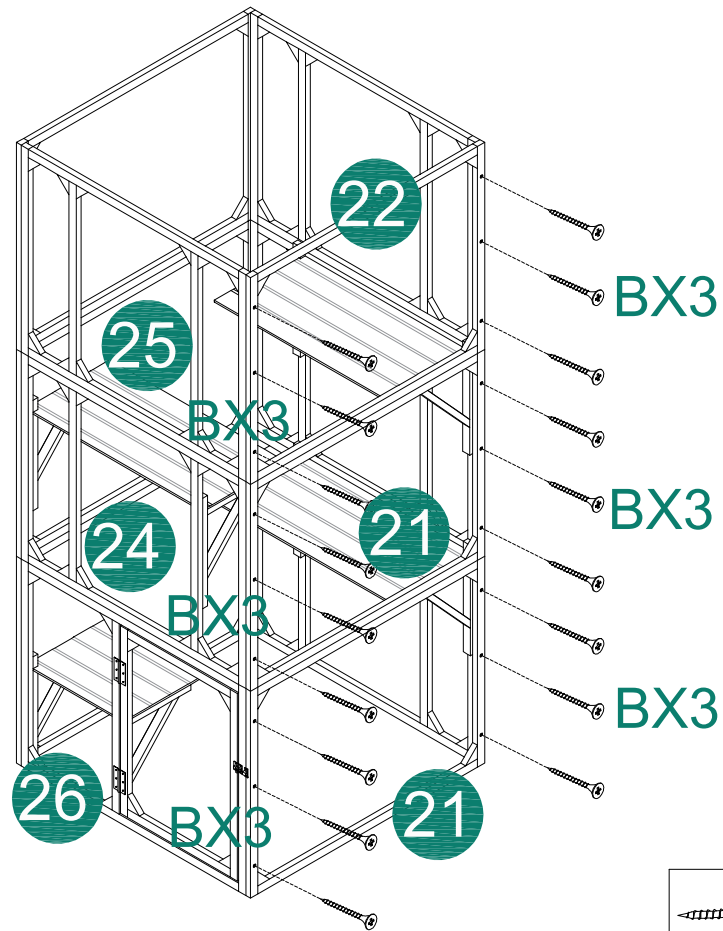


STEP29-1

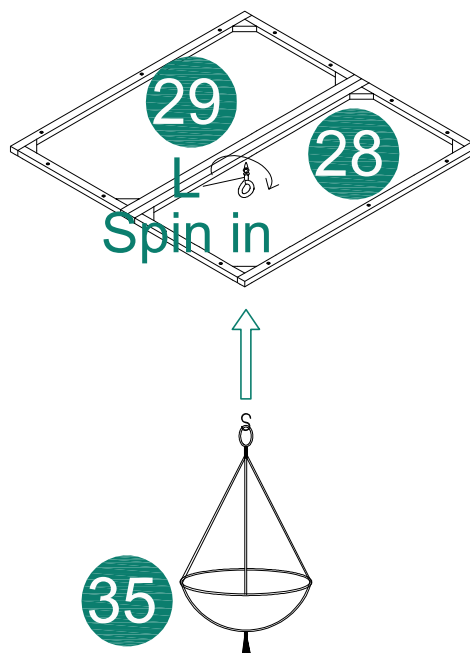

TYPE-1


STEP30-1

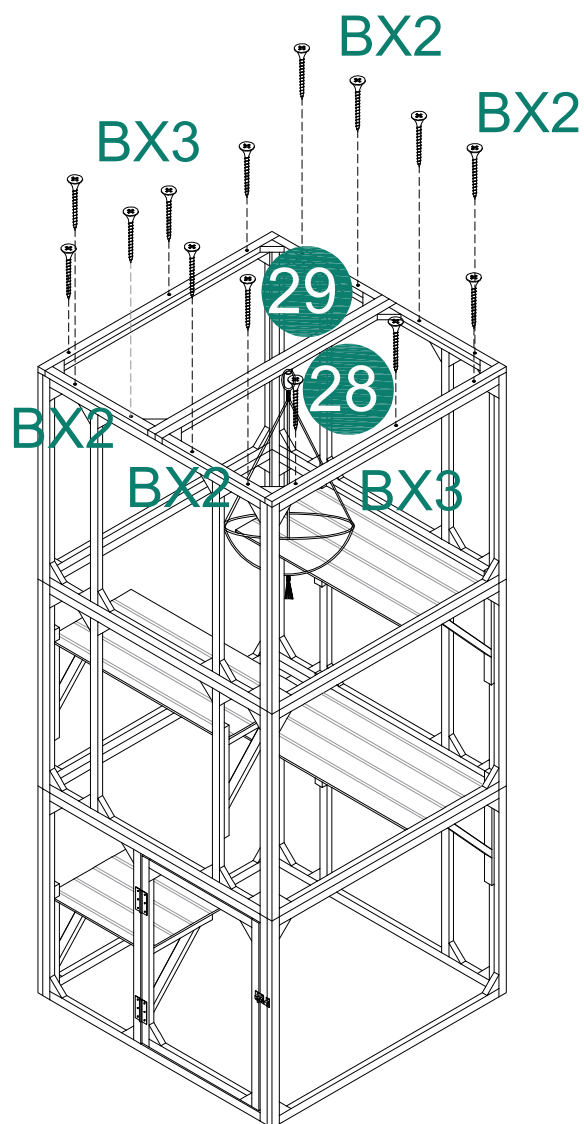

Bx14


TYPE-1


STEP31-1

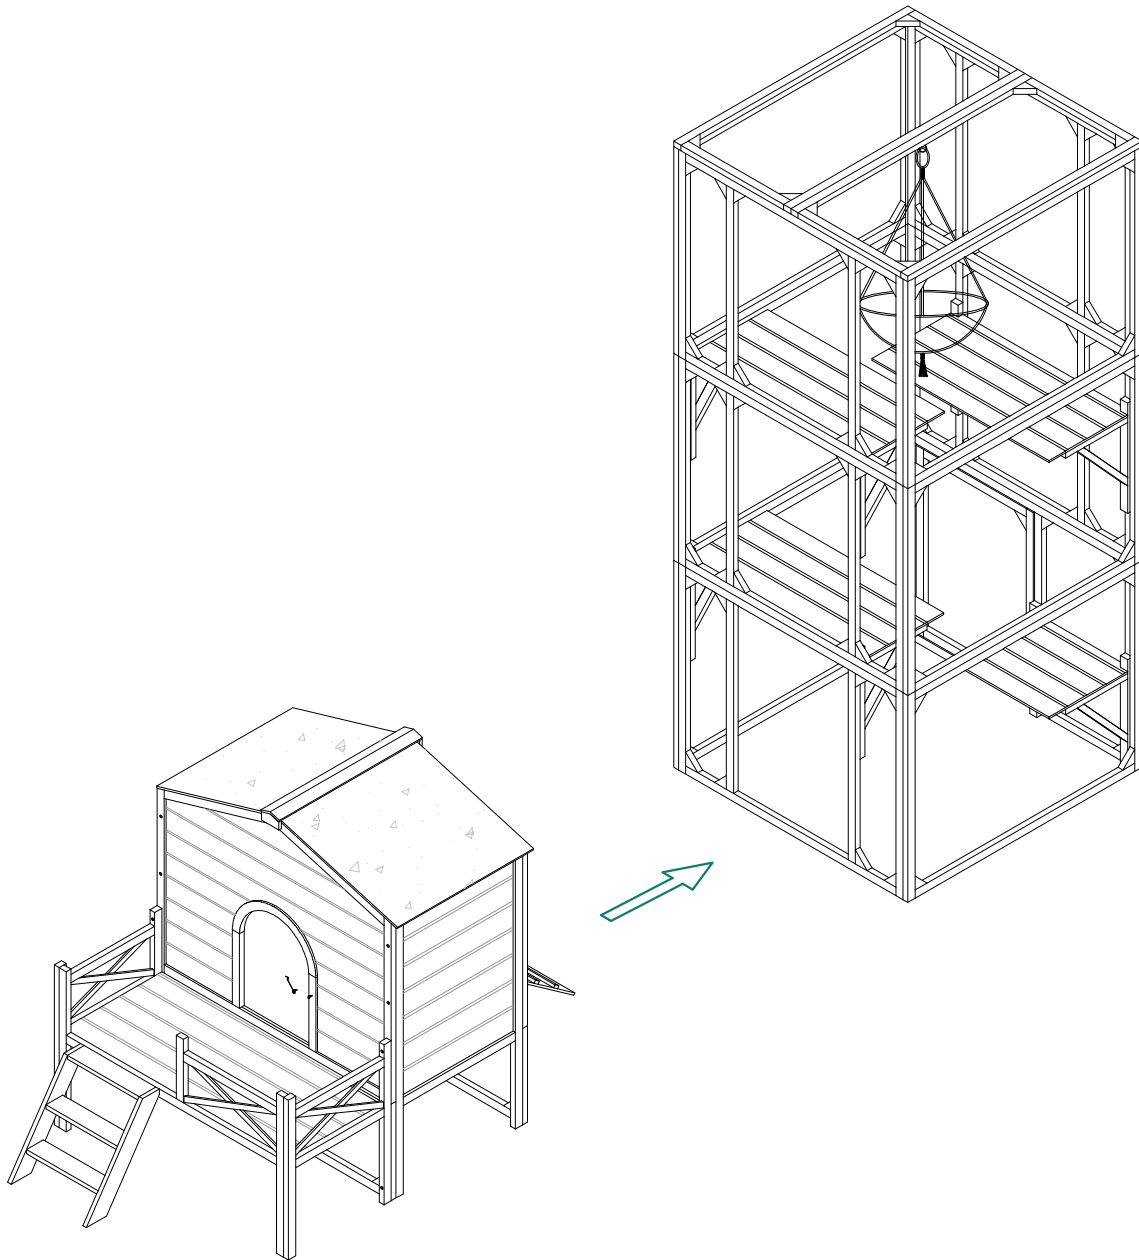

TYPE-1


STEP32-1

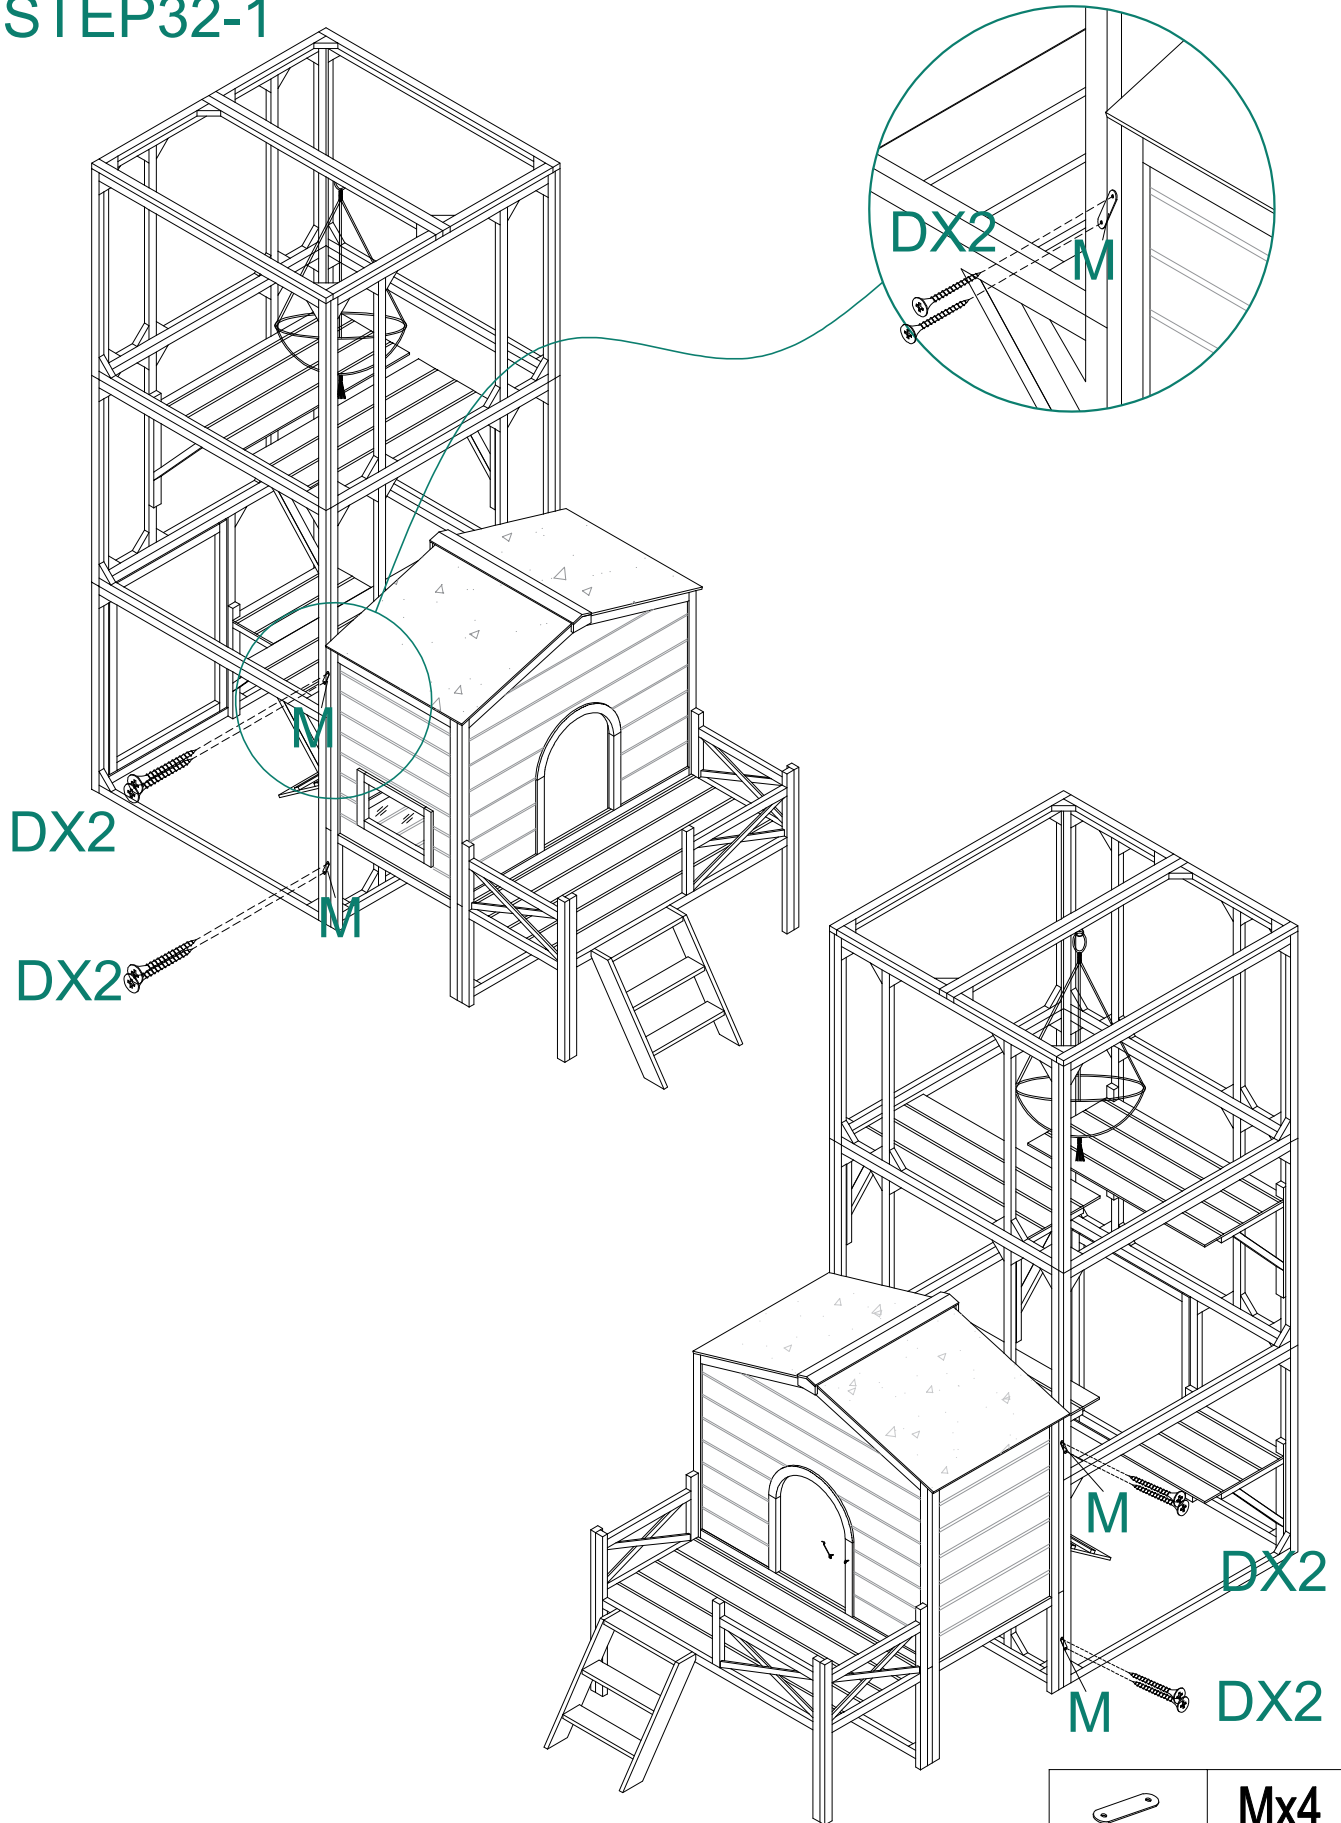


	Mx4
	Dx8

TYPE-1



STEP33-1

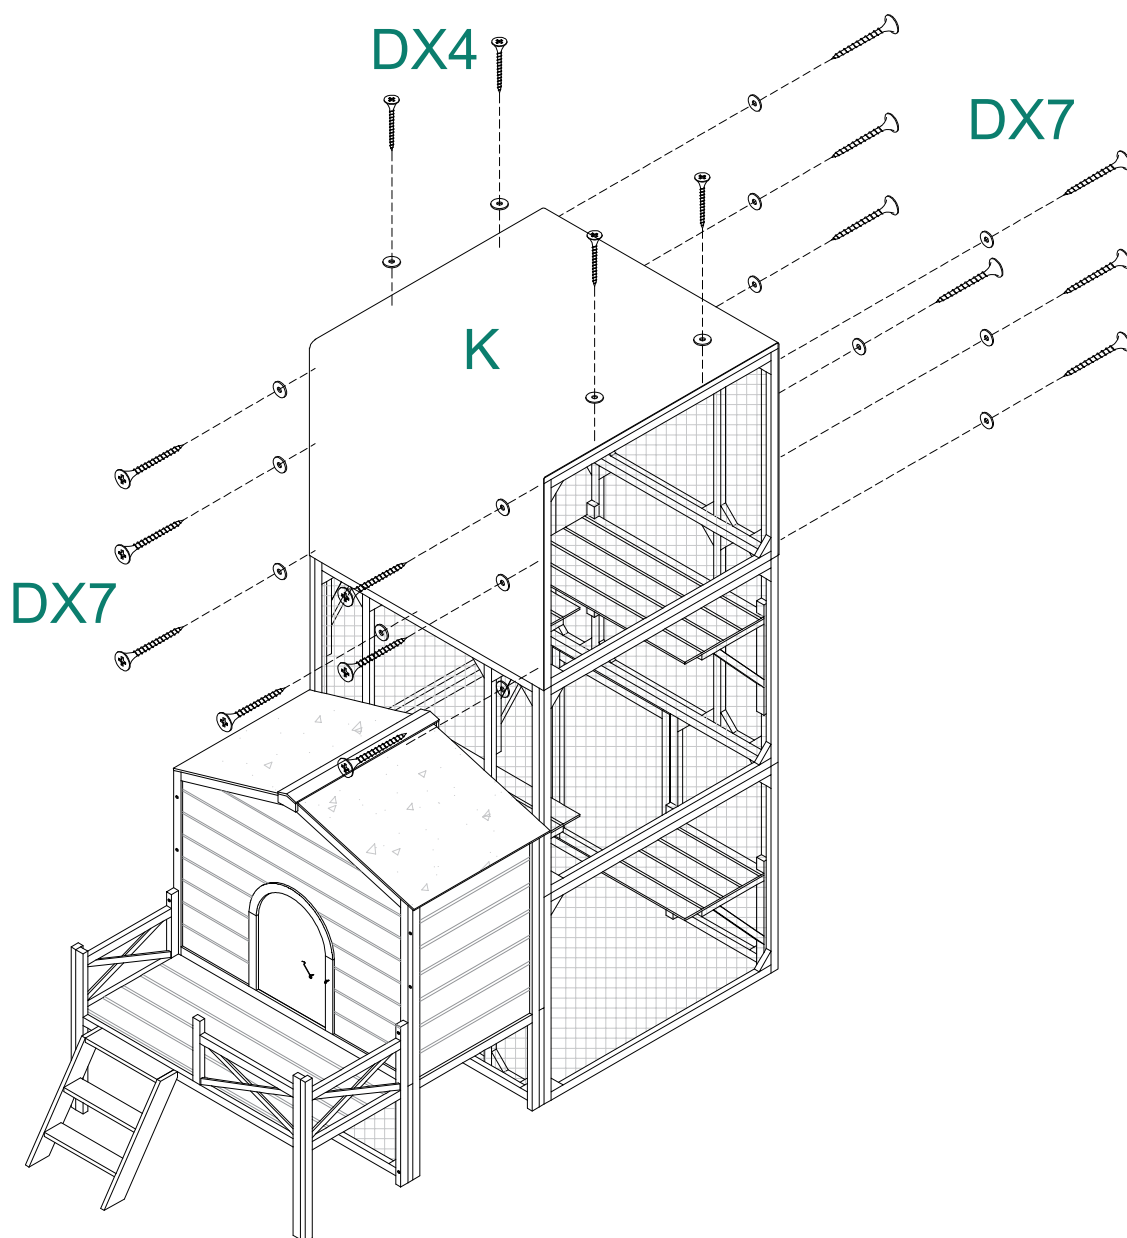

	Fx18
	Kx1
	Dx18



TYPE-2

STEP18-2

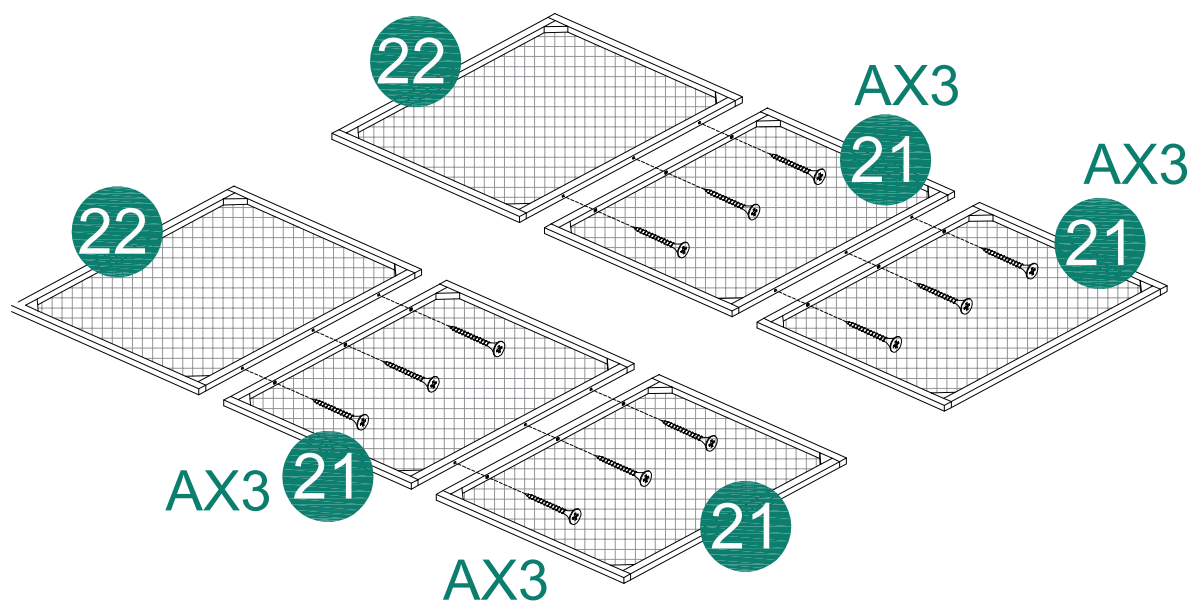

Ax12



STEP19-2

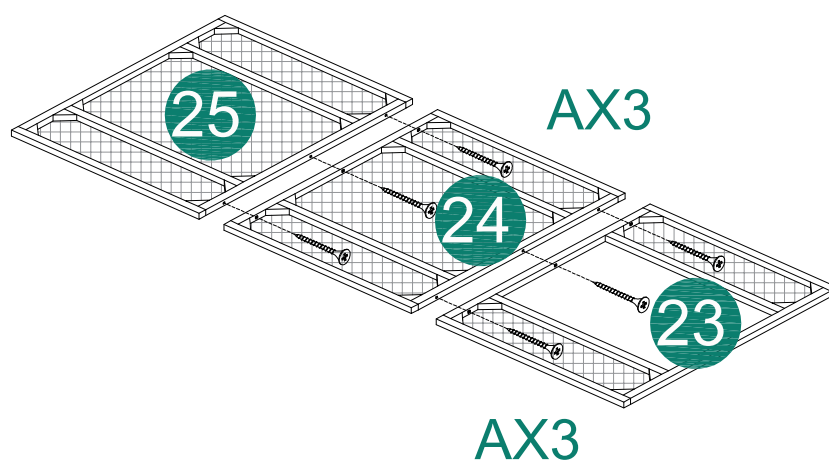

Ax6



TYPE-2

STEP20-2

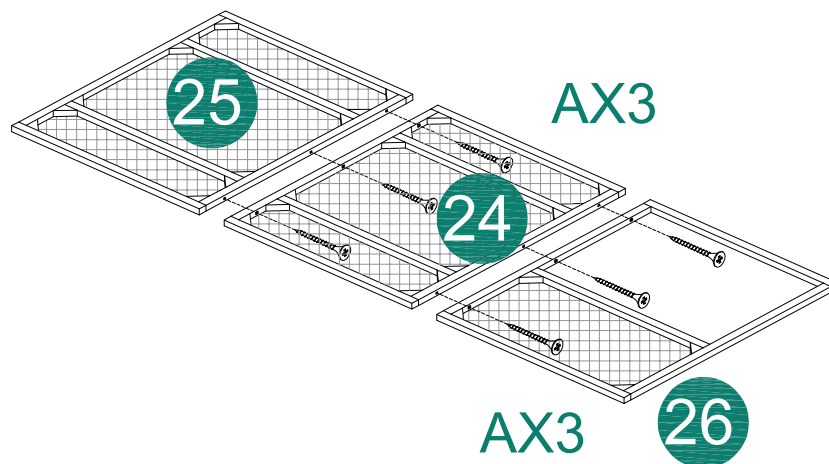

Ax6


STEP21-2


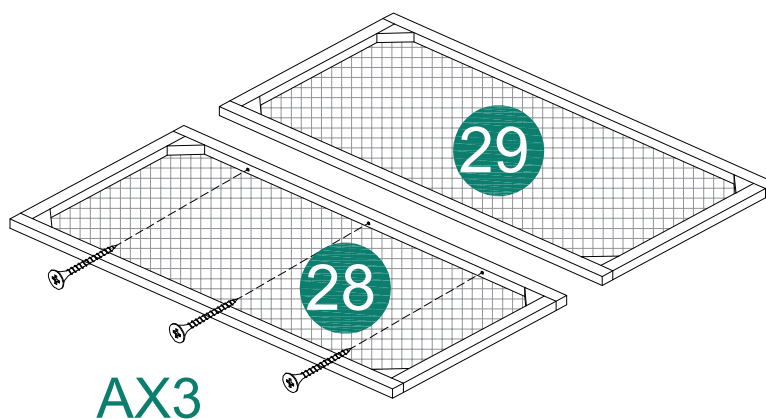


Ax3


TYPE-2


STEP22-2

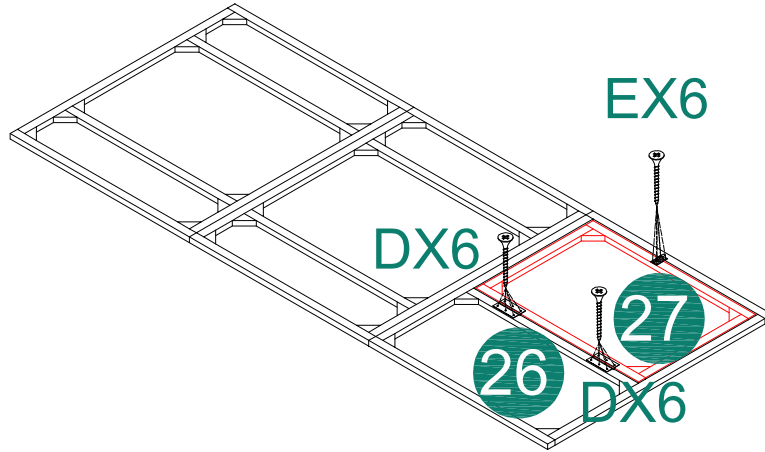

	Dx12		Ex6
	Jx1 (Set)		lx2



STEP23-2

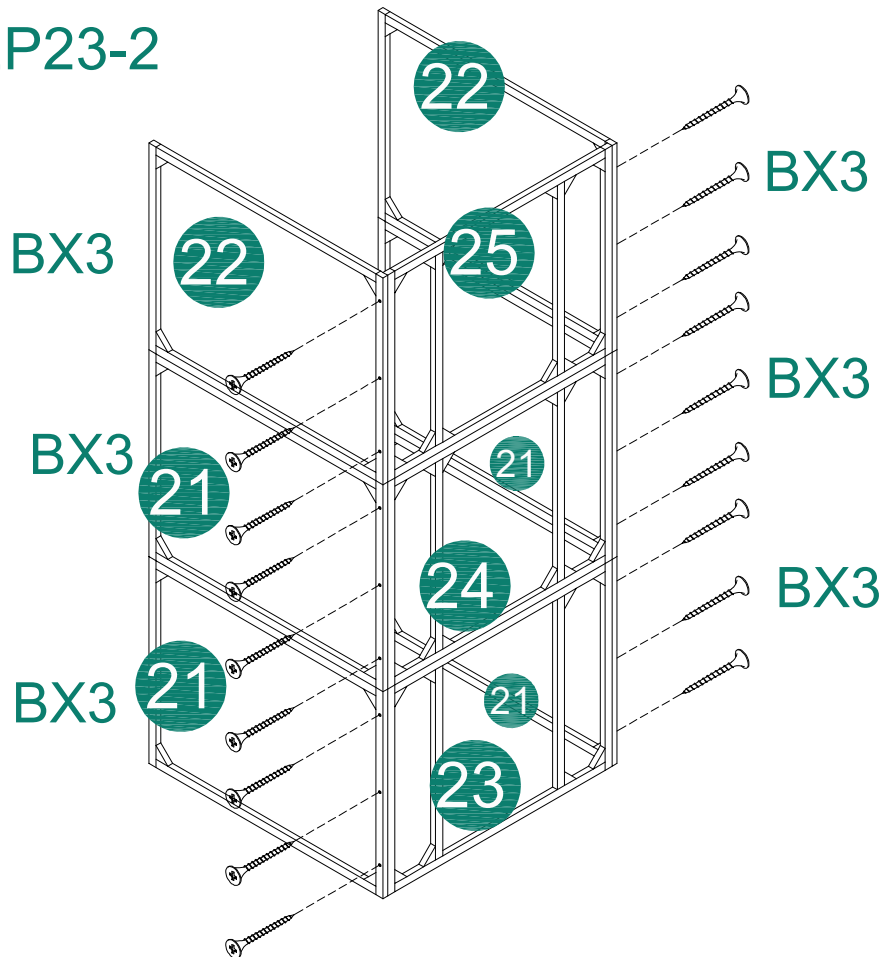



	Bx18
---	-------------

TYPE-2

STEP24-2


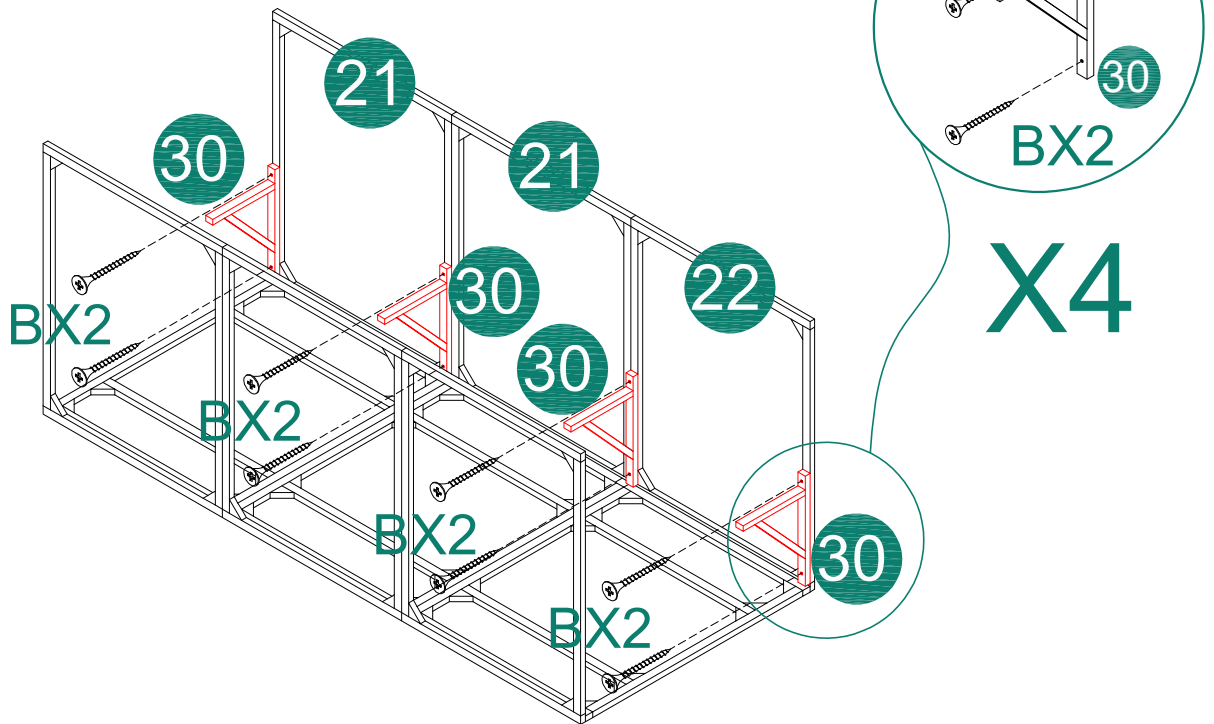


STEP25-2

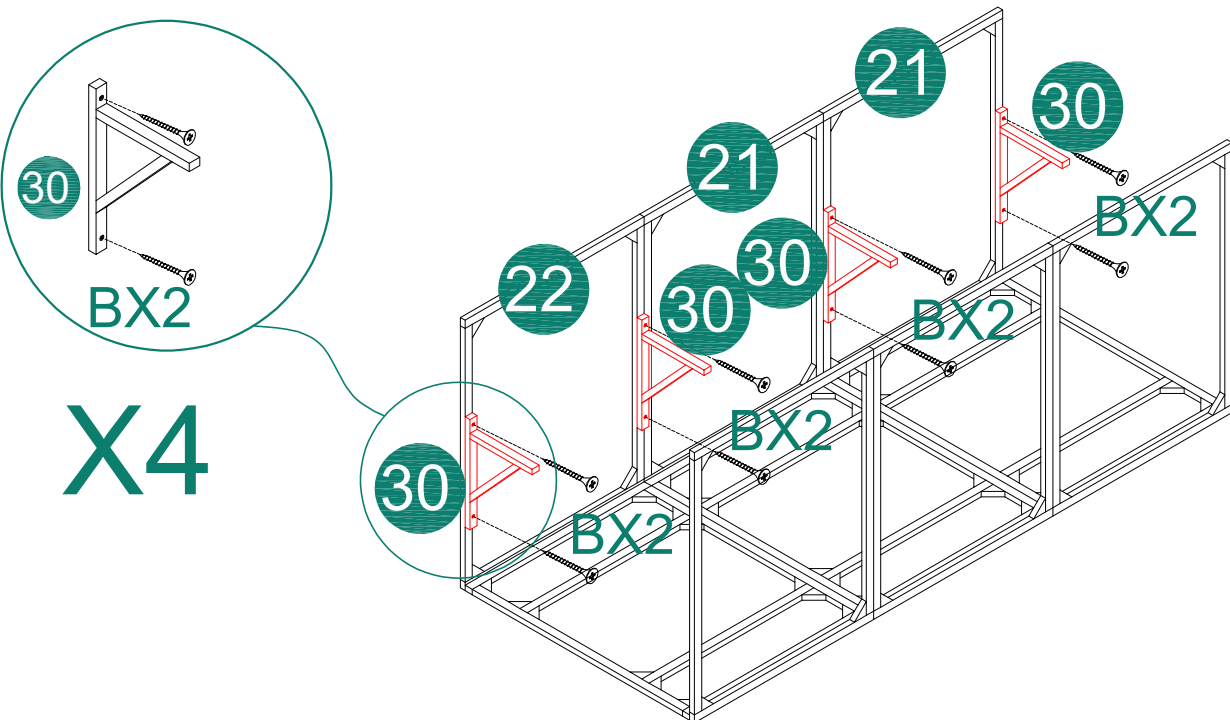


TYPE-2

STEP26-2

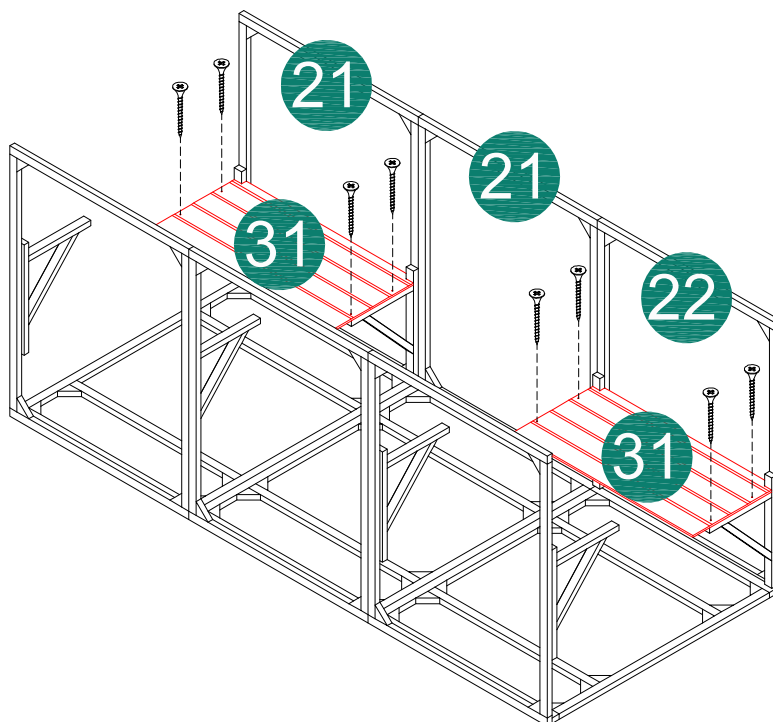

Dx8


STEP27-2

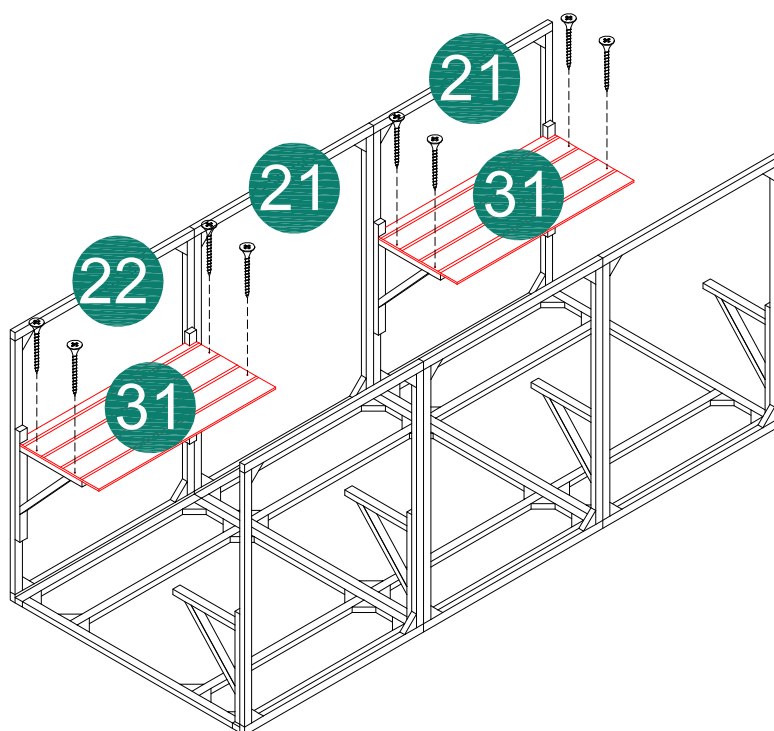


Dx8

TYPE-2

STEP28-2

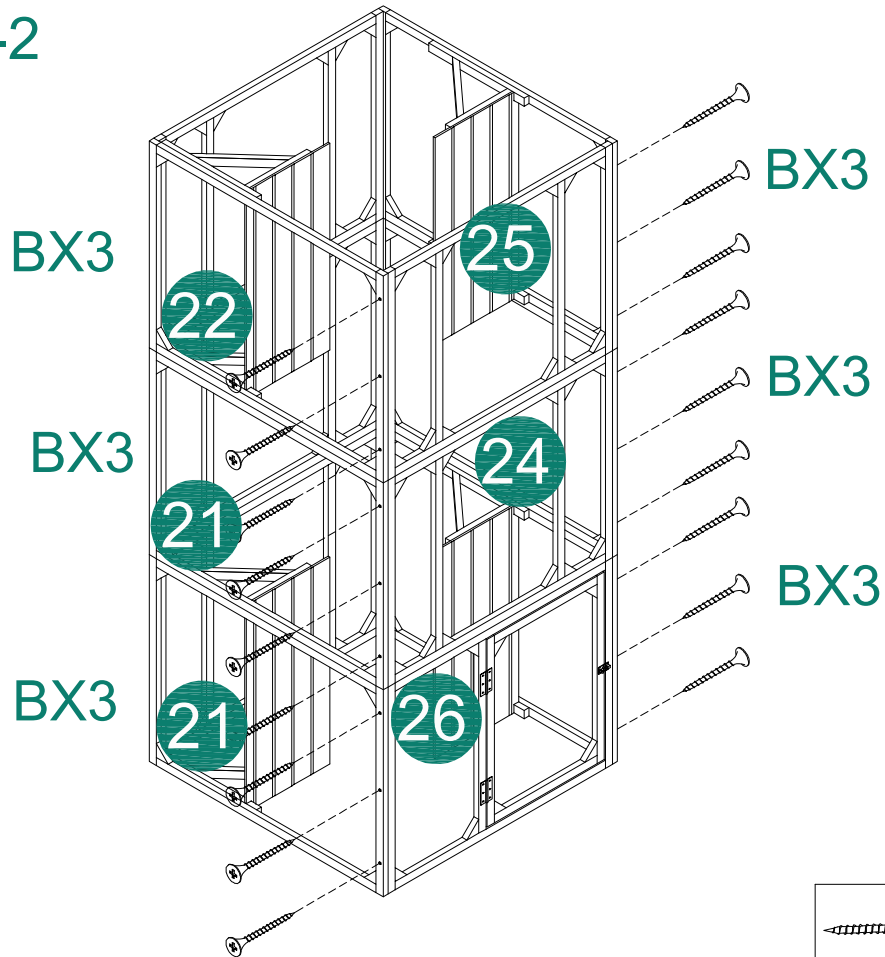


STEP29-2

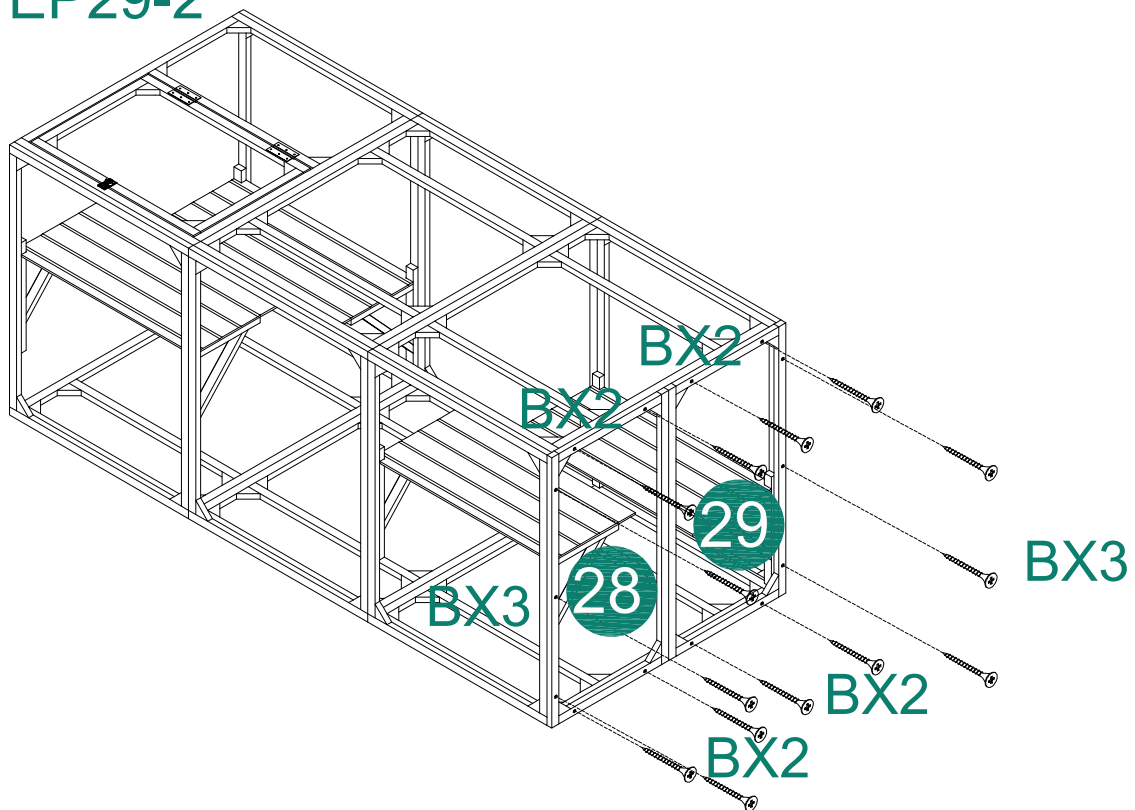


TYPE-2

STEP30-2

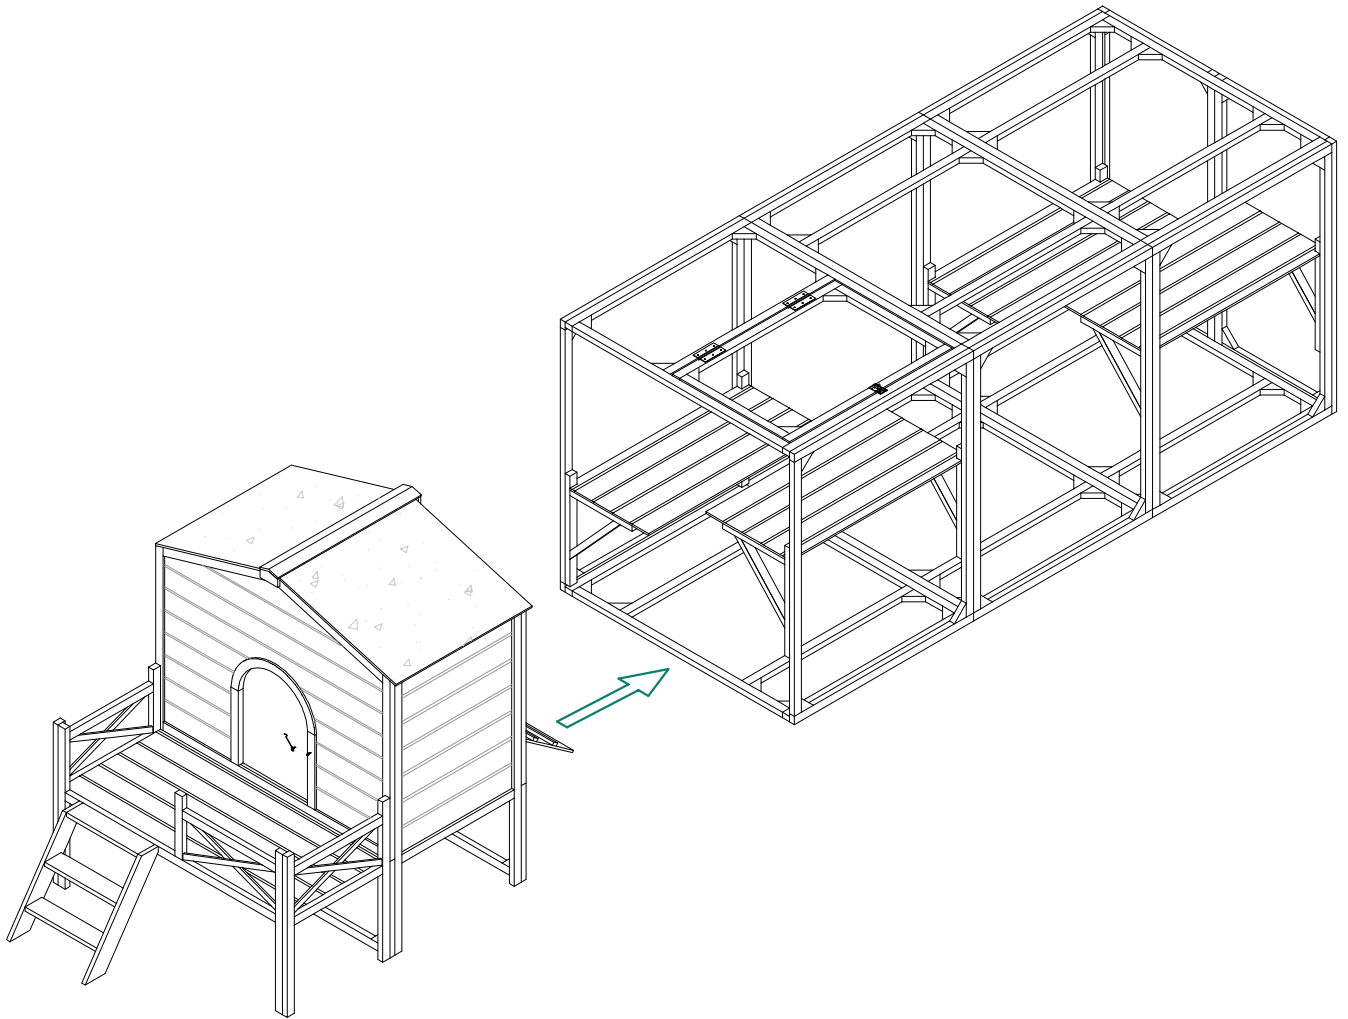

TYPE-2


STEP31-2

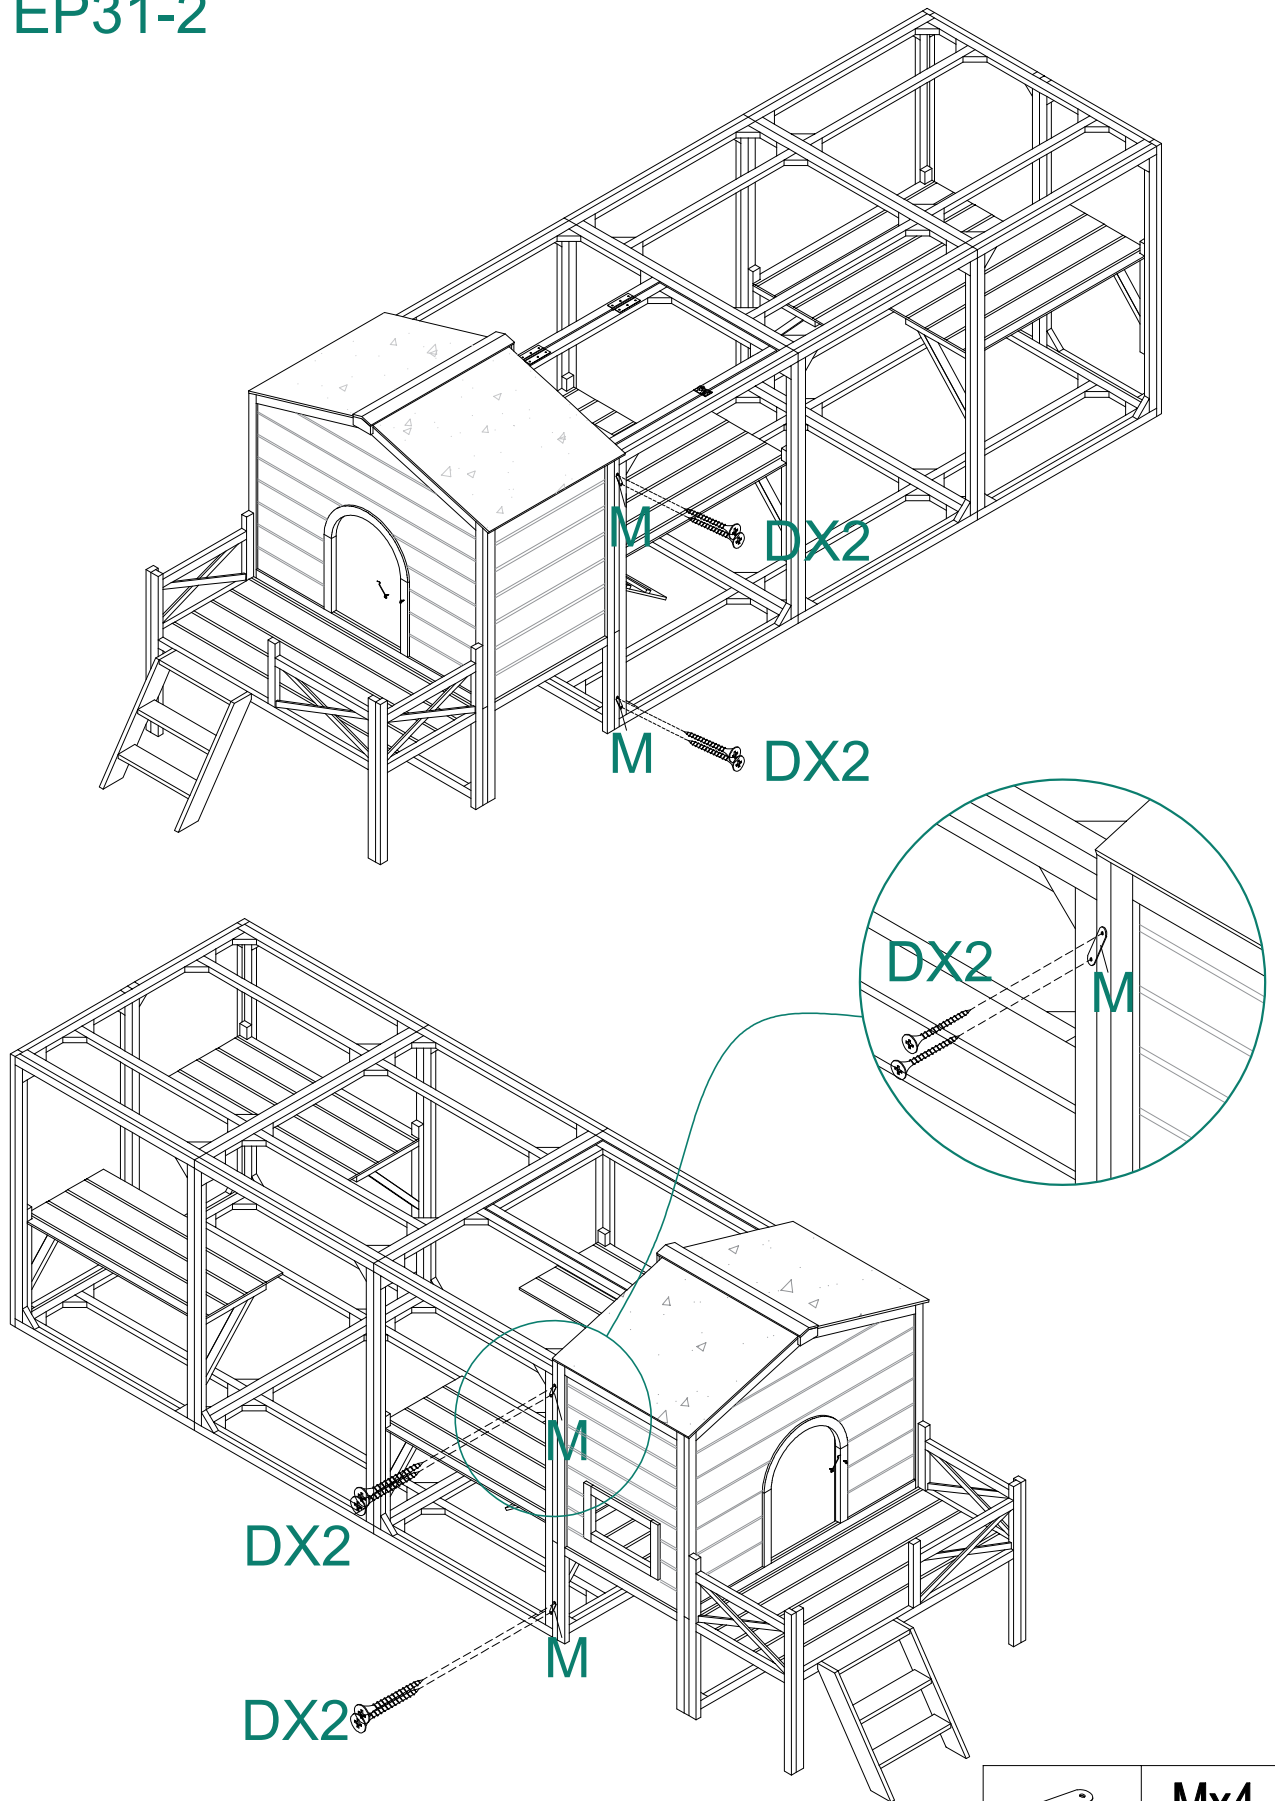


	Mx4
	Dx8

TYPE-2

STEP32-2

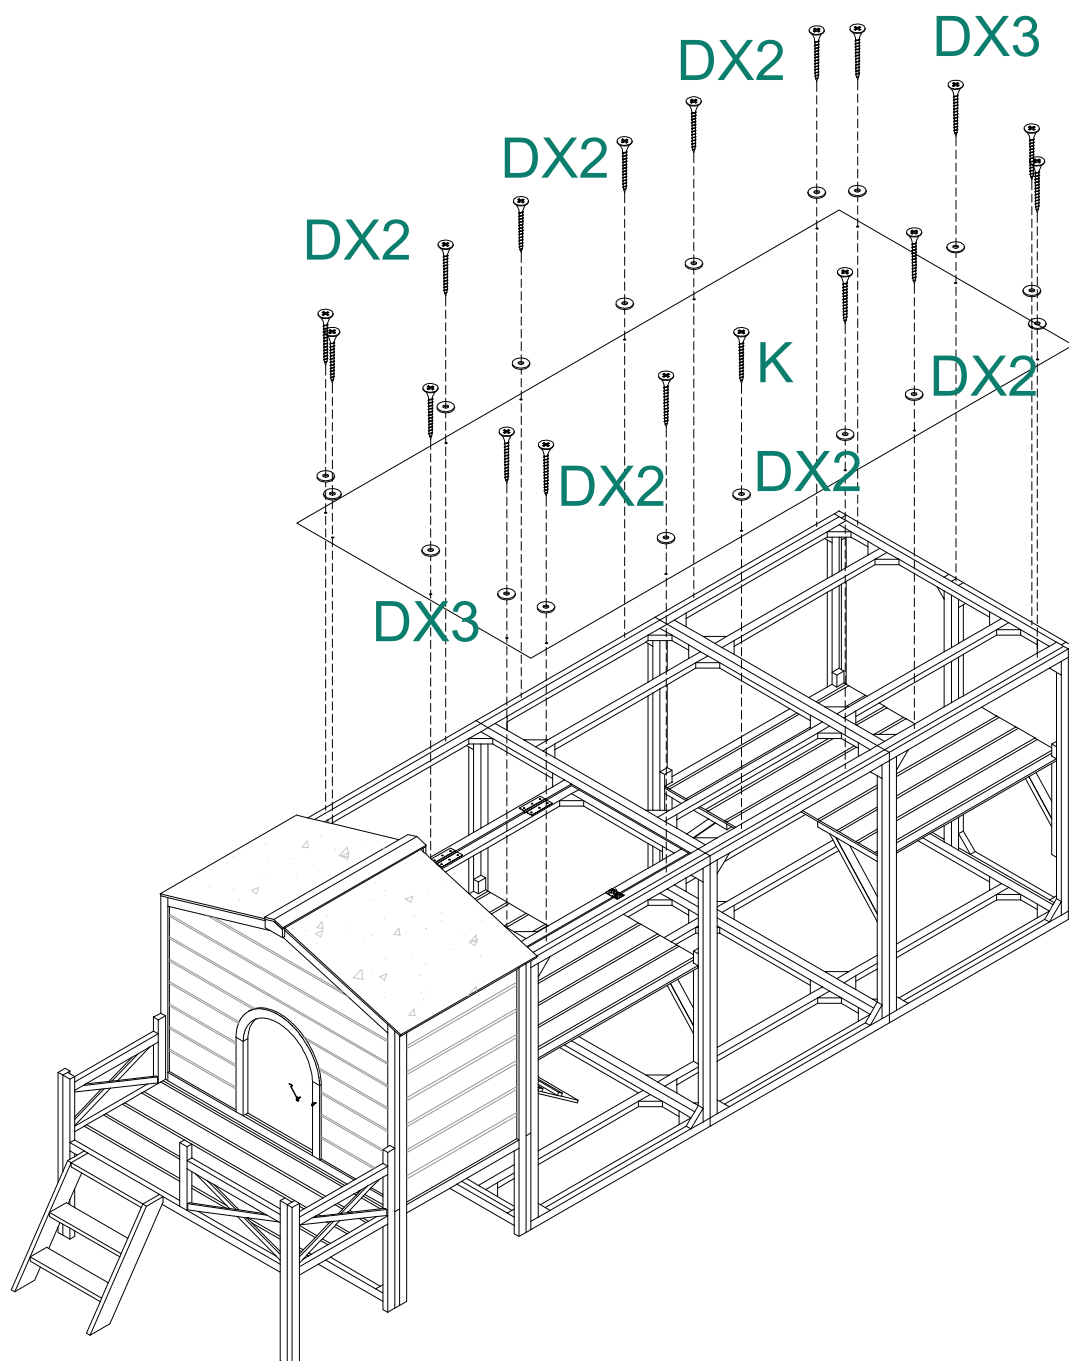

	Fx18
	Kx1
	Dx18