




# INSTRUCTION

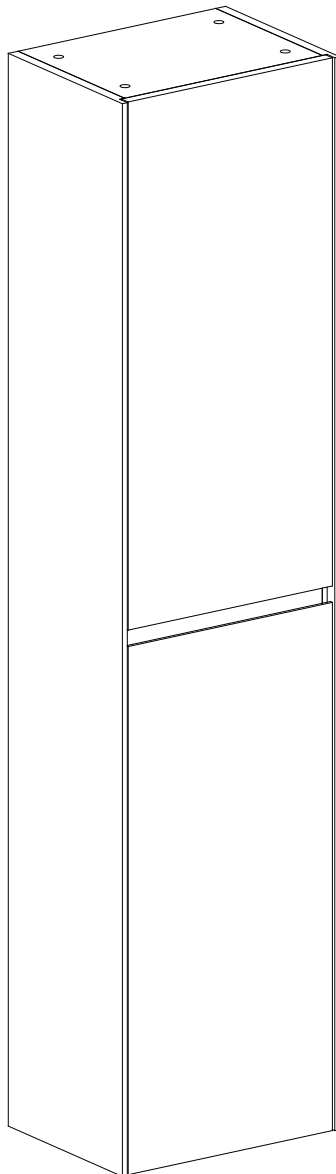


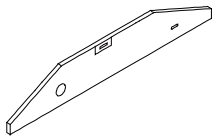


Spirit level





Tape measure  
(3m~5m)

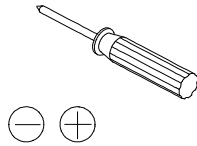

Screwdriver

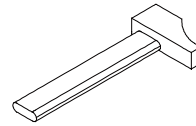

Hammer

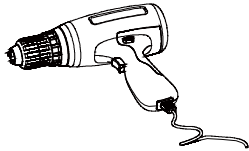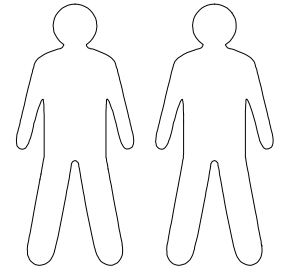


Electric drill




Drill bit  
(Ø8)



Pencil

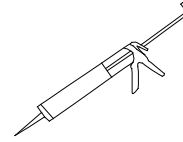


Silicone

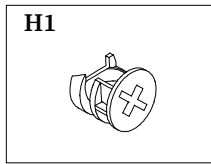


H1

16\*

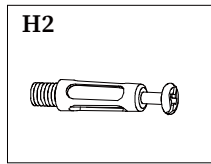


H2

16\*

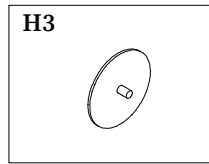


H3

16\*

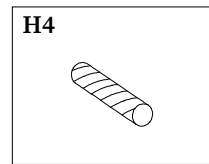


H4

36\*φ8\*30

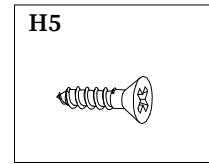


H5

24\*φ4\*16

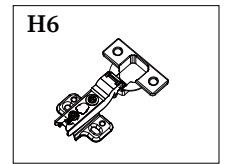


H6

4\*

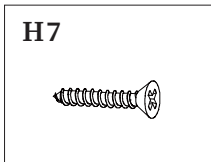


H7

8\*Ø4x28

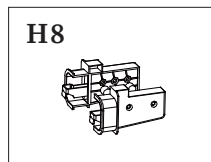


H8

2\*

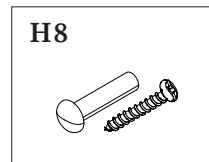


H8

2\*

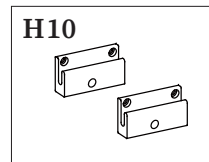


H10

1\*

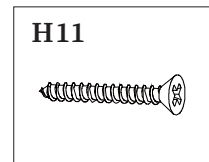



H11



6\*Ø4x50

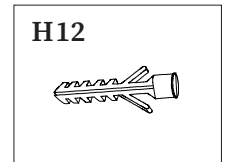



H12

6\*Ø8x40

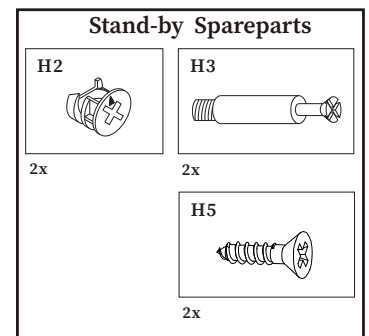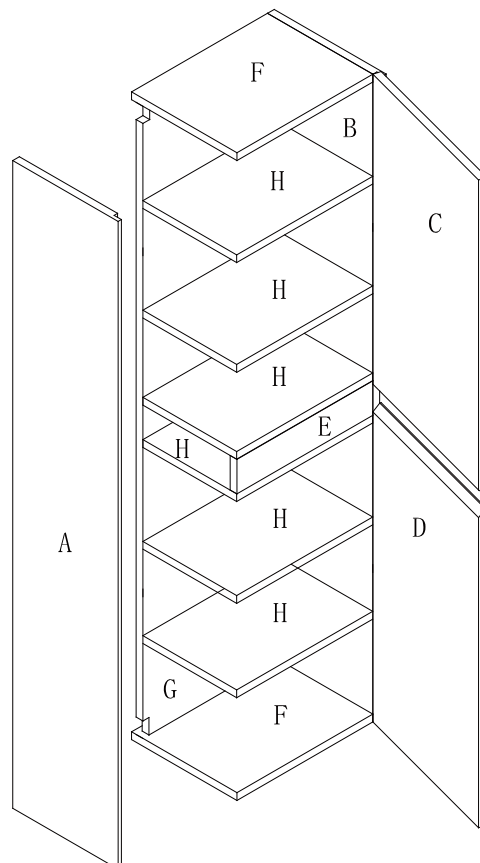

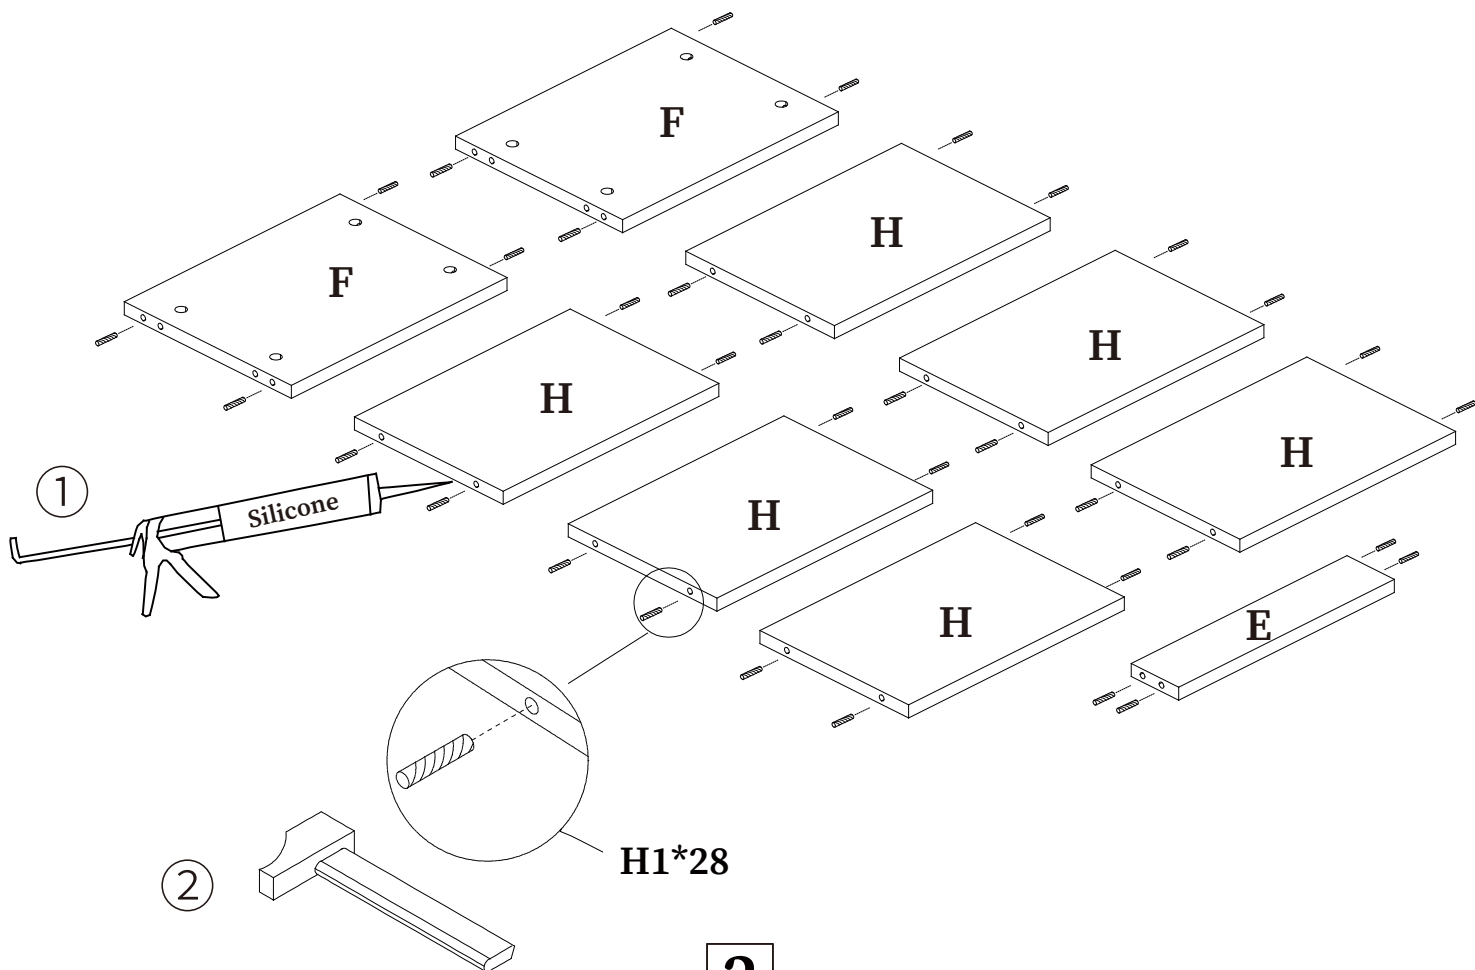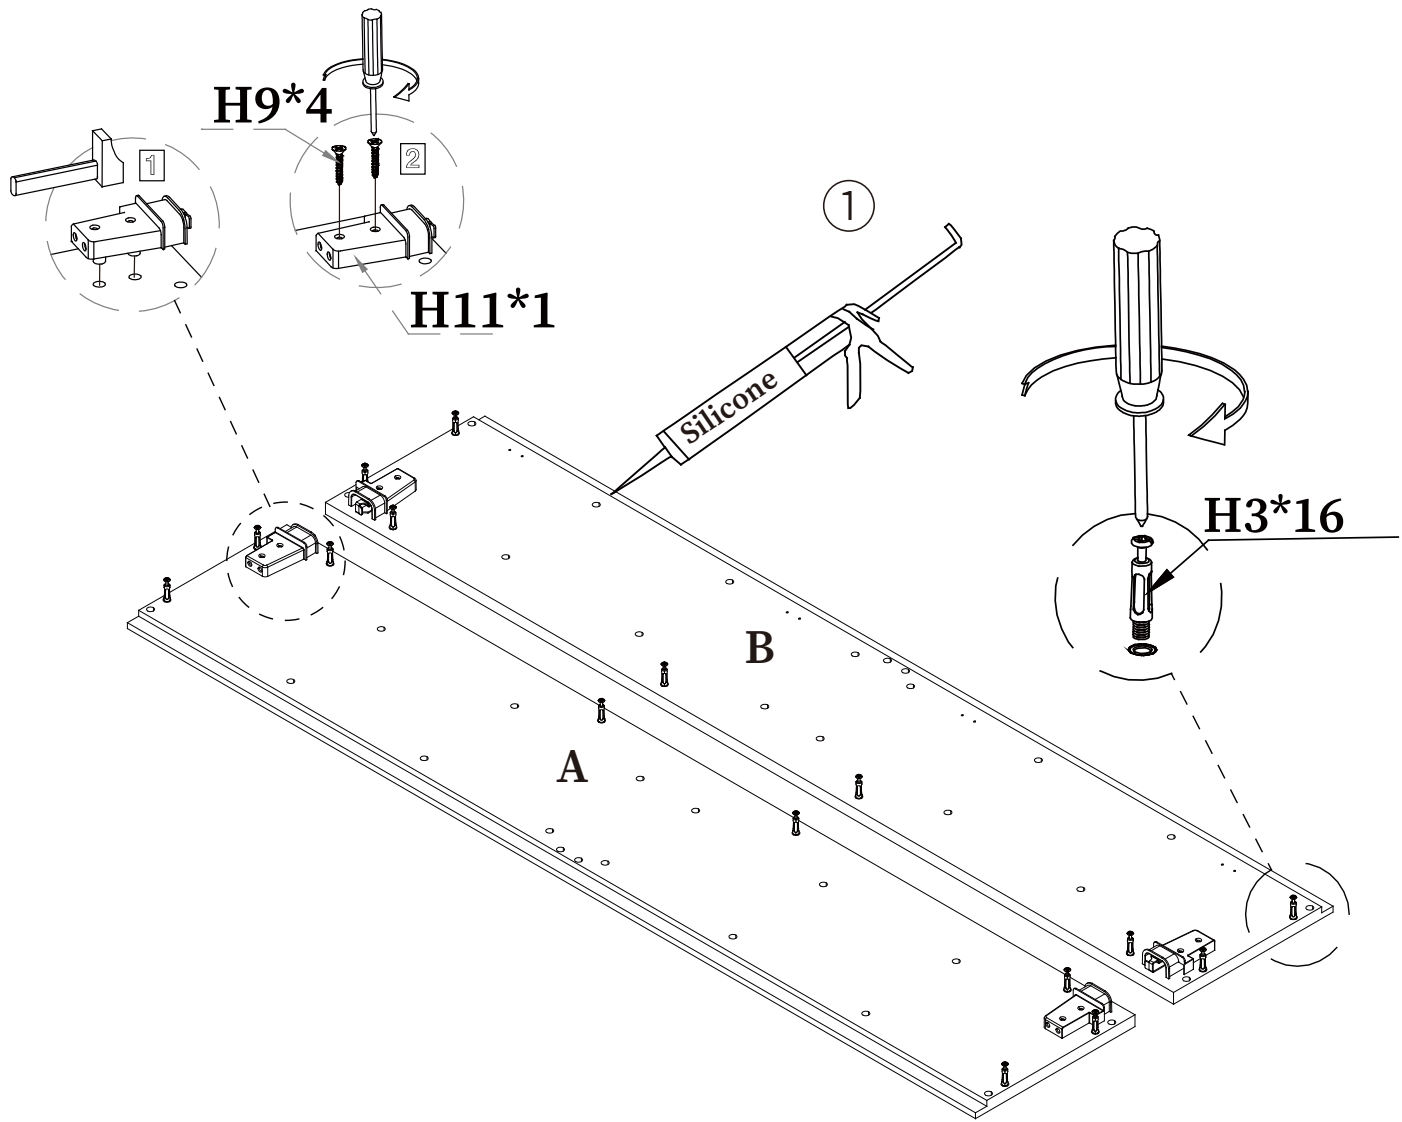

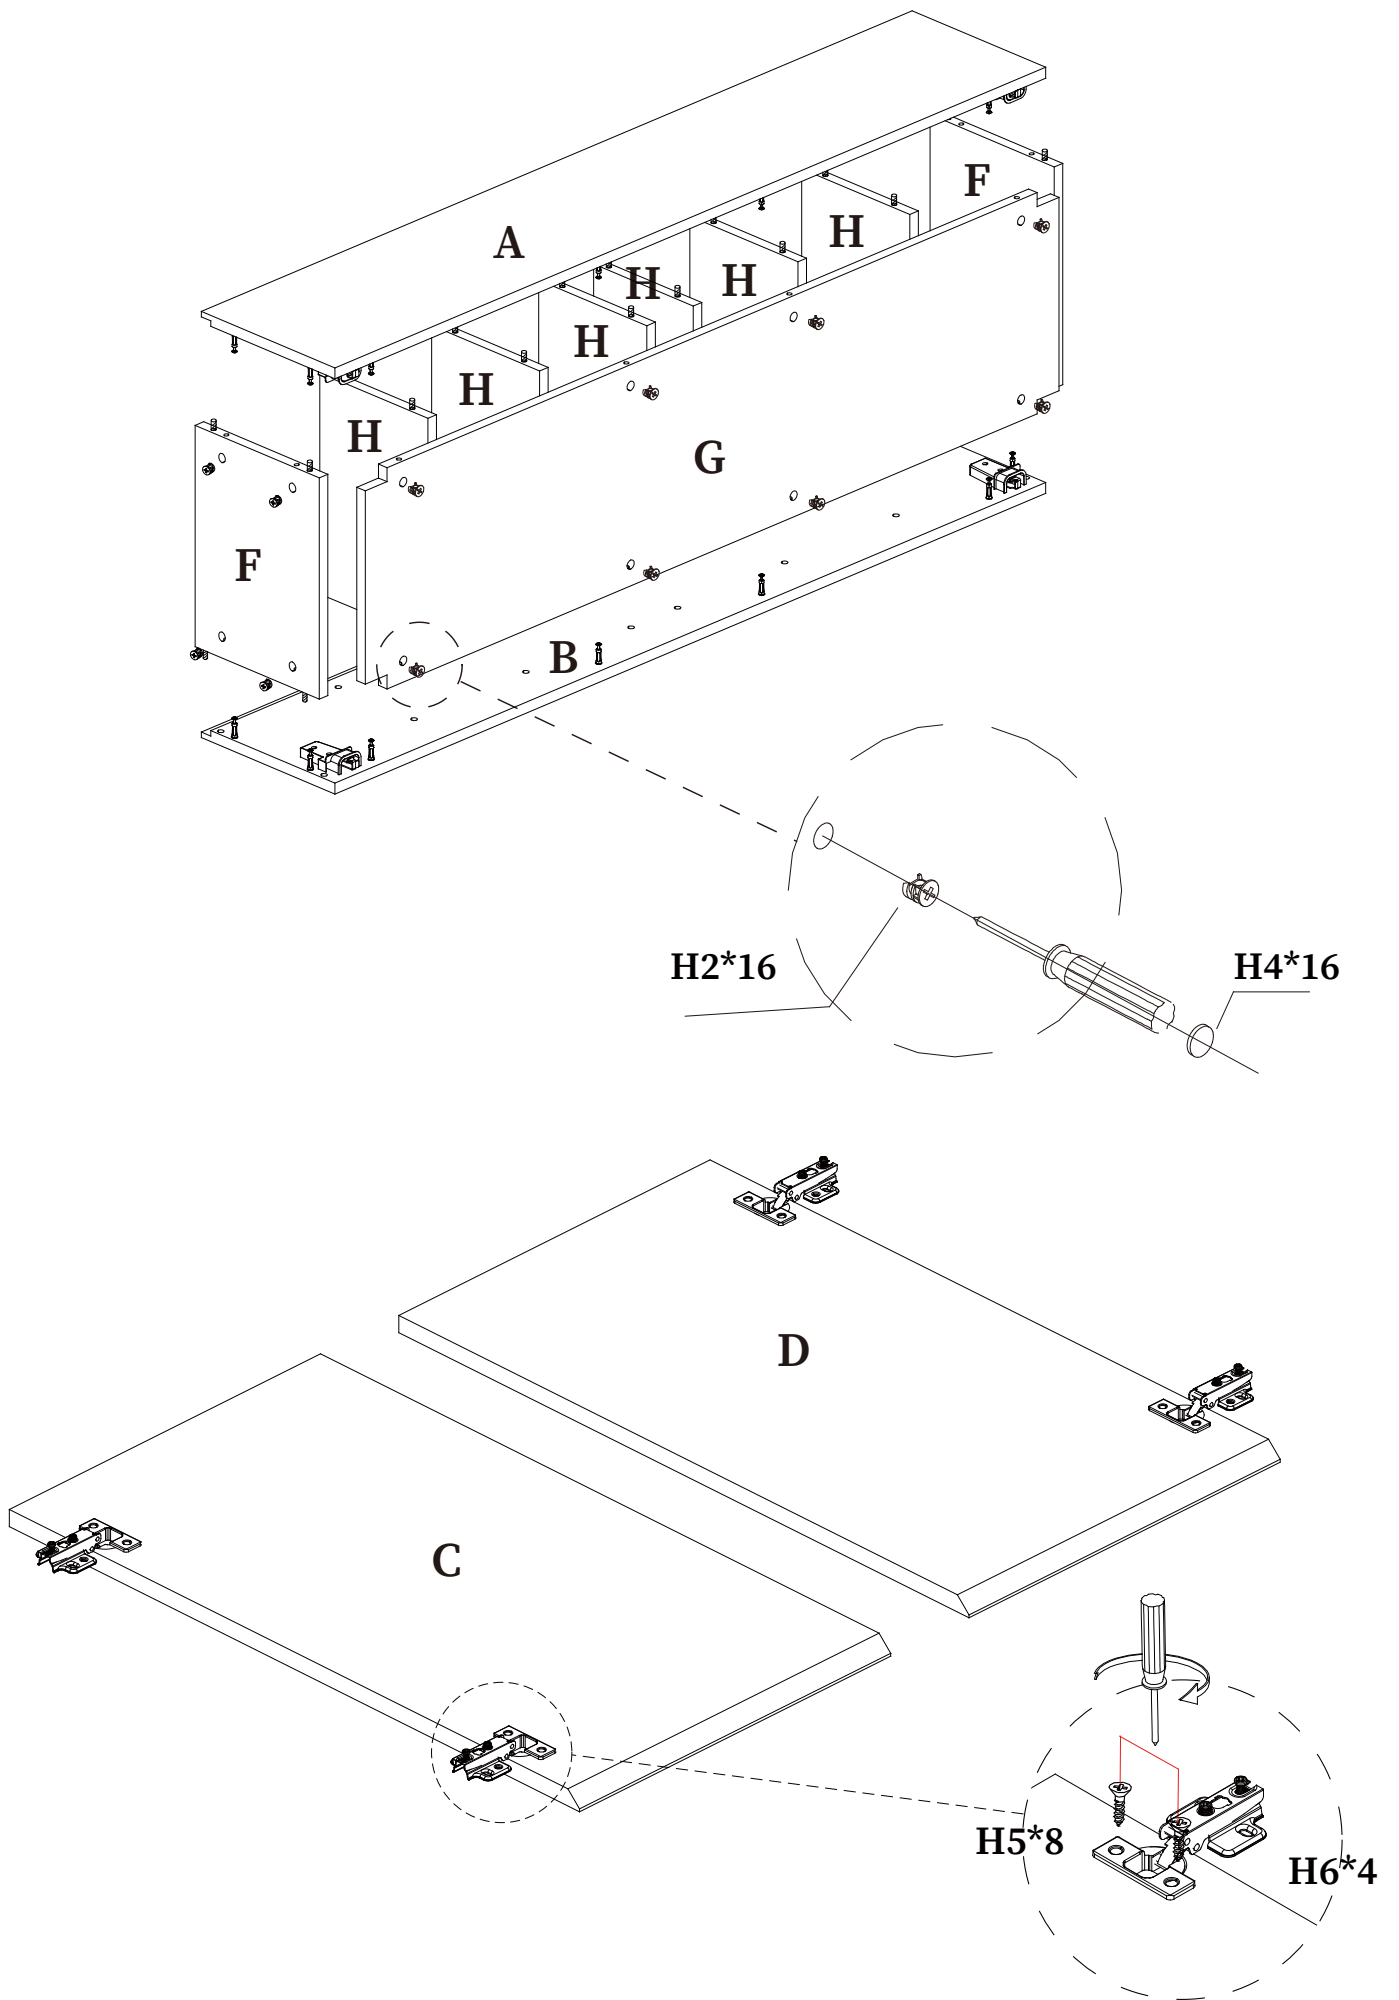

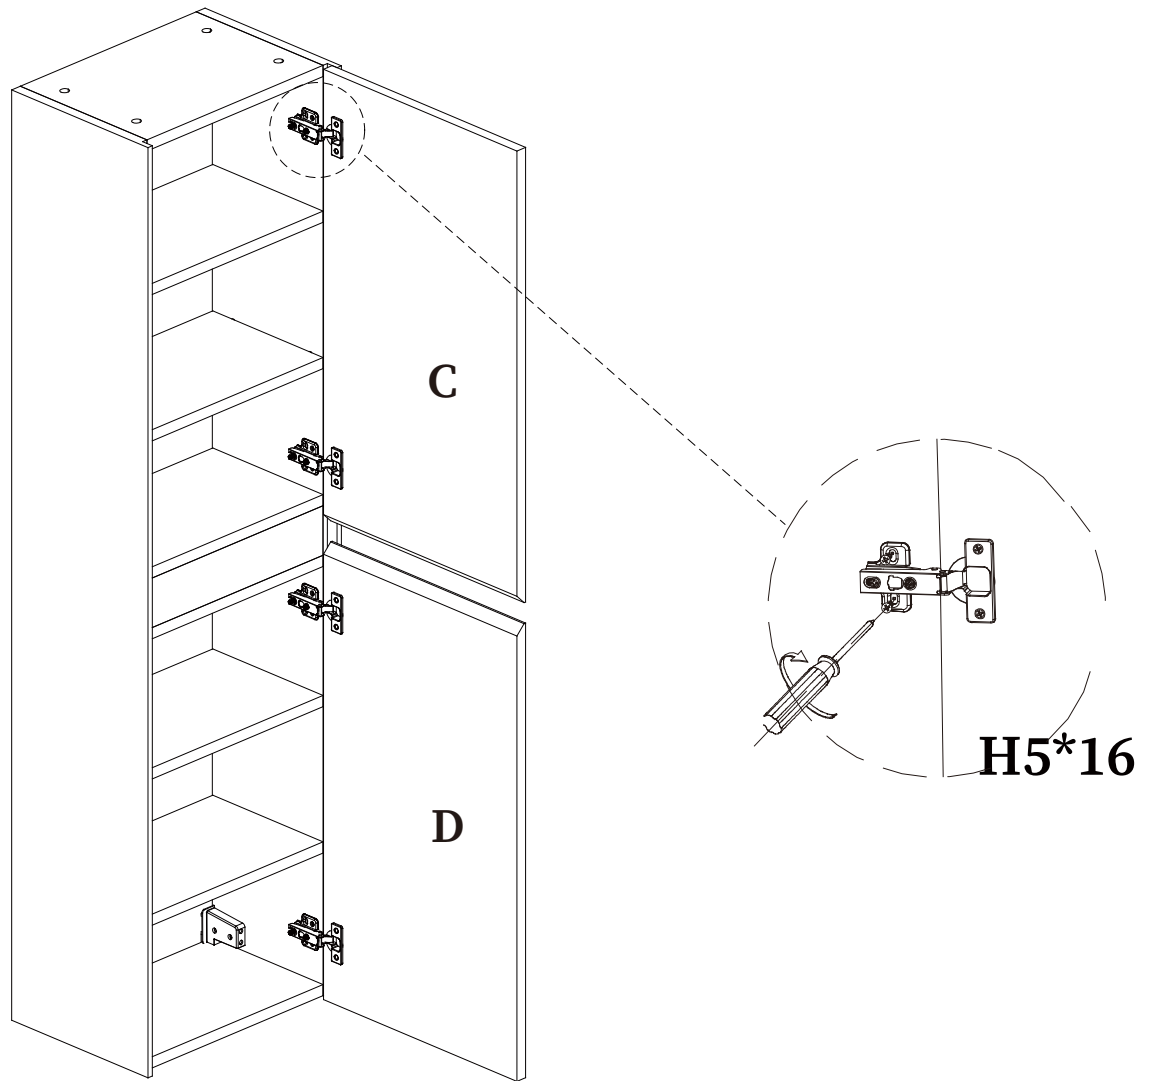

### REGLAGES DES PORTES

