


# LEXINGTON®

## HOME BRANDS

### ASSEMBLY INSTRUCTIONS

729-133C/134C/135C Mullholland Upholstered Platform Bed

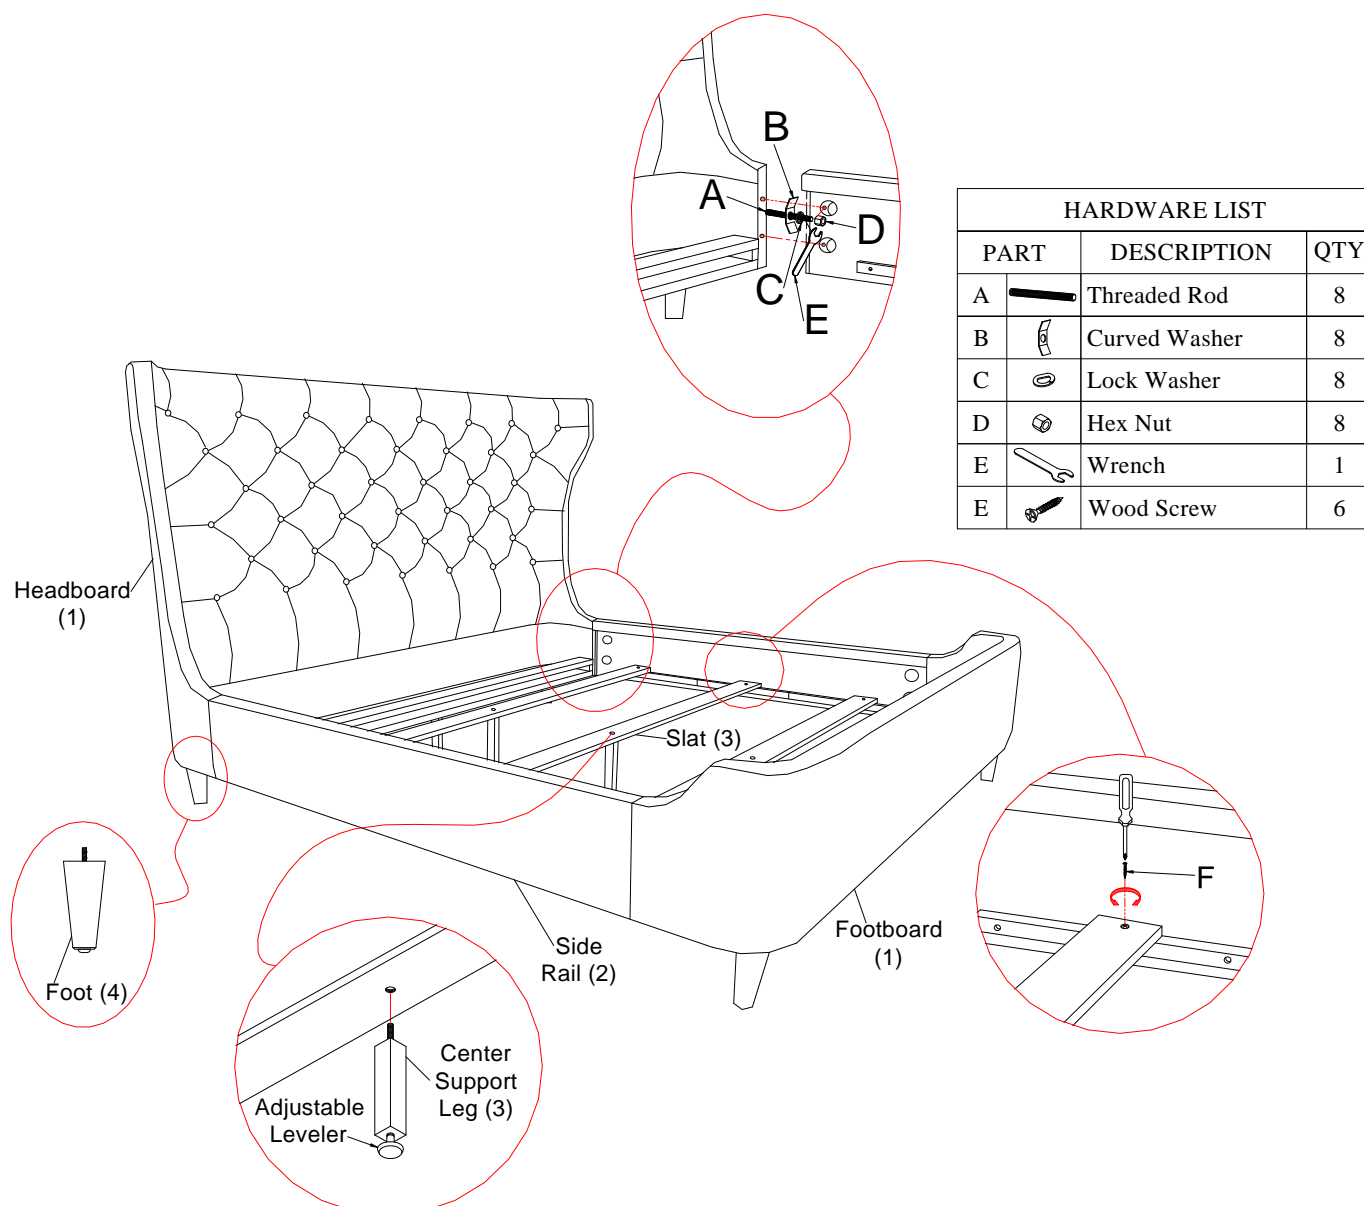

HARDWARE LIST		
PART	DESCRIPTION	QTY
A	Threaded Rod	8
B	Curved Washer	8
C	Lock Washer	8
D	Hex Nut	8
E	Wrench	1
E	Wood Screw	6

#### How to Attach Side Rails to Headboard/Footboard

\* All needed hardware is located in a hardware bag which should be taped to inside of side rail.

1. Insert Threaded Rods (A) into metal dowels in post thru open hole. Twist clockwise until tight.
2. With both threaded rods in place, and side rail positioned with T-slots to inside, slide side rail over threaded rods.
3. Add Curved Washer (B), Lock Washer (C), and Hex Nut (D) to threaded rod (A).
4. Tighten nut with Wrench (E) until tight. Repeat process for other three corners.

#### How to Attach Slats to Side Rails

1. Insert bolted end of support leg into bottom of Slats. (Two slats are already attached to the bed on headboard and footboard.) There is a T-nut in the center of the board. Rotate clockwise until tight.
2. Adjust leveler so that support leg and leveler sit 1/2" above floor.
3. Place a Slat 3" to 5" inward from each end of wood cleats. Place one slat between the two end slats so that there is an equal amount of space between all slats.
4. Secure slats with Wood Screws (F) provided. Note that top side of slat has larger hole.

For additional consumer assistance please contact your Lexington dealer or call our Customer Services Department at 1-336-474-5300, Monday-Friday, 8-5 Eastern