





















SORBUSTM

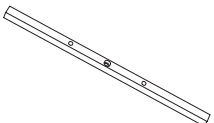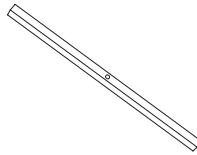5 Drawer Storage




www.sorbushome.com
©Sorbus | Made in China


Package Contents:

A Wood Top  1PC	B Frame  1PC	C Frame  2PCS	D Frame  1PC	E Frame  1PC	F Frame Pole  2PCS	
G Pole  2PCS	H Screw  6PCS I Screw  16PCS	J Frame Screw  4PCS	K Hex Wrench a  1PC b  1PC	L Drawer Insert  3PCS  2PCS	M Drawer  3PCS  2PCS	N Handle  5PCS O Handle Screw  10PCS


FOR EACH STEP MAKE SURE THE FRAMES ARE FACING THE CORRECT DIRECTION!

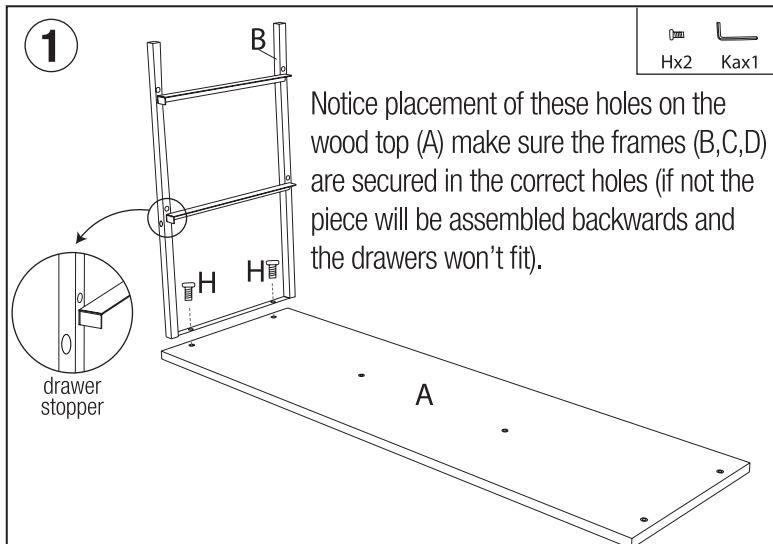


Step 1: Secure frame (B) to wood top (A) as shown above with screws (H) then secure with wrench (K). The drawer stopper should be facing the back.

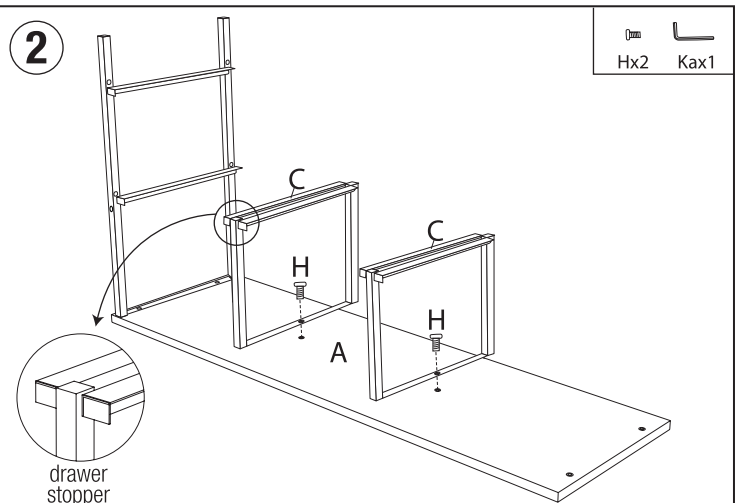

Step 2: Secure frames (C) to wood top (A) as shown above with screws (H) then secure with wrench (K). Please make sure the holes of the drawer top and the frame match the picture above. The drawer stopper should be facing the back.

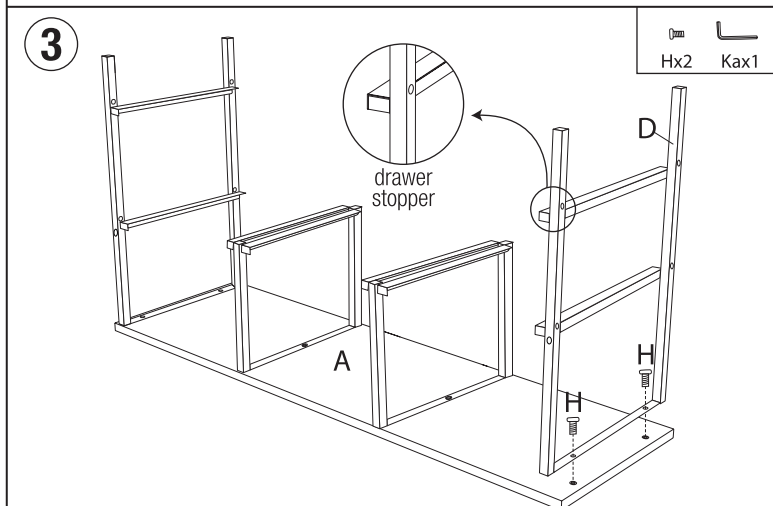


Step 3: Secure frame (D) to wood top (A) as shown above with screws (H) then secure with wrench (K). Please make sure the holes of the drawer top and the frame match the picture above. The drawer stopper should be facing the back.

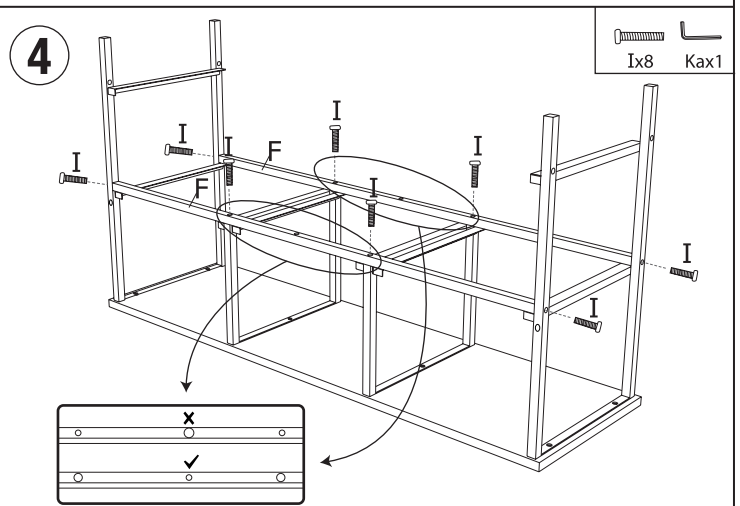

Step 4: Position the frame poles (F) into place and secure with screws (I) as shown. Make sure the holes are facing the right direction. Follow key above.


5

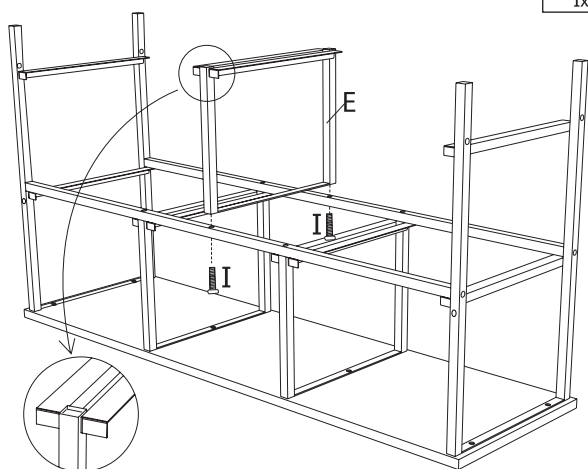

Ix2 Kax1

Step 5: Position frame (E) into place and secure with screws (I).


6

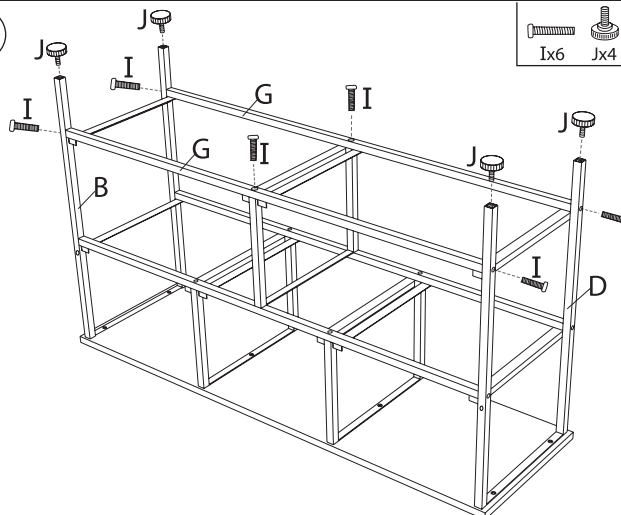

Ix6 Jx4 Kax1


Step 6: Secure poles (G) with screws (I). Insert frame screws (J) into the legs of frames (B, D), twist until tight.

7

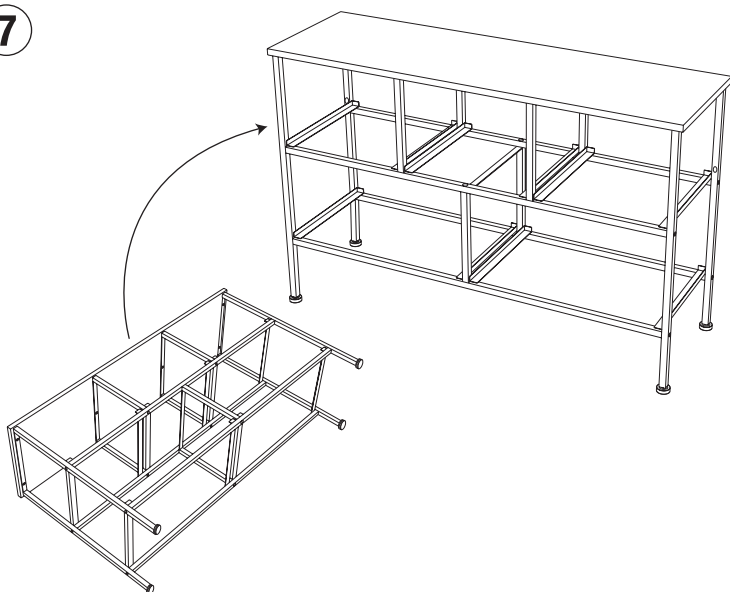

Step 7: Flip assembled shelf into position shown above.


8

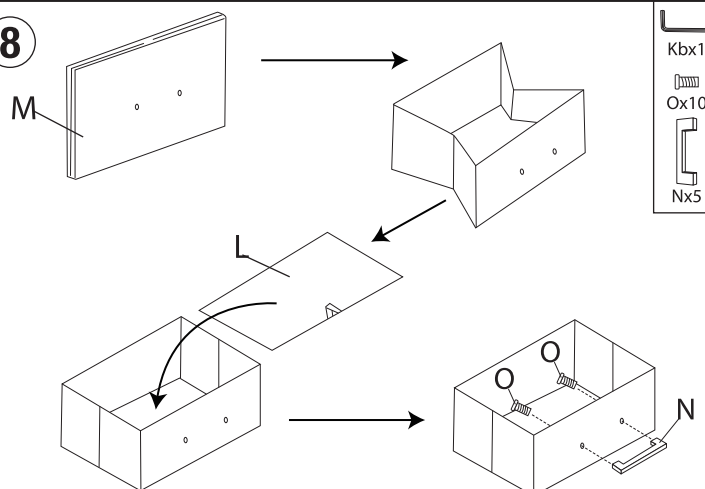

Kbx1
Ox10
Nx5

Step 8: Unfold drawers (M) then place drawer insert (L) inside. Secure handle (N) and handle screws (O) to the drawers (M) using the wrench (K).

9

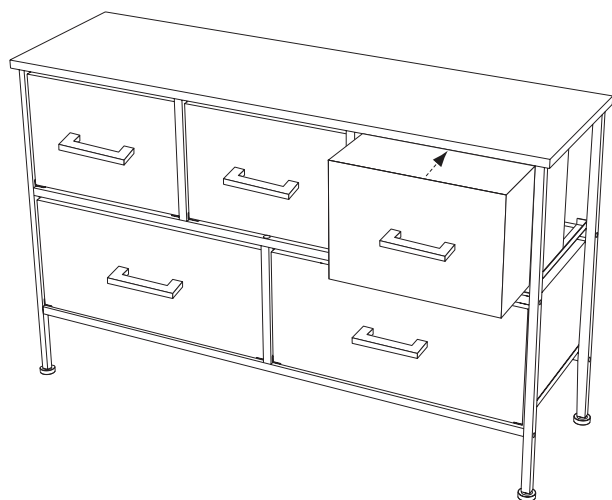


Step 9: Insert drawers within assembled storage dresser, then tighten installed screws.

10



Step 10: Make sure everything is secure. Enjoy!

A Wall Anchor




2PCS

B Wall Mount Screw




2PCS

1

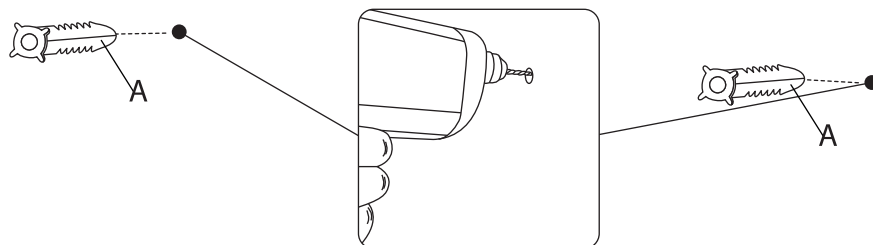

Step 1: Drill a hole into the wall using a 6mm bit and gently insert the wall anchor (A) with the help of a hammer.

2

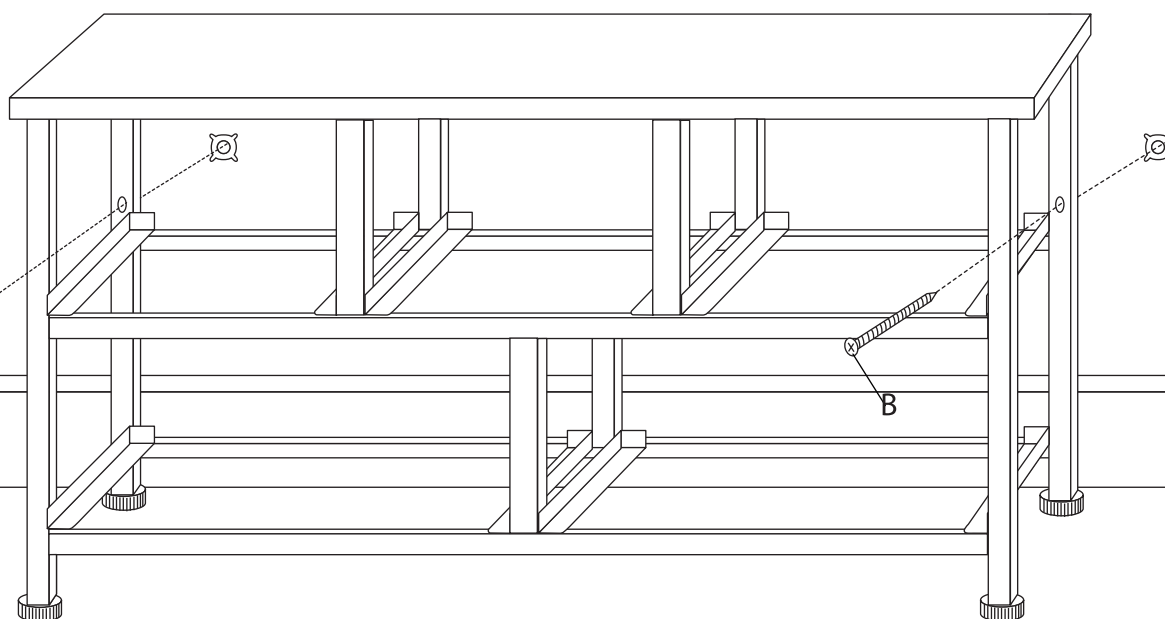

Step 2: Place the shelf against the wall, and insert the wall mount screws (B). After making sure everything is secure, feel free to use. Enjoy!