


ARGONAUT

DIVERTER TRIM INSTALLATION

Model #:
AG231-1

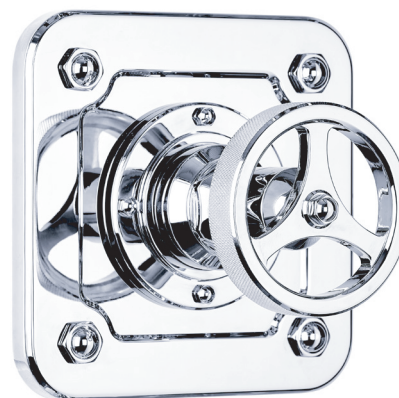

BEFORE YOU BEGIN YOUR INSTALLATION:

1



Turn off water supply.

2



Observe all local plumbing codes.

3



Inspect plumbing for signs of damage. Replace as necessary.

4



DO NOT use petroleum based products on this faucet.

REQUIRED TOOLS AND MATERIALS:



Flat Screwdriver



Adjustable Wrench



Channel Locks



Coping Saw

WARNING: Cancer and reproductive harm - see www.P65Warnings.ca.gov

IMPORTANT!

- Read these instructions and plan the installation before beginning.
- Risk of product damage. Do not apply direct heat to the valve. Excessive heat will damage the plastic components and plaster guard.
- Do not remove the plaster guard until instructed to do so.
- A water supply is required for this valve.
- Component location, spacing, and situational requirements can vary.

