
## **Installation Instruction**

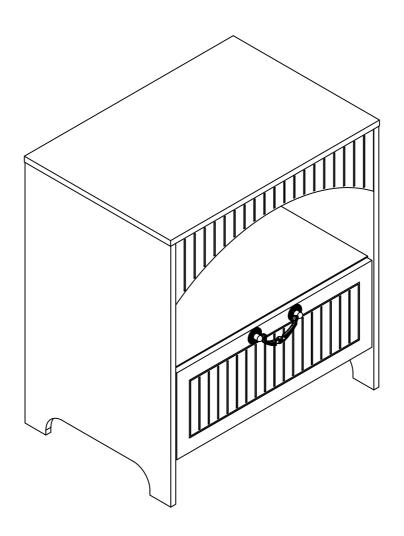

## **Assembling**


#### Estimated time for assembly



45:00

#### What you need

- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver



#### Weight Limitation




100 lbs table top 35 lbs per

### What' included

Code Description	Qty
A Cam Bolt M6X35MM	25
B Cam Lock 15X10MM	25
C Wooden Dowel M8X30N	MM 12
D Screw M4X40MM	7
E Screw M4X16MM	14
F Metal shake handshand	le 1
G Nylon Strap	2
H Screw M3.0X12MM	12
I Screw M3.0X14MM	8
J The back button	6
K Anchor	2
L EVA mat	4
CL Left mother extended o	rbit 1
CR Right mother extended	orbit 1
DL Left public extension tra	ack 1
DR Right public extends tra	ack 1

## The Hardwares

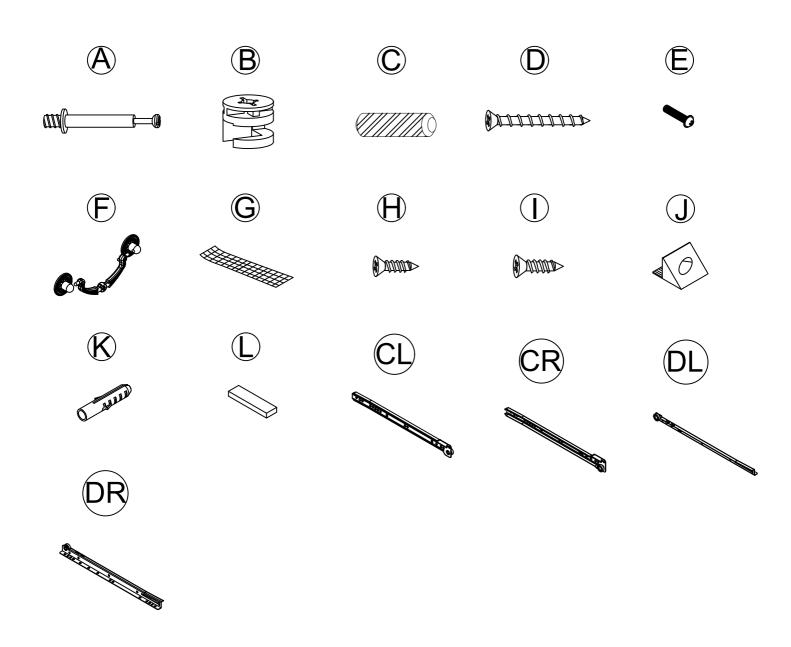


#### **IMPORTANT:**


- 1.Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
- 2.Do not over tighten screws and bolts to avoid stripping
- 3. Please use hand tools to assemble this product. Do not use power tools.

## **Included Accessories**


Code	Description	Qty
1	Cabinet Top	1
2	Bottom Panel	1
3	Left Side Panel	1
4	Right Side Panel	1
5	On the rear panell	1
6	Drawer left panel	1
7	Drawer right side panel	1
8	The drawer bottom	1
9	After the drawer board	1
10	FTop drawer panel	1
11	After the gusset plates	2
12	At the bottom of the drawer	1
13	Panel trim	1

## The Accessoriess

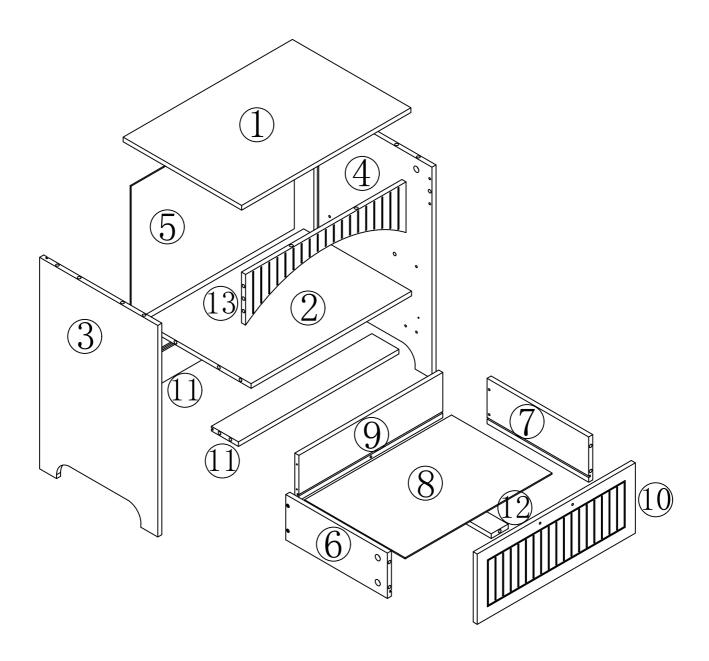


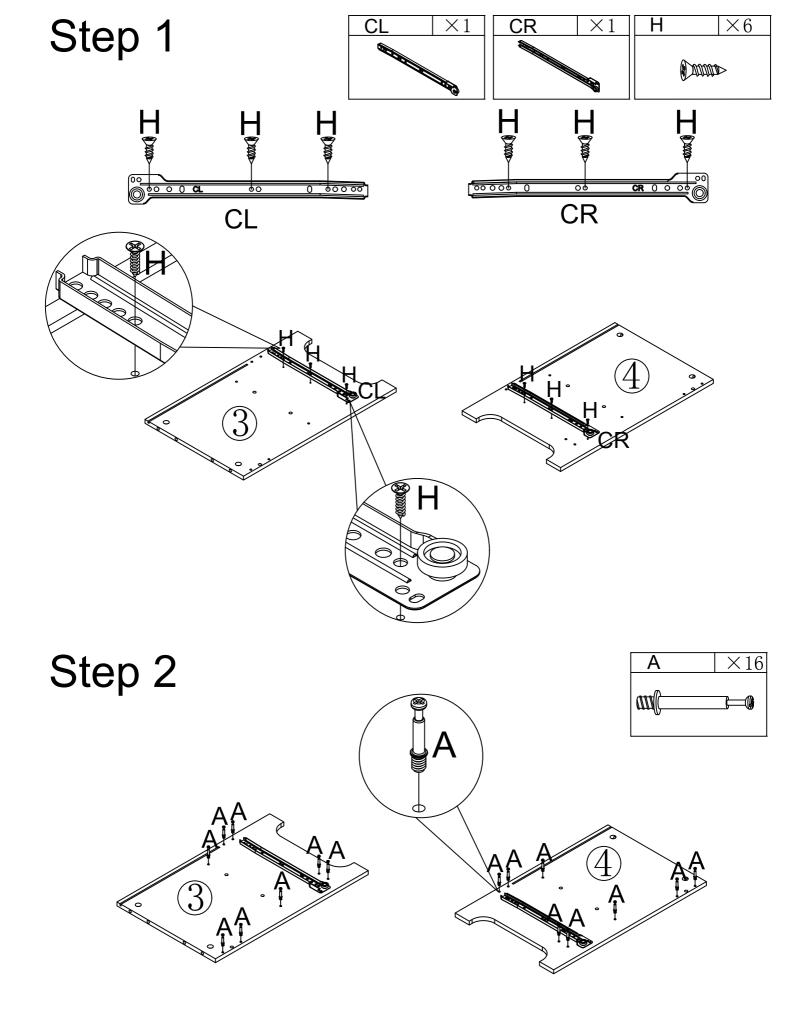


Step 3

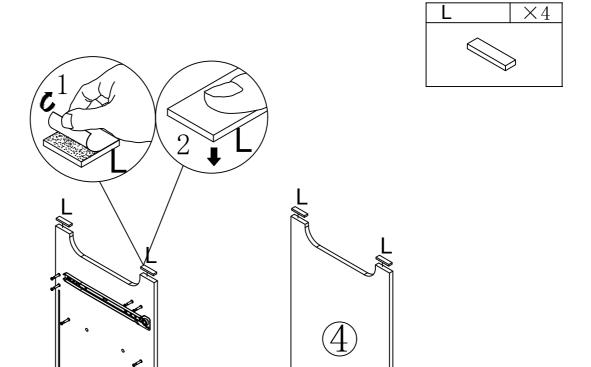


Step 4

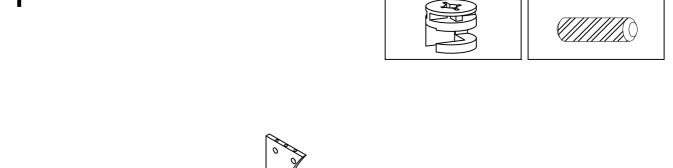


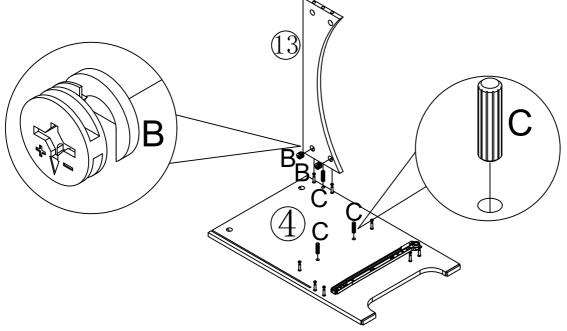


3

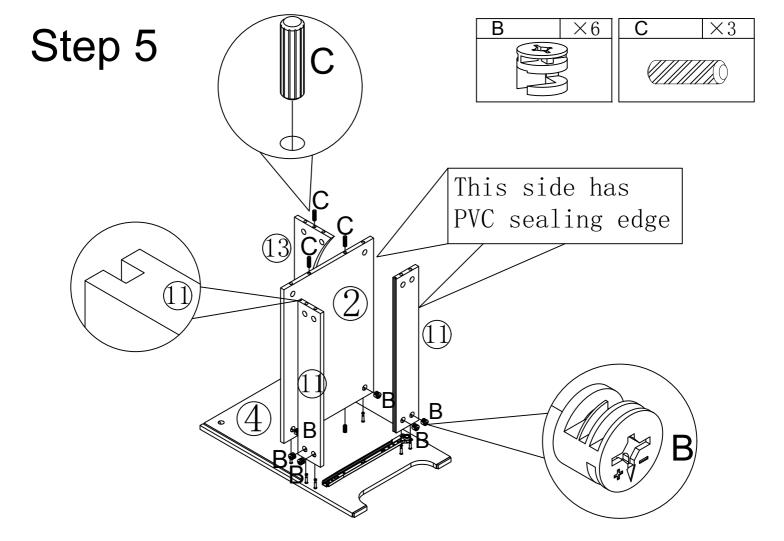




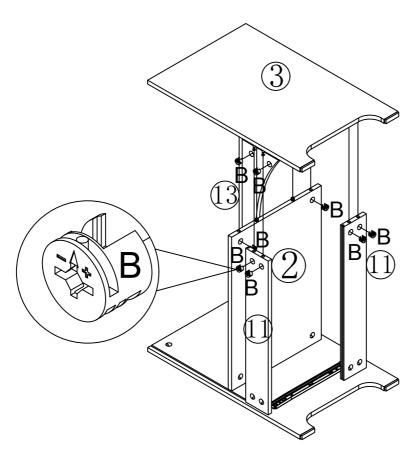





С  $\times 6$ Step 7 5 3 Step 8 Α  $\times 4$ В  $\times 4$ Step 9 **₽**B B 3


9



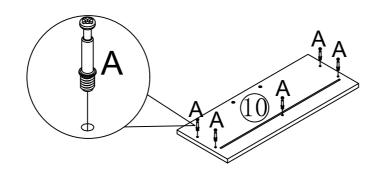



Step 11

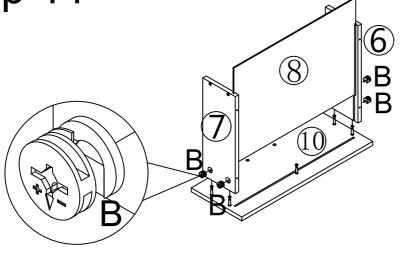






Step 12




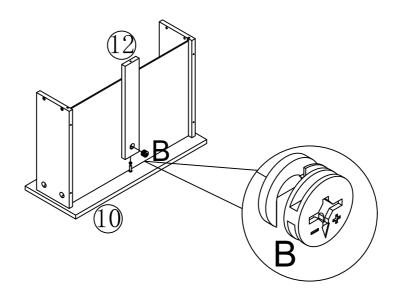




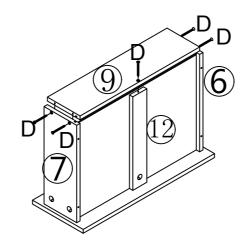


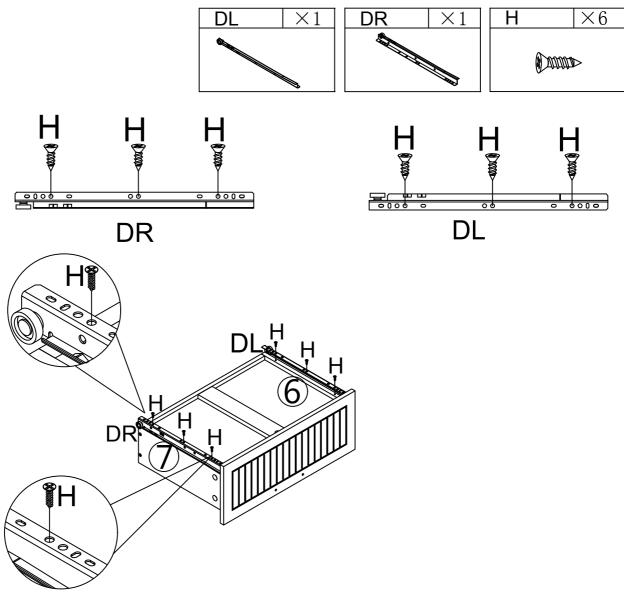








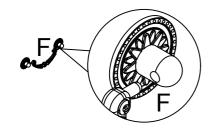

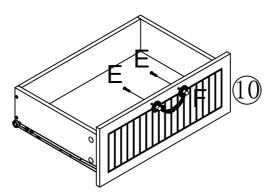

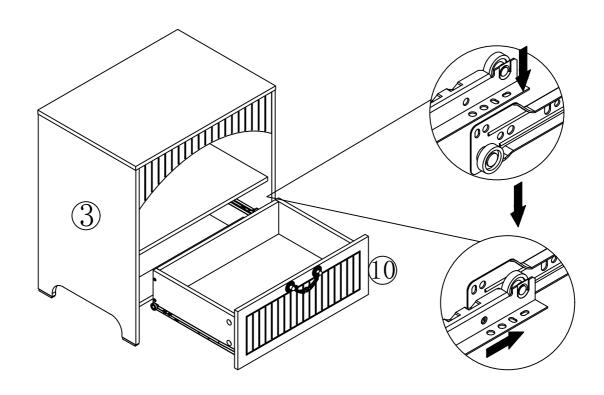



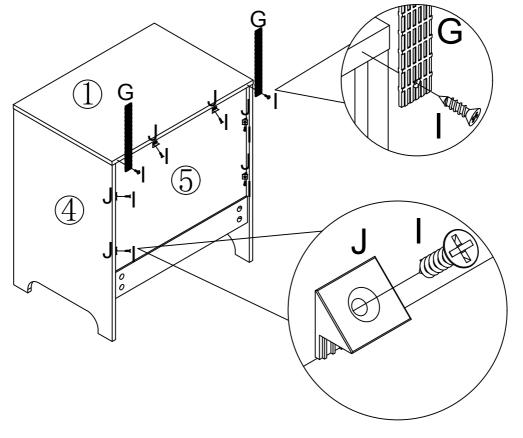

Step 18

