









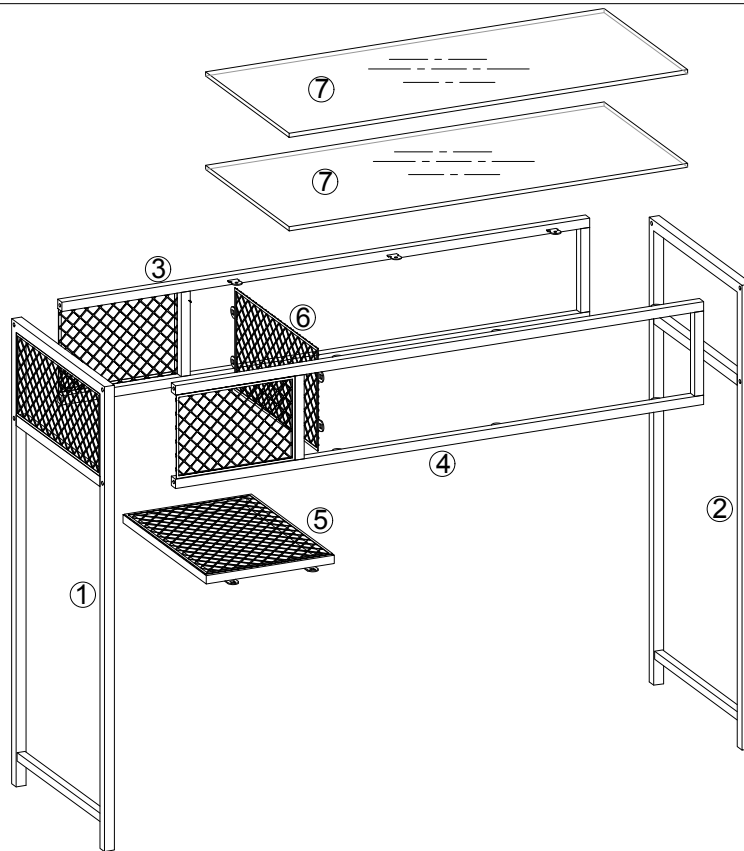


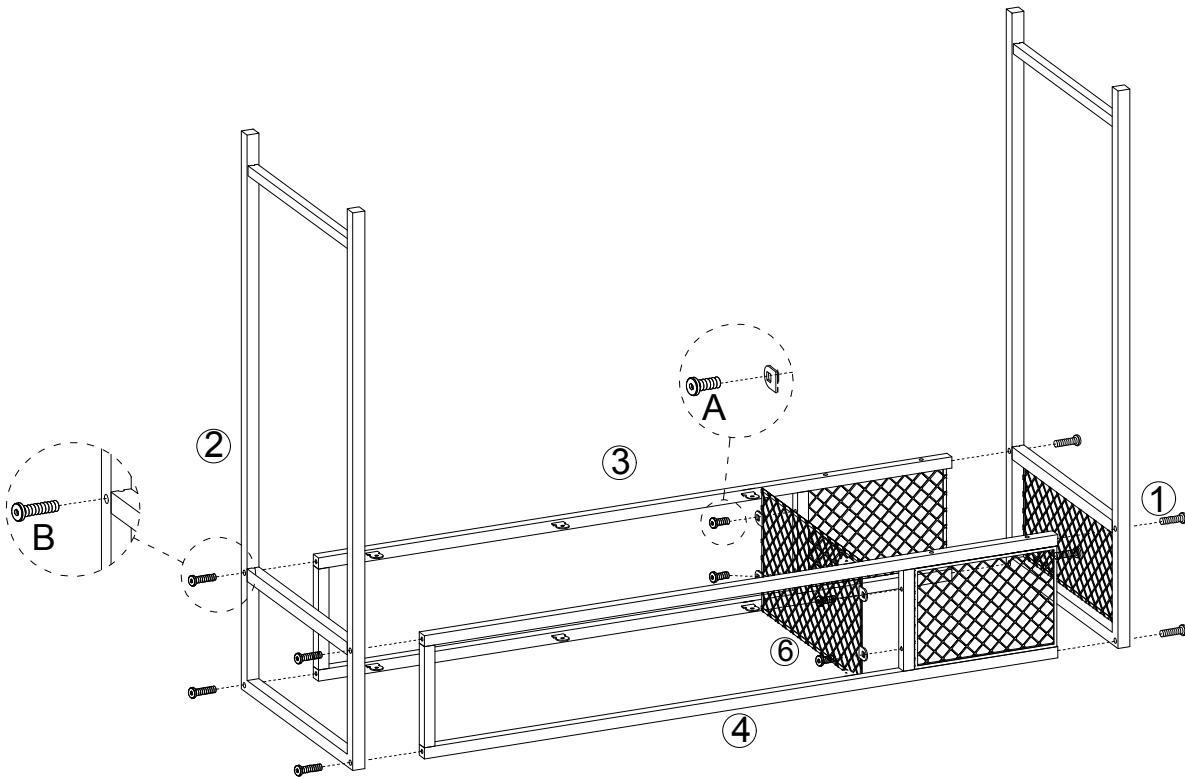
# Installation Instructions

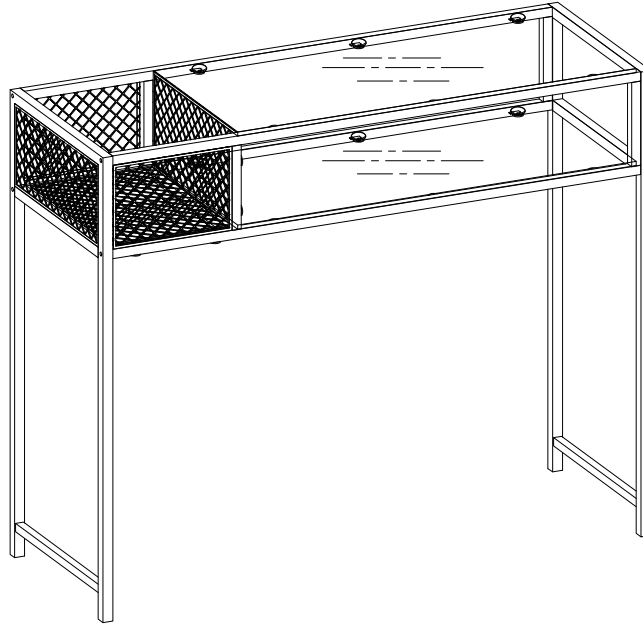


						
M6×12mm	M6×40mm					
Ⓐ ×8pcs	Ⓑ ×8pcs	Ⓒ ×1pc	Ⓓ ×2pcs	Ⓔ ×2pcs	Ⓕ ×2pcs	Ⓖ ×12pcs


# STEP 1

 M6×12mm Ⓐ ×4pcs	 M6×40mm Ⓑ ×8pcs
--	--



# STEP 2


 M6×12mm Ⓐ ×4pcs
---

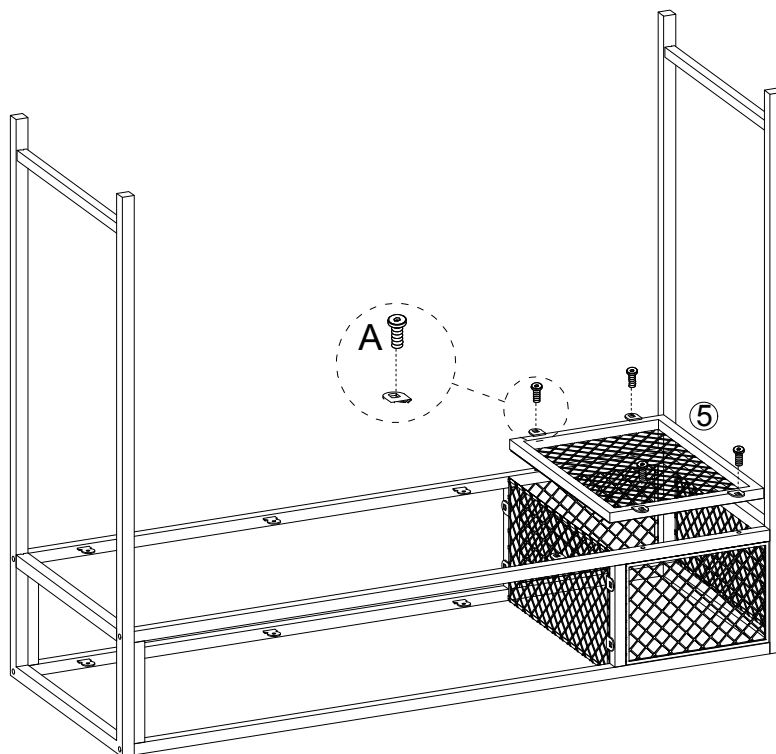


# STEP 3



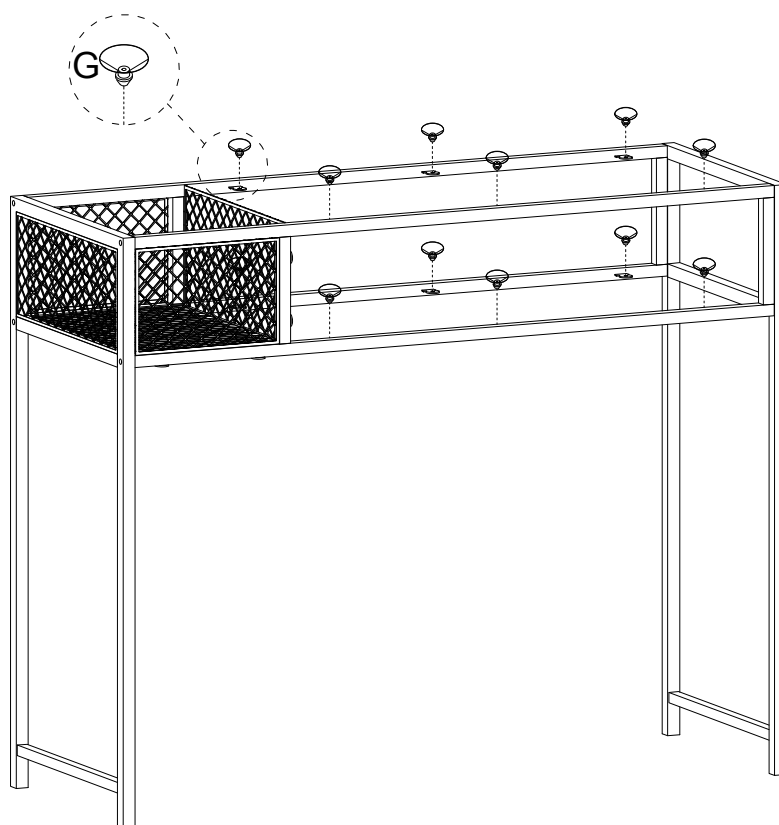


G × 12pcs

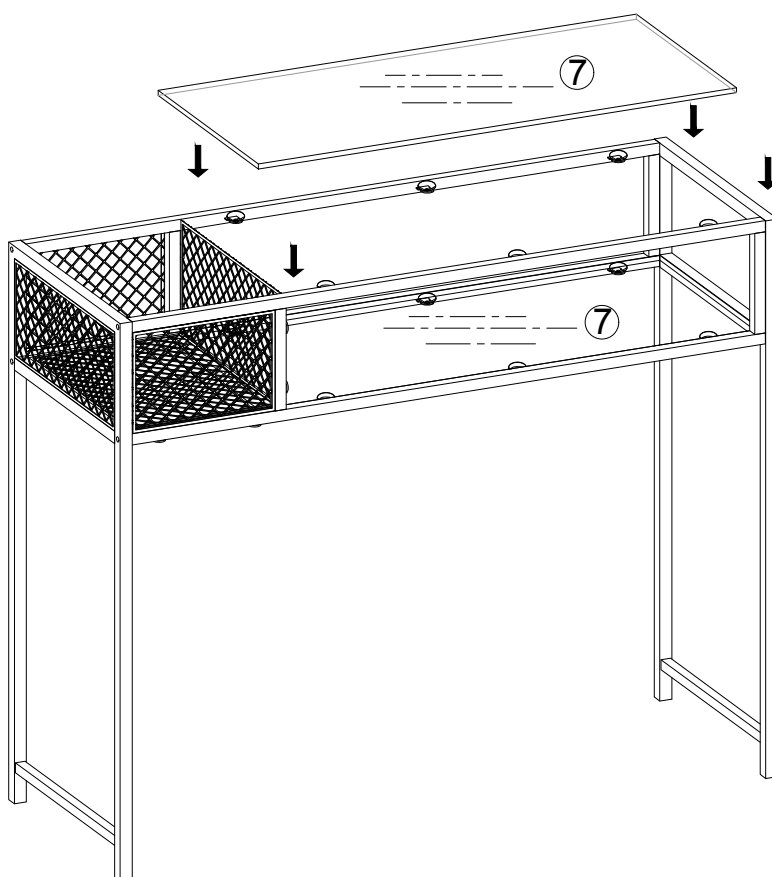

# STEP 4



# STEP 5

		
Ⓓ × 2pcs	Ⓔ × 2pcs	Ⓕ × 2pcs

