













ASSEMBLY INSTRUCTION

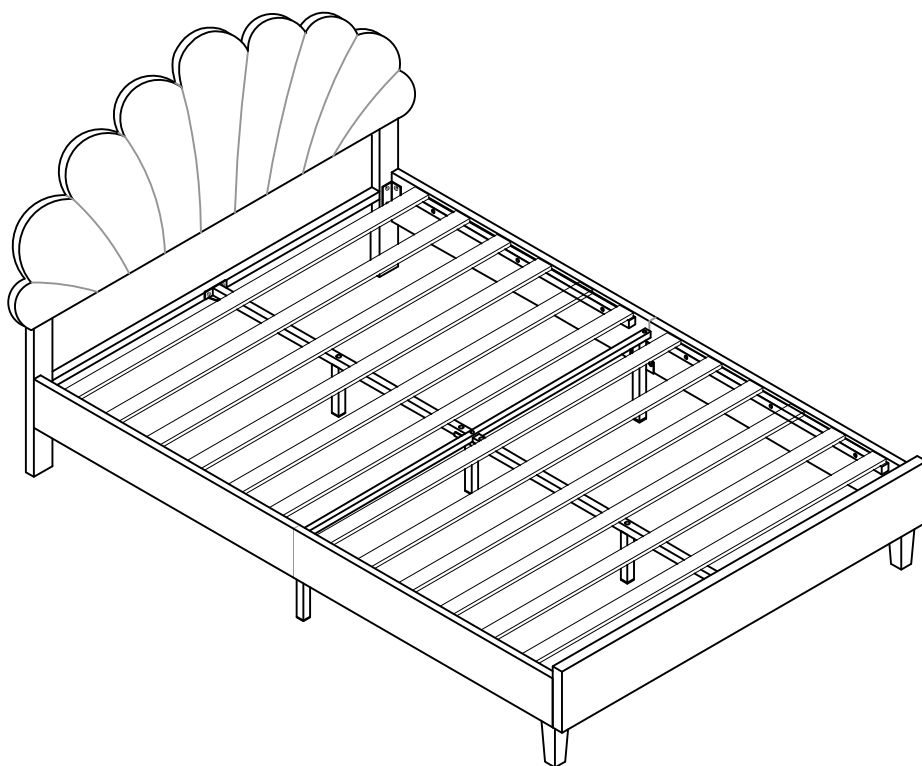

Detail View

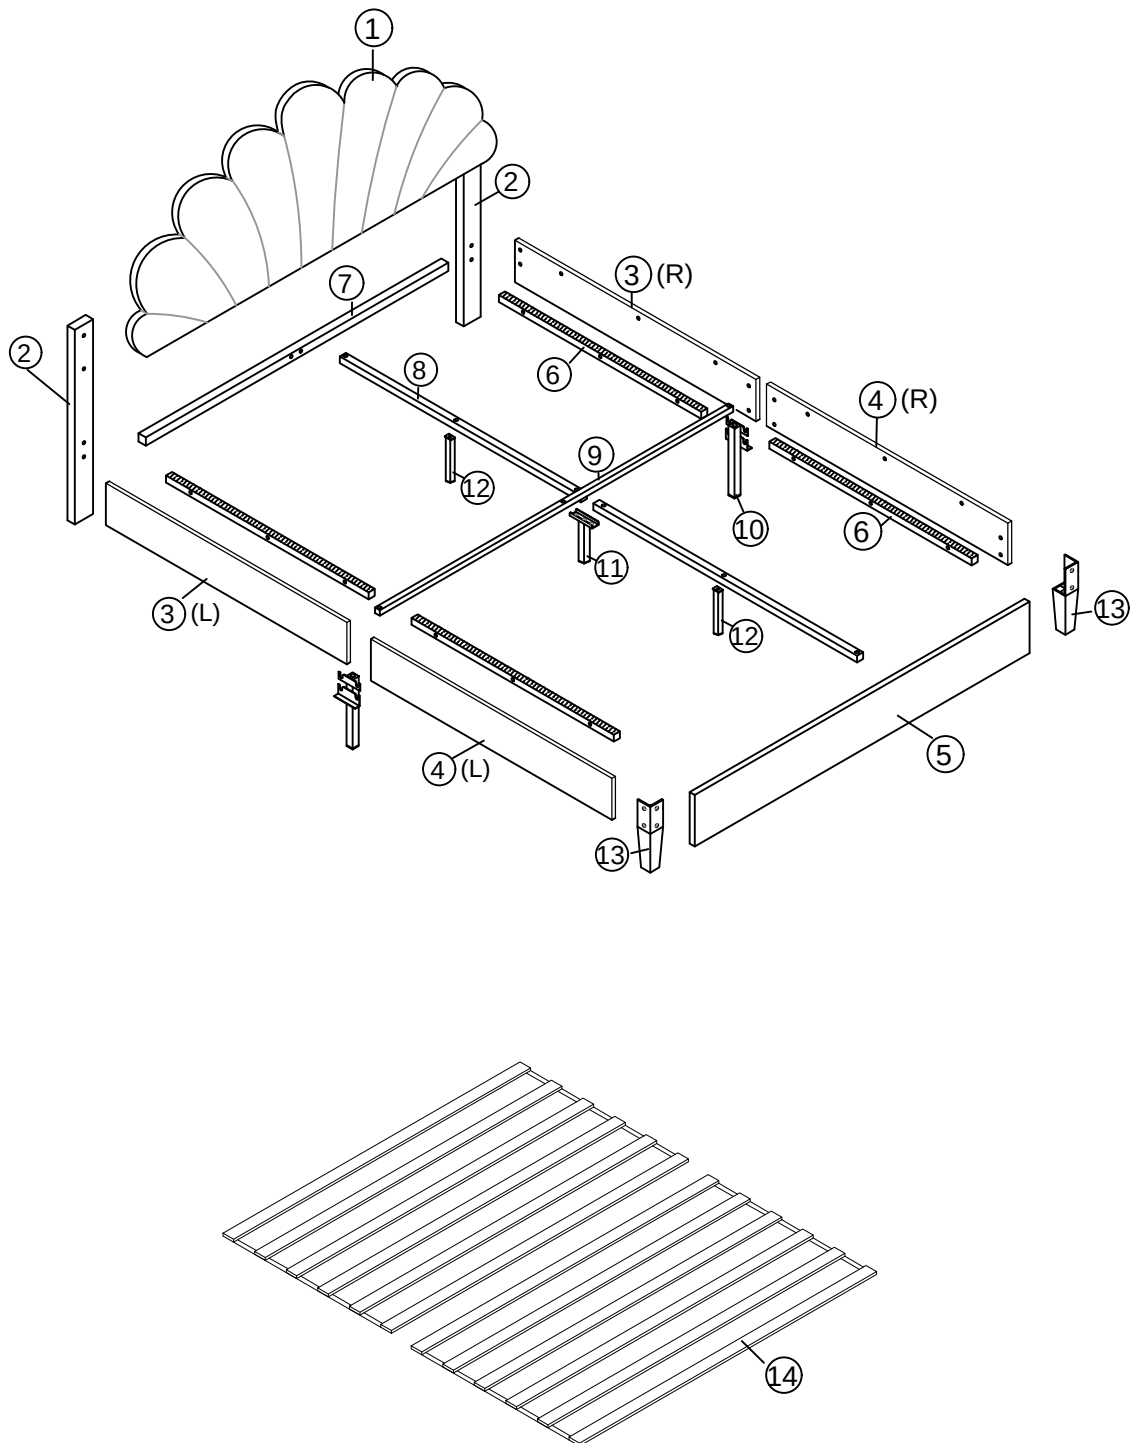

Part List

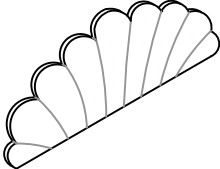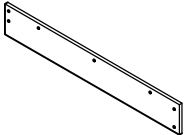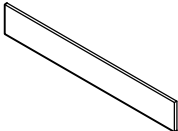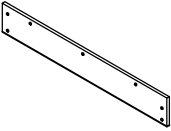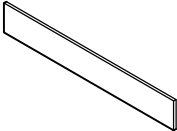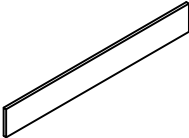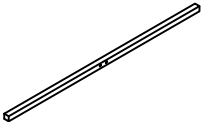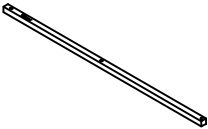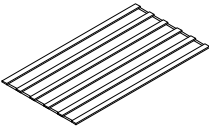1  Head board-1pc	2  Head board legs -2pcs	3R  Side rails-1pc
3L  Side rails-1pc	4R  Side rails-1pc	4L  Side rails-1pc
5  Foot board -1pc	6  Side rails support bar-4pcs	7  Head board cross bar-1pc
8  Center support bar-2pcs	9  Cross bar-1pc	10  Side rails support legs-2pcs
11  Connected support leg-1pc	12  Middle support leg-2pcs	13  Legs-2pcs
14  Slats-12pcs		


Hardware List

A  20*70mm	B  Ø8*45mm	C  Ø8*18mm
Allen Key(1pc)	Bolts(4pcs)	Bolts(32pcs)
D  Ø8*40mm	E  105*25*2mm	F  75*33*33mm
Bolts(21pcs)	Two hole iron(2pcs)	"7" Connector(2pcs)
G 		
Center support bar fittings(2pcs)		

Attention: Do not tighten the screws before completing the entire installation. If you have any difficulty with the installation process, please feel free to contact us.


Step 1 x2

Fix the Headboard legs ② to the Headboard ① with Bolt B by using Allen key A. You can chose the holes a and c or b and d.

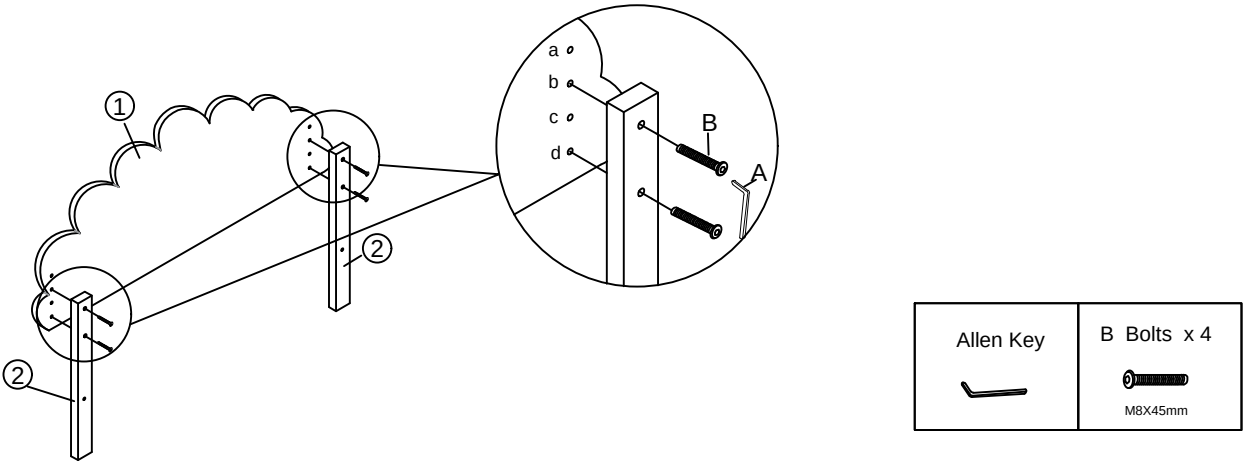

Step 2 x2


Fix the Headboard cross bar ⑦ to the Headboard legs ② with Bolt C and Two hole iron E by using Allen key A.

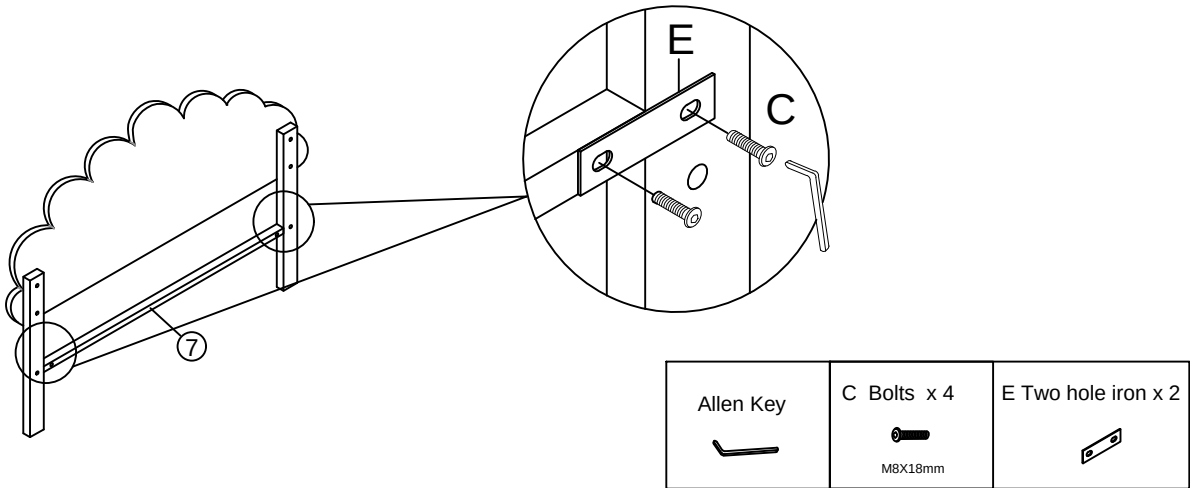

Step 3 x2


Connect to Siderail support bar ⑥ Siderails ③ and ④ with Bolts D by using Allen key A.

NOTICE:
Please assemble ③ and ④ together.

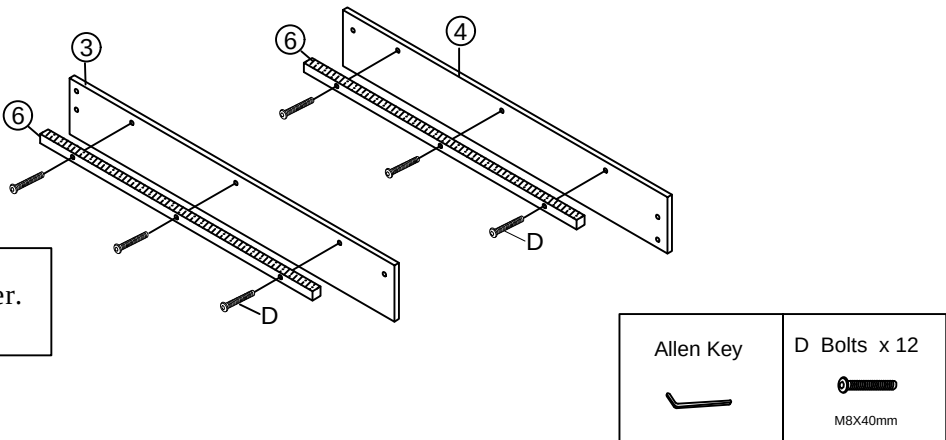

Step 4 x2


Fix the side rails support leg ⑩ to the side rail with Bolts C by using Allen key A

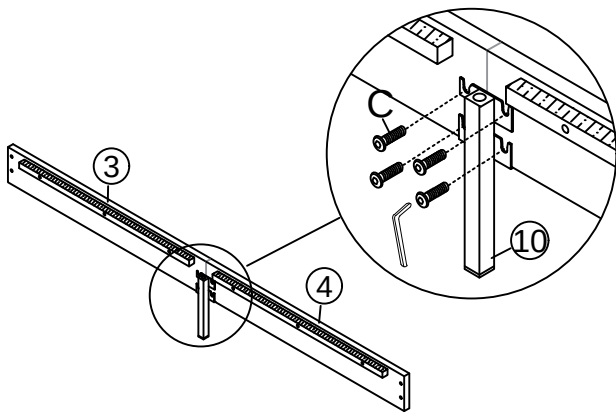

Allen Key	C Bolts x 8
	 M8X18mm

Step 5 x2


Fix the assembled siderail to the Headboard legs ② with Bolt C and "7" Connector F by using Allen key A.

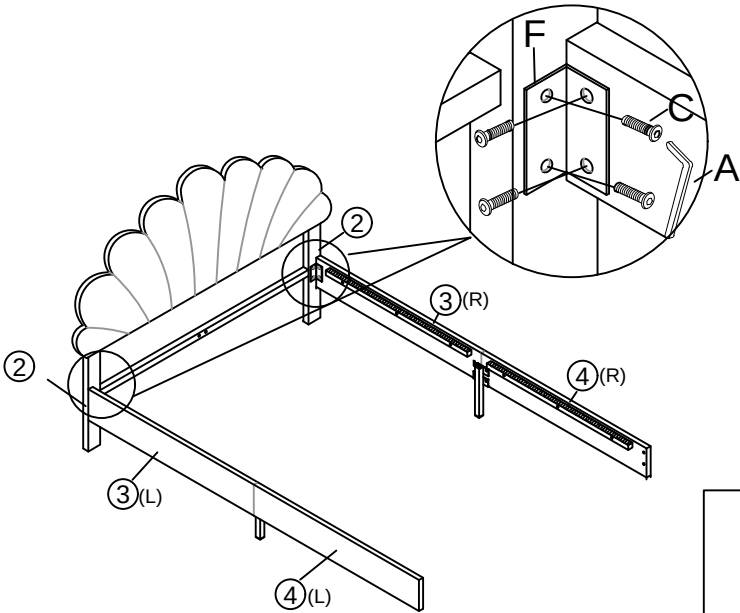

Allen Key	C Bolts x 8	F "7" Connector x 2
	 M8X18mm	

Step 6 x2


Fix the assembled siderail to the footboard ⑤ with Bolt C and legs ⑬ by using Allen key A.

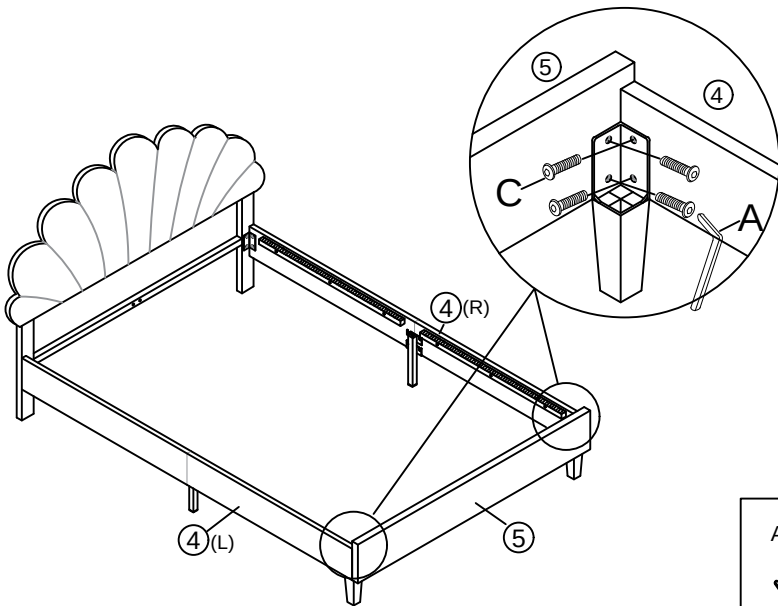

Allen Key	C Bolts x 8
	 M8X18mm

Step 7 x2


Fix the Center support bar fittings G to the Headboard cross bar ⑦ and foot board ⑤ with Bolts C by using Allen key A

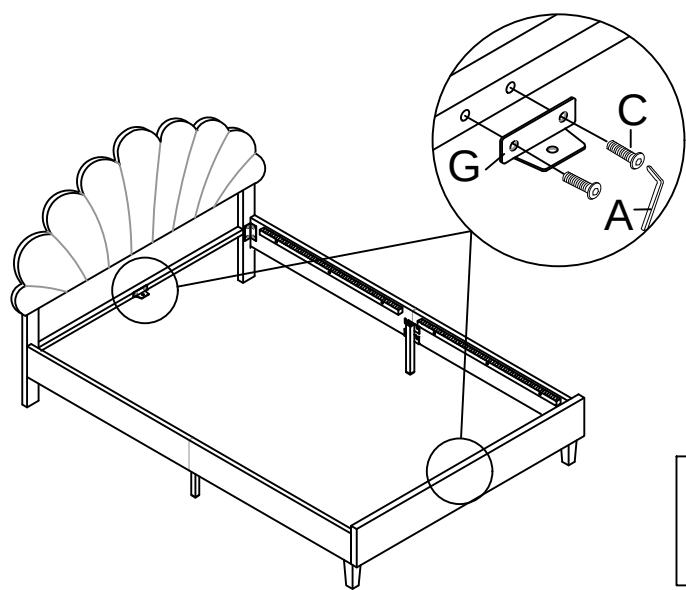

Allen Key	C Bolts x 4	G Center support bar fittings x2
	 M8X18mm	

Step 8 x2


Connect Center support bar ⑧ with Connected support leg ⑪ with Bolts D by using Allen key A. Fix the Middle support leg ⑫ to the Center support bar ⑧ with Bolts D by using Allen key A.

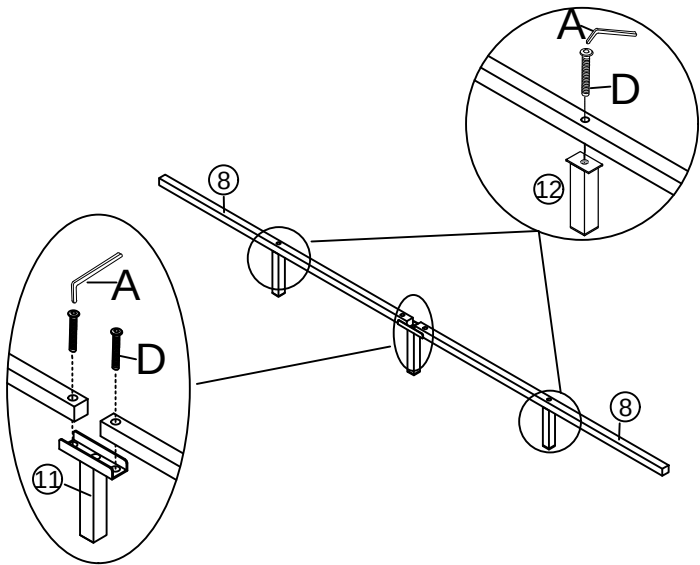

Allen Key	D Bolts x 4
	 M8X40mm

Step 9


Fix the Center support bar ⑧ to the headboard cross bar ⑦ and foot board ⑤ with Bolts D by using Allen key A

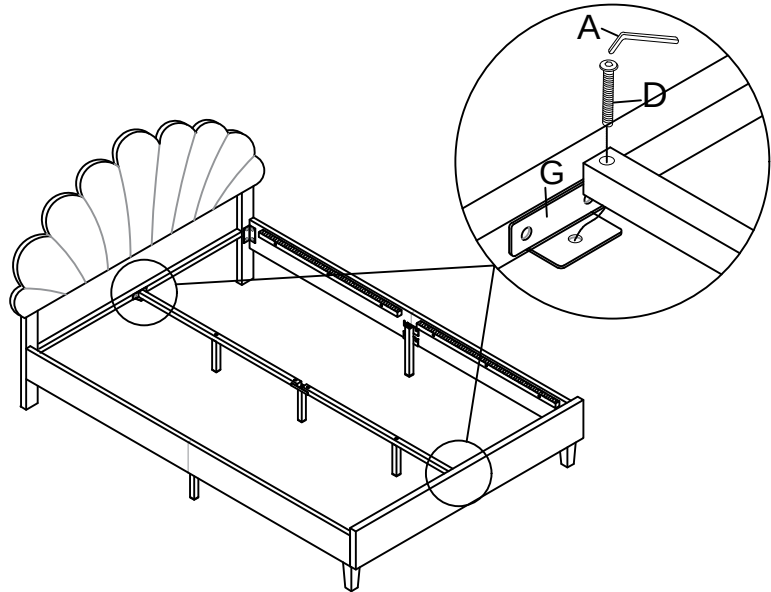

Allen Key	D Bolts x 2
	 M8X40mm

Step 10

Fix the cross bar⑨to the side rails support legs⑩and Connected support legs ⑪with Bolts D by using Allen key A

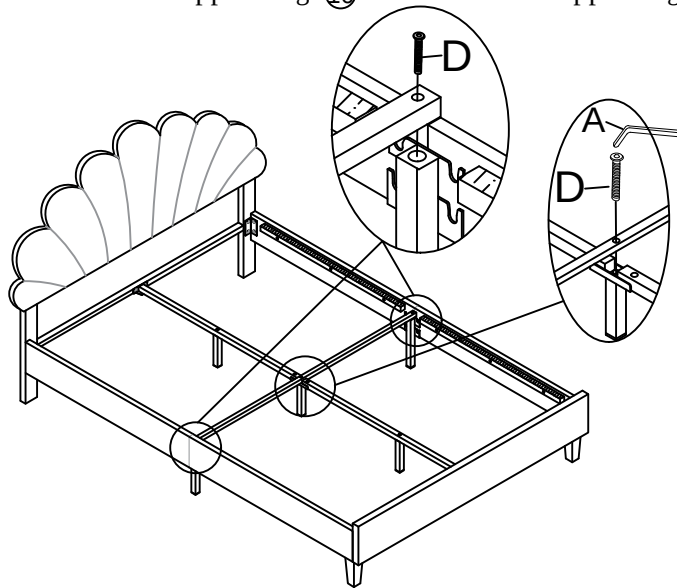

Allen Key	D Bolts x 3
	 M8X40mm

Step 11

Fix the slats⑭to the side support bar ,then assemble is finished,now please tighten all hardware and enjoy the bed.

