
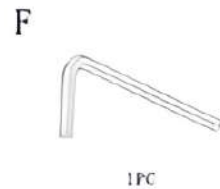
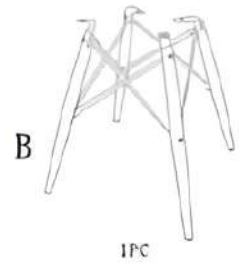
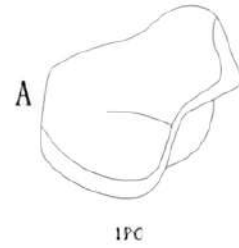


Assembly Instruction

PP-125D

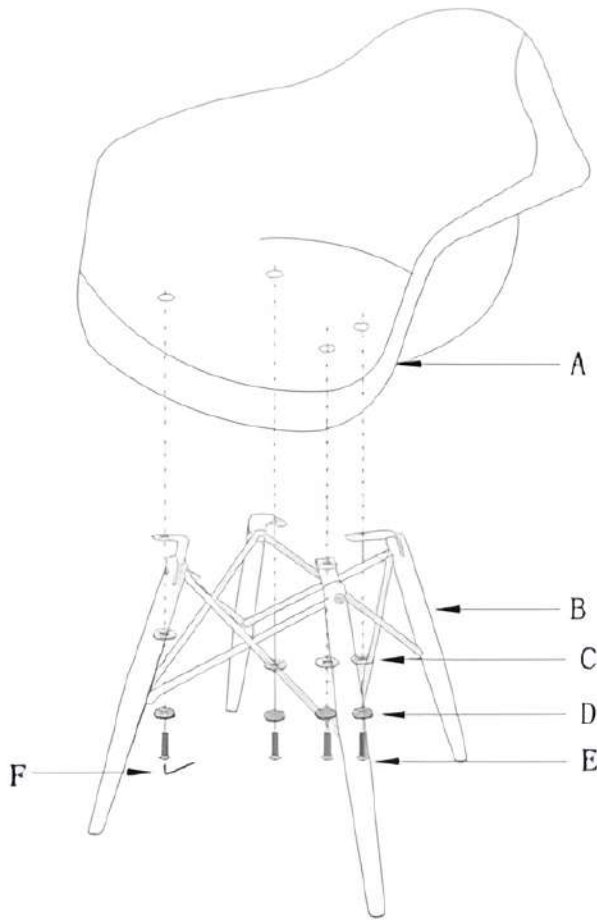

PLEASE READ: IMPORTANT MESSAGE

Missing / Damaged part(s)

If you have received your order and have a missing / damaged part(s) or hardware piece(s) for a specific item, please report to us immediately.

EMAIL: info@moderndecor.com

TEL: 626-774-2294