


Assembly Instructions

Hoff Armchair

519741-01/02/03/04/05

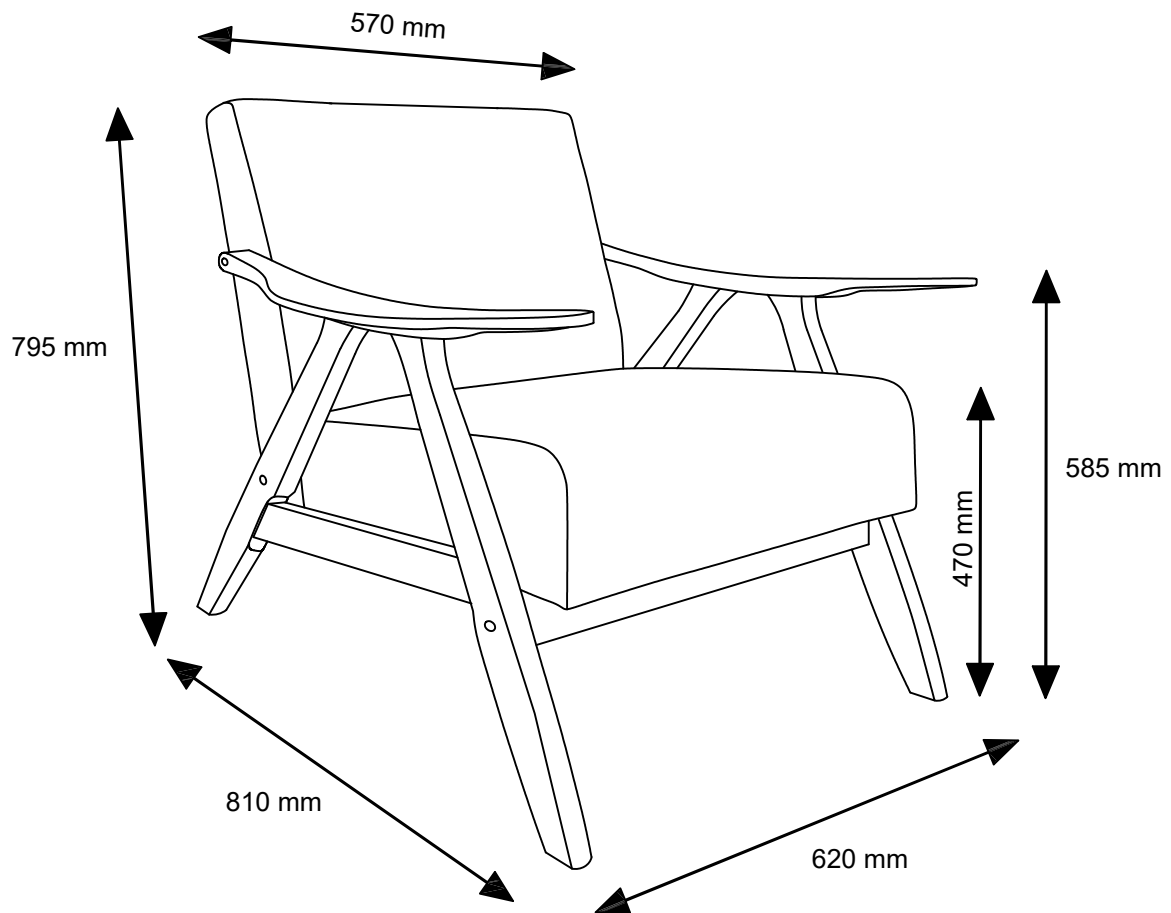

Keep these instructions for future reference


Assemble the furniture on a soft level surface to avoid damaging the furniture or your floor.

We recommend furniture be assembled near where they will be placed, to avoid moving the product unnecessarily once assembled.

If there is a need to move the furniture, please remove all loose items and have extra hands to help lift the furniture to the desired location. Dragging the furniture will damage both the furniture and the floor.







Regularly check and re-tighten (if necessary) all bolts on furniture that you have assembled yourself.

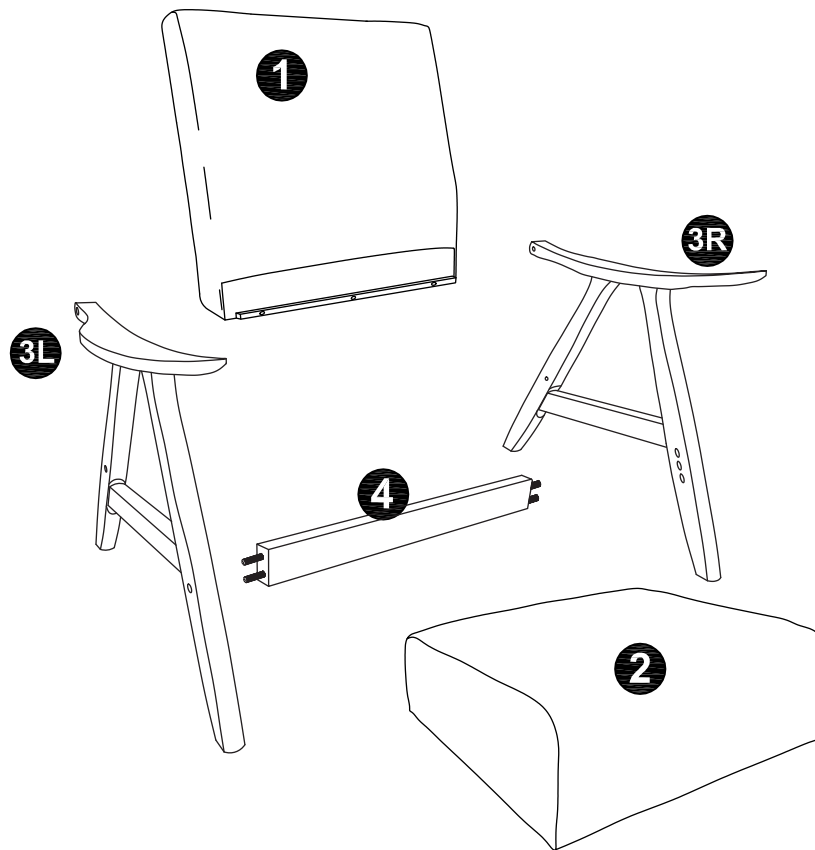PARTS LIST




NO.	PARTS LIST	QTY
(1)	BACKREST	1
(2)	CUSHION SEAT	1
(3L)	LEFT LEG FRAME	1
(3R)	RIGHT LEG FRAME	1
(4)	FRONT RAIL	1


HARDWARE LIST

NO.	DESCRIPTION		QTY
A	BOLT M6x70 MM		6
B	BARREL NUT M6x13 MM		2
C	WOOD DOWEL M8x30 MM		4
D	ALLEN KEY M4x100 MM		1
E	BOLT M6x40 MM		1
F	FLAT WASHER M6x19 MM		1

1



M8x30 mm
C x 4

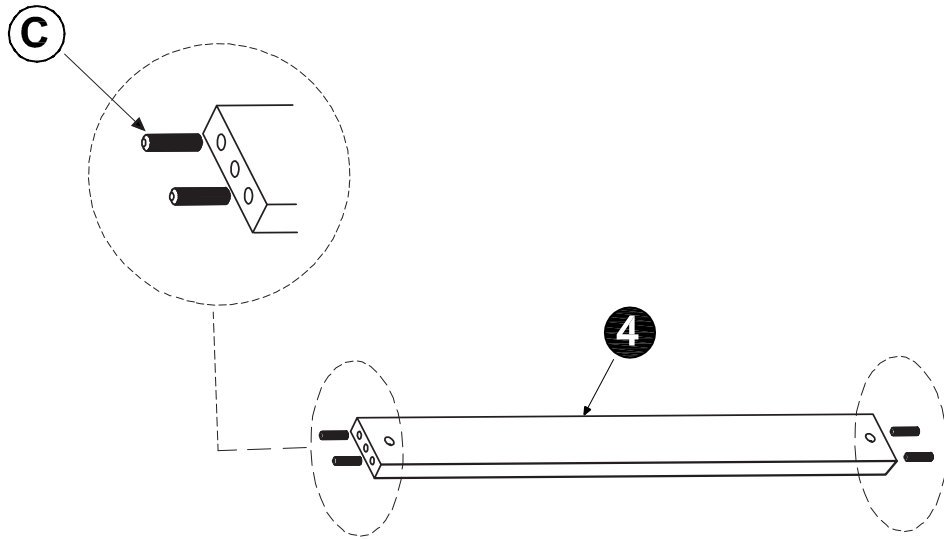

2




M6x70 mm
A x 2




M6x13 mm
B x 2



M4x100 mm
D x 1

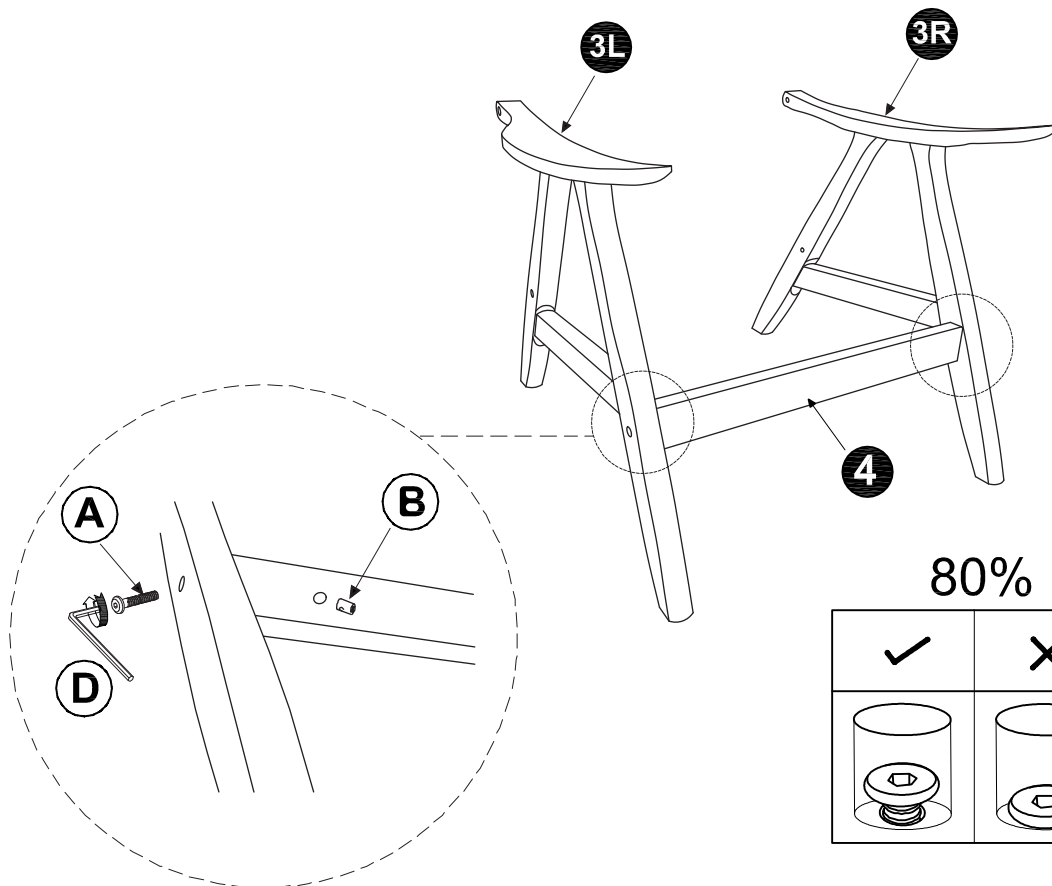



3




M6x70 mm
A x 4




M4x100 mm
D x 1

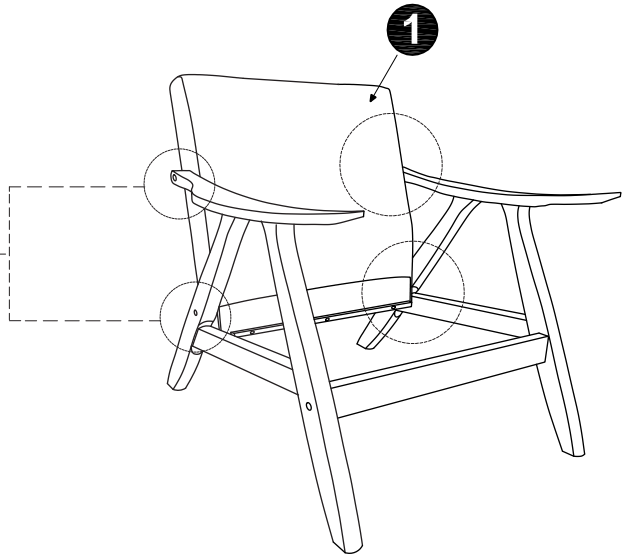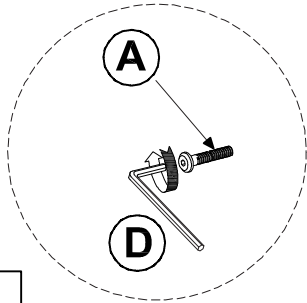



80%

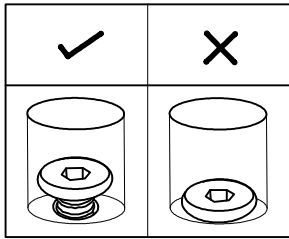

4



2

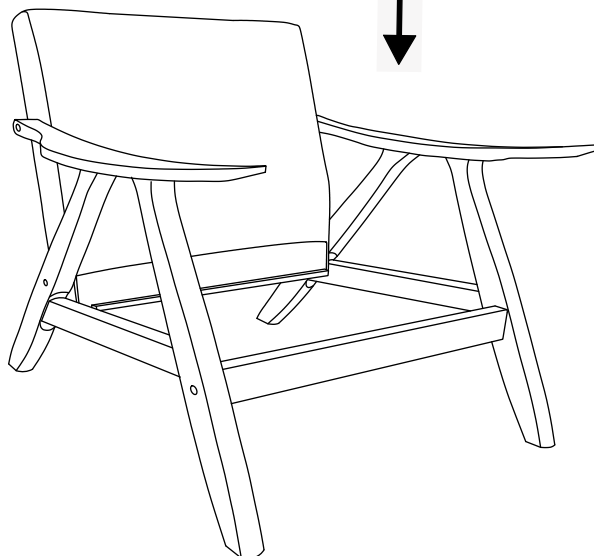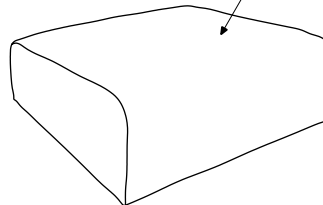

5



M6x40 mm
E x 1





M6x19 mm
F x 1



M4x100 mm
D x 1

100%

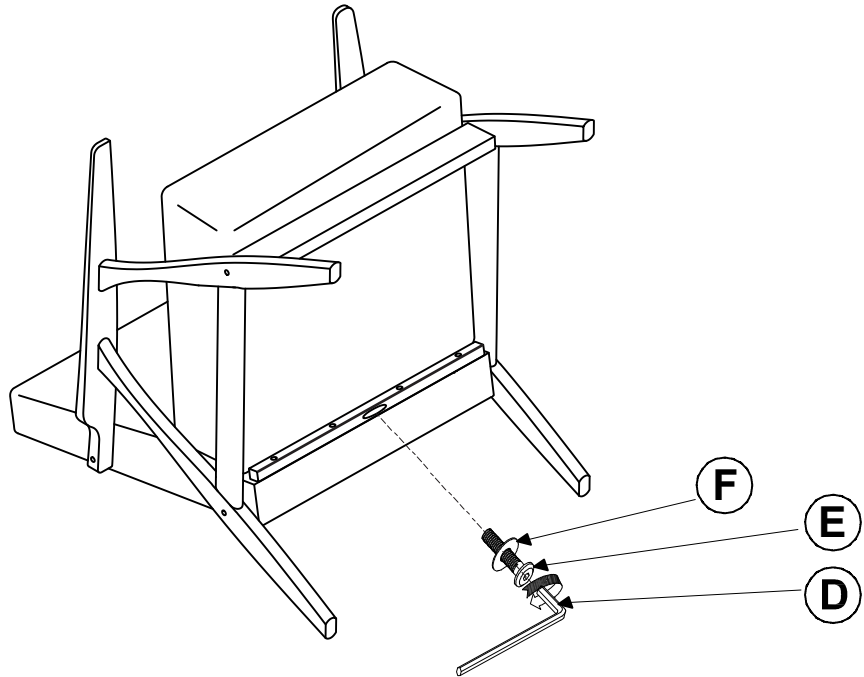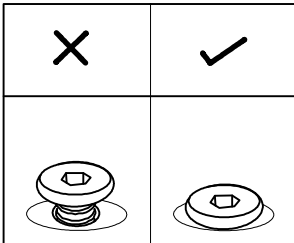

6



M4x100 mm
D x 1

100%

