

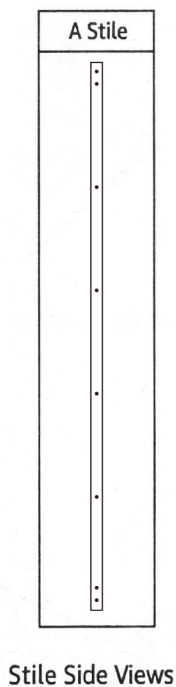


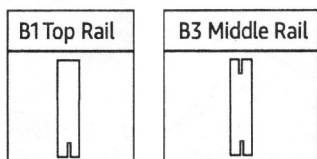

Barn Door Installation Instruction

PARTS		QTY
A	Side Stile	2
B1	Top Rail	2
B3	Middle Rail	4
C	Foughened Frosted Glass	5
E	Lag Screws	16
F	Plastic Buckle	16

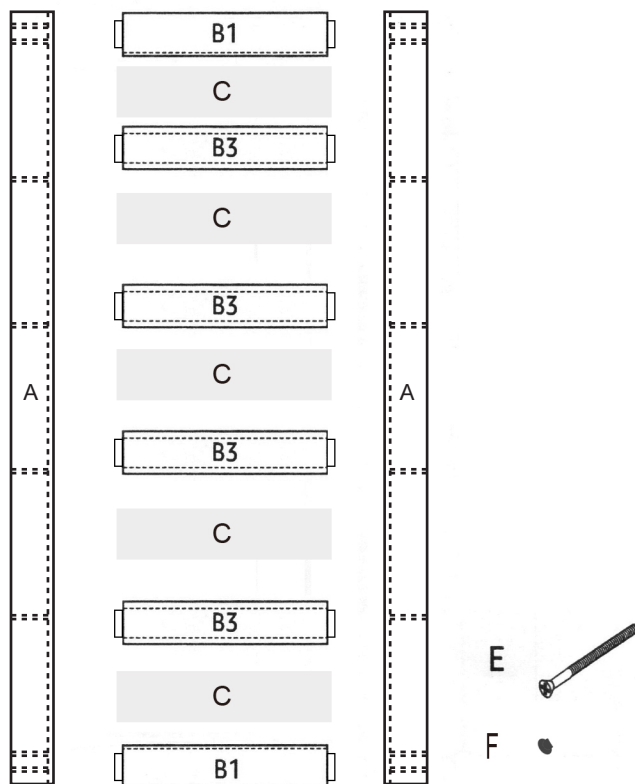

1. On a flat, clean surface, lay out one side stile (A) with the groove facing to the right.

Assemble top rail (B1), middle rail (B3) and top rail (B1) to A1 by fitting the tongue into the groove of A.

