

NOTICE

*Please make sure that you have all part indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

*This item may require periodic tightening.

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

*Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (not included): Screwdriver

CARE AND MAINTENANCE


Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Objects whose composition consists of plastic and rubber are known to discolor and damage the wood surfaces on which they rest. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

Part List

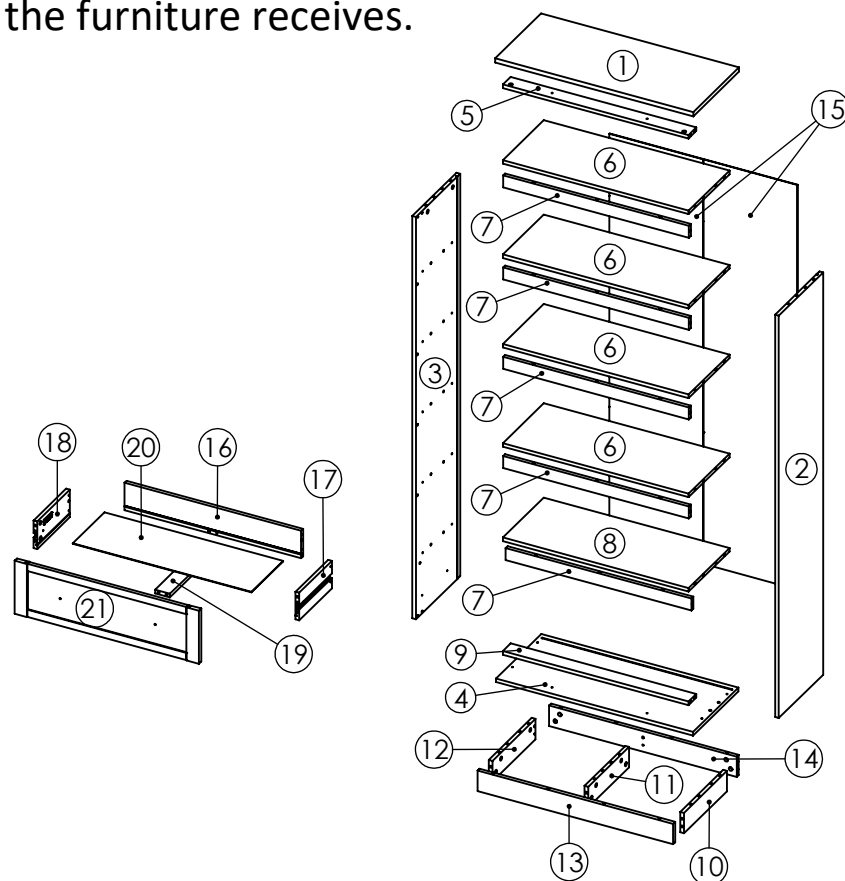

Model#ETG3101

Product Dimensions: W 31.50" x D 13.78" x H 70.87"

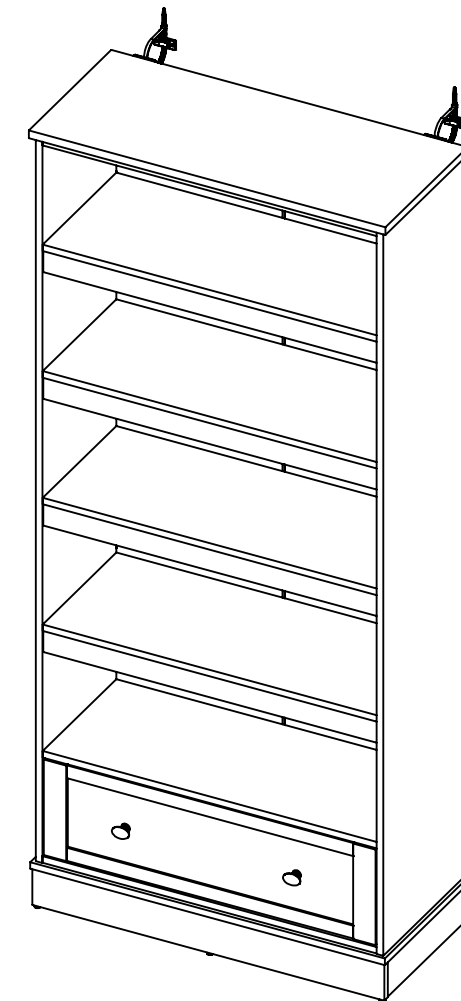

WARNING

TOTAL WEIGHT CAPACITY: 136 LBS













Drawer Load Capacity: 8 lbs




Shelf Load Capacity: 25 lbs

Warning: Do not stand on bookcase

Warning: Do not over torque bolt

Hardware List

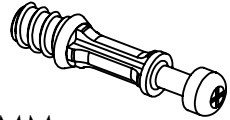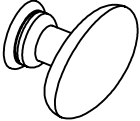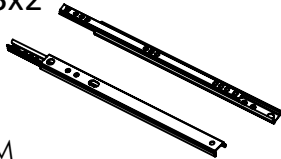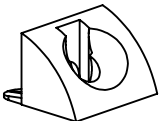HW1x59  Ø6x32 MM	HW2x59  Ø15x12 MM	HW3x69  Ø8x32 MM	HW4x4  Ø6x50 MM	HW5x5  Ø7x32 MM	HW6x4  Ø6x25 MM
HW7x16  Ø4x19 MM	HW8x4  Ø5x8.5 MM	HW9x2  Ø4x10 MM	HW10x2  Ø4x10 MM	HW11x36  Ø20 MM	HW12x2  31x35 MM
HW13x2  246 MM	HW14x16  10x14 MM	HW15x1  1675 MM			

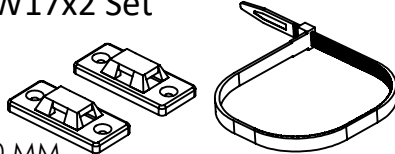Anti-tip restrain pack	
HW16x4  Ø6x15 MM	HW17x2 Set  300 MM
HW18x4  Ø10x50 MM	HW19x4  Ø8x35 MM

Part List & HW


Piece	Description	Qty	Carton Call
1	Top Panel	1	1 of 1
2	Side Panel - Right	1	1 of 1
3	Side Panel - Left	1	1 of 1
4	Bottom Panel	1	1 of 1
5	Upper Apron	1	1 of 1
6	Fixed Shelf - Upper	4	1 of 1
7	Plint Support	5	1 of 1
8	Fixed Shelf - Lower	1	1 of 1
9	Lower Apron	1	1 of 1
10	Plint - Right	1	1 of 1
11	Plint - Center	1	1 of 1
12	Plint - Left	1	1 of 1
13	Plint - Front	1	1 of 1
14	Plint - Rear	1	1 of 1
15	Back Panel	2	1 of 1
16	Drawer Back	1	1 of 1
17	Drawer Side- Right	1	1 of 1
18	Drawer Side - Left	1	1 of 1
19	Drawer Base Support	1	1 of 1
20	Drawer Base	1	1 of 1
21	Front Drawer	1	1 of 1

Piece	Description	Qty	Carton Call
HW1	Cambolt Ø6x32 mm	59	1 of 1
HW2	Camlock Ø15x12 mm	59	1 of 1
HW3	Wooden Dowel Ø8x32 mm	69	1 of 1
HW4	Screw M6 x 50 mm	4	1 of 1
HW5	Screw M7 x 32 mm	5	1 of 1
HW6	Screw M6 x 25 mm	4	1 of 1
HW7	Screw M4 x 19 mm	16	1 of 1
HW8	Screw M5 x 8.5 mm	4	1 of 1
HW9	Screw Panhead 4 x 10 mm	2	1 of 1
HW10	Screw Jp M4 x 10 mm	2	1 of 1
HW11	Cover Cap Sticker Ø20 mm	36	1 of 1
HW12	Handle 31x35 mm	2	1 of 1
HW13	Minislide Runner 246 mm	2	1 of 1
HW14	Plastic Stopper 10x14 mm	16	1 of 1
HW15	List "H" (1675 mm)	1	1 of 1
HW16	Screw M6 x 15 mm	4	1 of 1
HW17	Anti-tip 300 mm	2	1 of 1
HW18	Screw M10 x 50 mm	4	1 of 1
HW19	Fisher "S" 8x35 mm	4	1 of 1


Special Tips for Fitting Minifix Cam (Cam-Lock), and Minifix Bolt (Cam-Bolts)

CAM-BOLT



Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

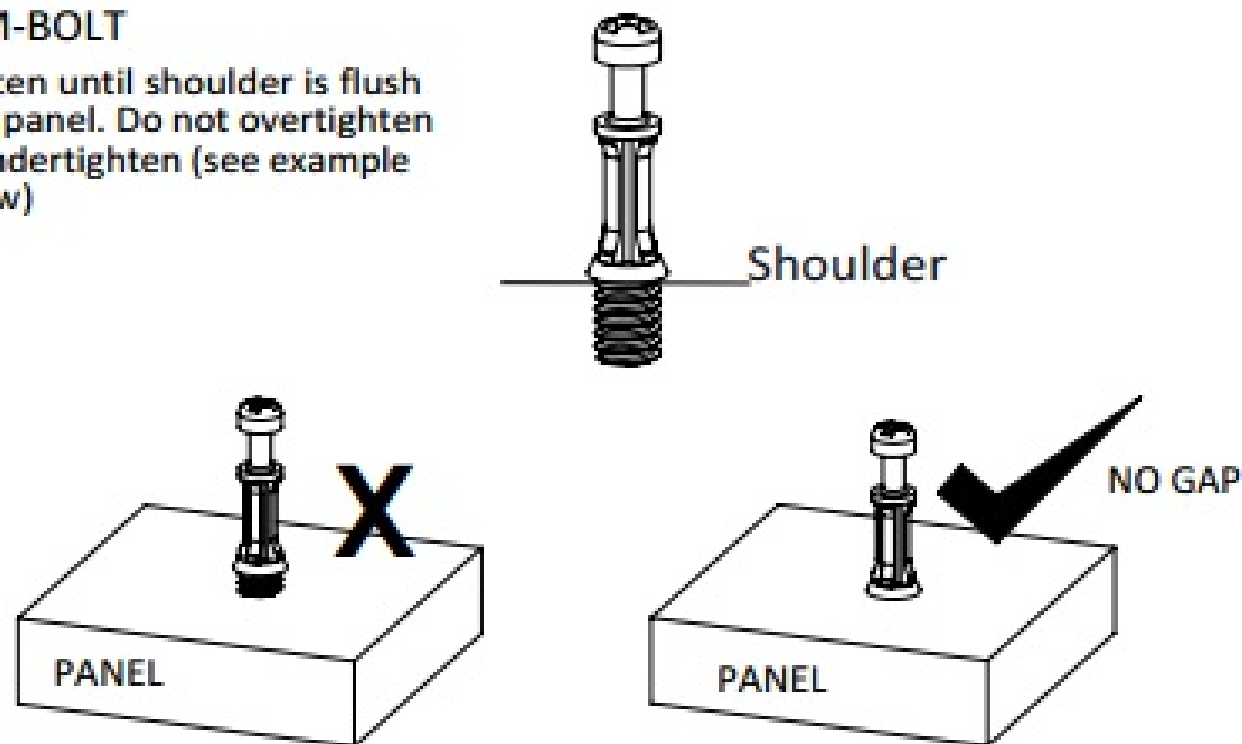

CAM-LOCK

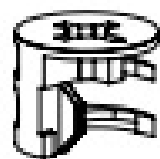


See this Arrow Points !

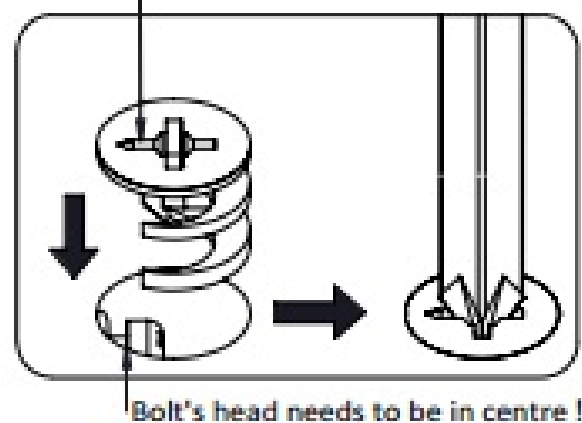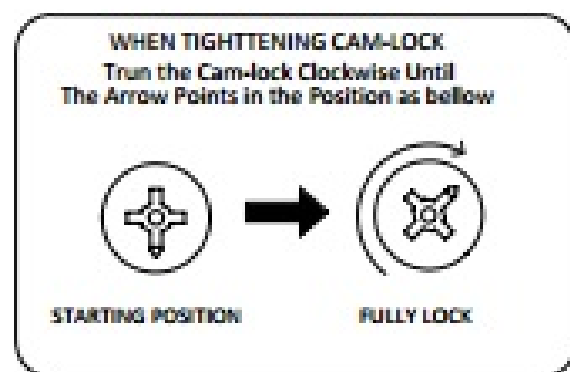

SPECIAL TIPS FOR DRAWER SLIDE ASSEMBLY

ORIGINAL POSITION

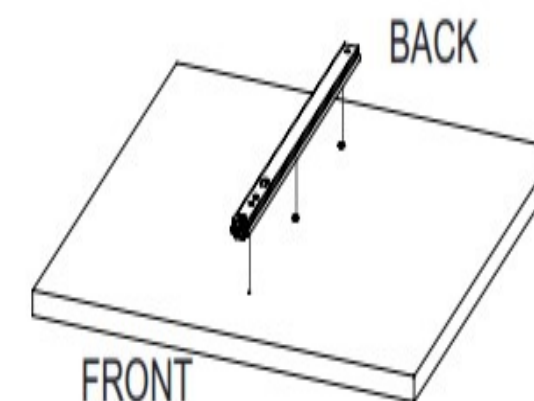

ASSEMBLY STEP 1


SLIDE FULLY BACKWARD



PLEASE USE THE SIXTH HOLE FROM BACK


BACK

PLEASE USE THE THIRD HOLE FROM BACK

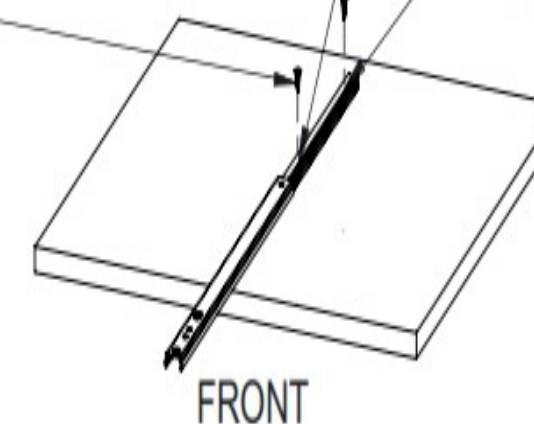


PREPARATION


Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 60 minutes.

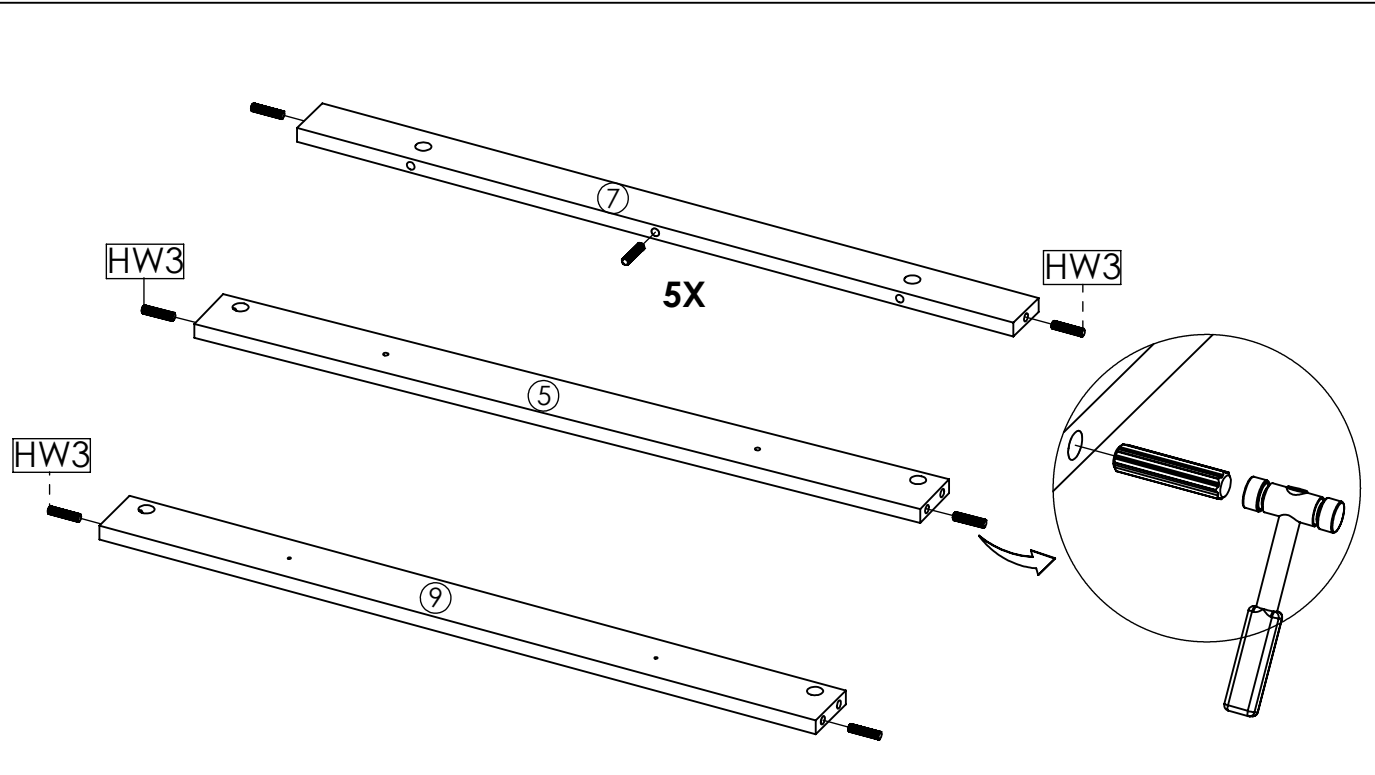


STEP1: Insert wooden dowel (HW3) into upper apron (5), plint support (7) and lower apron (9).

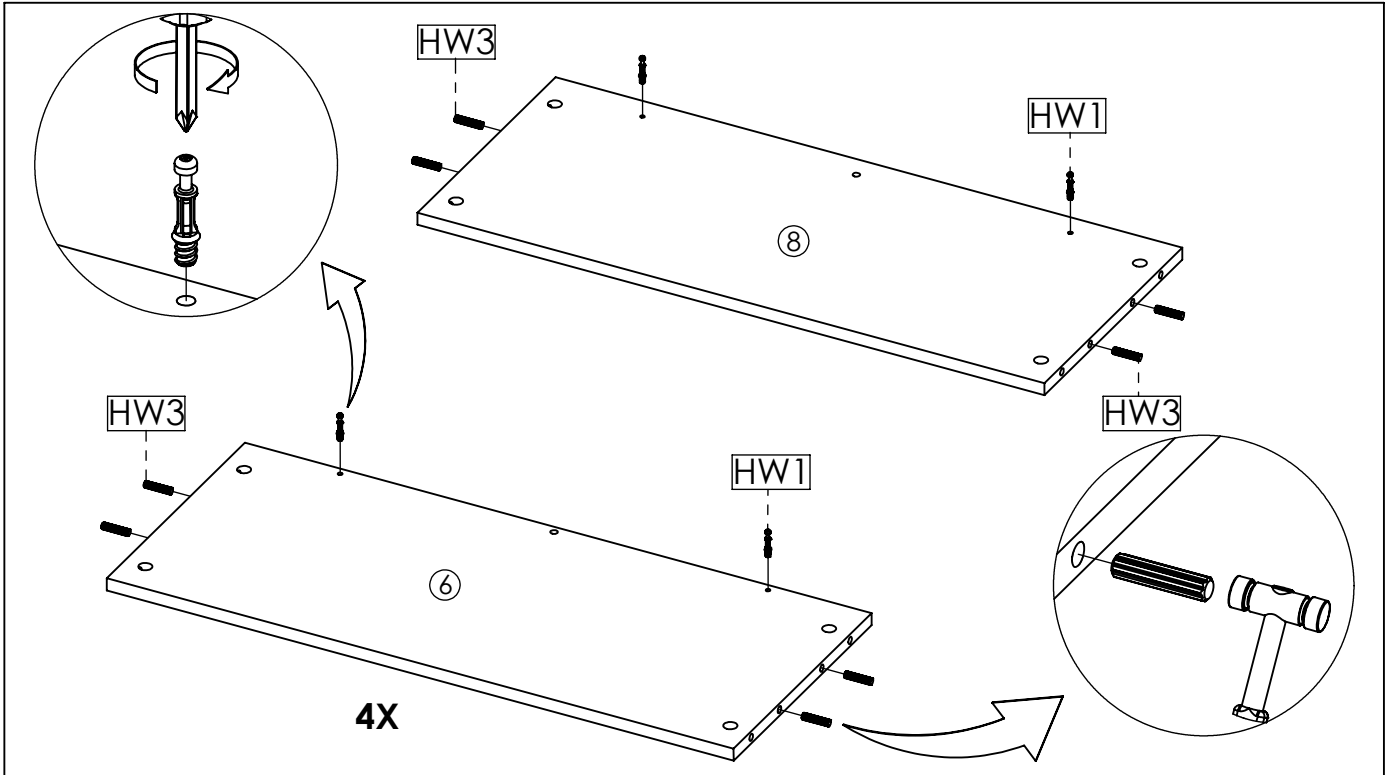





STEP2: Insert wooden dowel (HW3) and cambolt (HW1) into fixed shelf - upper (6) and fixed shelf - lower (8) tighten it using screwdriver.




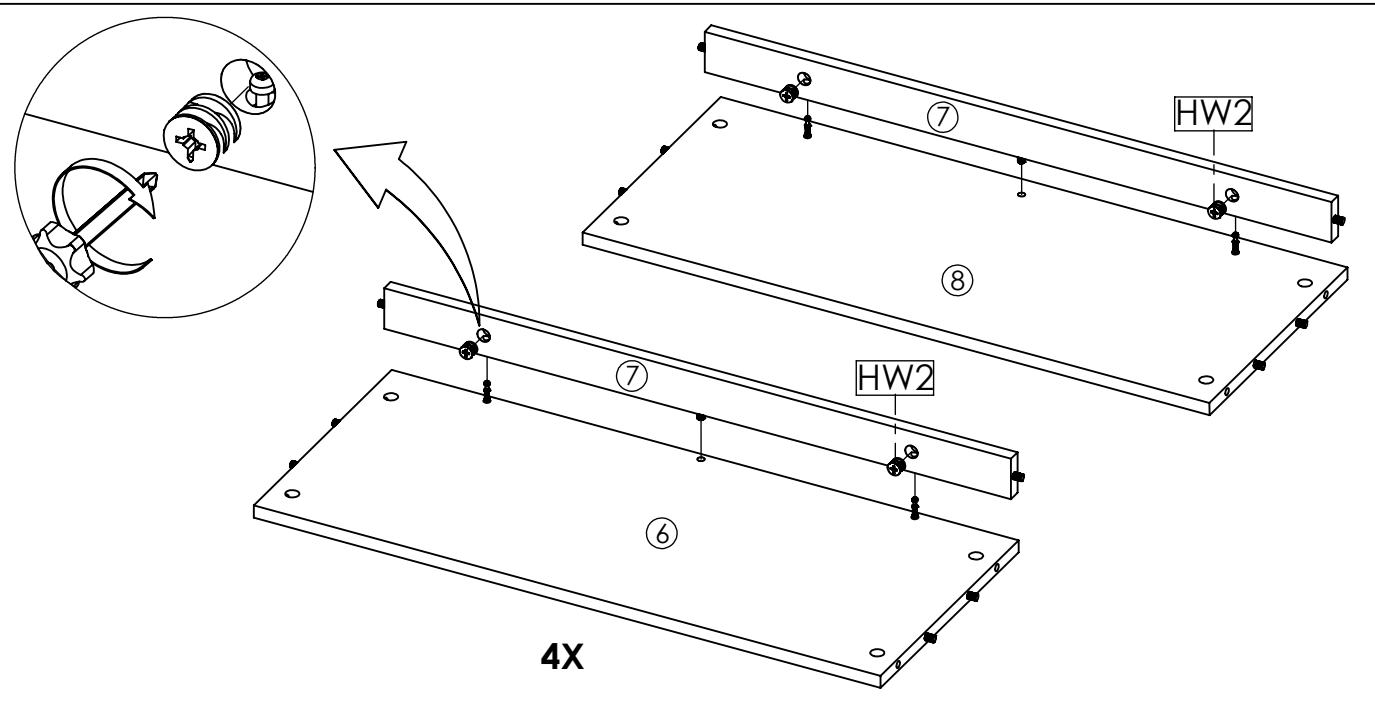






STEP3: Insert plint support (7) into fixed shelf - upper (6) Secure with camlock (HW2) tighten it using screwdriver.
Insert plint support (7) into fixed shelf - lower (8) Secure with camlock (HW2) tighten it using screwdriver.

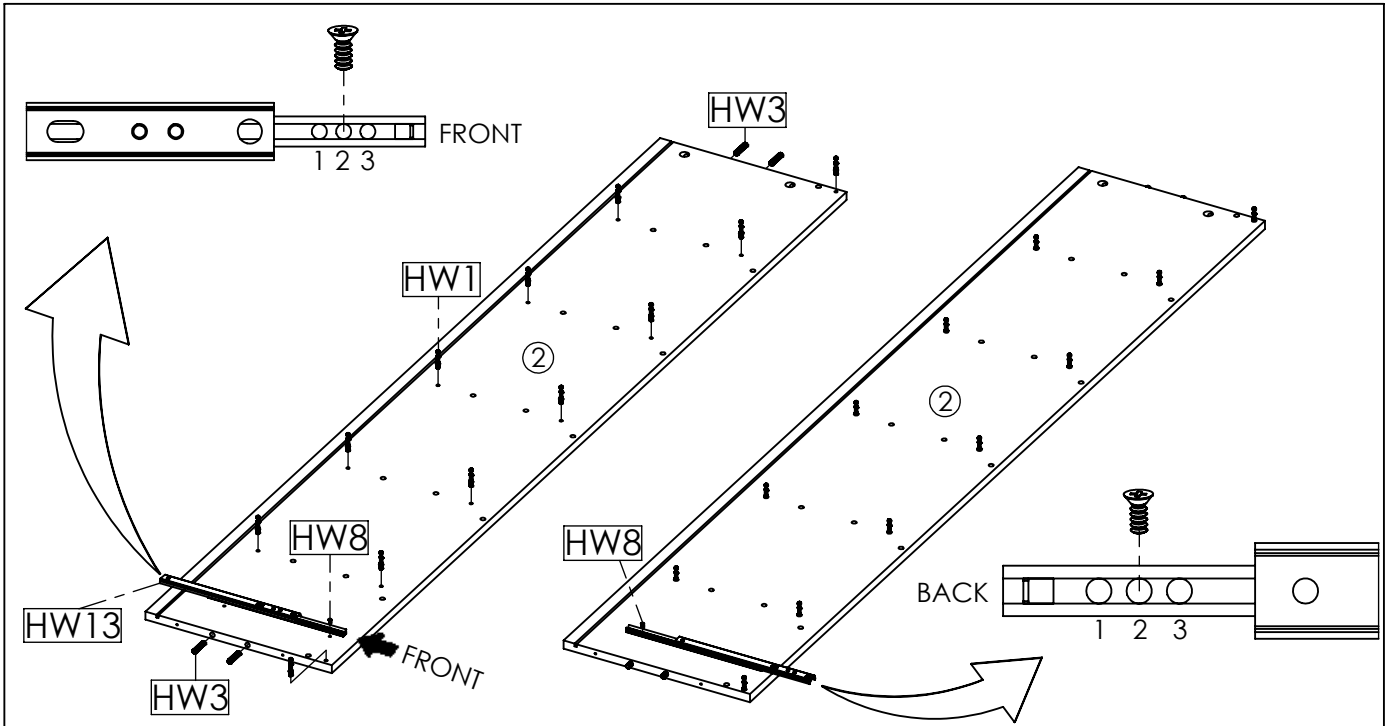


STEP4: Install the mini slide runner (HW13), into position as shown in picture, Secure with screws M5x8,5mm (HW8). Continue insert wooden dowel (HW3) And cambolt (HW1) Into side panel - right (2), Tighten it using screwdriver.

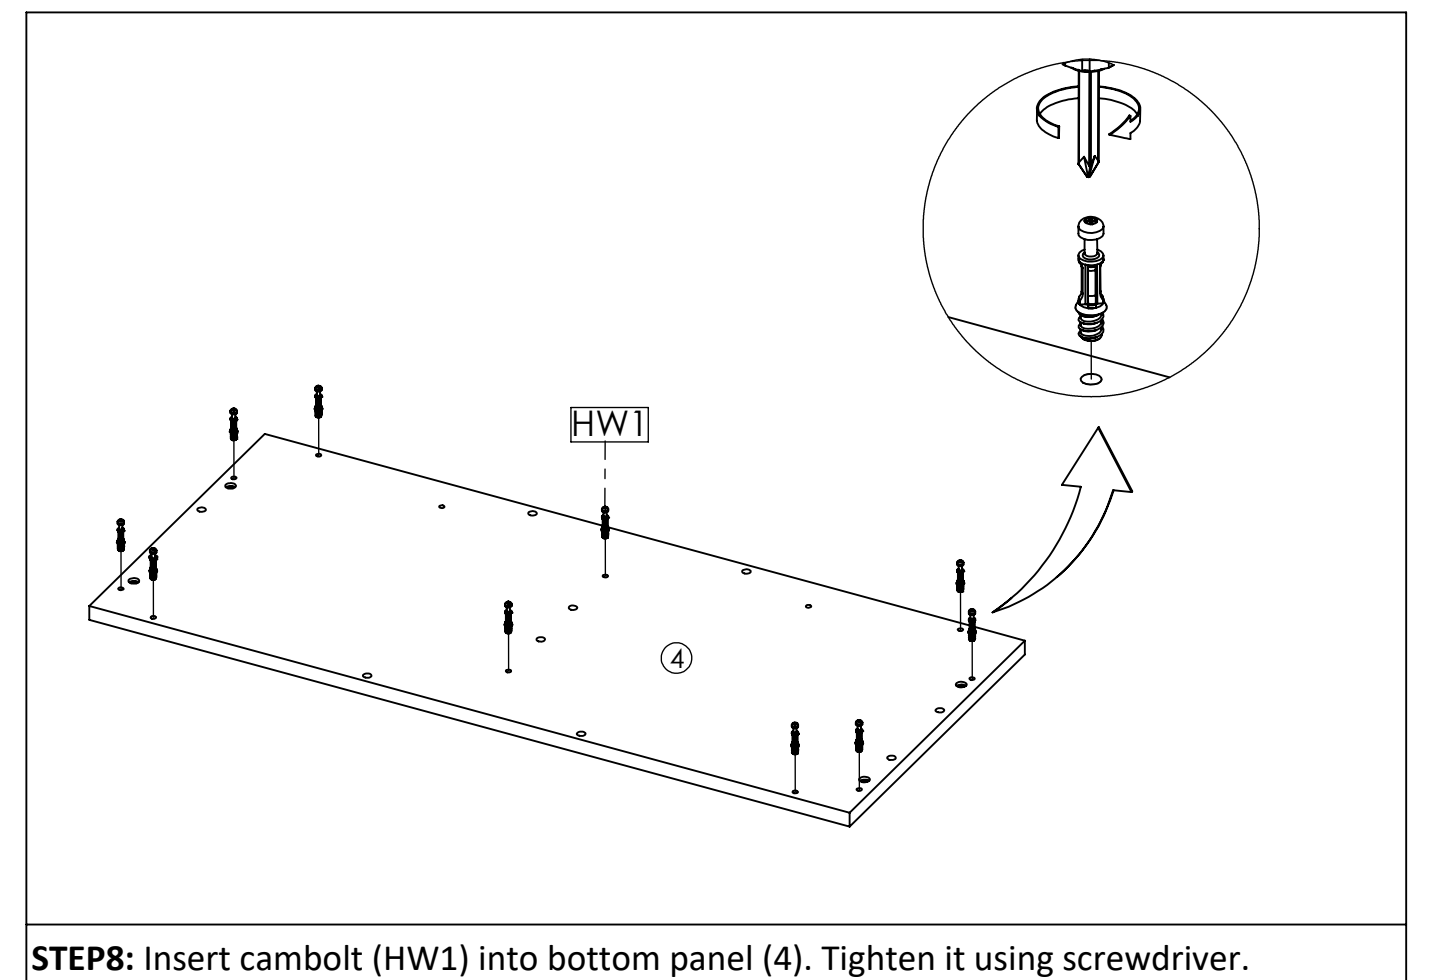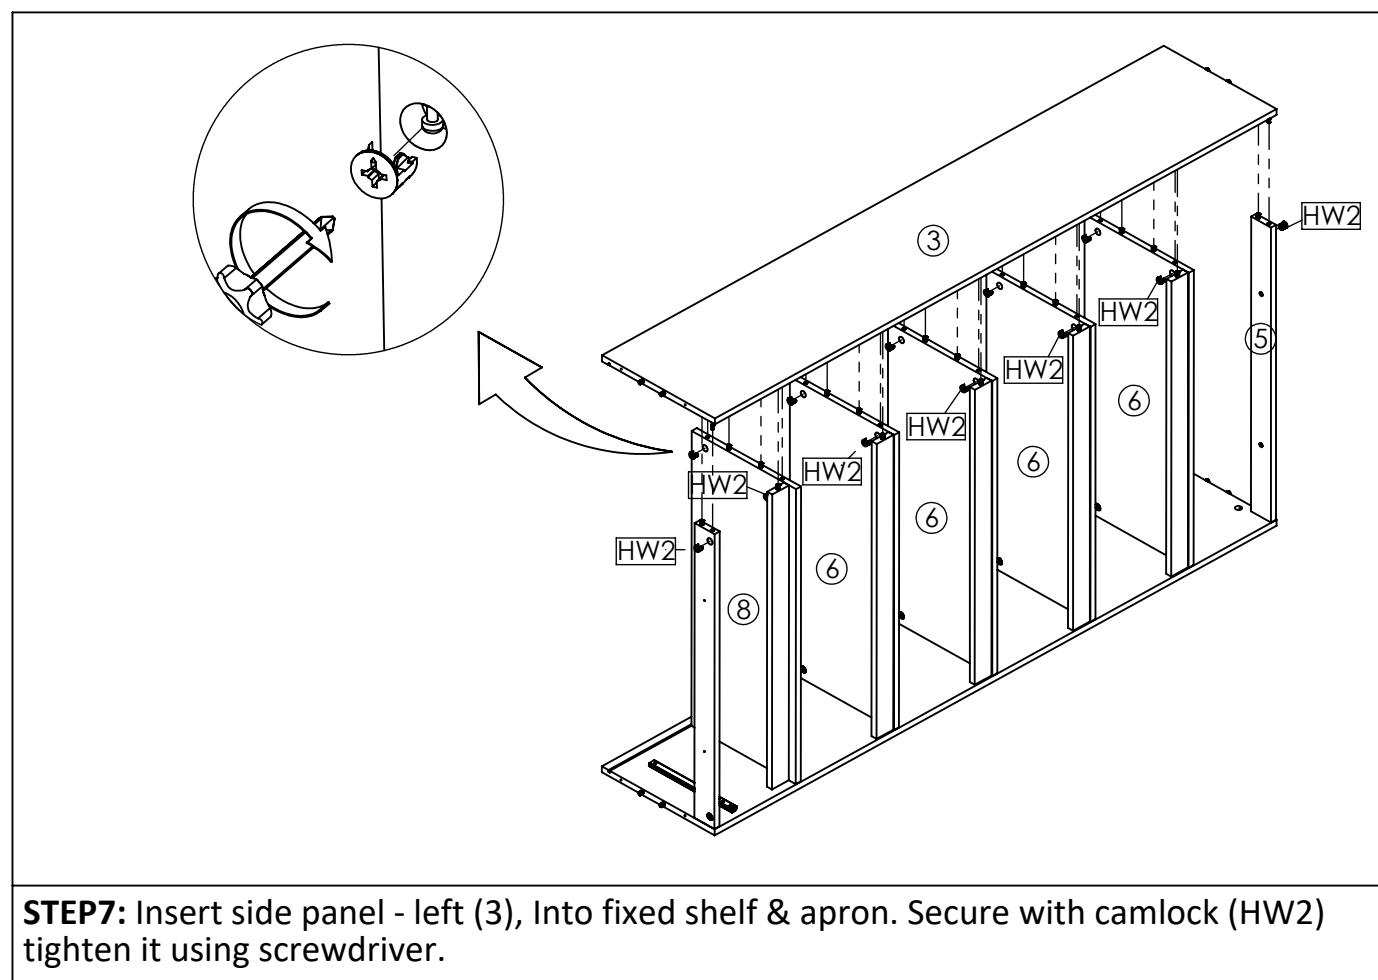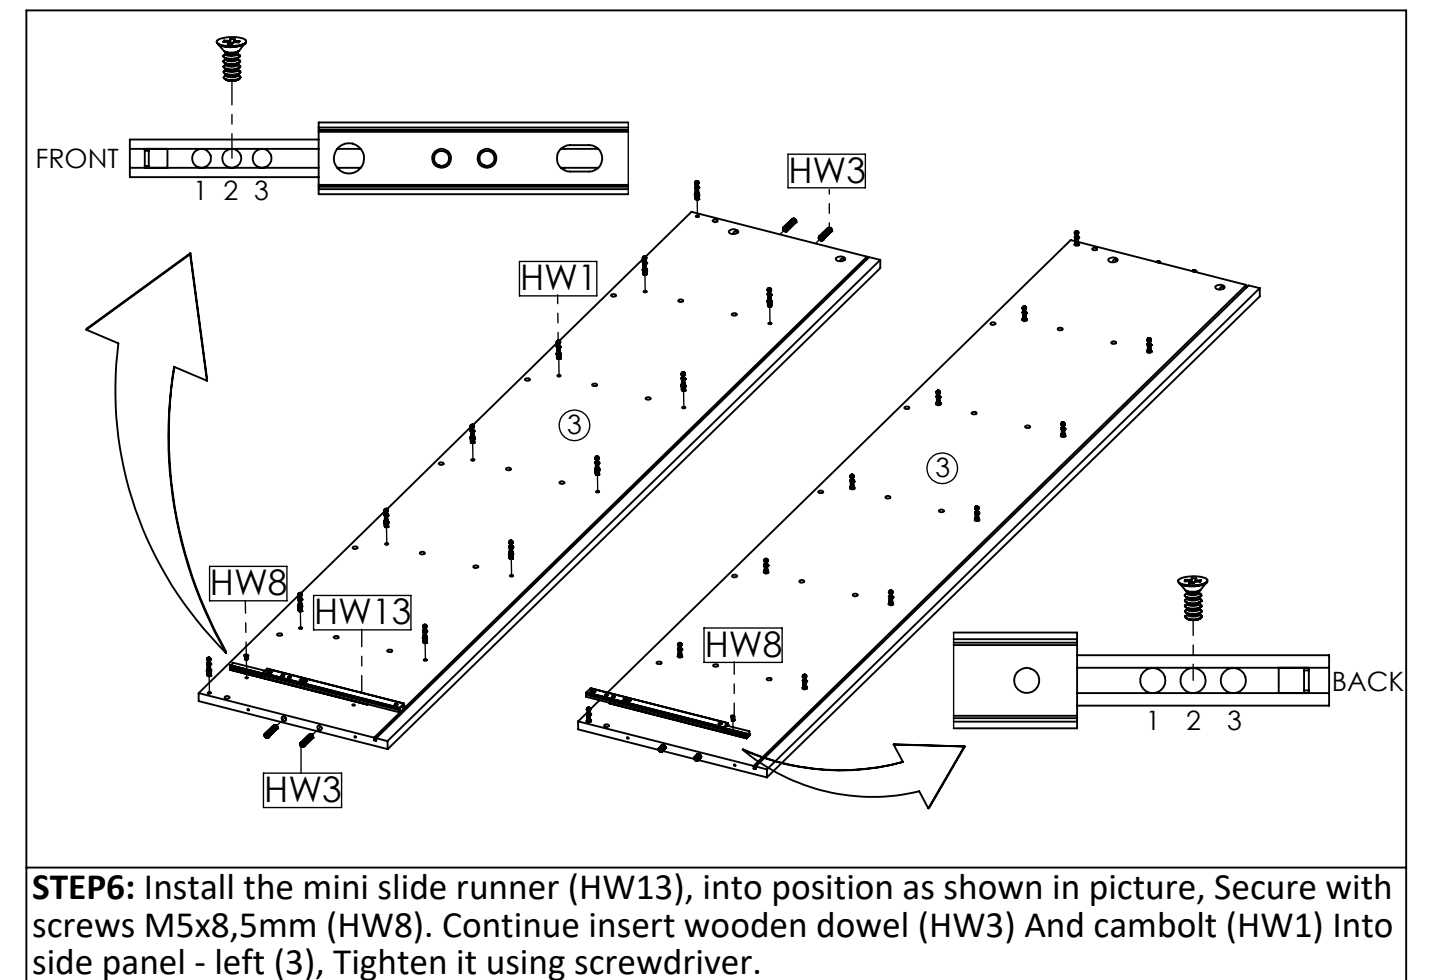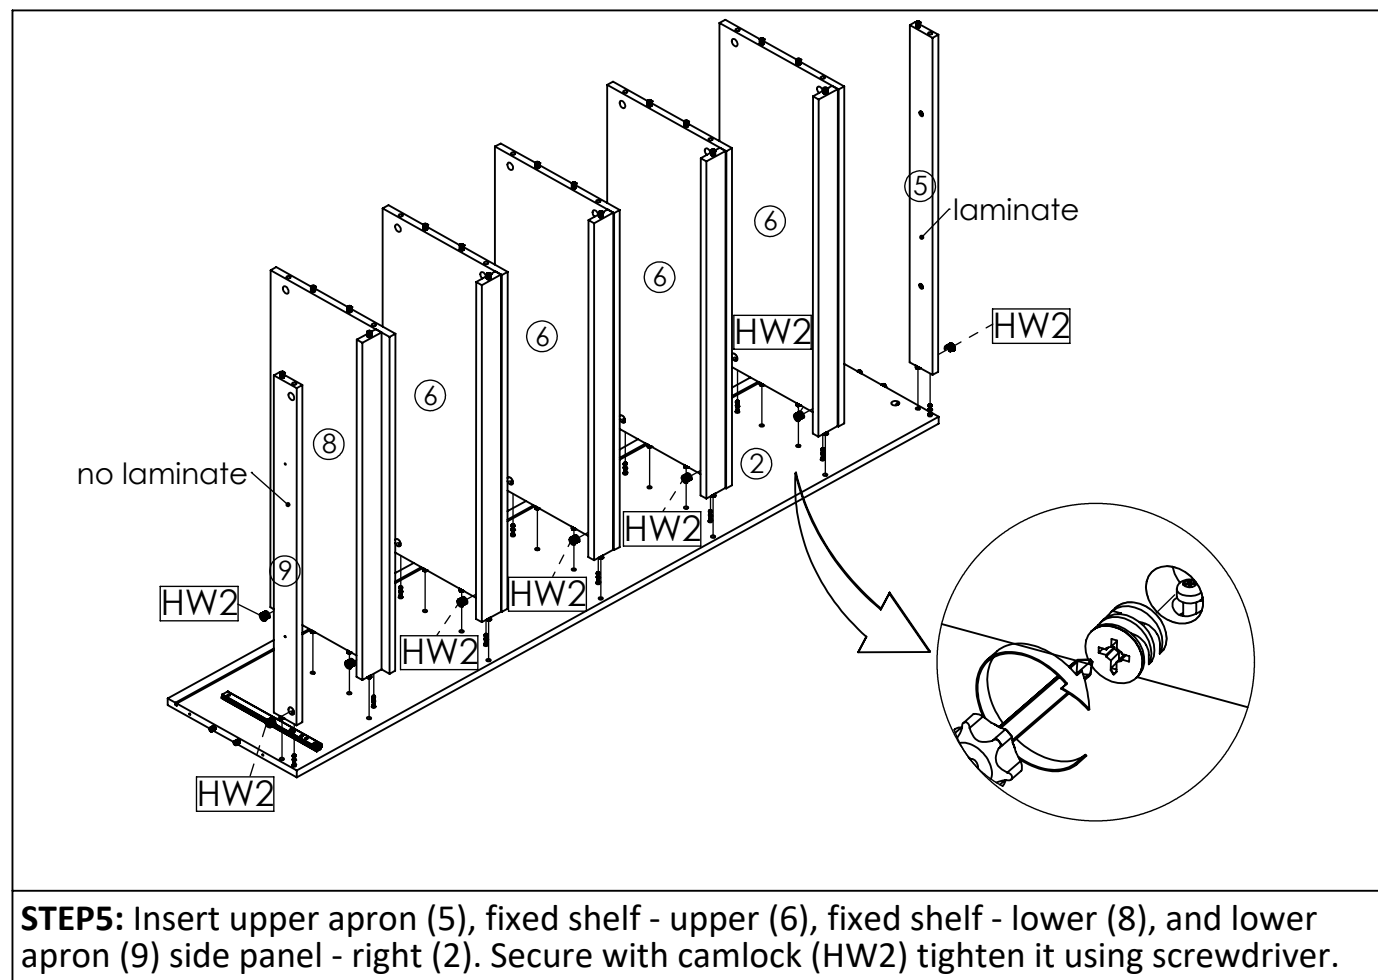


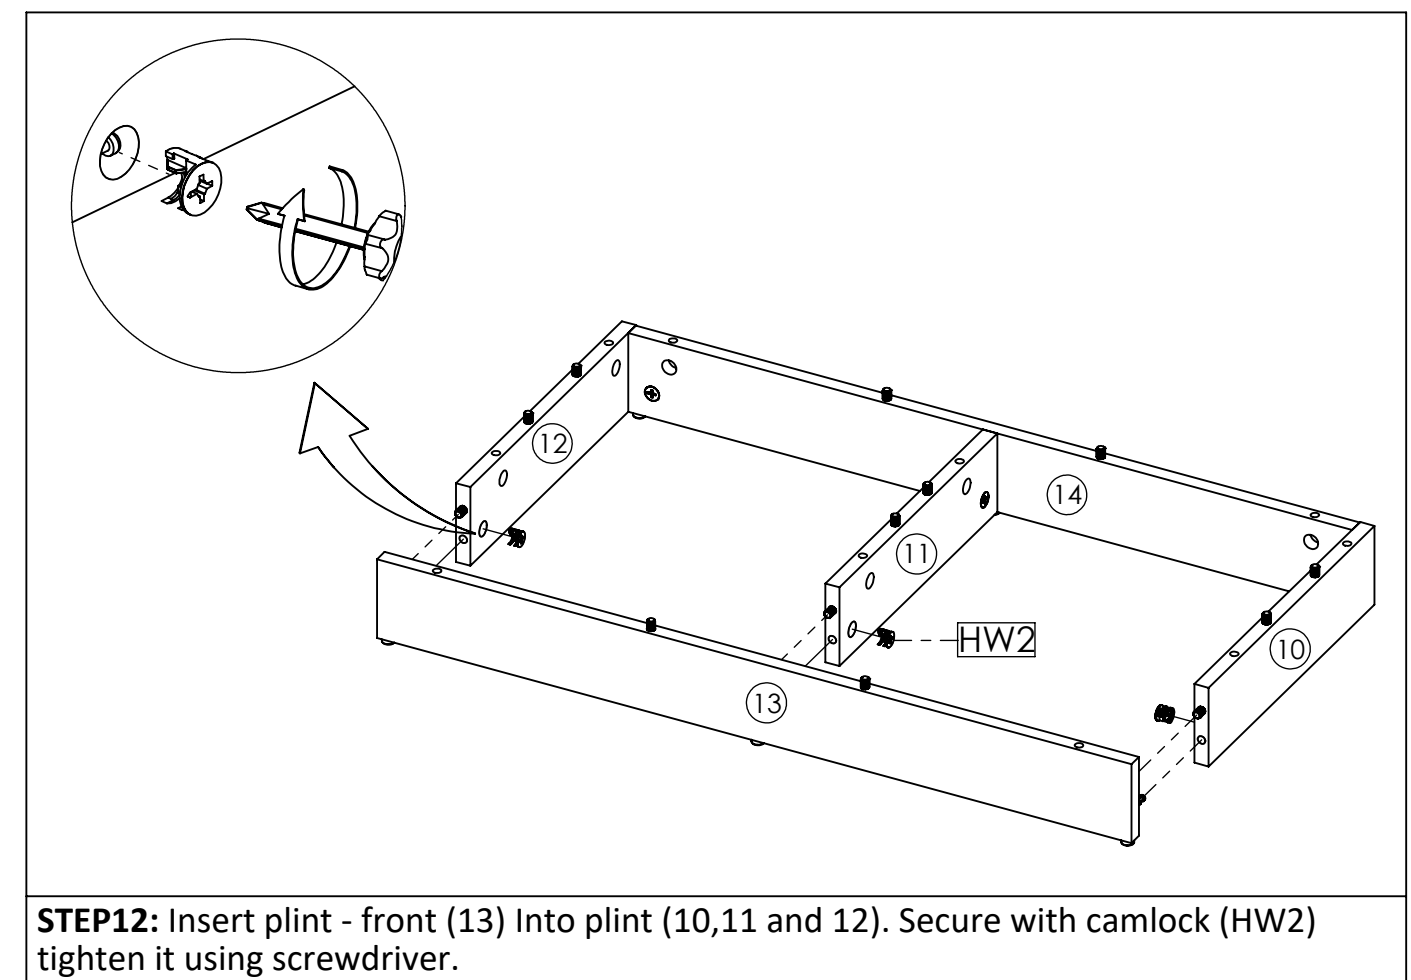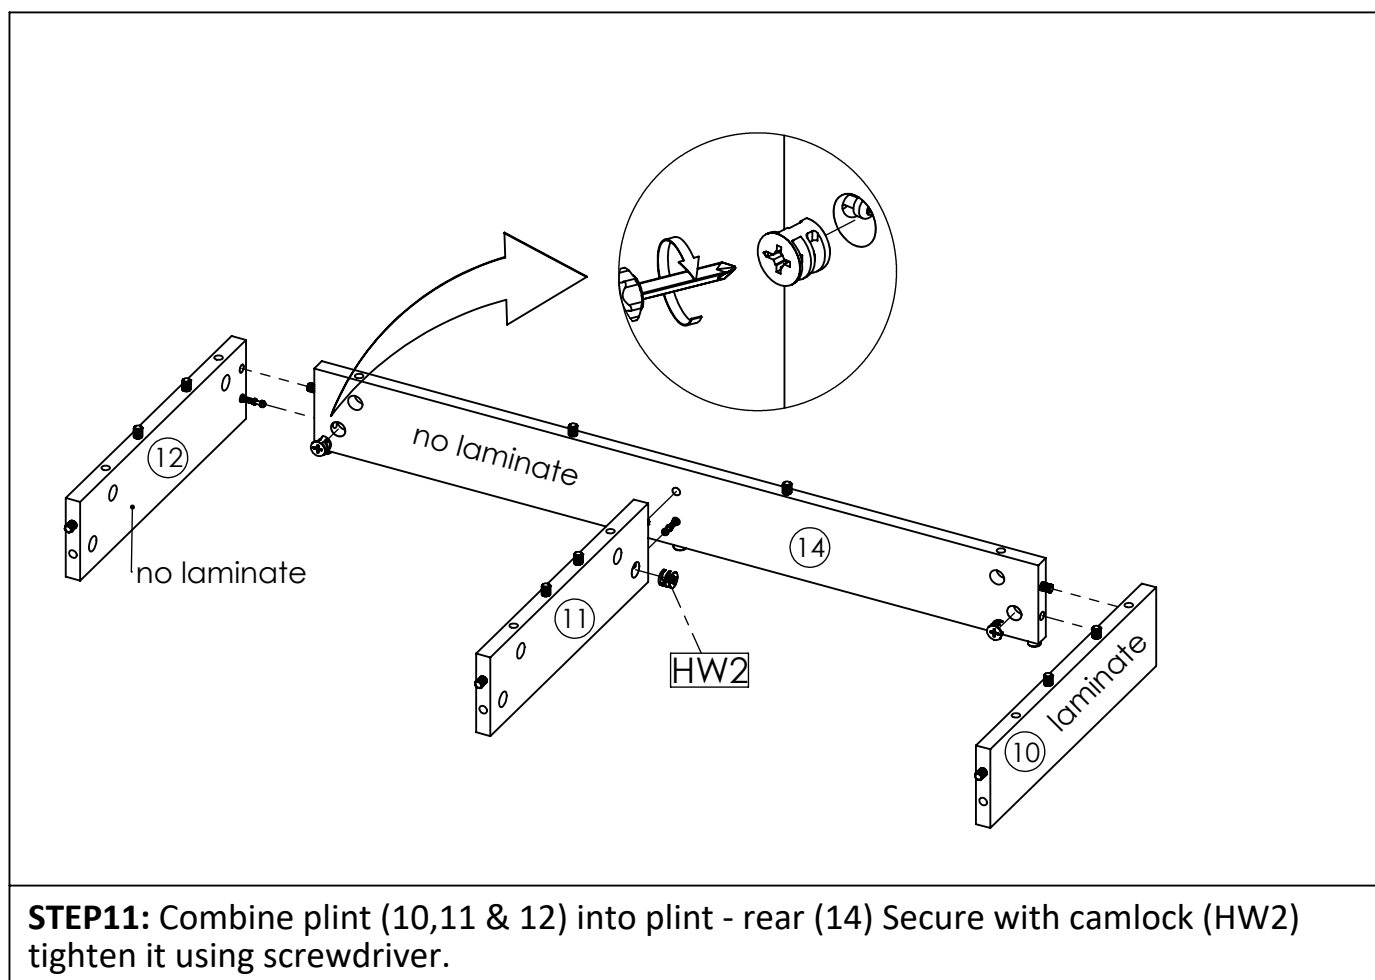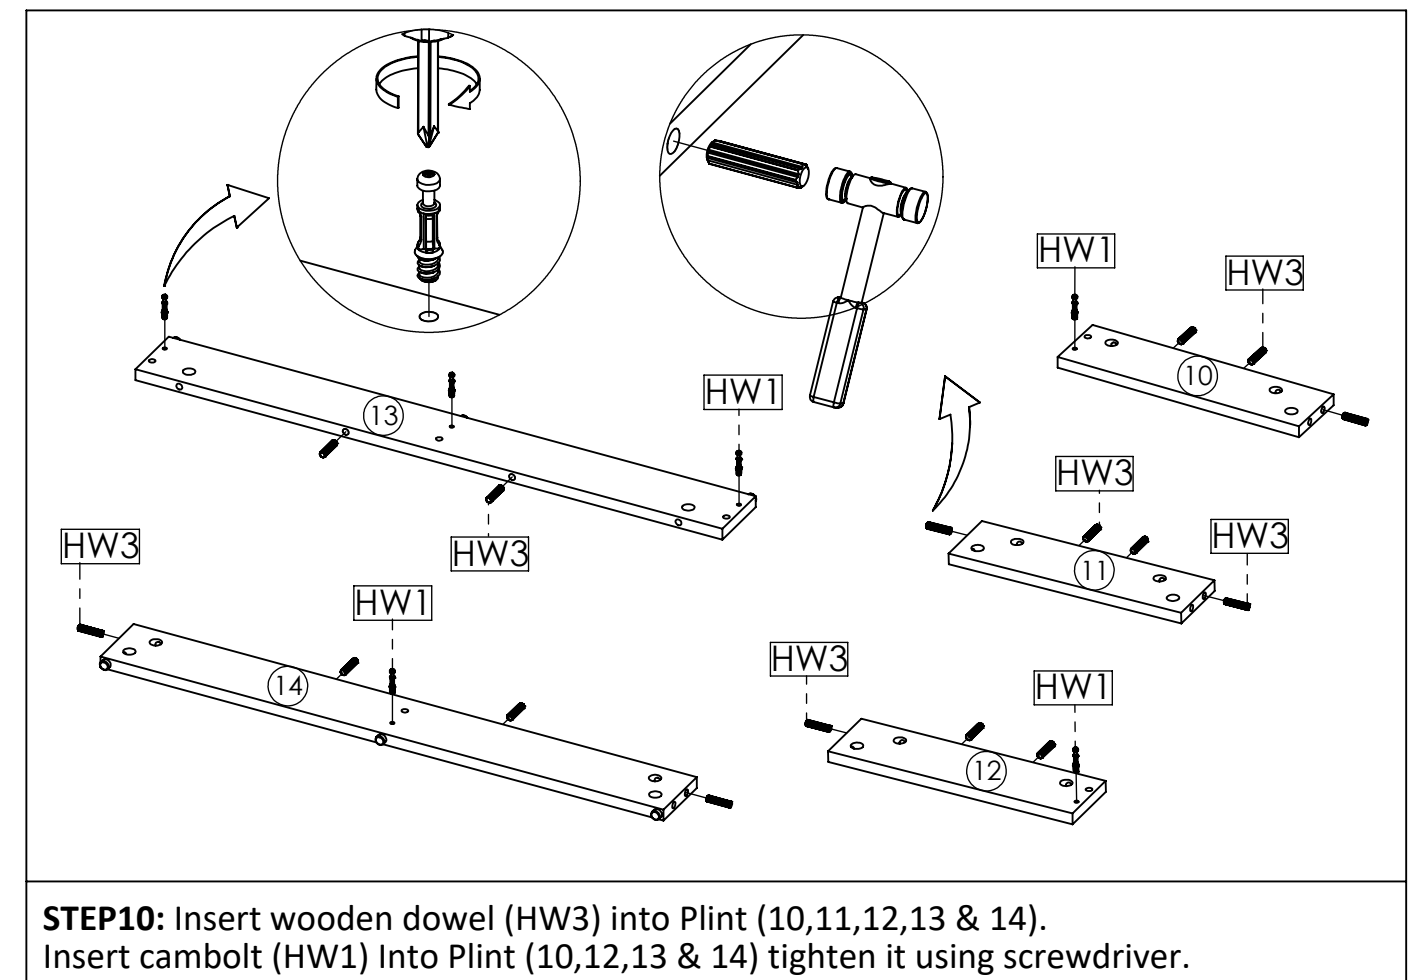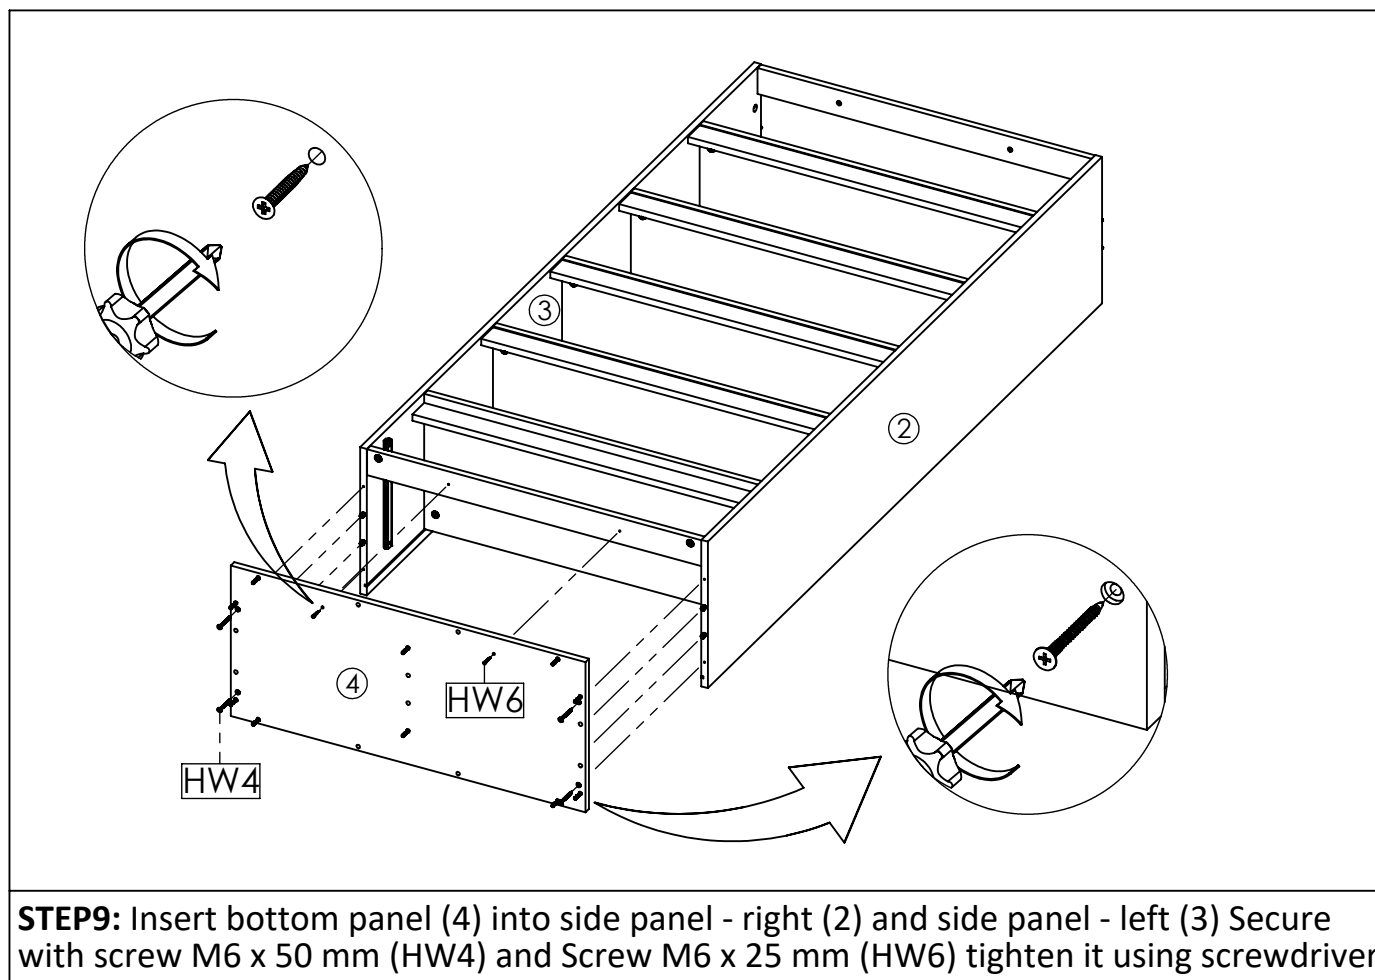

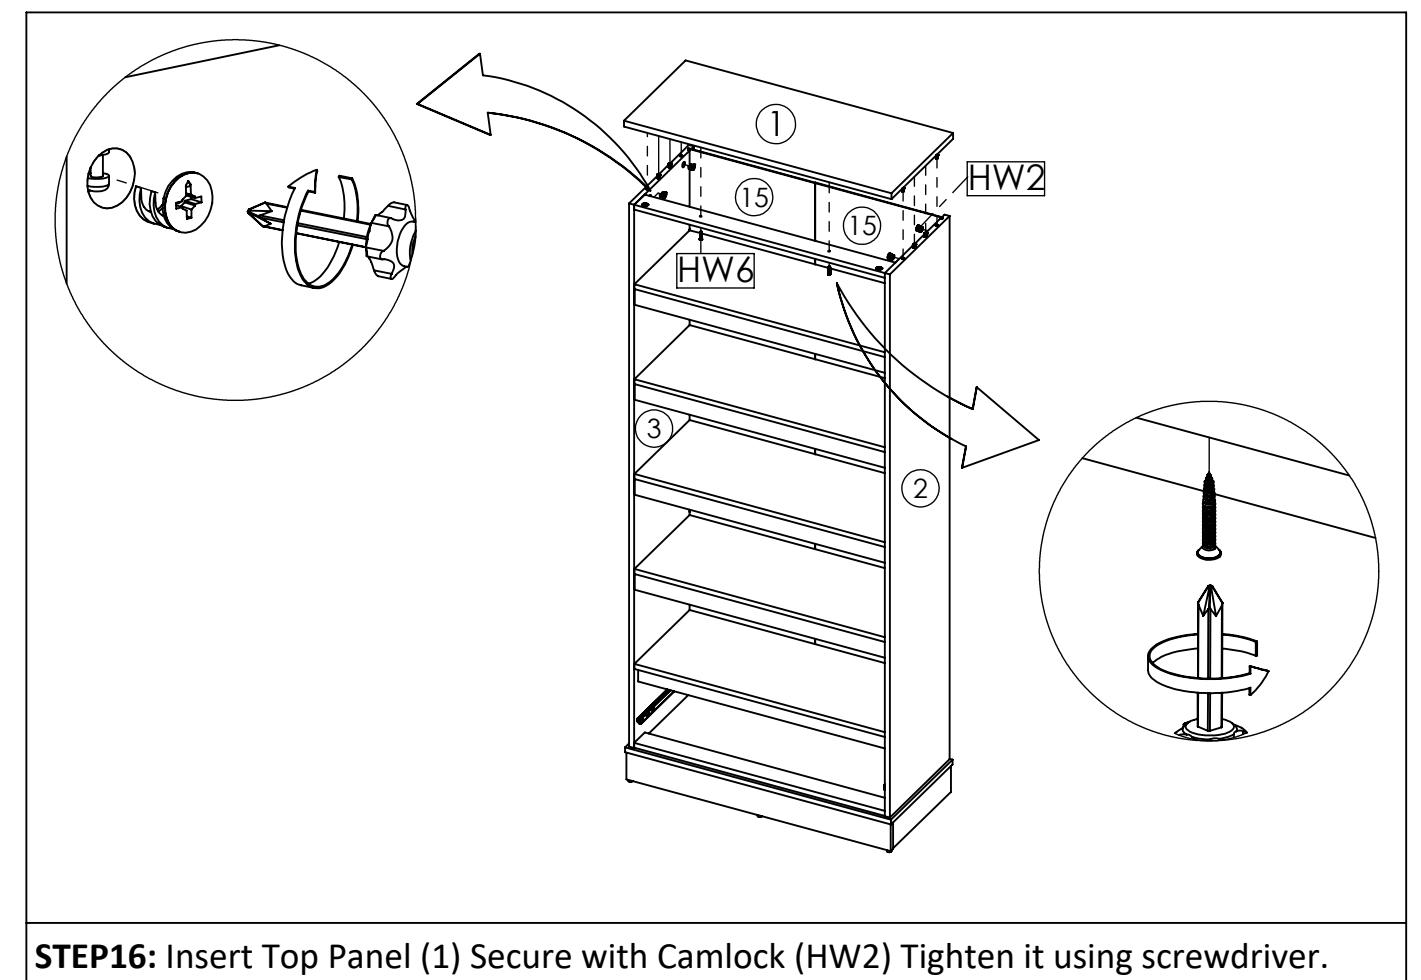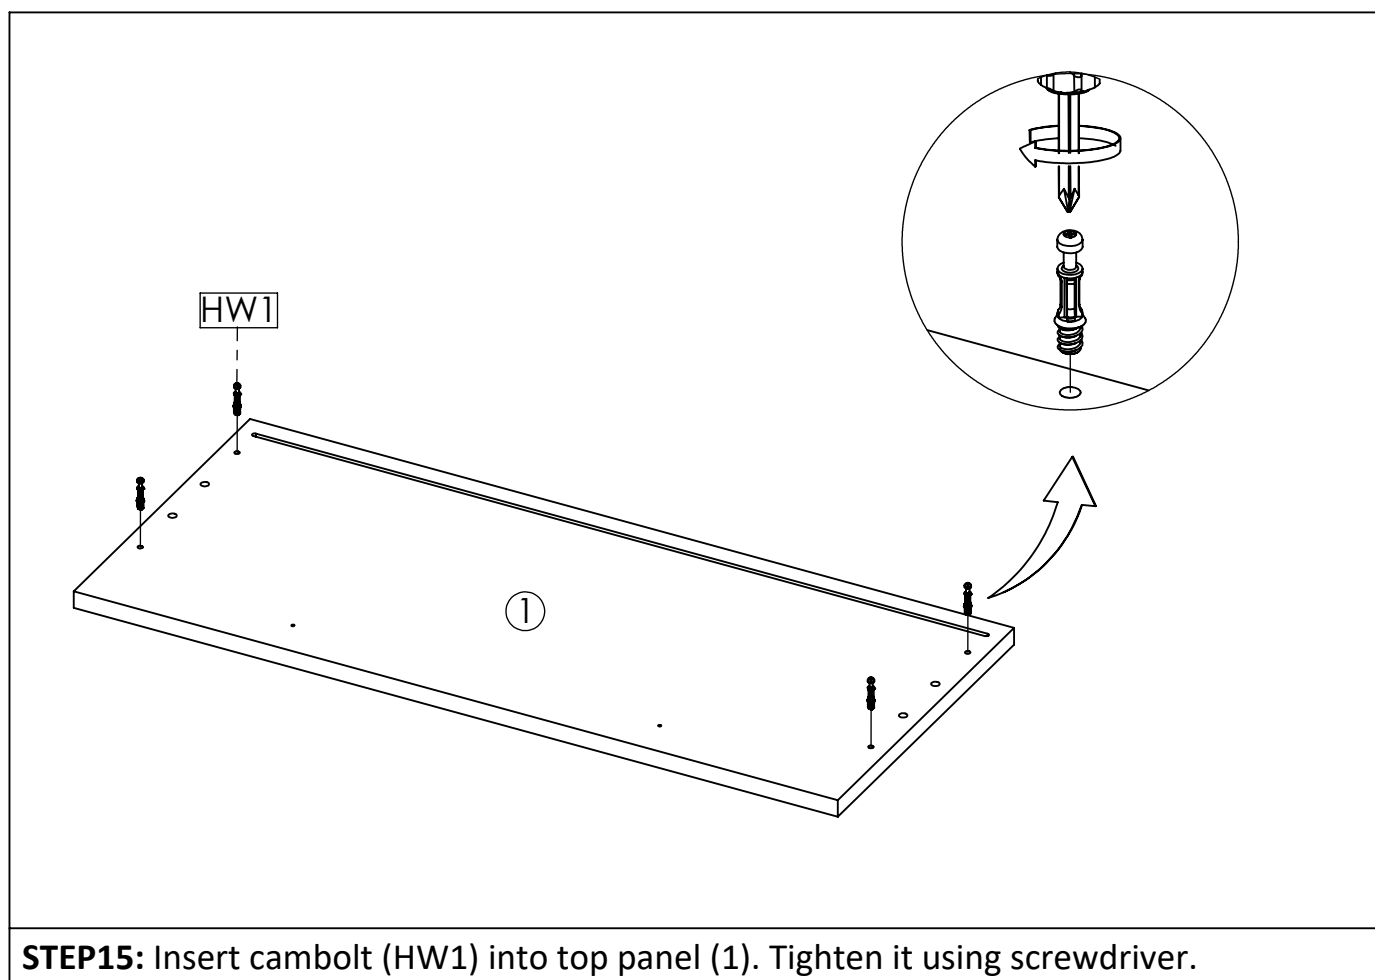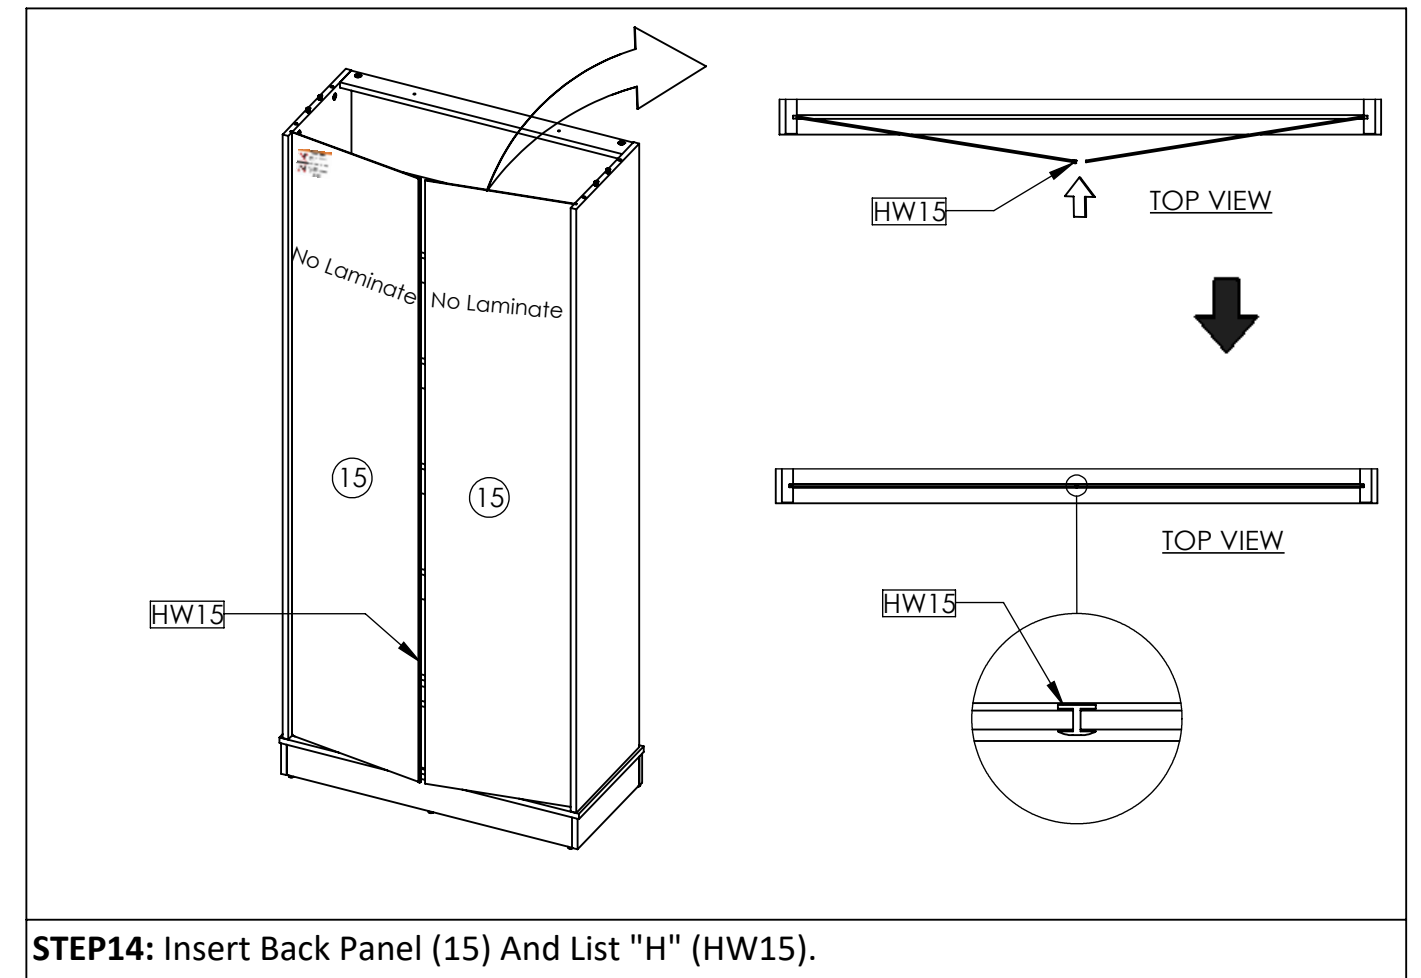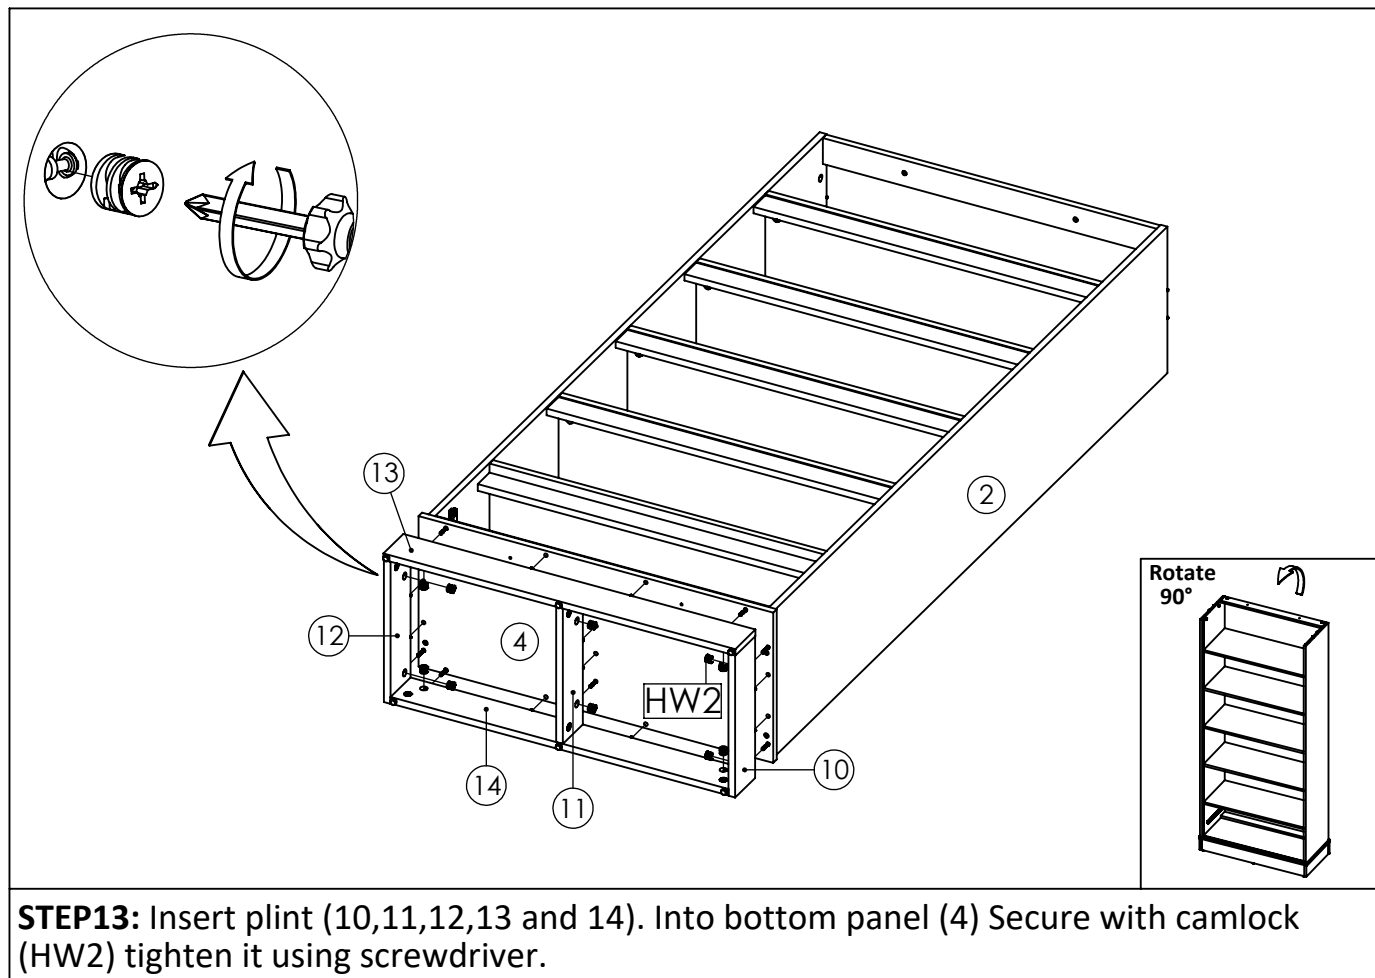


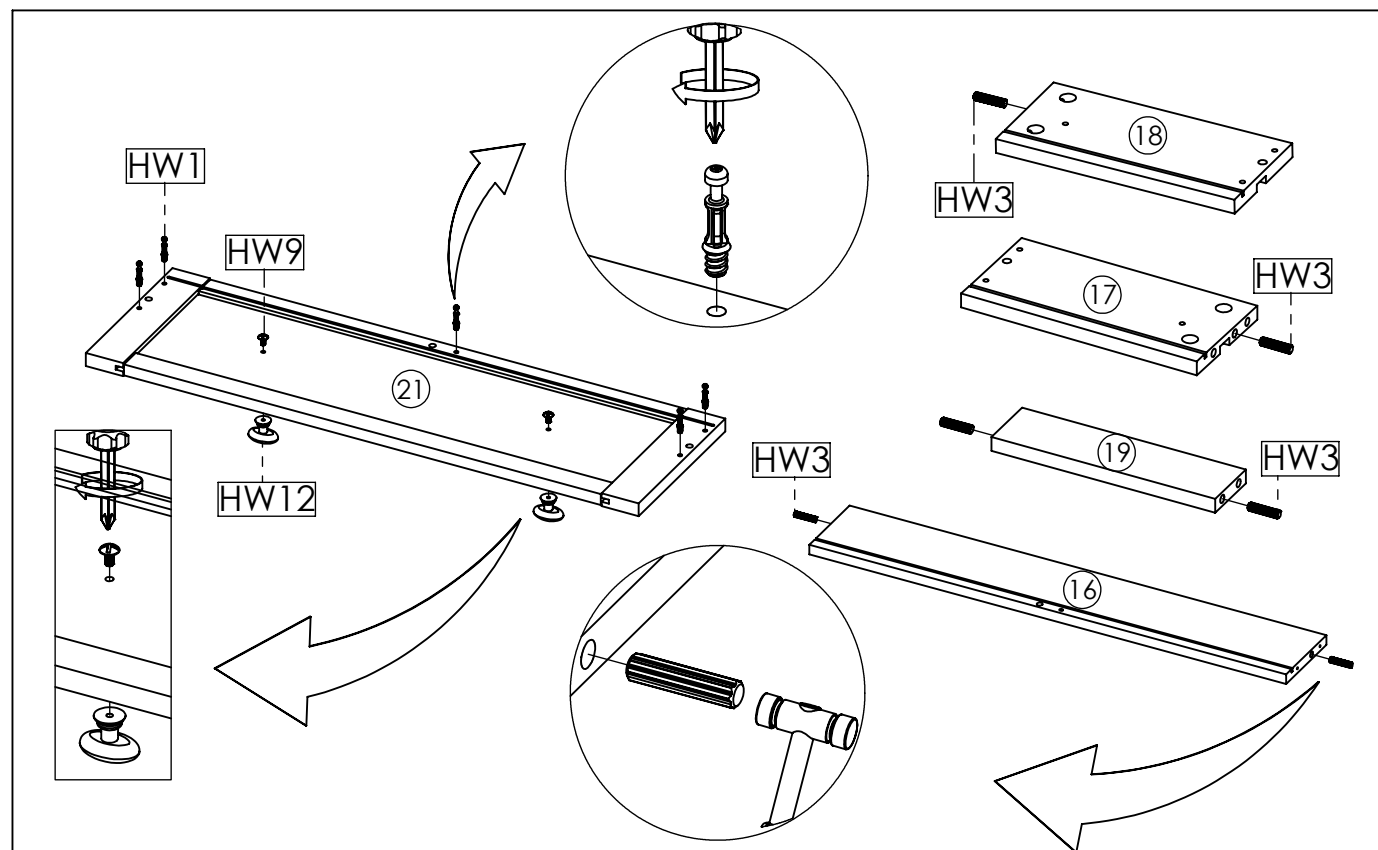


STEP17: Insert Cambolt (HW1) and handle HW (12) scure with Screw Panhead (HW9) into front drawer (21) Tighten it using screwdriver. Continue Insert wooden dowel (HW3) into drawer side - right (17), drawer side - left (18), drawer back (16) and drawer base support (19).

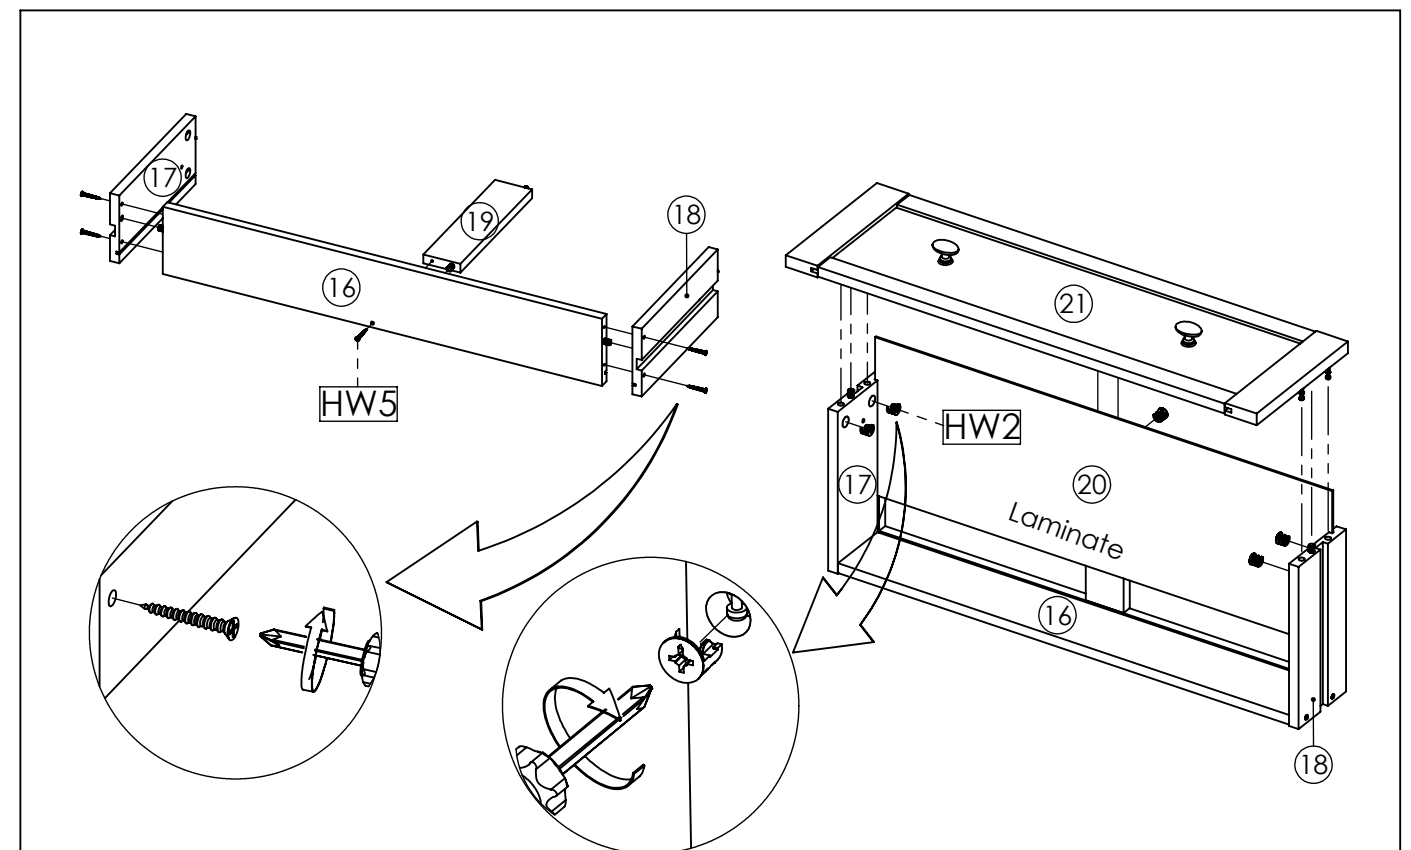


STEP18: Combine drawers side (17 & 18), drawer base support (19). Into drawer back (16) secure with screw M7x32mm (HW5). Continue insert drawer base (20), Then put front drawer (21) then tighten camlock (HW2) It using screwdriver.

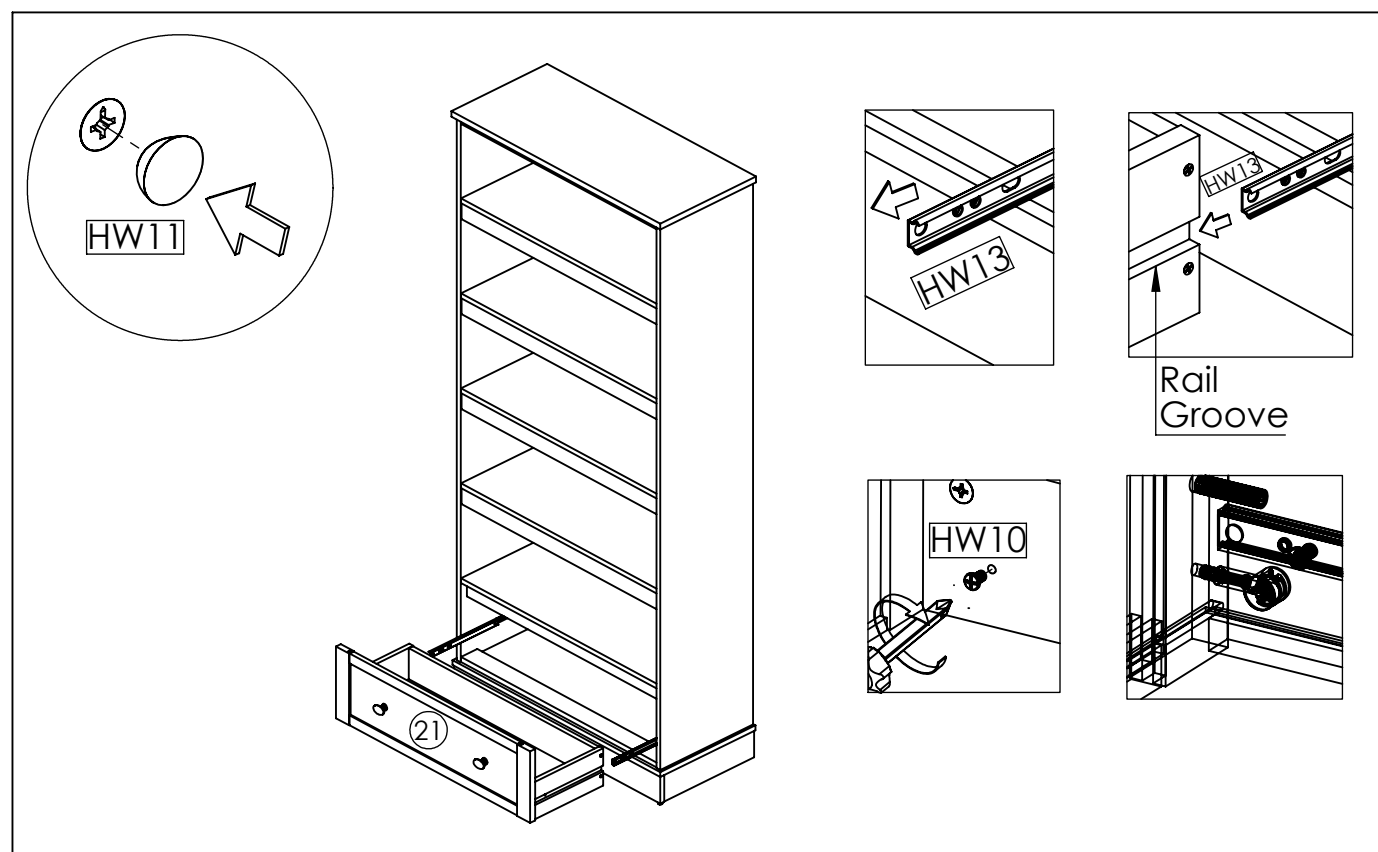

STEP19: Hold the sides of Drawer, Position the wheel of rail at Drawer Back, and the wheel of rail at side boards, According to the Image Slide in the Drawers into the bookcase. Attach Cover Cap Sticker (HW11) to the panel that has lamination.

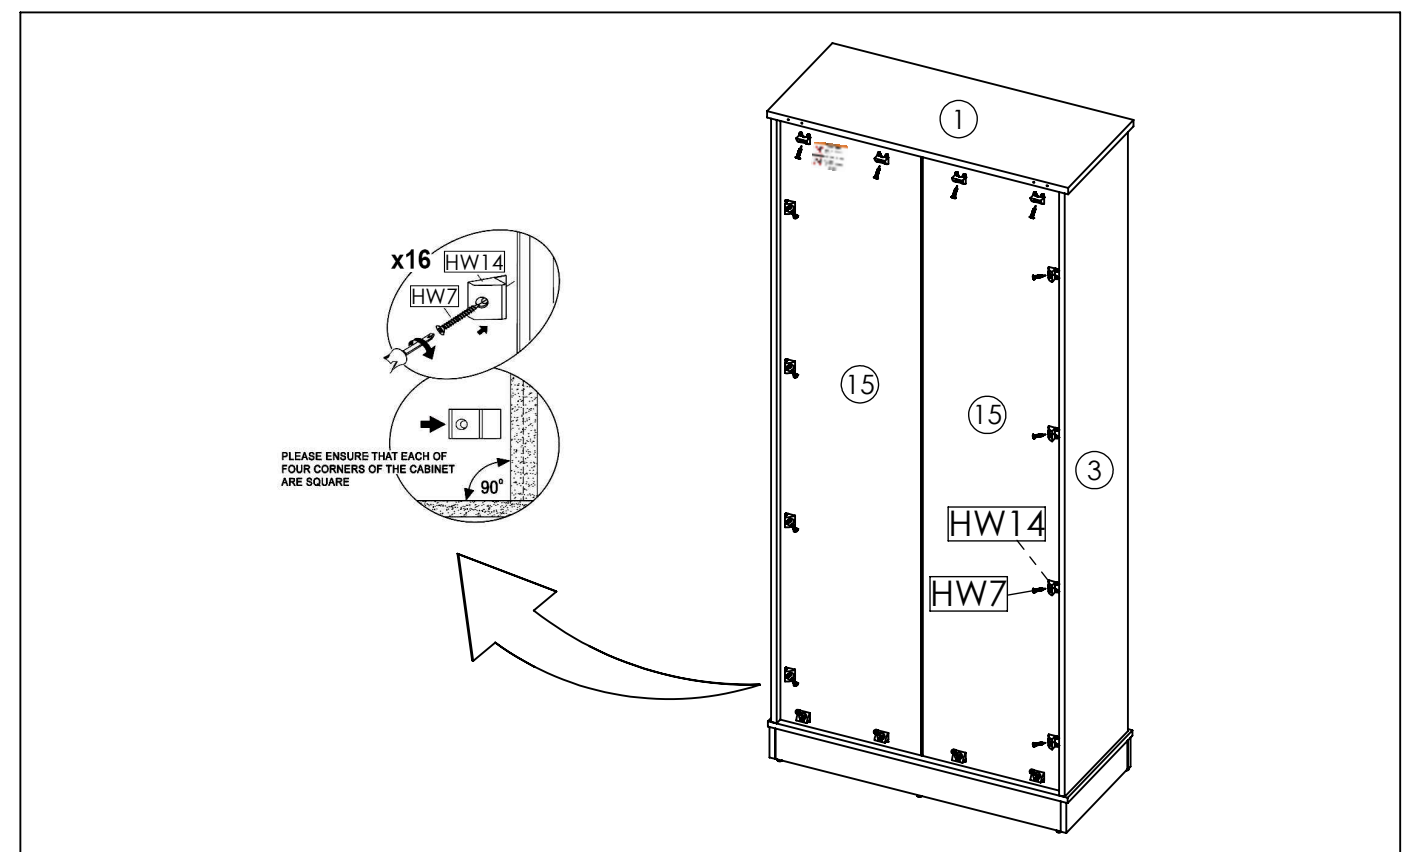

STEP20: Attach Plastic Stopper (HW14) Secure with Screw M4 x 19 mm (HW7) tighten it using screwdriver.

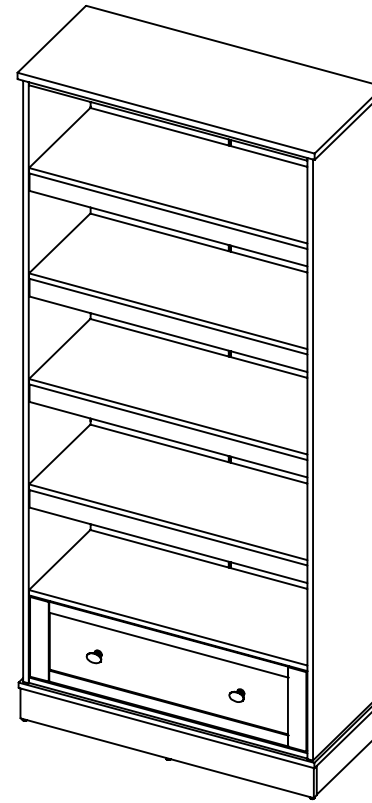

STEP21: Assembly is complete




ANTI-TIP RESTRAINT INSTALLATION


! WARNING!

Children have died from furniture tipover.
To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lower drawers.

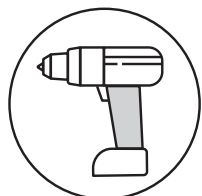


REQUIRED TOOL
8MM / 5/16" DRILL BIT

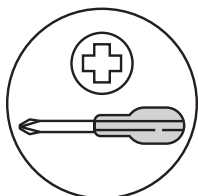

REQUIRED TOOL




Hardware (HW11 / HW7) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.

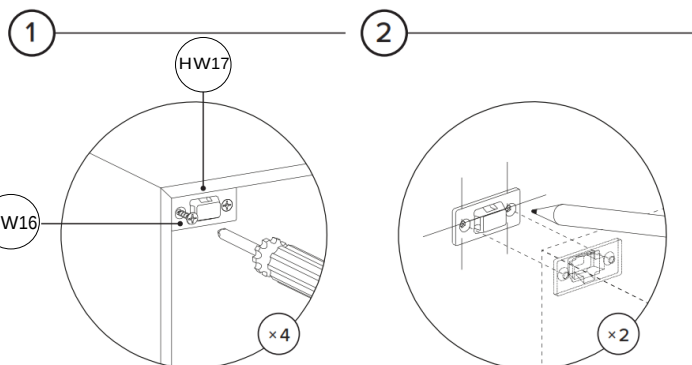


Attach pair of brackets to "Top Panel" of the unit. Note there are no existing pilot holes on the product.


Mark on wall where second pair of brackets should be placed.

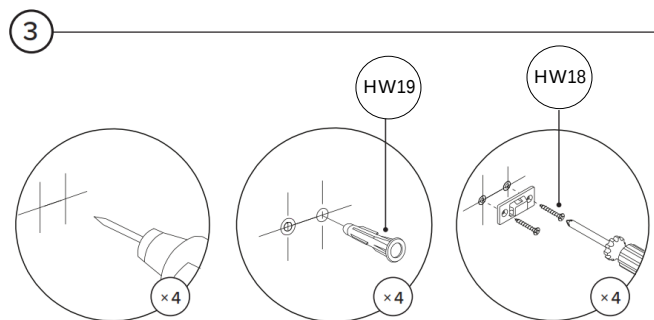

Drill holes in wall using 8mm / 5/16" drill bit.

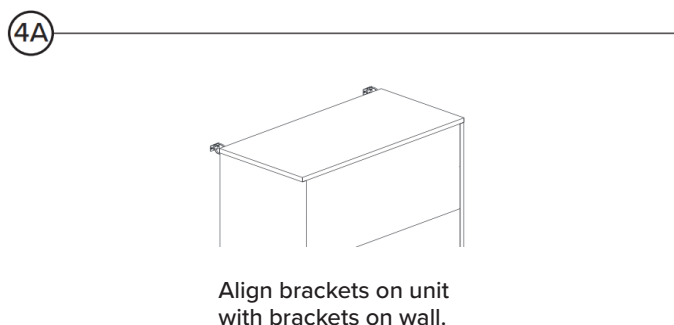

Align brackets on unit with brackets on wall.

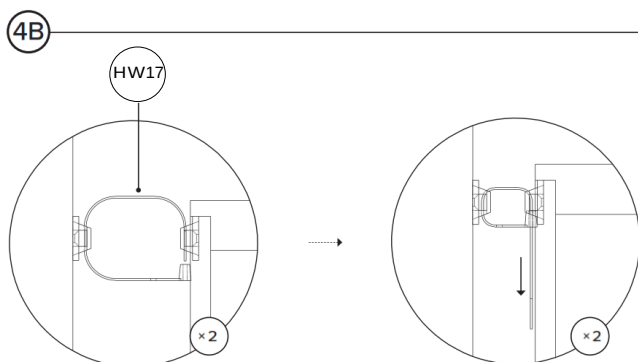

Pull strap down until it snap-locks.

ANTI-TIP RESTRAINT PACK			
ID	DESCRIPTION		QTY
HW17	BRACKET		4
HW16	M6 × 15MM SCREW		4
HW19	M8 × 35MM		4
HW18	M10 × 50MM SCREW		4
HW17	STRAP		2