



ASSEMBLY INSTRUCTIONS

Four-drawer filing cabinet AJ-DJ505424

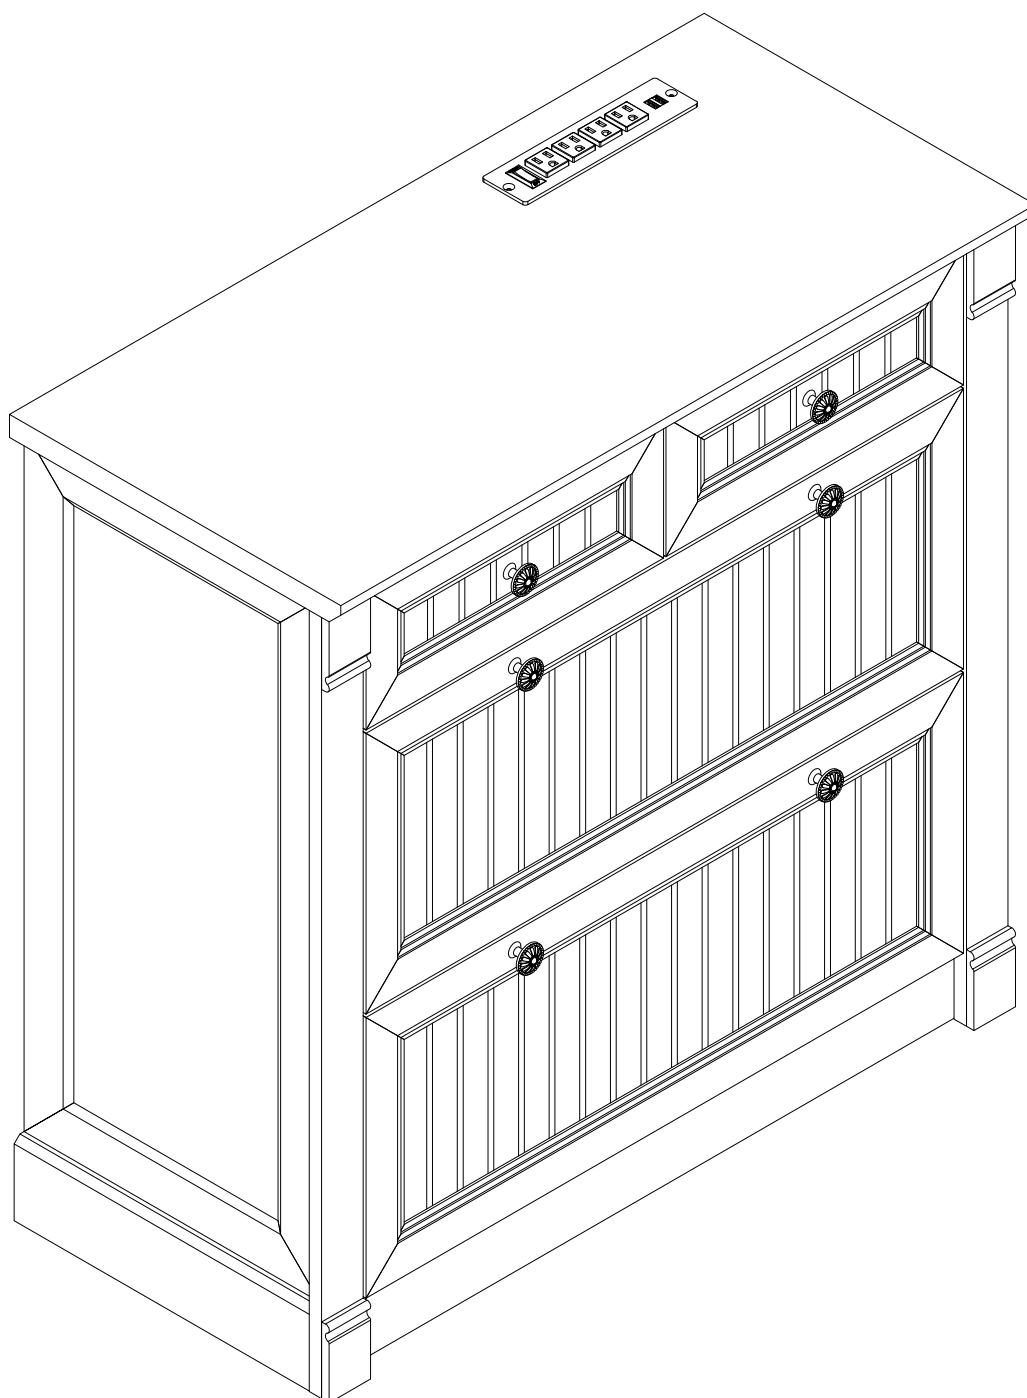


version: 1.0


ASSEMBLY INSTRUCTIONS

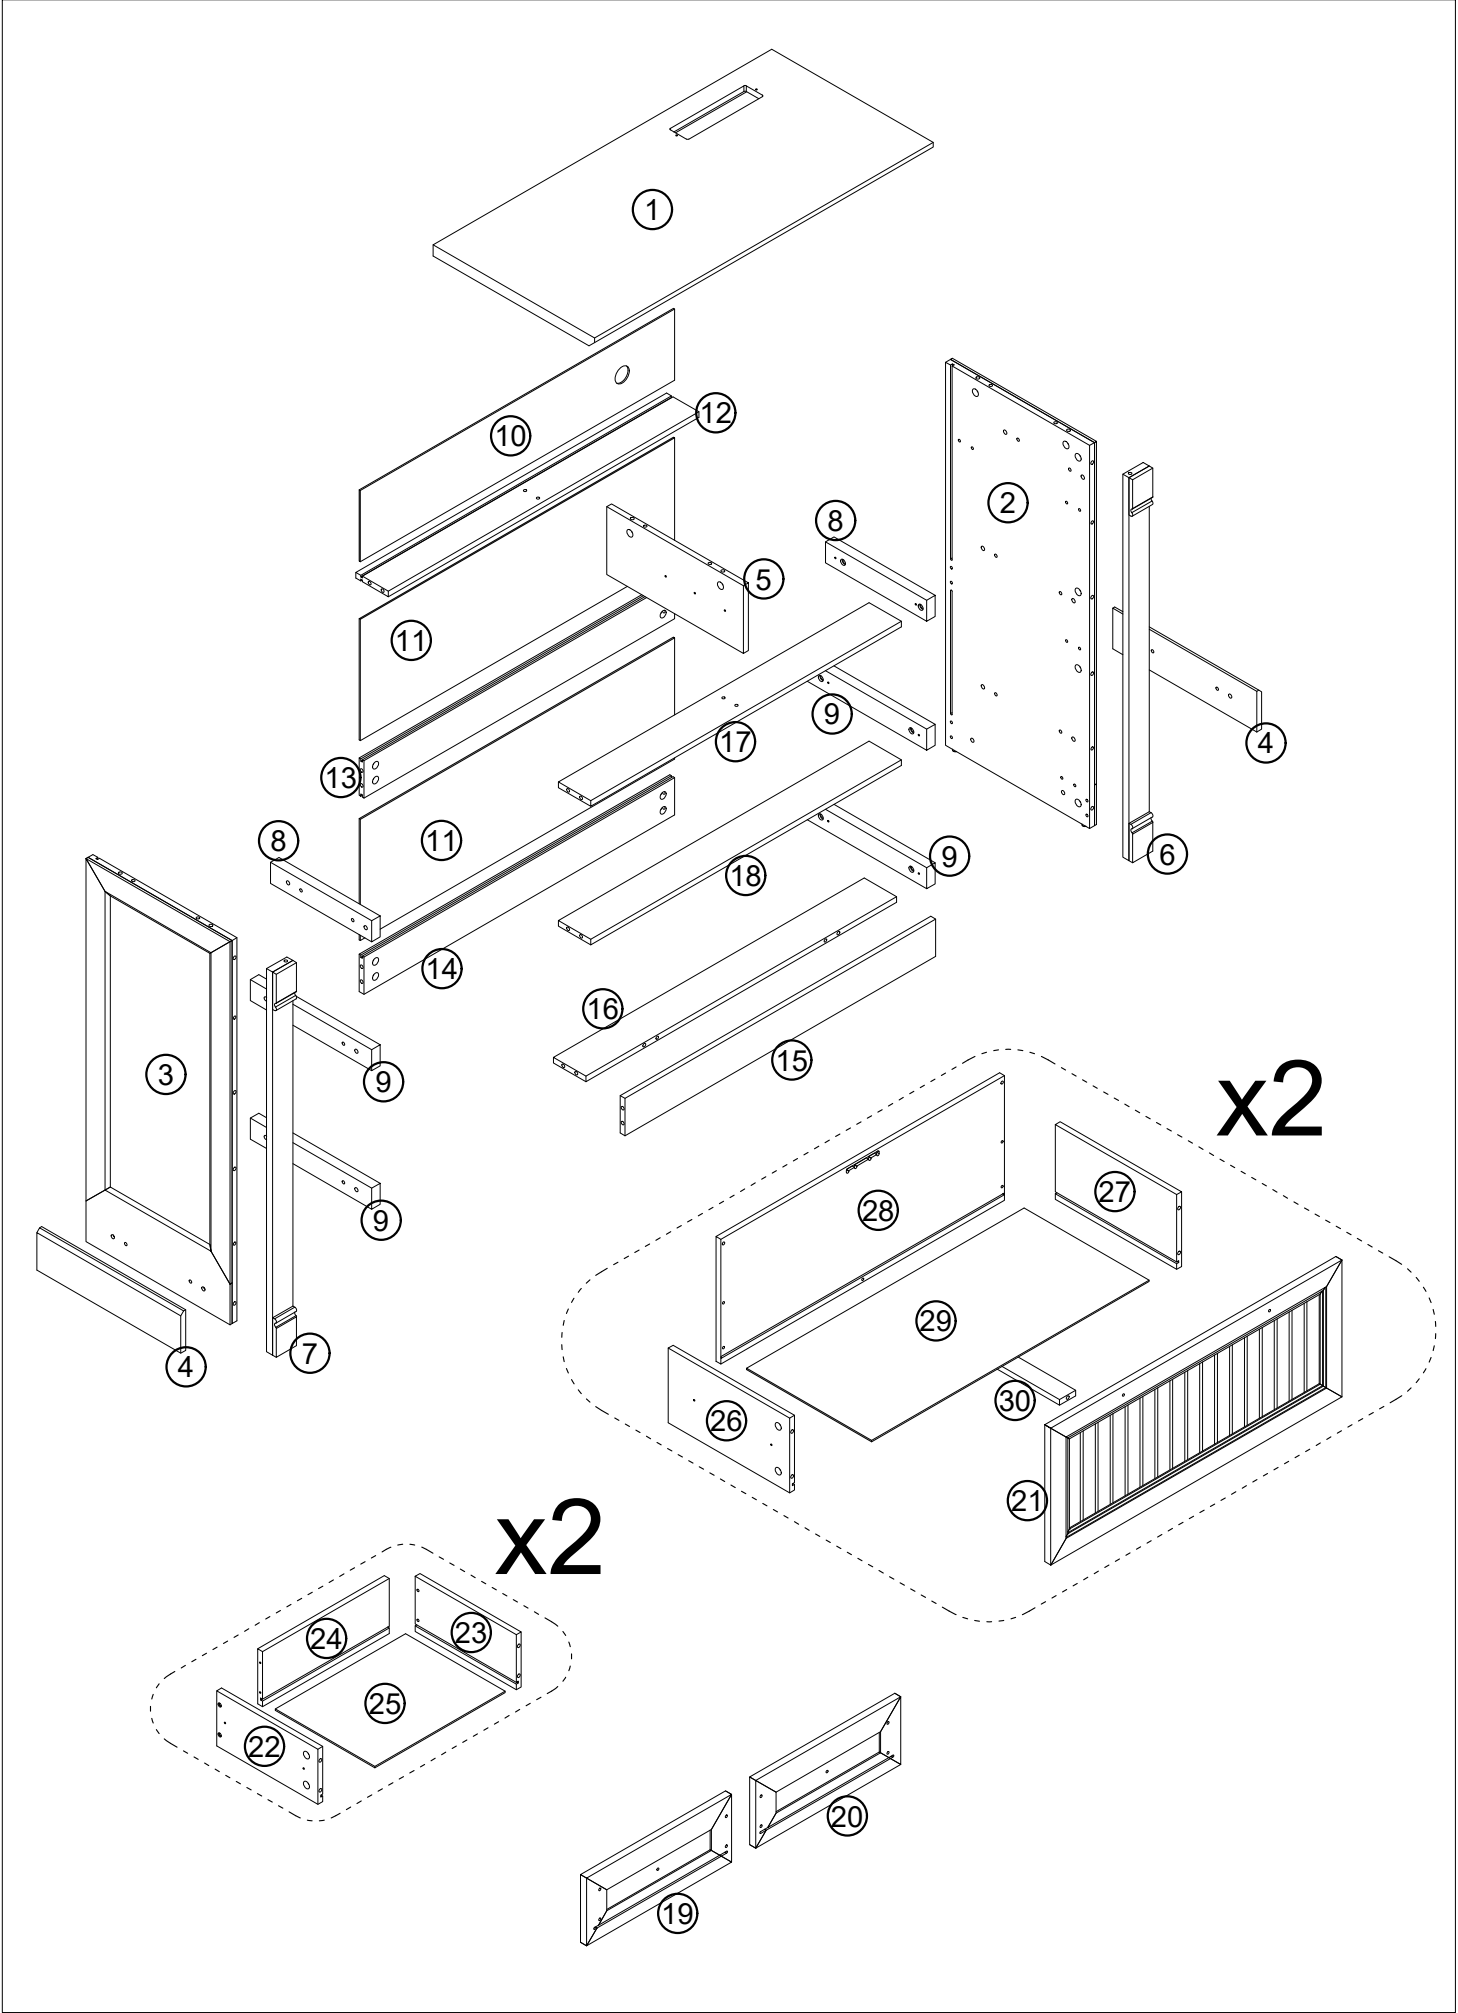





















ASSEMBLY INSTRUCTIONS

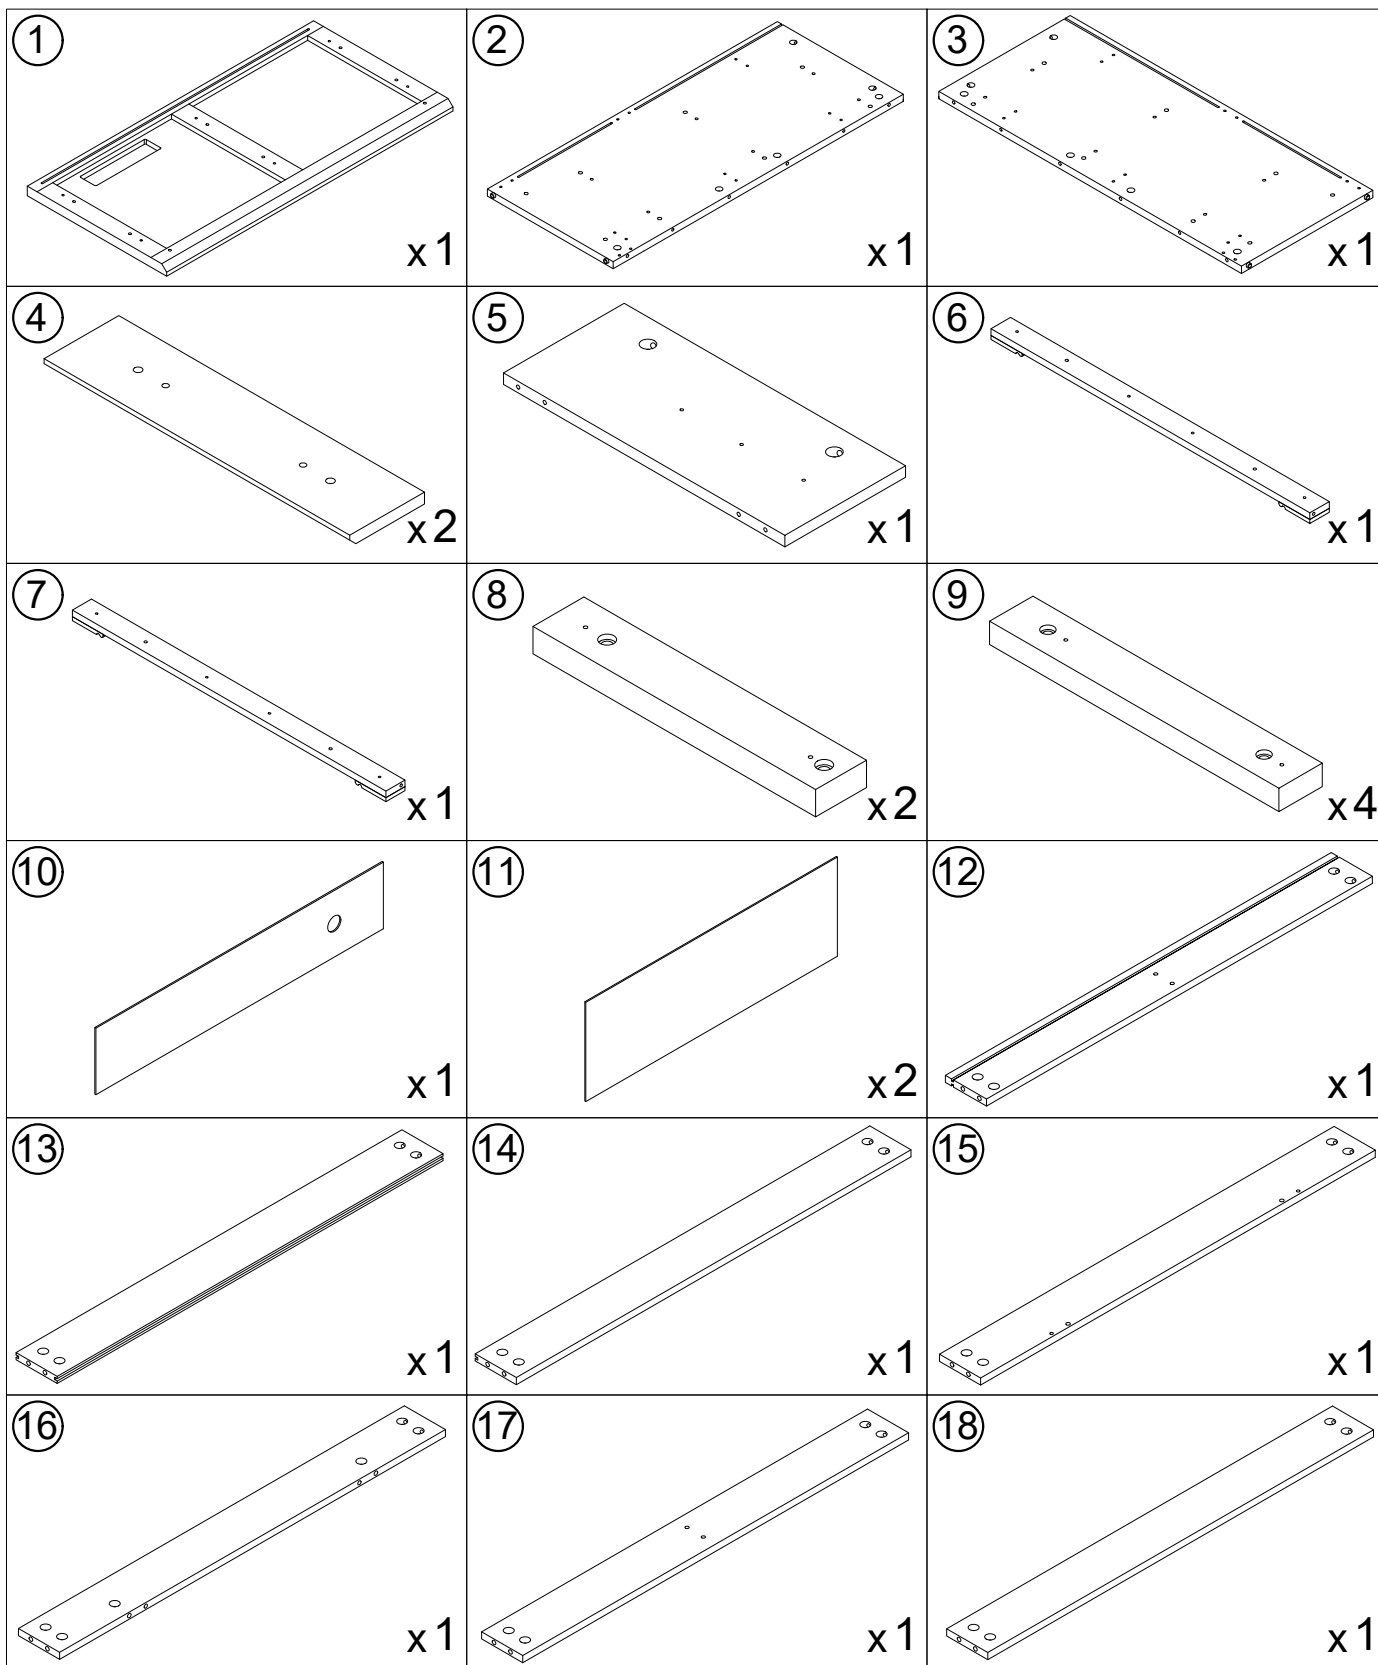


ASSEMBLY INSTRUCTIONS

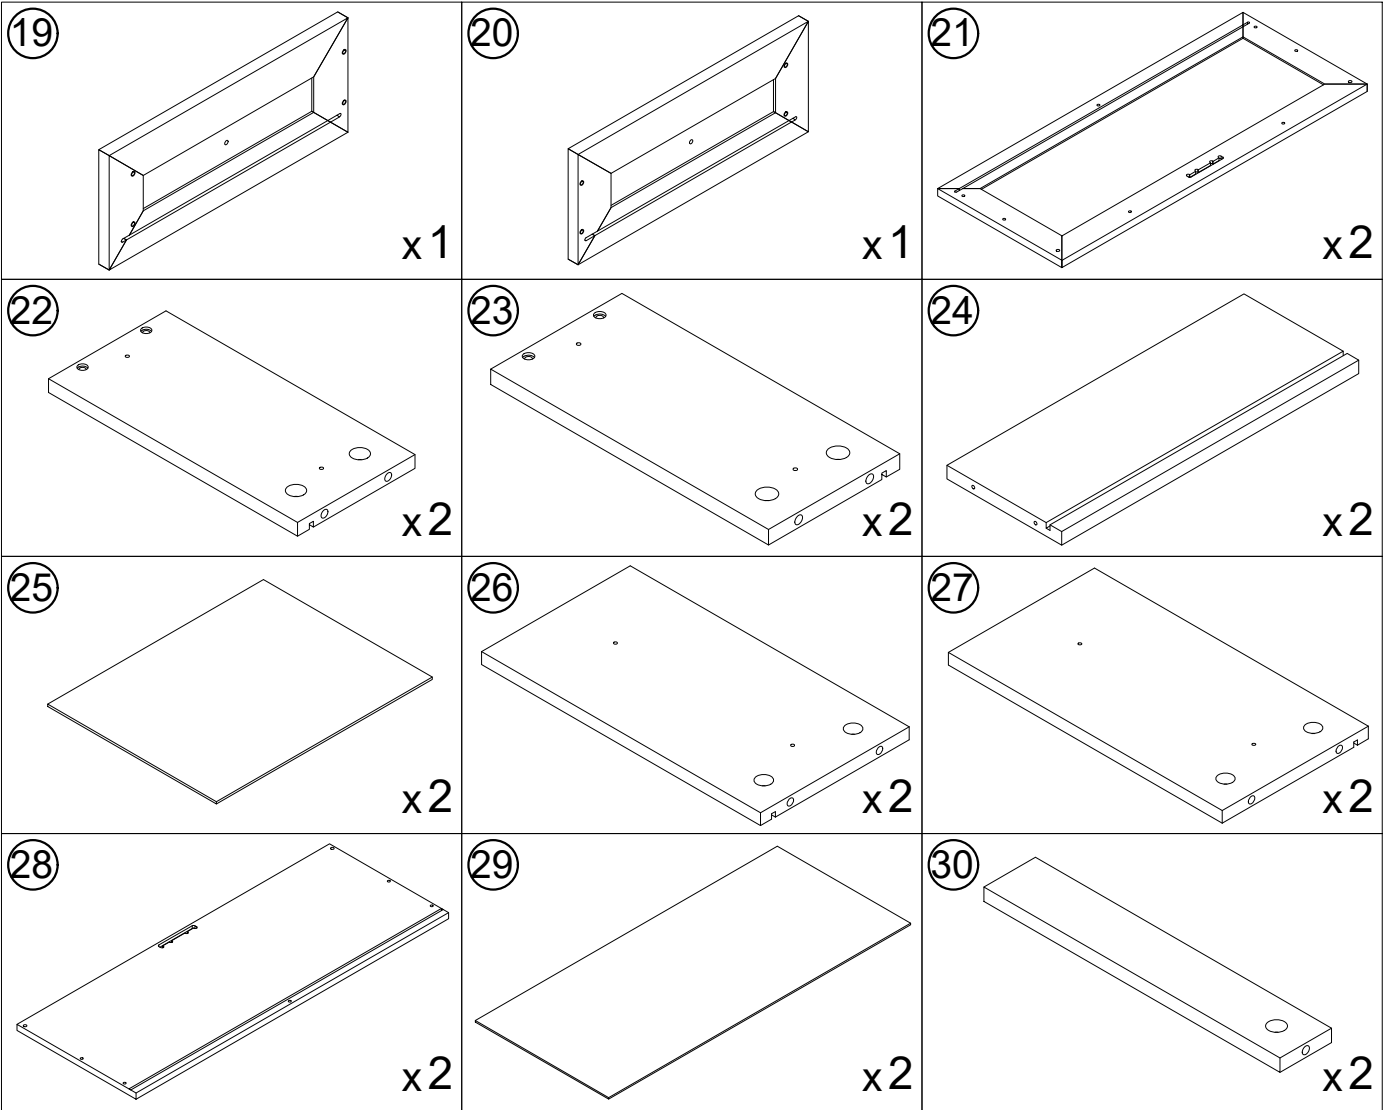


ASSEMBLY INSTRUCTIONS

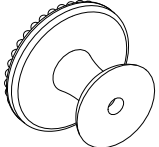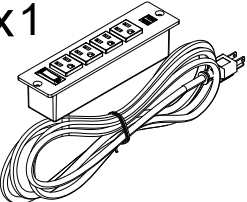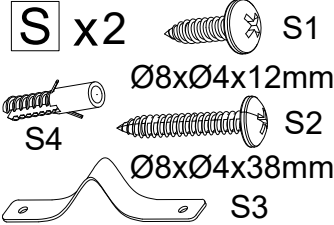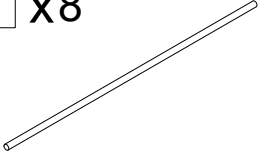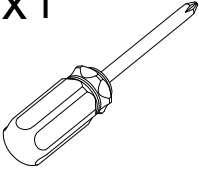A x62+5  Ø6x35mm	B x62+5  Ø15x10mm	C x14+2  Ø6x30mm	D x 4+1  Ø5x38mm
E x43+4  Ø6xØ3x12mm	F x6  Ø15x10mm	G x4+1  M4x20mm	H x1 
I x18+2  Ø8xØ4x35mm	J x2  L=250mm	K x2  L=300mm	L x22+2  Ø6xØ3x16mm
M x2+1  M4x10mm	N x18+2  Ø20mm	O x1  3mm	P x1  4mm
Q x16+1  M6x25mm	R x16+2  Ø5x20mm	S x2  S1: Ø8xØ4x12mm S2: Ø8xØ4x38mm S3: Washer S4: Washer	T x8  L=310mm
U x1 			

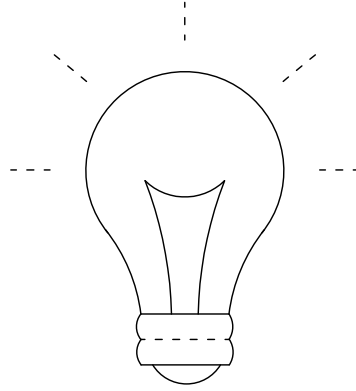


friendly reminder

To avoid errors and confusion during the installation of accessories, use the type and quantity of hardware accessories according to the installation procedure described in the instructions. First, unroll the accessories bag and lay out the hardware accessories, cut holes in the side, and take out the hardware accessories

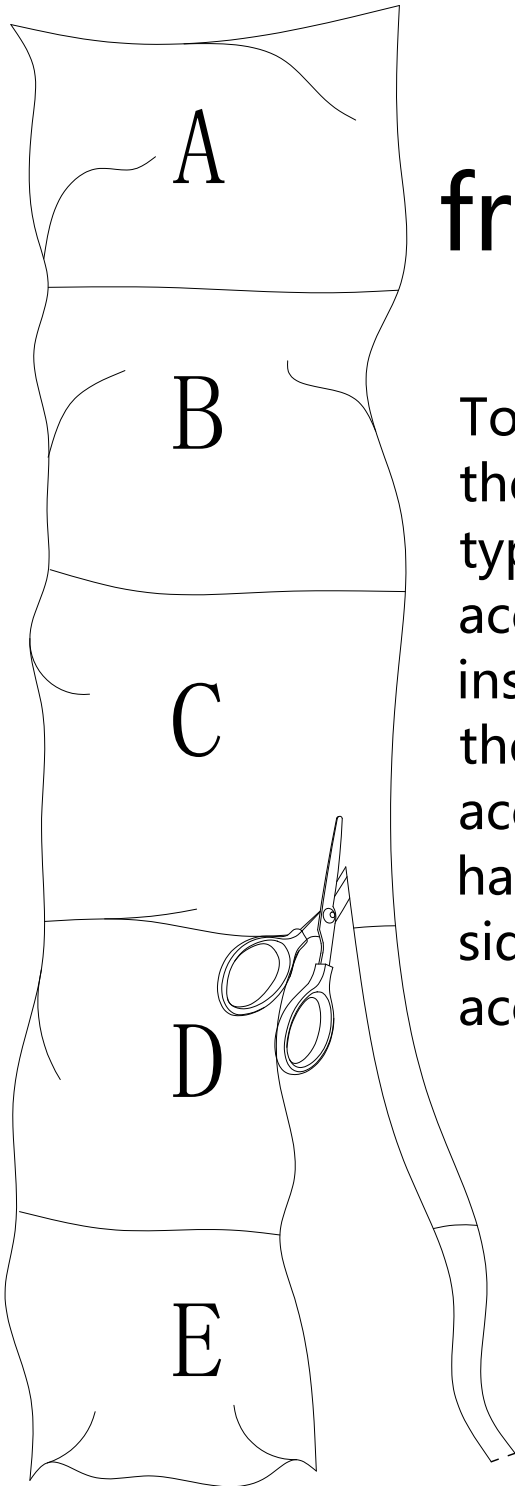


INSTALLATION INSTRUCTION

STEP 01

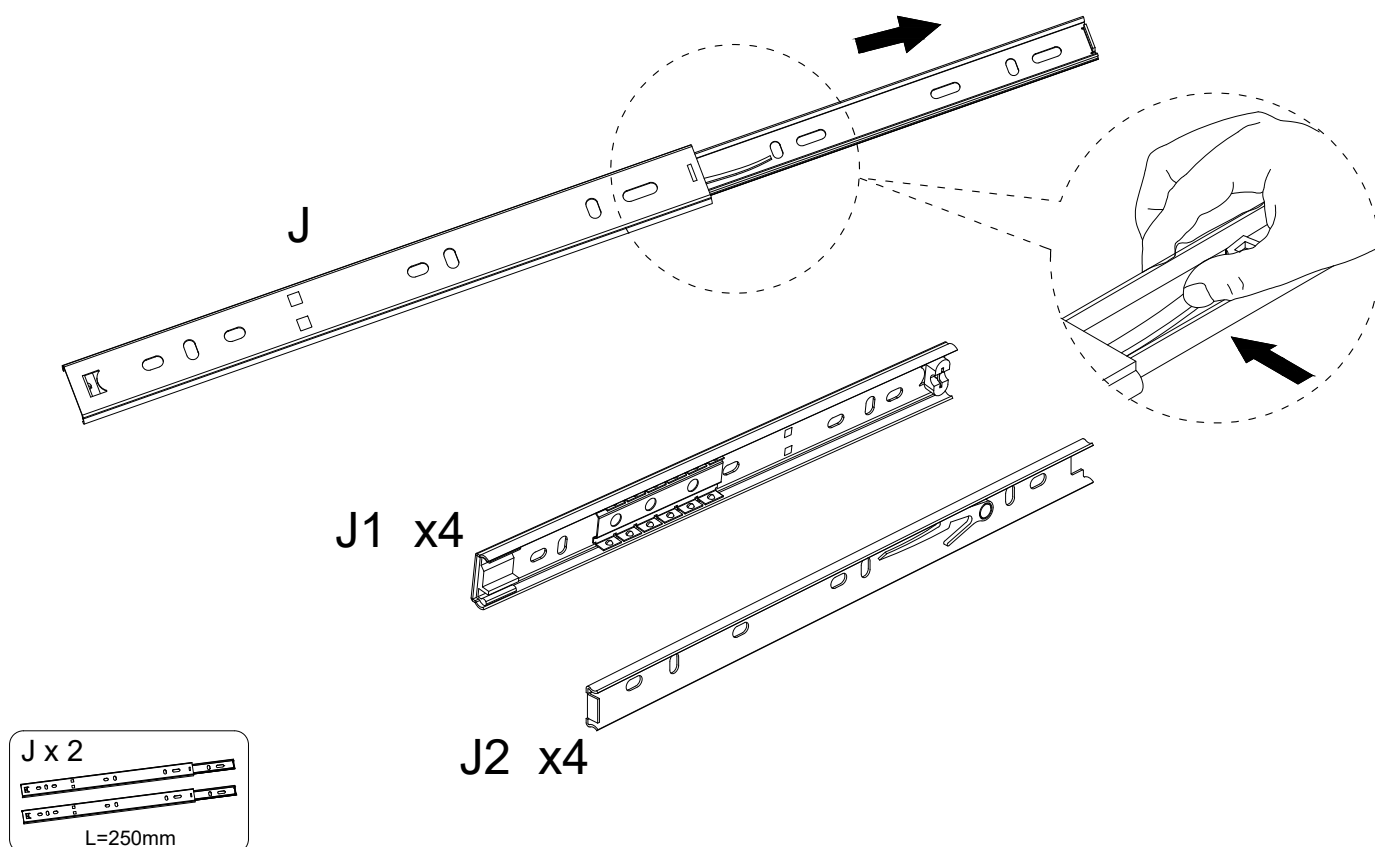


STEP 02

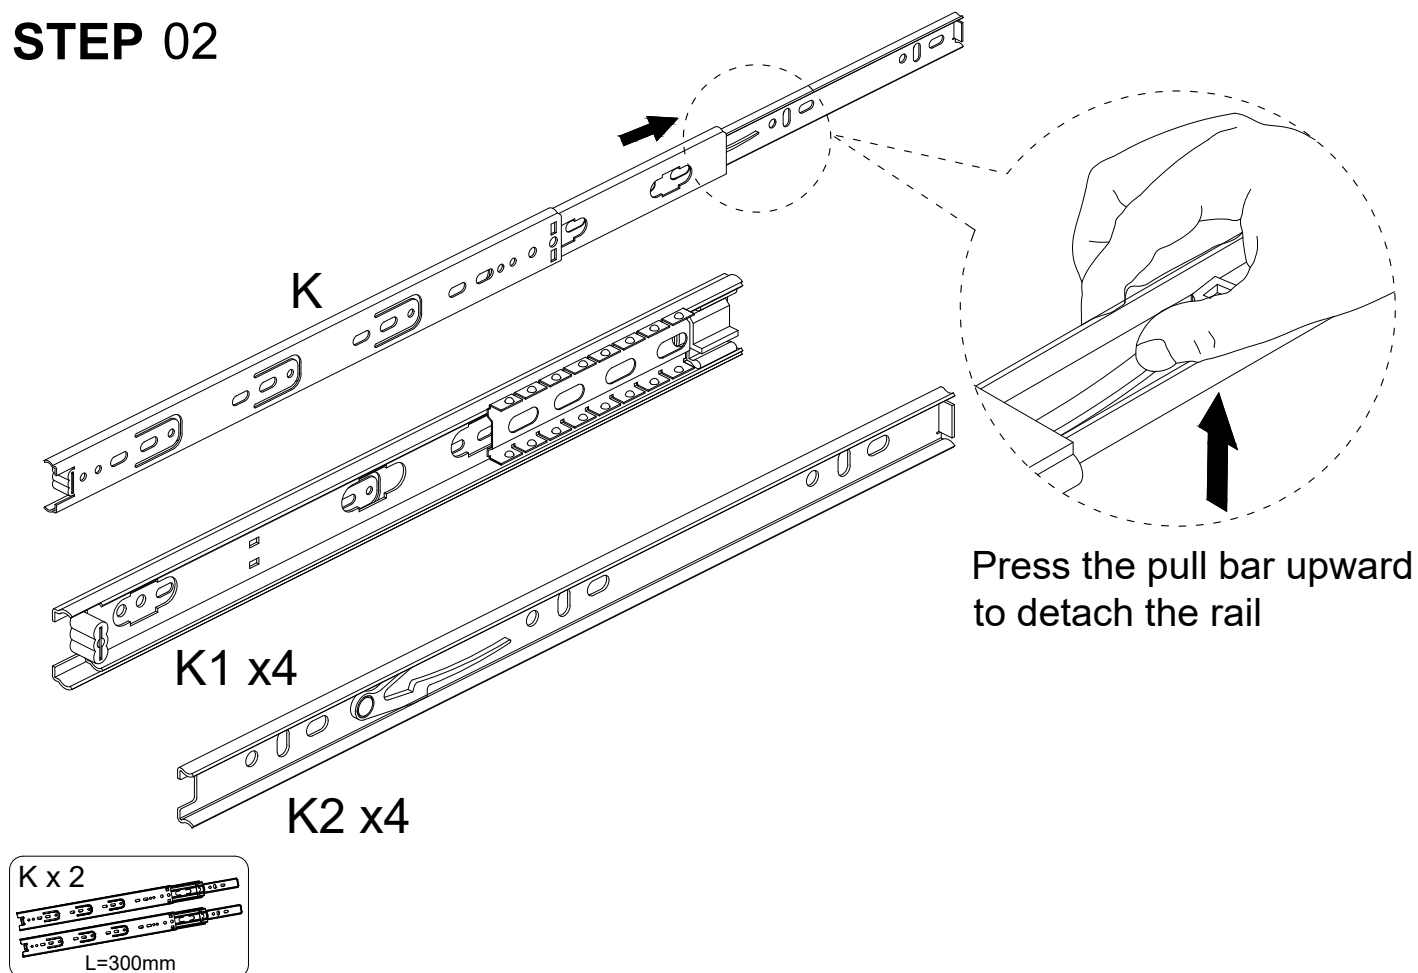


INSTALLATION INSTRUCTION

STEP 03

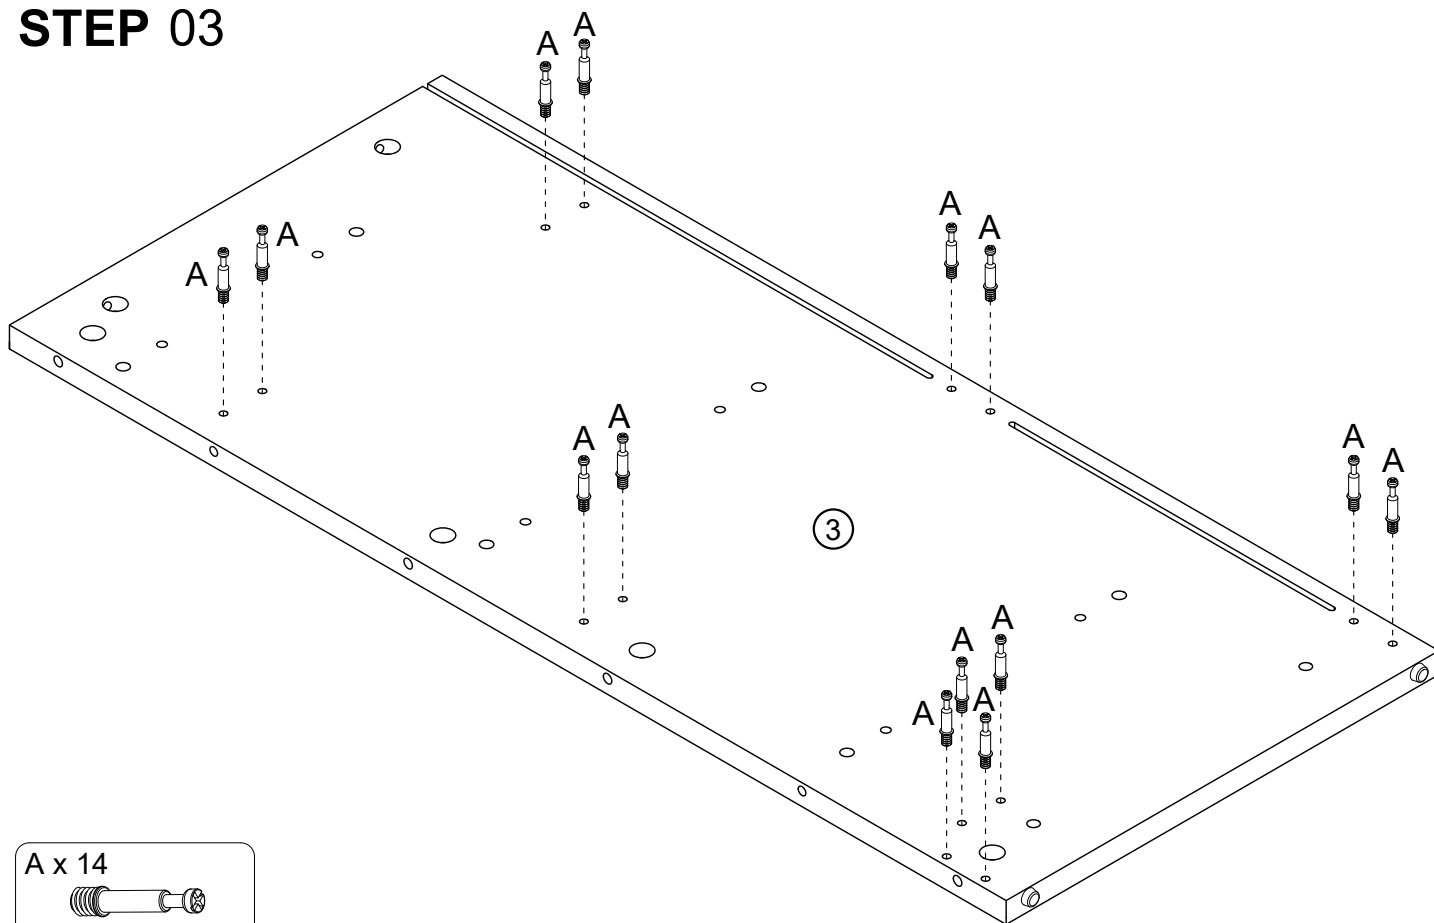


A x 14




Ø6x35mm

STEP 04

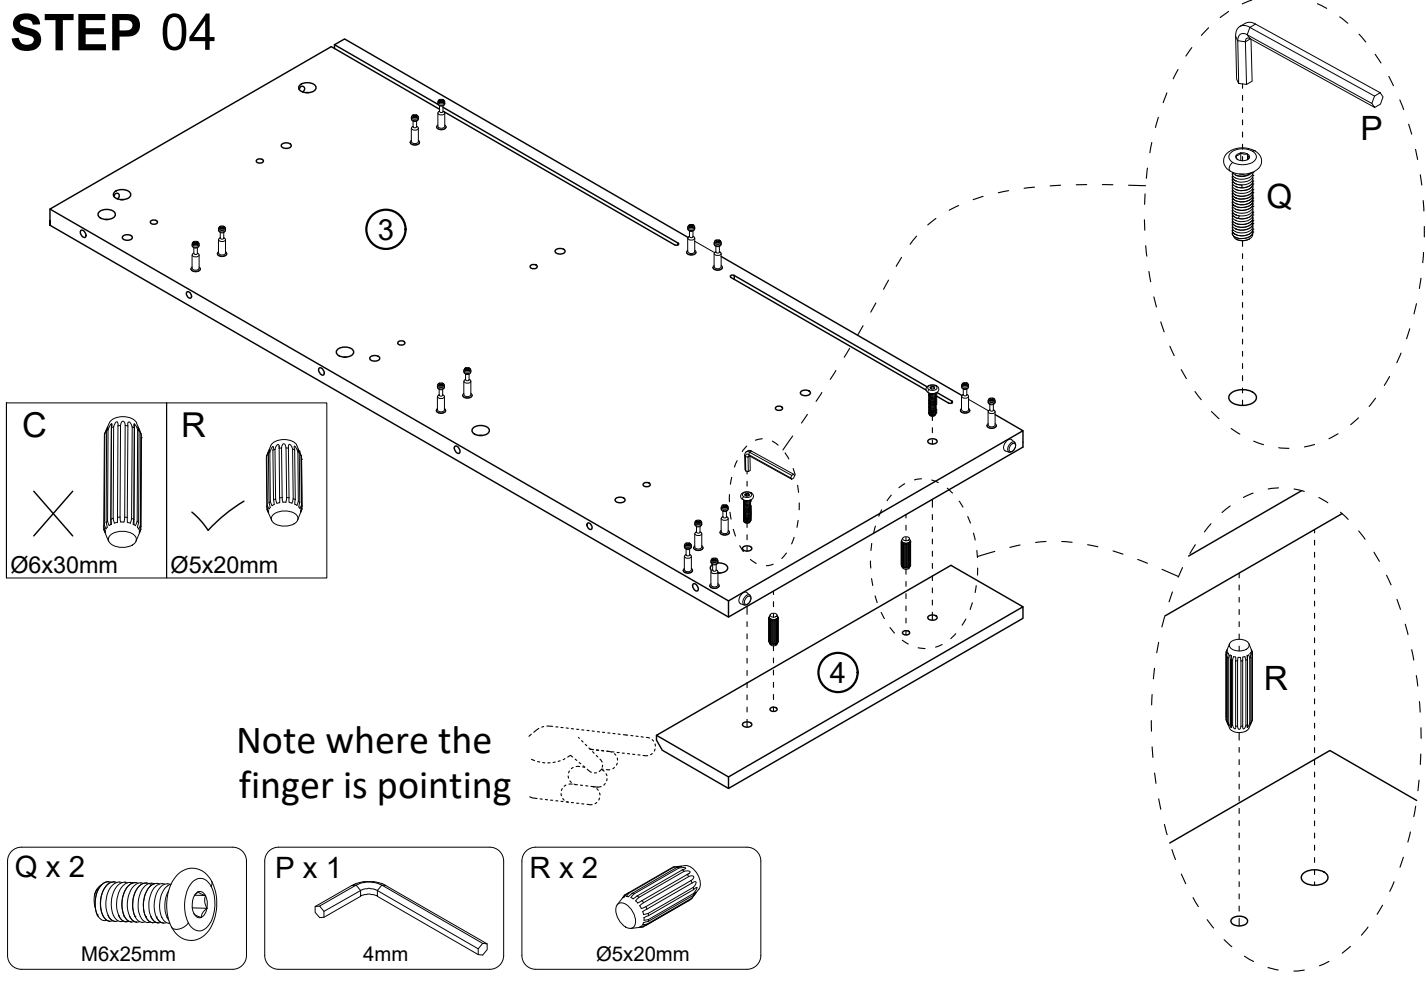

C




Ø6x30mm

R




Ø5x20mm

Q x 2



M6x25mm

P x 1



4mm



R x 2




Ø5x20mm

INSTALLATION INSTRUCTION

STEP 05

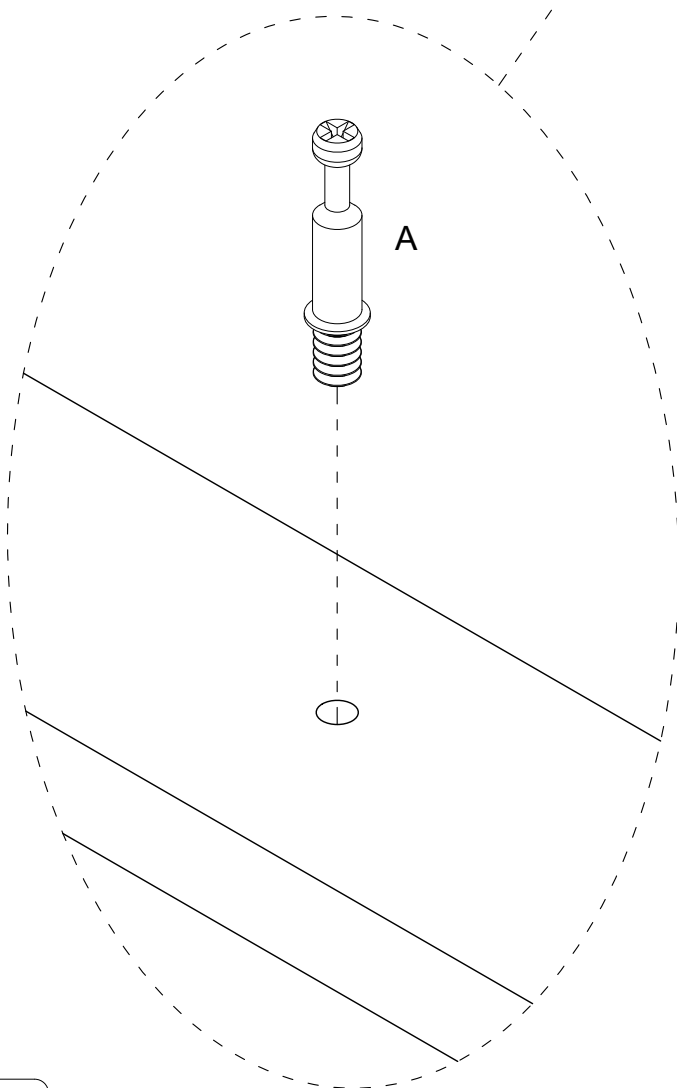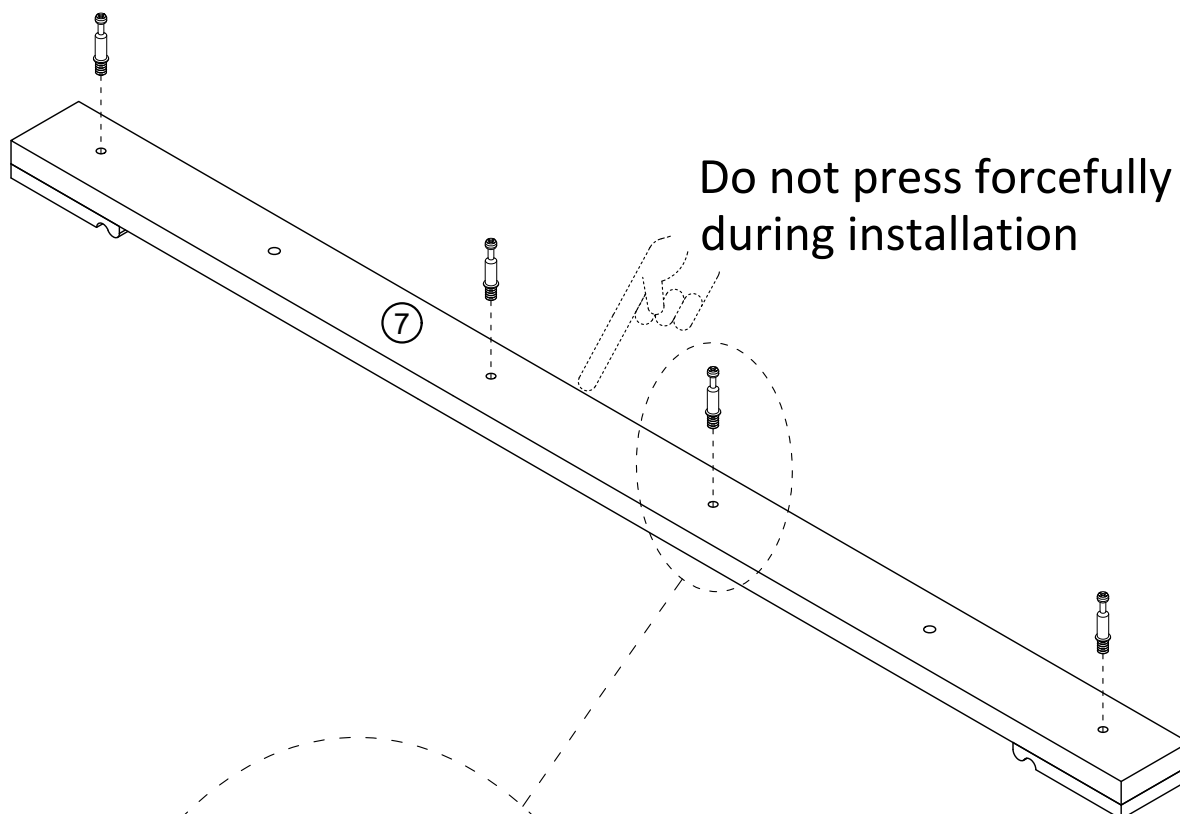

A x 4





Ø6x35mm


INSTALLATION INSTRUCTION

STEP 06

If installation is difficult,
the board can be
assembled vertically

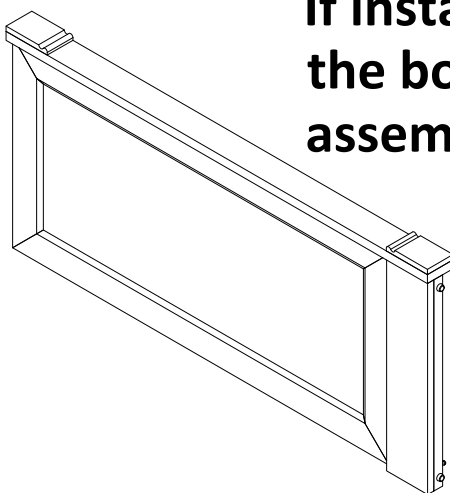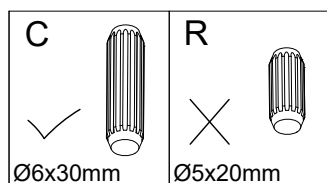



Note where the
finger is pointing

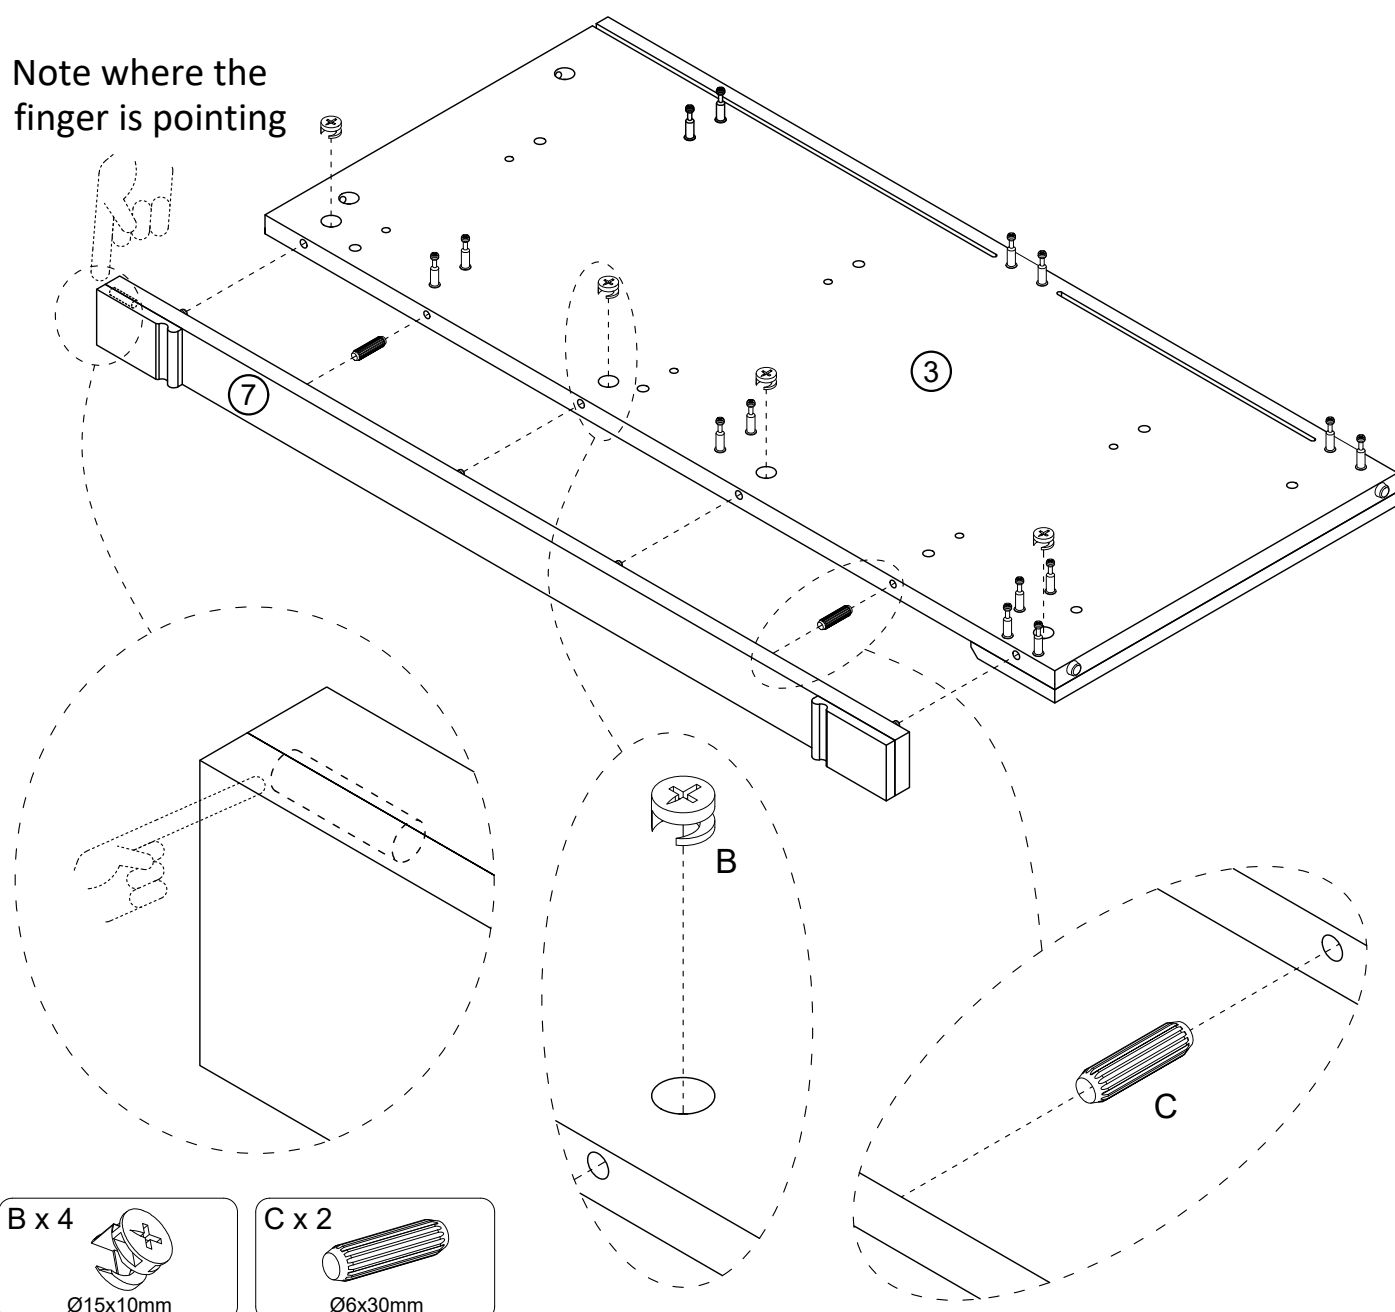


INSTALLATION INSTRUCTION

STEP 07

Note where the finger is pointing

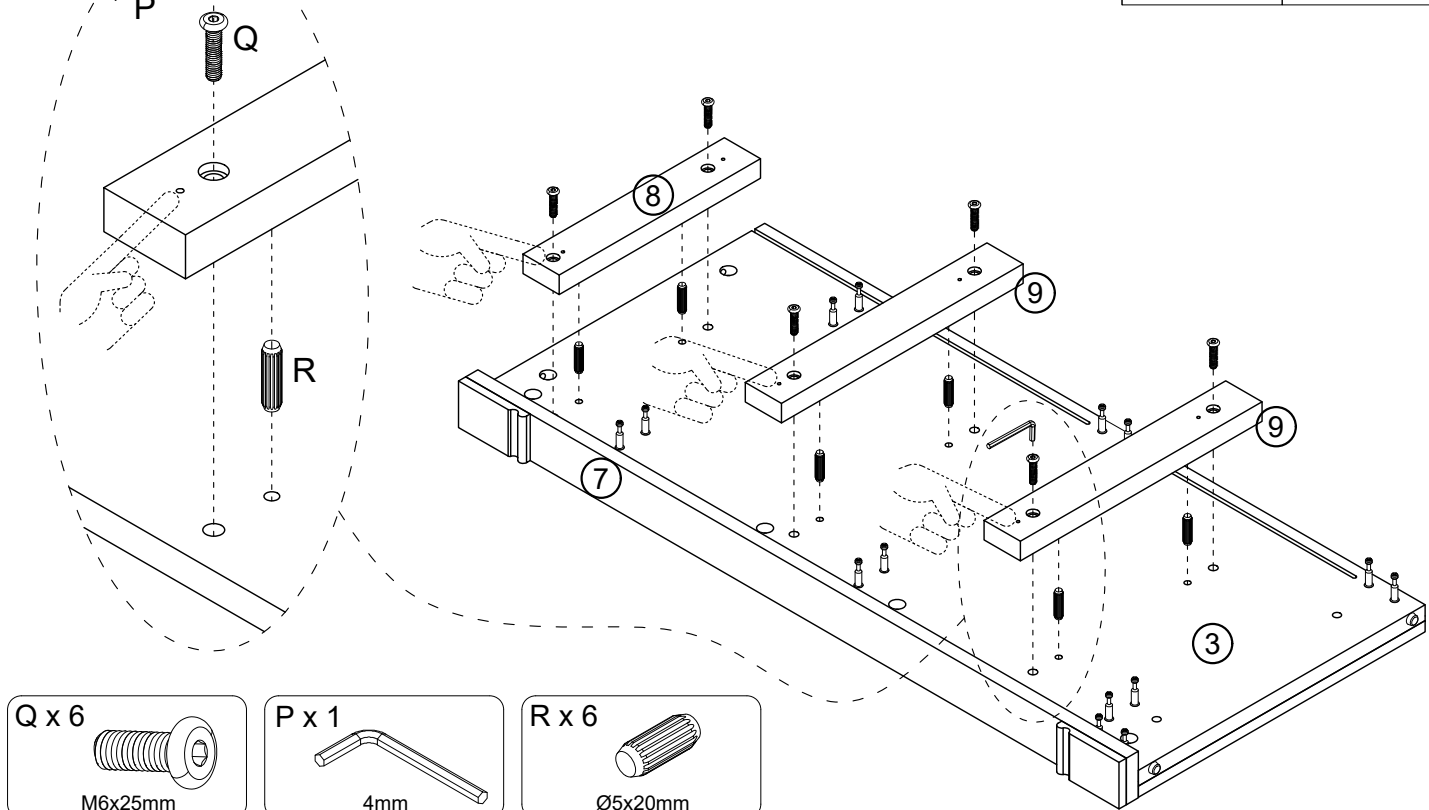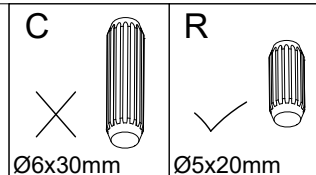


Q x 6



M6x25mm

P x 1





4mm

R x 6




Ø5x20mm

STEP 08

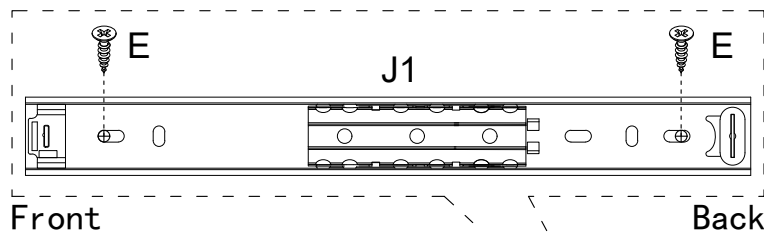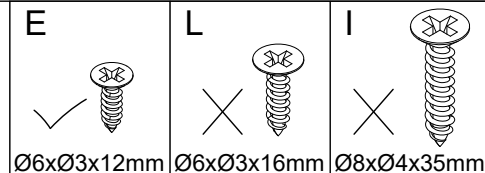

Front

Back

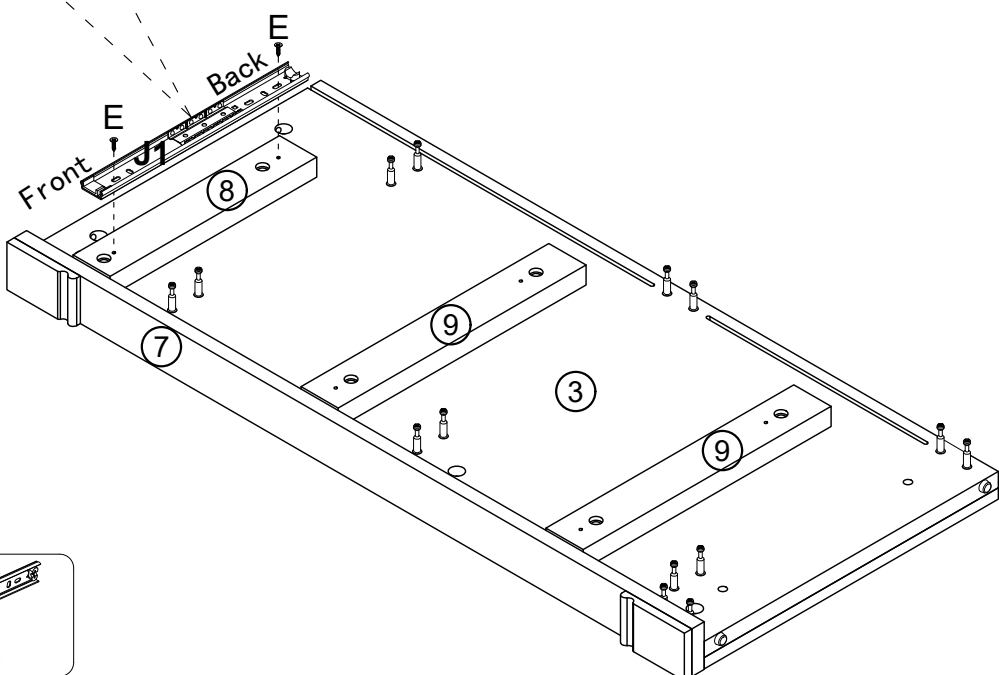


E x 2



Ø6xØ3x12mm



J1 x 1




L=250mm

INSTALLATION INSTRUCTION


STEP 09

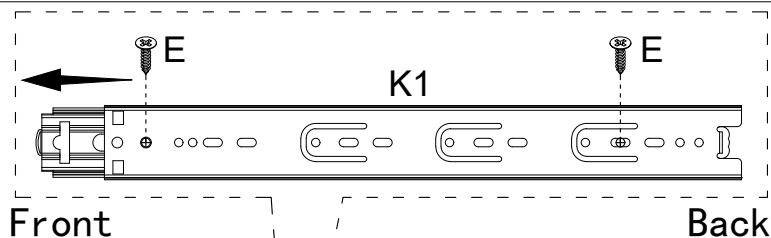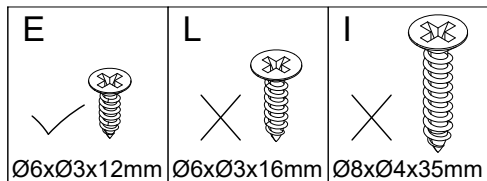


The backside of the slide rail shown in the picture is convenient for checking the hole positions

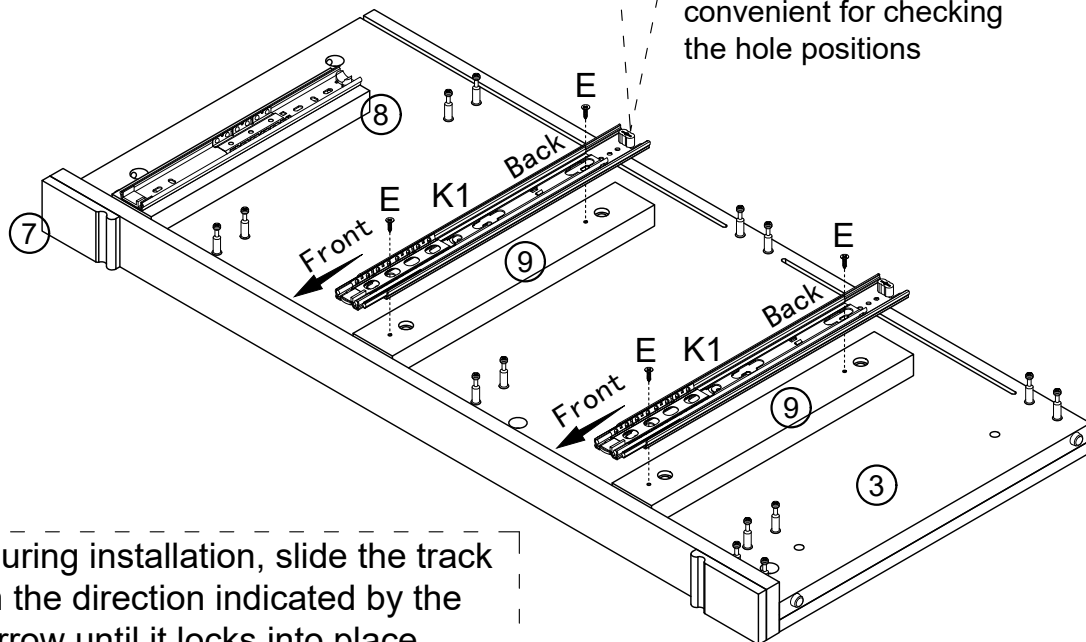

K1 x 2




E x 4





During installation, slide the track in the direction indicated by the arrow until it locks into place

STEP 10

Note where the finger is pointing

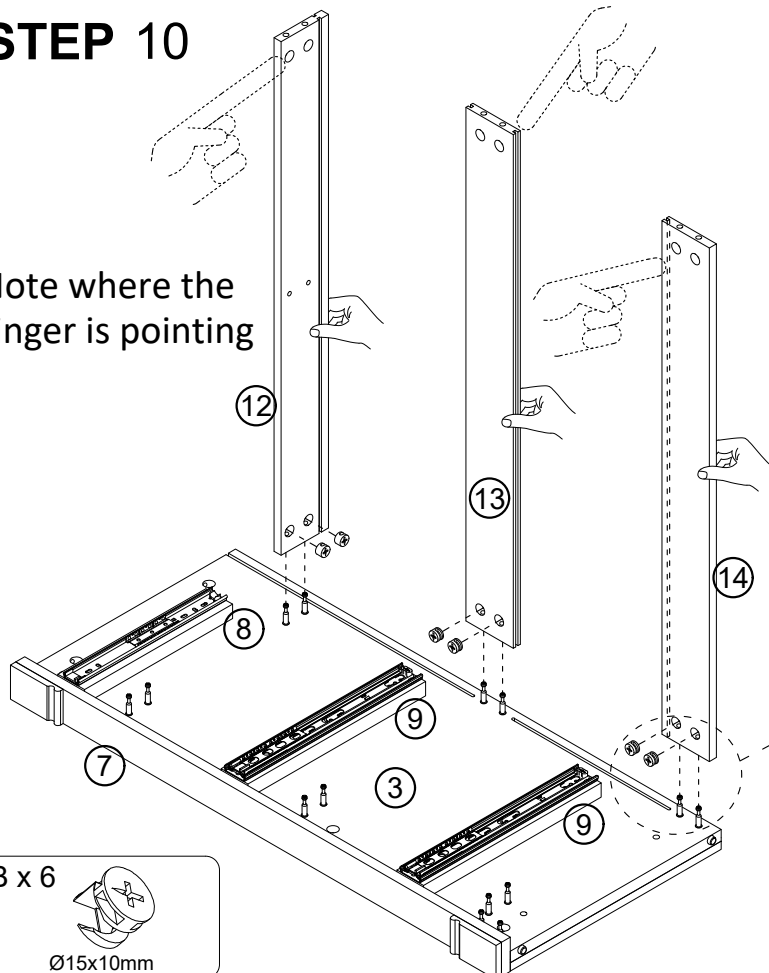


B x 6

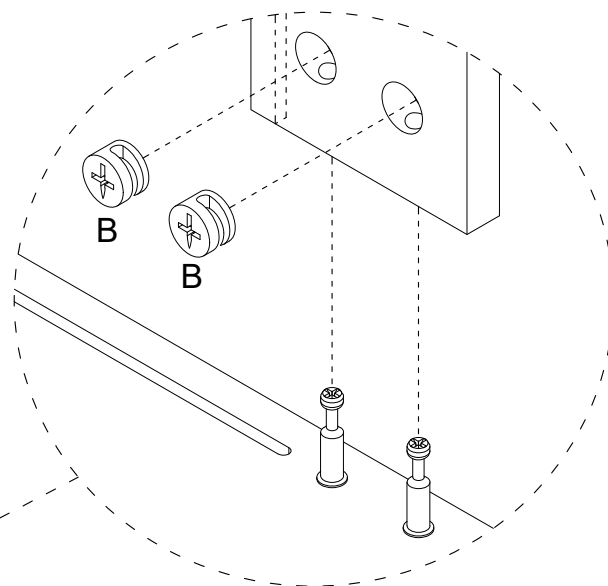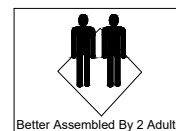

INSTALLATION INSTRUCTION

STEP 11



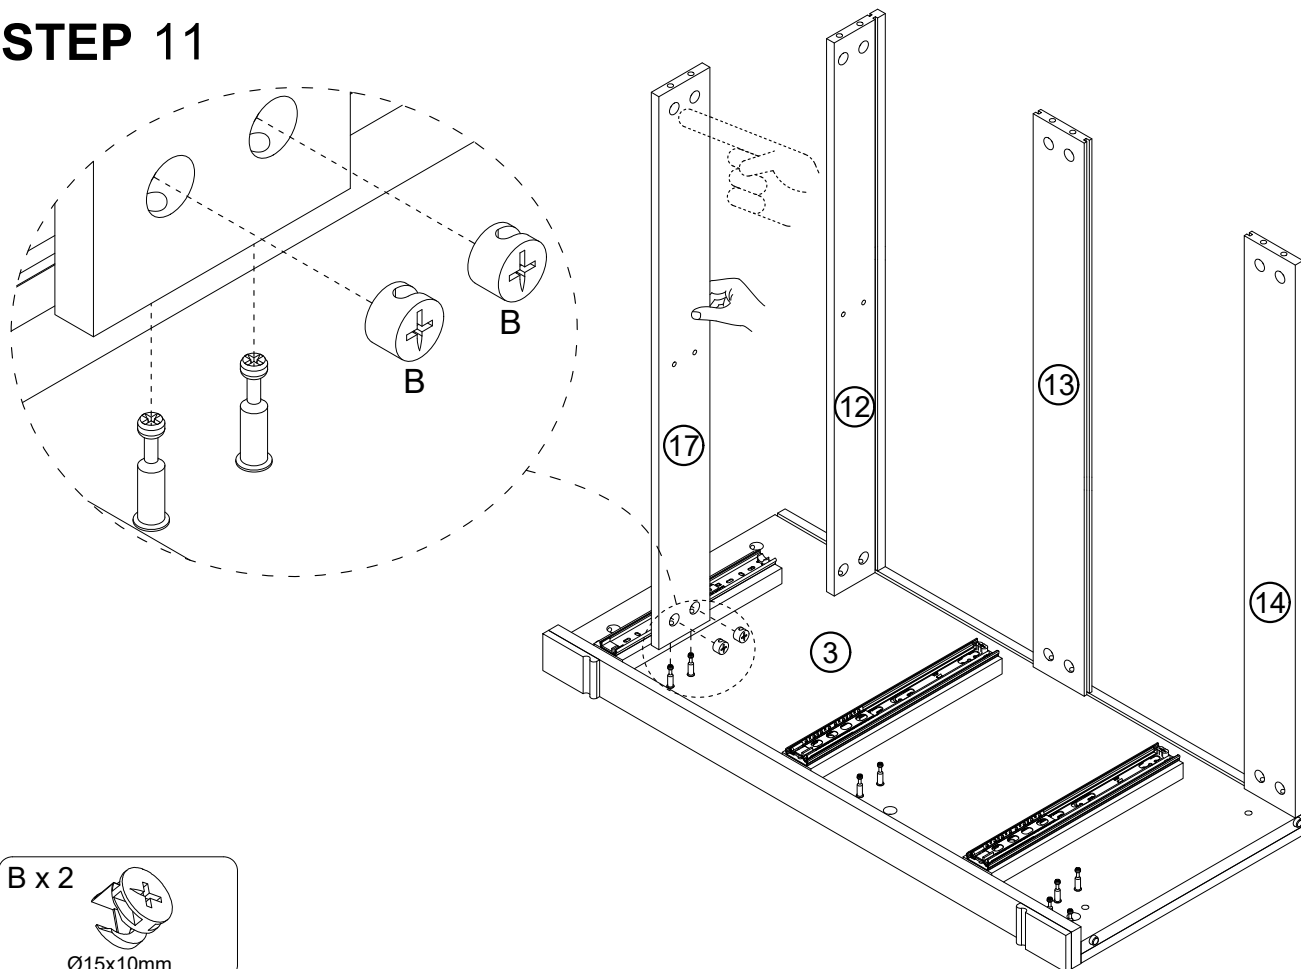


B x 2



Ø15x10mm

STEP 12

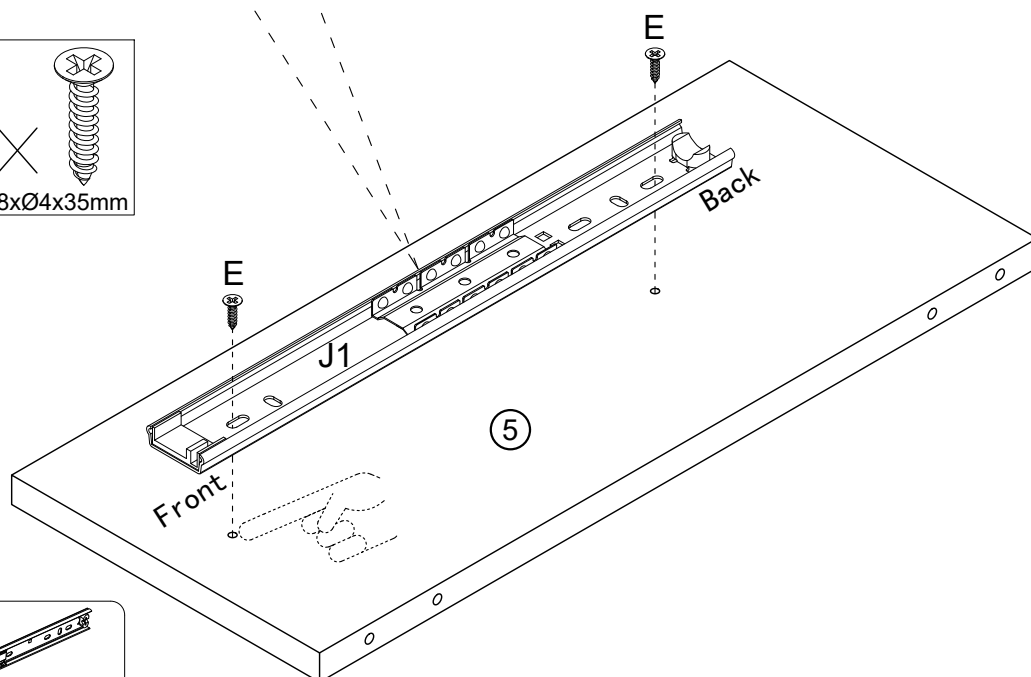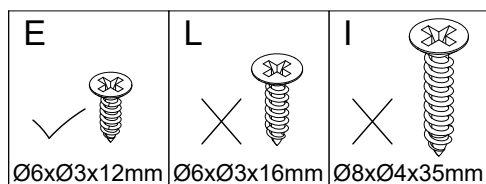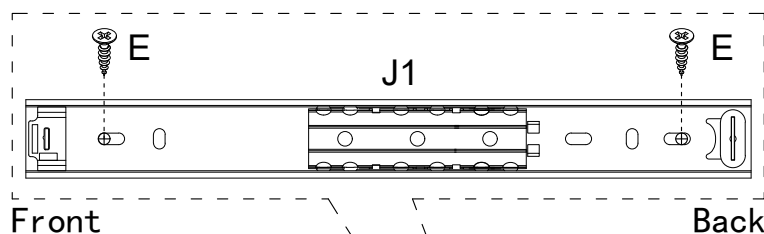


E x 2



Ø6xØ3x12mm


J1 x 1





L=250mm

INSTALLATION INSTRUCTION


STEP 13

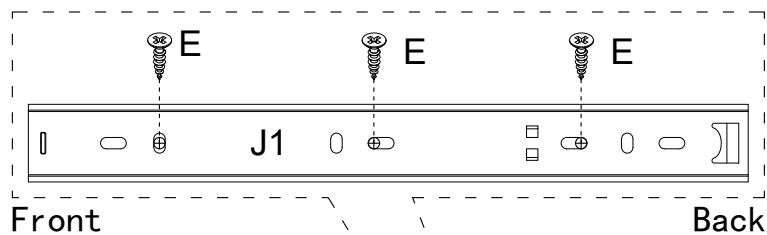



The backside of the slide rail shown in the picture is convenient for checking the hole positions

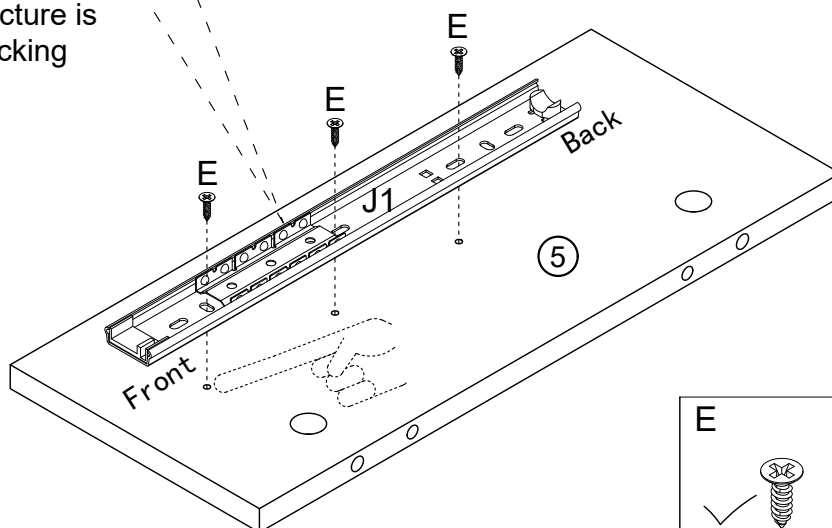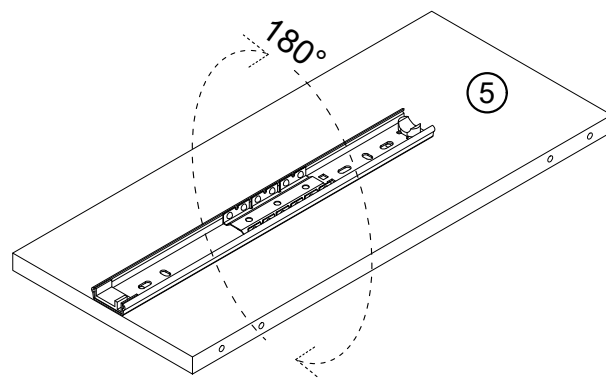

J1 x 1




E x 3

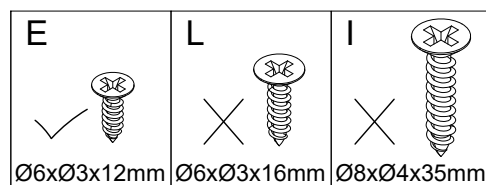


STEP 14



Note where the finger is pointing

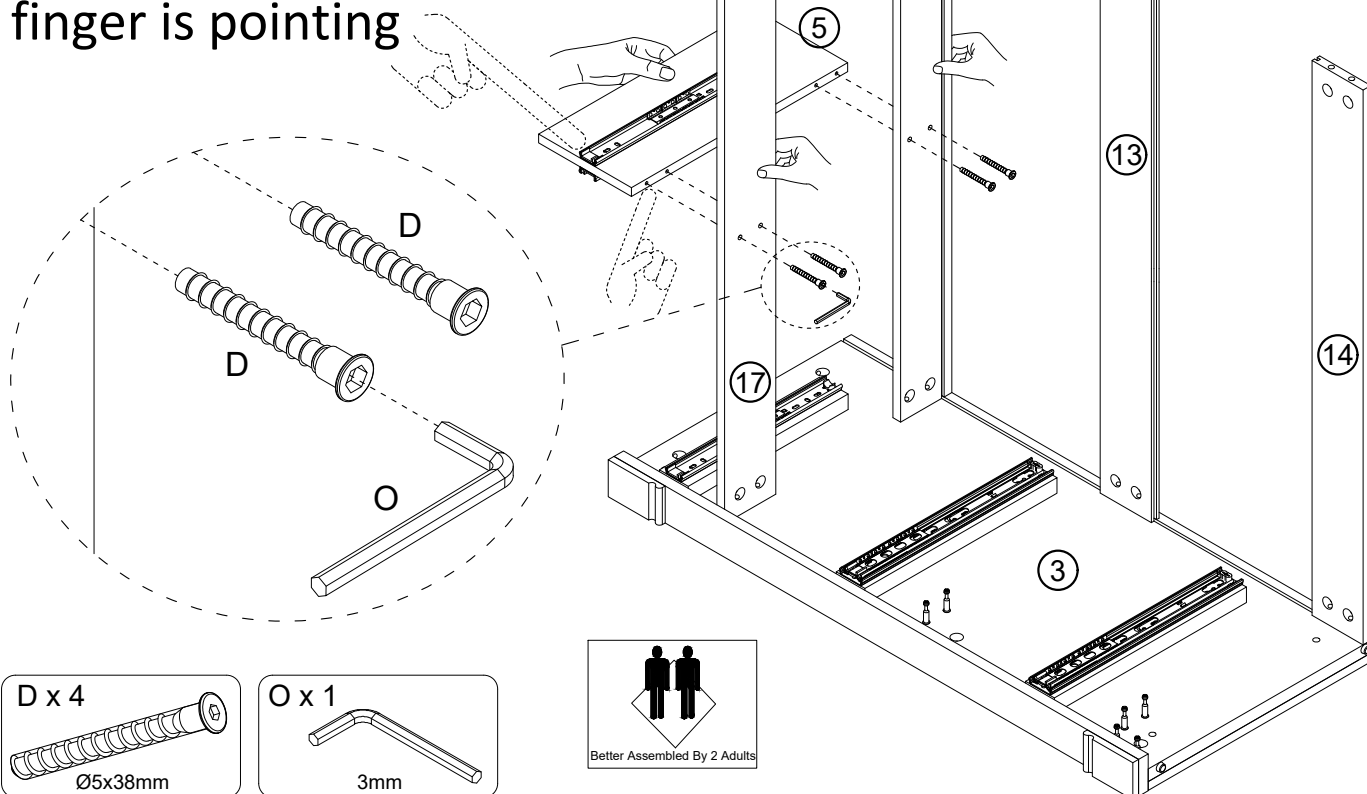

D x 4




O x 1

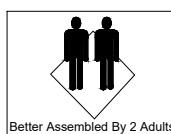


INSTALLATION INSTRUCTION

STEP 15

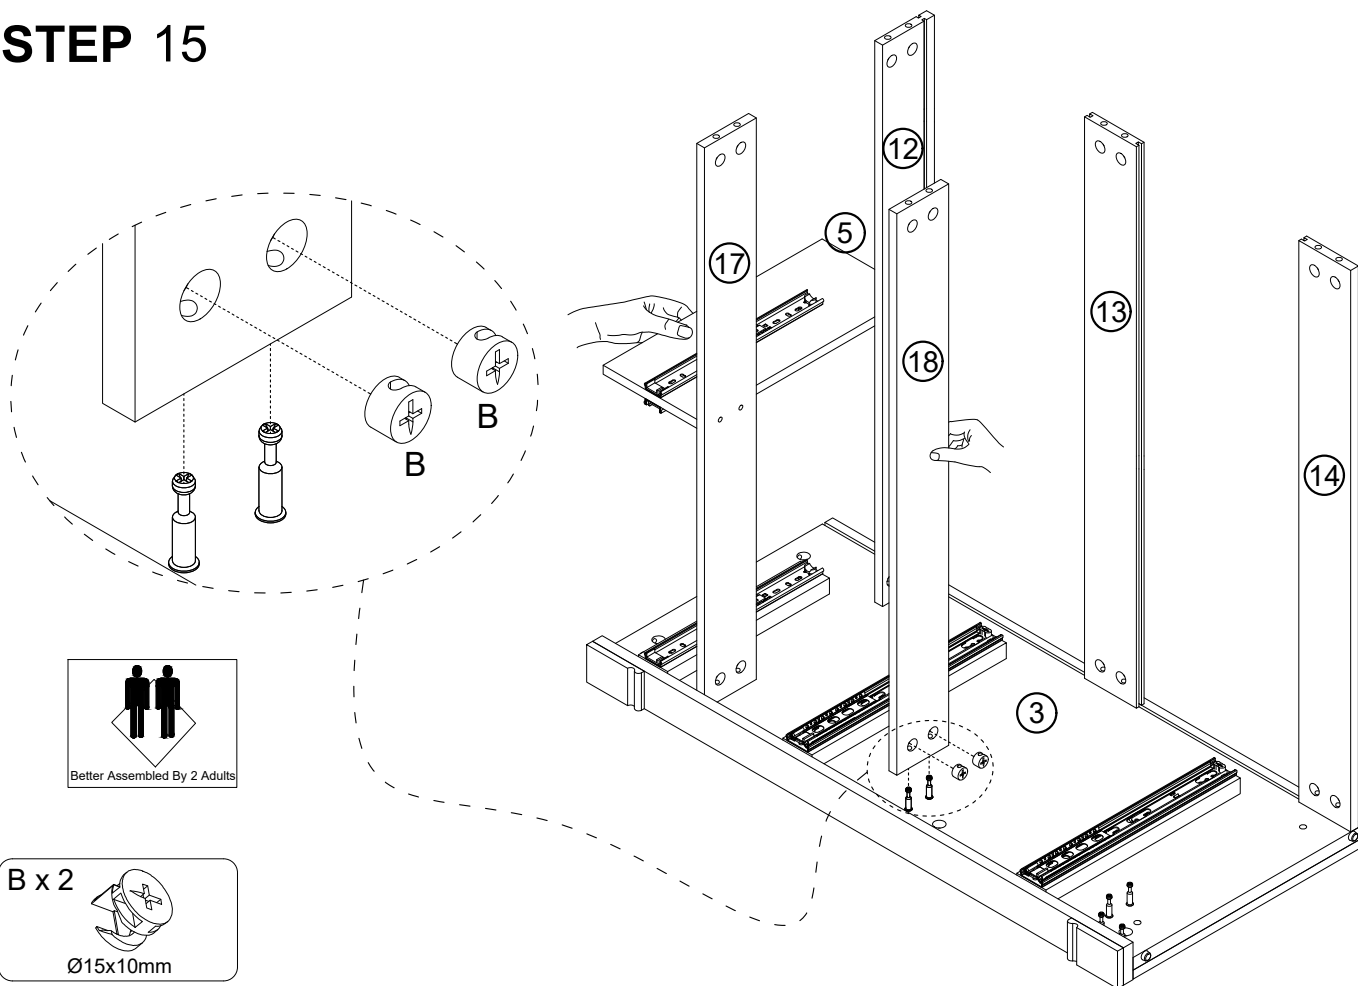


STEP 16

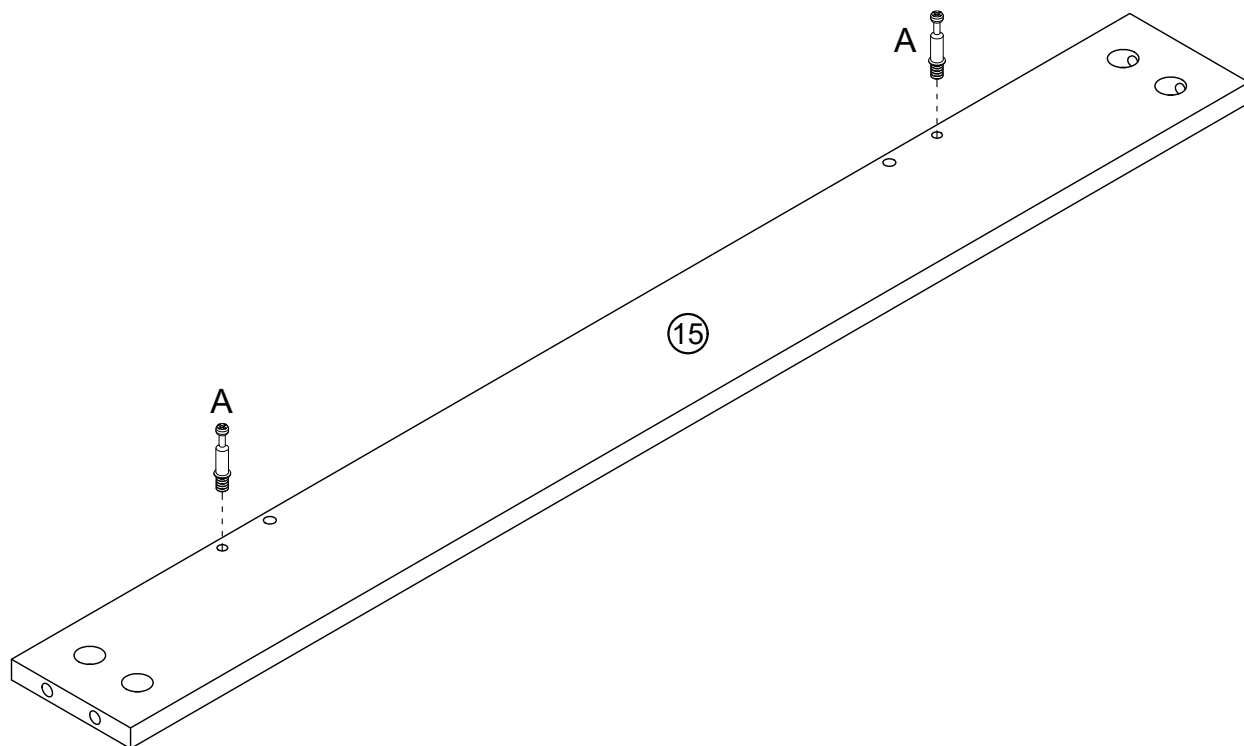


INSTALLATION INSTRUCTION

STEP 17

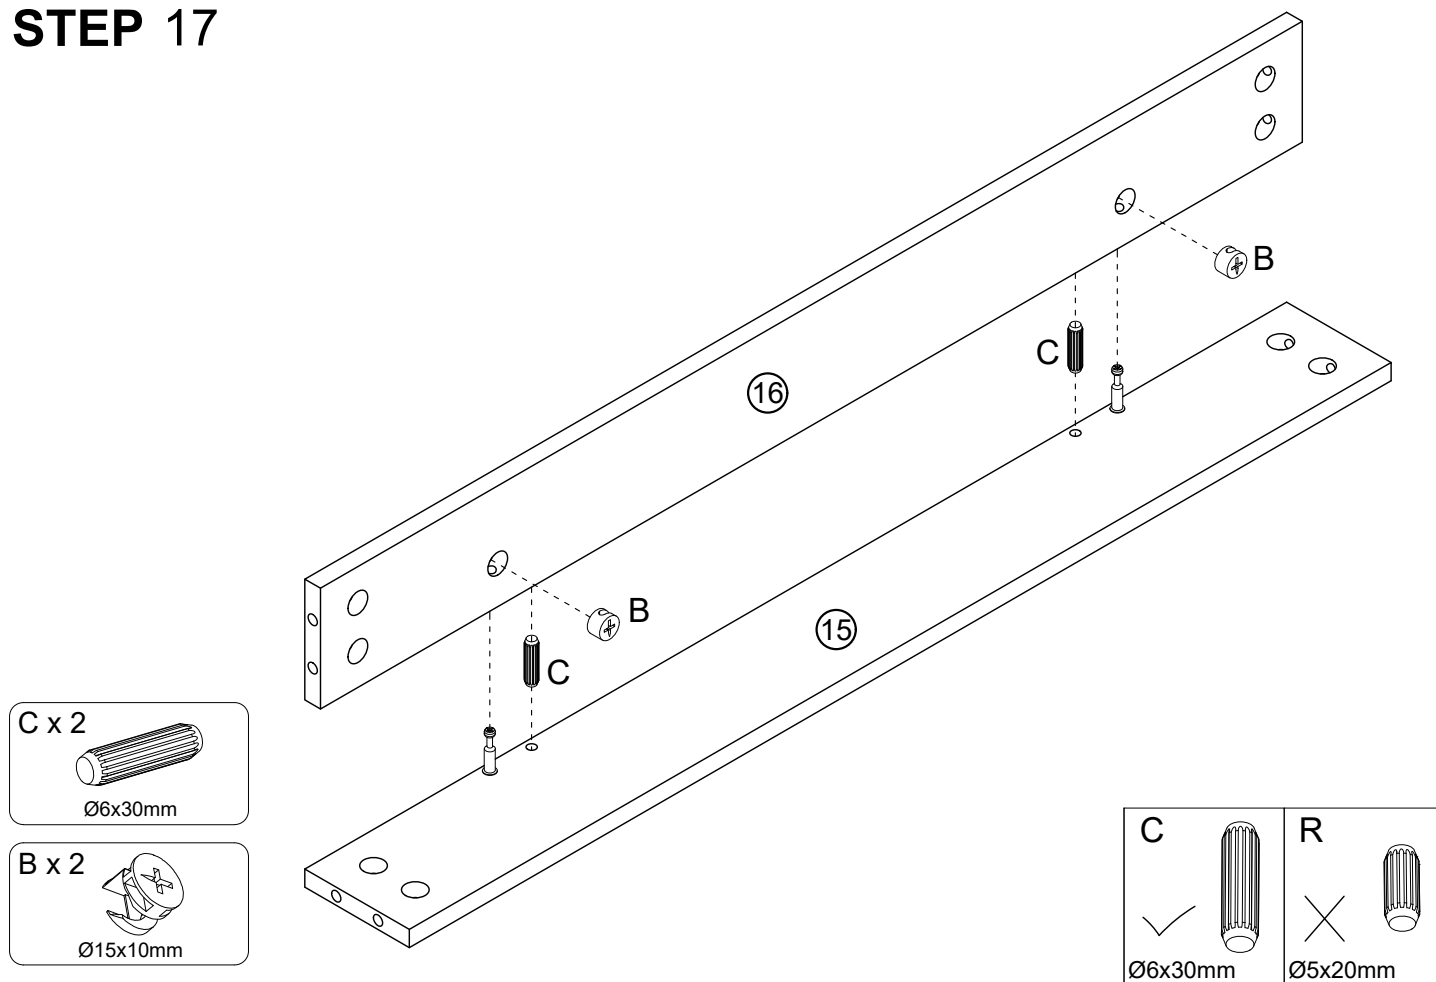


STEP 18

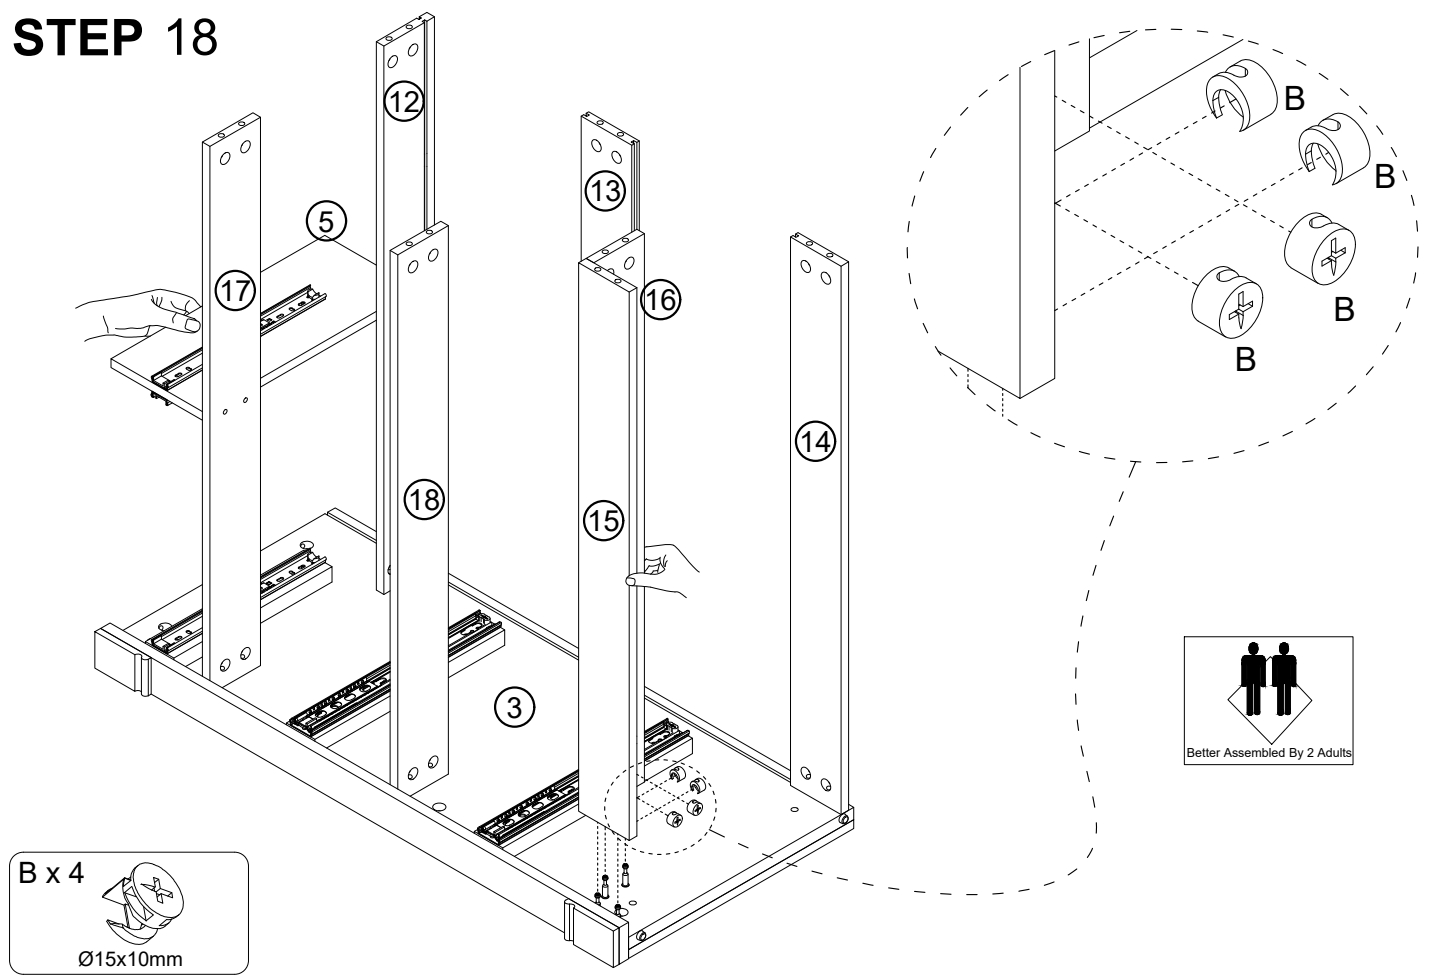


INSTALLATION INSTRUCTION


STEP 19

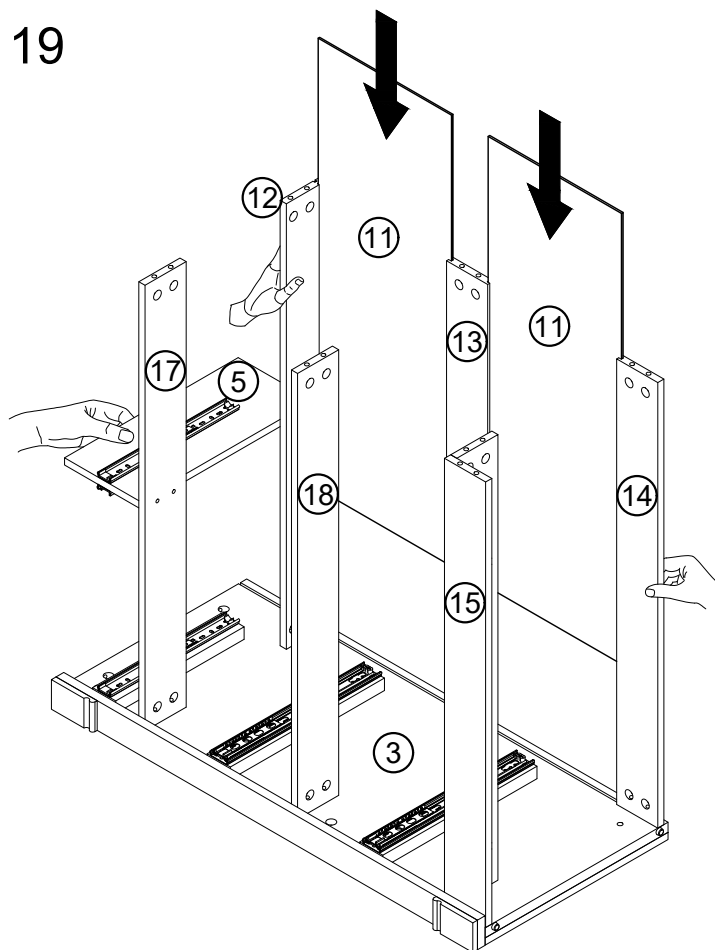


The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

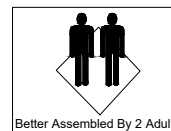

STEP 20

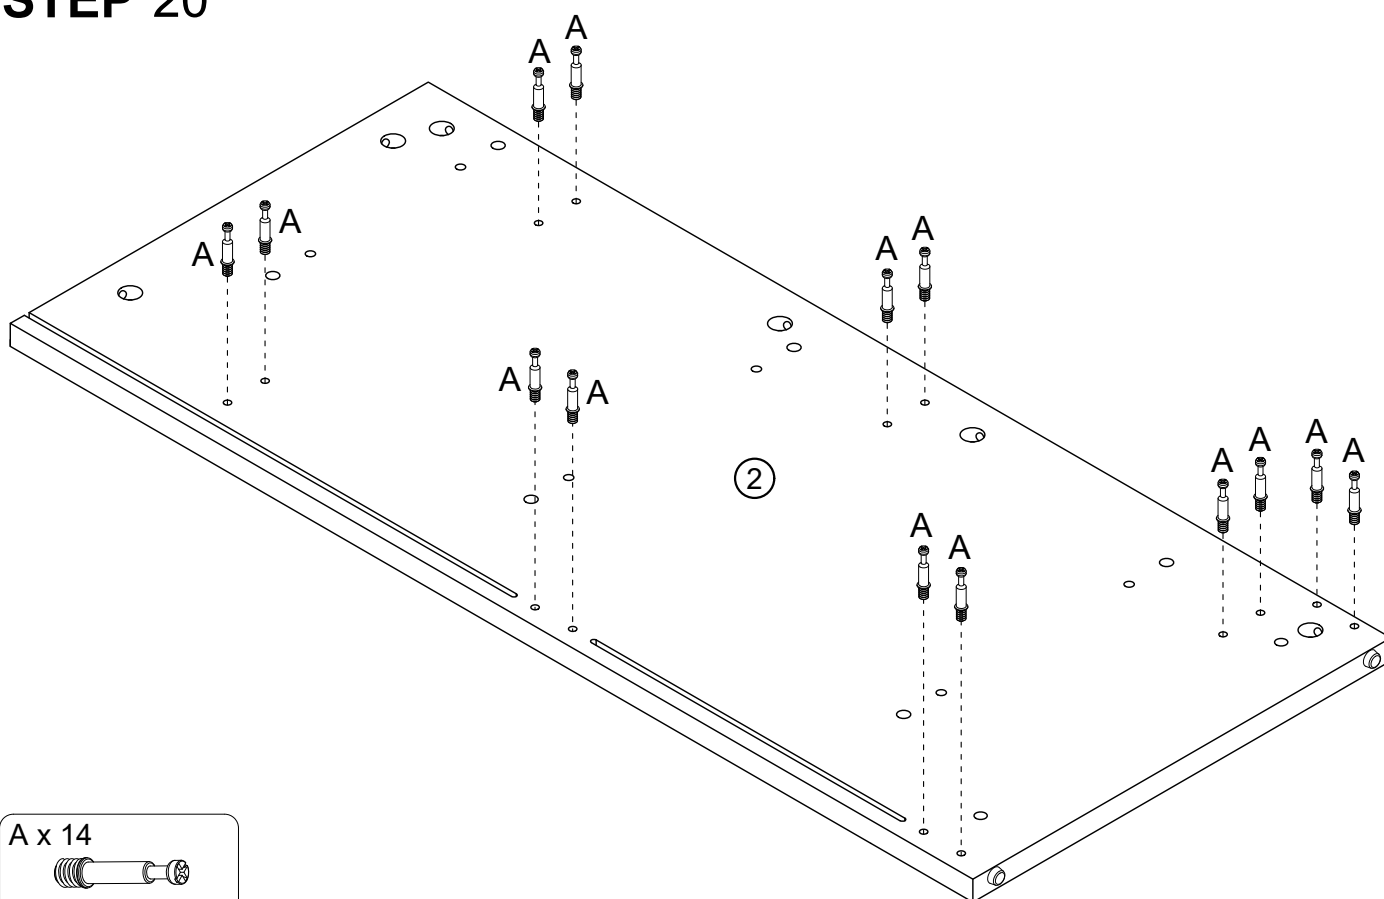


A x 14




INSTALLATION INSTRUCTION

STEP 21

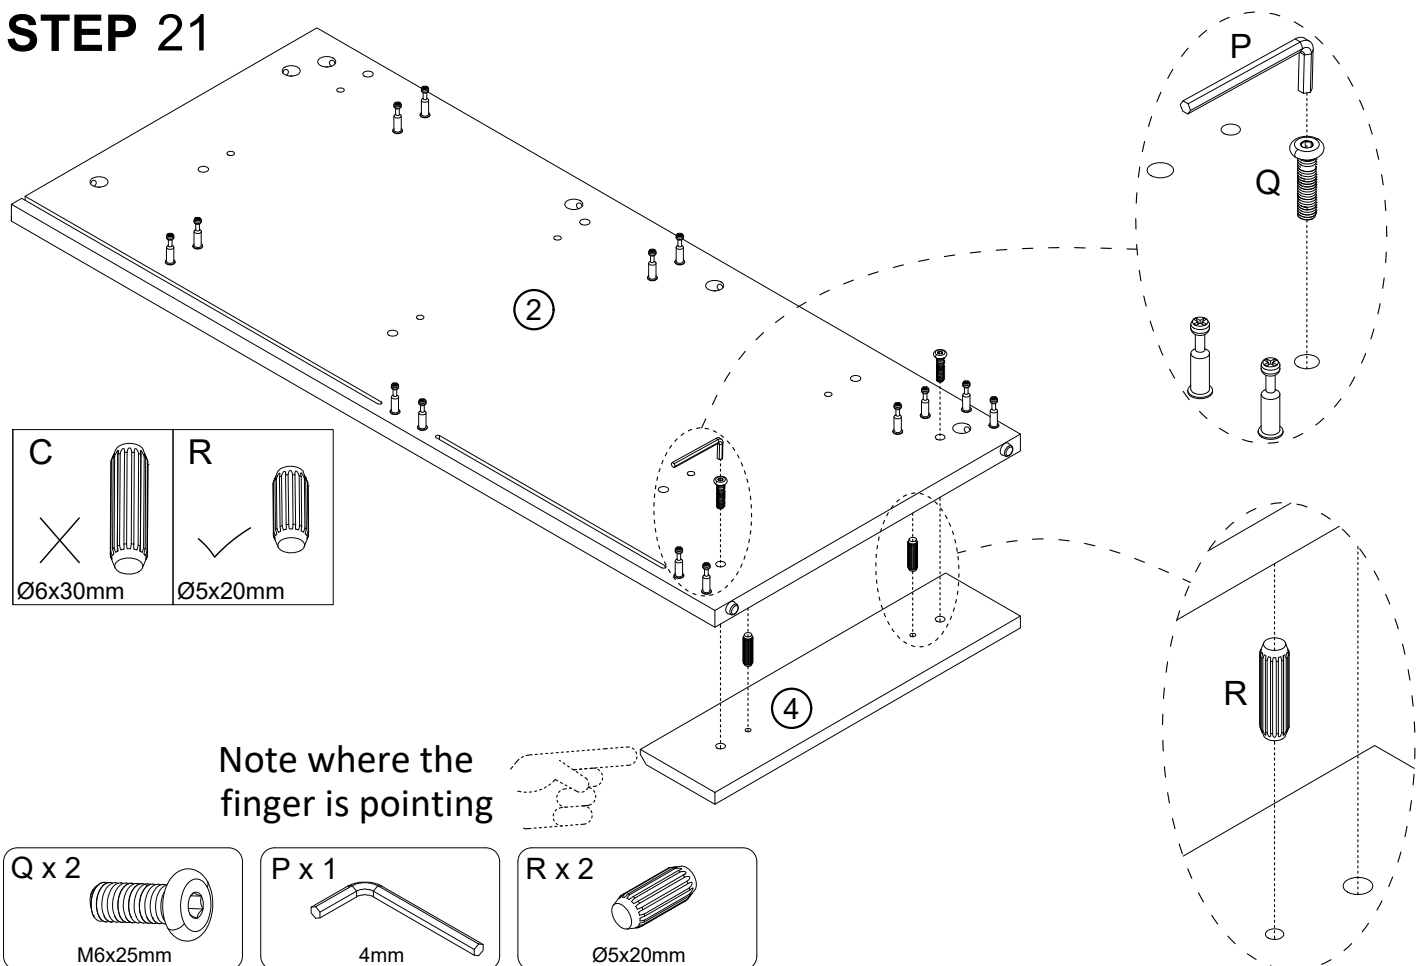


STEP 22


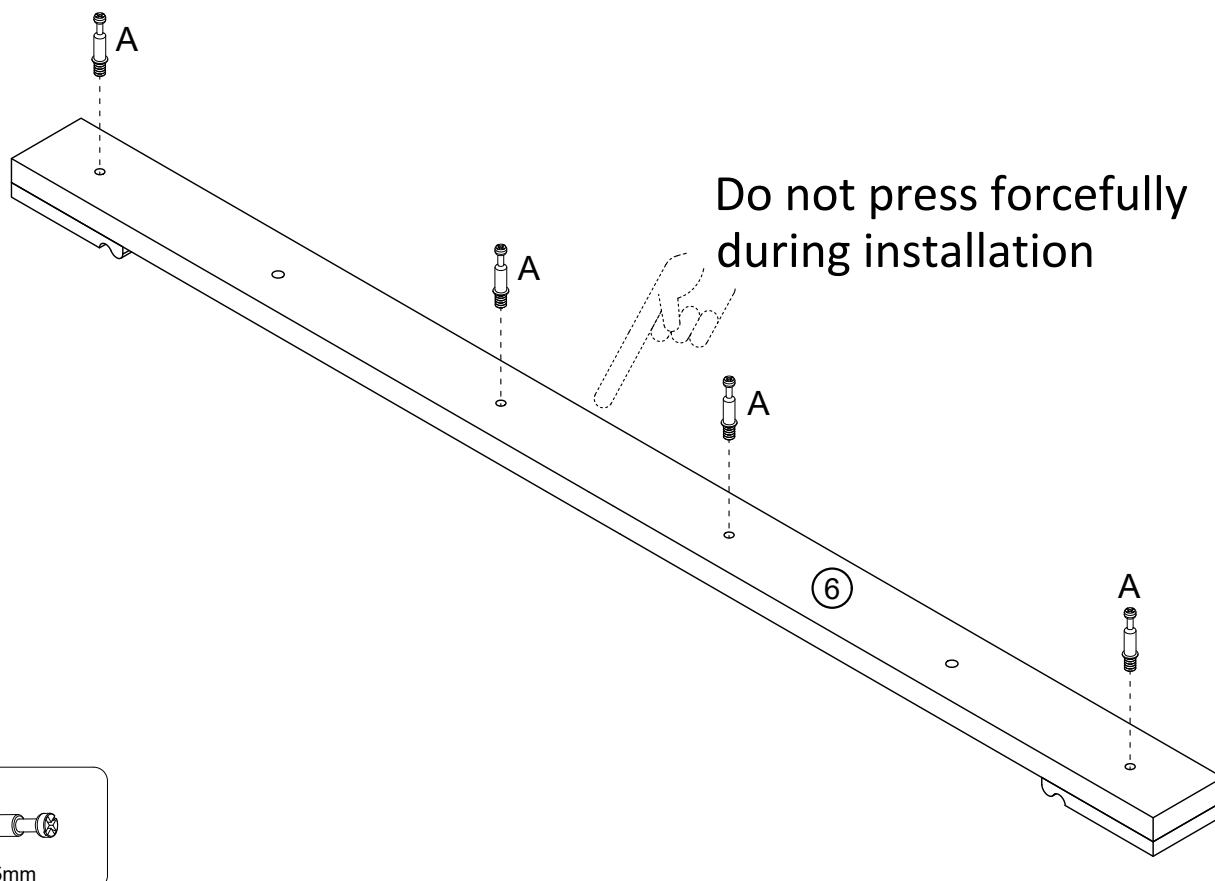


INSTALLATION INSTRUCTION





STEP 23

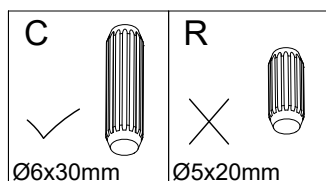

If installation is difficult,
the board can be
assembled vertically

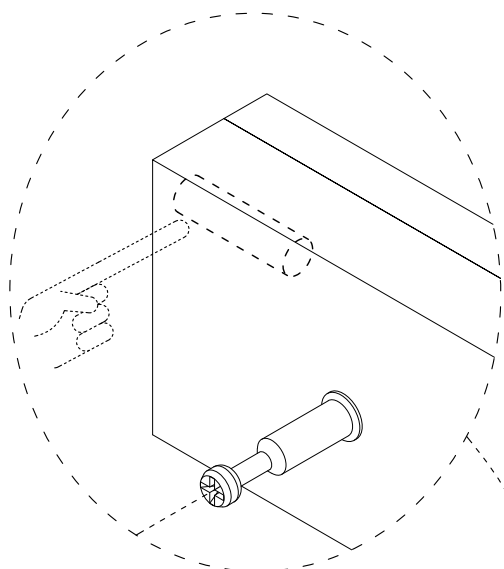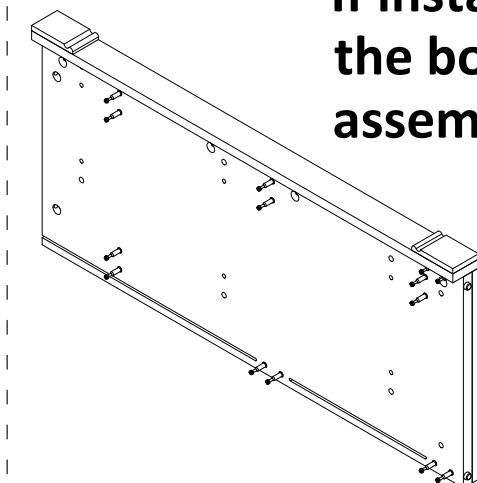







Note where the
finger is pointing

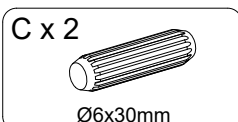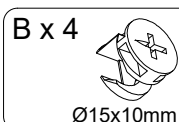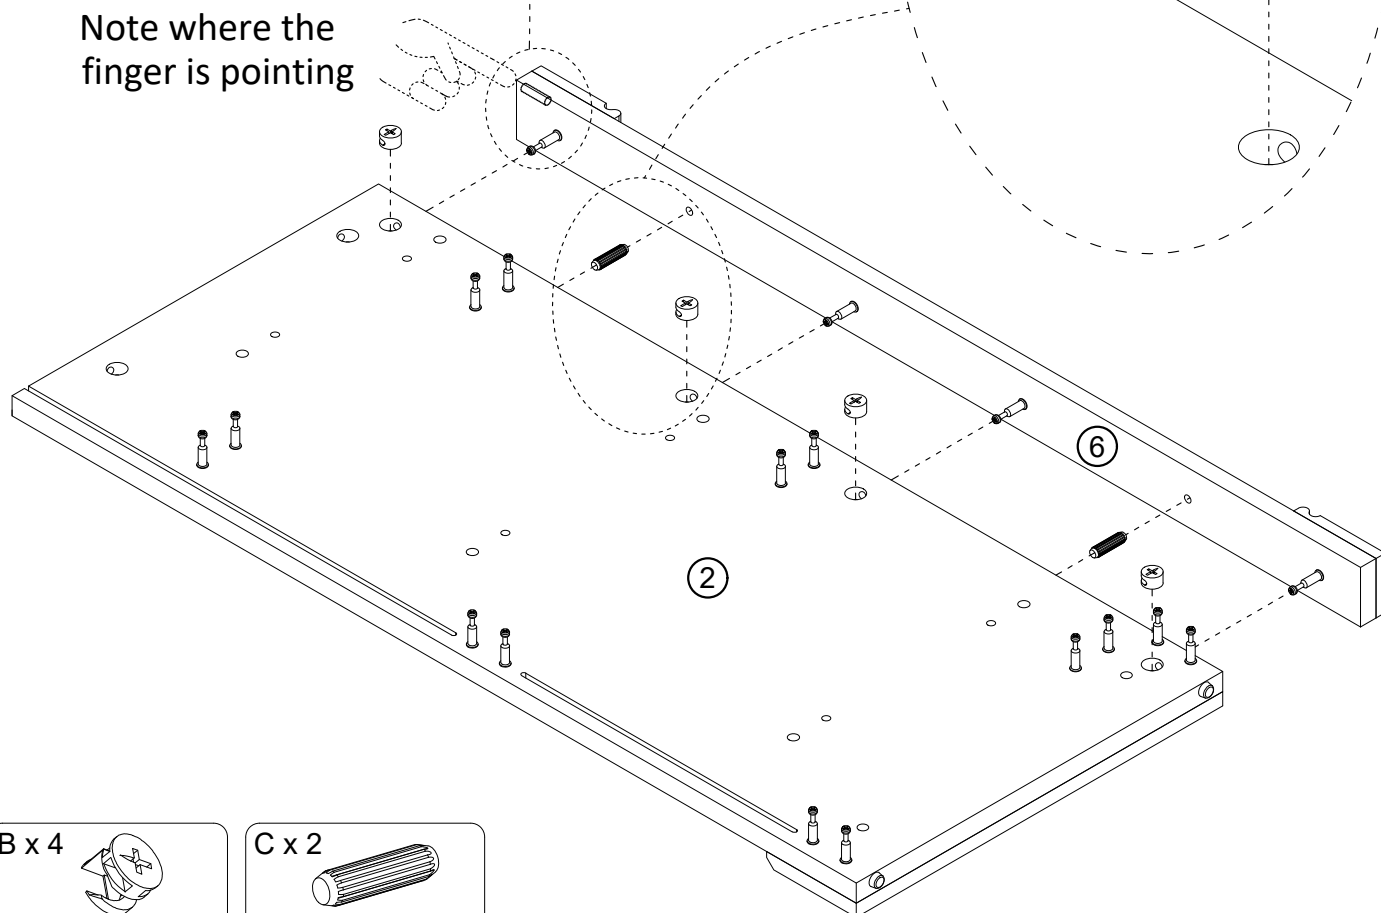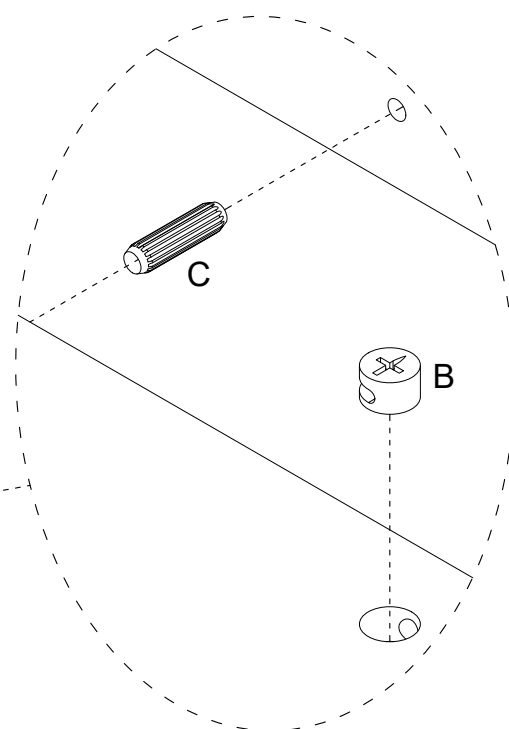


INSTALLATION INSTRUCTION

STEP 24

Note where the finger is pointing

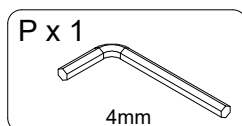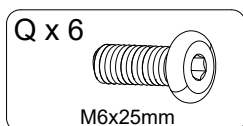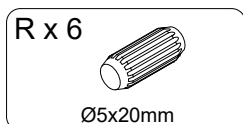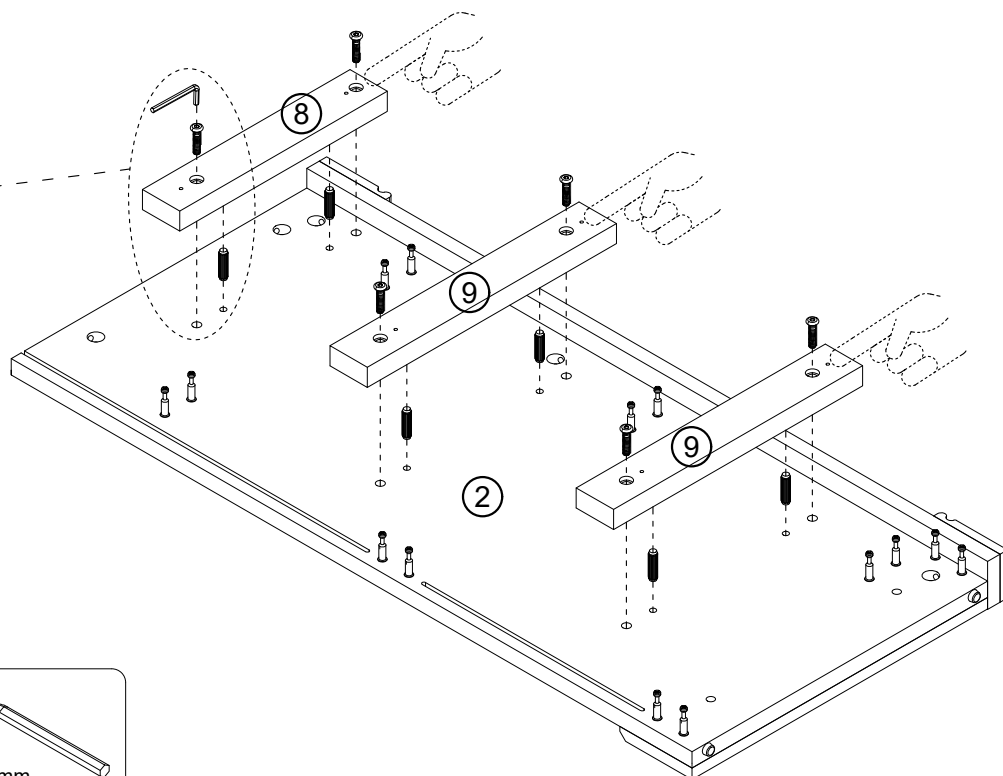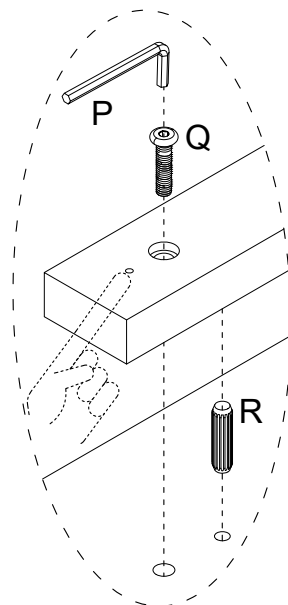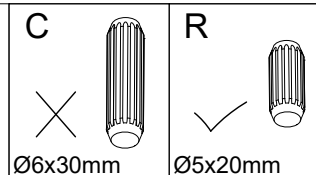





STEP 25

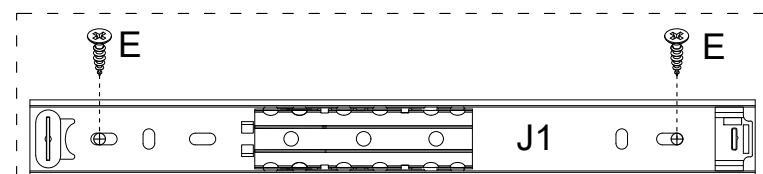

Back

Front


Back Front

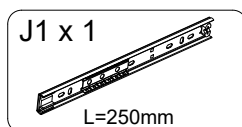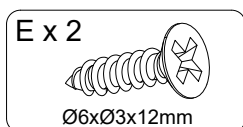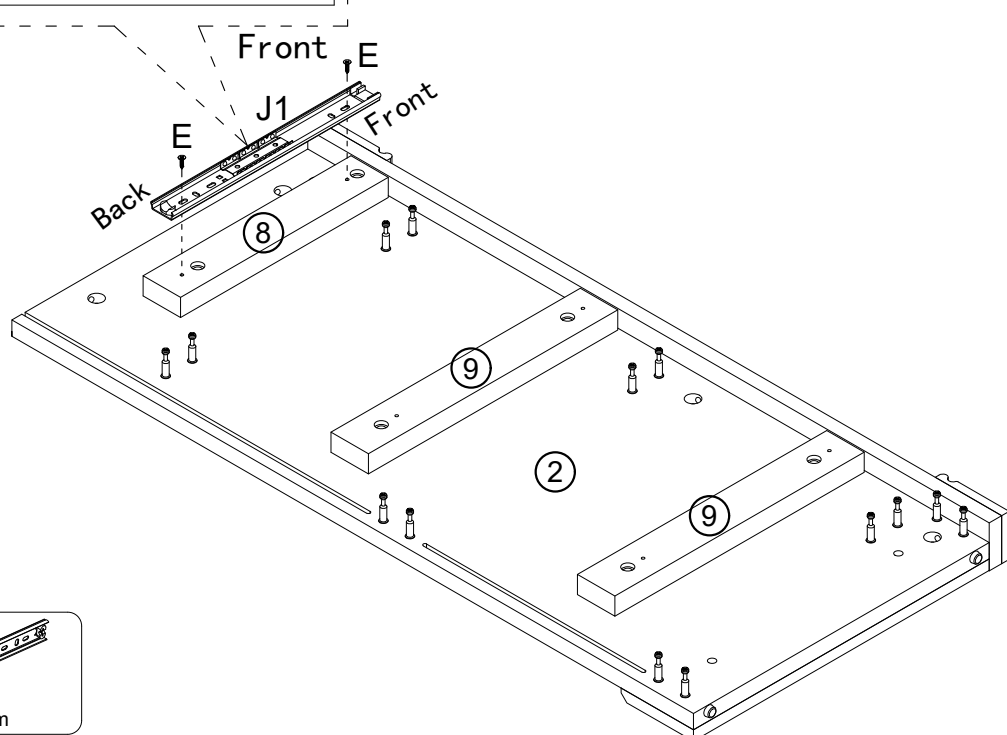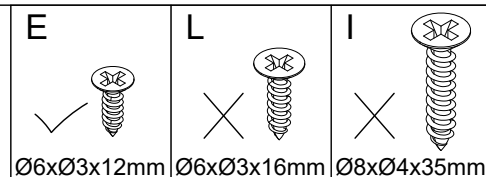


INSTALLATION INSTRUCTION

STEP 26


The backside of the slide rail shown in the picture is convenient for checking the hole positions

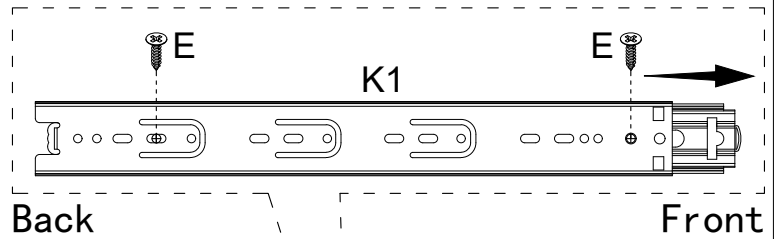



During installation, slide the track in the direction indicated by the arrow until it locks into place

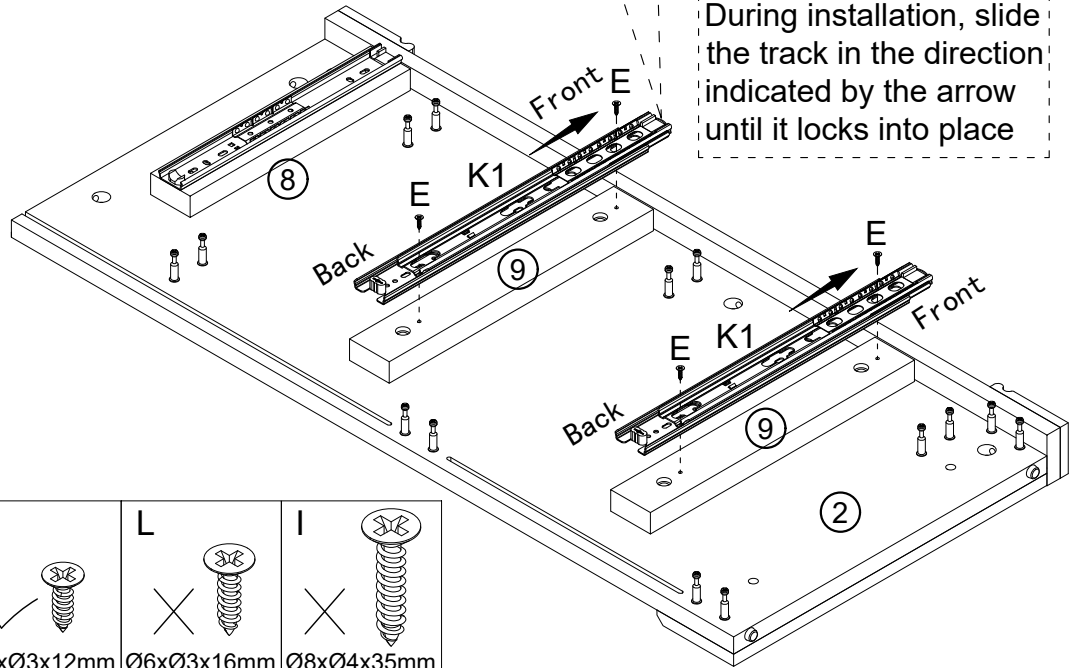

K1 x 2





E x 4

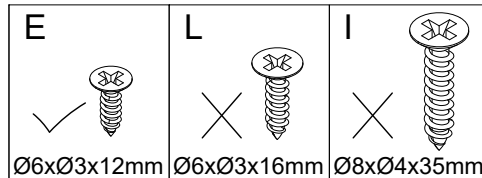



STEP 27

Note where the finger is pointing

The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

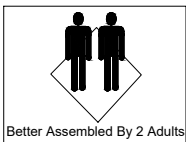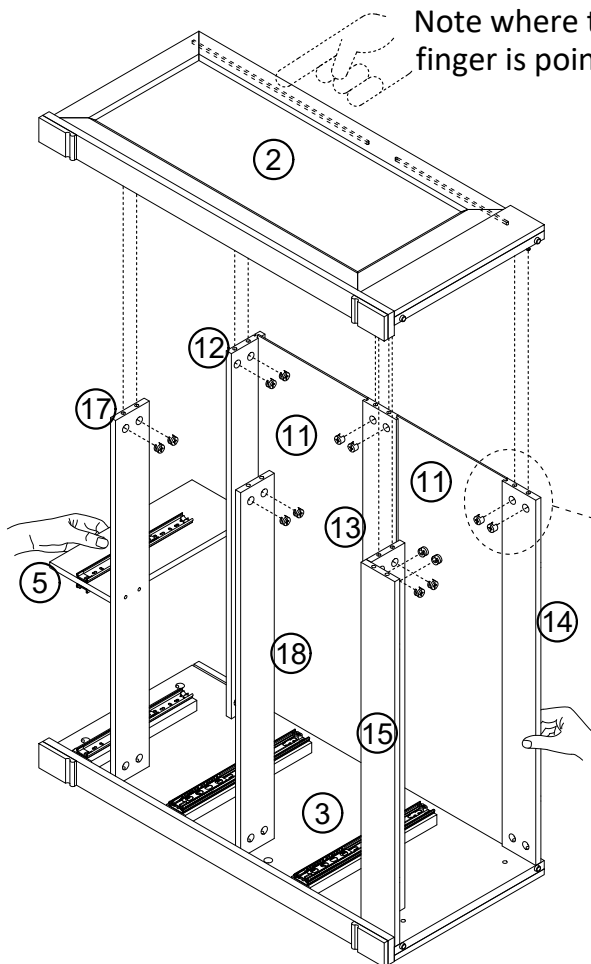


B x 14

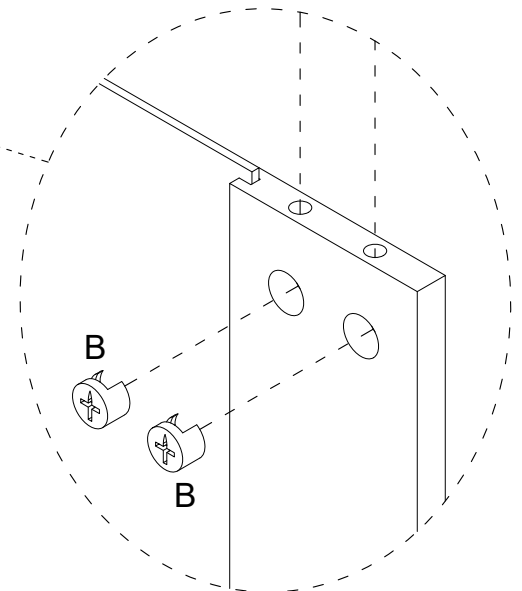


INSTALLATION INSTRUCTION

STEP 28

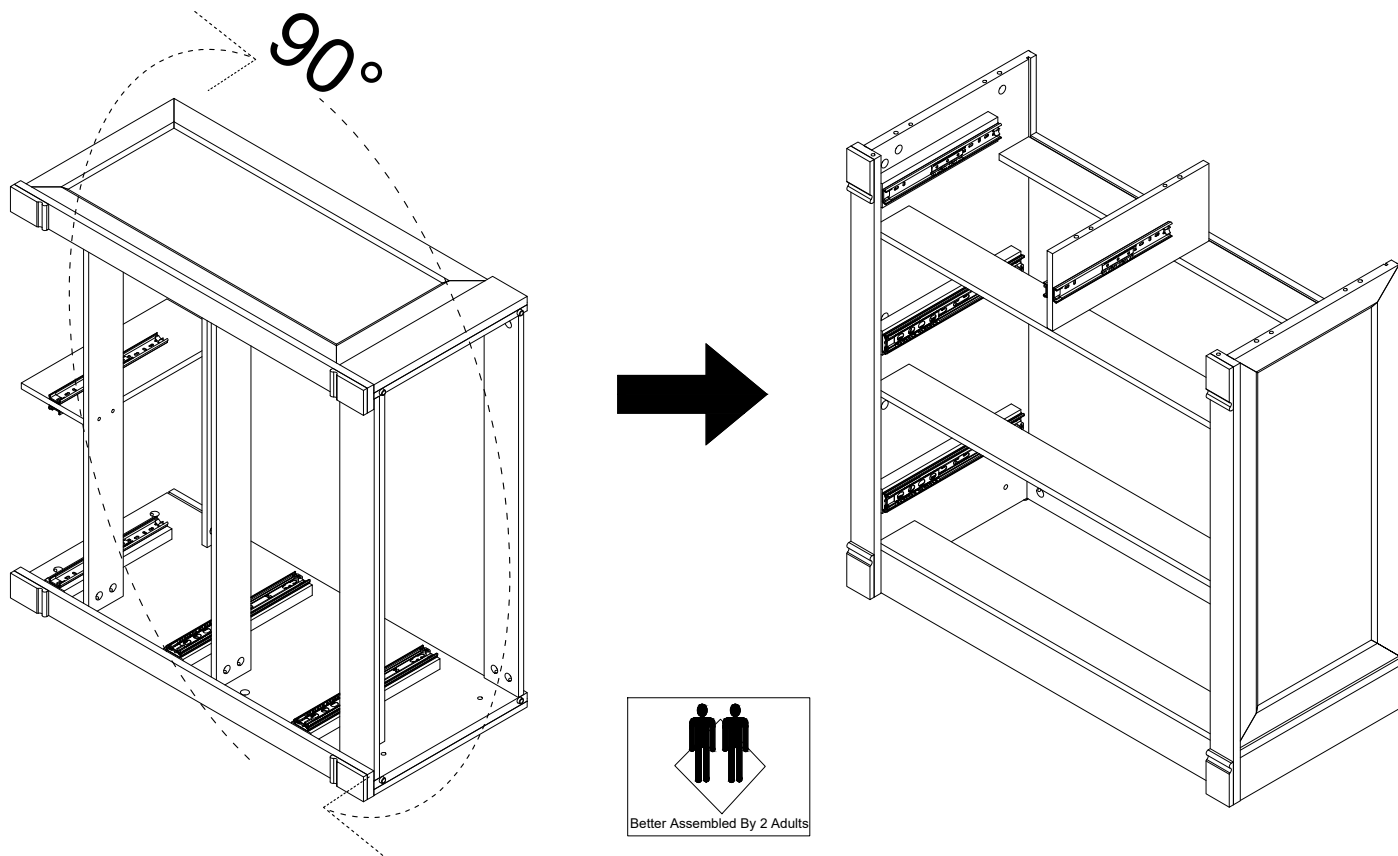

STEP 29

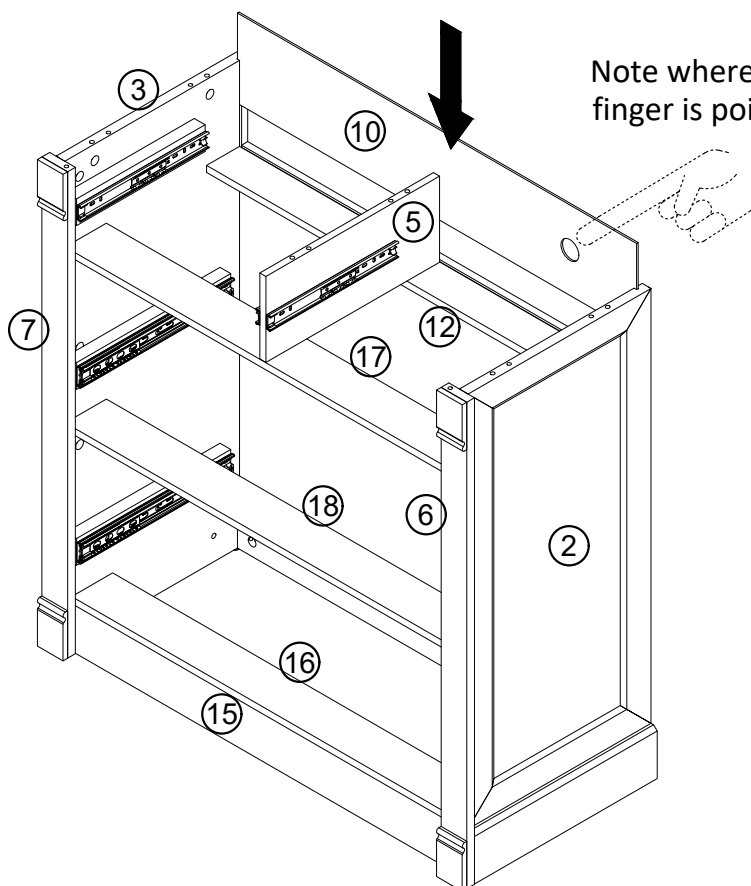


Note where the
finger is pointing


The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

INSTALLATION INSTRUCTION

STEP 30

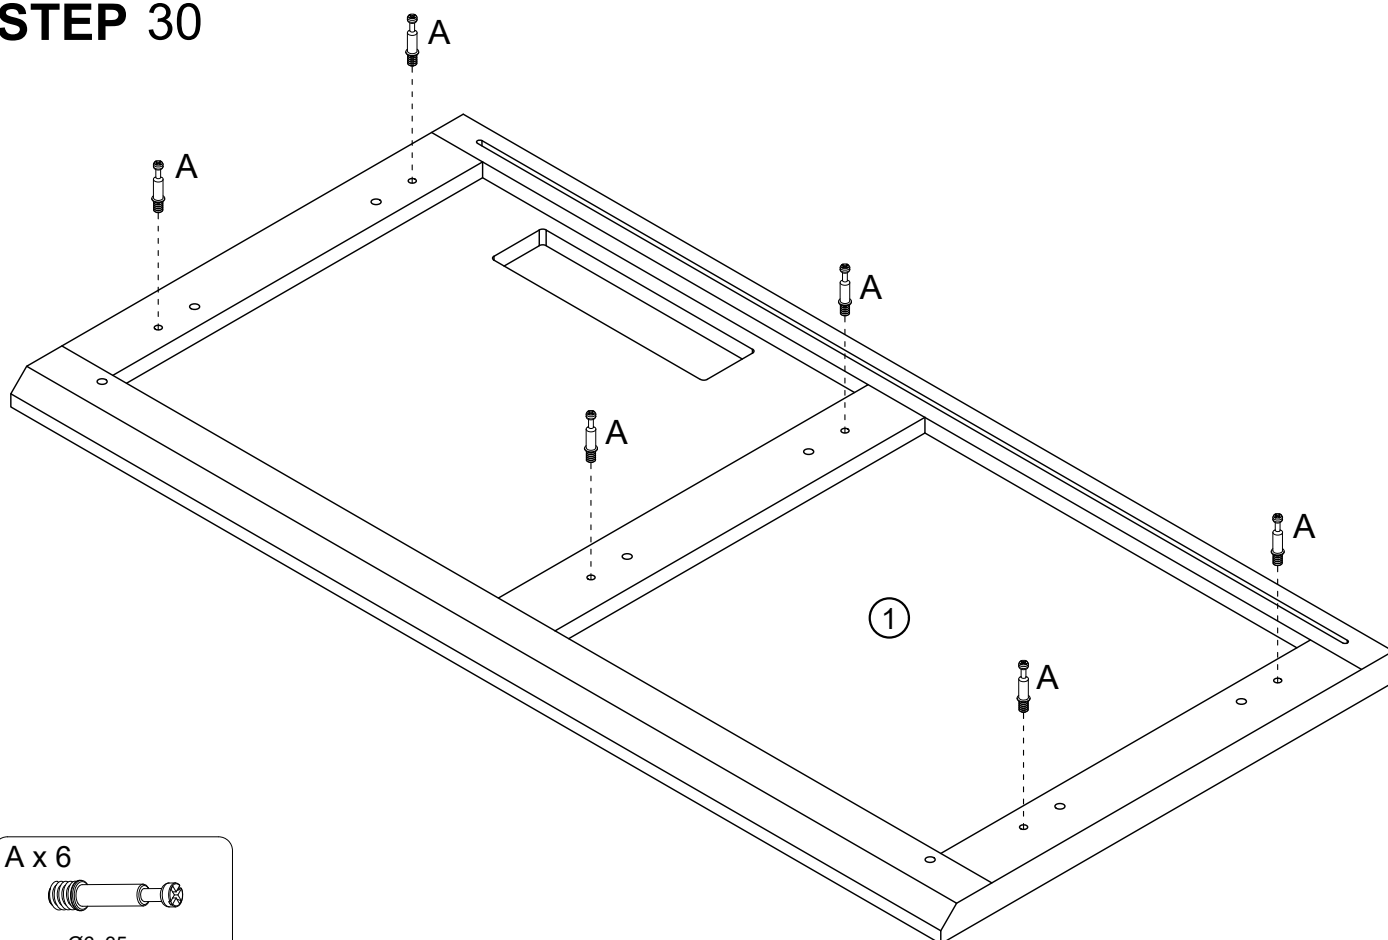


A x 6




Ø6x35mm

STEP 31

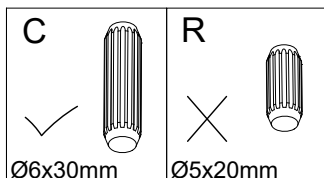

Ø6x30mm


Ø5x20mm

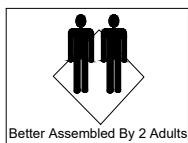

Better Assembled By 2 Adults



C x 8




Ø6x30mm

B x 6





Ø15x10mm

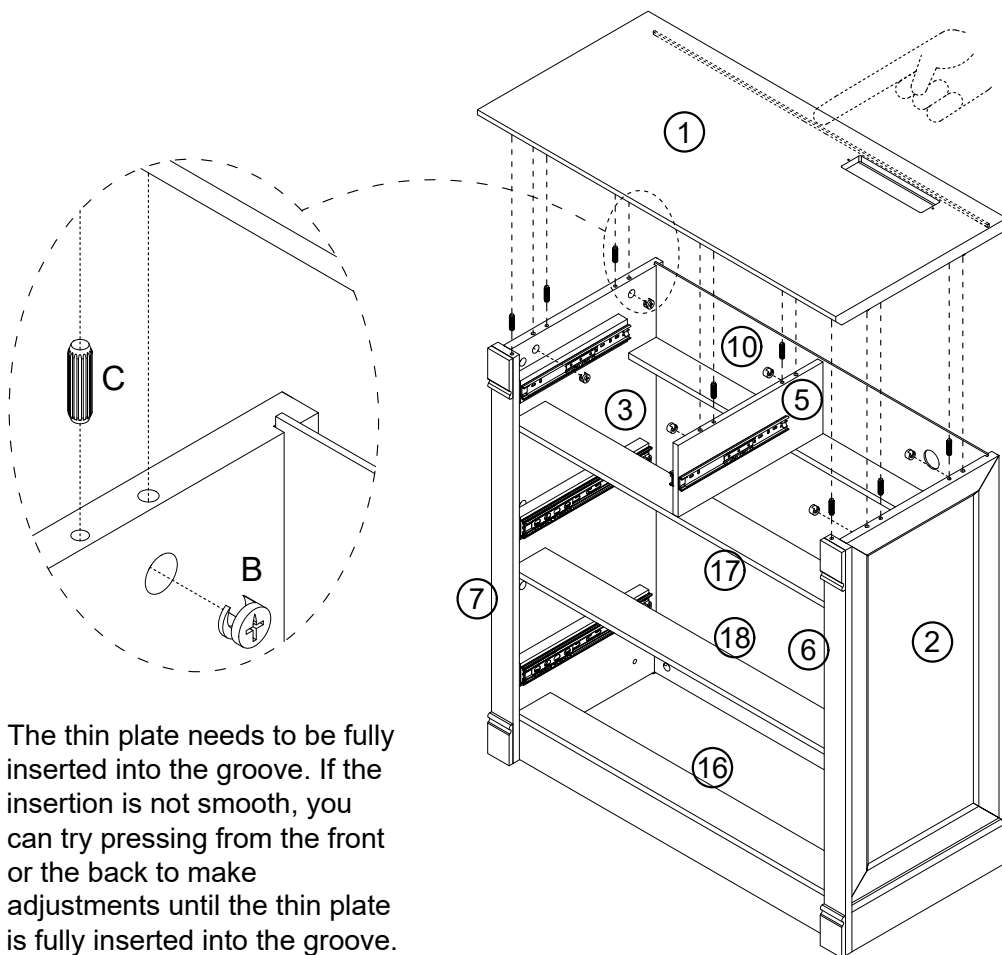


The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

INSTALLATION INSTRUCTION


STEP 32

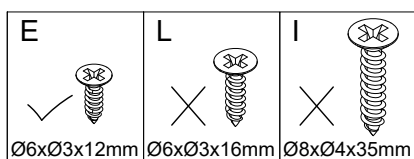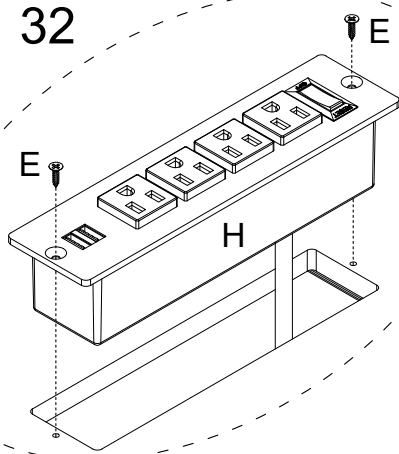

Before installation thread the power cord through this hole

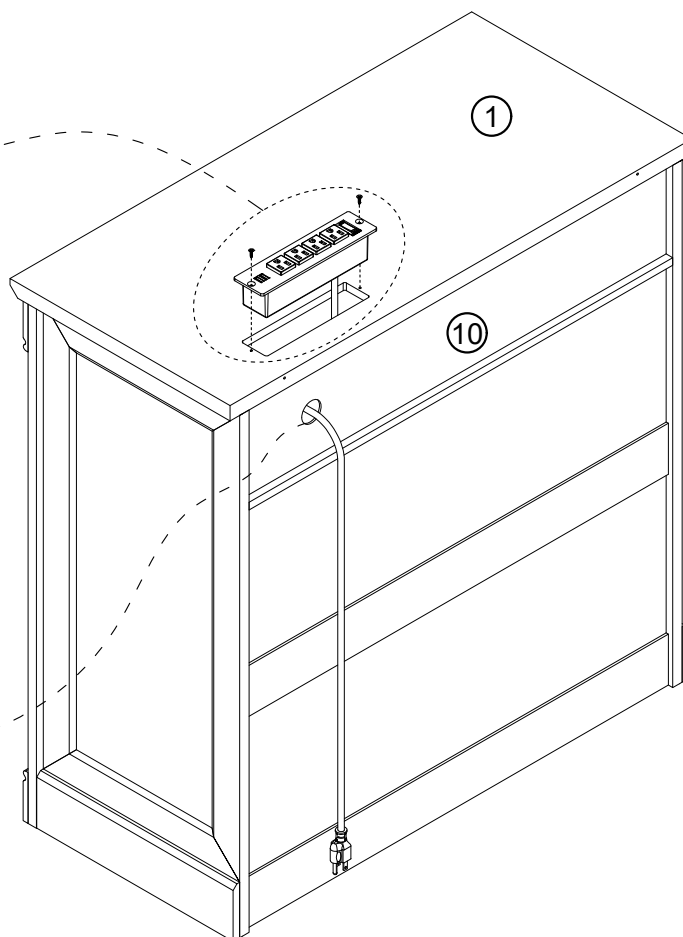



E x 2




H x 1




STEP 33

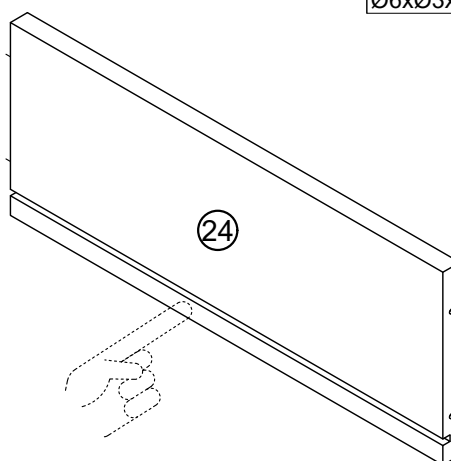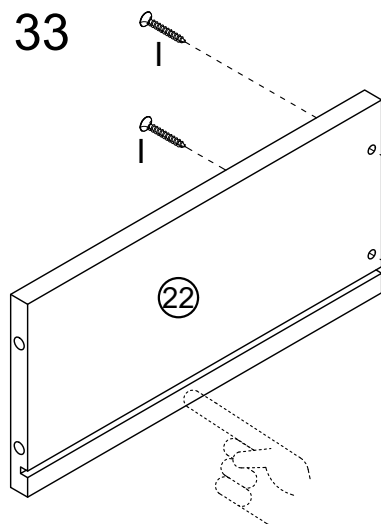


x2

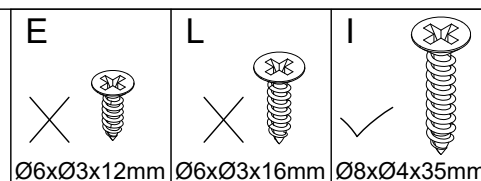

Pay attention to the direction of the slots on the board

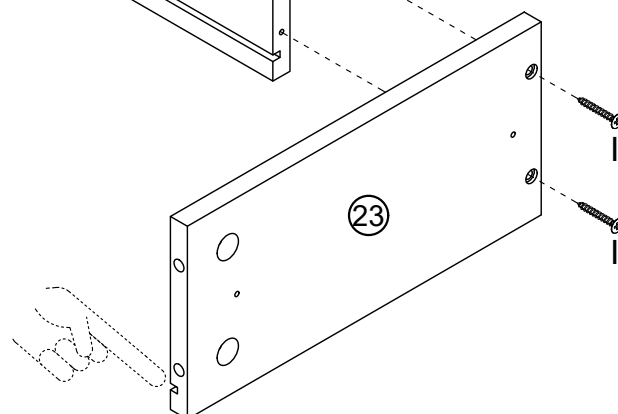


I x 8



INSTALLATION INSTRUCTION


STEP 34

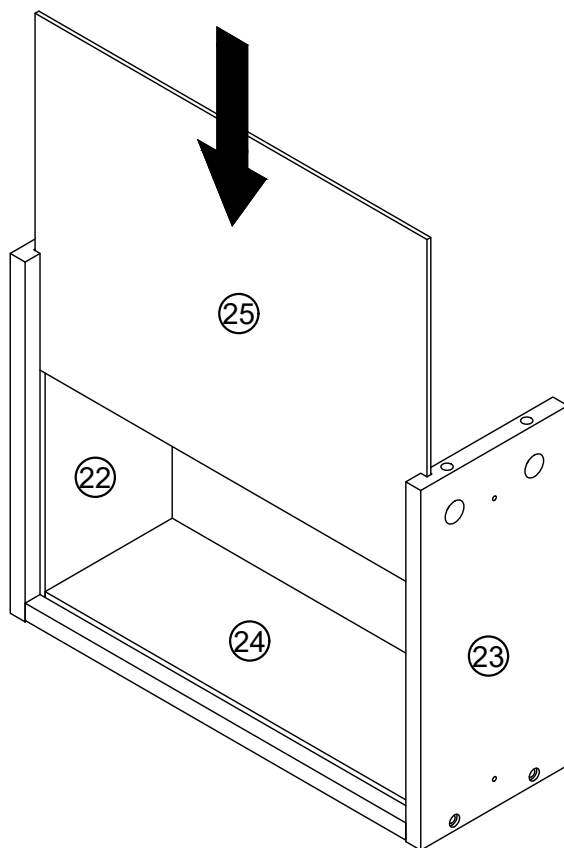


The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

x2

STEP 35

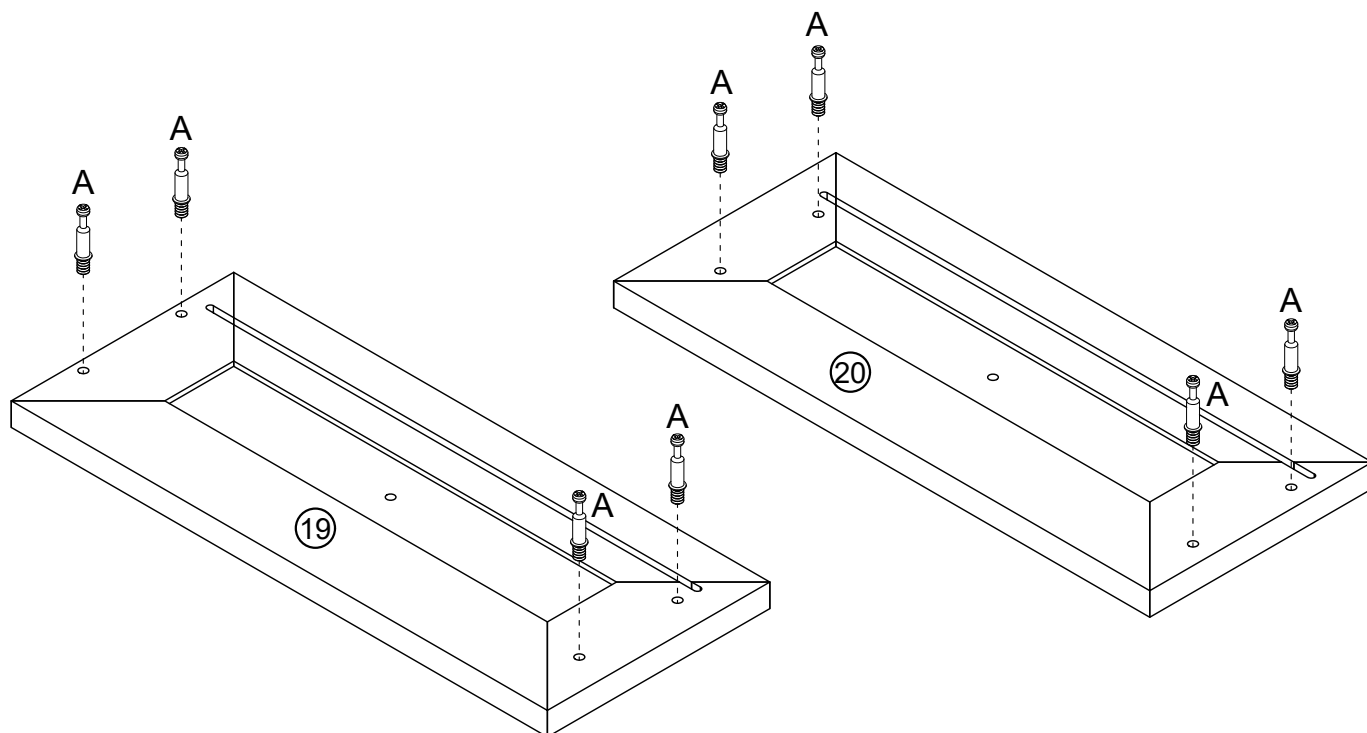



A x 8



Ø6x35mm

INSTALLATION INSTRUCTION



STEP 36

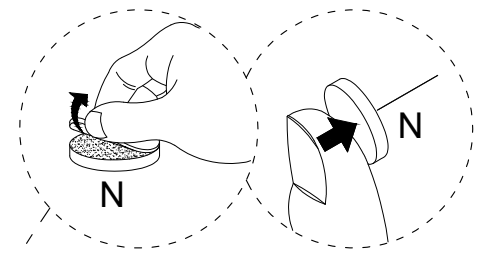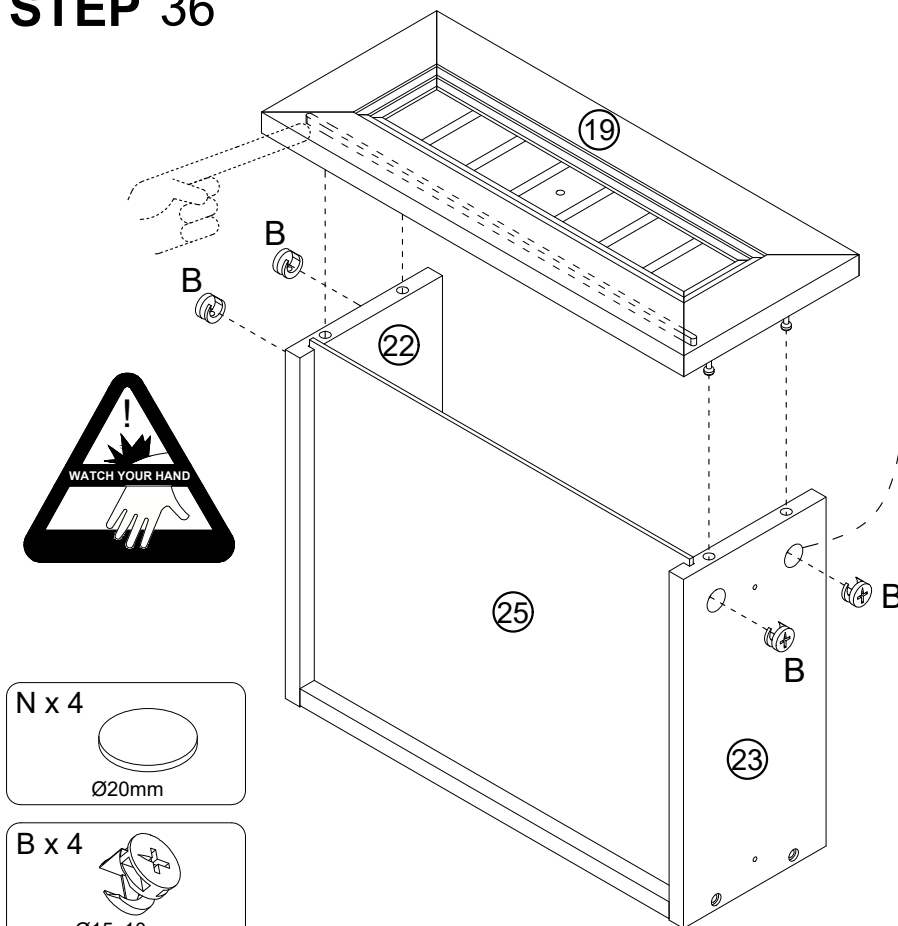

Cover the visible hole with a cap

The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

STEP 37

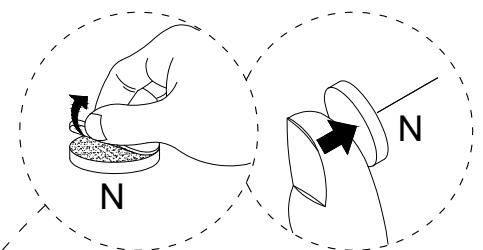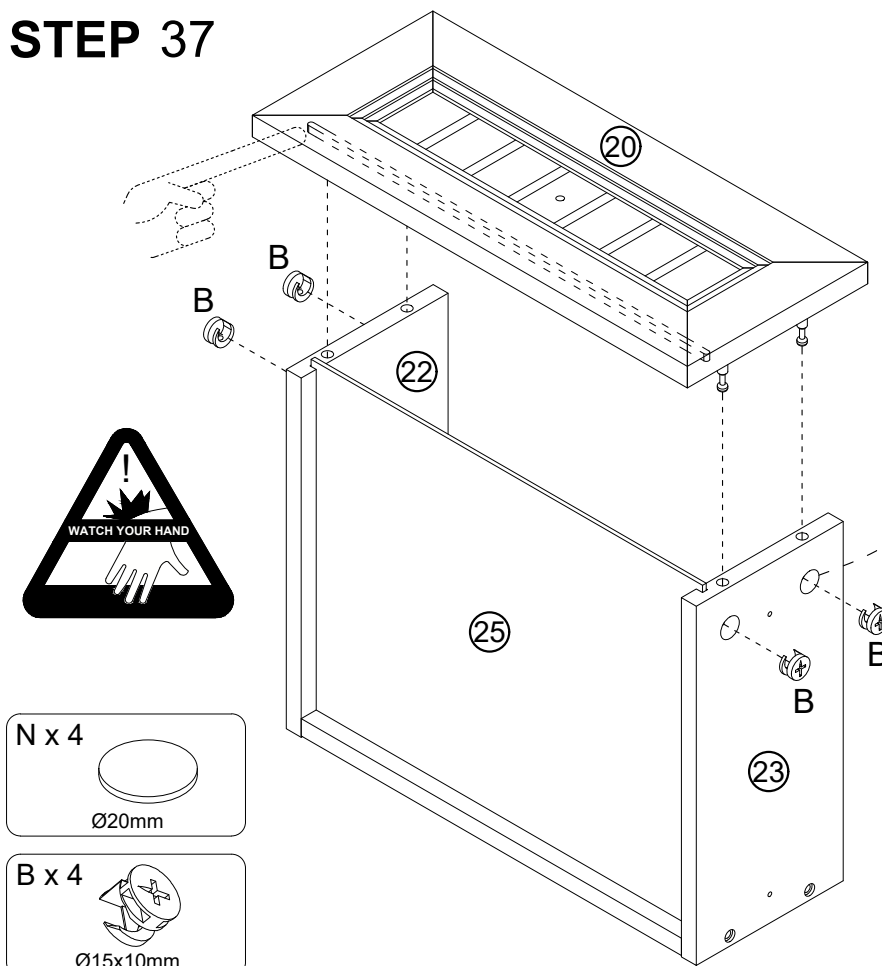


Cover the visible hole with a cap

The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

INSTALLATION INSTRUCTION

STEP 38

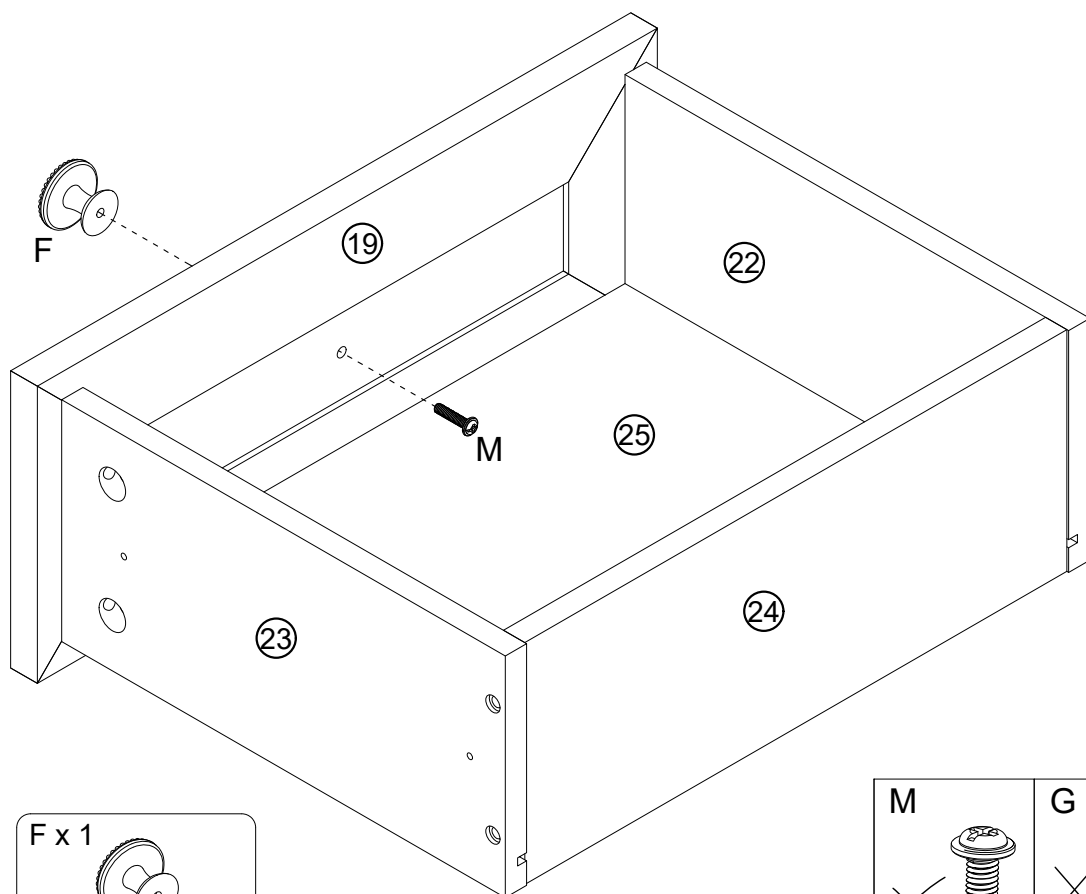

M x 1



M4x10mm

F x 1



M




M4x10mm

G



M4x20mm

STEP 39

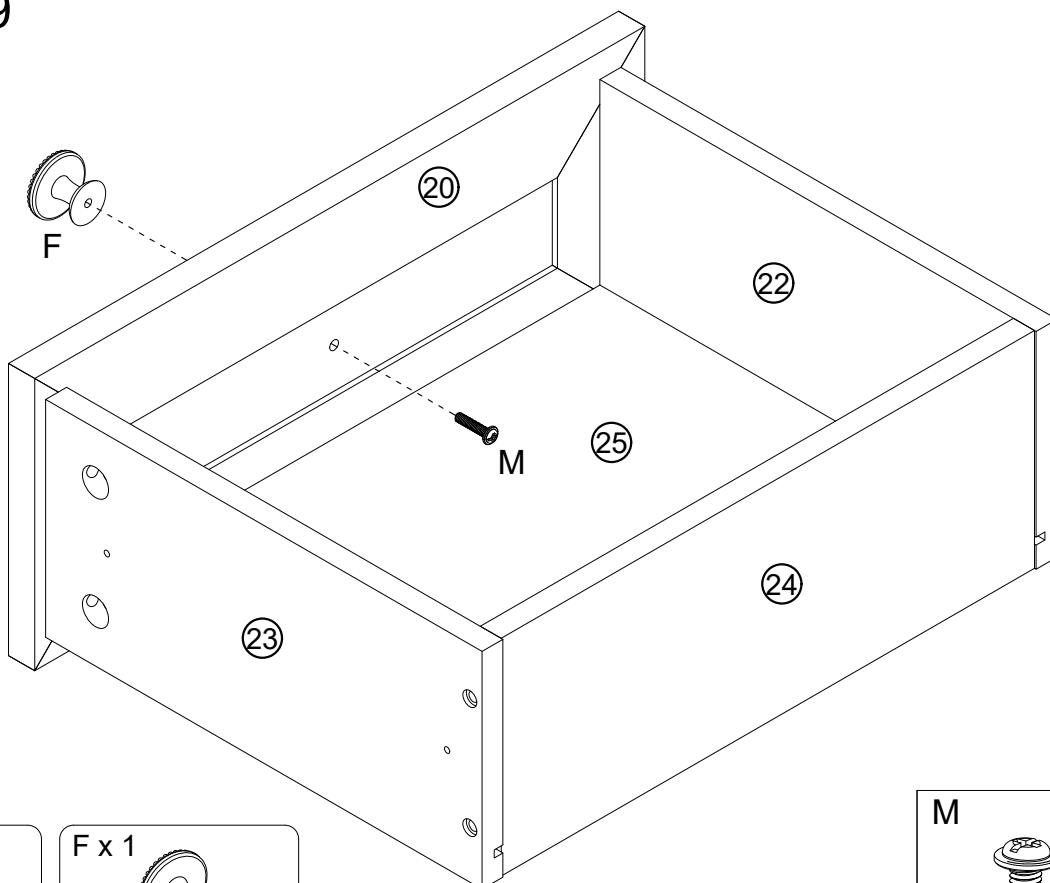

M x 1



M4x10mm

F x 1



M



M4x10mm


G




M4x20mm

INSTALLATION INSTRUCTION

STEP 40

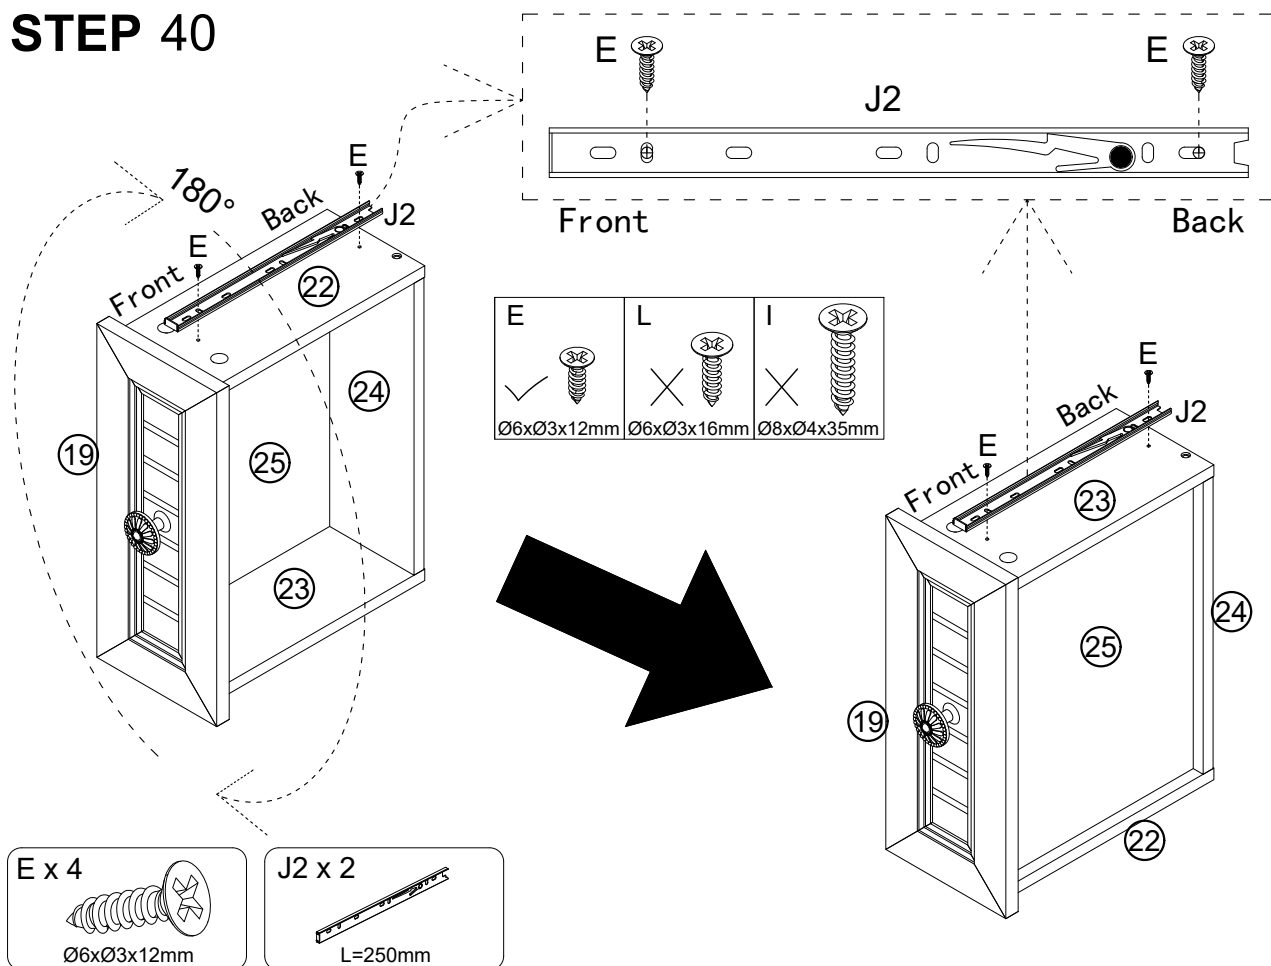


STEP 41

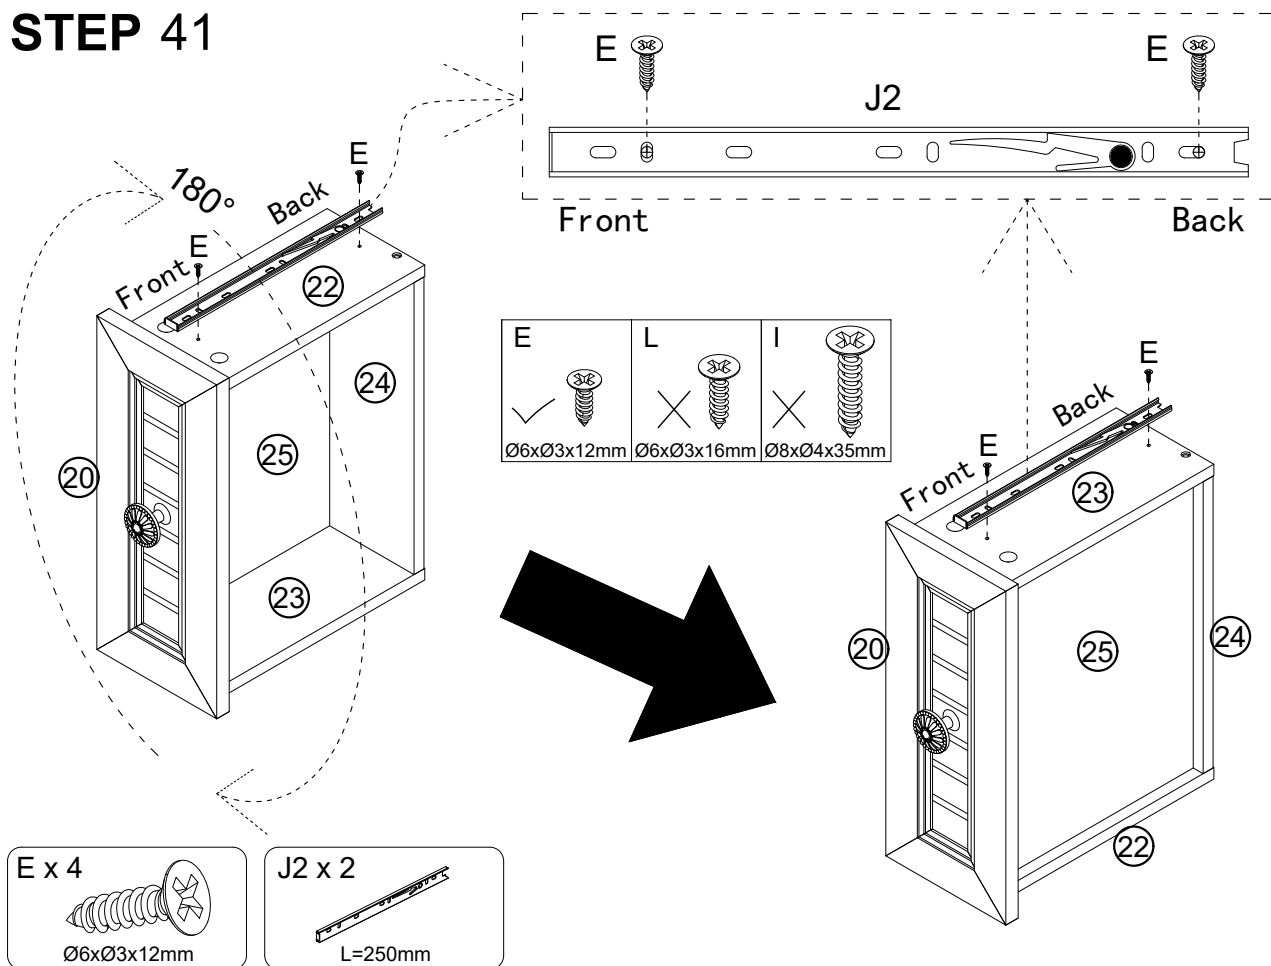


INSTALLATION INSTRUCTION

STEP 42

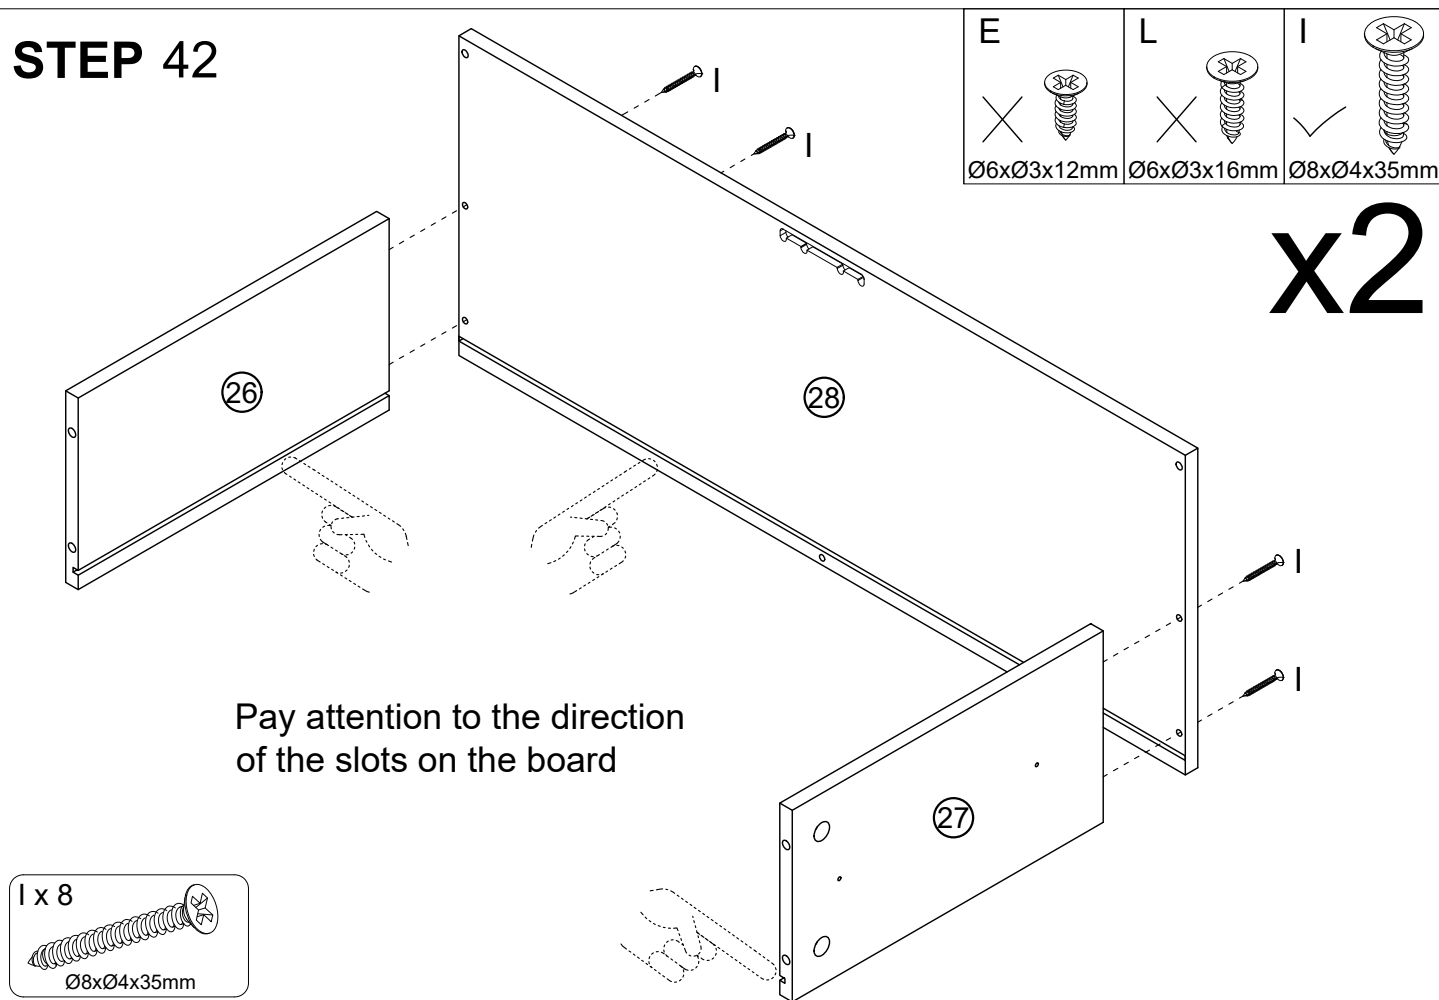

STEP 43

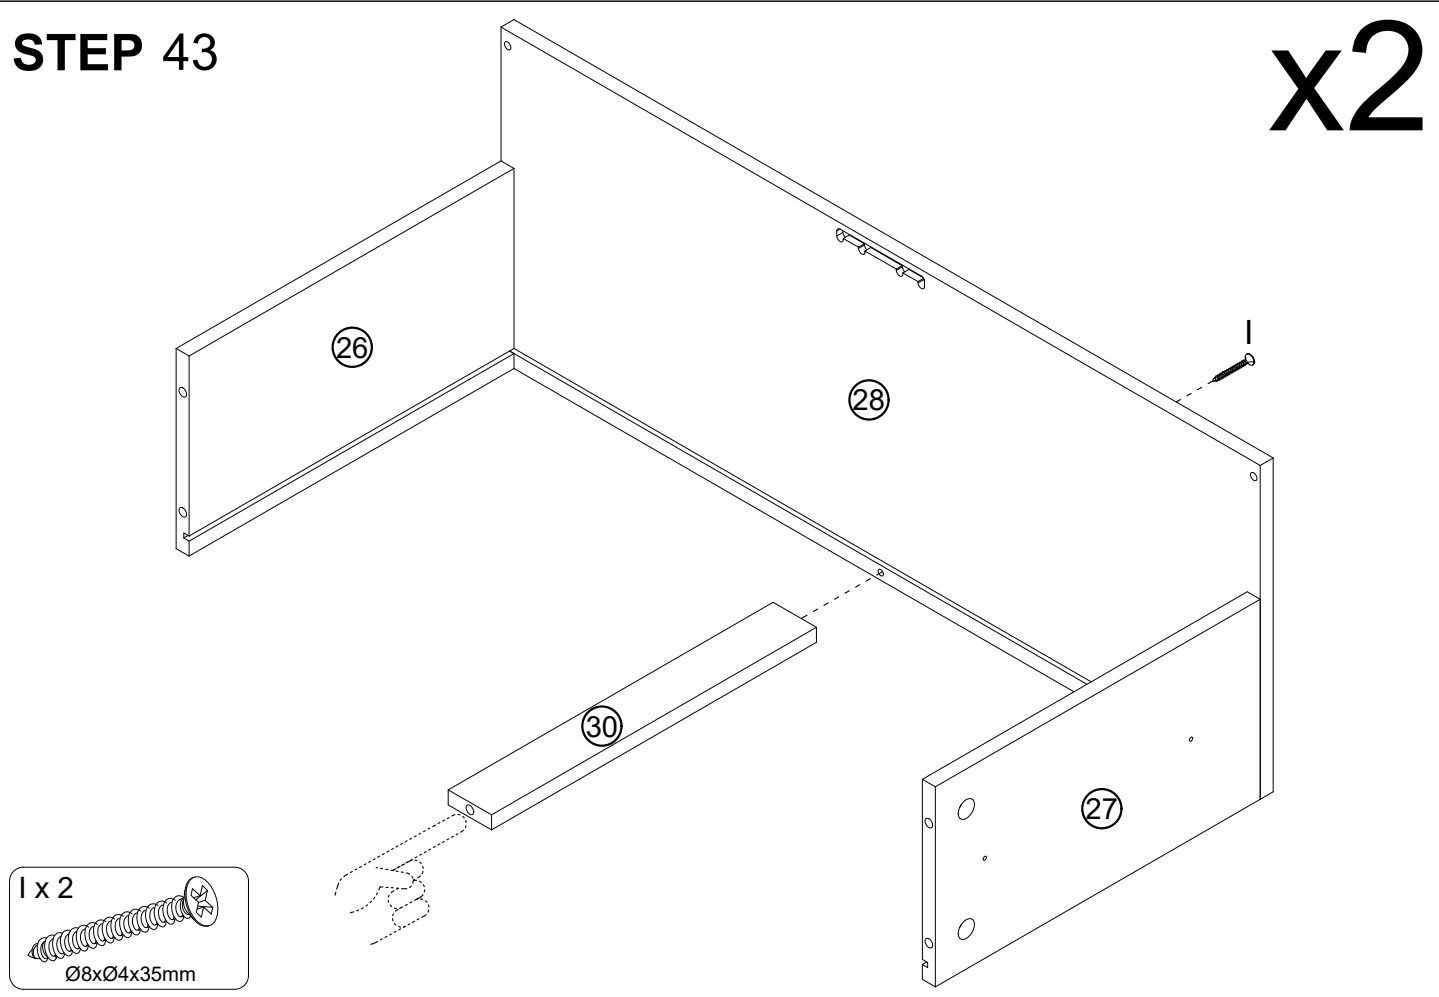


INSTALLATION INSTRUCTION

STEP 44


The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

Notice that this hole is exposed

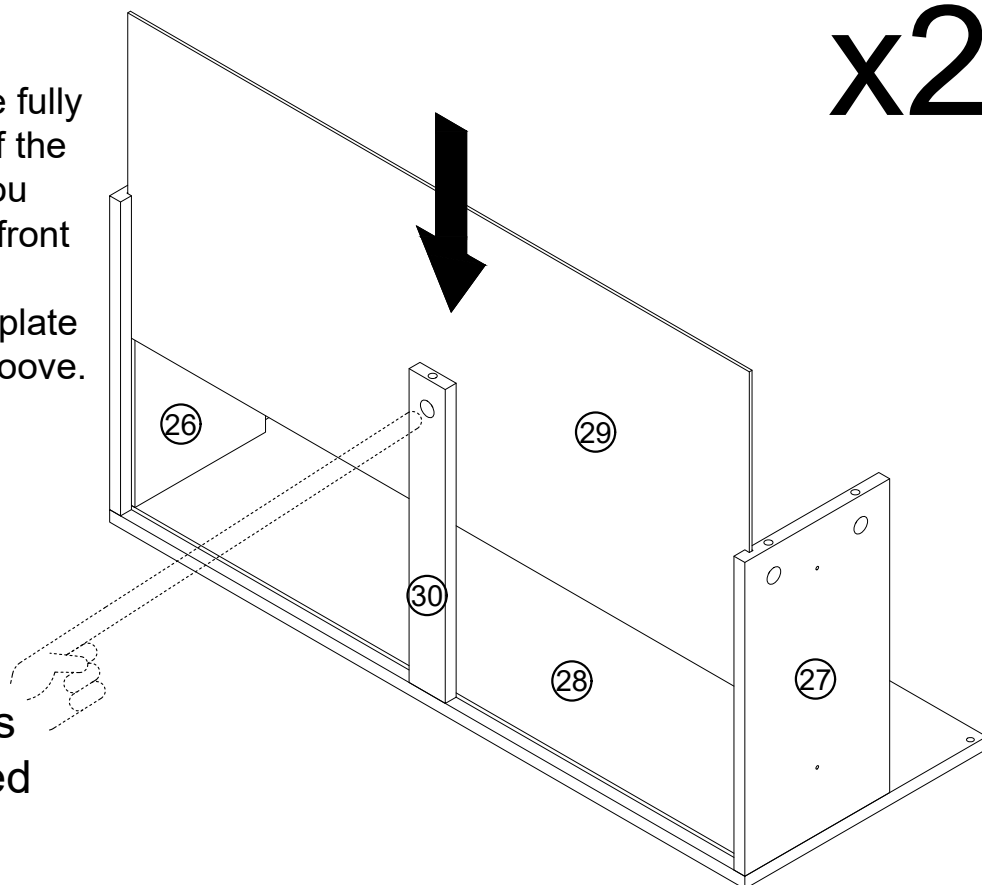


STEP 45

x2

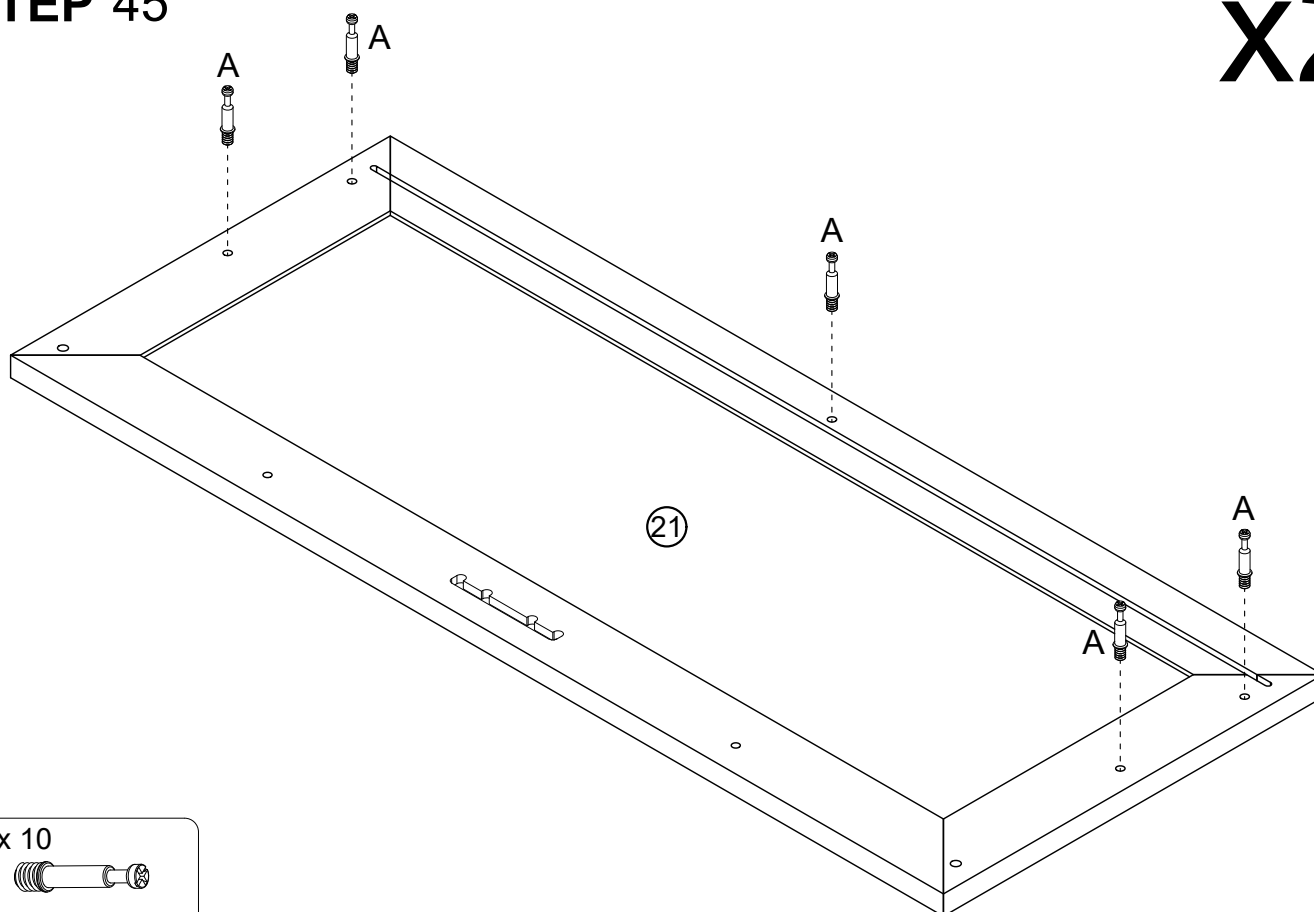

A x 10



Ø6x35mm

INSTALLATION INSTRUCTION

STEP 46

x2



N x 10



Ø20mm

B x 10


Ø15x10mm

T x 4

L=310mm

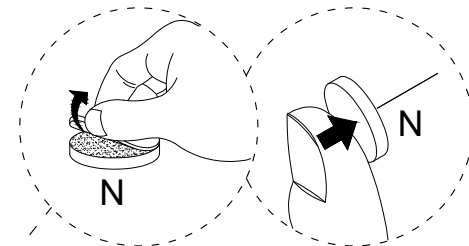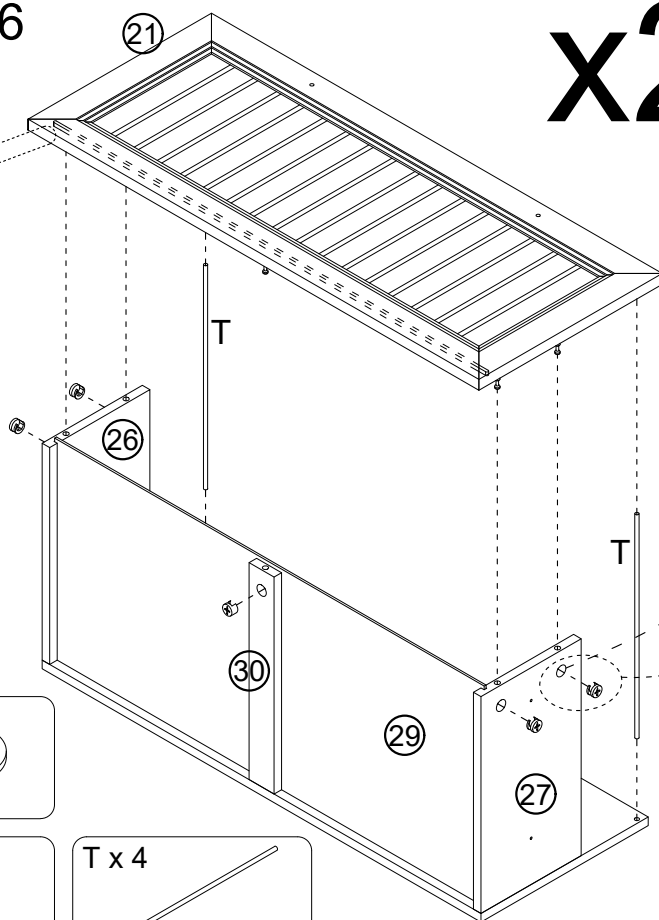


Cover the visible hole with a cap

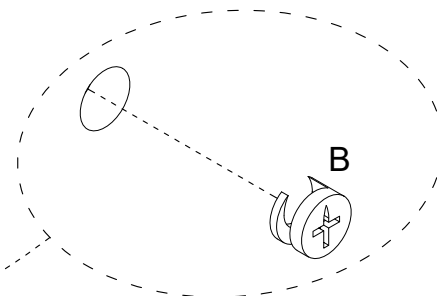

The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

STEP 47

x2

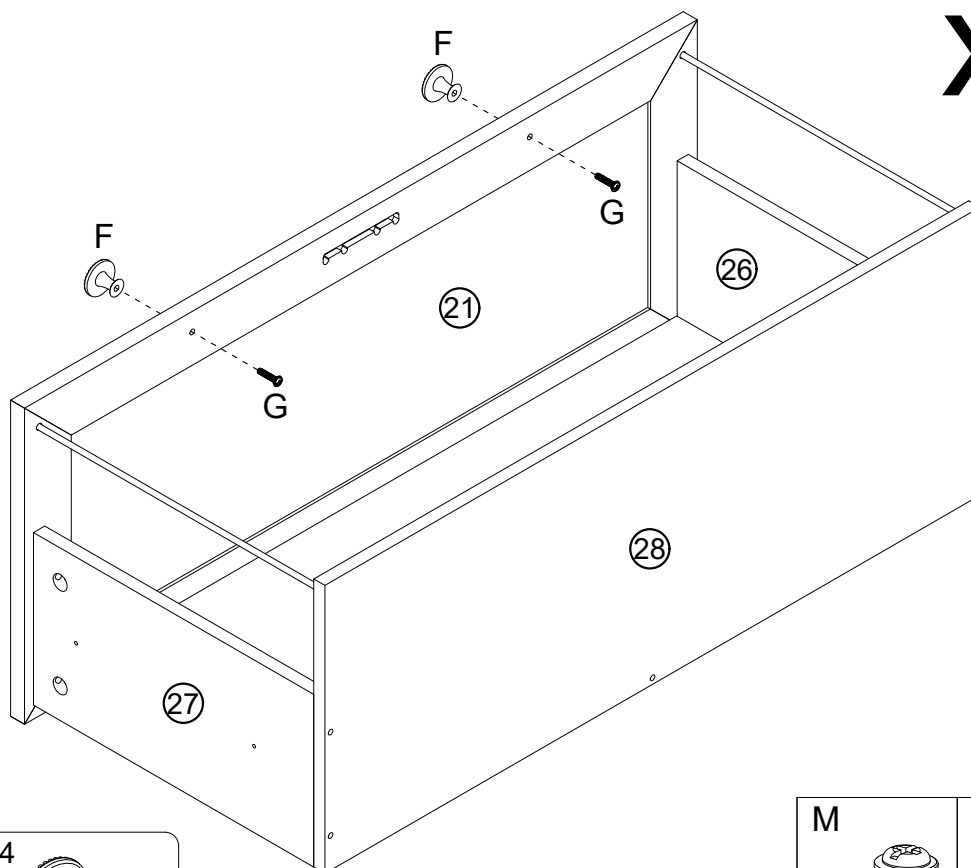

G x 4

M4x20mm


F x 4

M



M4x10mm




G




M4x20mm

INSTALLATION INSTRUCTION


STEP 48

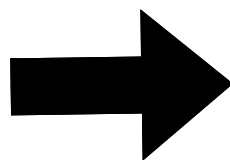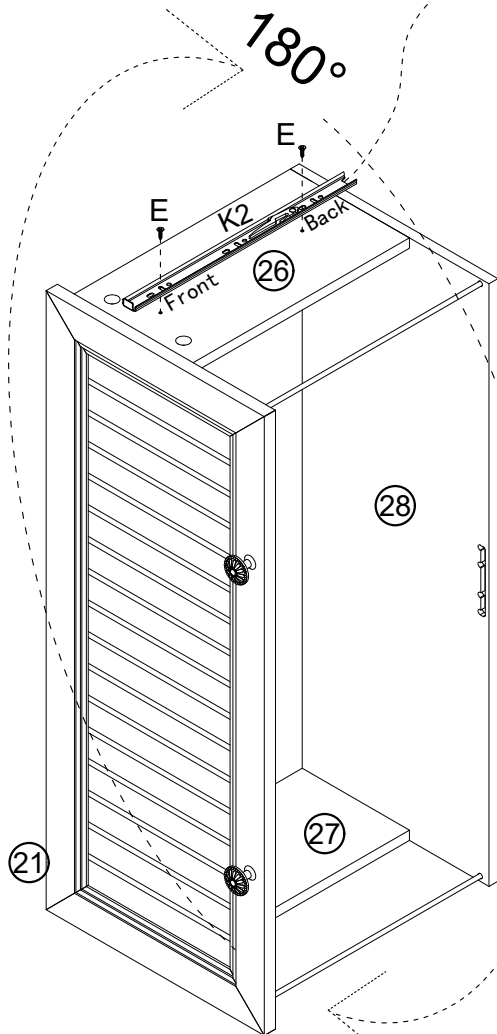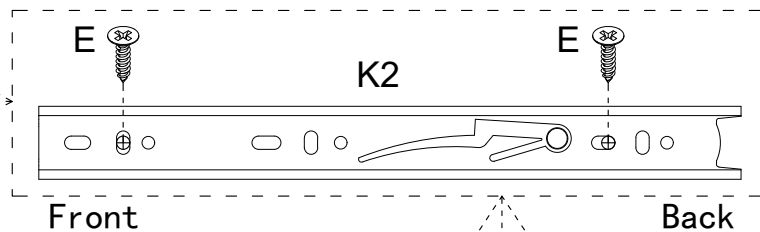

x2

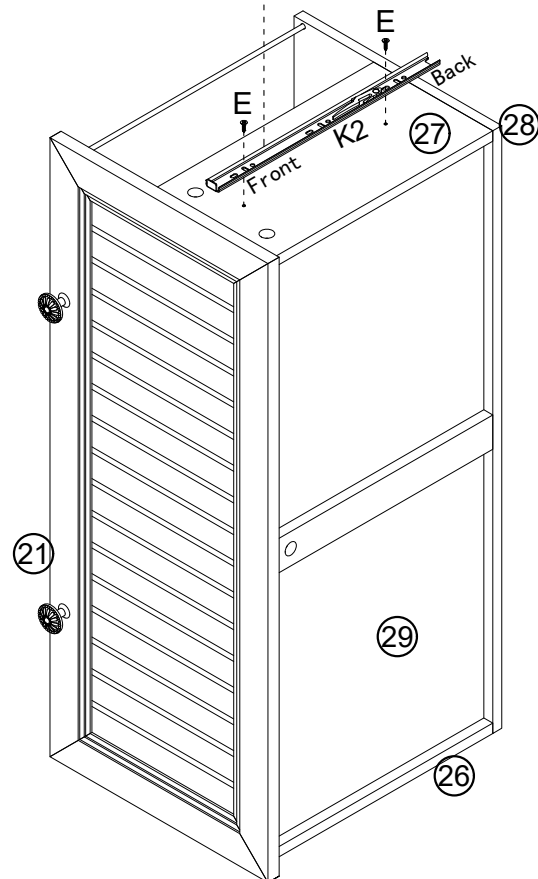

First put two **T** bars in, then cover the 21 plate, finally put two more **T** bars in

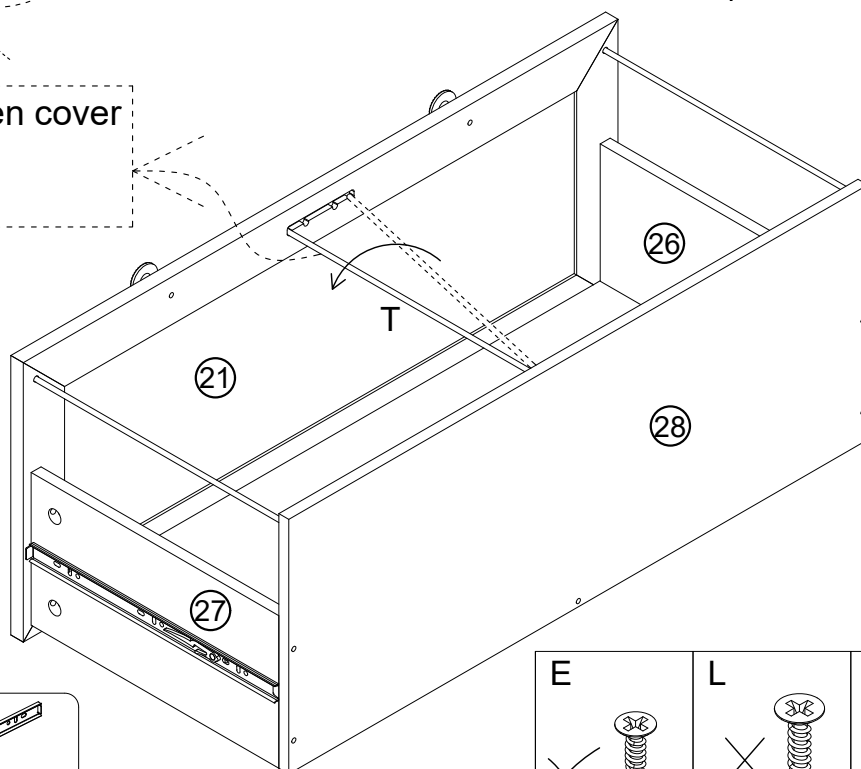

T x 4


L=310mm

E x 8




Ø6xØ3x12mm

K2 x 4



L=300mm

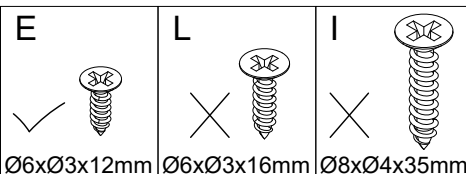



INSTALLATION INSTRUCTION

STEP 49



This screw can be loosened to adjust the top and bottom gaps of the drawer

Lock screw (E) after adjusting the upper and lower gaps


When installing the slide rail, it should be inserted at the same time, and then pushed together. If you have trouble pushing the drawer forward, pull back and push again

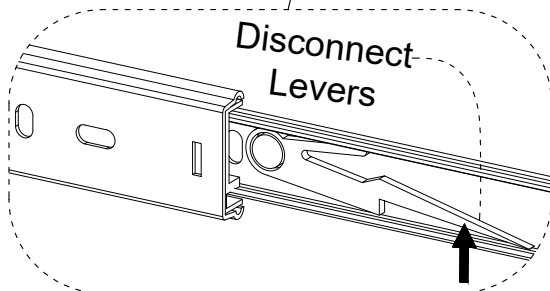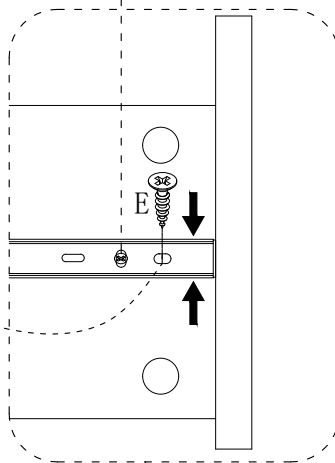

Left Side

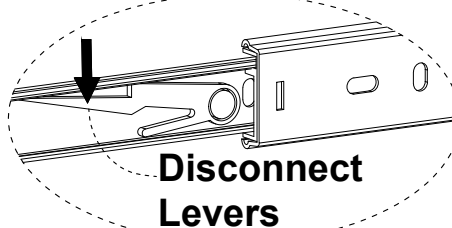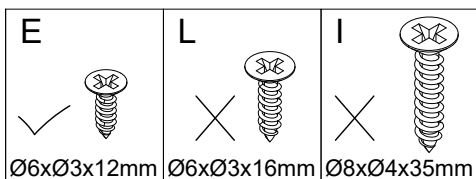


Disconnect Levers

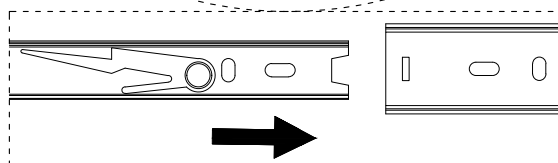

Right Side

E x 4





INSTALLATION INSTRUCTION

STEP 50



Lock screw (E) after adjusting the upper and lower gaps

This screw can be loosened to adjust the top and bottom gaps of the drawer

When installing the slide rail, it should be inserted at the same time, and then pushed together. If you have trouble pushing the drawer forward, pull back and push again

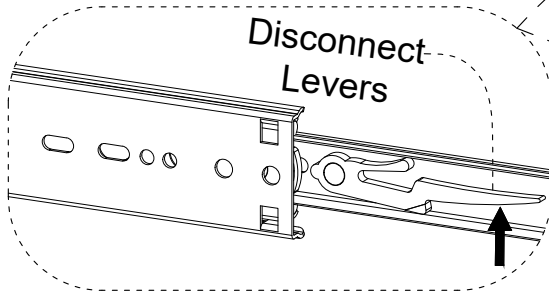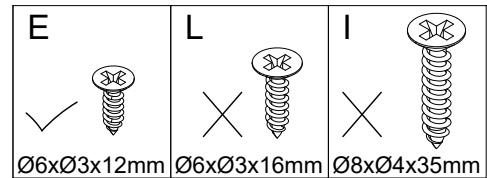


Left Side

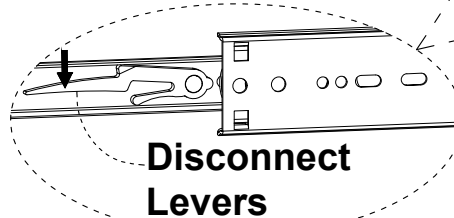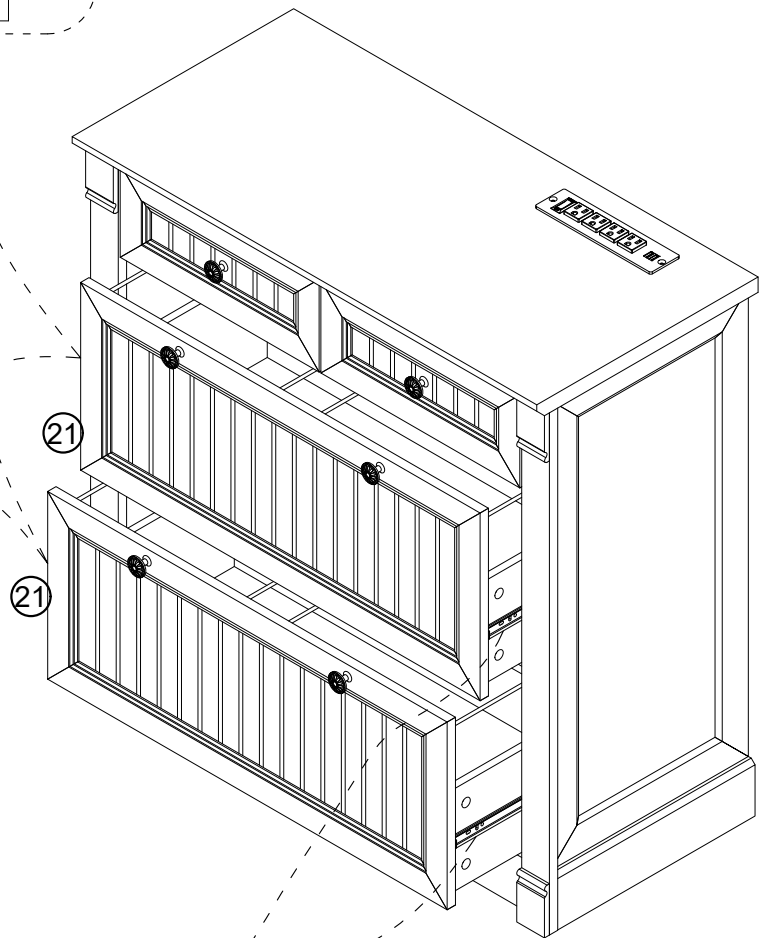

Right Side




E x 4



Ø6xØ3x12mm

INSTALLATION INSTRUCTION

STEP 51

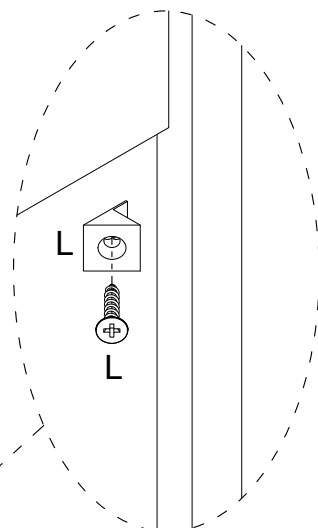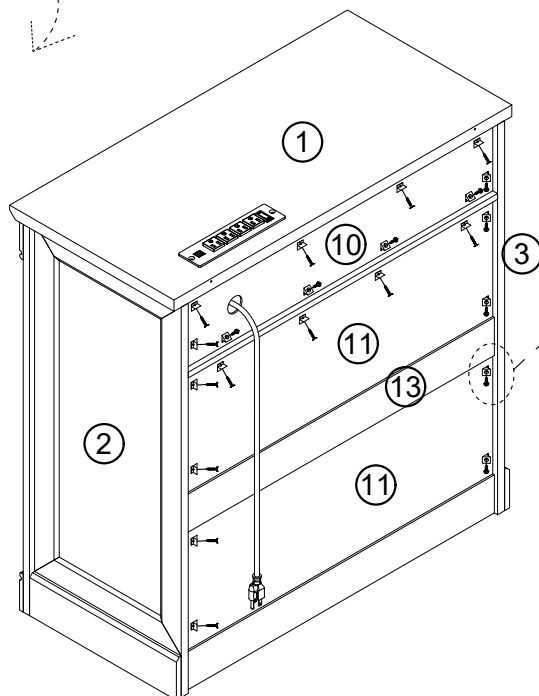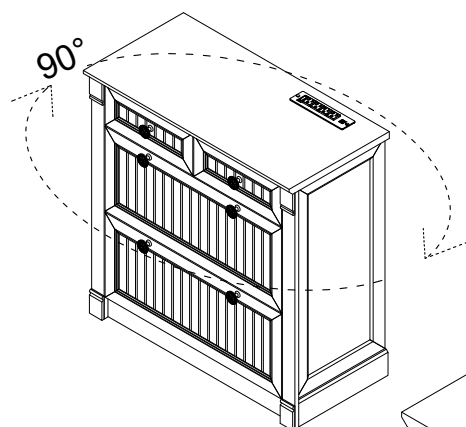



L x 22




Ø6xØ3x16mm

E	L	I
Ø6xØ3x12mm	Ø6xØ3x16mm	Ø8xØ4x35mm

STEP 52

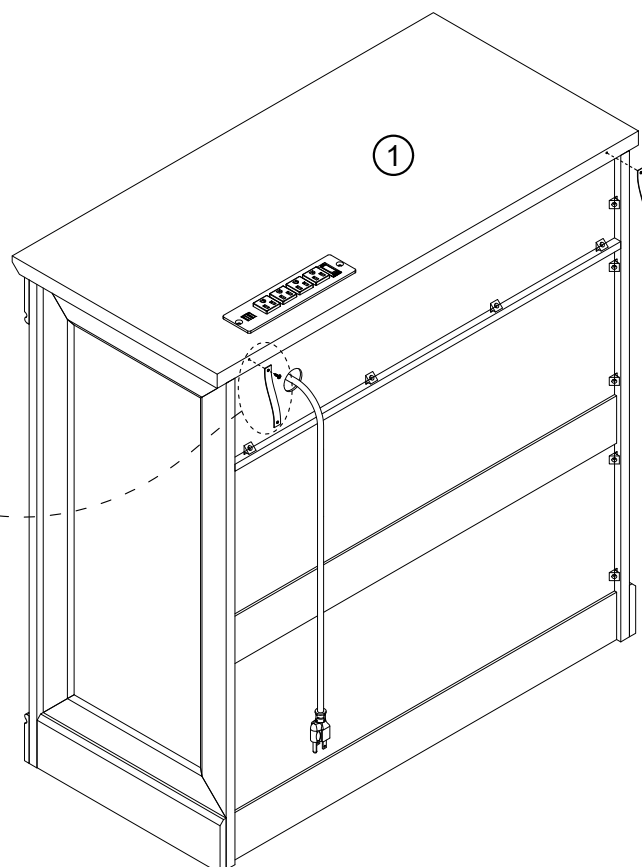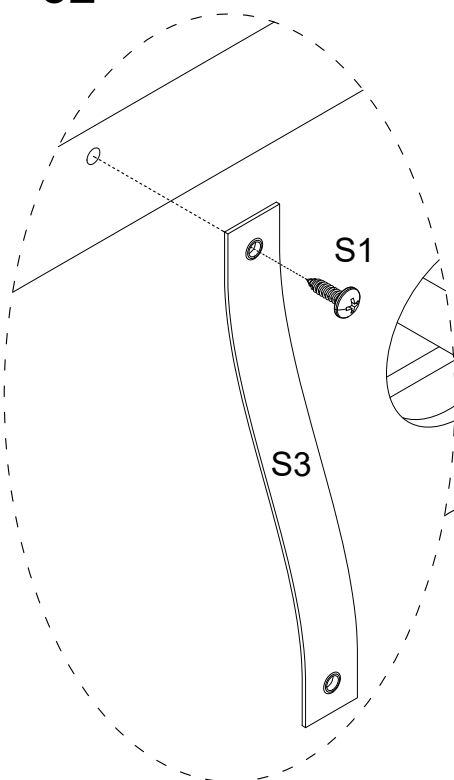

S x 2







Ø8xØ4x12mm

INSTALLATION INSTRUCTION

STEP 53

The cabinet must be permanently fixed to the wall
Equipped with an anti-tipping device to prevent cabinet don't tip over
Mark the position of the drill on the wall with a pencil.
Drill holes at the marked locations with a drill bit.
Insert the wall anchor (S4) gently into the hole
Knock in this wall anchor (S4).
Lock the strips to the wall
Equipped with screws (S2).

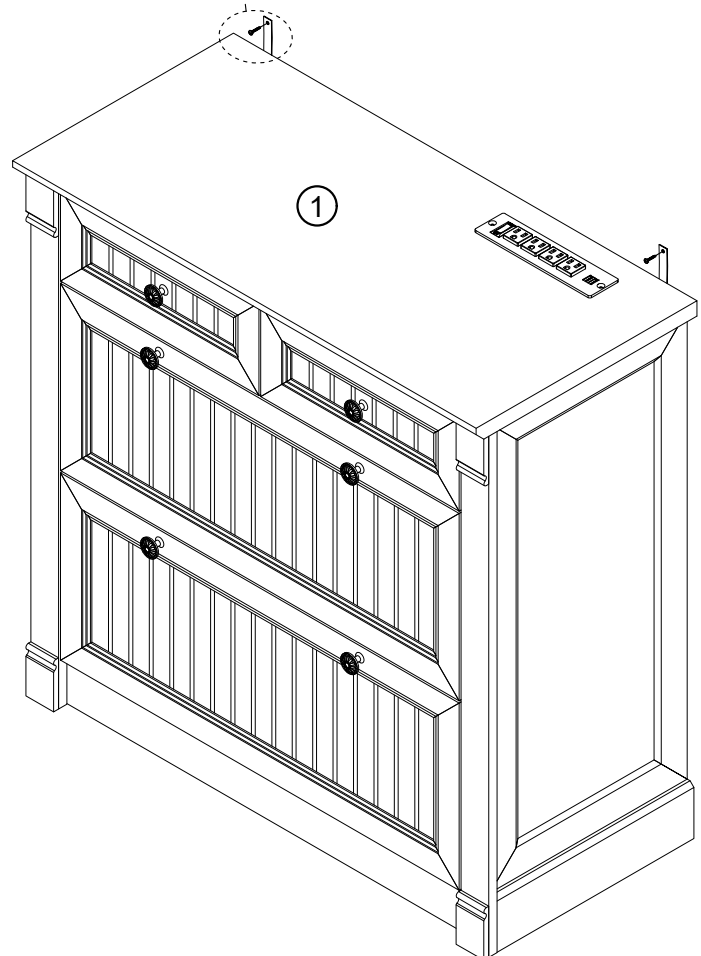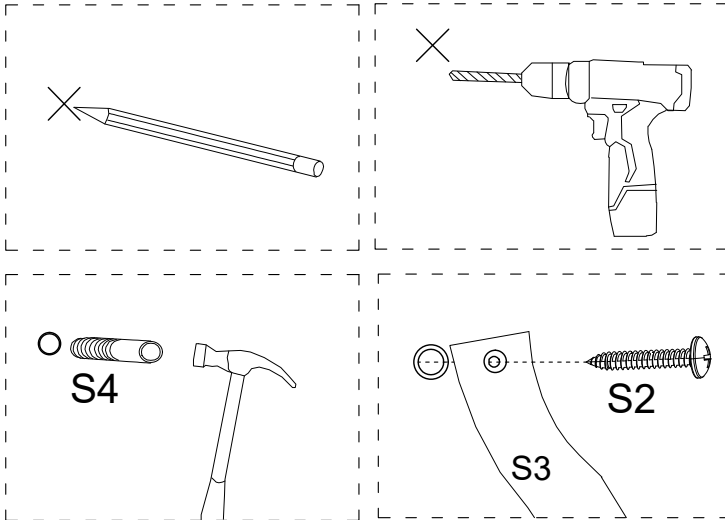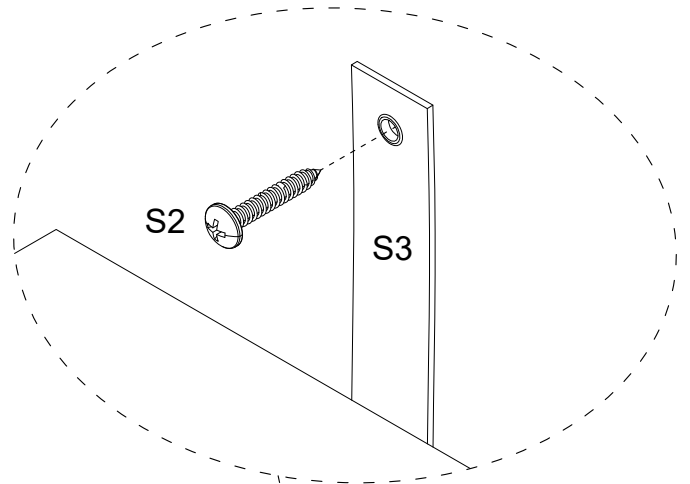

INSTALLATION INSTRUCTION

STEP 54

Installation completed,
please enjoy this product to the fullest,
Wishing you a pleasant use.

