

# Coffee Table Installation

Tools You Will Need: Tools You May Need



philis head screwdrier  
rewuired of assembly  
(not include)


## Before the Installation

- 1. Do not throw away packing materials until assembly is complete for small parts may come loose inside the carton during shipment. If parts are missing, please contact us.
- 2. Assemble this item on a soft surface, such as carpet to protect the finish.
- 3. Proper assembly of this item requires 2 people.
- 4. Periodically check to ensure that all connections are tight.
- 5. It is recommended that installation of the product be done by a qualified licensed furniture assembler.


## Care and Cleaning

- 1. To protect the finish, avoid use chemicals and household cleaners.
- 2. All hot serving dishes should be placed on a pad.
- 3. Any liquid spilled onto the top should be cleaned up immediately with a damp cloth.













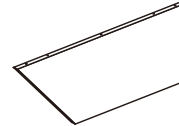














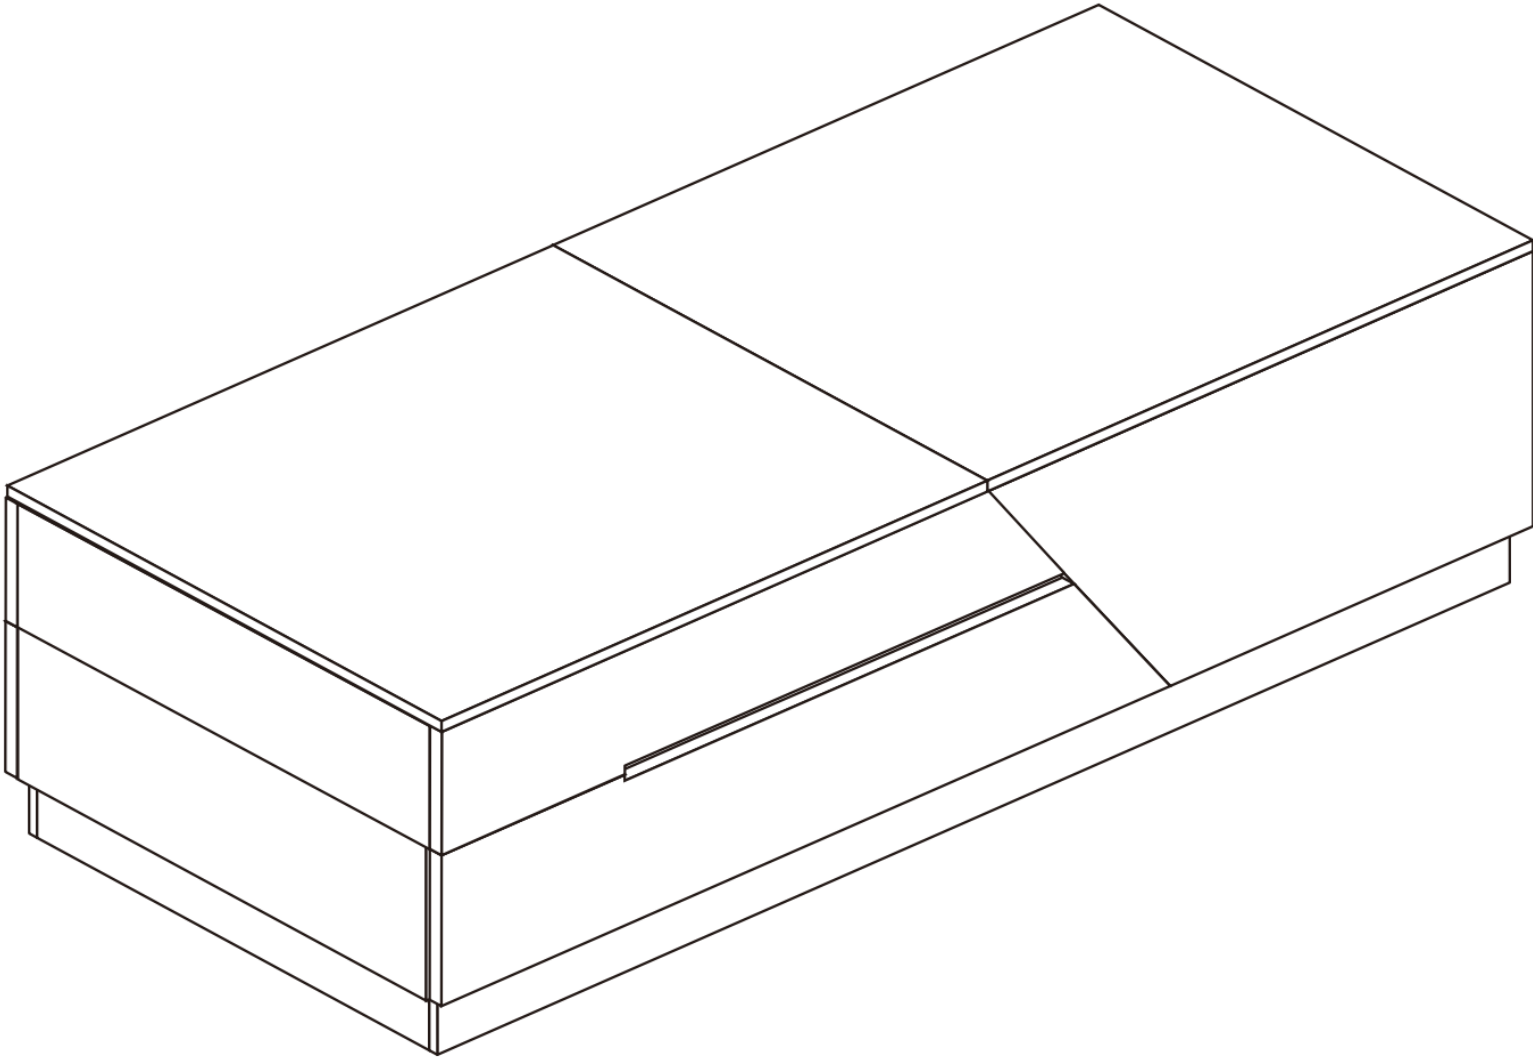







## Parts List

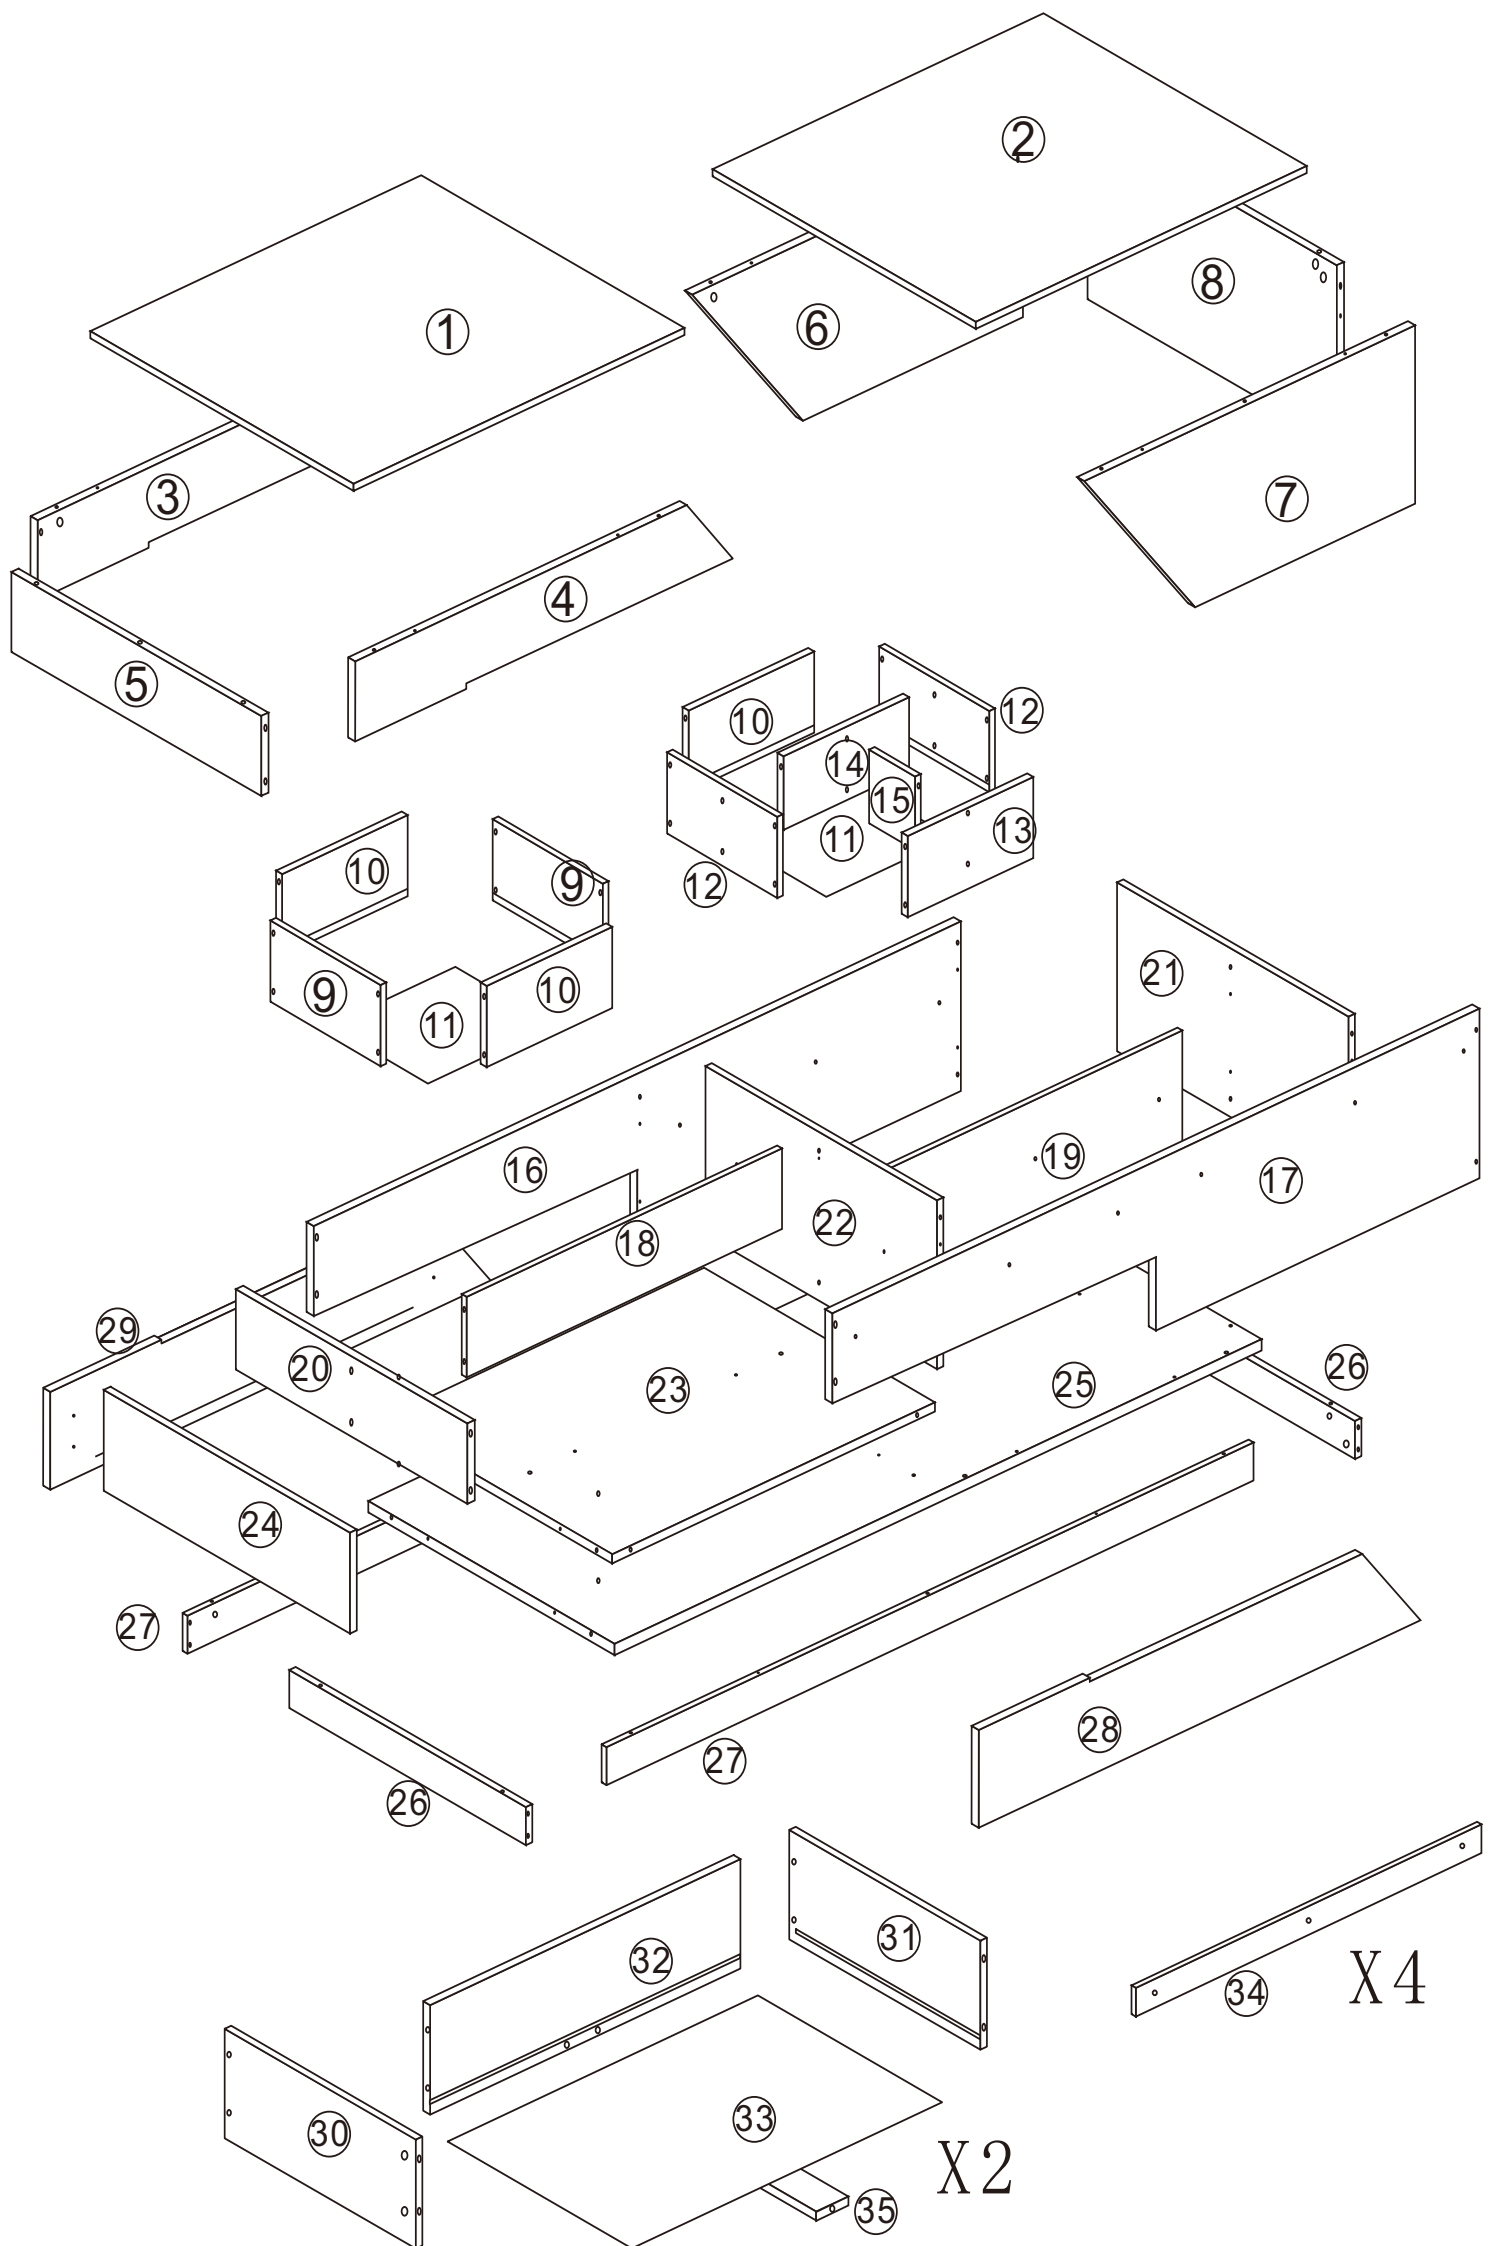



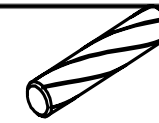











**Note:** Do not fully tighten all bolts until all parts are in place. Failure to follow these instructions may cause the bolt to misalign during assembly.




Parts List

①		x1	②		x1	⑬		x1	⑭		x1
③		x1	④		x1	⑮		x1	⑯		x1
⑤		x1	⑥		x1	⑰		x1	⑱		x1
⑦		x1	⑧		x1	⑲		x1	⑳		x2
⑨		x2	⑩		x3	㉑		x2	㉒		x1
⑪		x2	⑫		x2	㉓		x1	㉔		x2
⑬		x1	⑭		x1	㉕		x2	㉖		x2
⑮		x1	⑯		x1	㉗		x2	㉘		x4
⑰		x1	⑱		x1	㉙		x2			


Hardware List

A  6X35 mm x59	B  15x10mm x59	C  6x30mm x57	D  4x35mm x62
E  3.5x12mm x52	F  250mm x4	G  250mm x4	H  4x20mm x12
I  x6	J  550mm x2	K  550mm x2	L  400mm x2
M  400mm x2	N  ∅ 20mm x20		

STEP 1

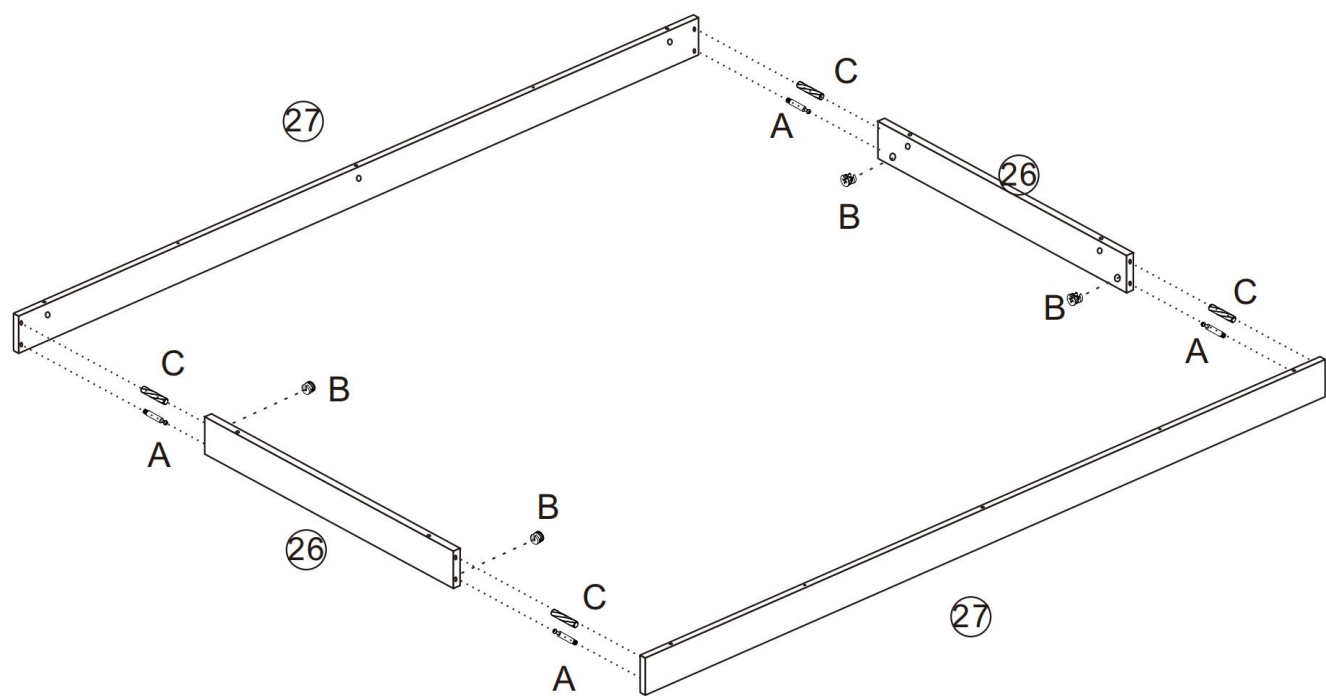

A 6X35mm    B 15X10mm    C 6X30mm



X4




x4




X4


STEP 2

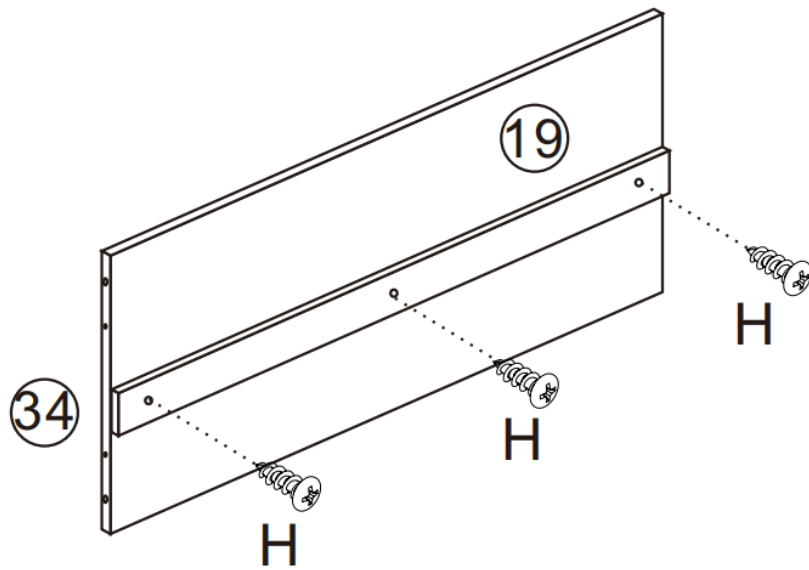


H 4X20mm




X6

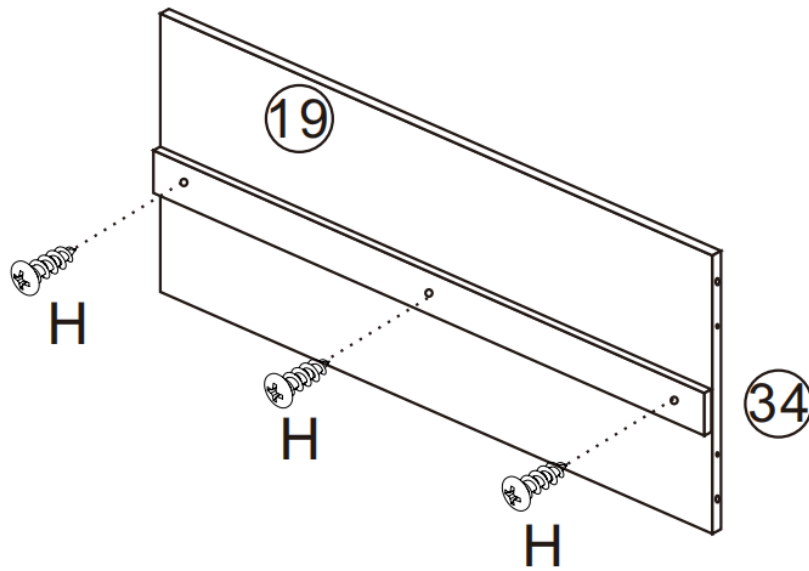

**STEP 3**

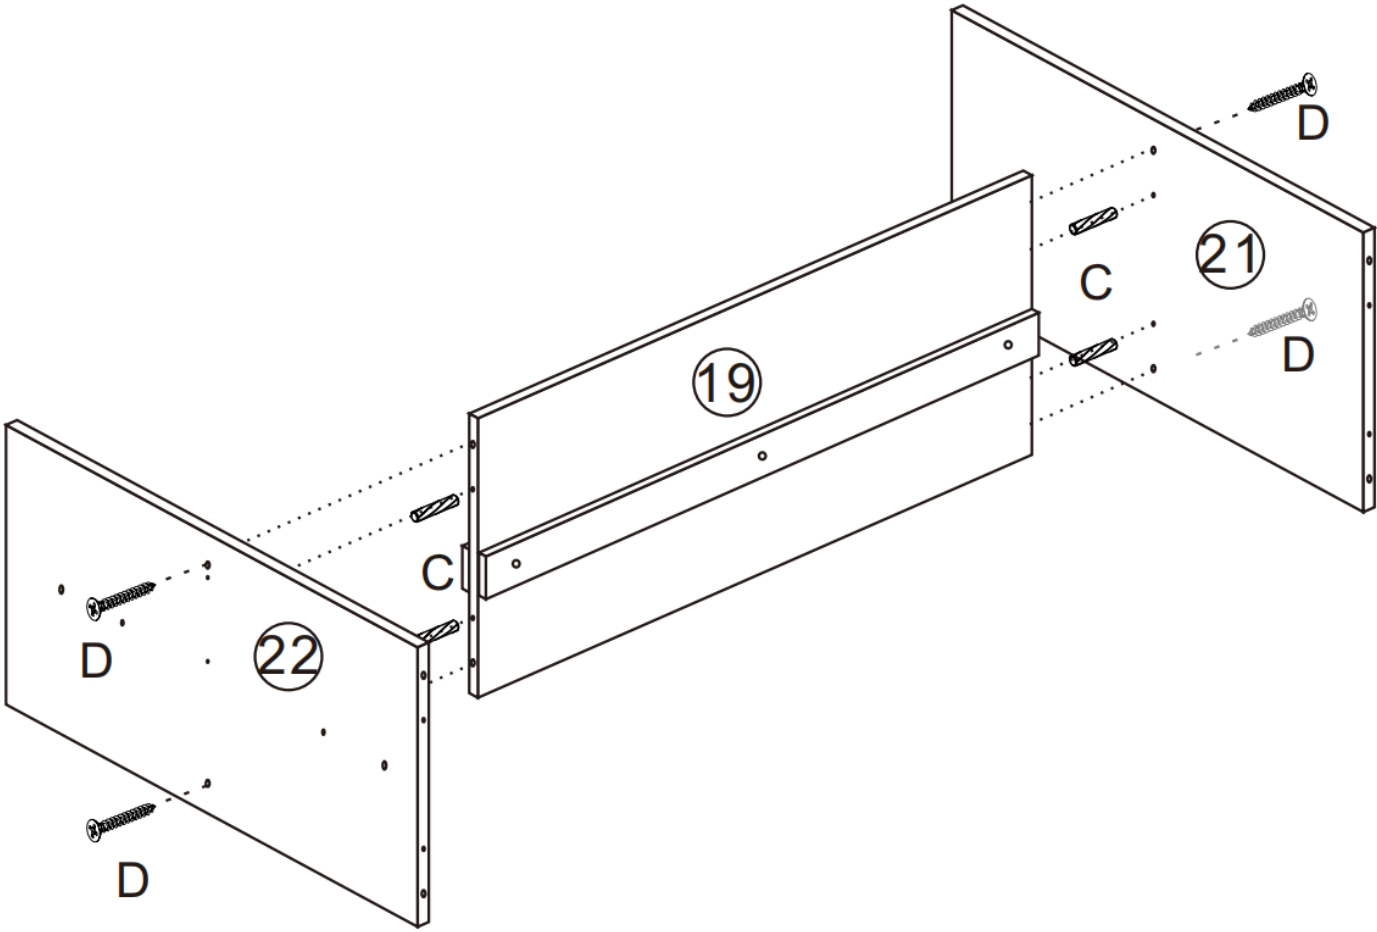


C 6X30mm D 4X35mm




X4 X4

**STEP 4**



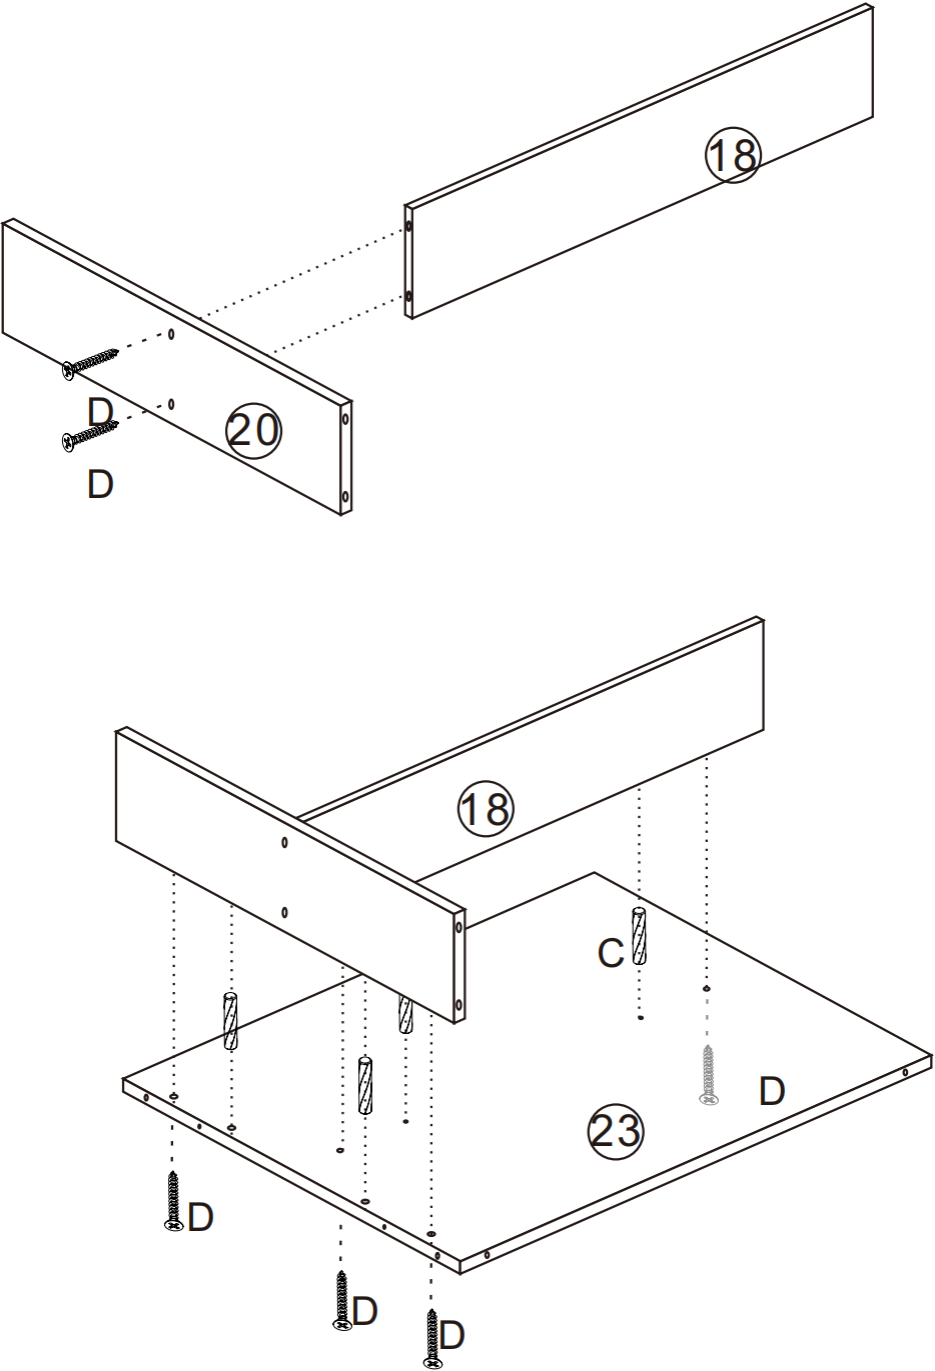


C 6X30mm D 4X35mm








X4 X6

STEP 5

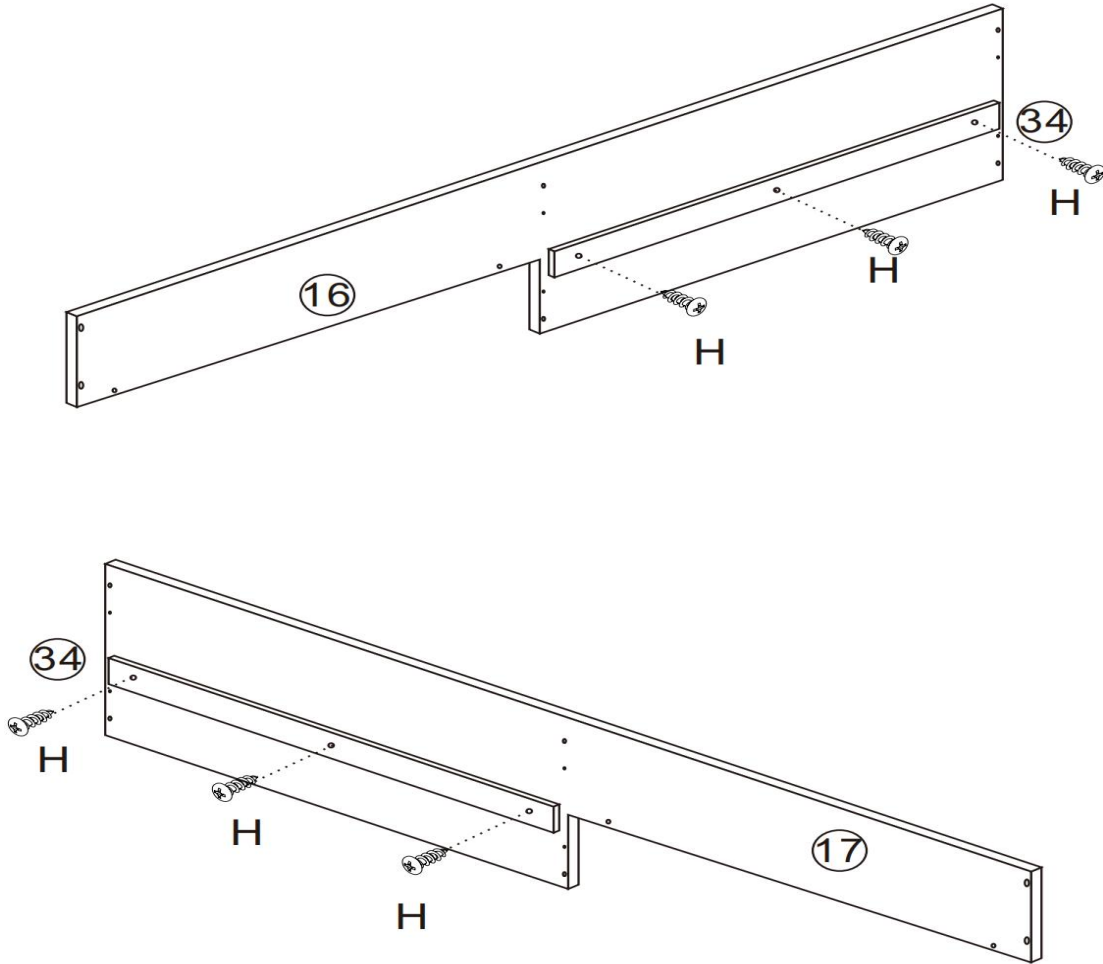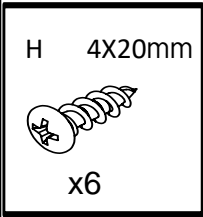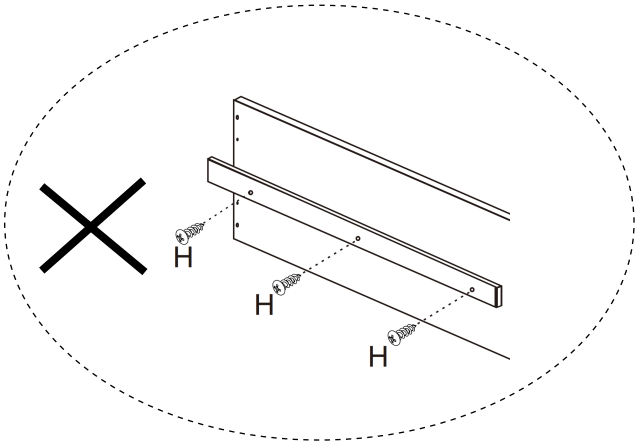


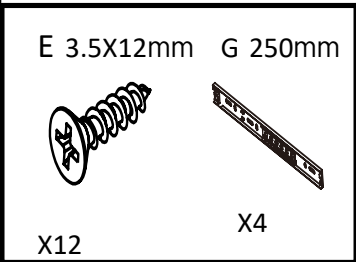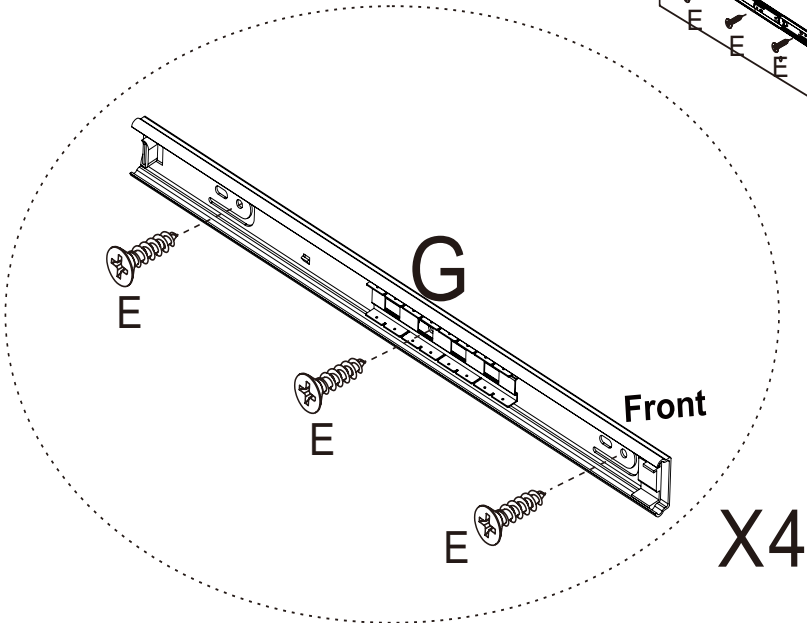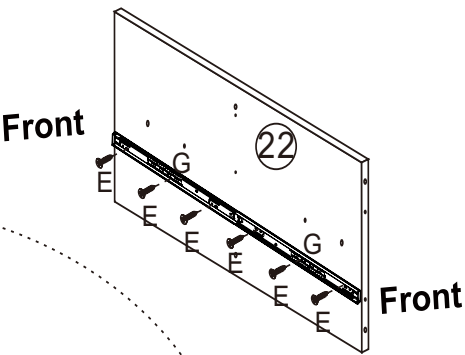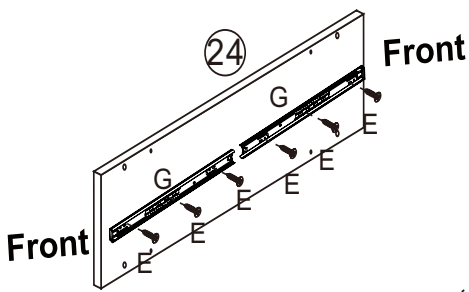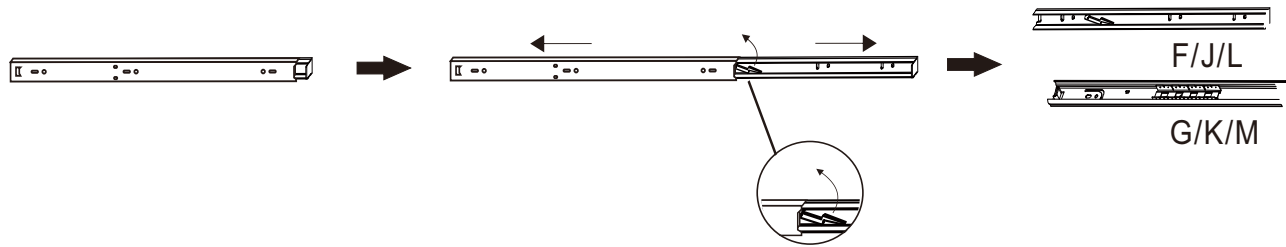



STEP 6






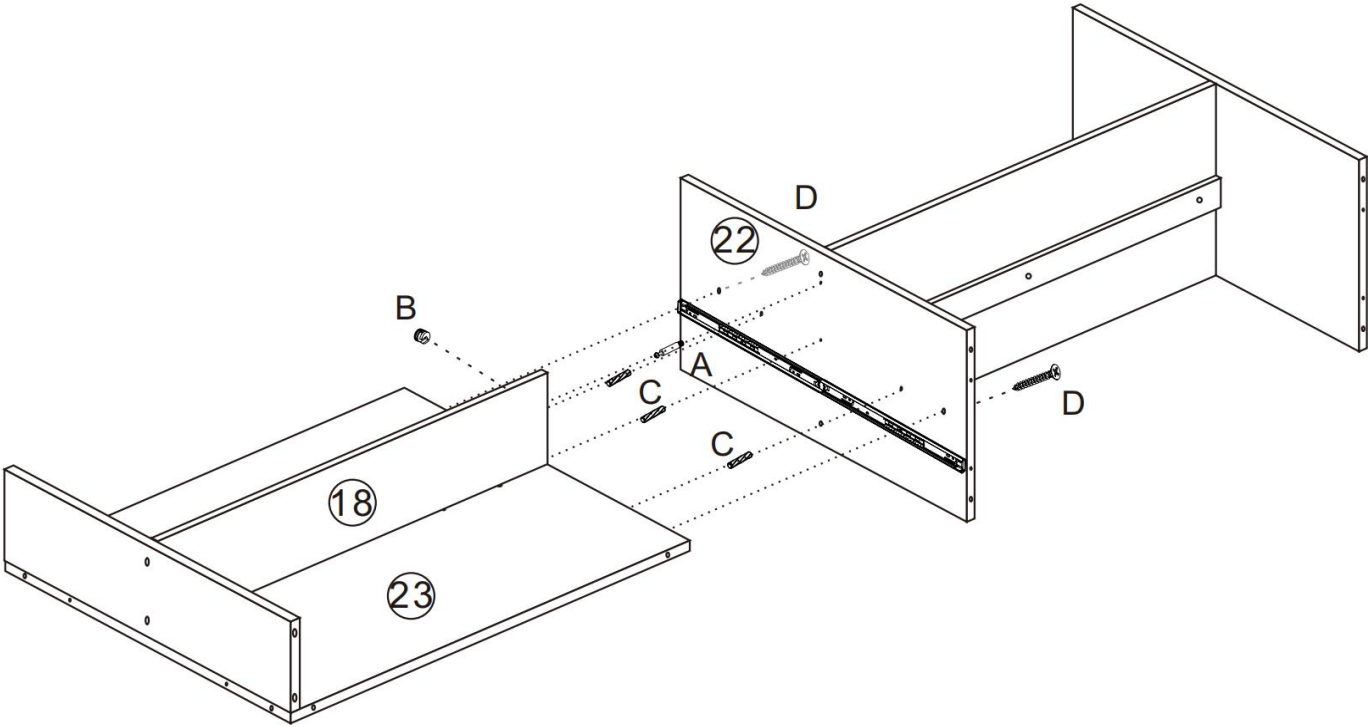



STEP 7

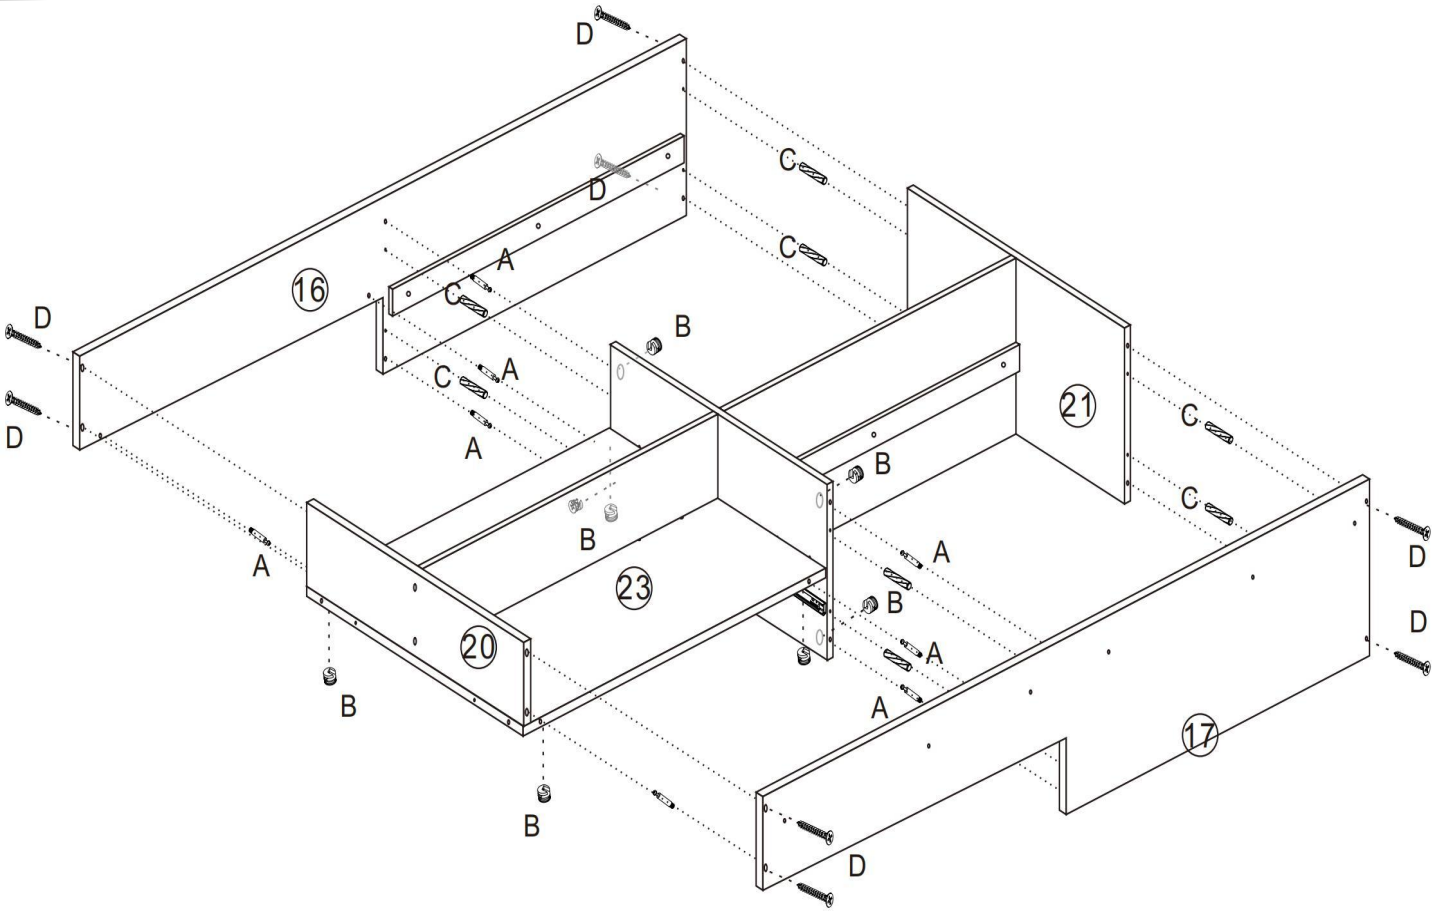


A 6X35mm	B 15X10mm	C 6X30mm	D 4X35 mm
			
X1	X1	X3	x2



STEP 8




A 6X35mm	B 15X10mm	C 6X30mm	D 4X35mm
			
X 8	X 8	X8	X8

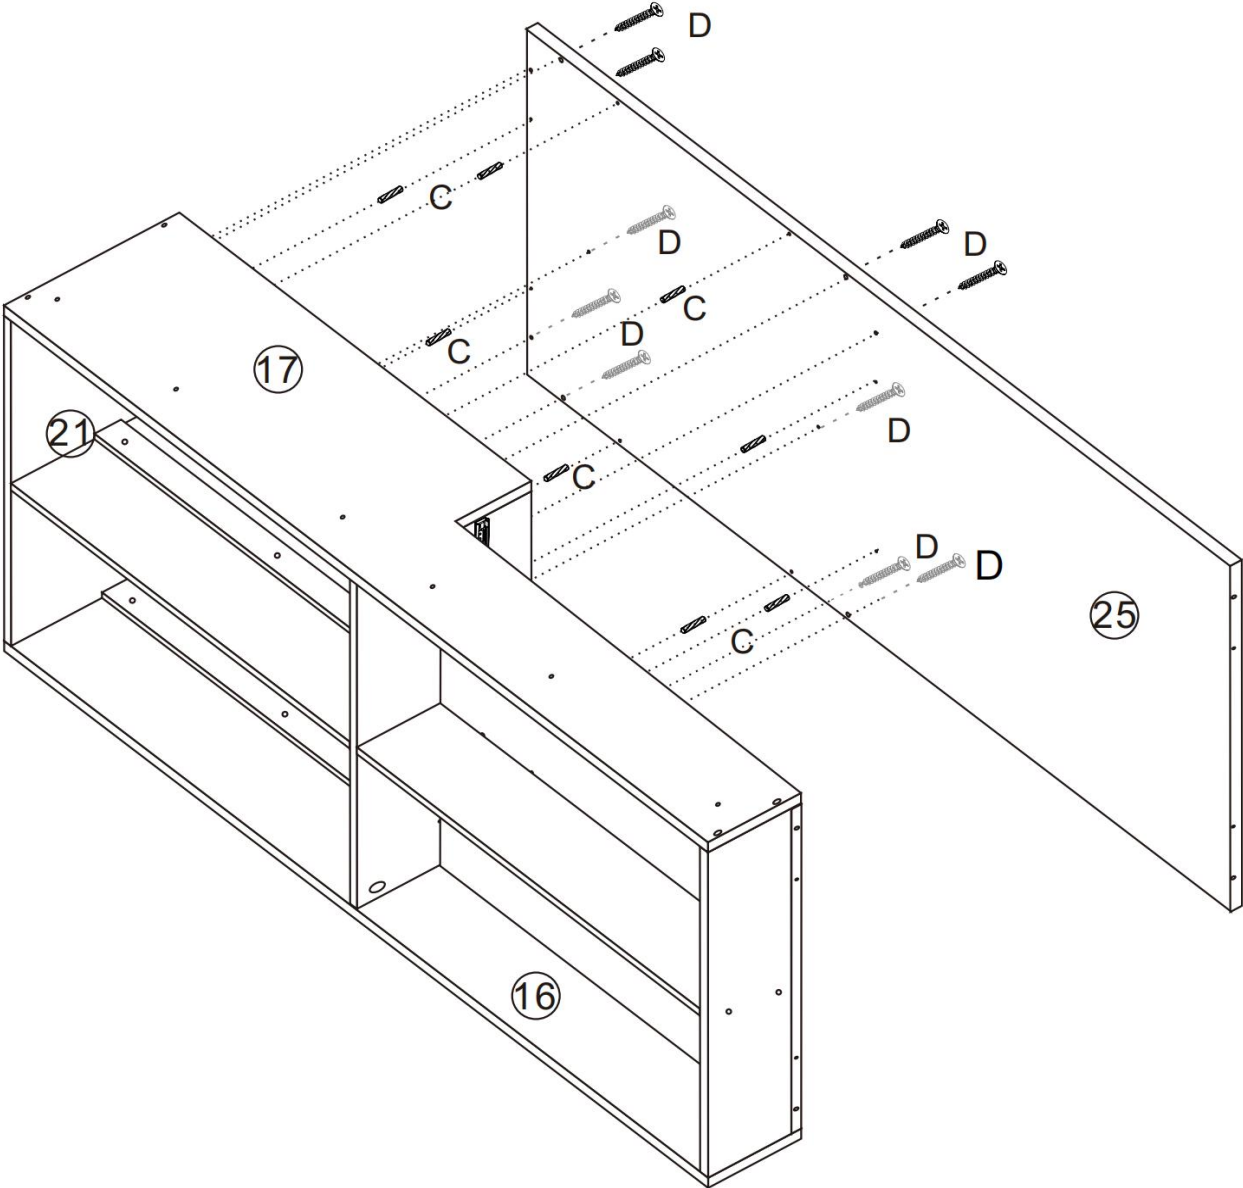


STEP 9



C 6X30mm	D 4X35mm
	
X8	X10

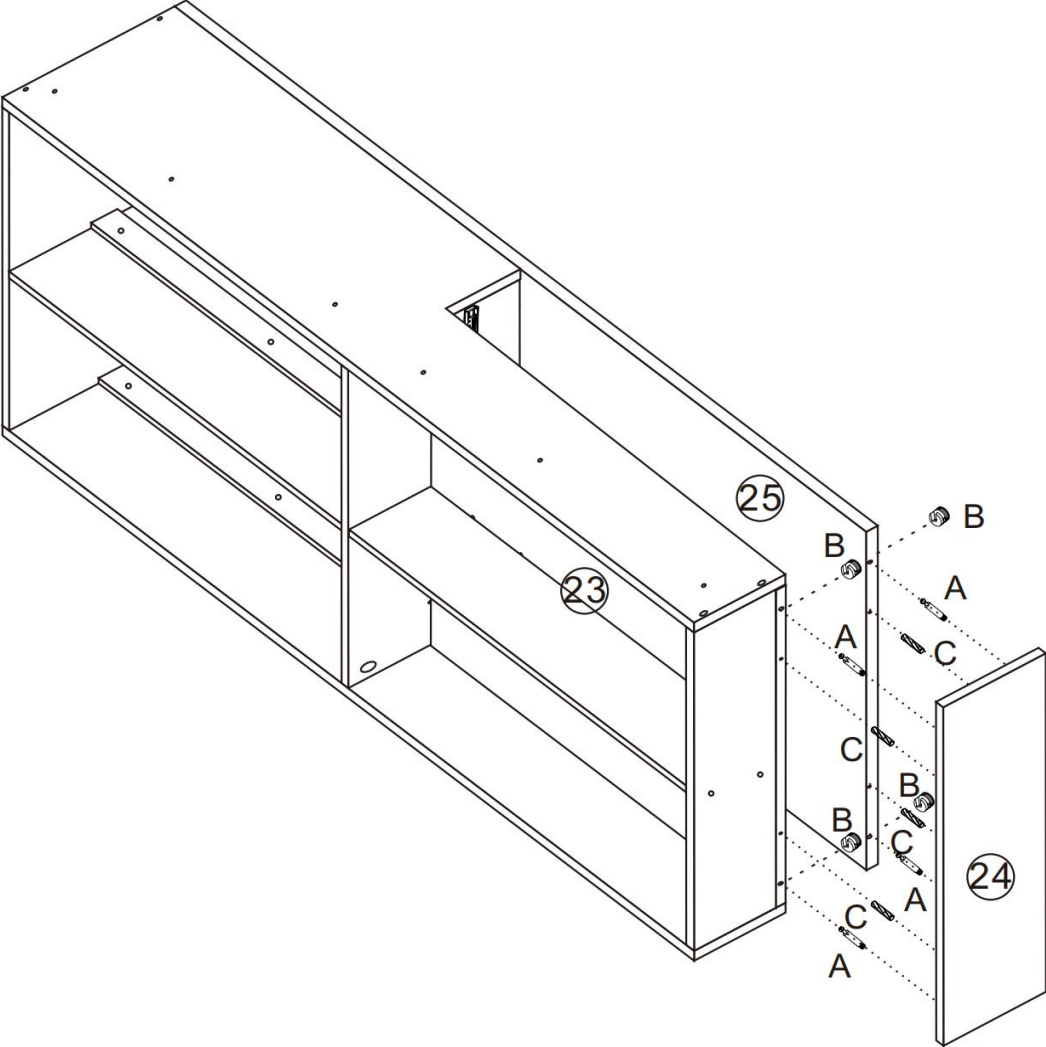
STEP 10







A 6X35mm	B 15X10mm	C 6X30mm
		
X4	X4	X4

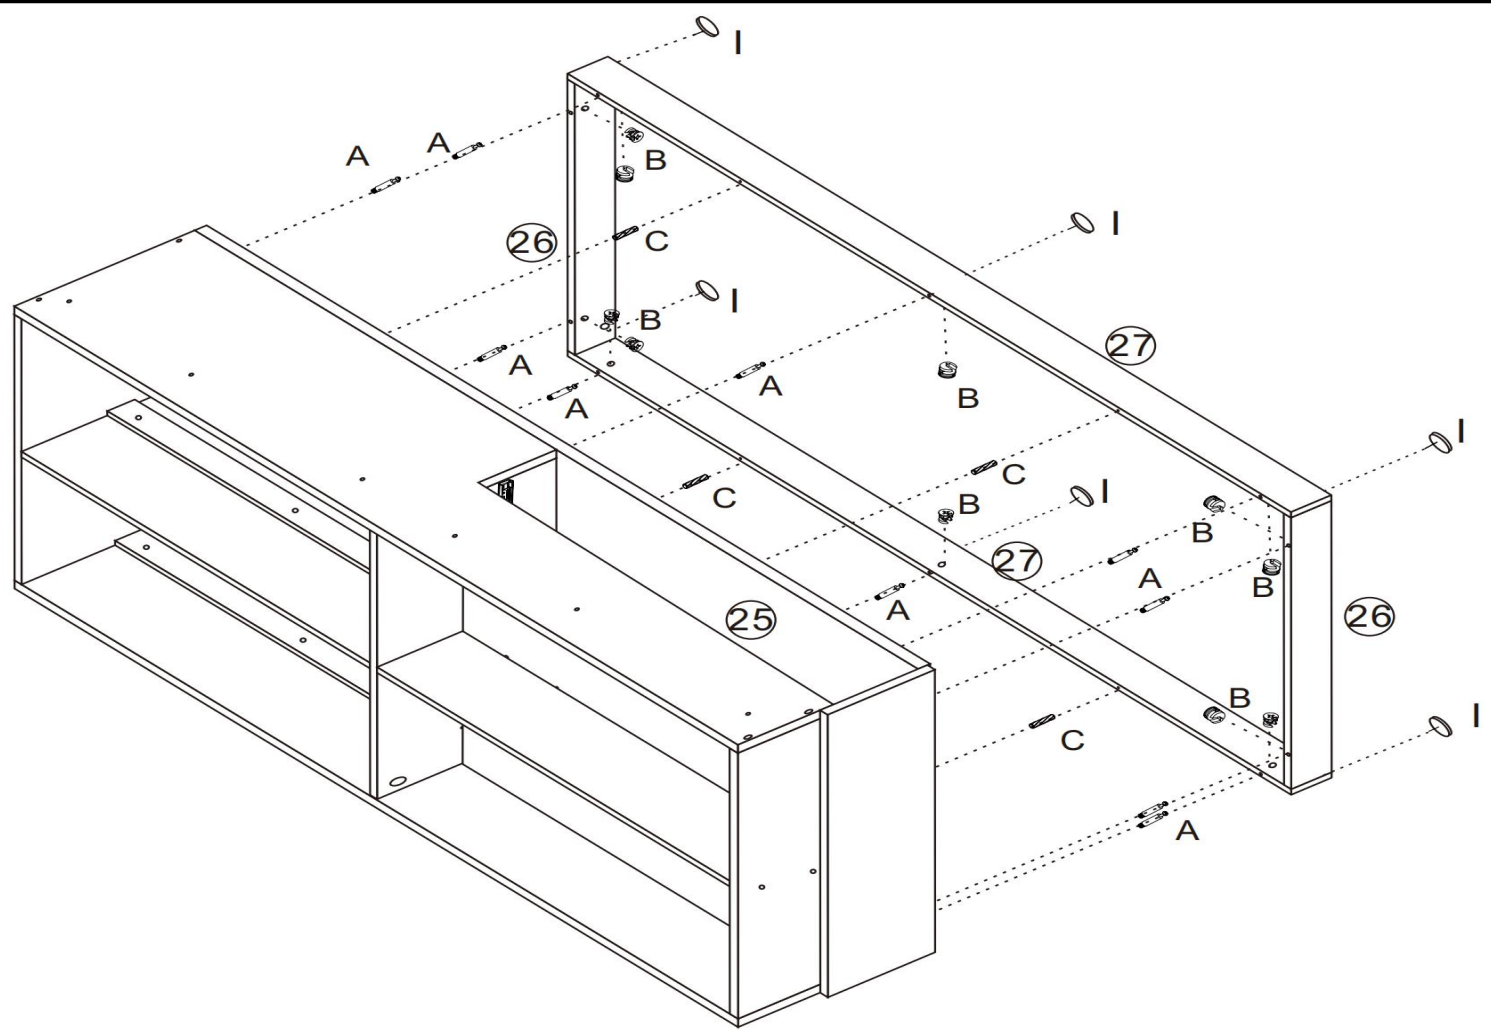





STEP 11





A 6X35mm	B 15X10mm	C 6X30mm	I
			
x10	x10	x4	x6

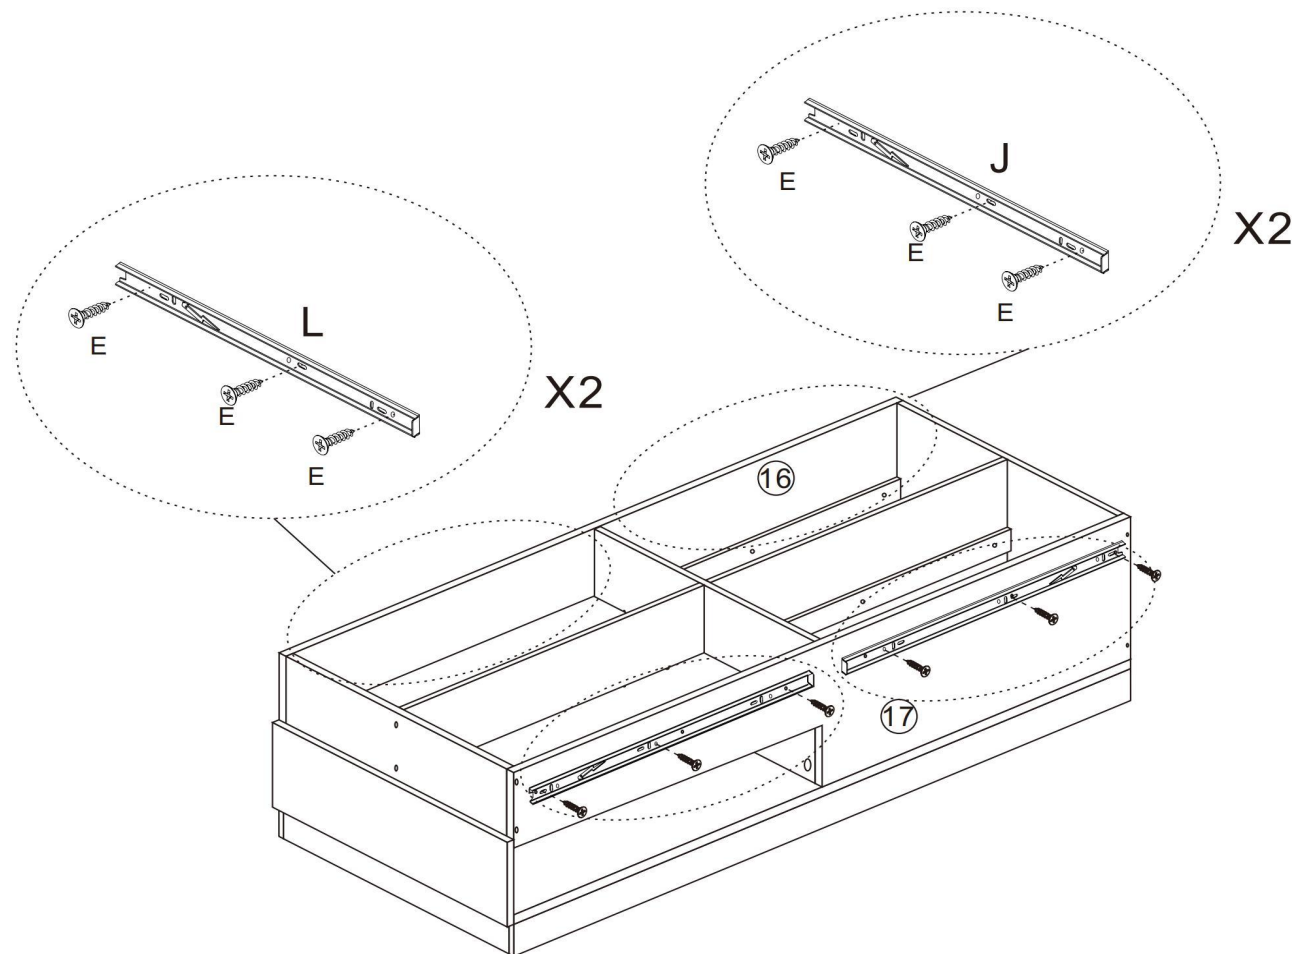STEP 12





L 400mm	J 550mm	E 3.5X12mm
		
x2	x2	x12


**STEP 13**

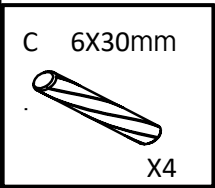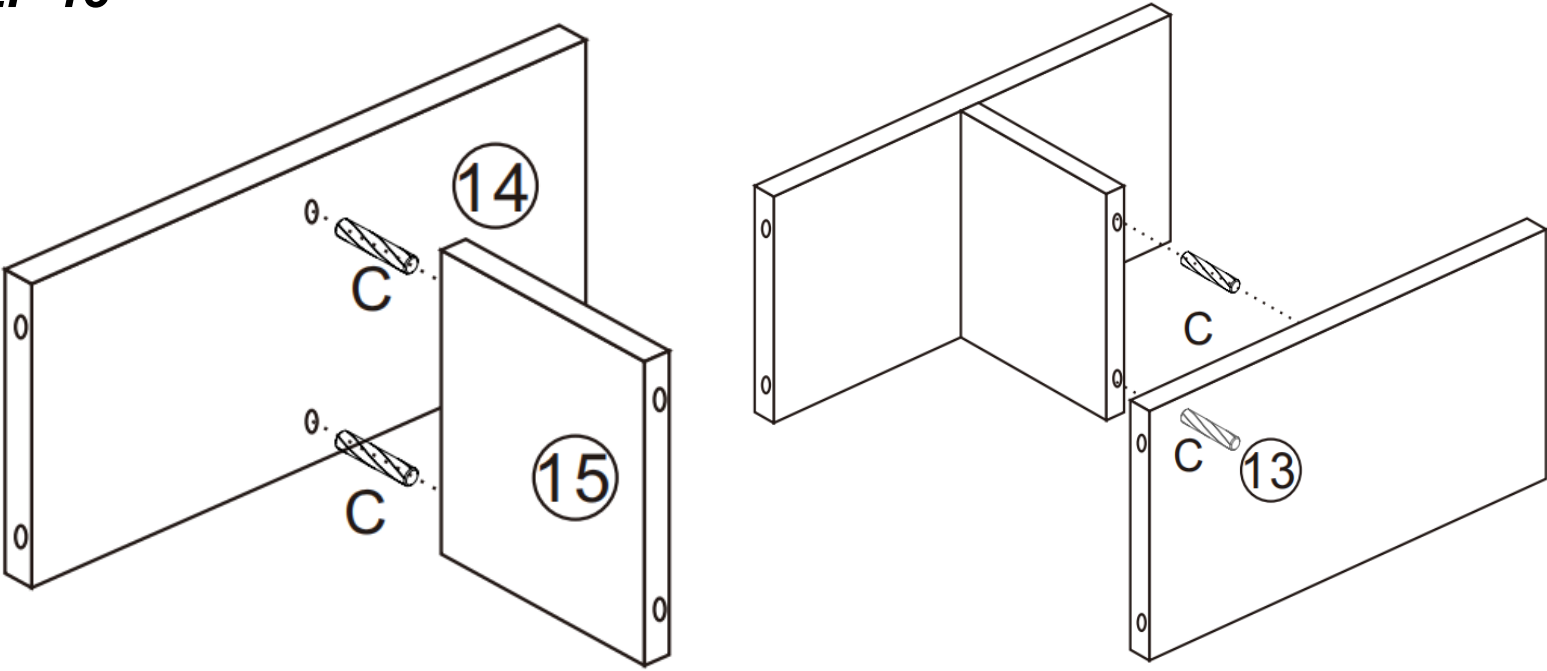


**STEP 14**

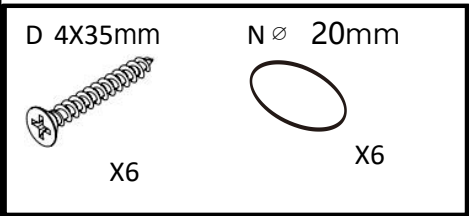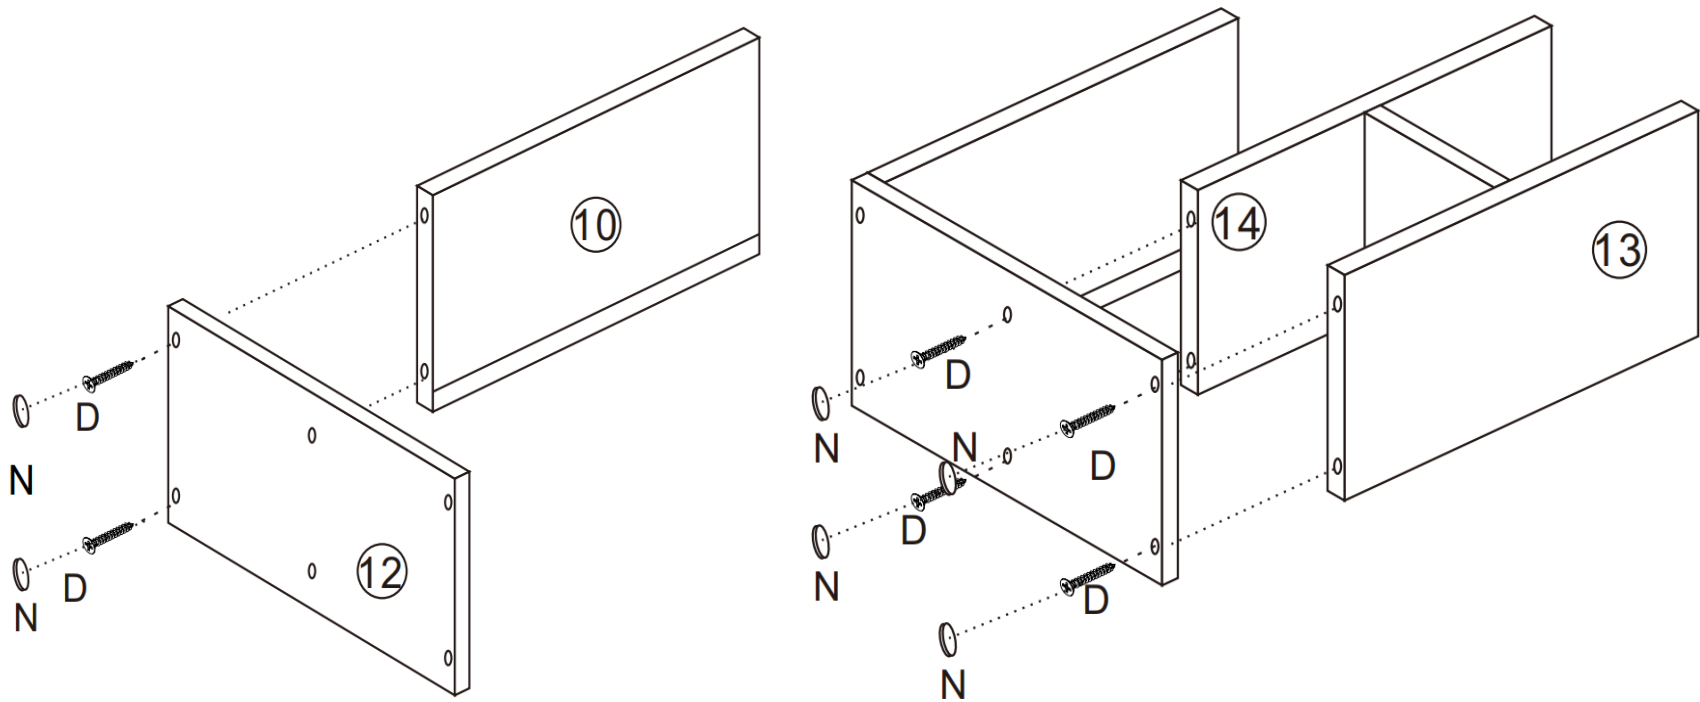

**STEP 15**

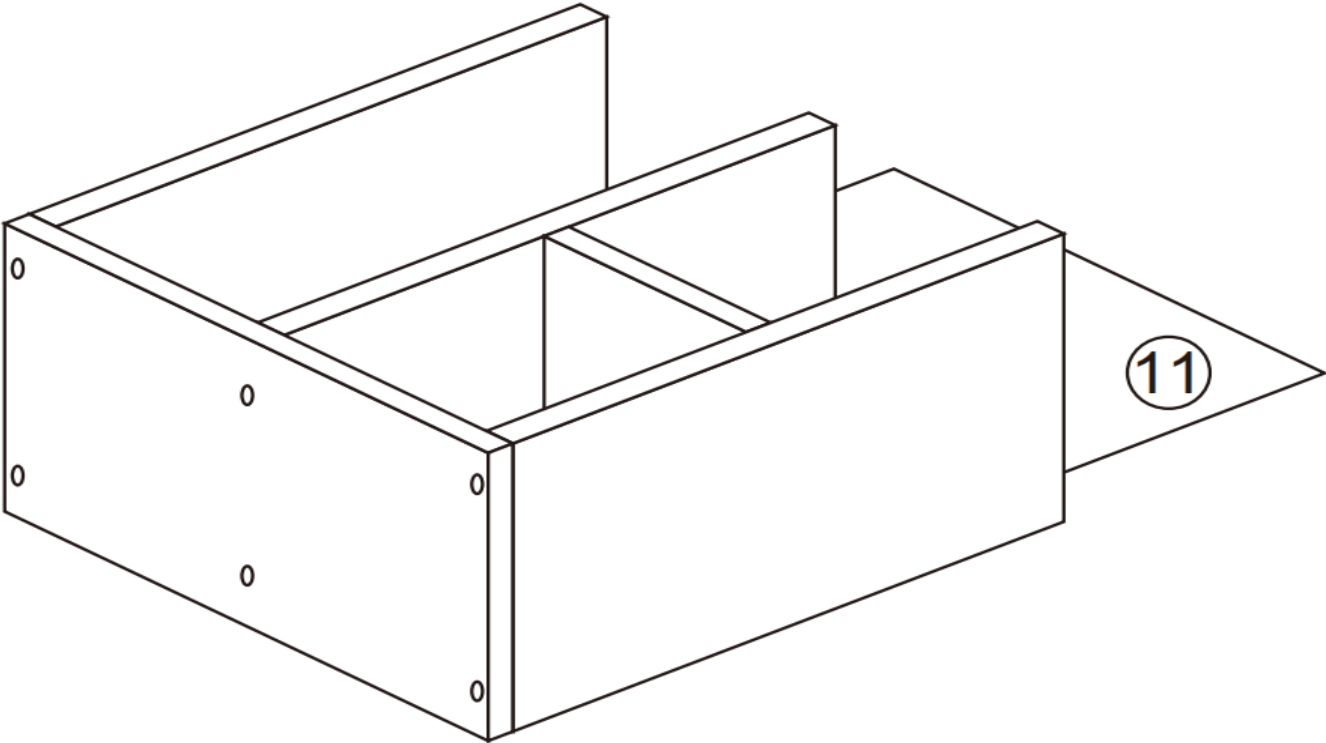


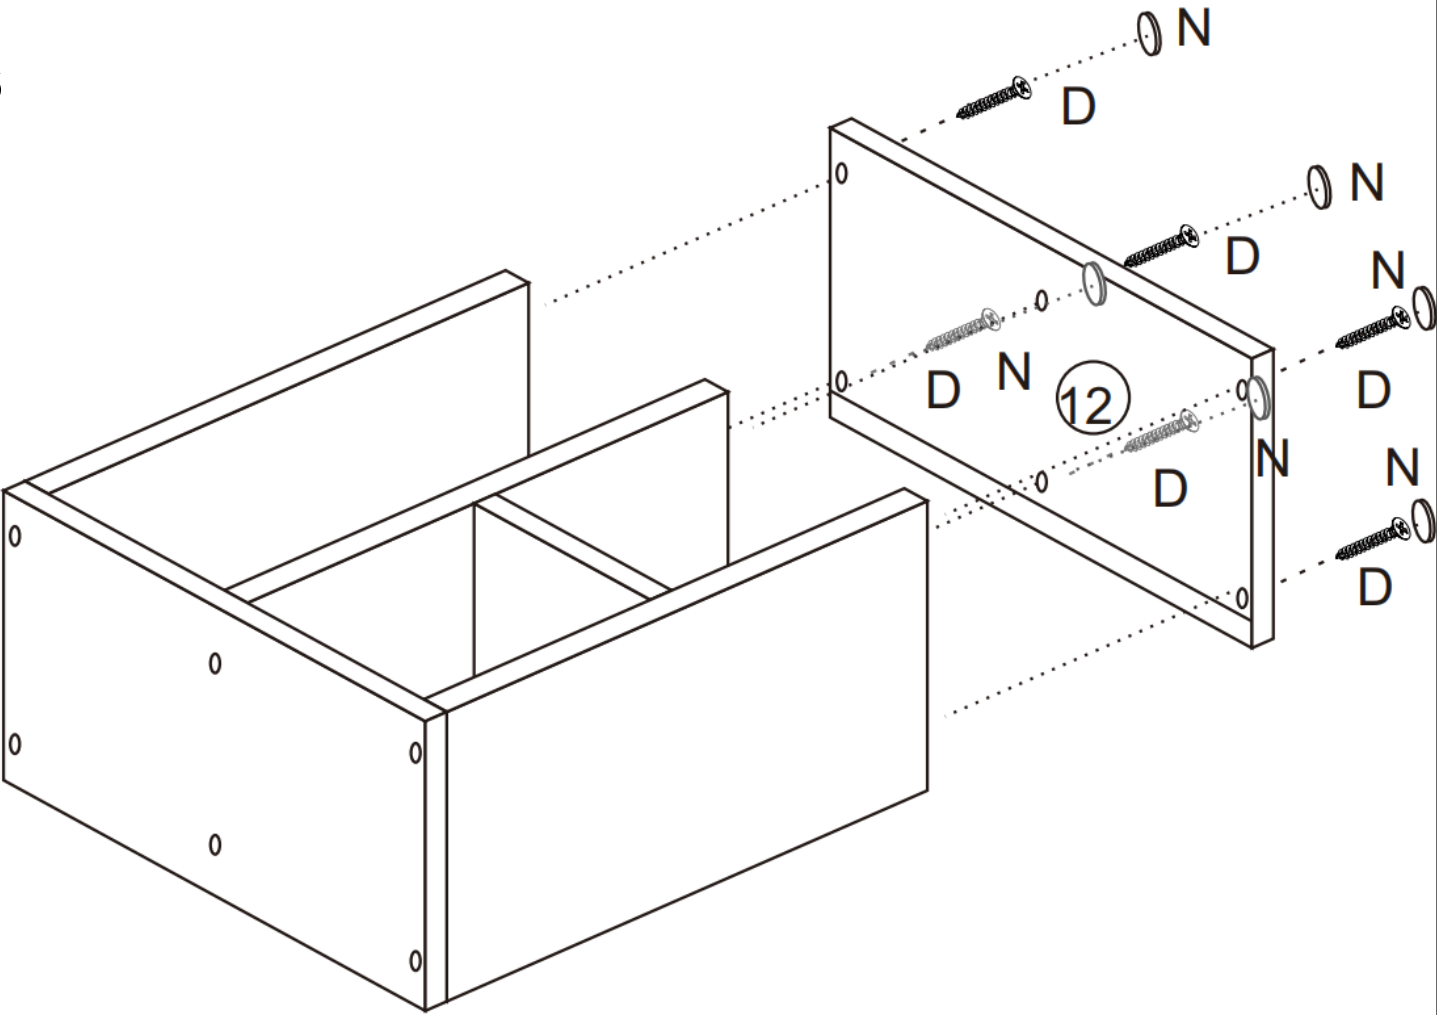

**STEP 16**




D 4X35mm    N  $\varnothing$  20mm  
x6                      x6

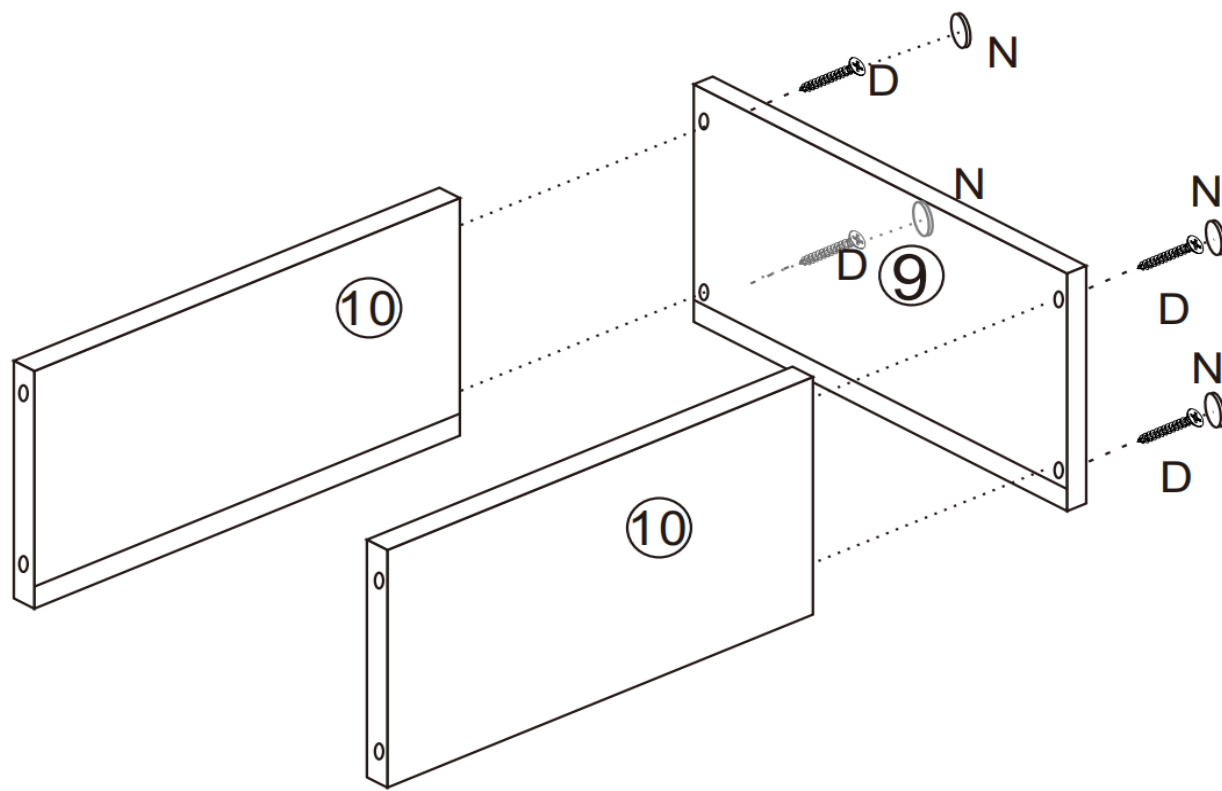**STEP 17**




D 4X35mm	N $\varnothing$ 20
	
X4	X4

**STEP 18**

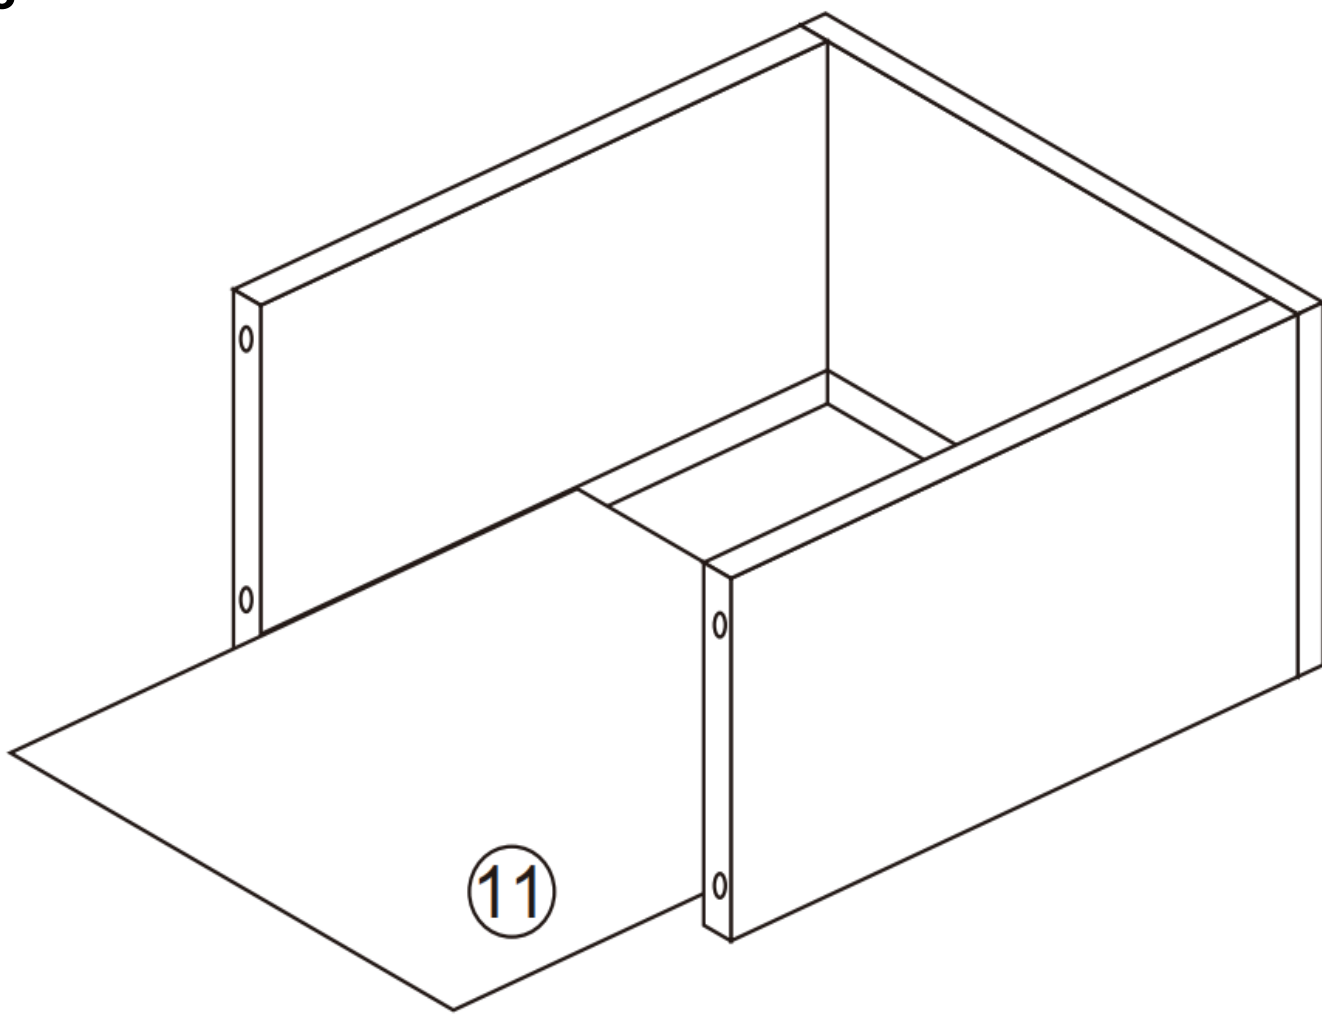

STEP 19

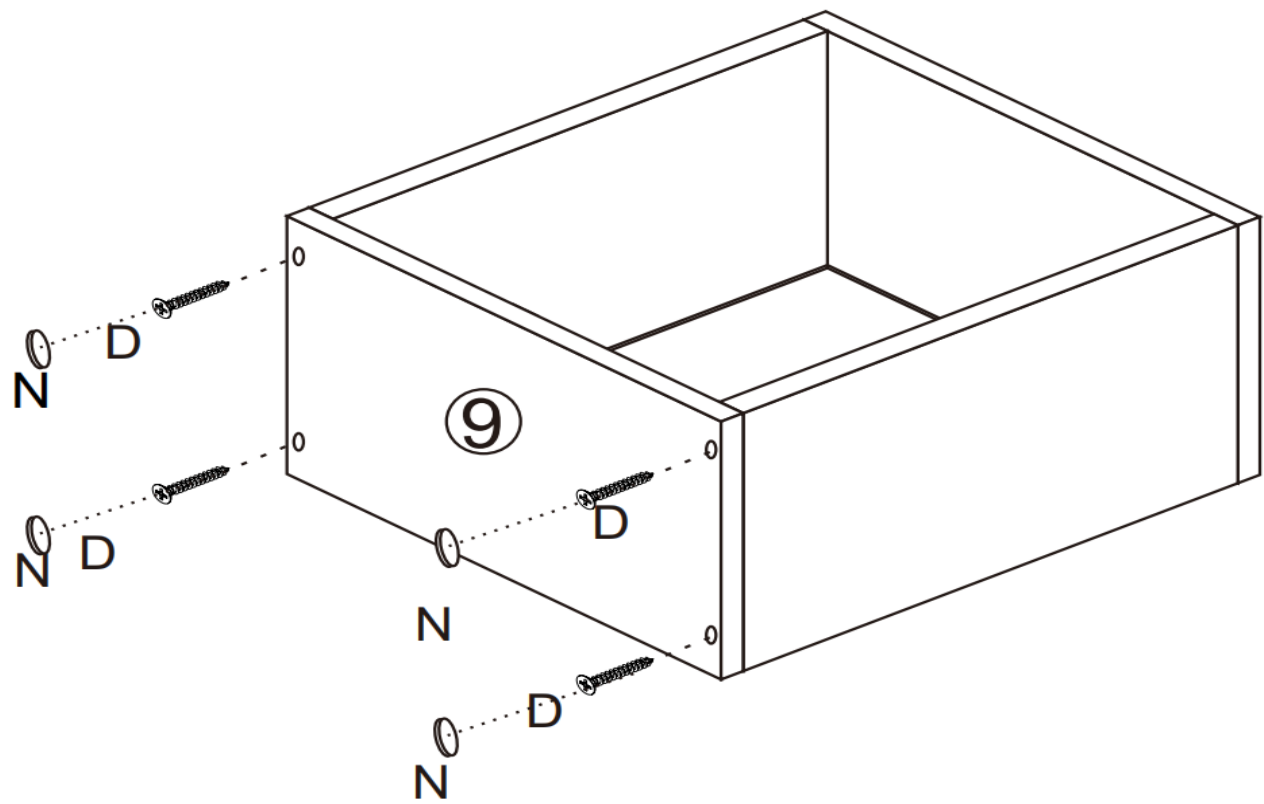

D 4X35mm Nø20mm




X4



X4

STEP 20

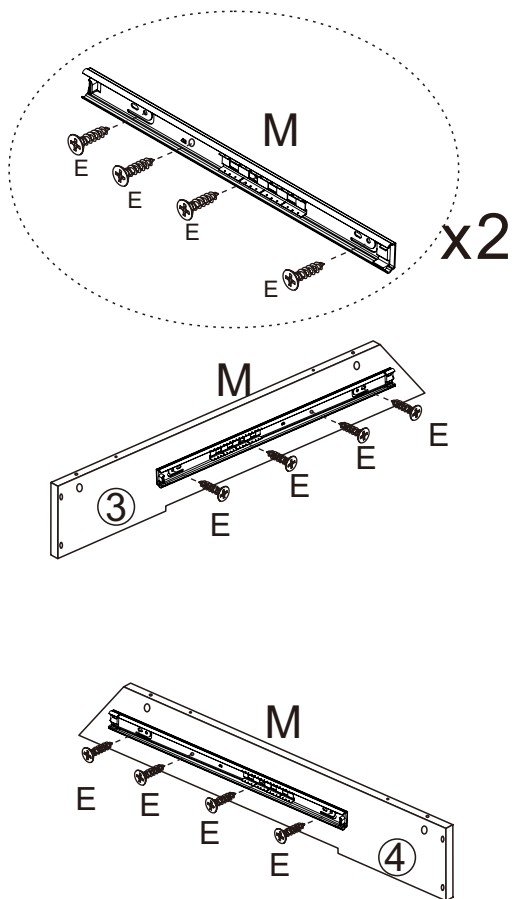

M 400mm E 3.5X12mm







X2




X8

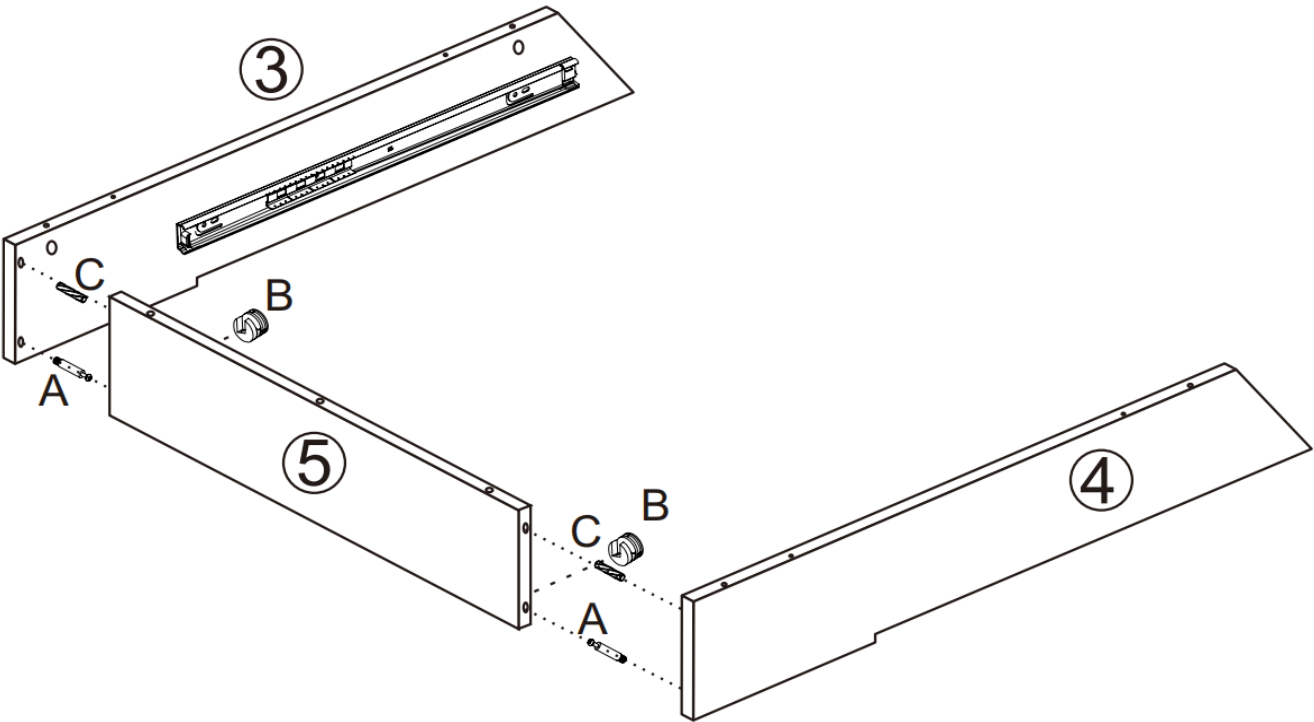


STEP 21



A 6X35	B 15X10mm	C 6X30mm
		
X2	X2	X2

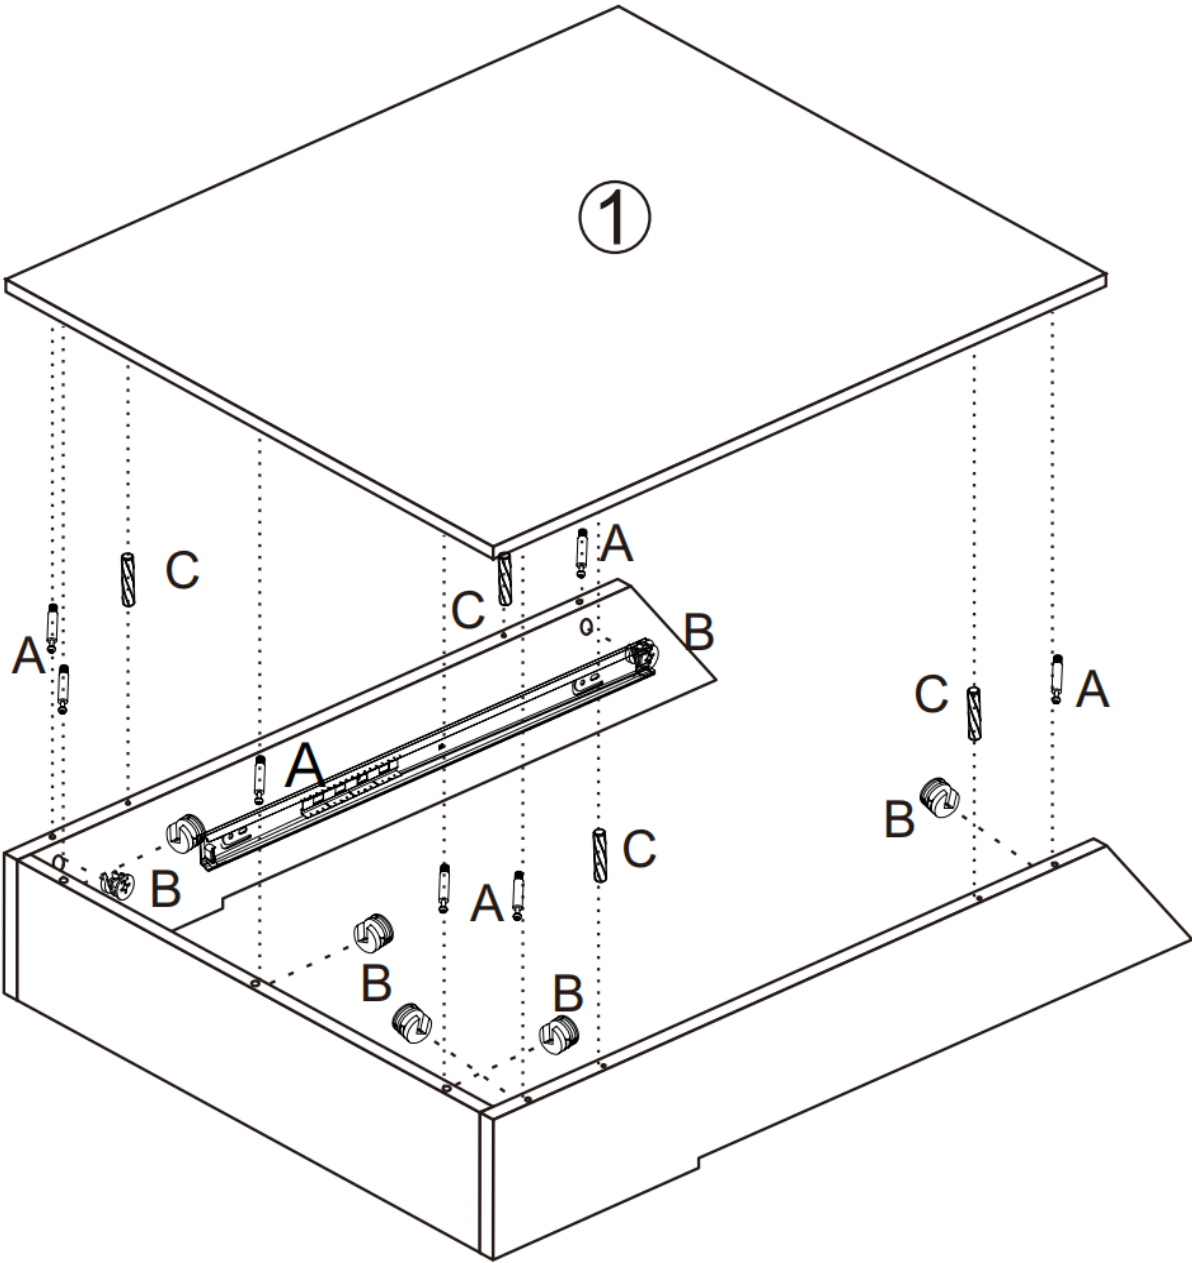
STEP 22



A 6X35 mm	B 15X10mm	C 6X30mm
		
x7	x7	x4



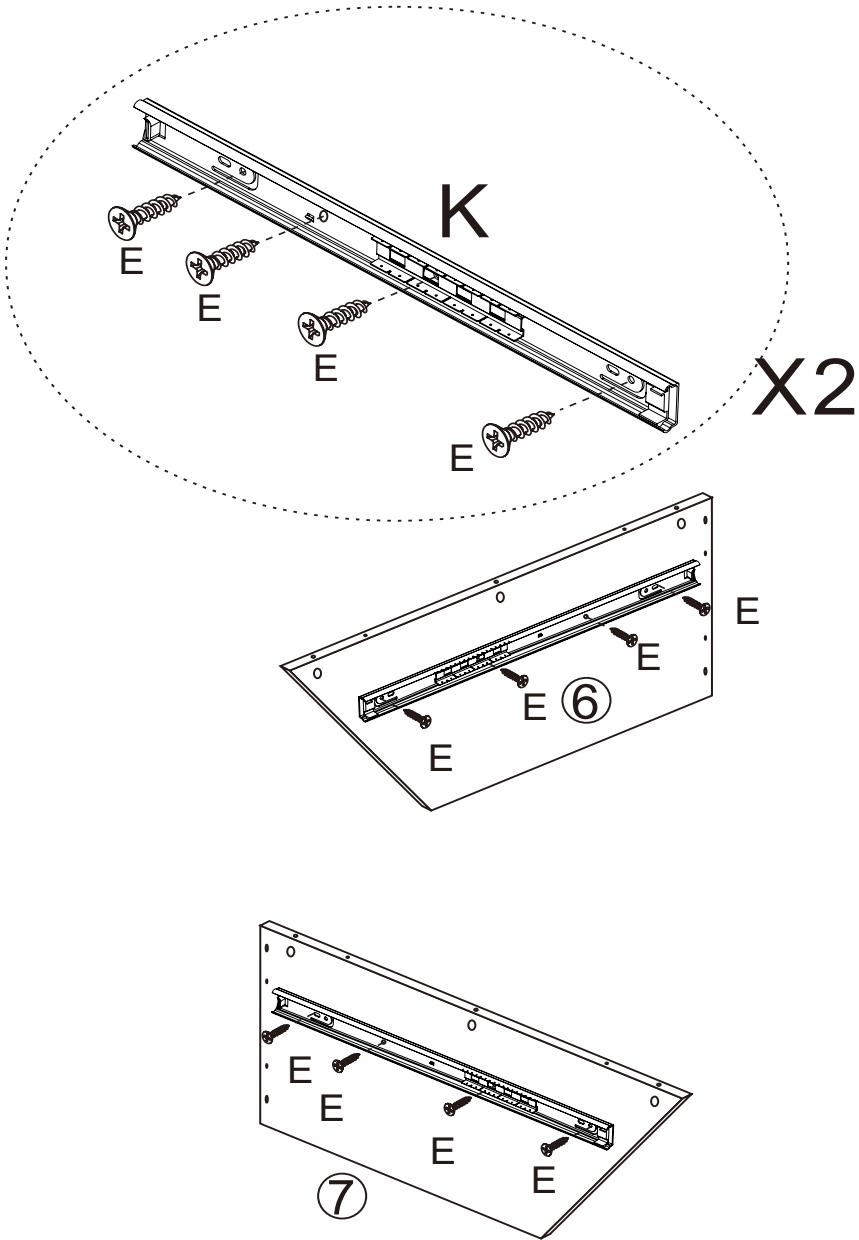

STEP 23



K 550mm


E 3.5\*12mm



X2

X8

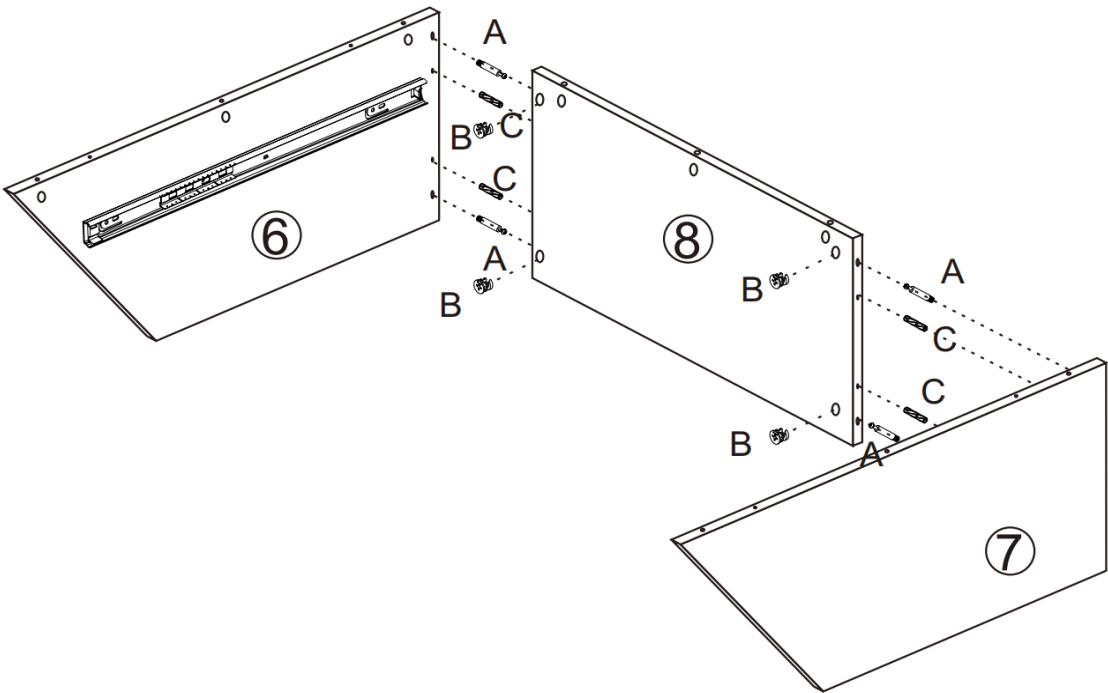


STEP 24



A 6X35mm

B 15X10mm

C 6X30mm







X4

X4


X4

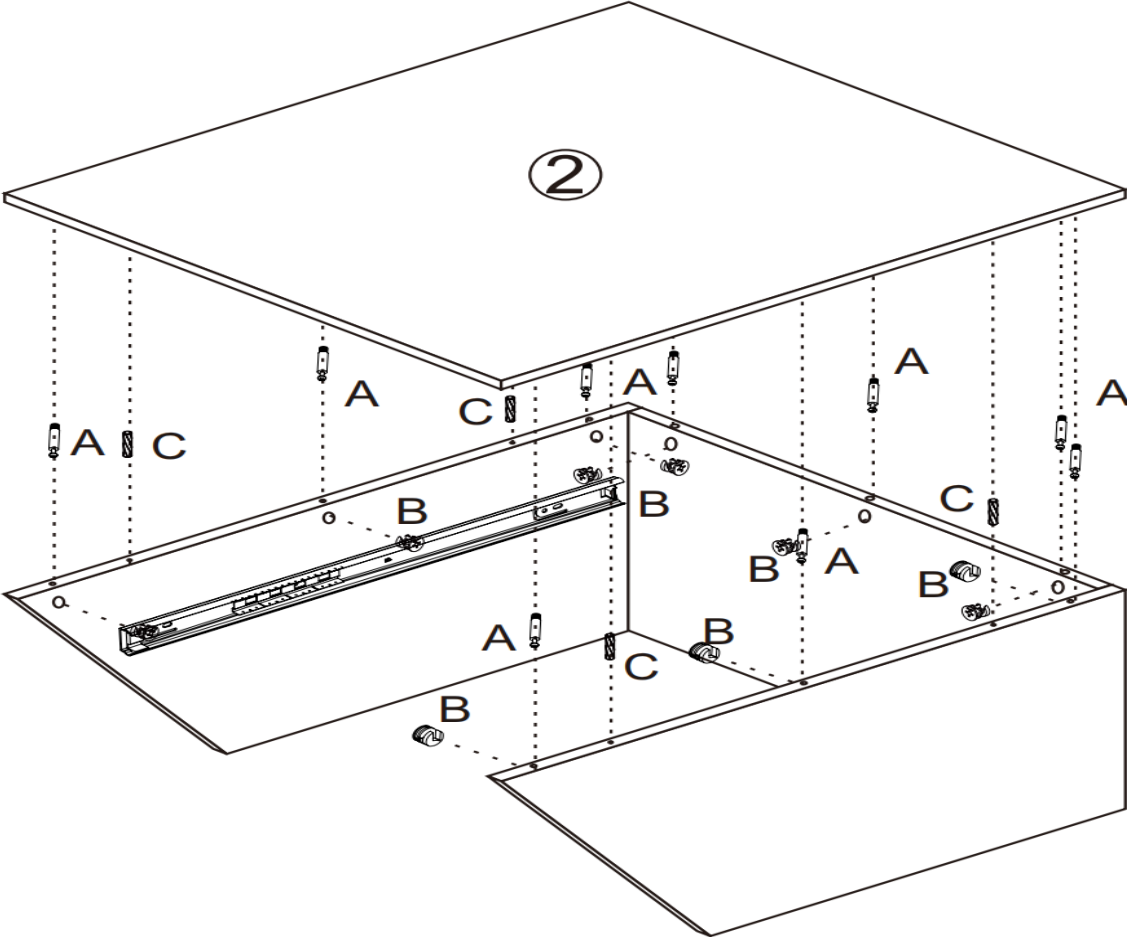**STEP 25**






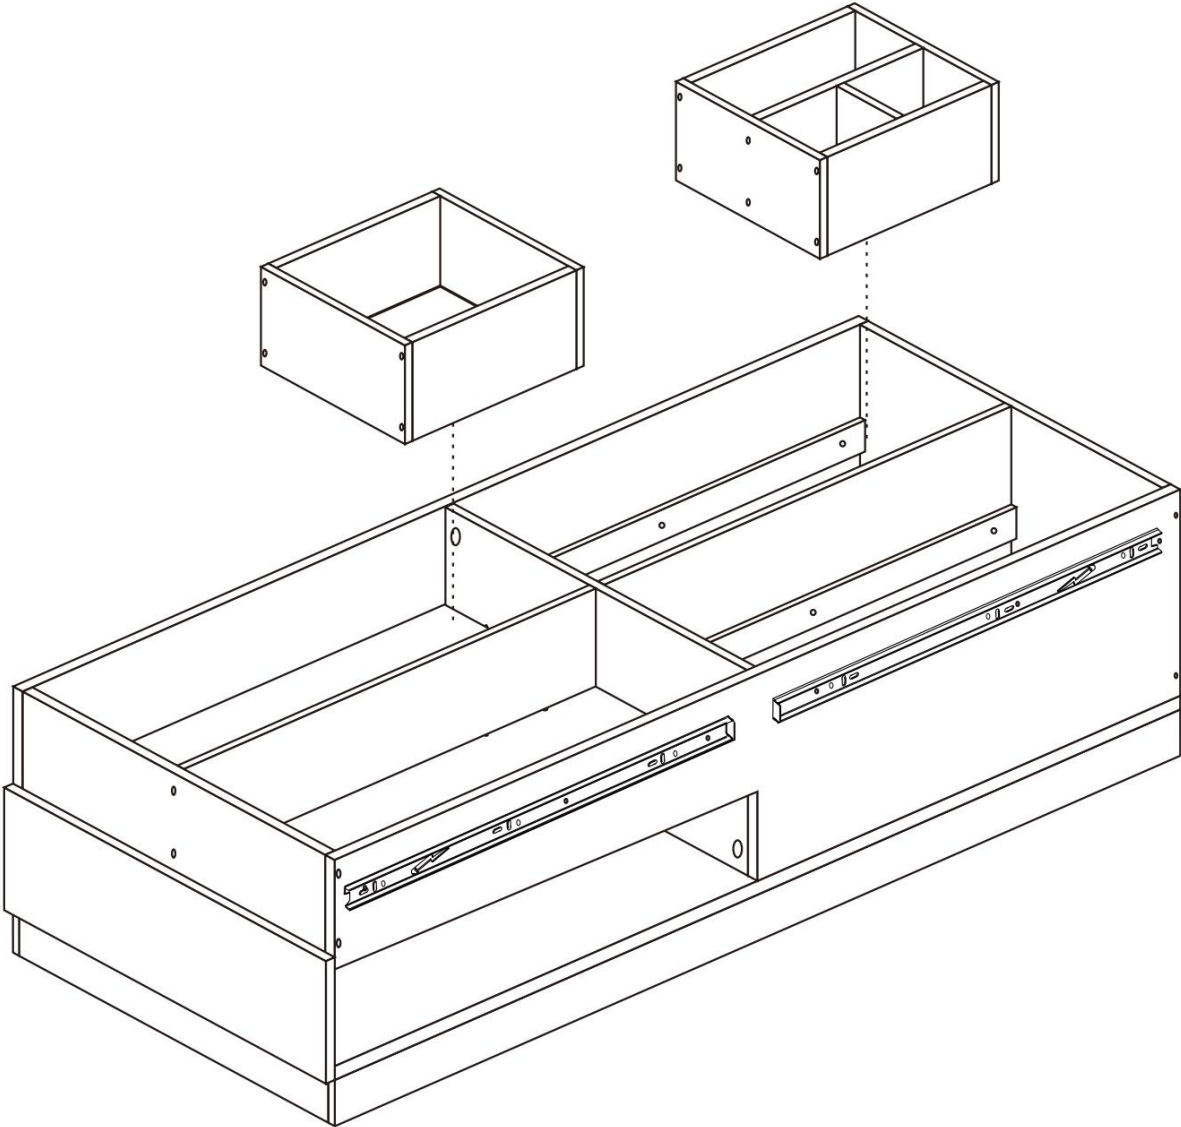


A 6X35mm	B 15X10mm	C 6X30mm
		
x9	x9	x4

**STEP 26**

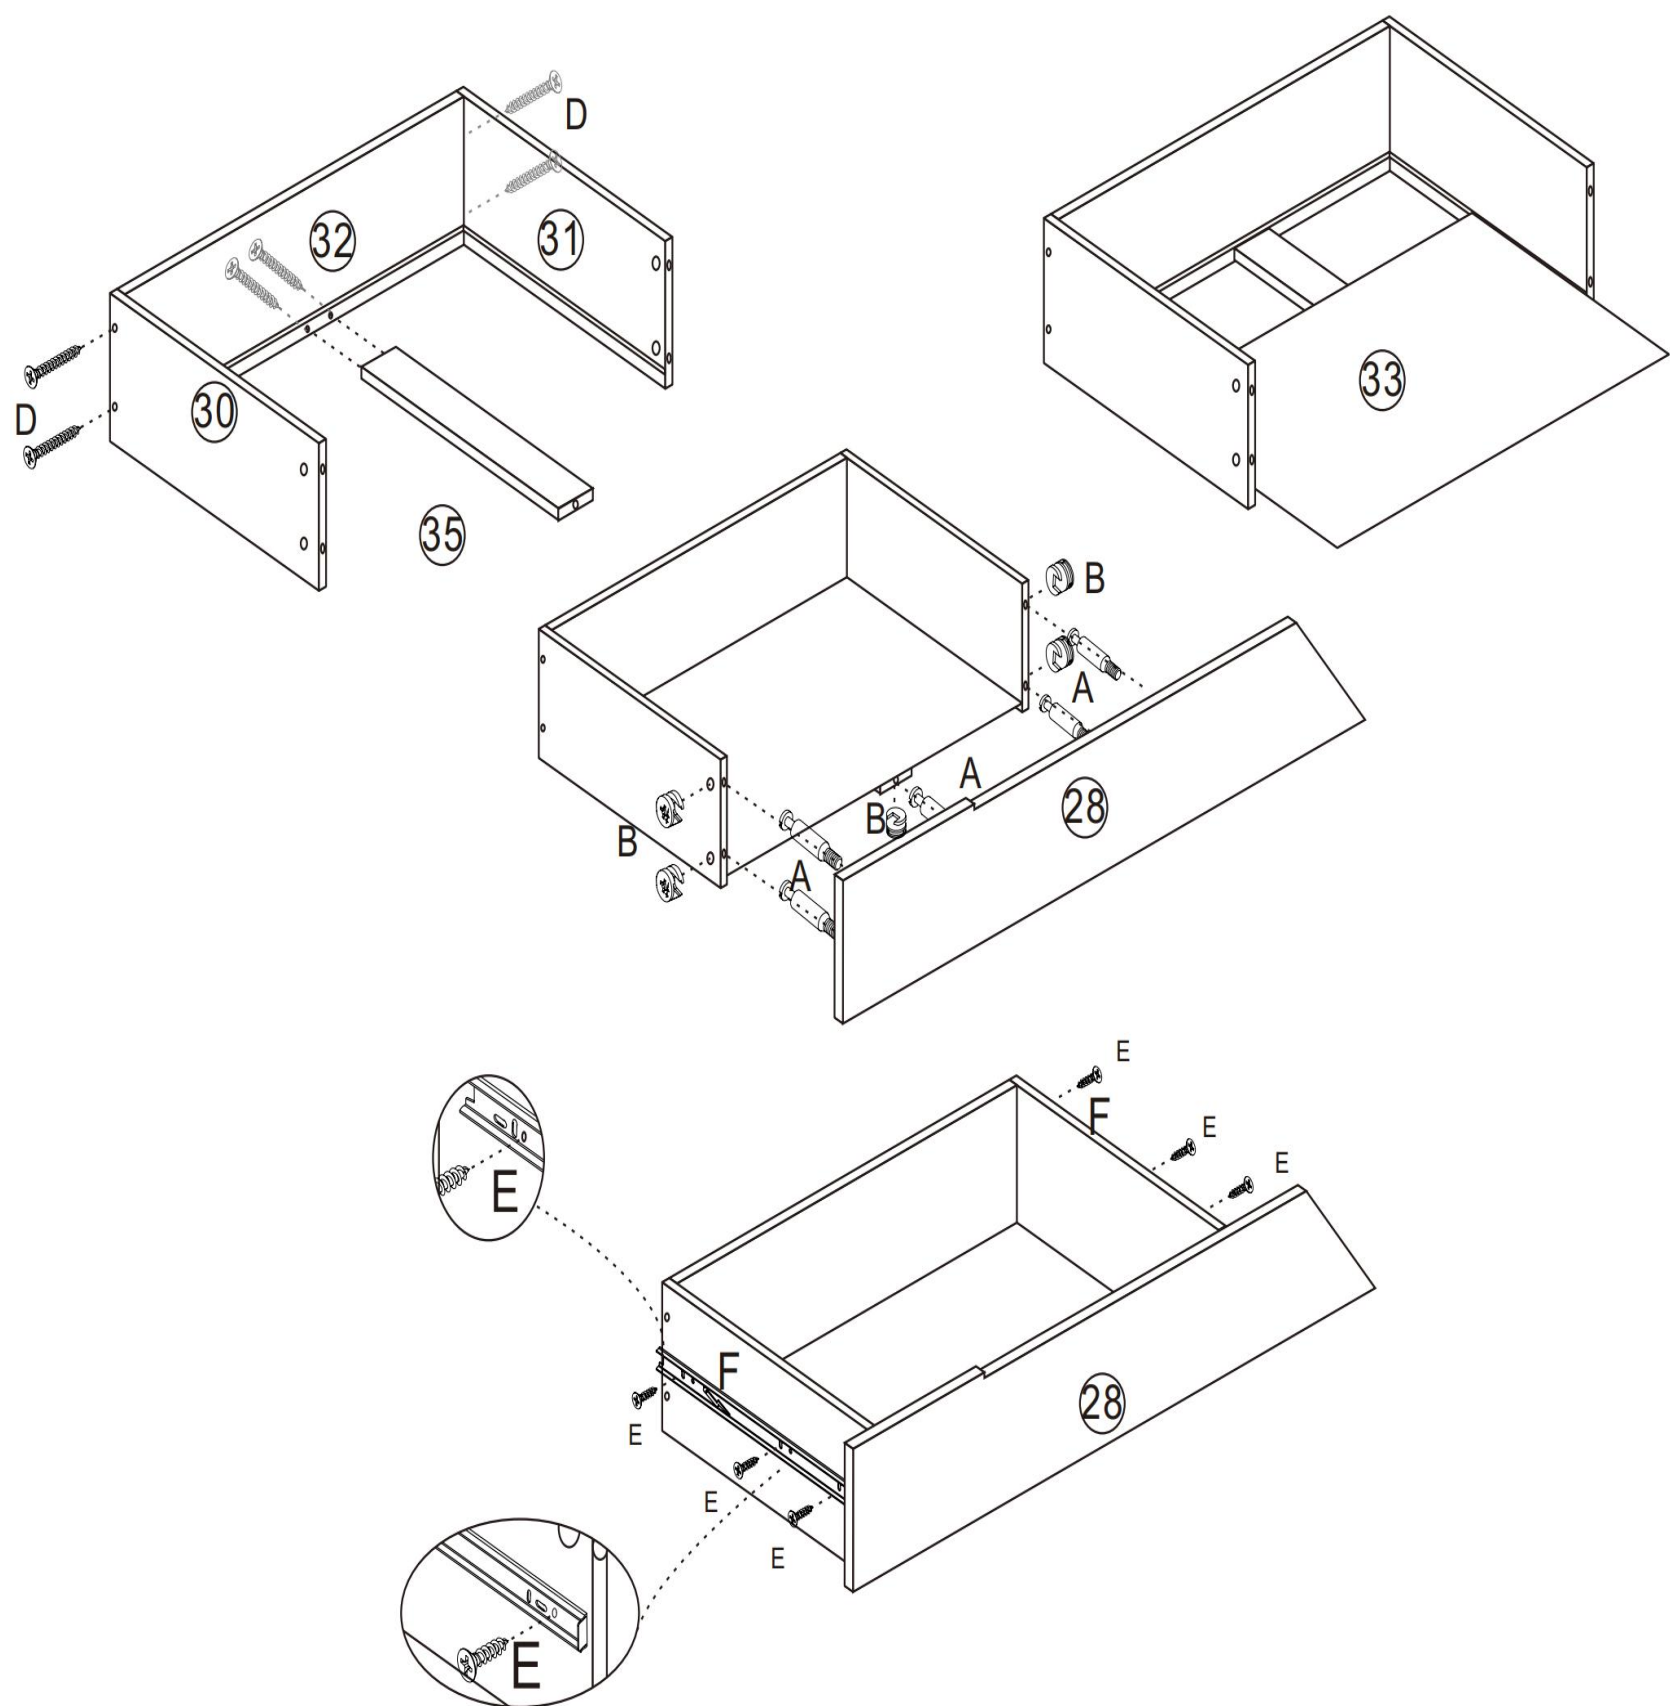


STEP 27



A 6X35mm	B 15X10mm	D 4X3mm	E 3.5X12mm	F 250mm
				
x5	x5	x6	x6	x2

**STEP 28**

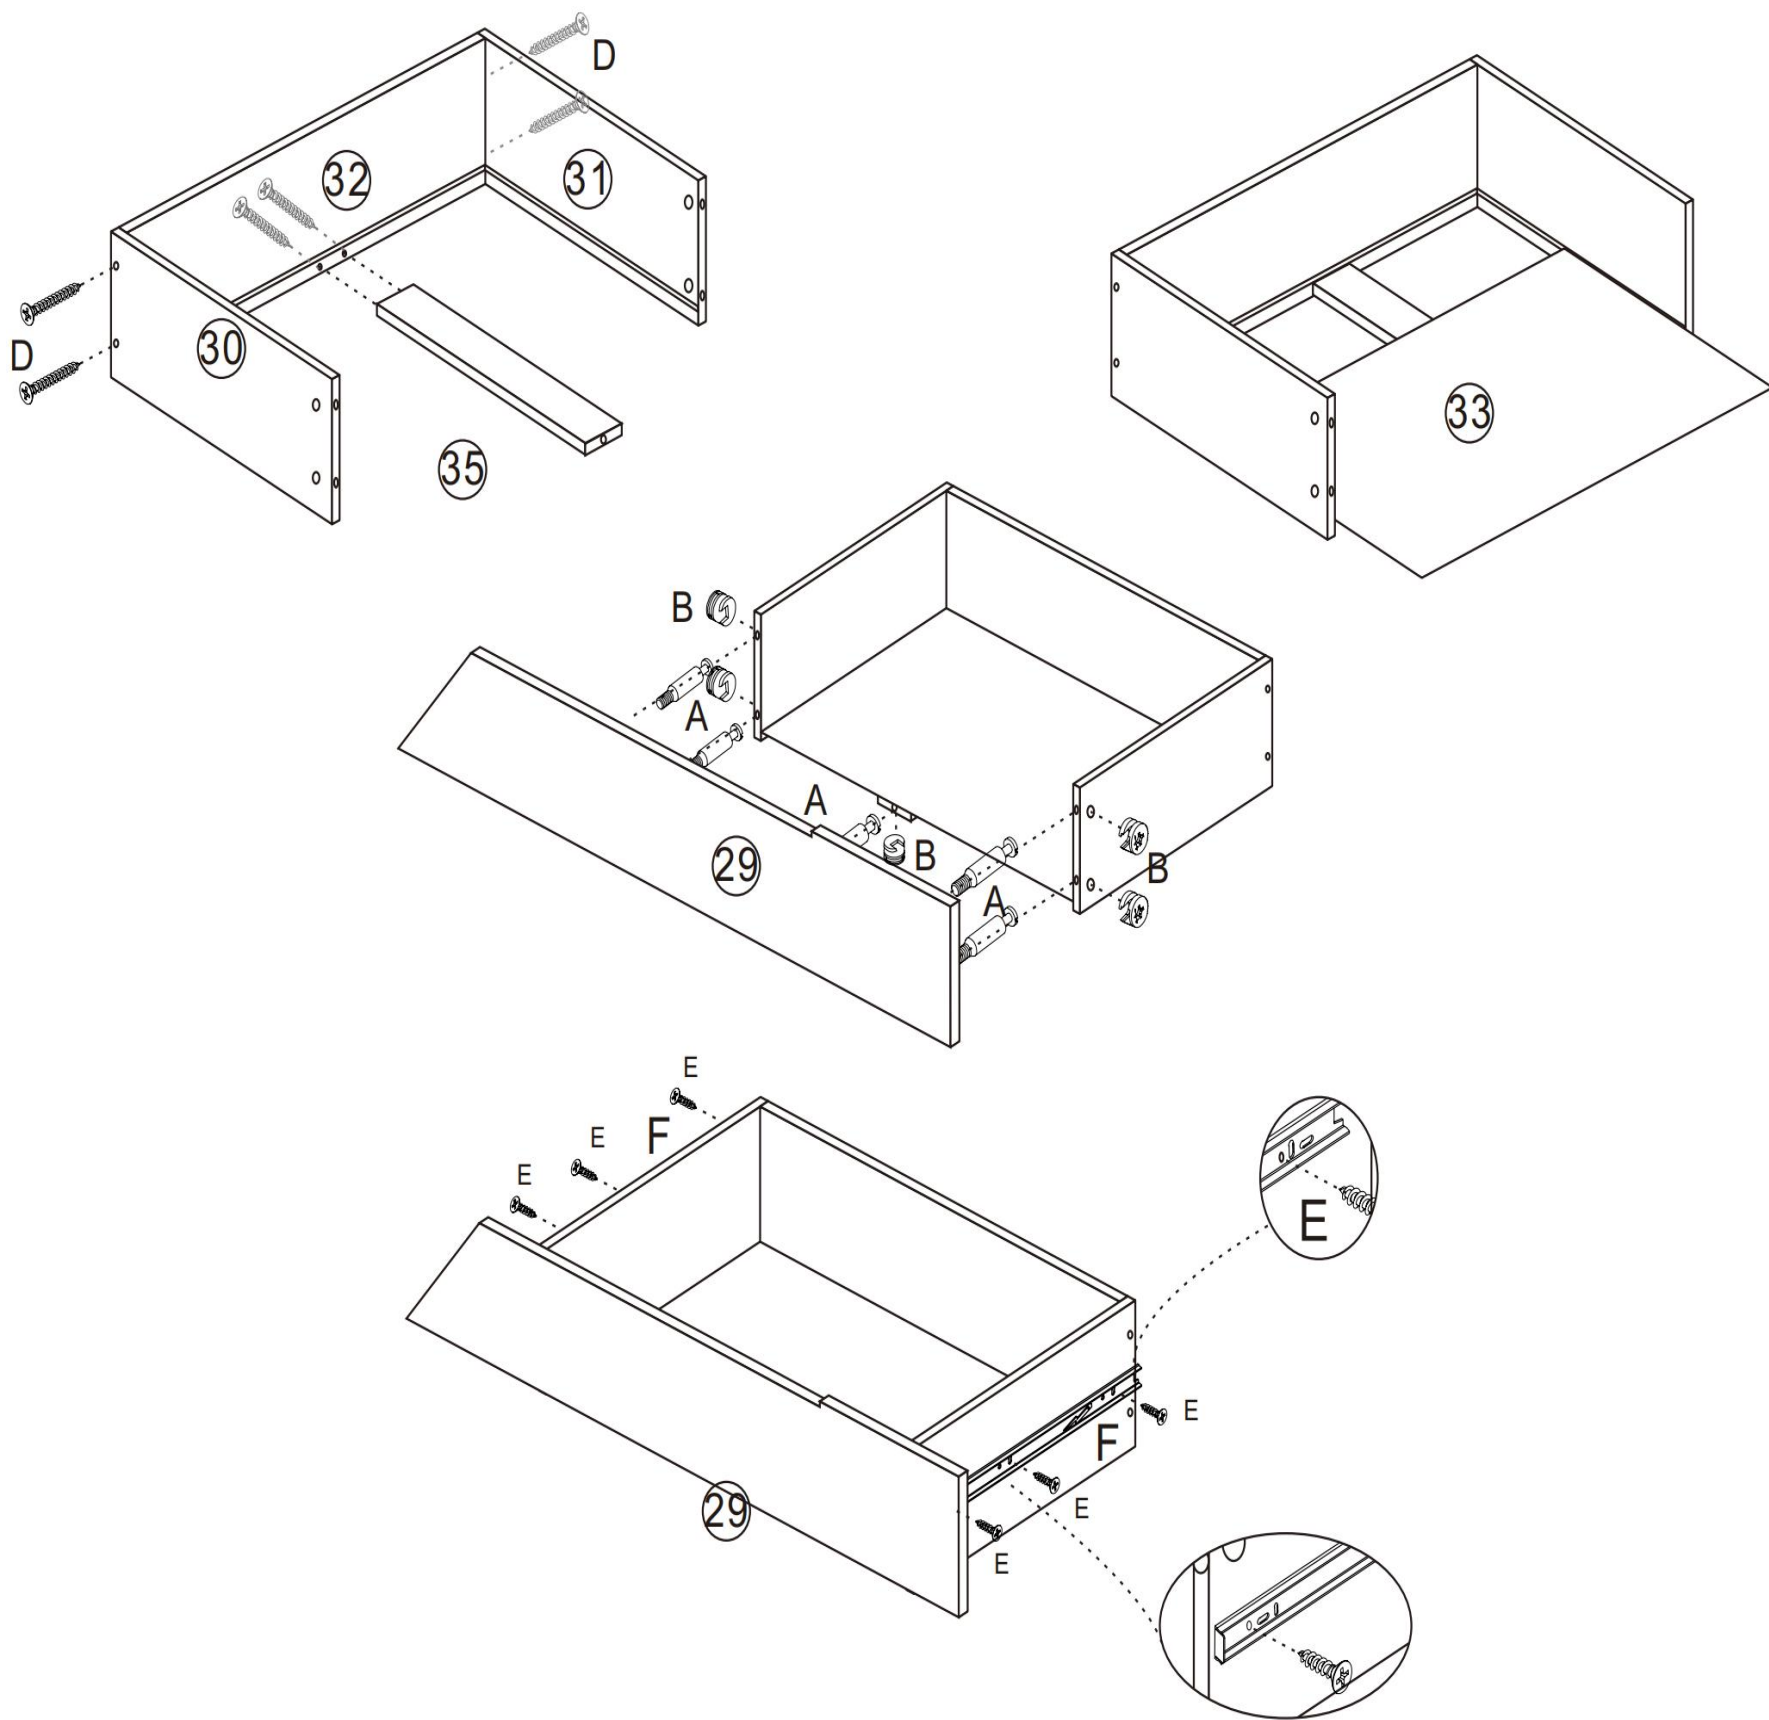

A 6X35mm    B 15X10mm    D 4X35mm    E 3.5X12mm    F 250mm



x5

x5

x6

x6

x2



## STEP 29

