

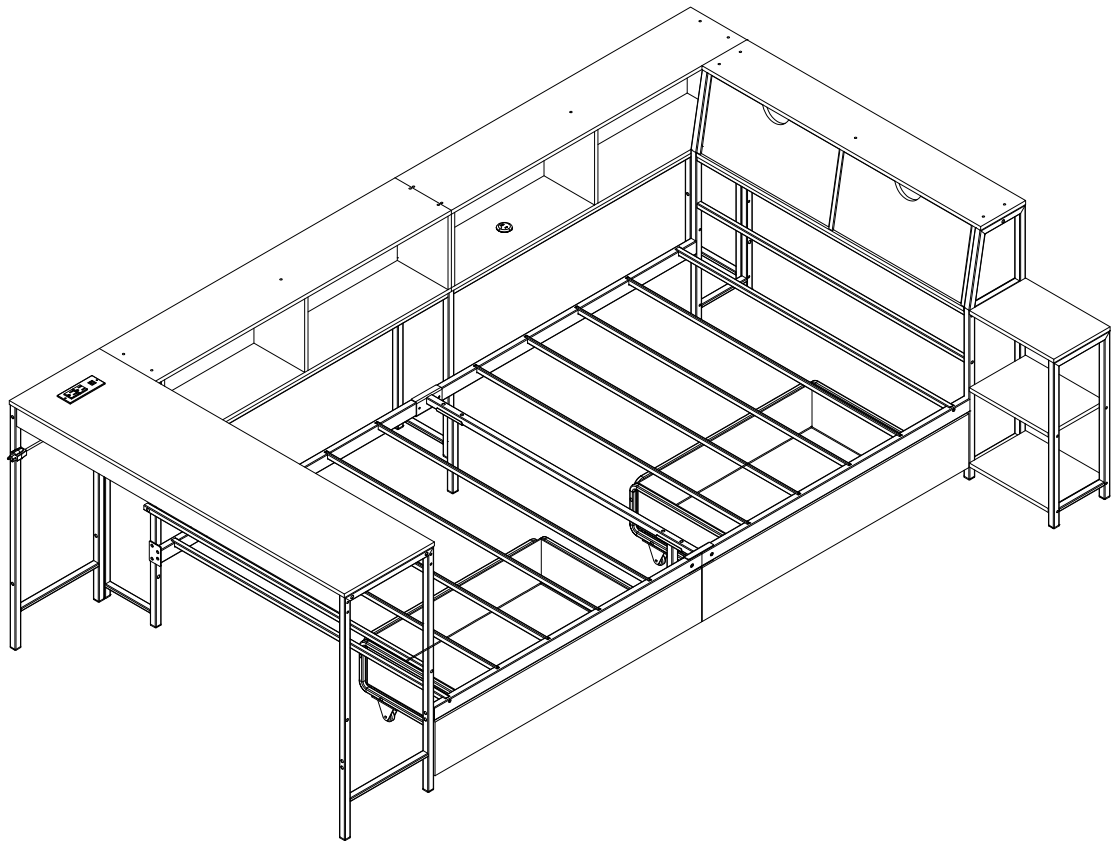



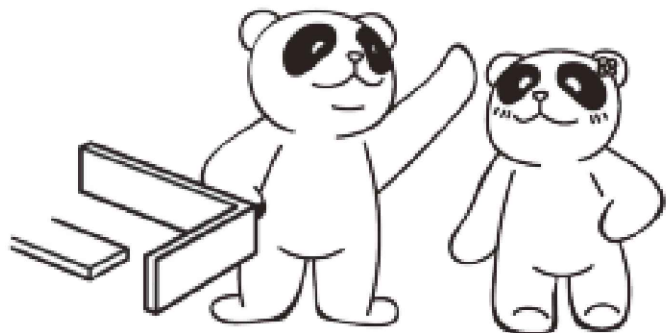
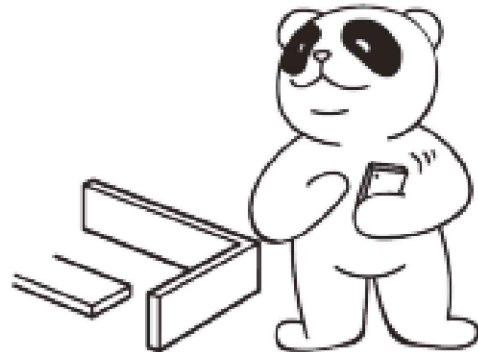
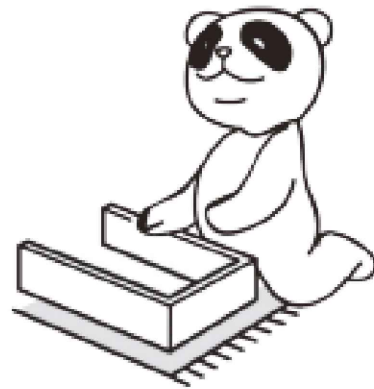


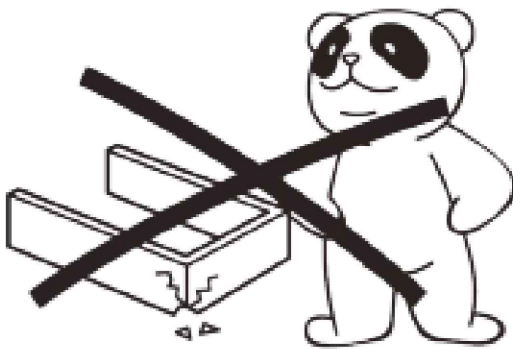


A	 M5*40mm	51	B	 M6*15mm	4	C	 M6*25mm	18
D	 M6*28mm	35	E	 M6*60mm	2	F	 M6	9
G	 M6*40mm	13	H	 M6	2	I	 M6*50mm	3
J	 M4*14mm	4	K	 M4*18mm	8	L		2
M	 M4*10mm	13	N	 M6*40mm	8	O	 15cm	2
P	 1.0	8	Q	 ø6*M4*20mm	4	R	 23cm	2
S		4	T		1	U		1
V		1	W	 M6	1	X	 M4	1
Y	 M6	1	Z		1	a	 M4	32
b		1	c	 M4	1	d	 M4*28mm	32
e		1						

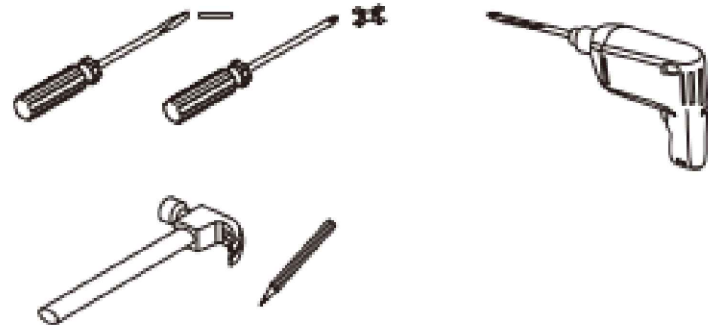

Note:


1. Should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.

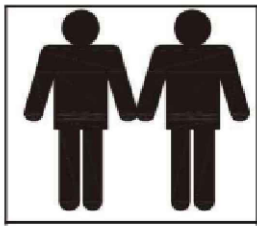

It needs at least Before starting the two people to install.




Before starting the assembly, you must read the whole manual and follow the instructions

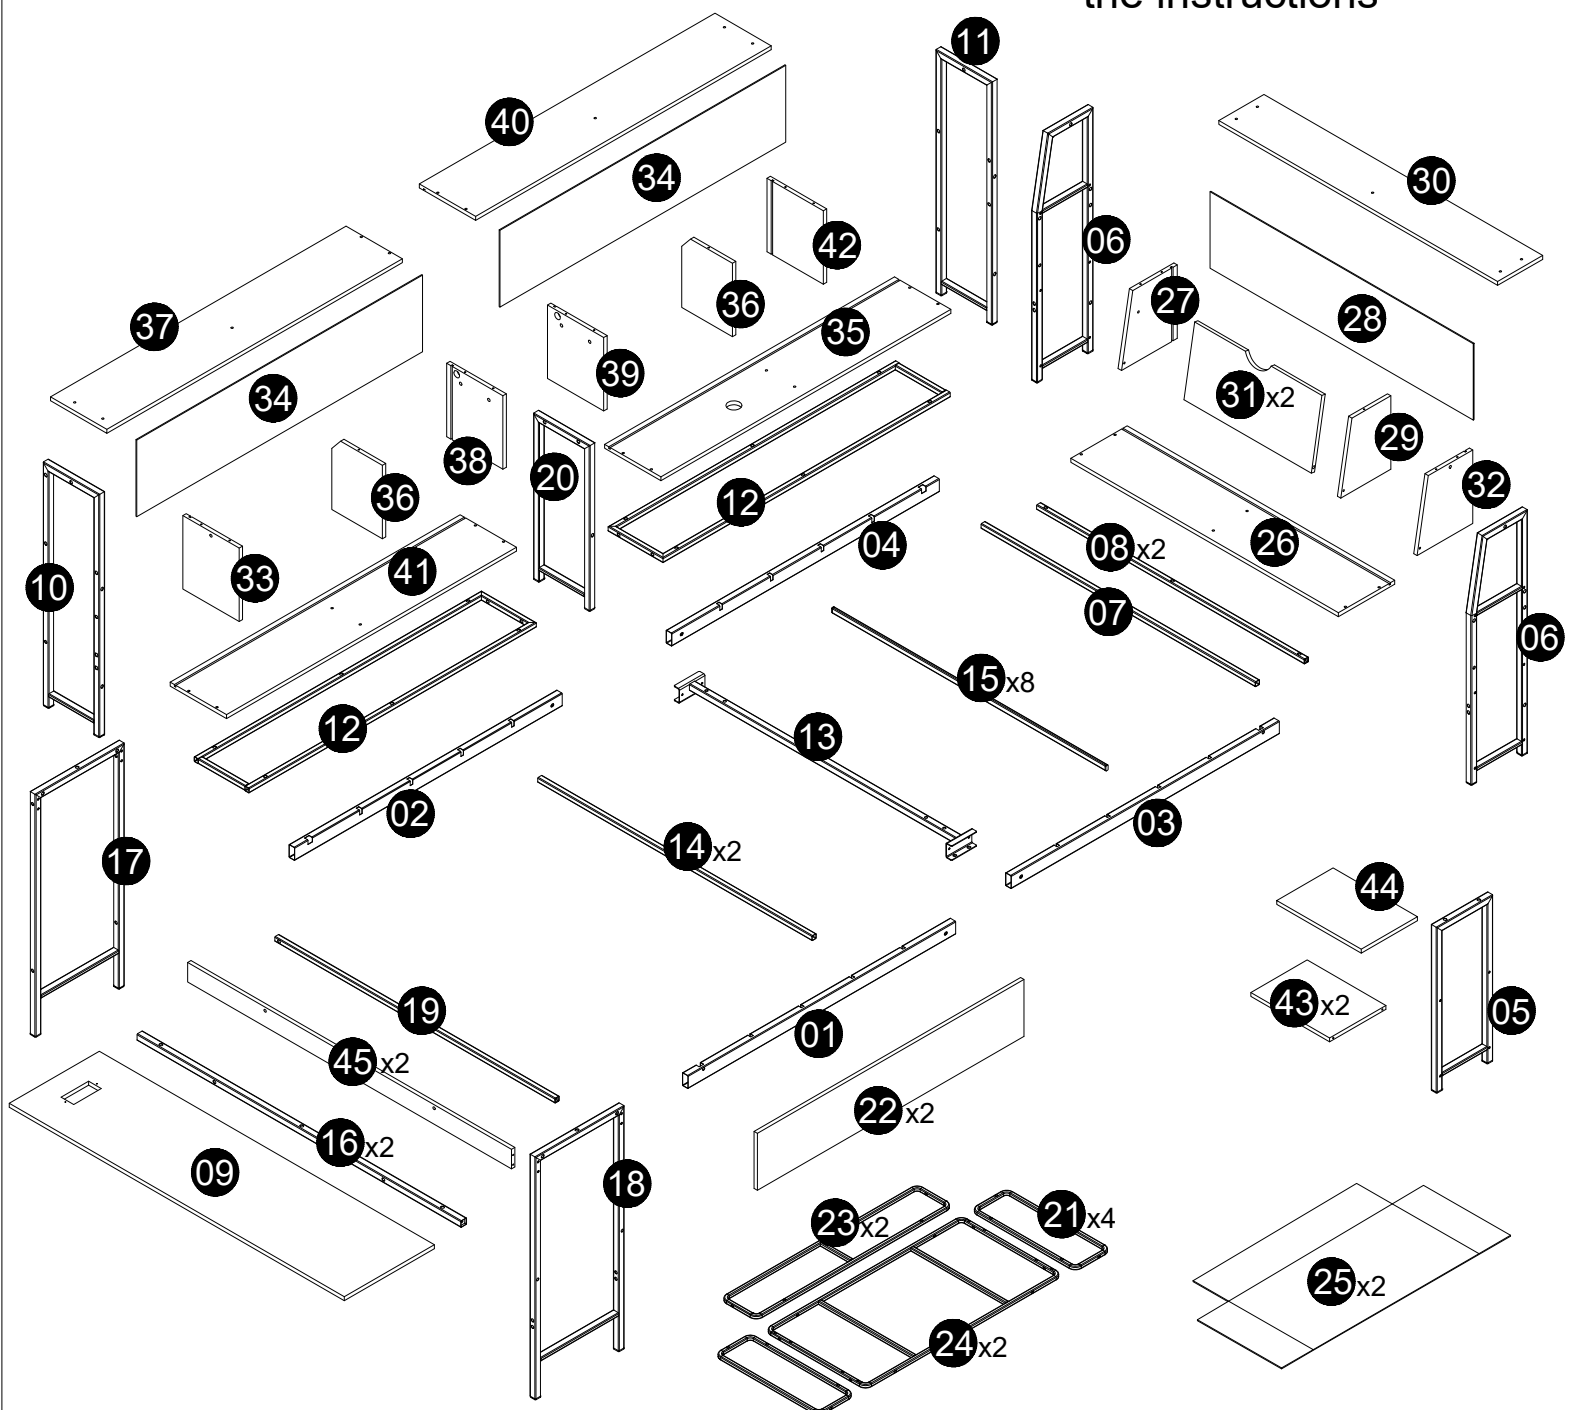


1

L		2pcs
M	 M4*10mm	4pcs

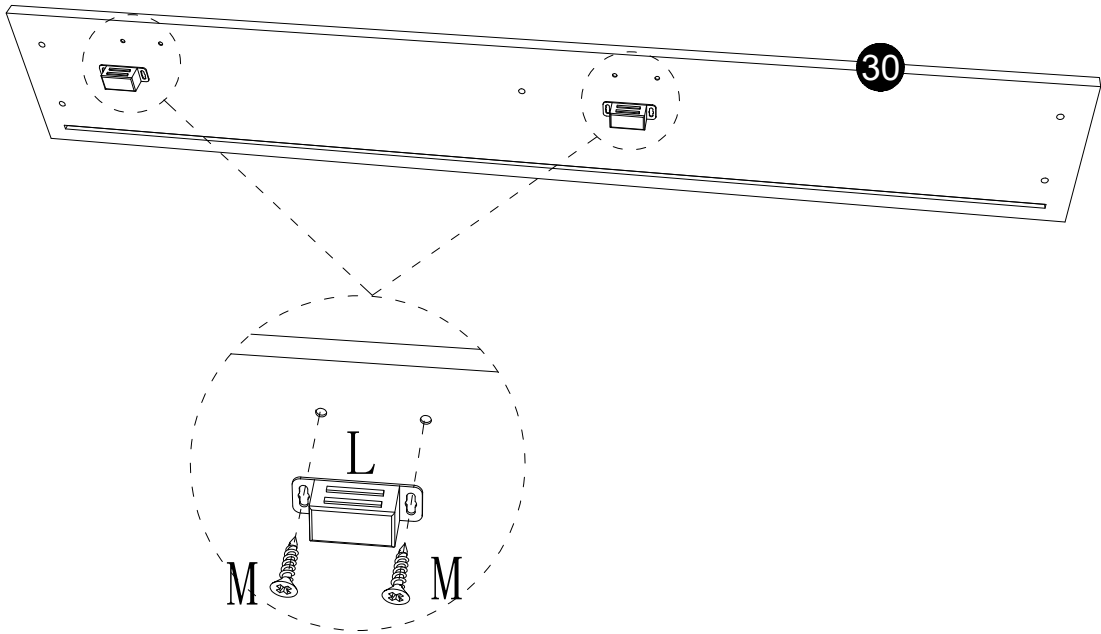

2

L		2pcs
M	 M4*10mm	4pcs

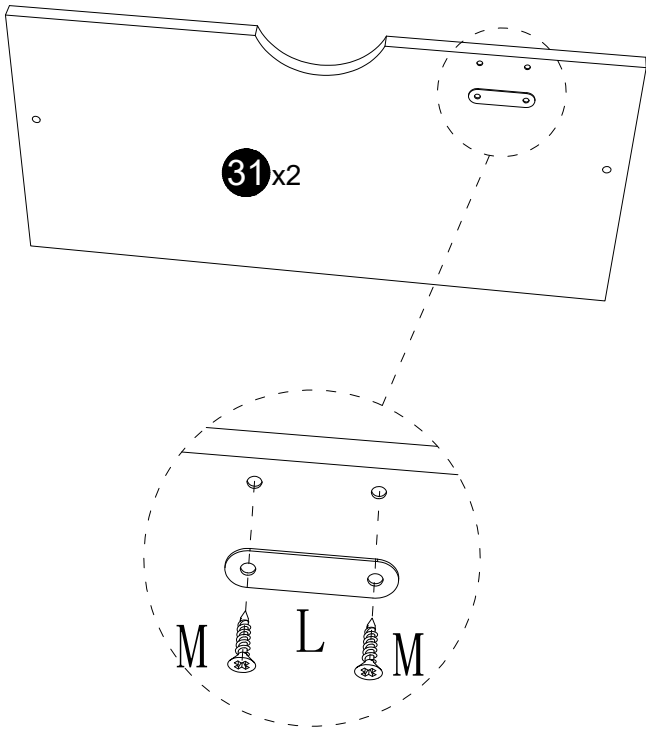


3

A



M5*40mm 6pcs

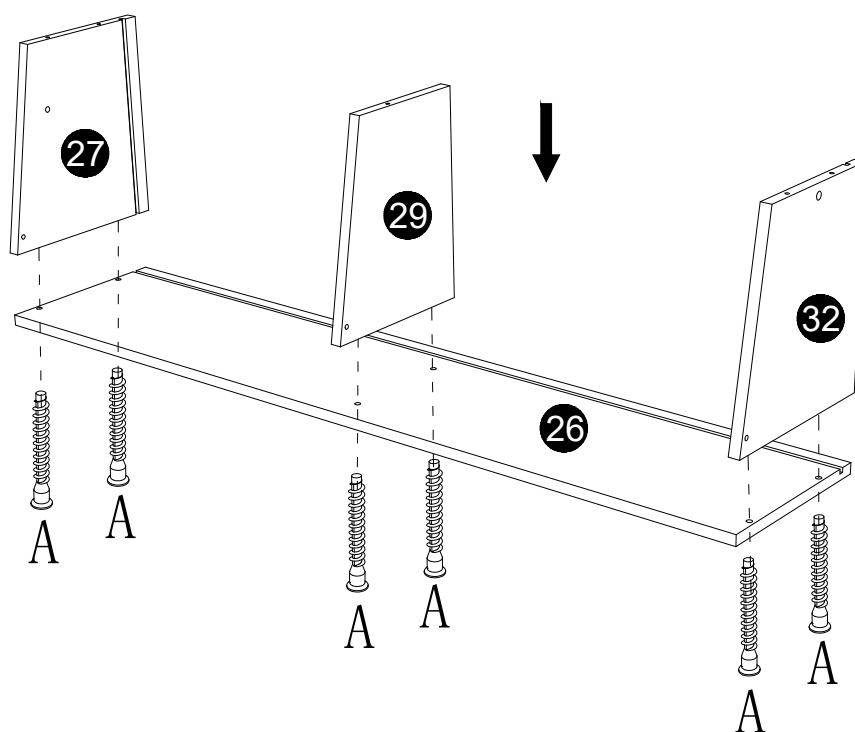


4

A



M5*40mm 5pcs

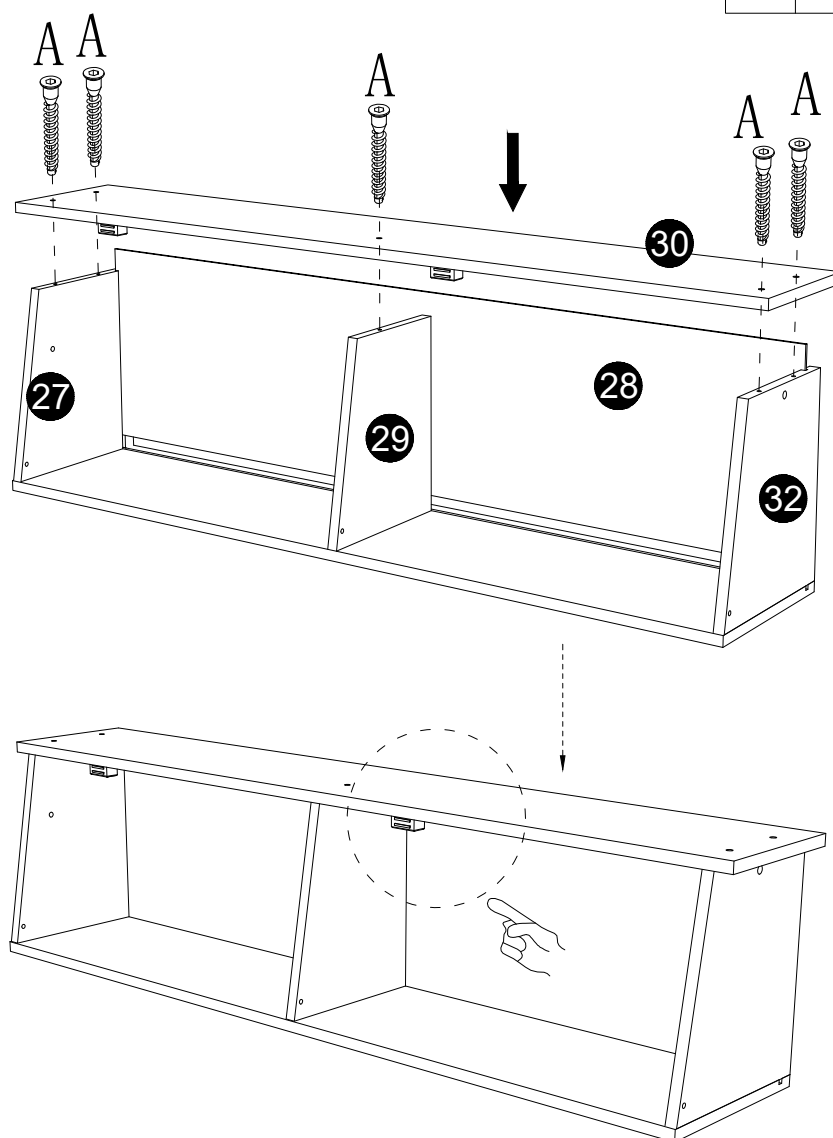


5

A



M5*40mm 10pcs

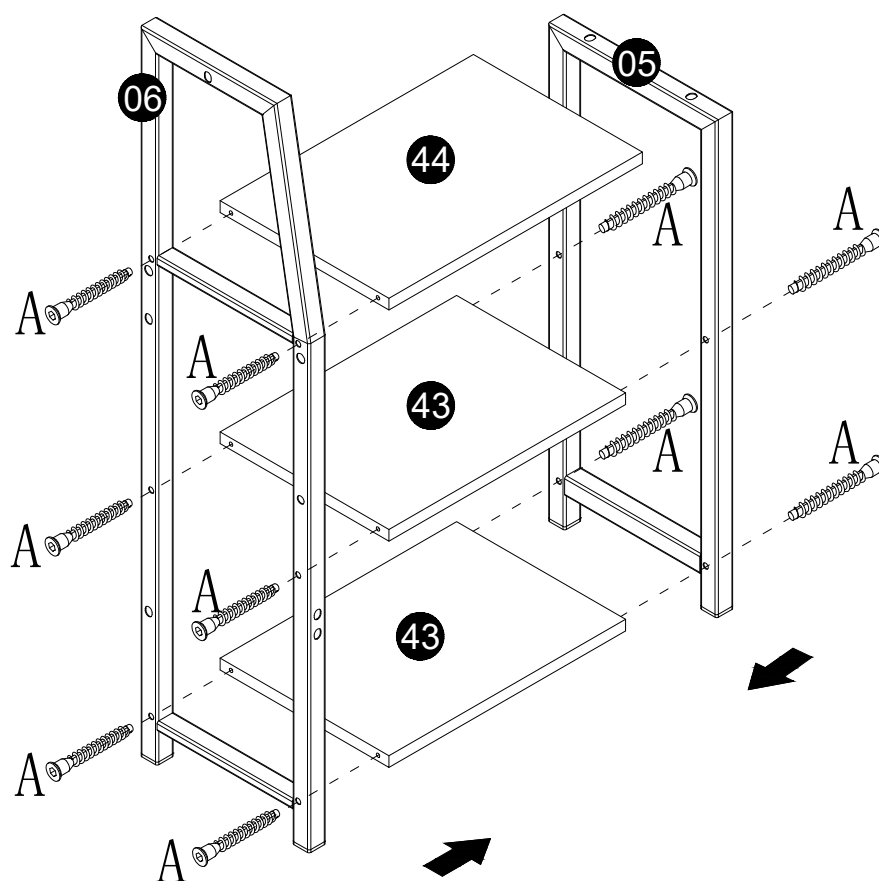


6

D



M6*28mm 2pcs

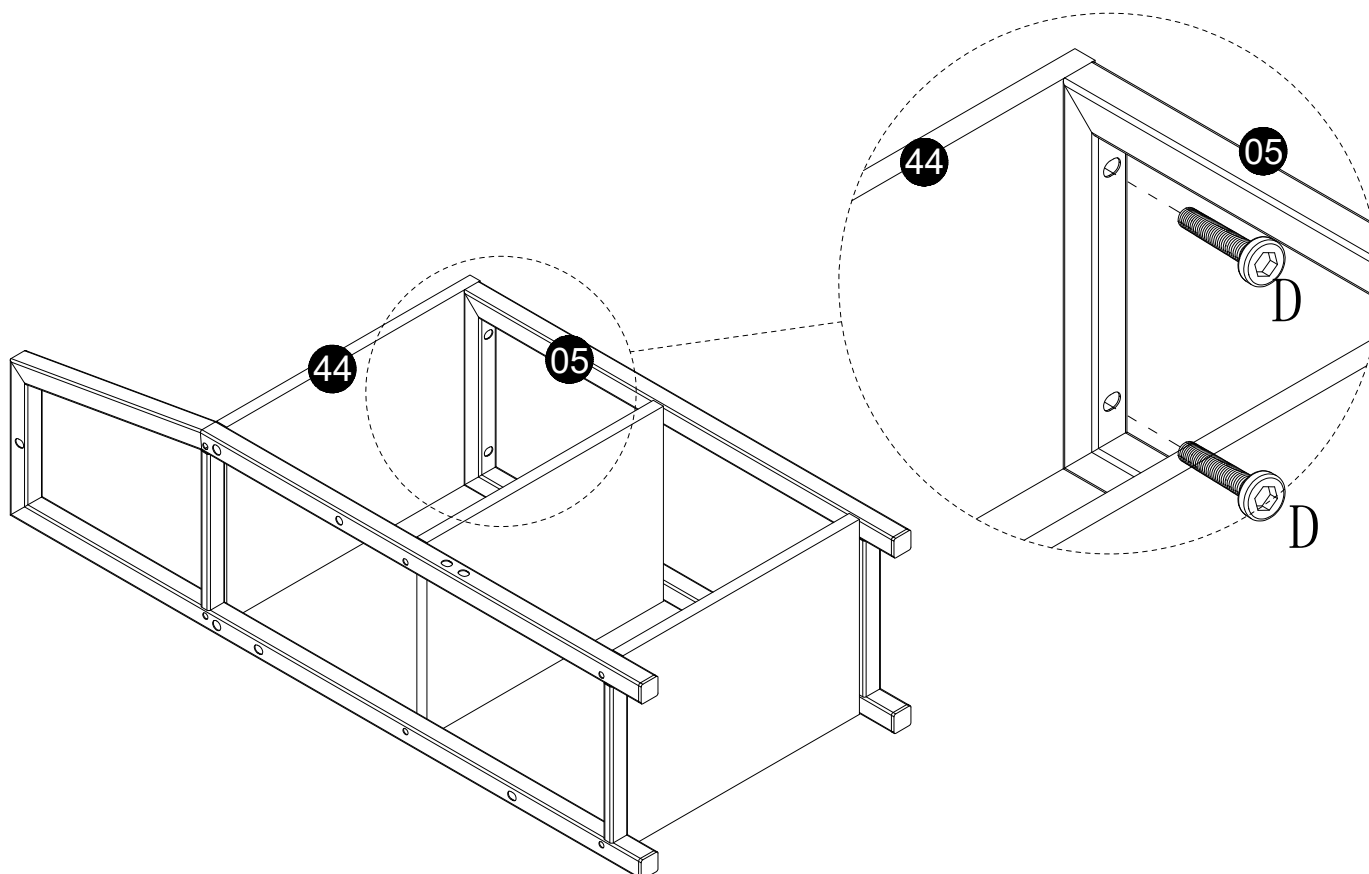


7

N



M6*40mm 4pcs

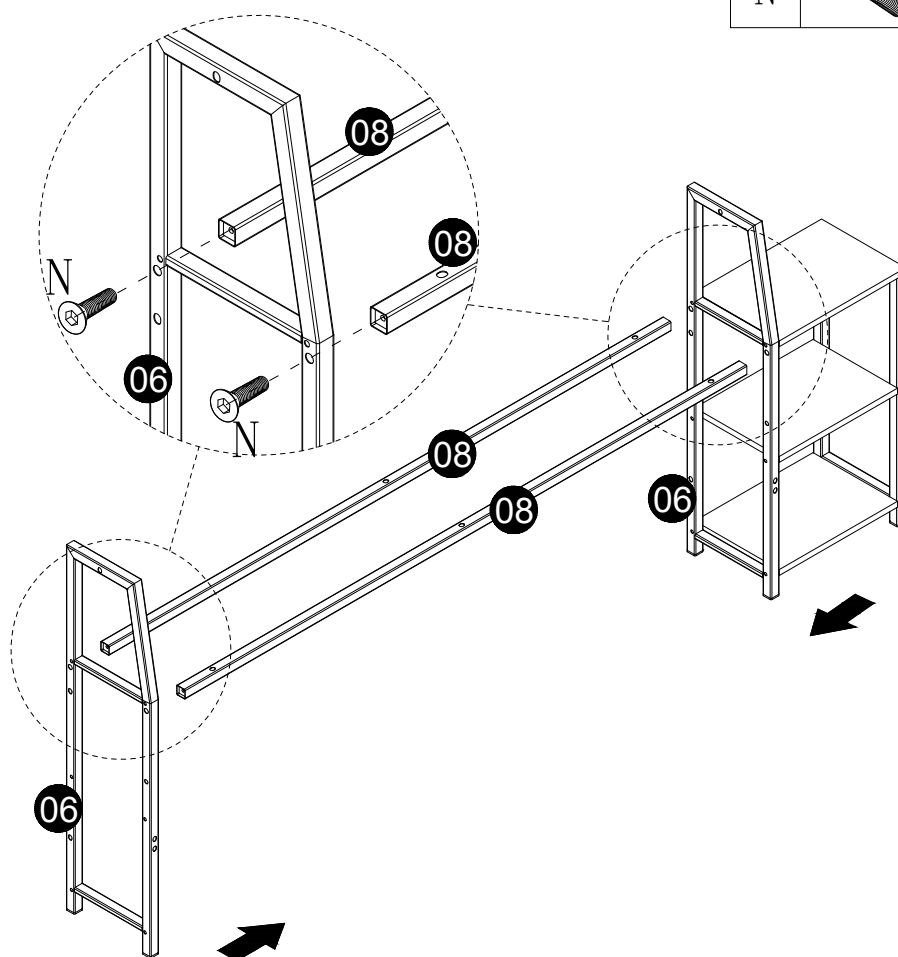


8

C




M6*25mm 6pcs

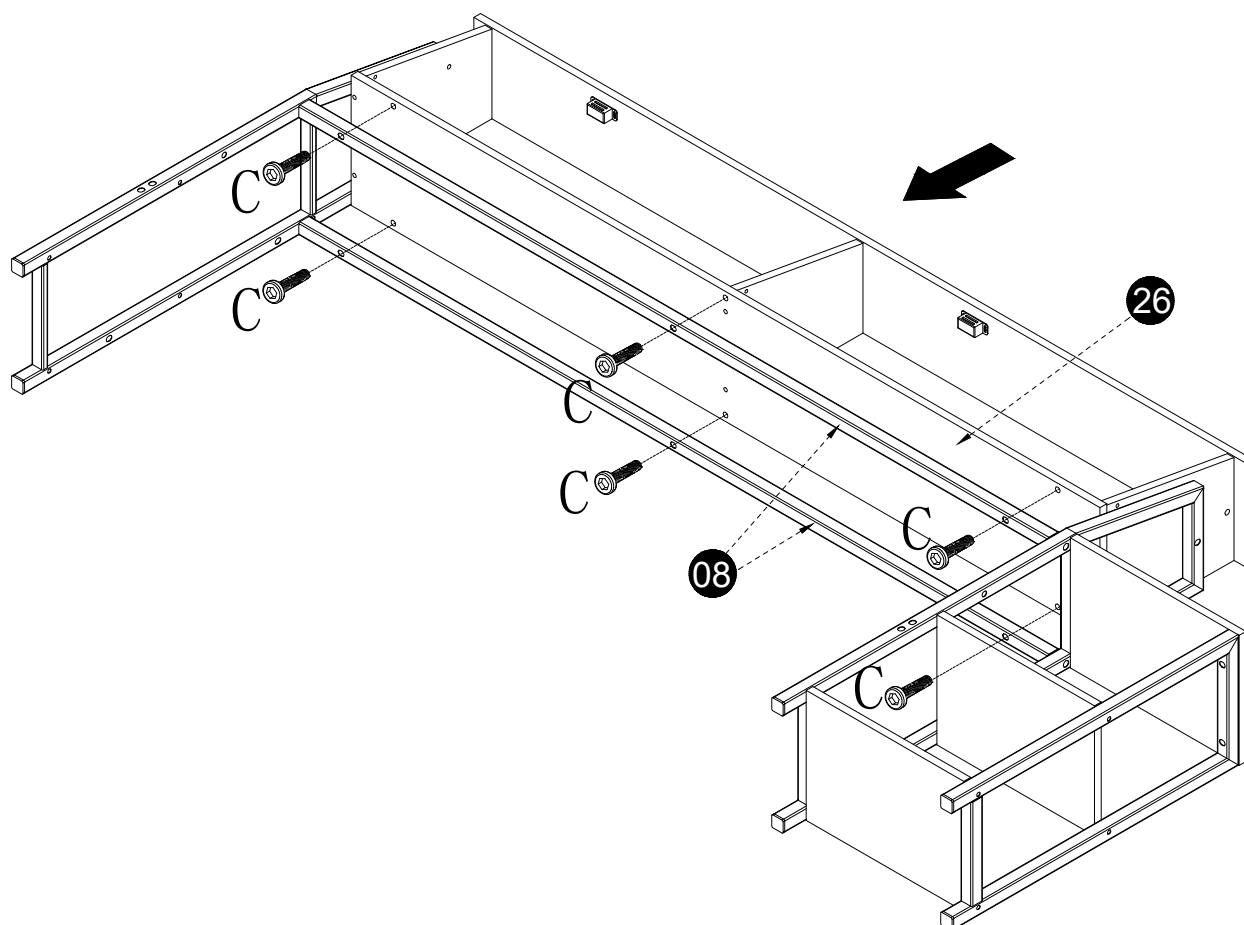


9

D		M6*28mm	2pcs
G		M6*40mm	2pcs

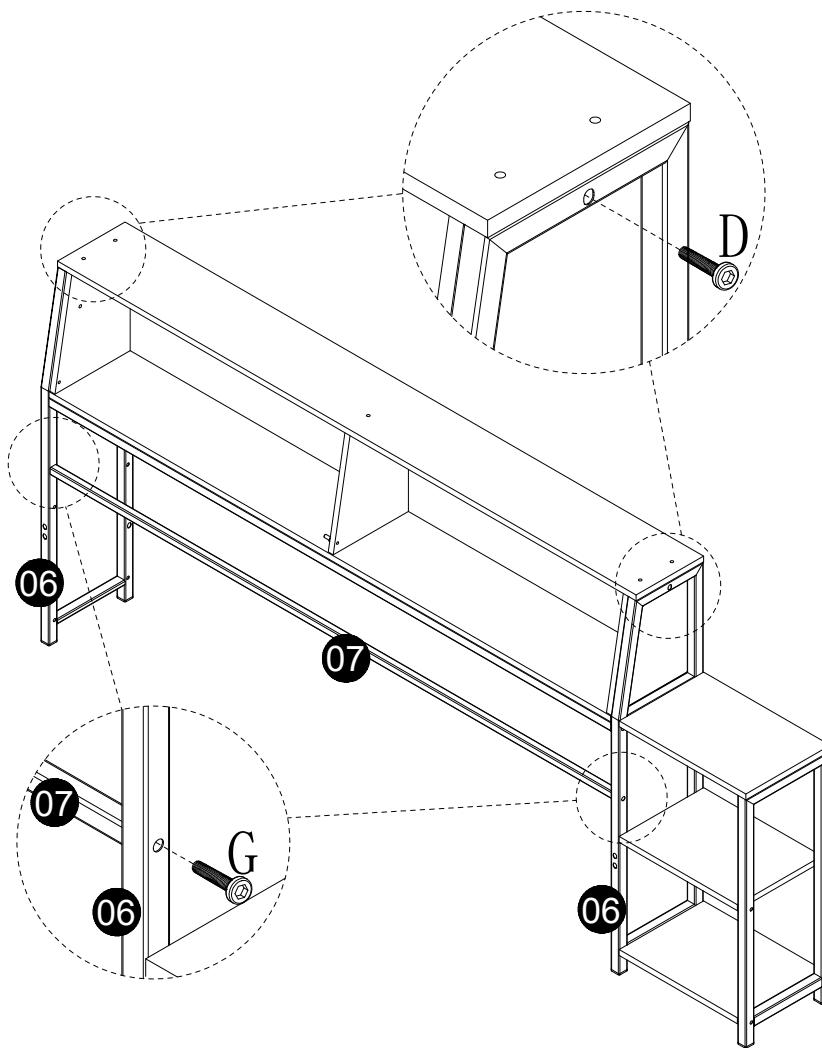


10

S		4pcs
---	---	------

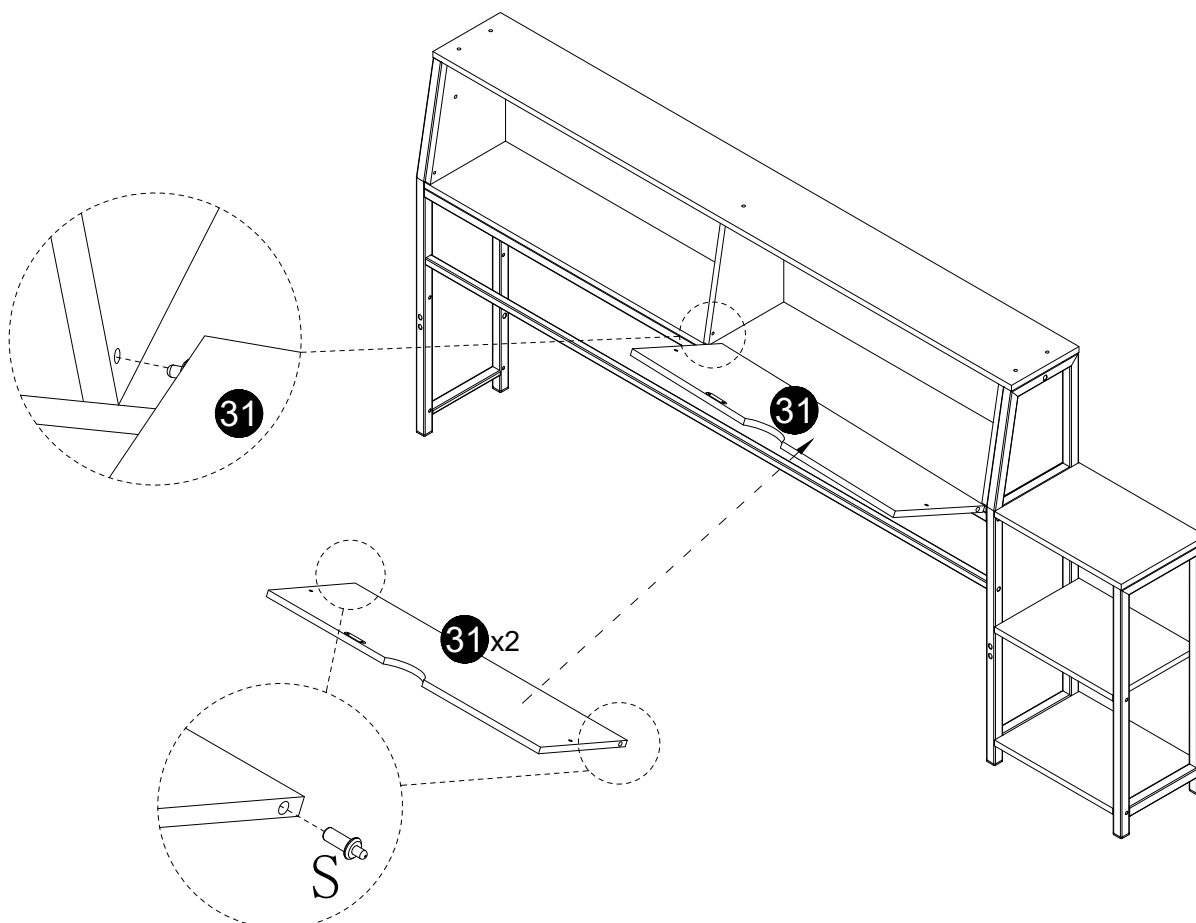


11



J		M4*14mm	4pcs
O			2pcs


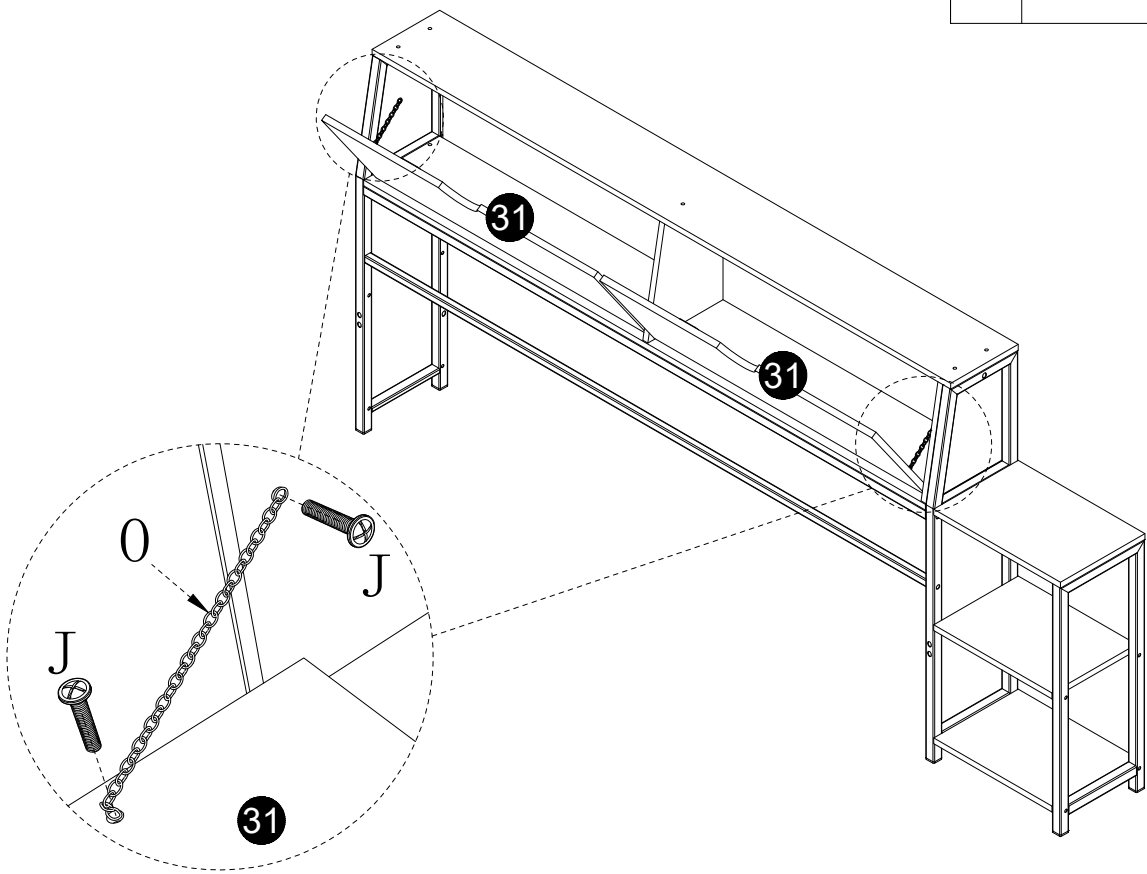


12

D		M6*28mm	4pcs
F		M6	4pcs
R		23cm	2pcs

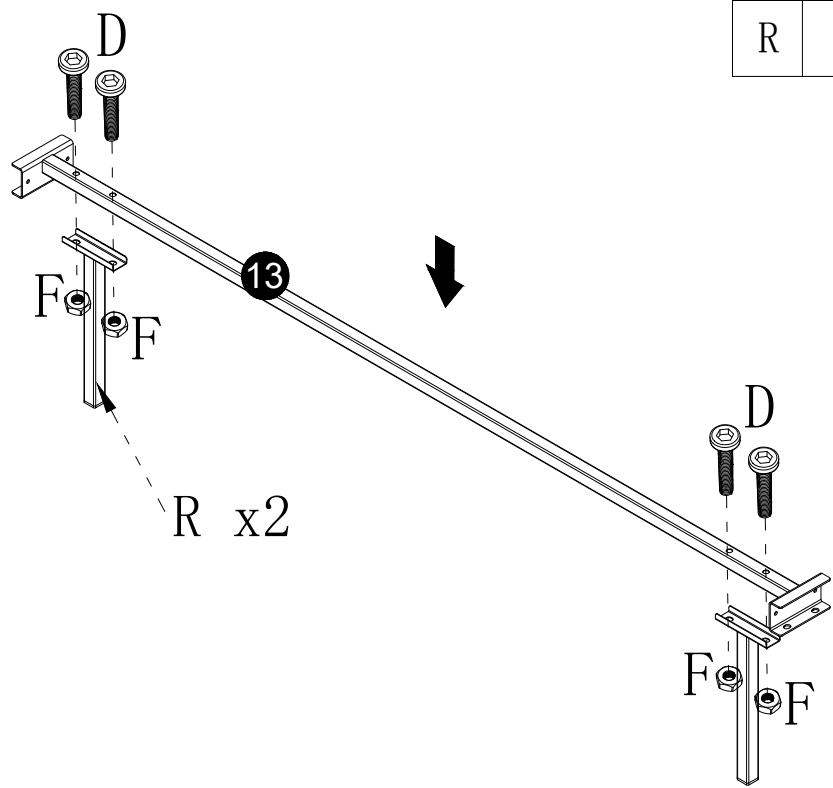


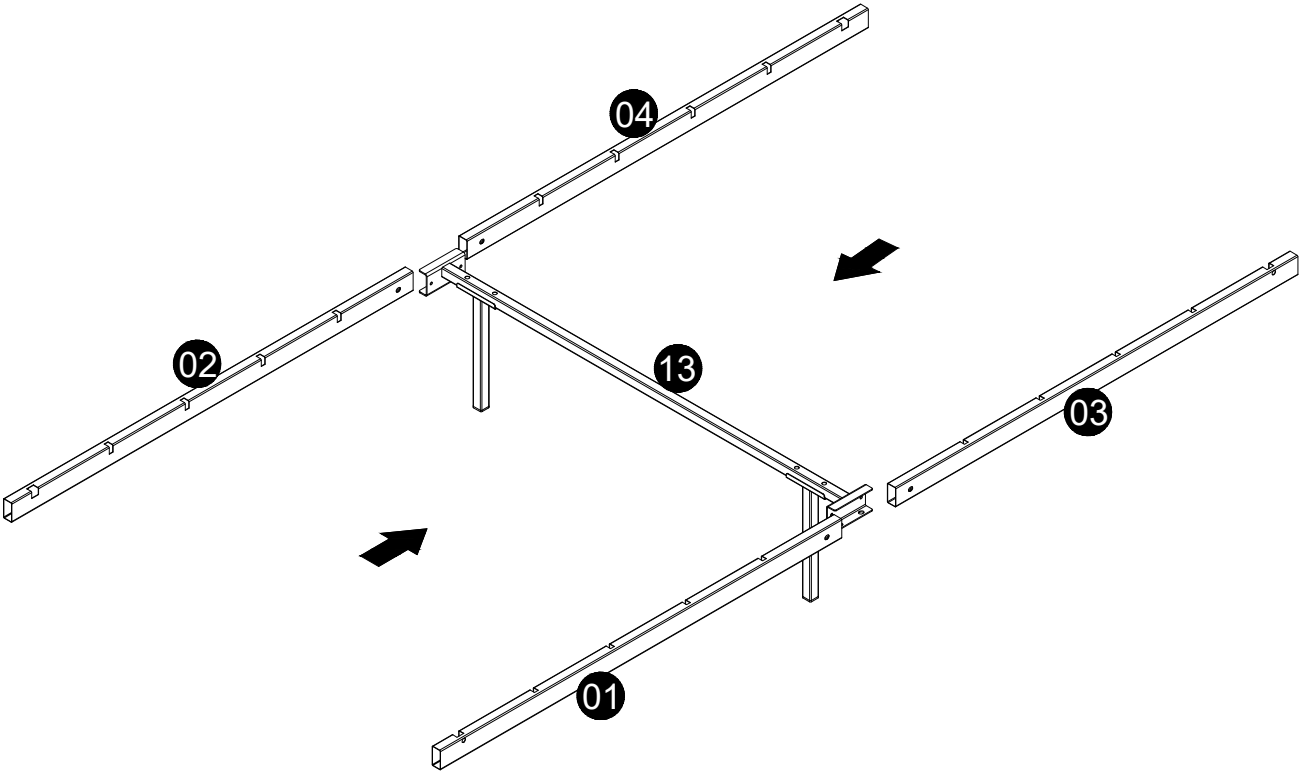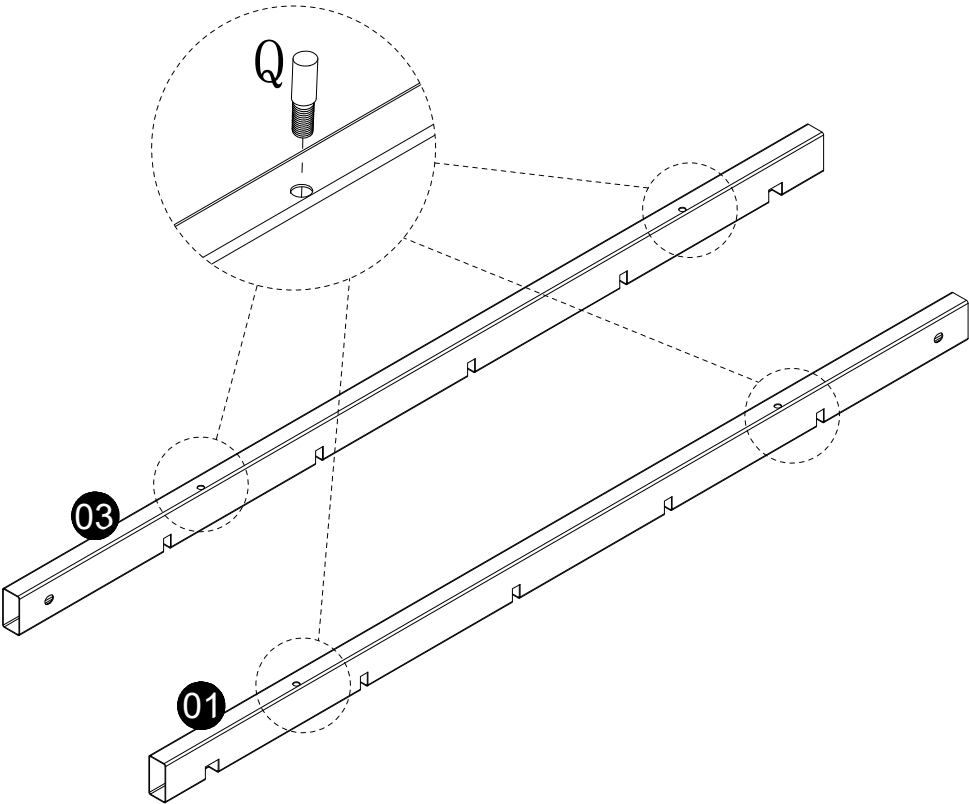

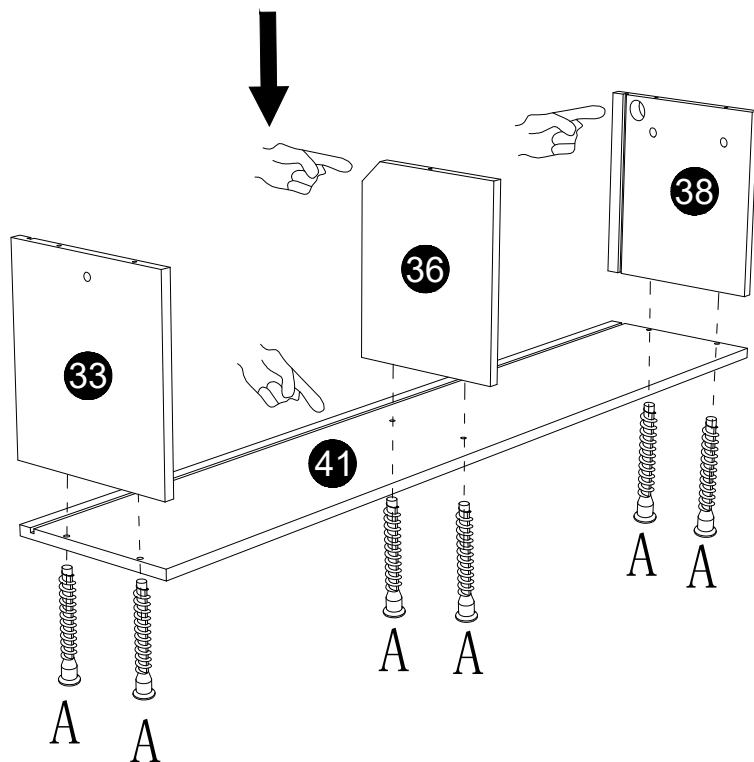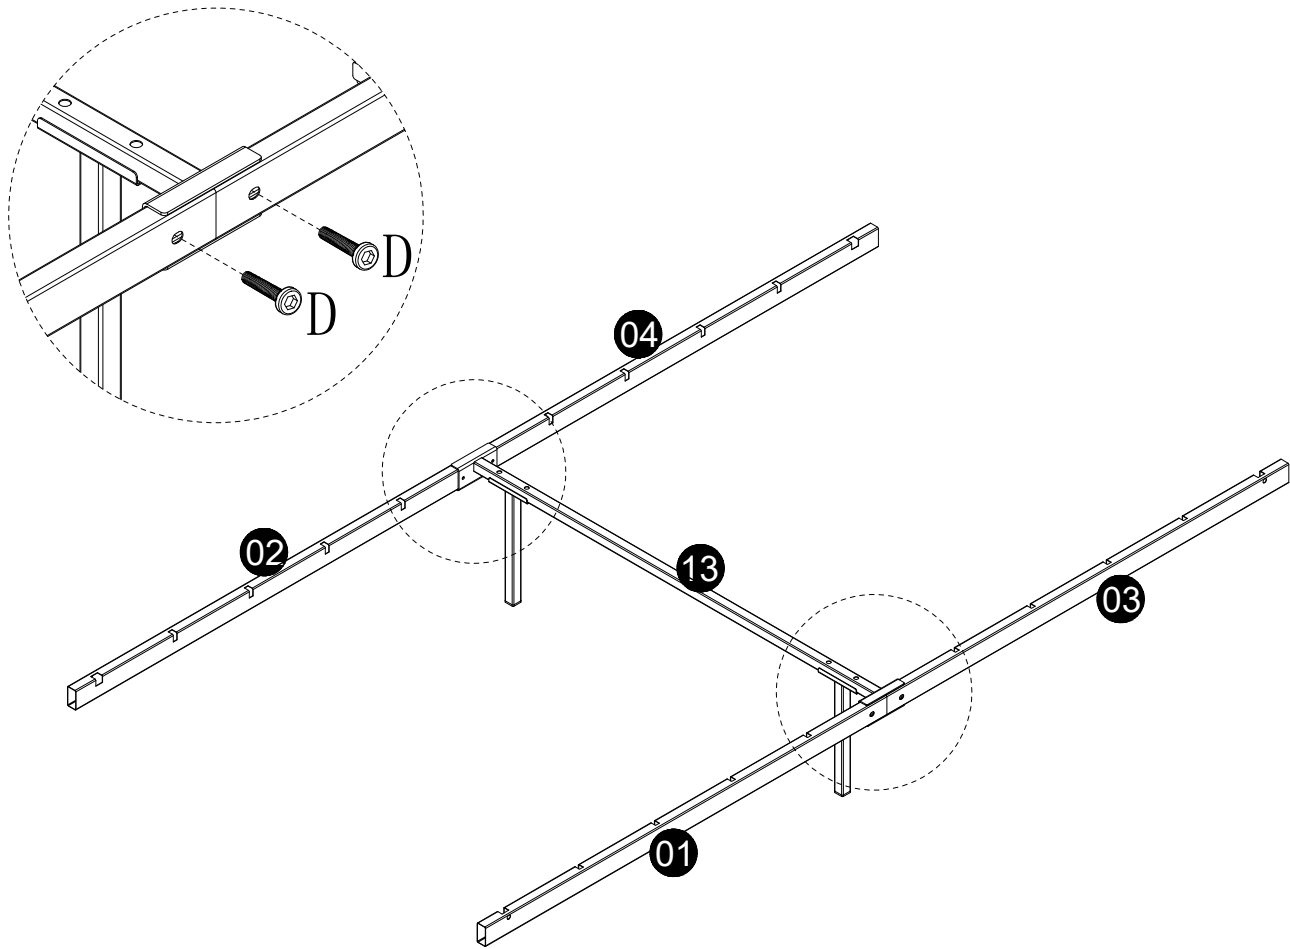


17

A		M5*40mm	5pcs
---	---	---------	------

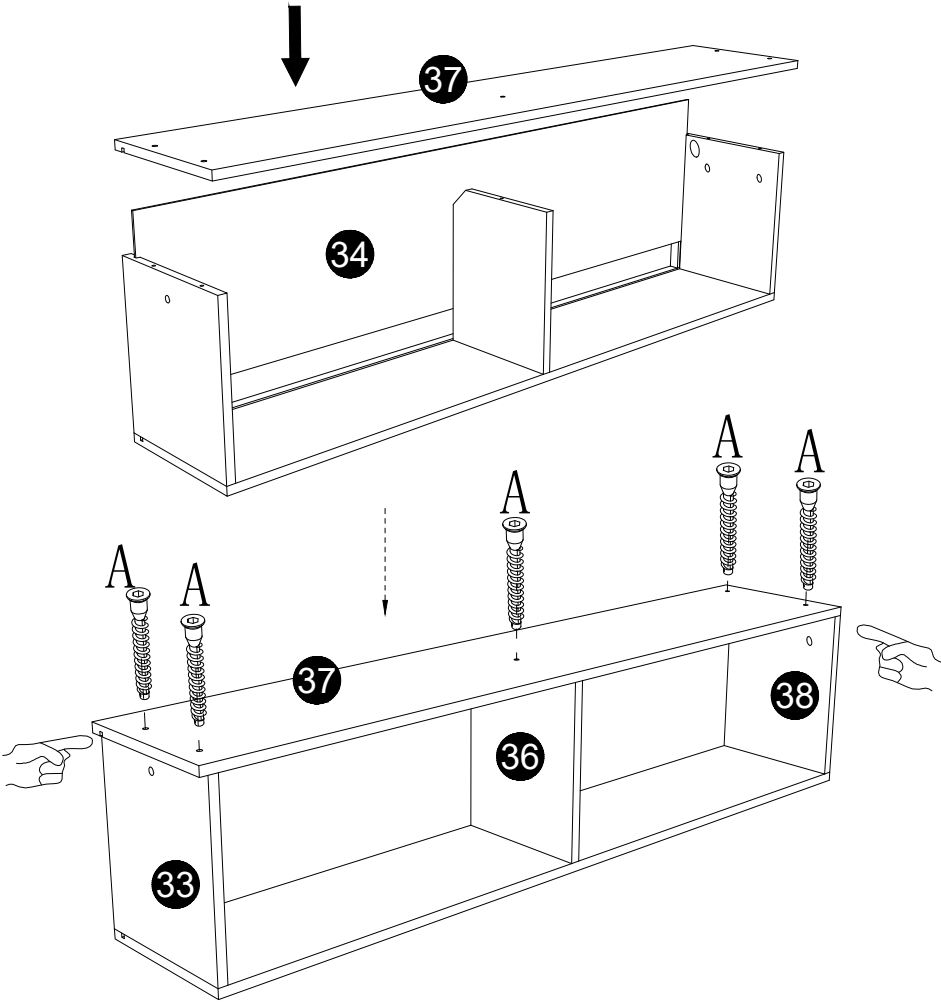


18


A		M5*40mm	6pcs
---	---	---------	------

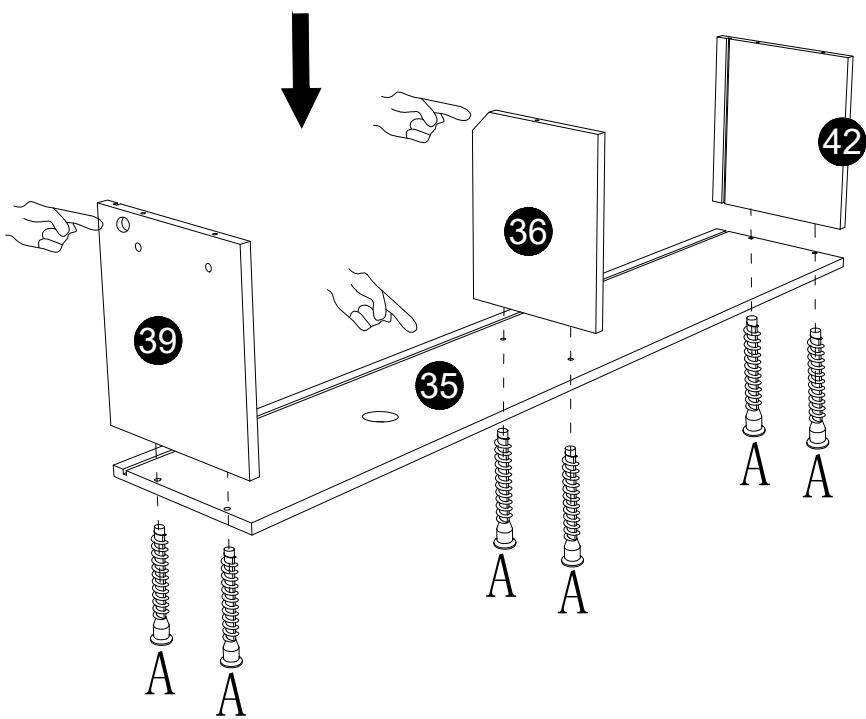

A		M5*40mm	5pcs
---	---	---------	------

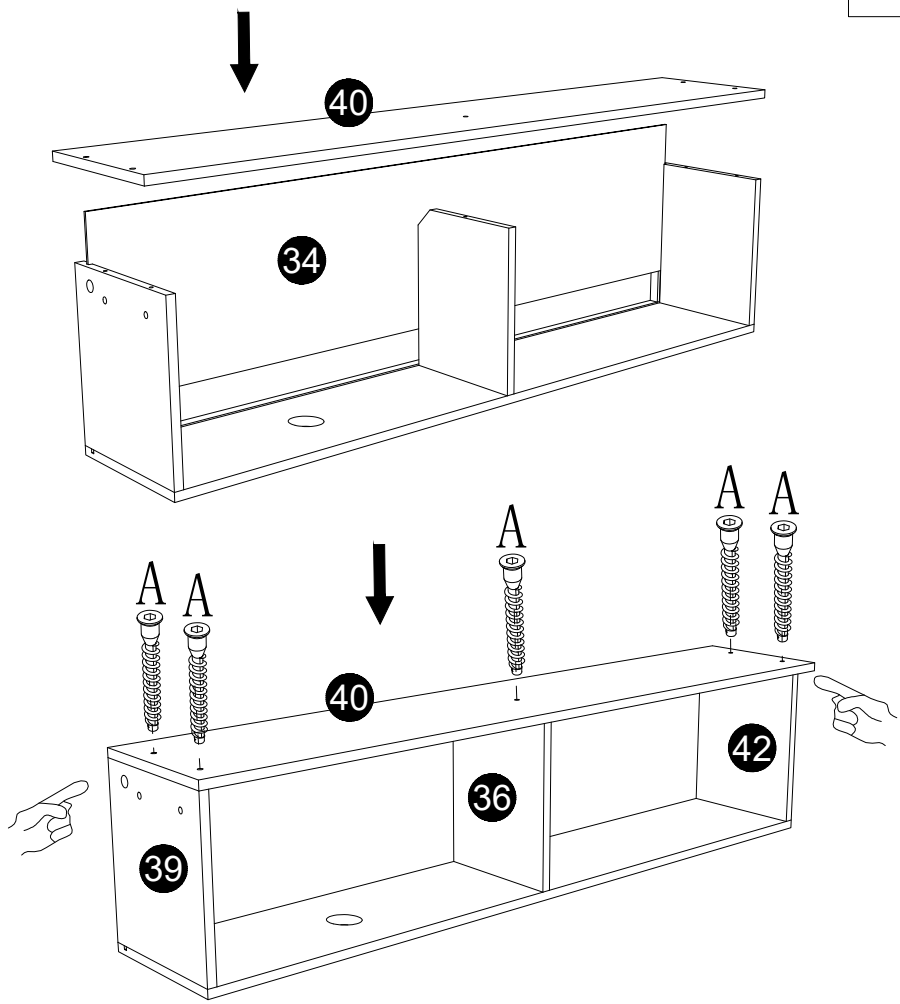


E		M6*60mm	2pcs
F		M6	2pcs
N		M6*40mm	4pcs

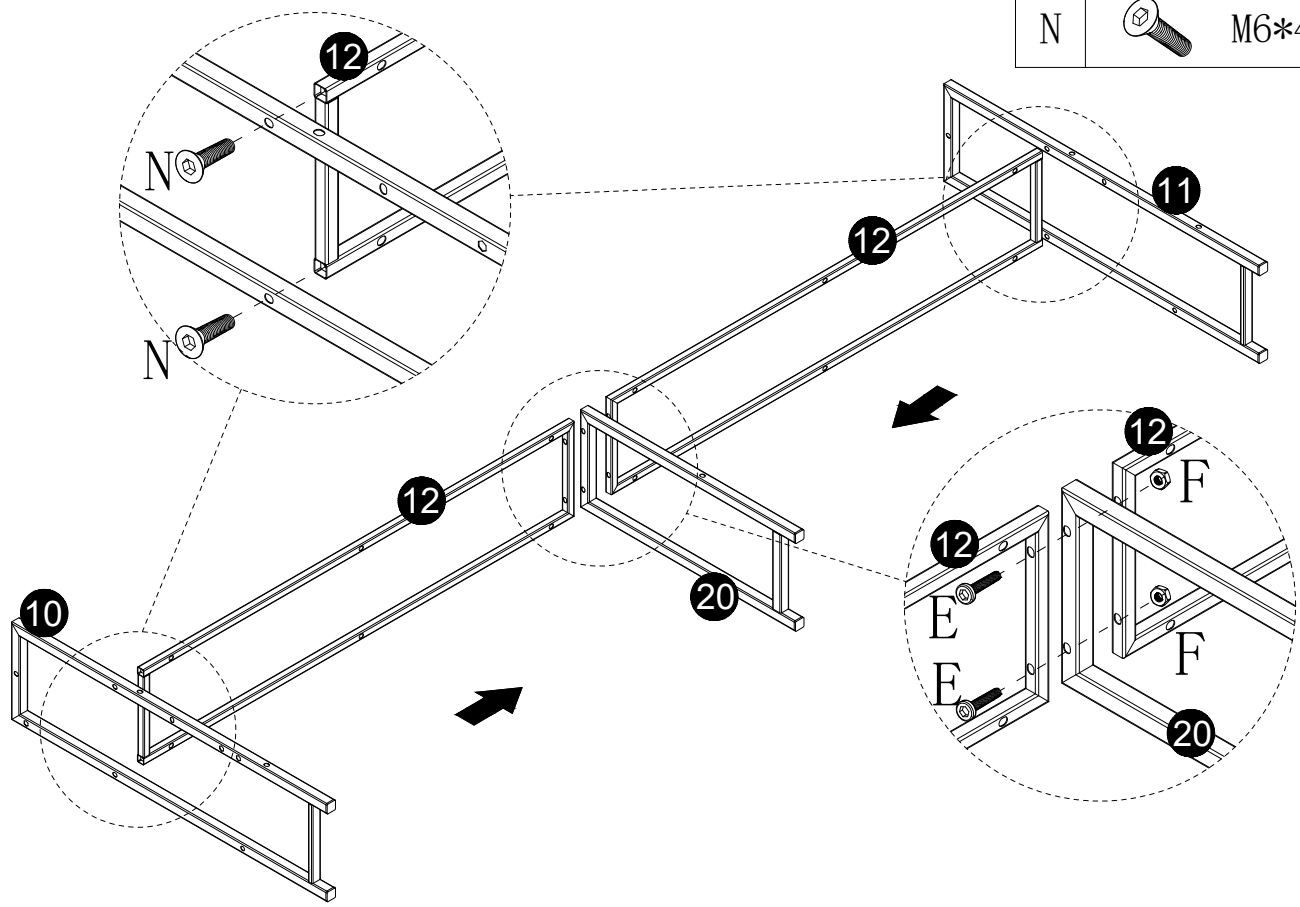


21

B		M6*15mm	2pcs
H		M6*15mm	2pcs

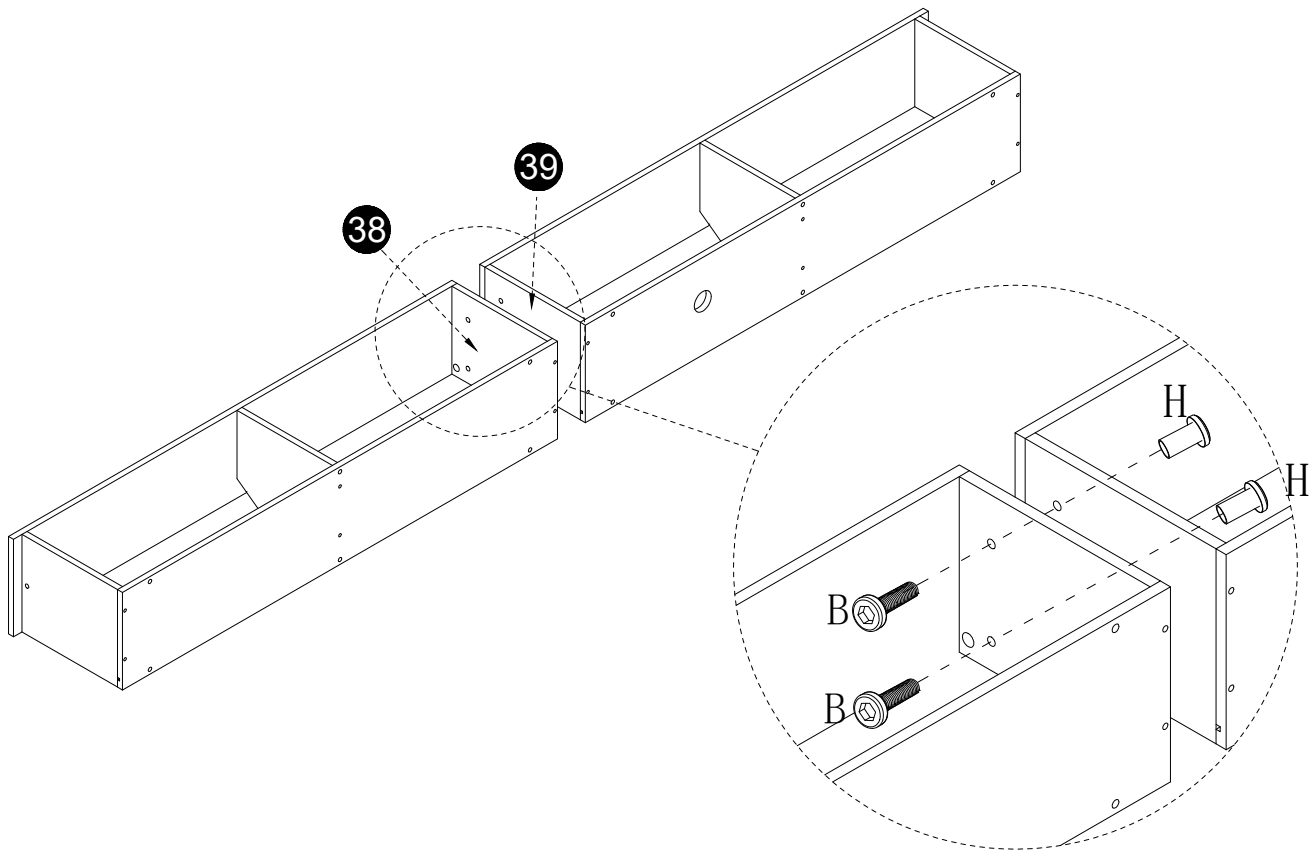


22

C		M6*25mm	12pcs
---	---	---------	-------

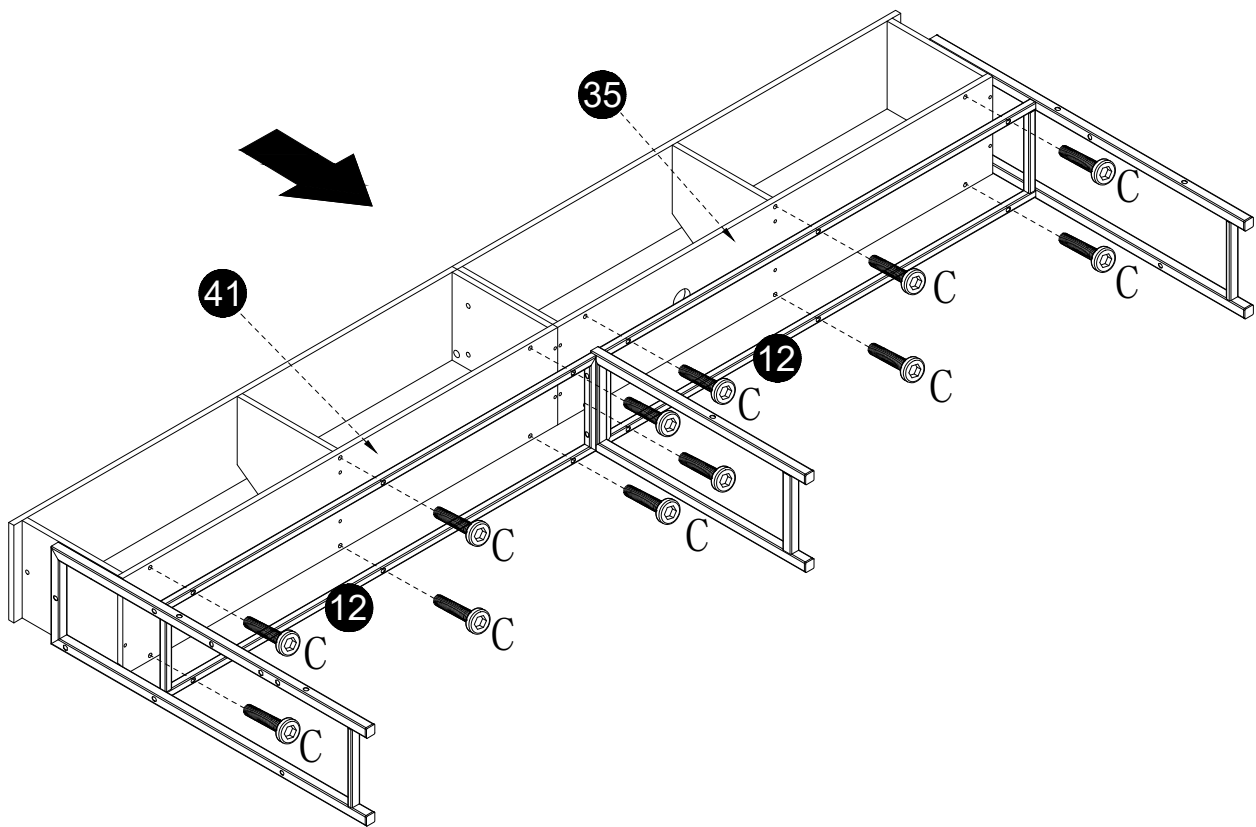


23

T		1pc
D	 M6*28mm	2pcs

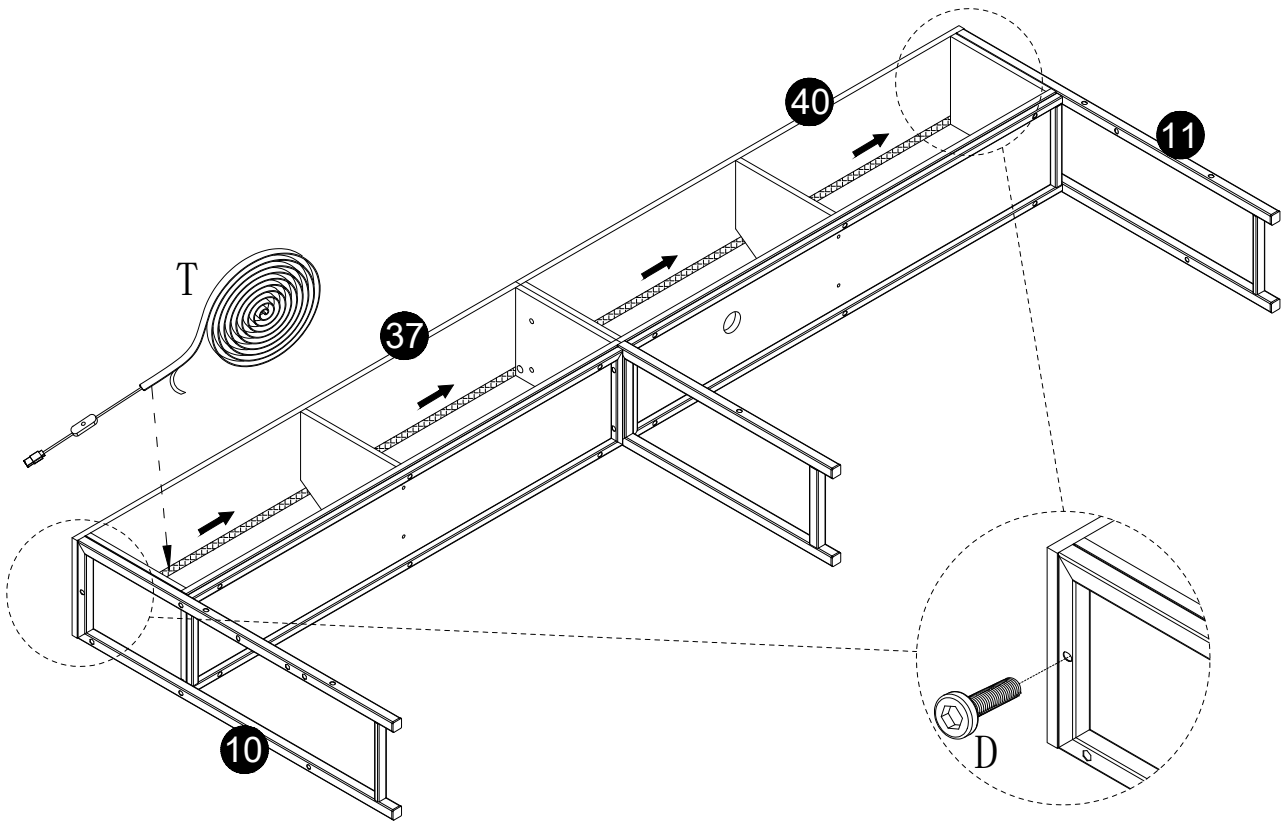


24


G		M6*40mm	4pcs
---	---	---------	------

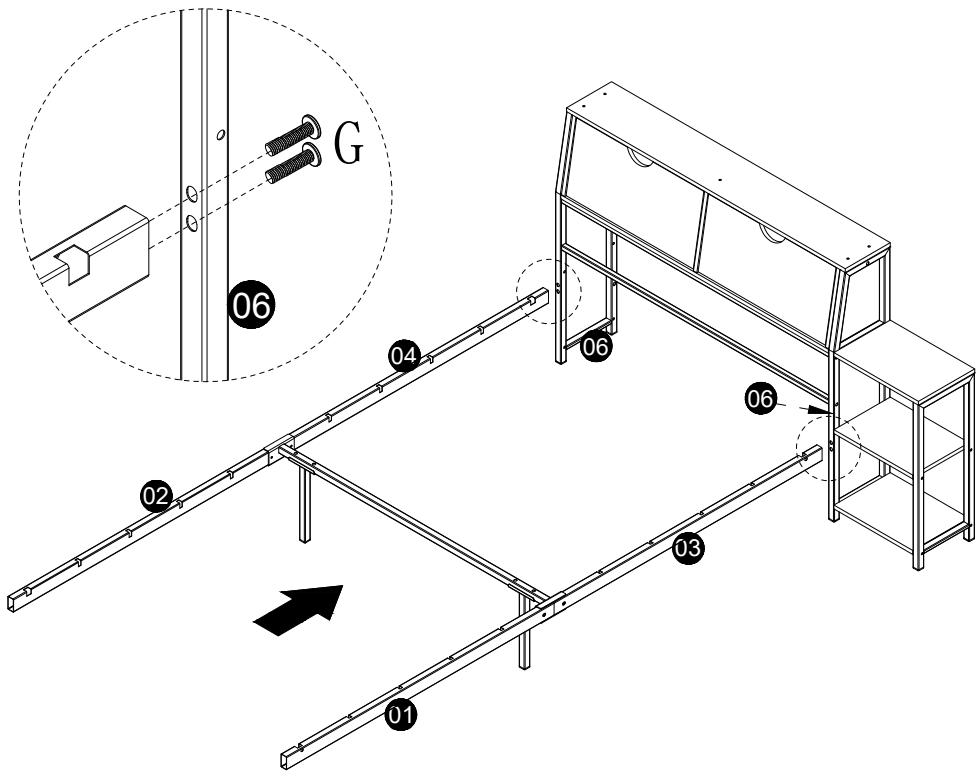

D		M6*28mm	1pc
I		M6*50mm	2pcs
F		M6	2pcs

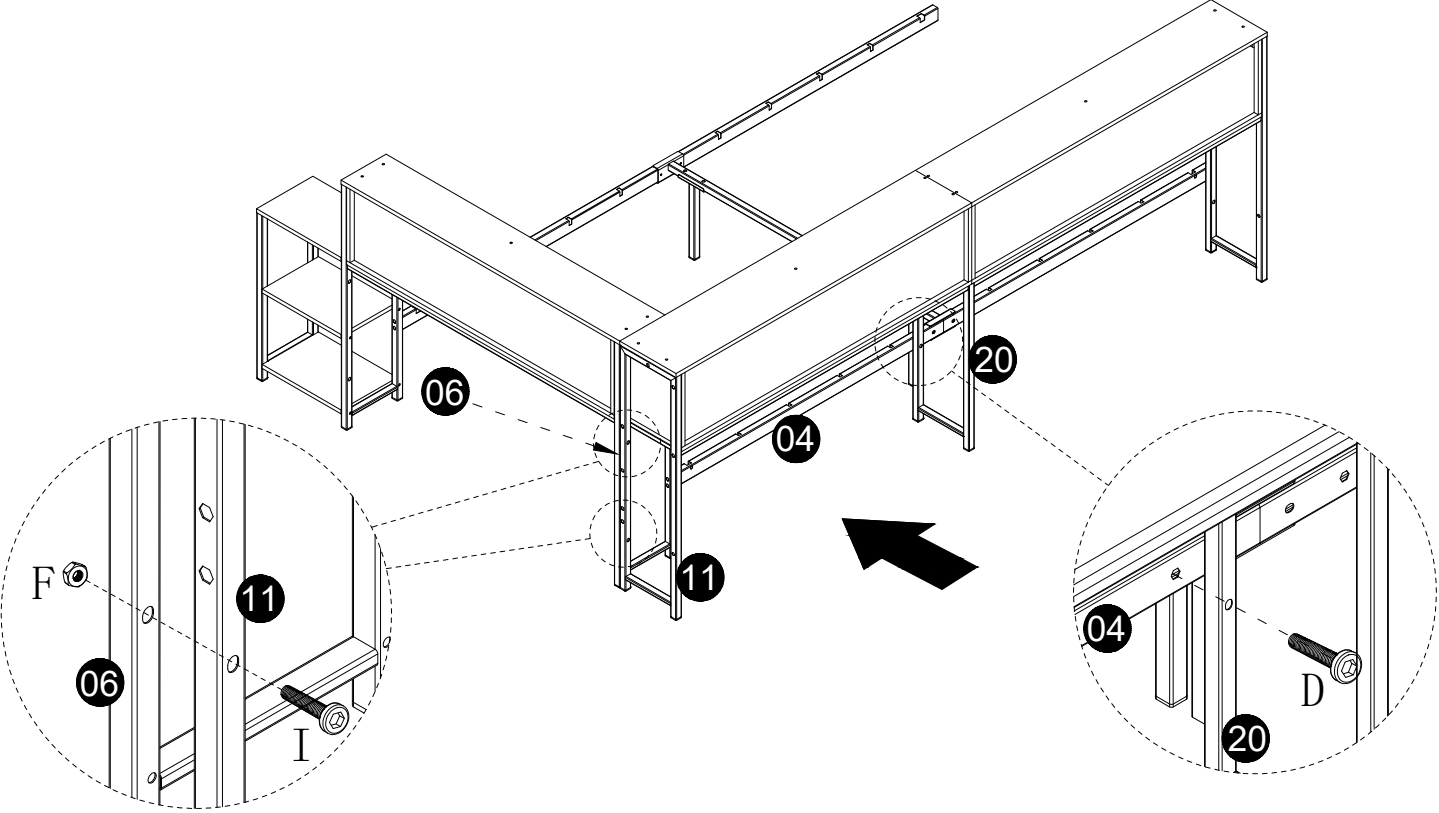


B		M6*15mm	2pcs
D		M6*28mm	2pcs
b			1pc

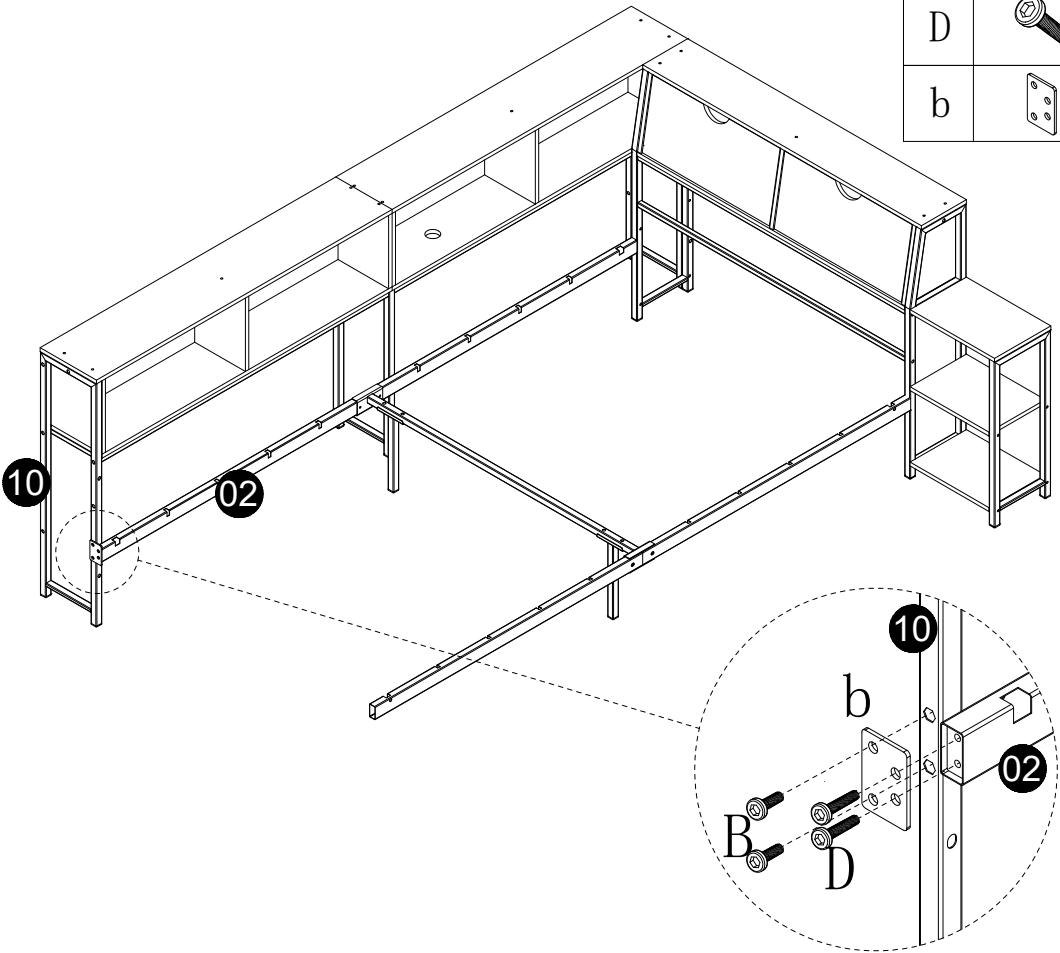


27


F		M6	1pc	D		M6*28mm	1pc
				G		M6*40mm	2pcs
				I		M6*50mm	1pc

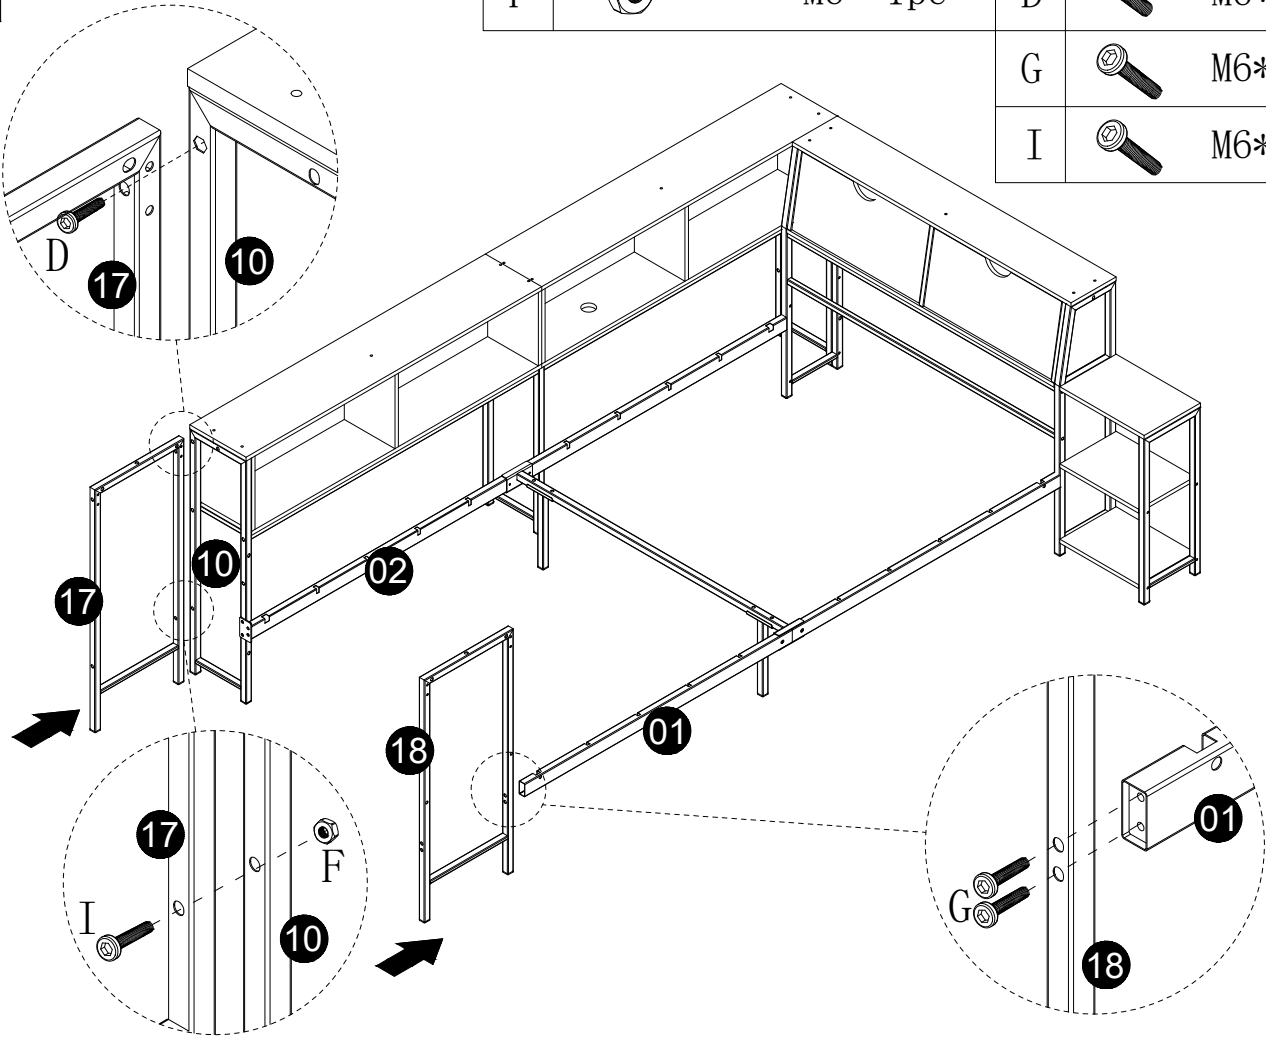


28

D		M6*28mm	1pc
G		M6*40mm	1pc

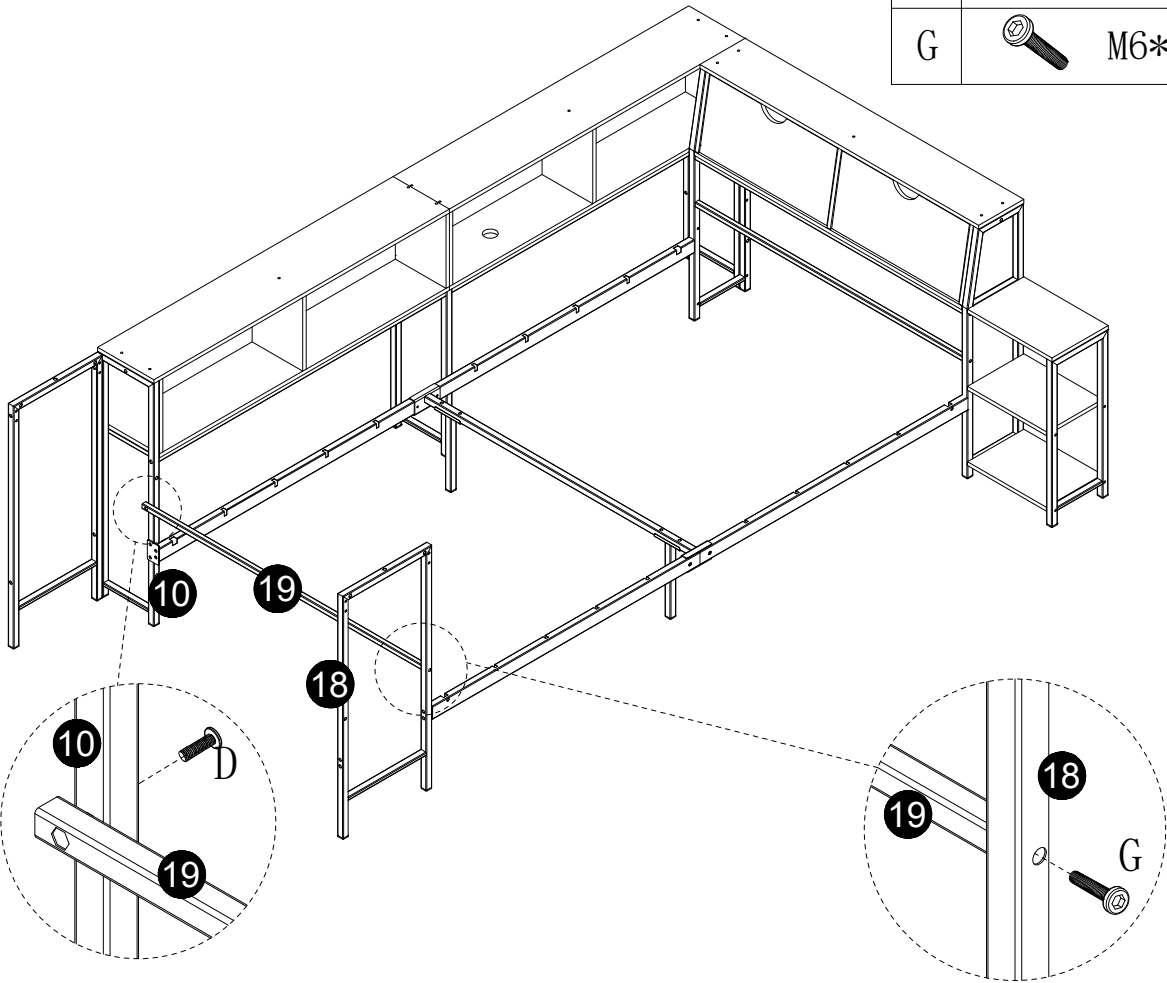


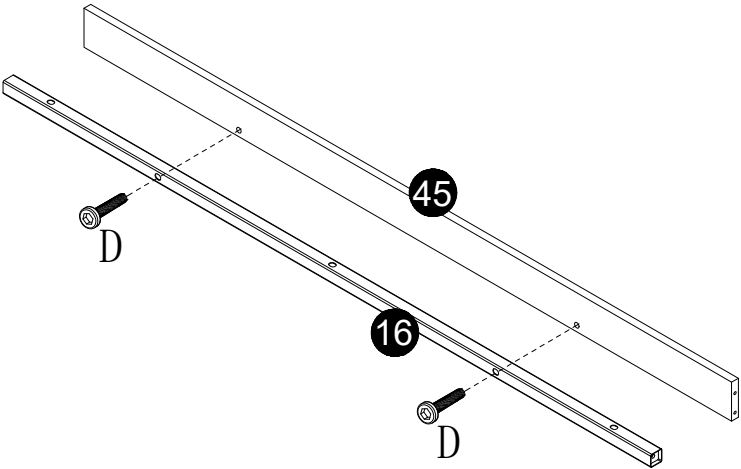


x2

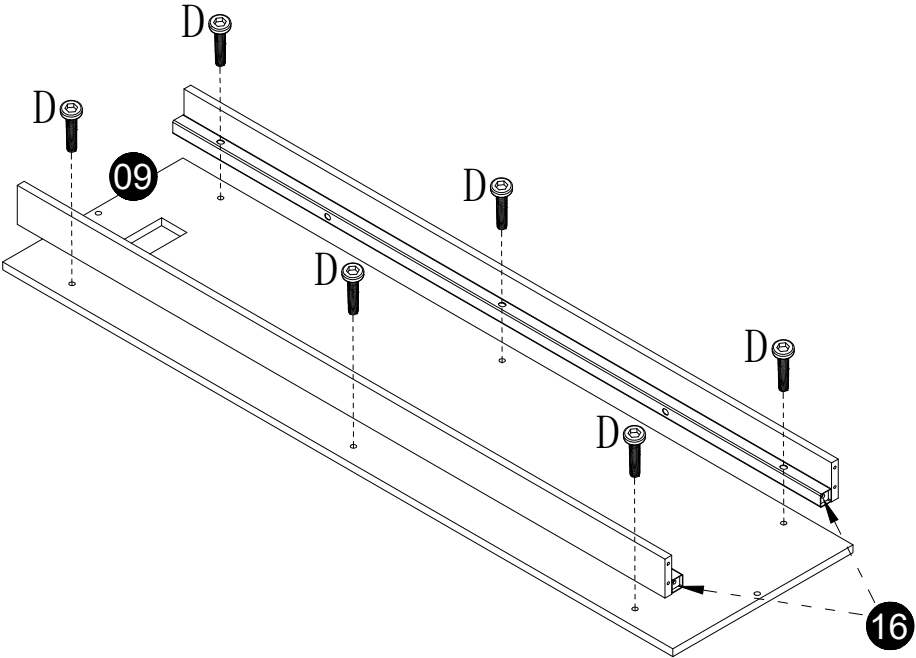



D		M6*28mm	2pcs
---	---	---------	------

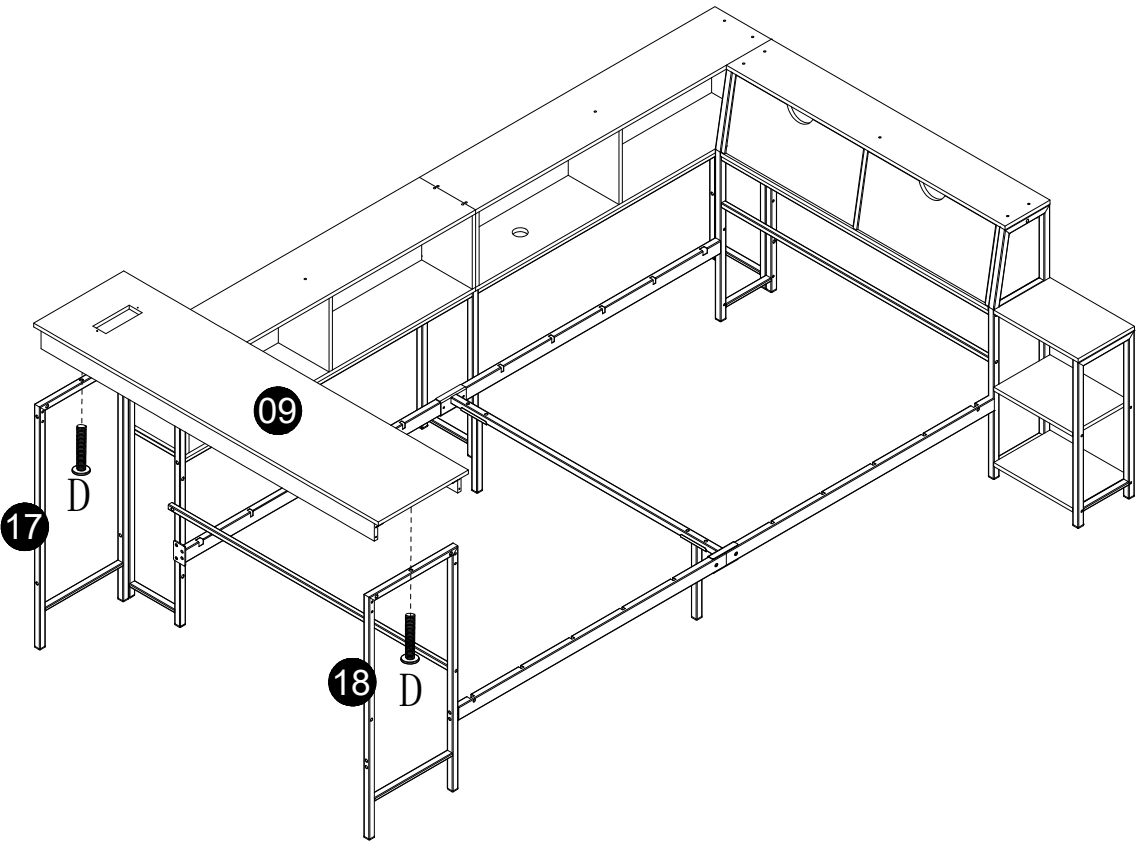


A		M5*40mm	8pcs
G		M6*40mm	4pcs

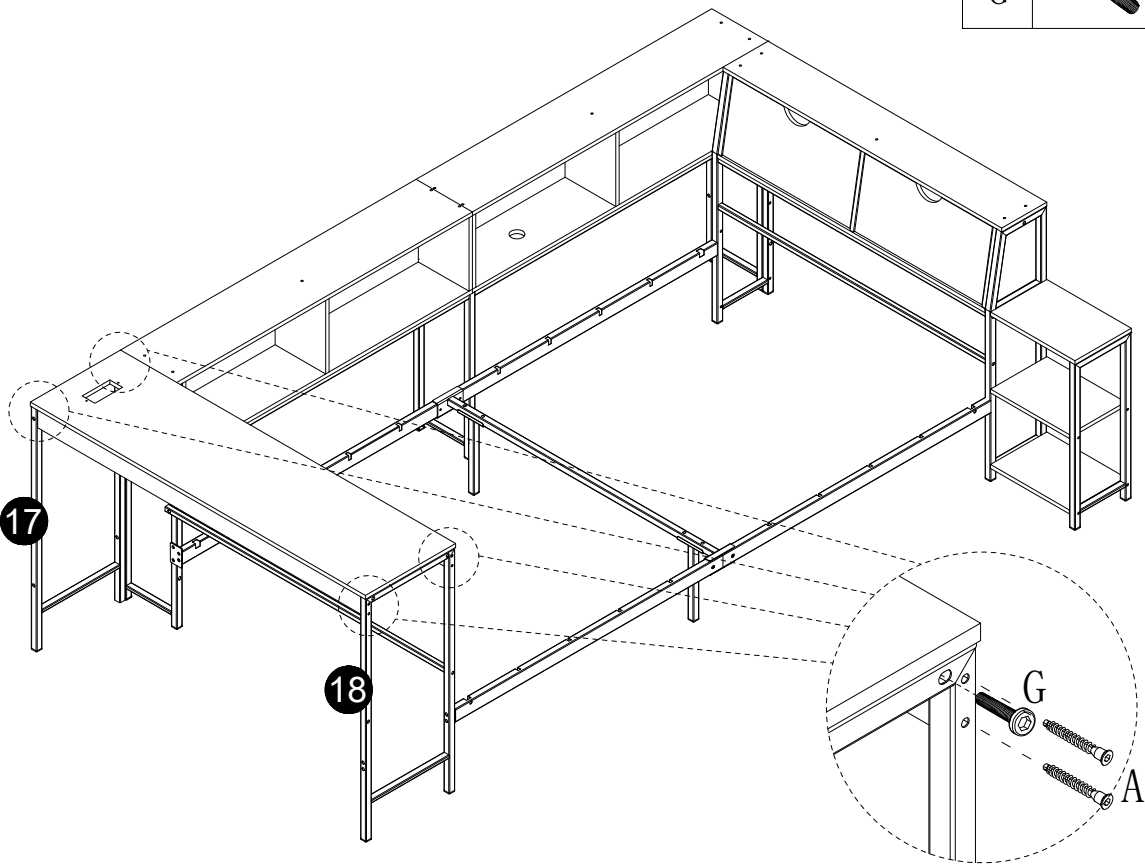


33

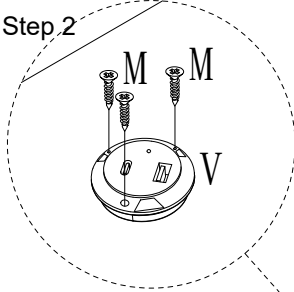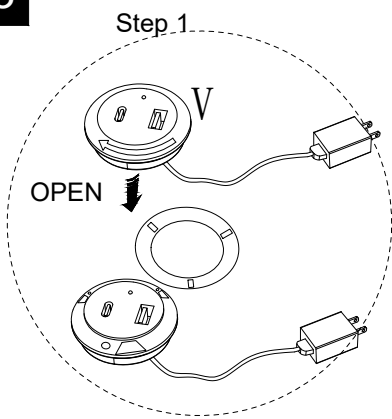


M		M4*10mm	3pcs
V			1pc


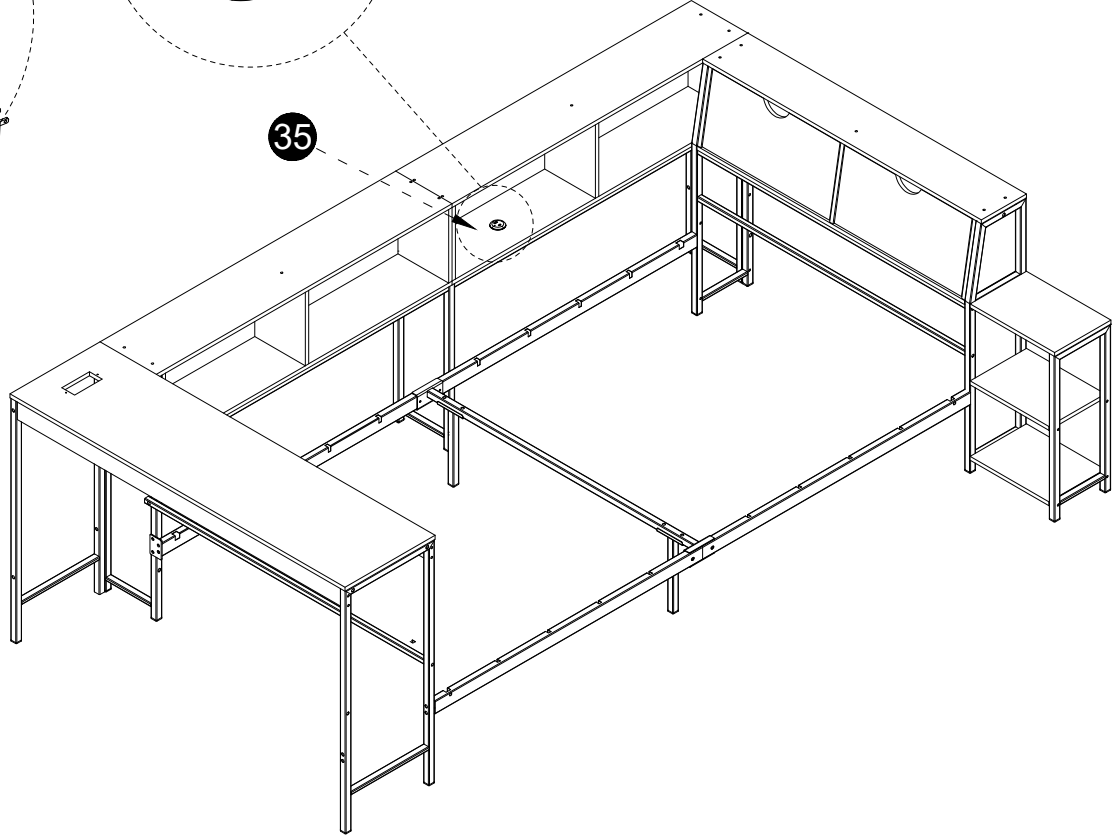


34

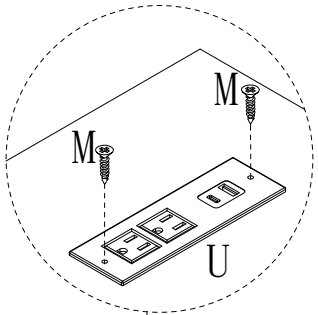


M		M4*10mm	2pcs
U			1pc

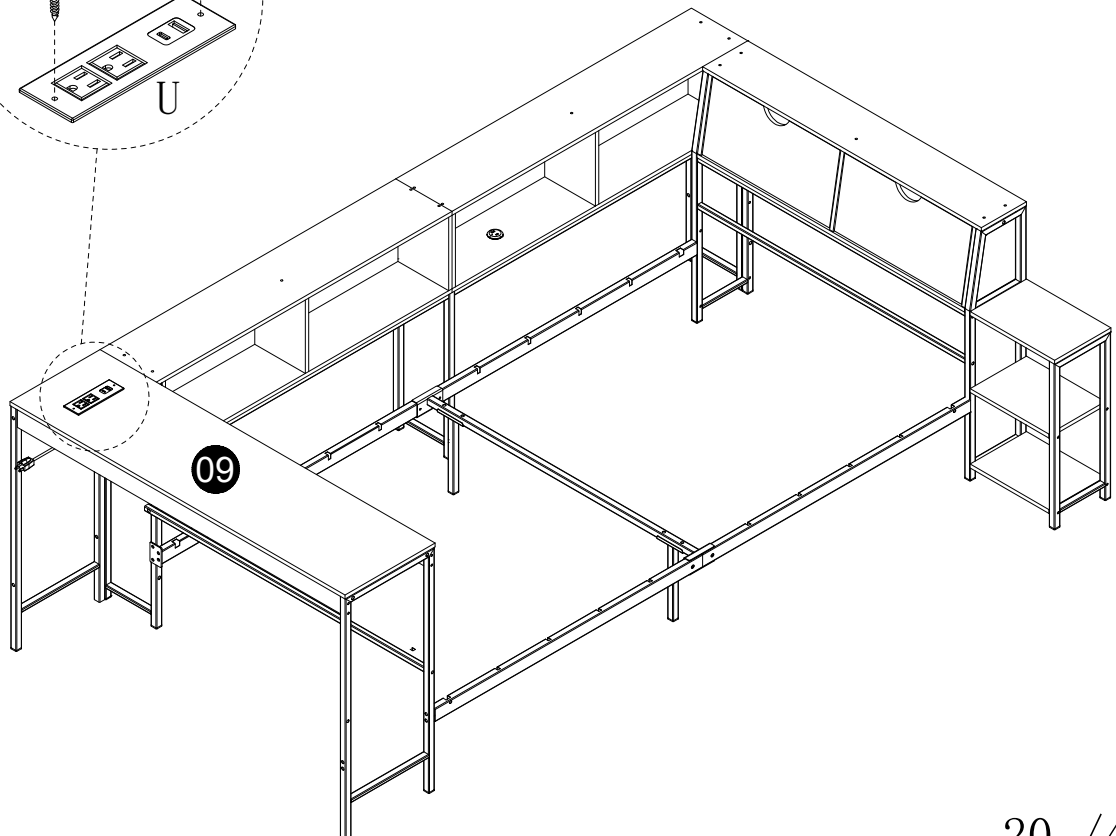

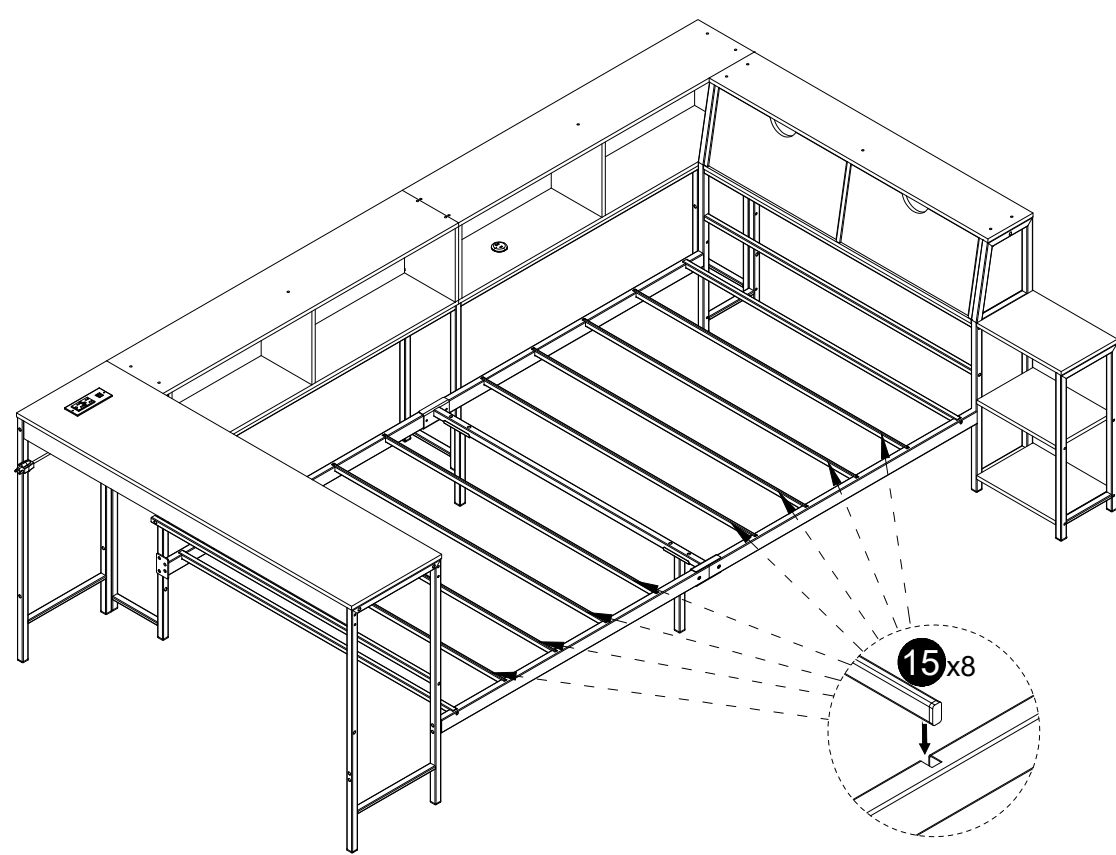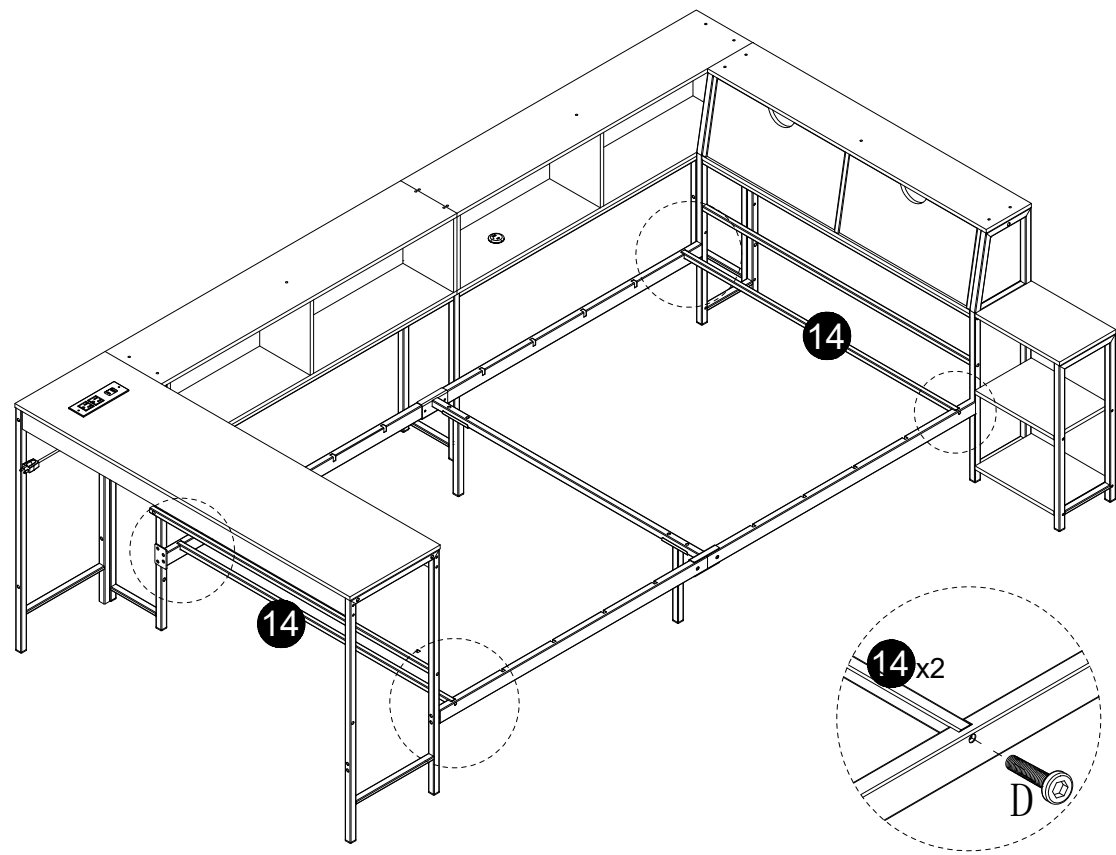


37


a		M4	16pcs
d		M4*28mm	16pcs

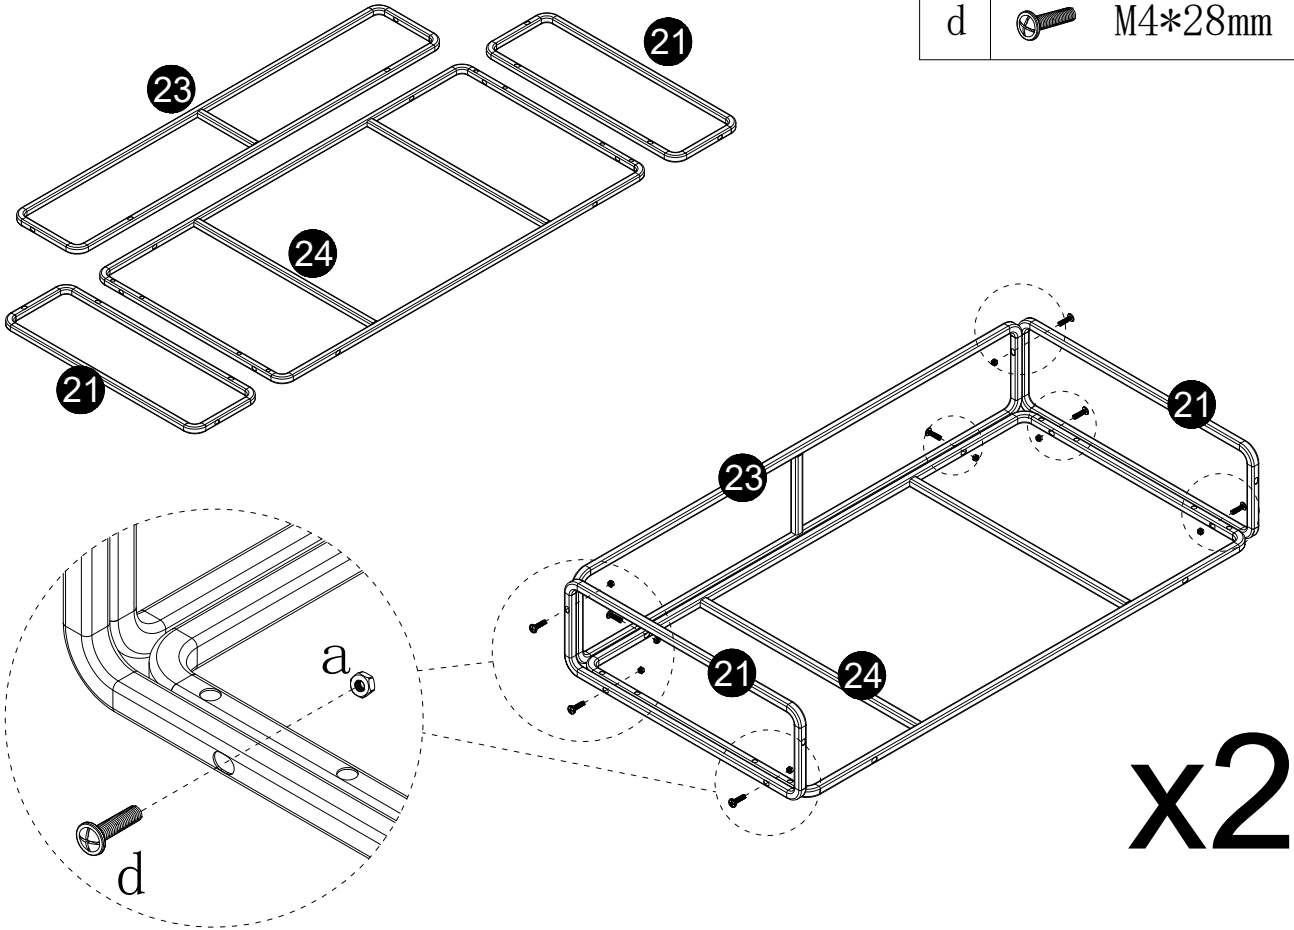


38

P		1.0	8pcs
a		M4	16pcs
d		M4*28mm	16pcs


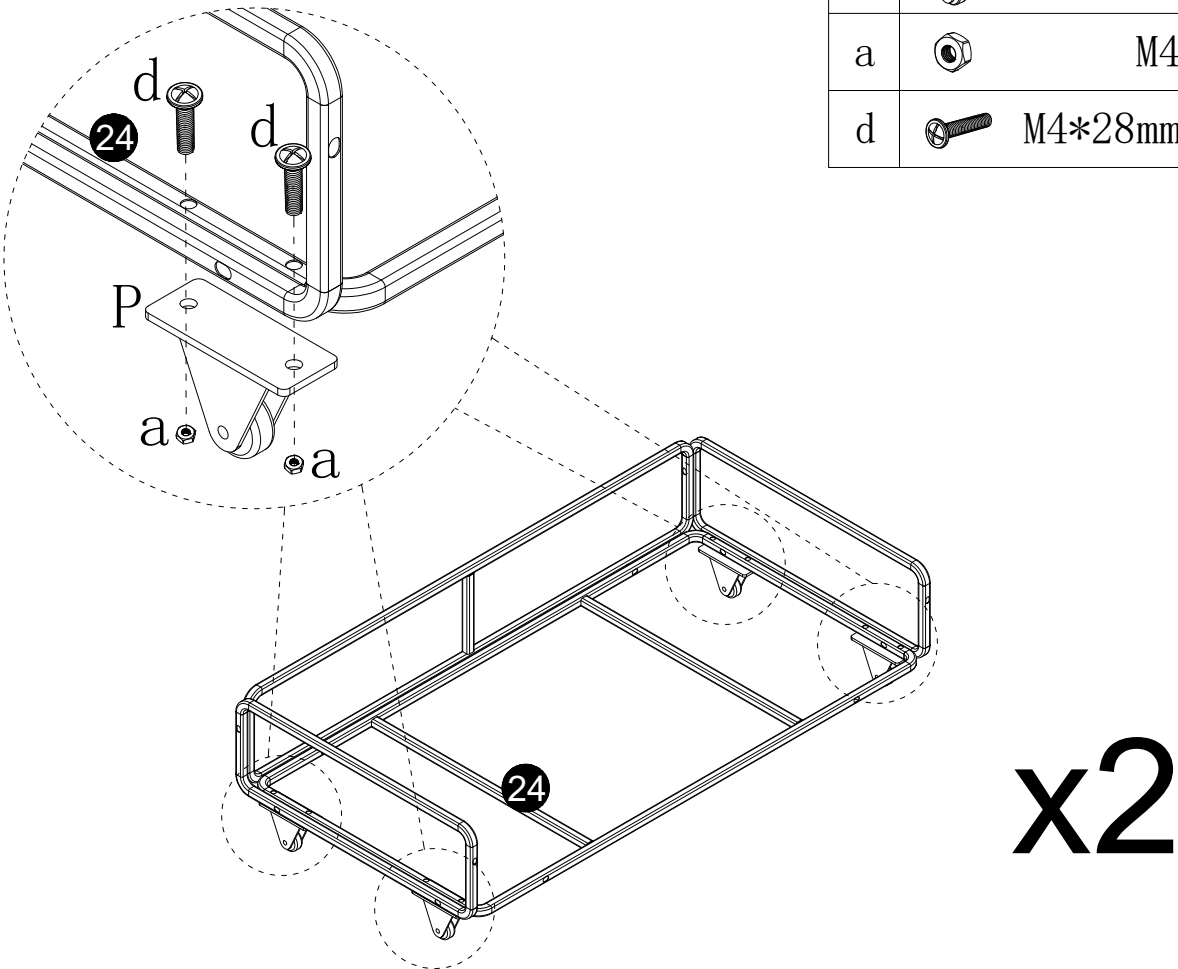


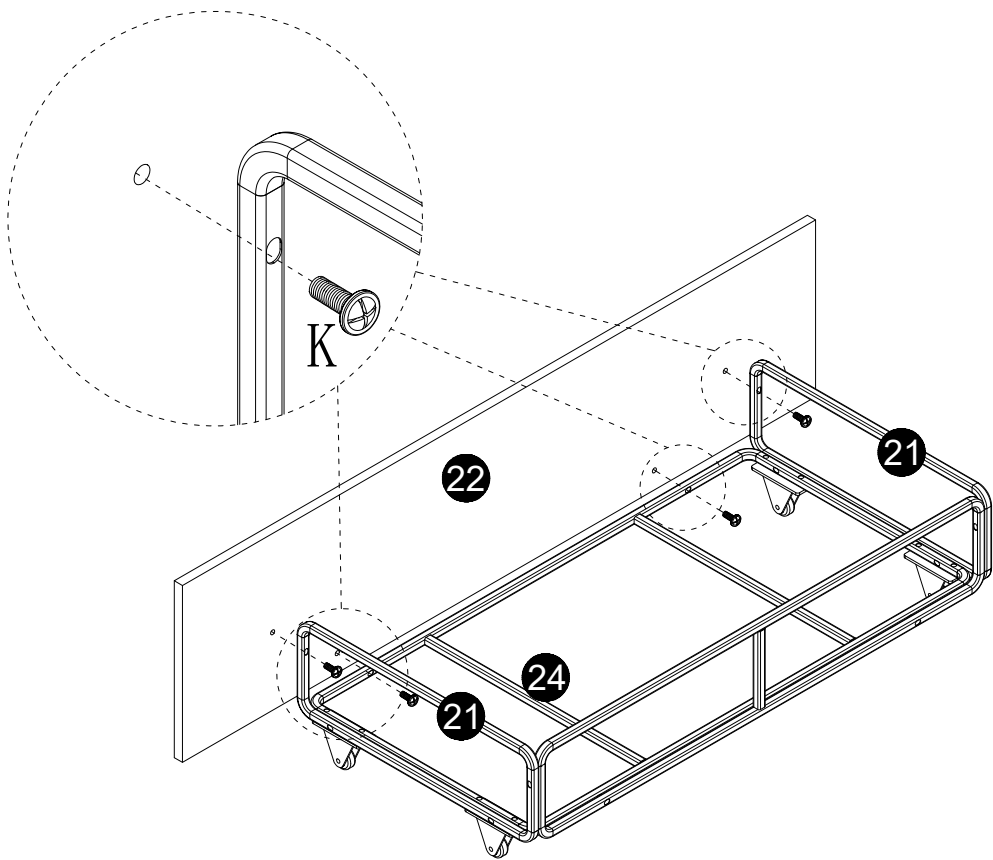


x2

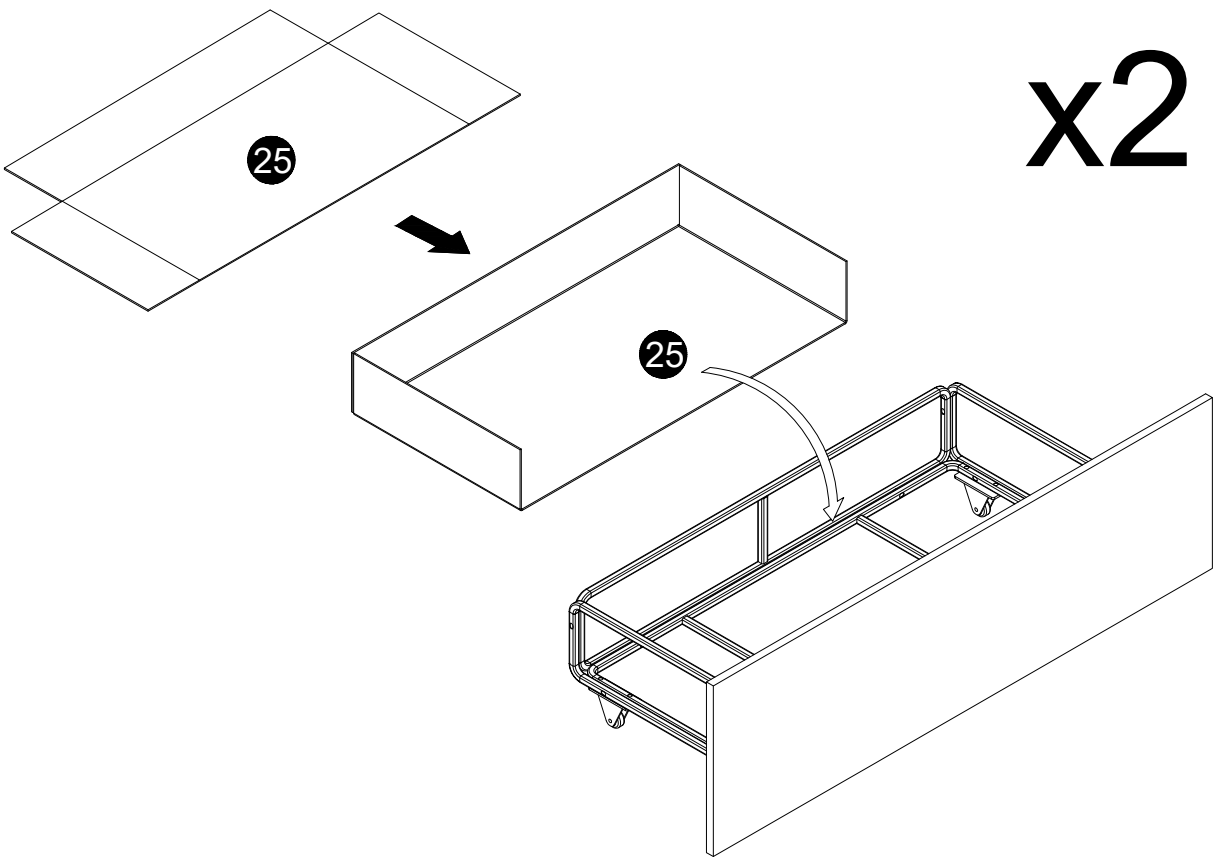

x2

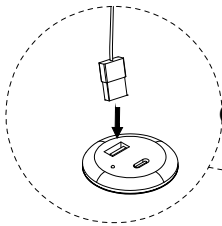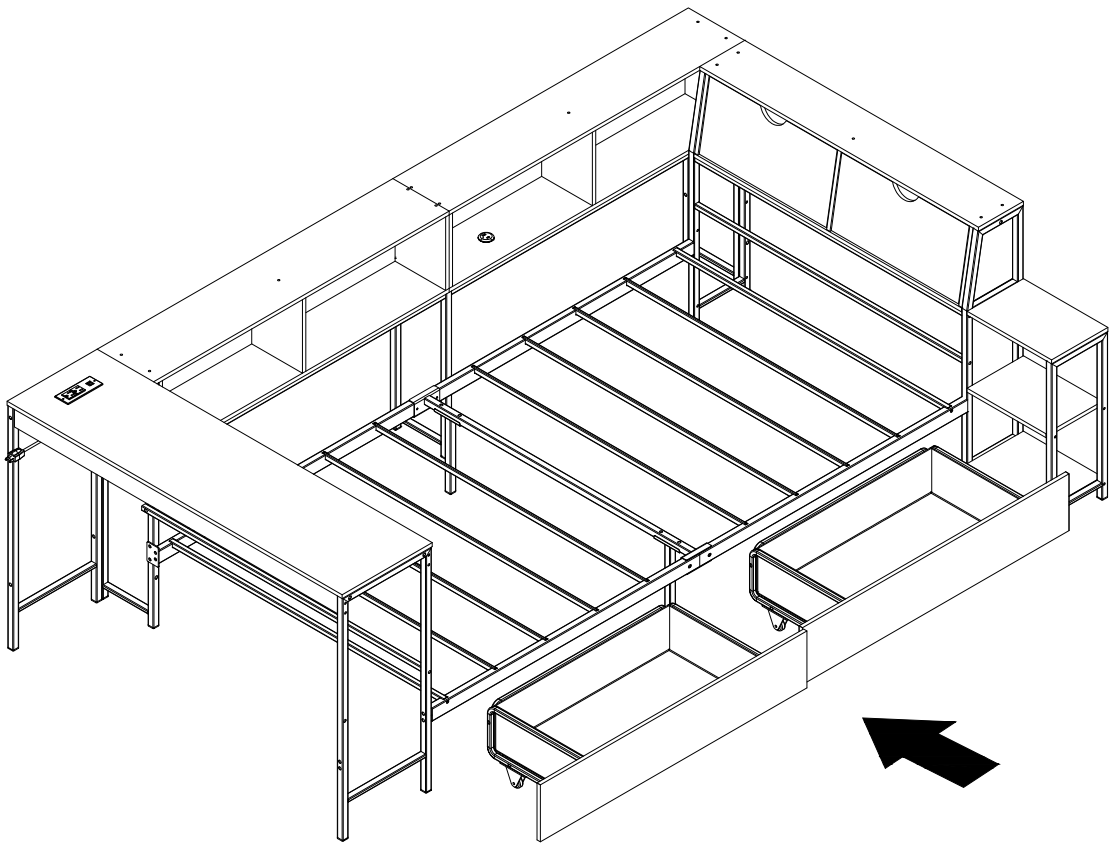


This LED light strip
directly into the USB

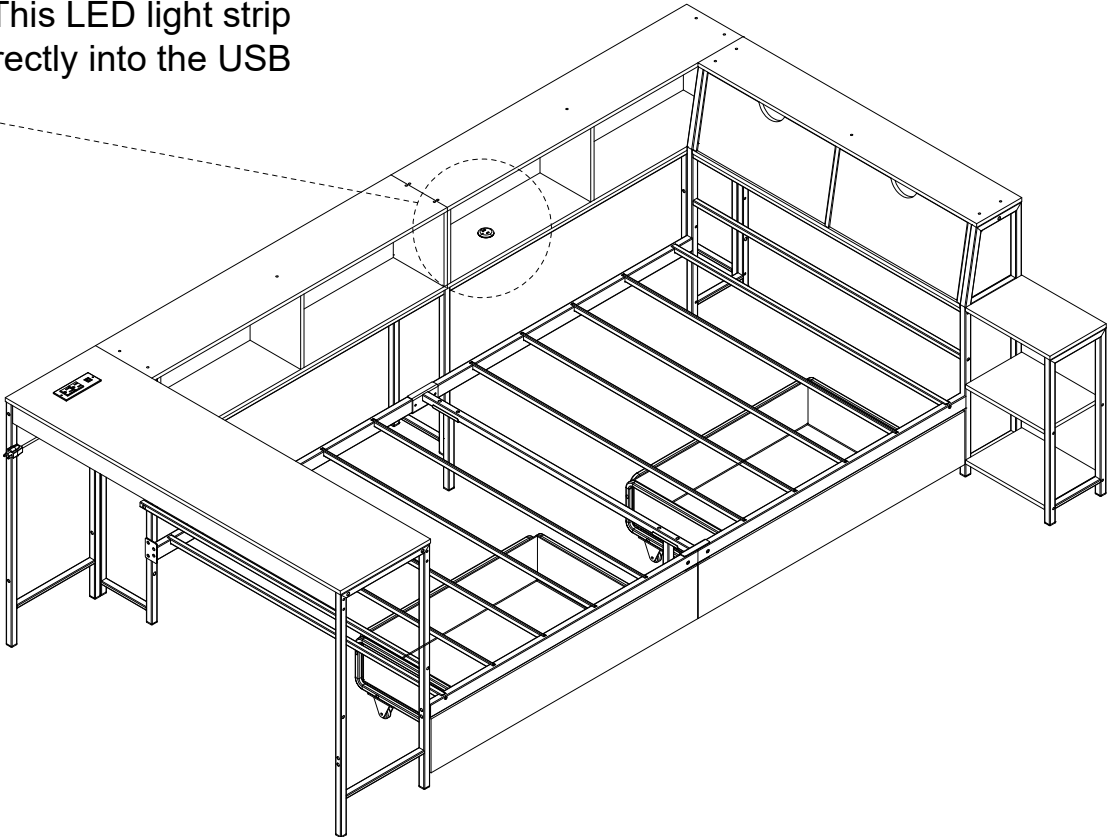

Note:


- 1.Should be assembled on flat ground to keep balance.
- 2.Before completing the installation, do not tighten the screws.

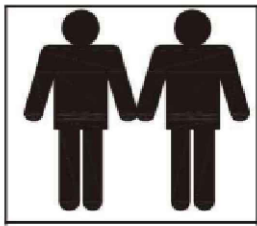

It needs at least Before starting the two people to install.




Before starting the assembly, you must read the whole manual and follow the instructions

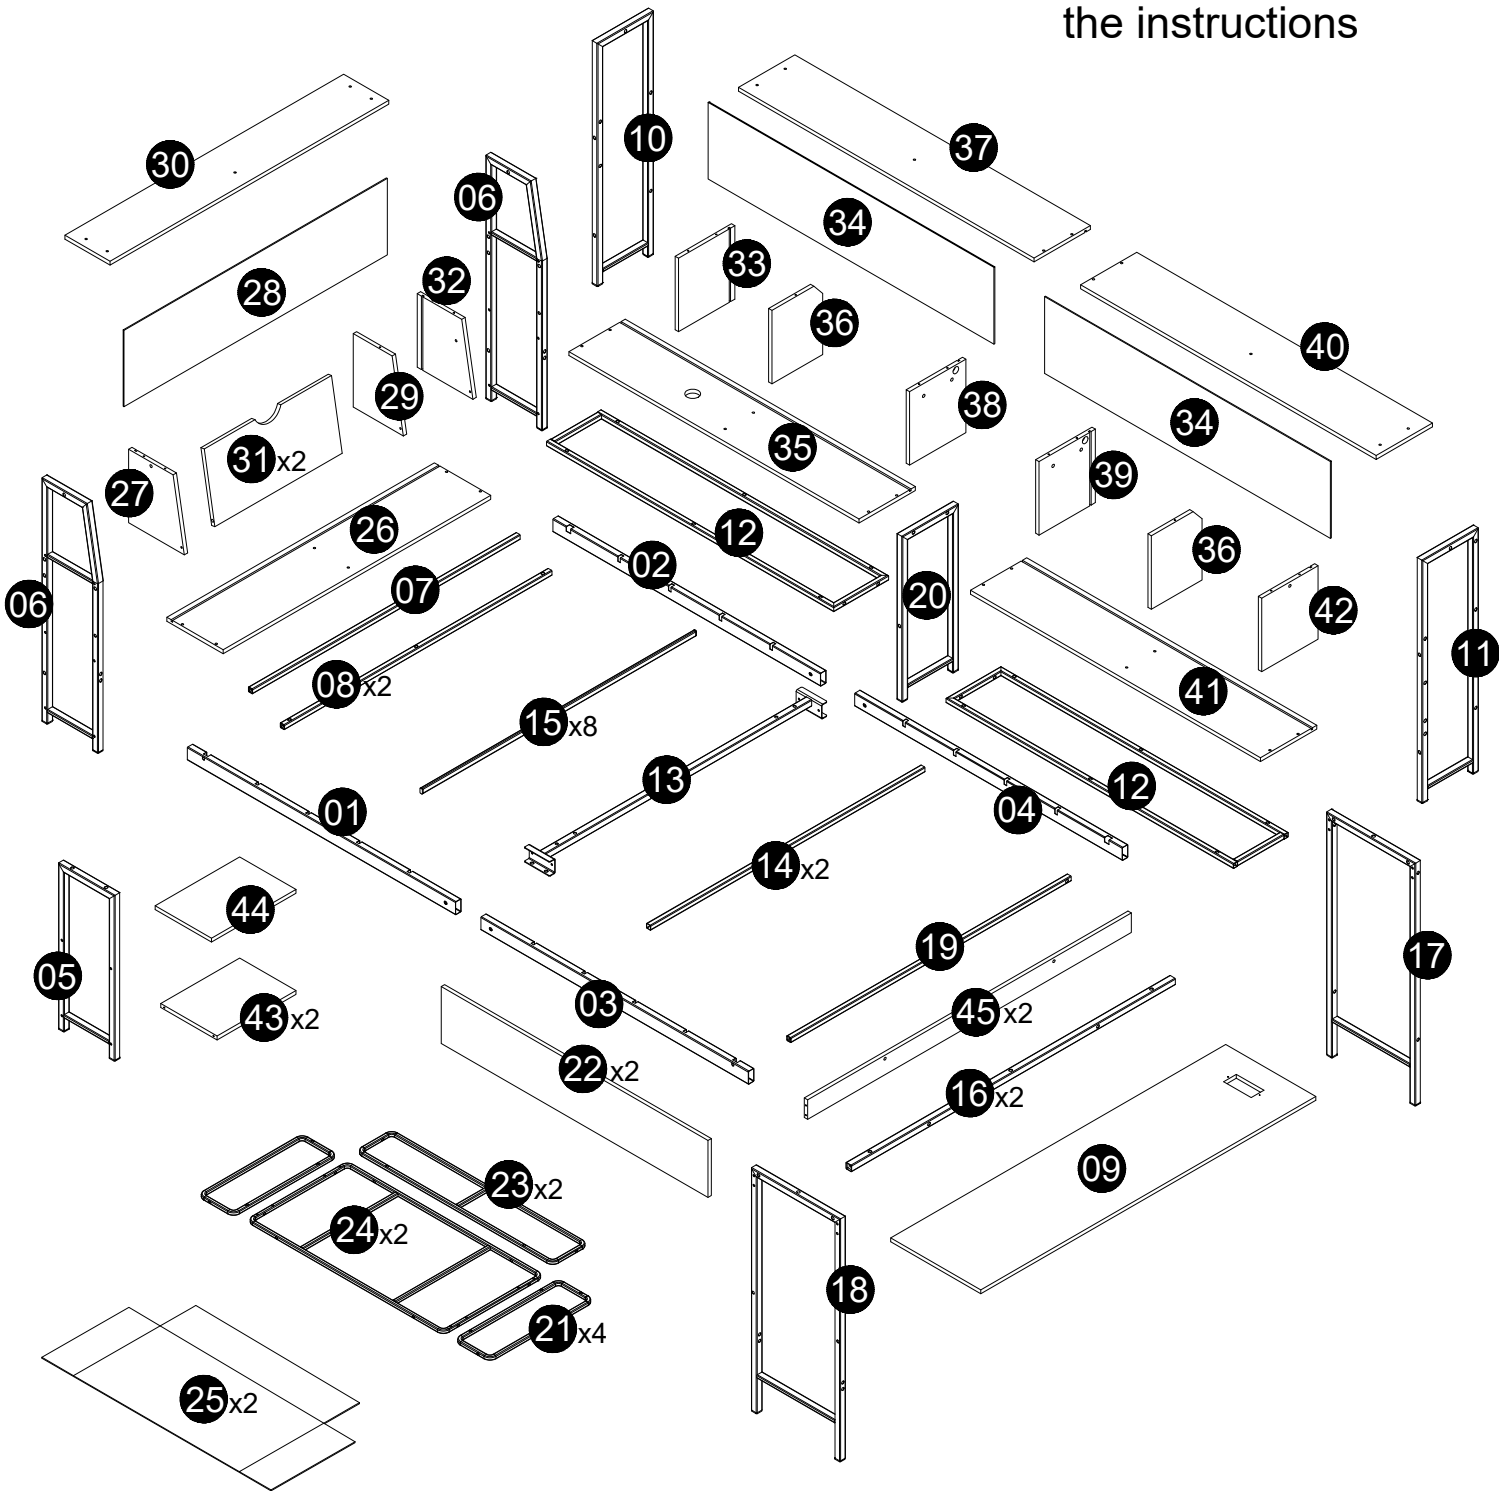


1

L		2pcs
M	 M4*10mm	4pcs

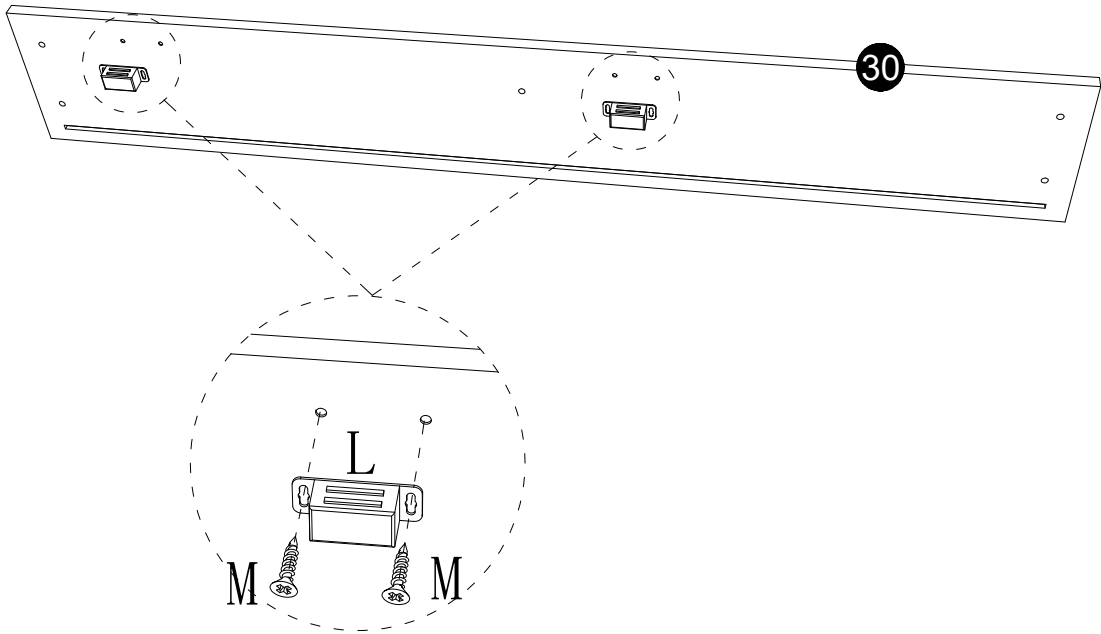

2

L		2pcs
M	 M4*10mm	4pcs

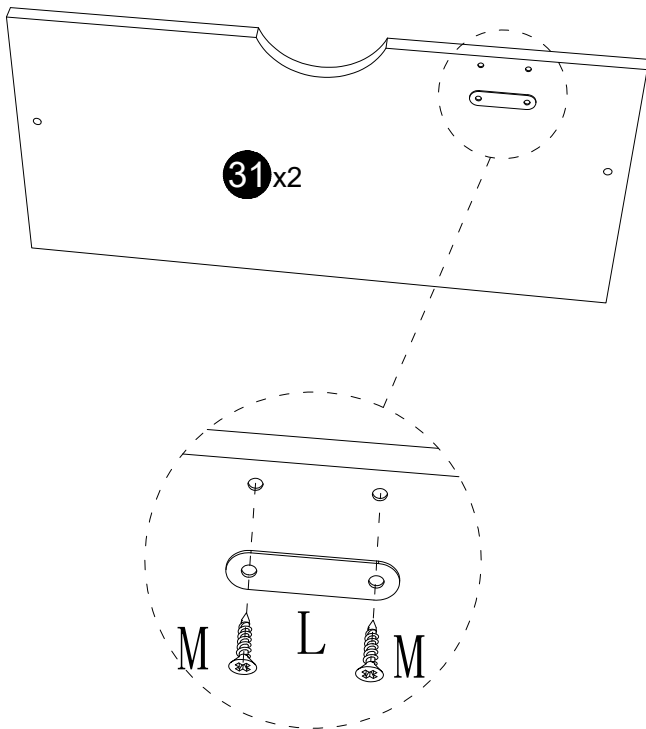


3

A



M5*40mm 6pcs

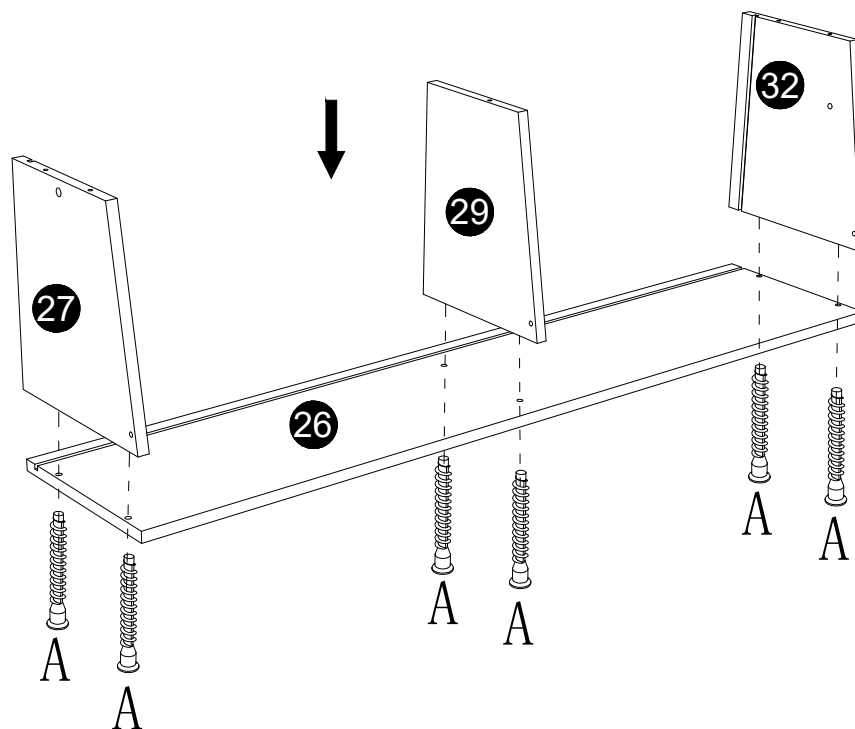


4

A



M5*40mm 5pcs

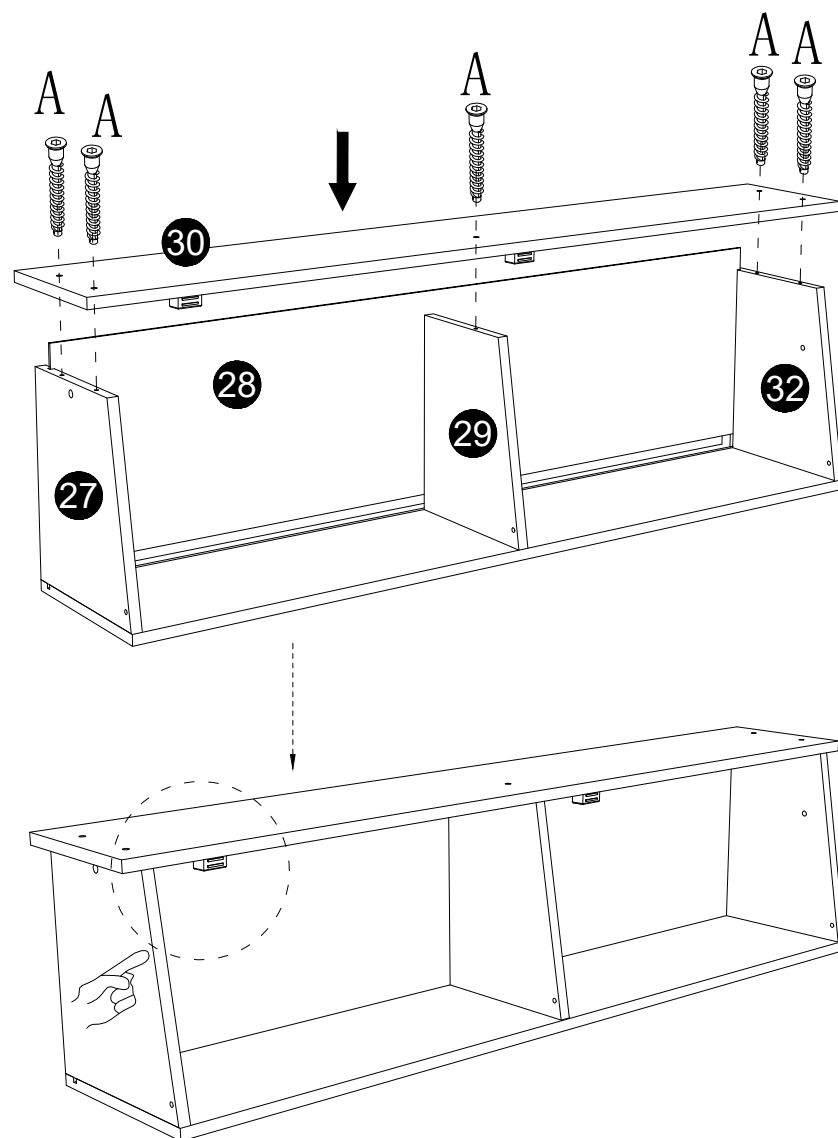


5

A



M5*40mm 10pcs

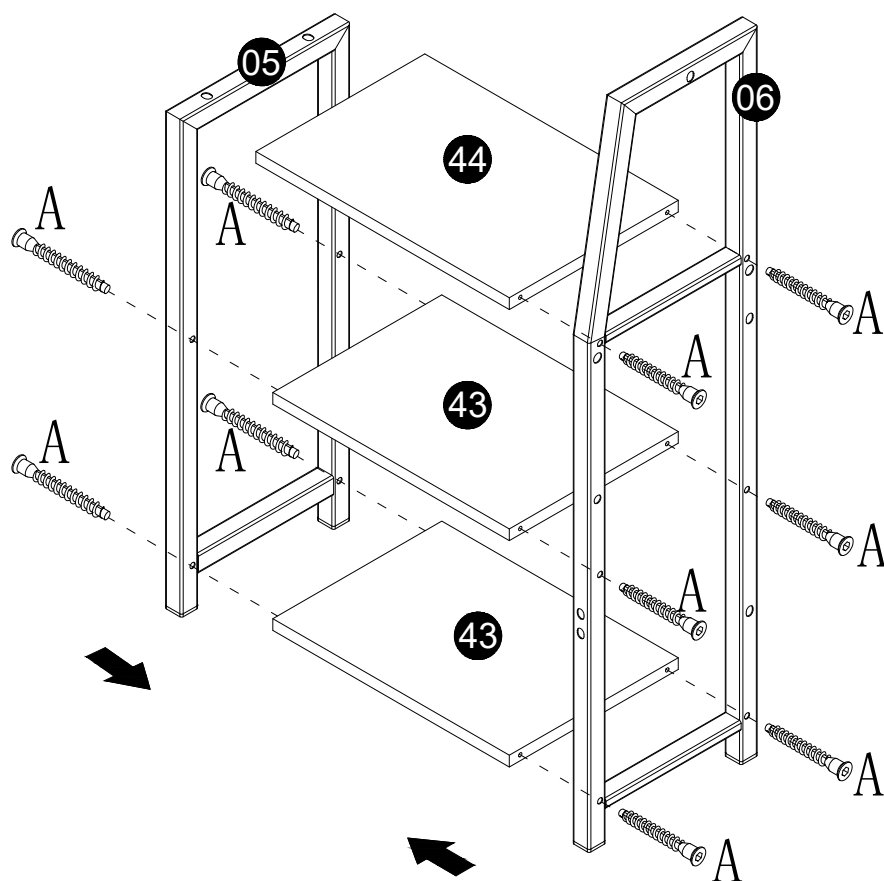


6

D



M6*28mm 2pcs

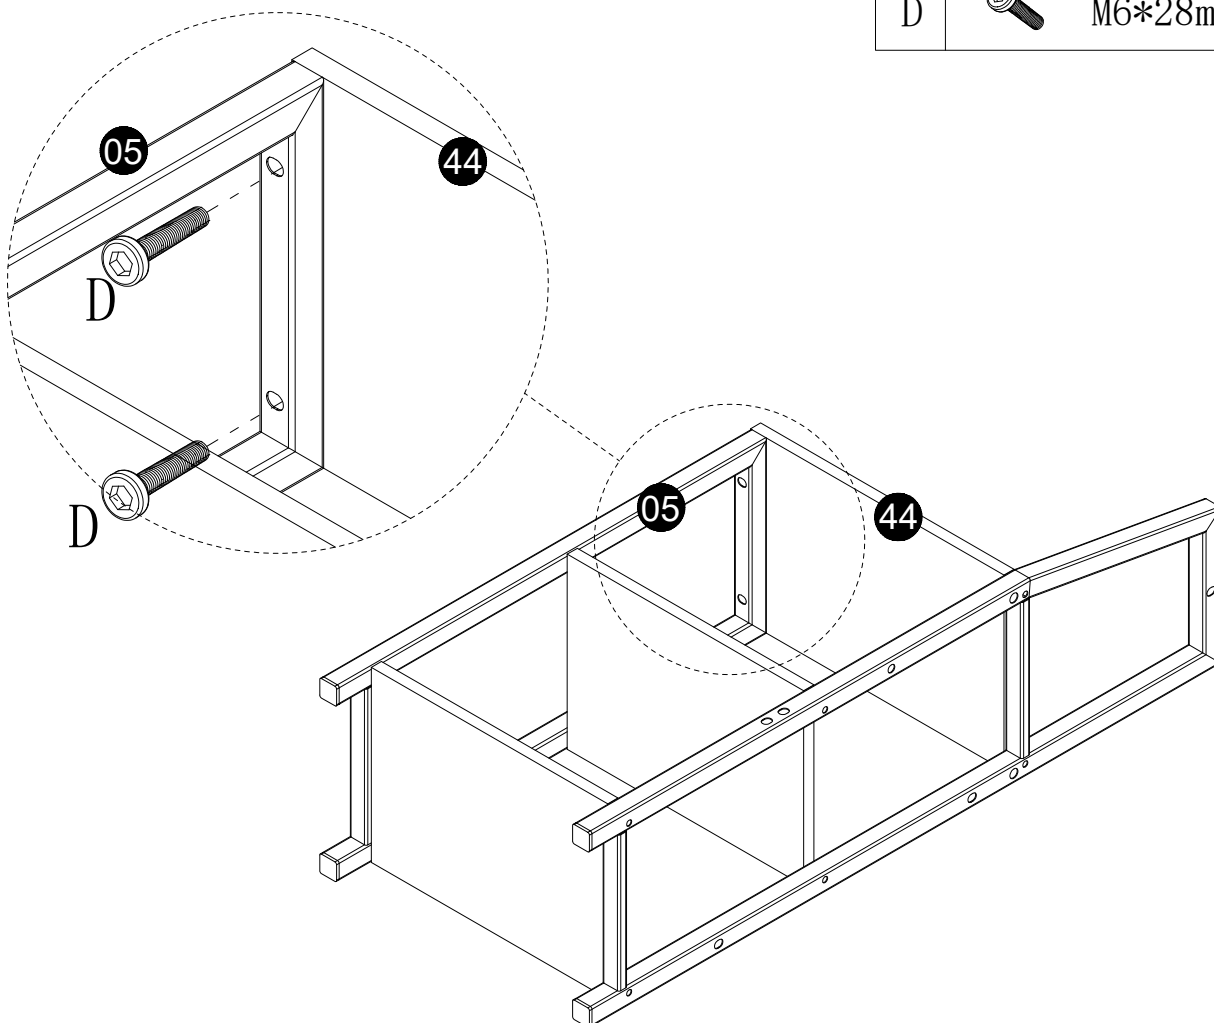


7

N



M6*40mm 4pcs

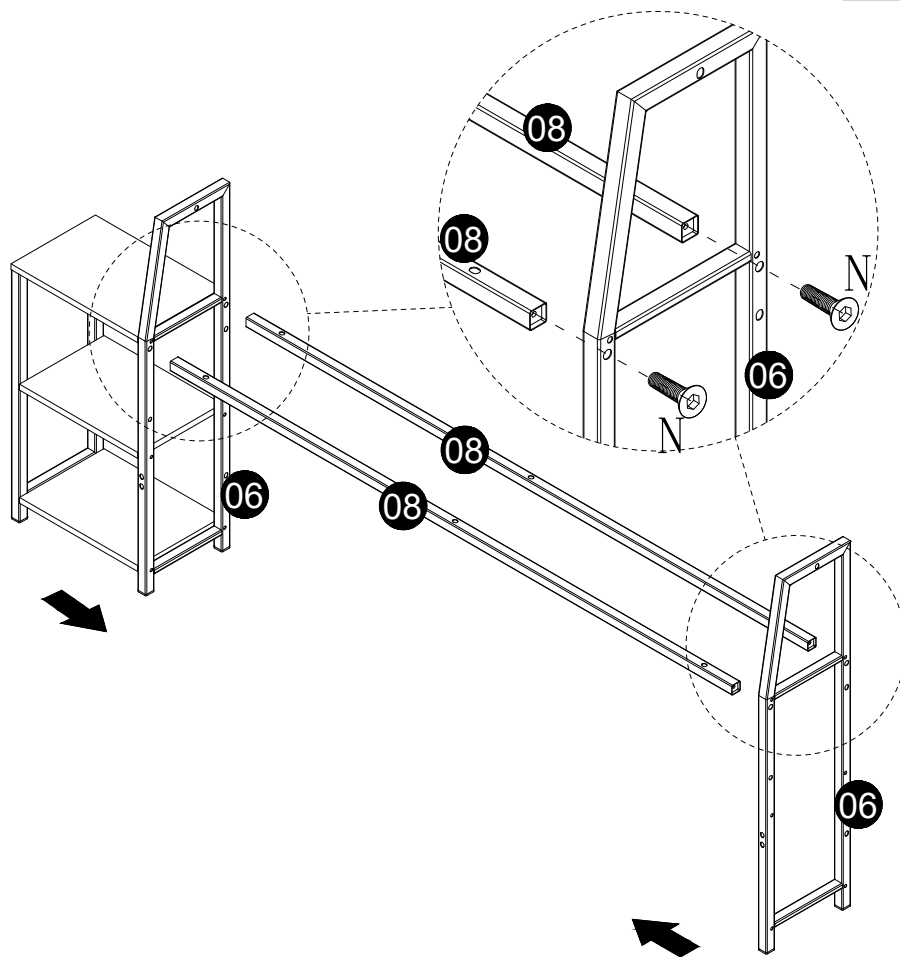


8

C




M6*25mm 6pcs

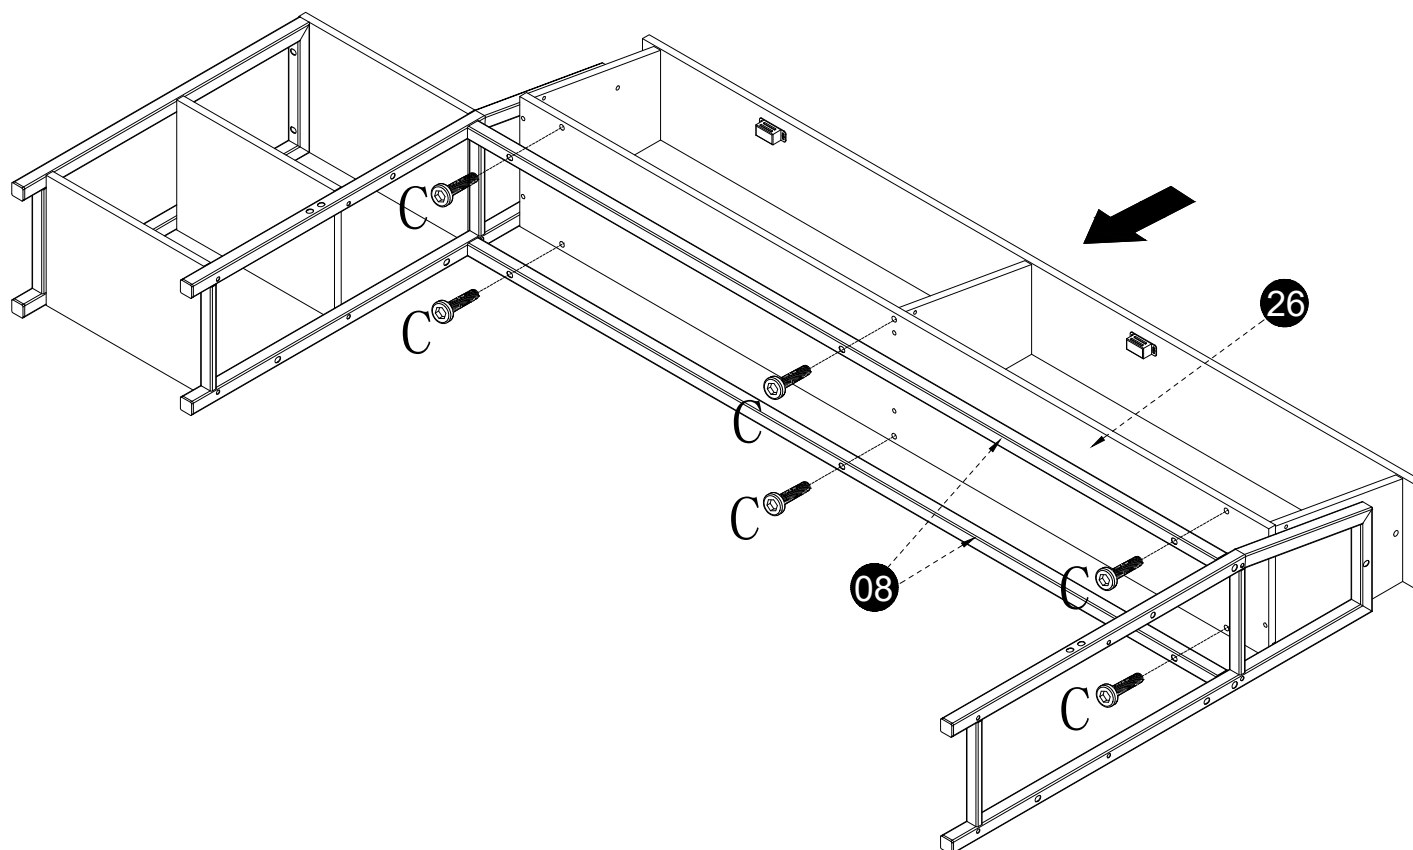


9

D		M6*28mm	2pcs
G		M6*40mm	2pcs

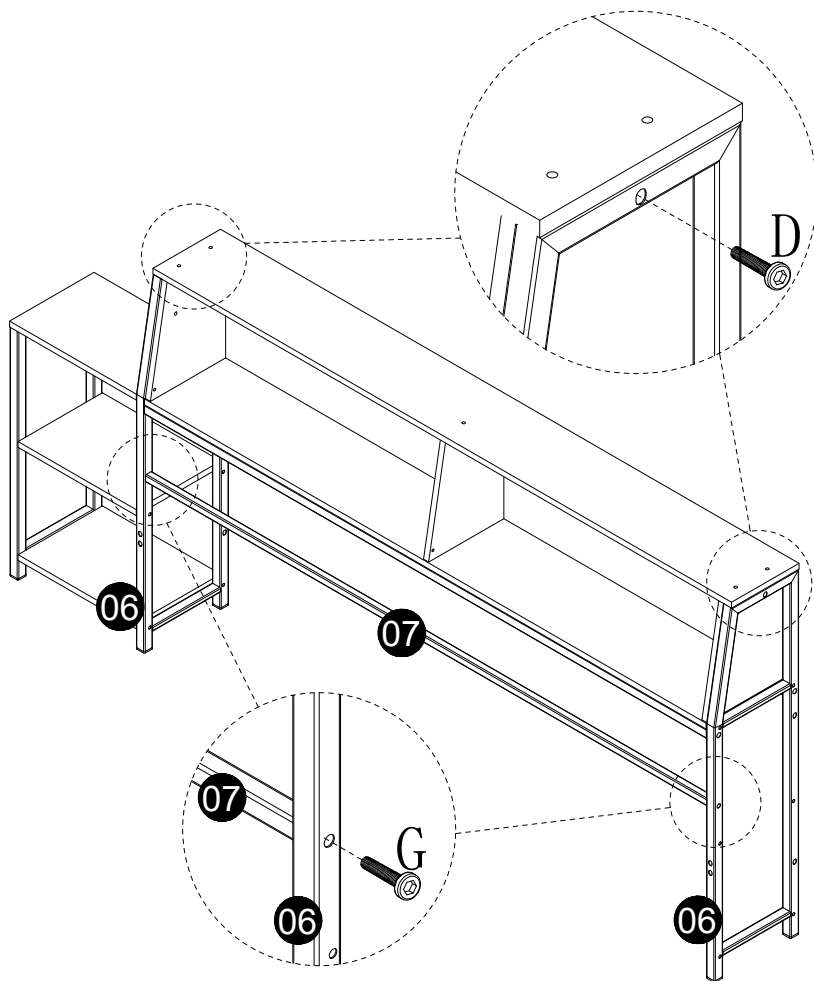


10


S		4pcs
---	---	------


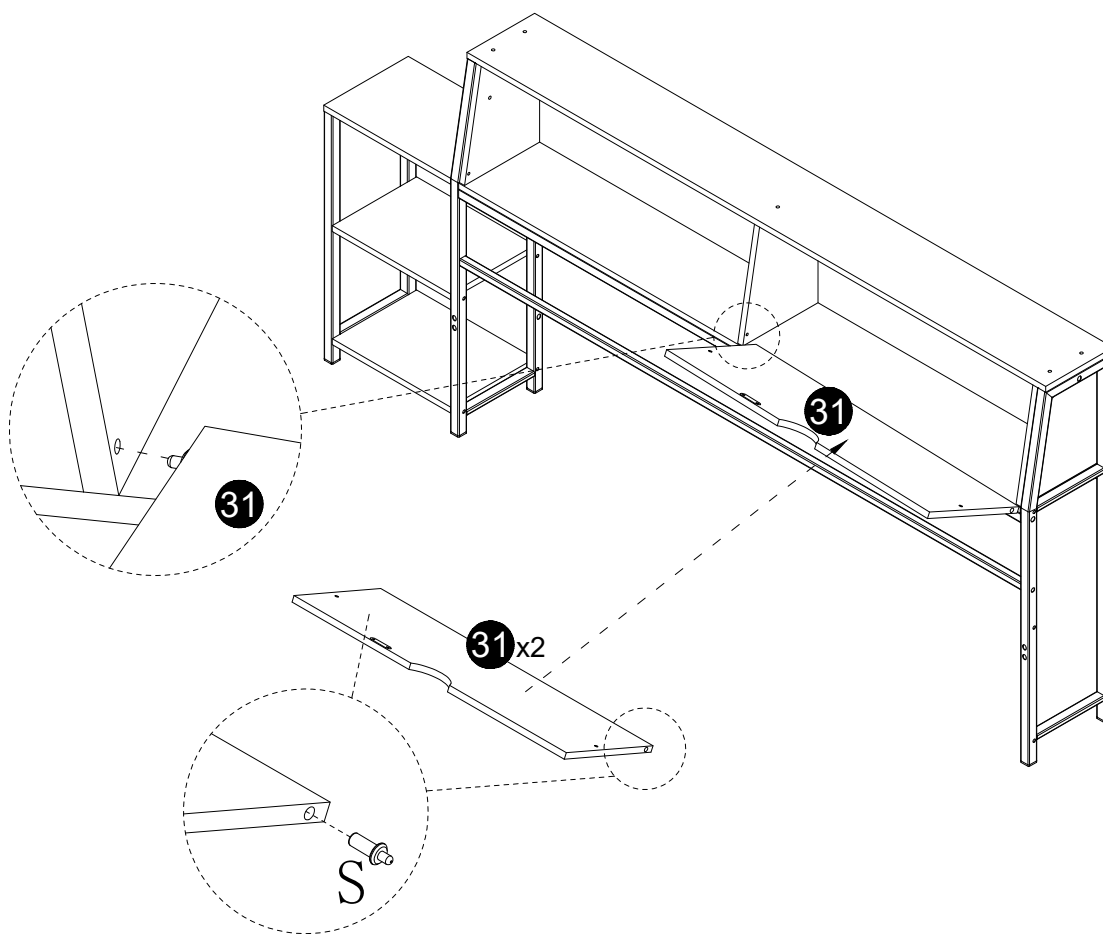




J		M4*14mm	4pcs
0			2pcs


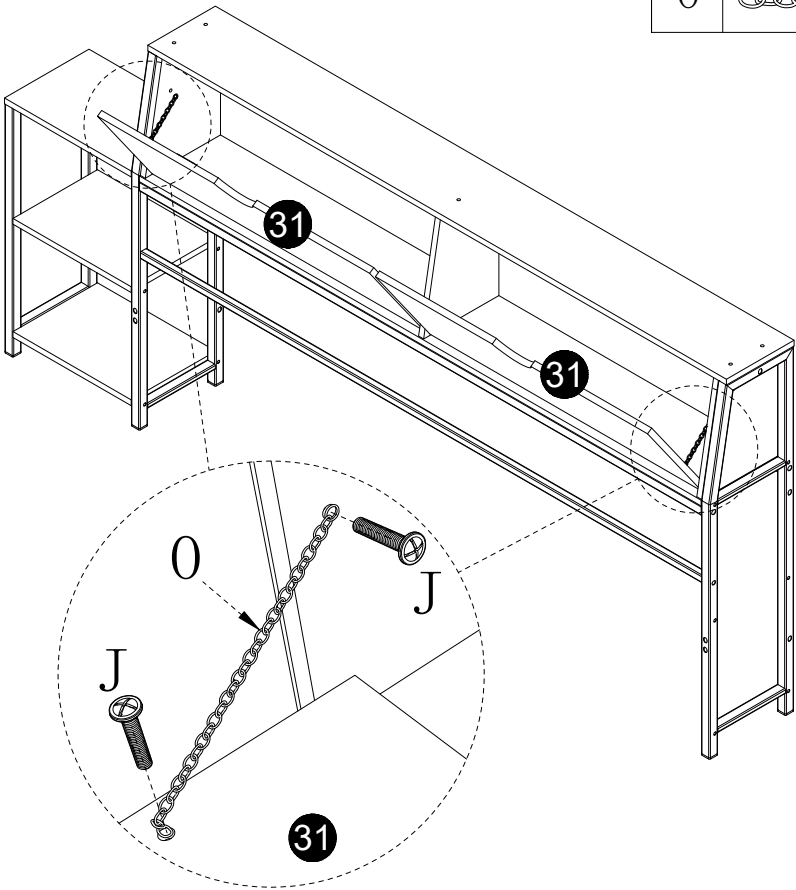


D		M6*28mm	4pcs
F		M6	4pcs
R		23cm	2pcs

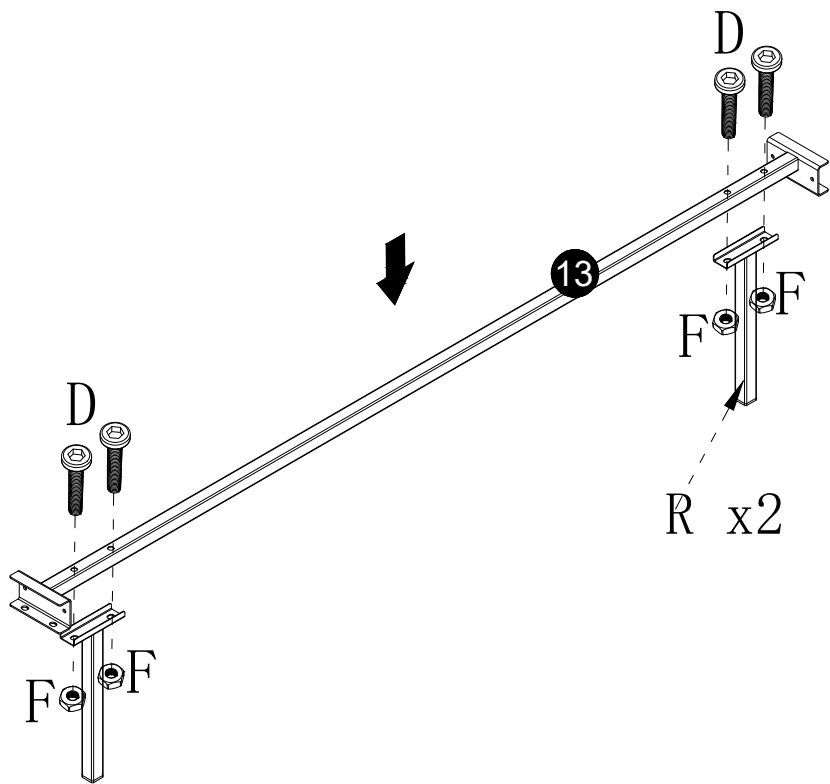


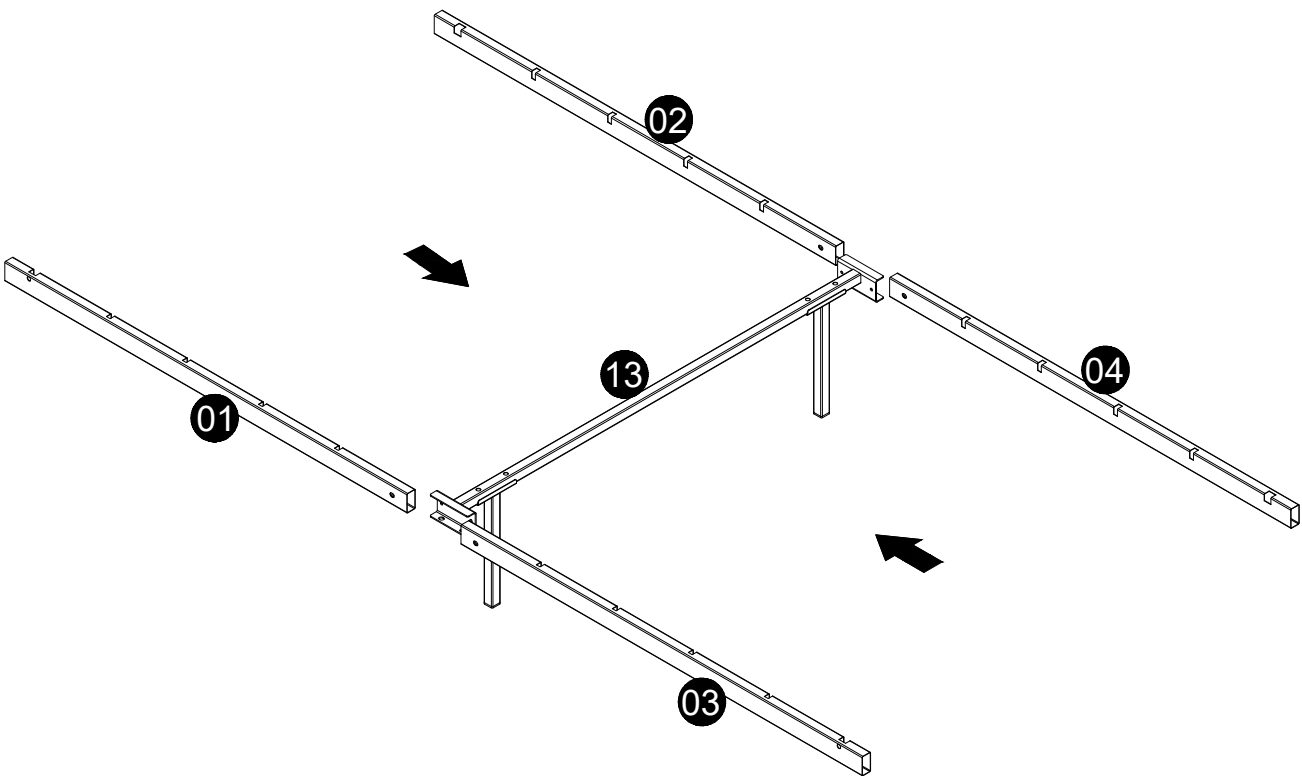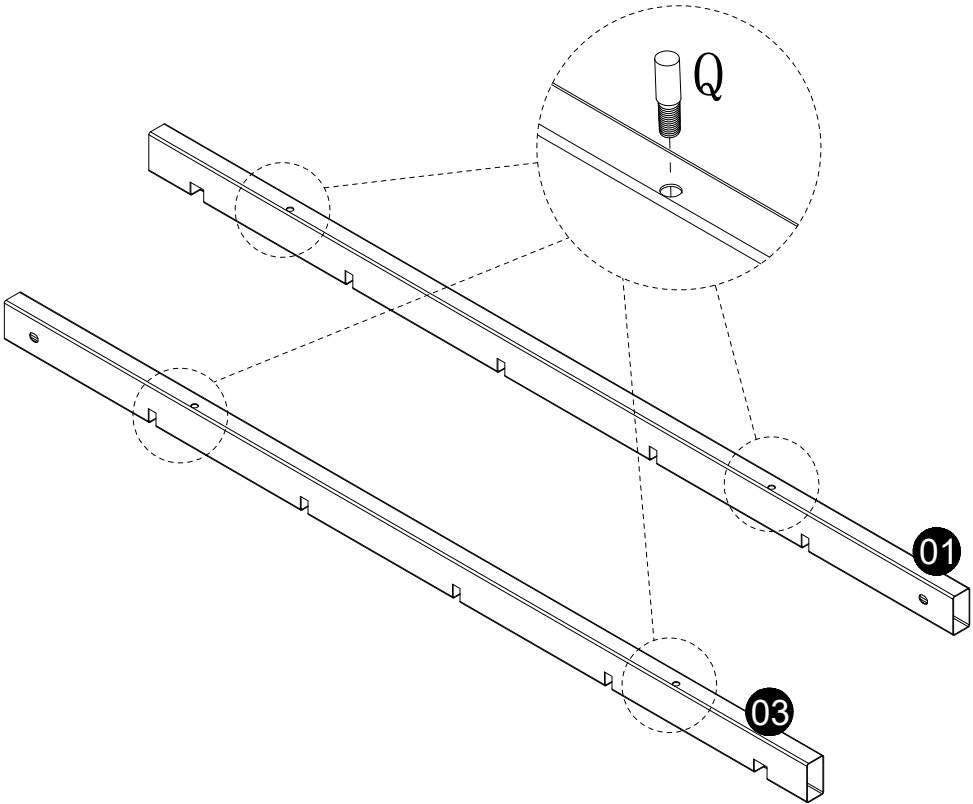

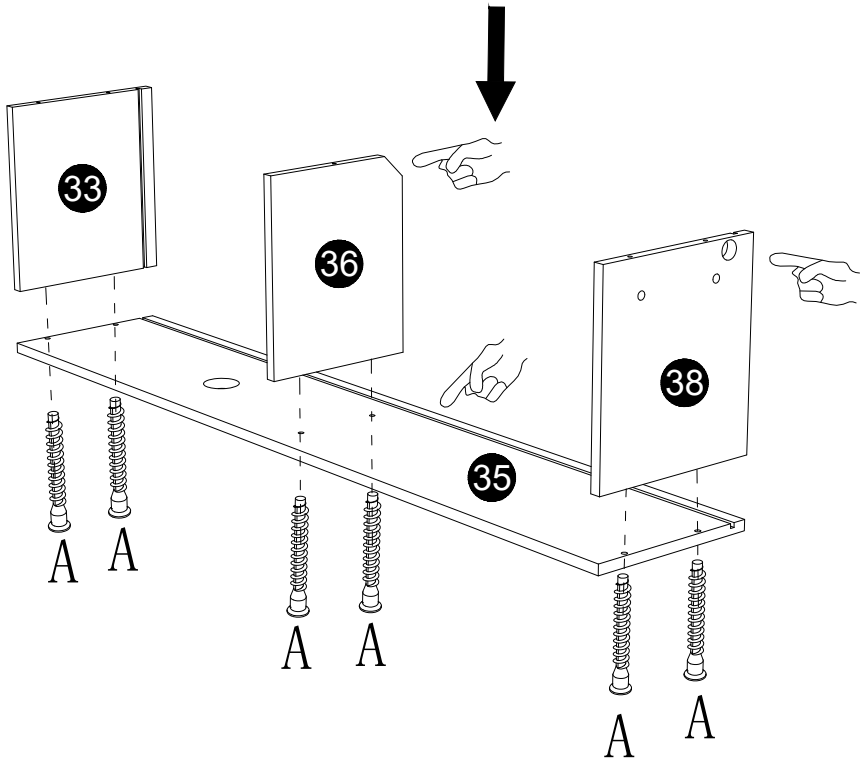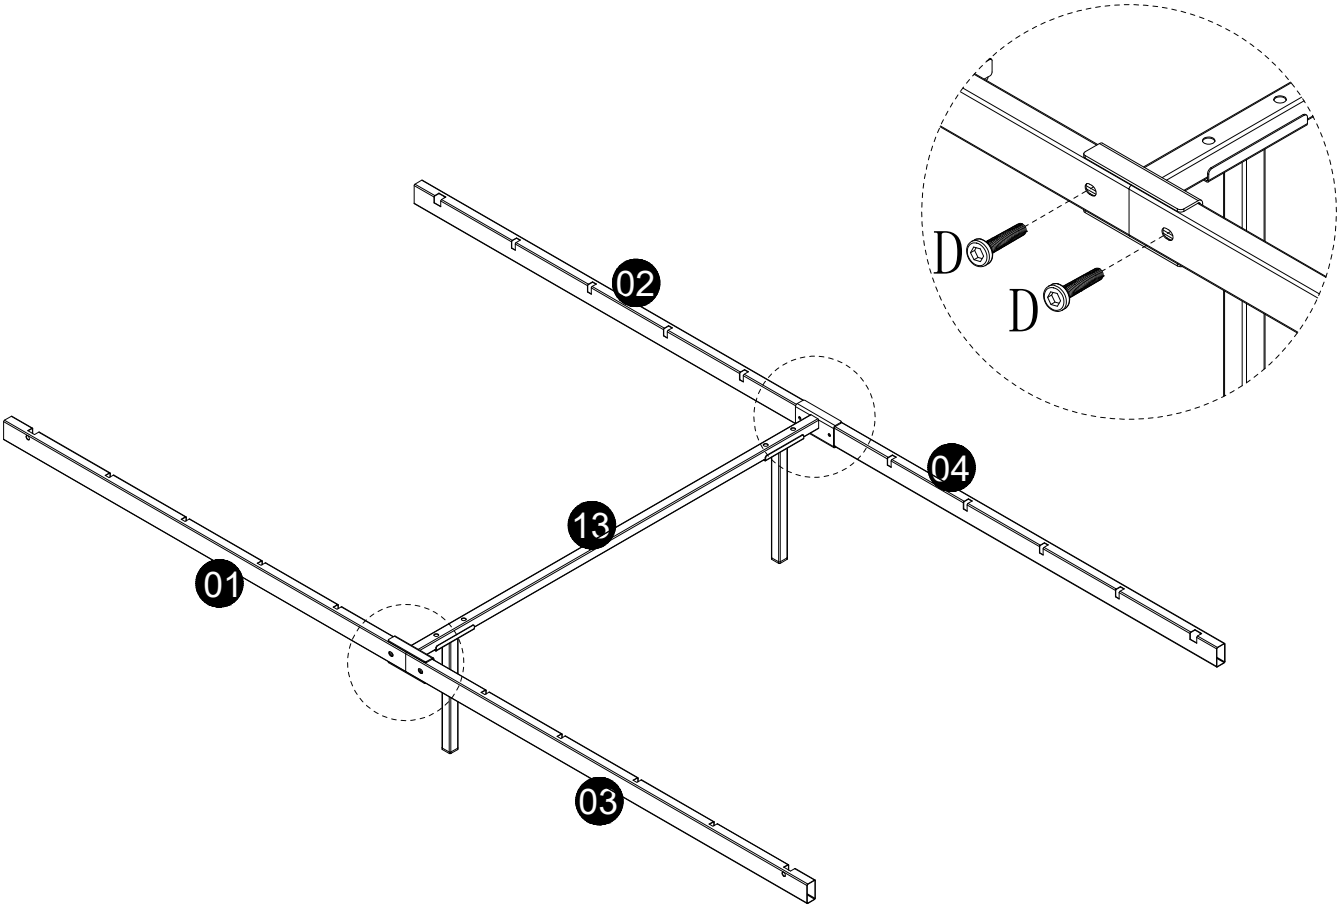


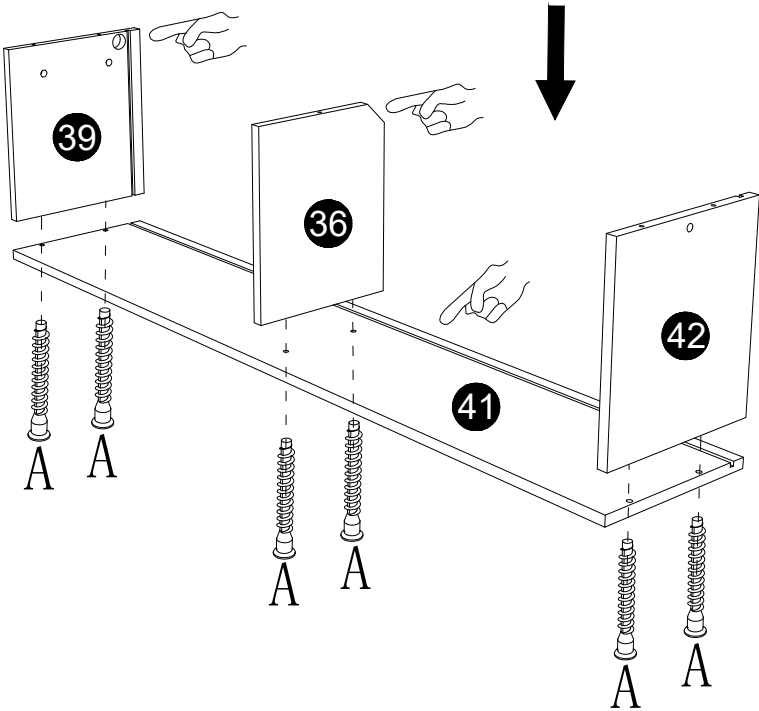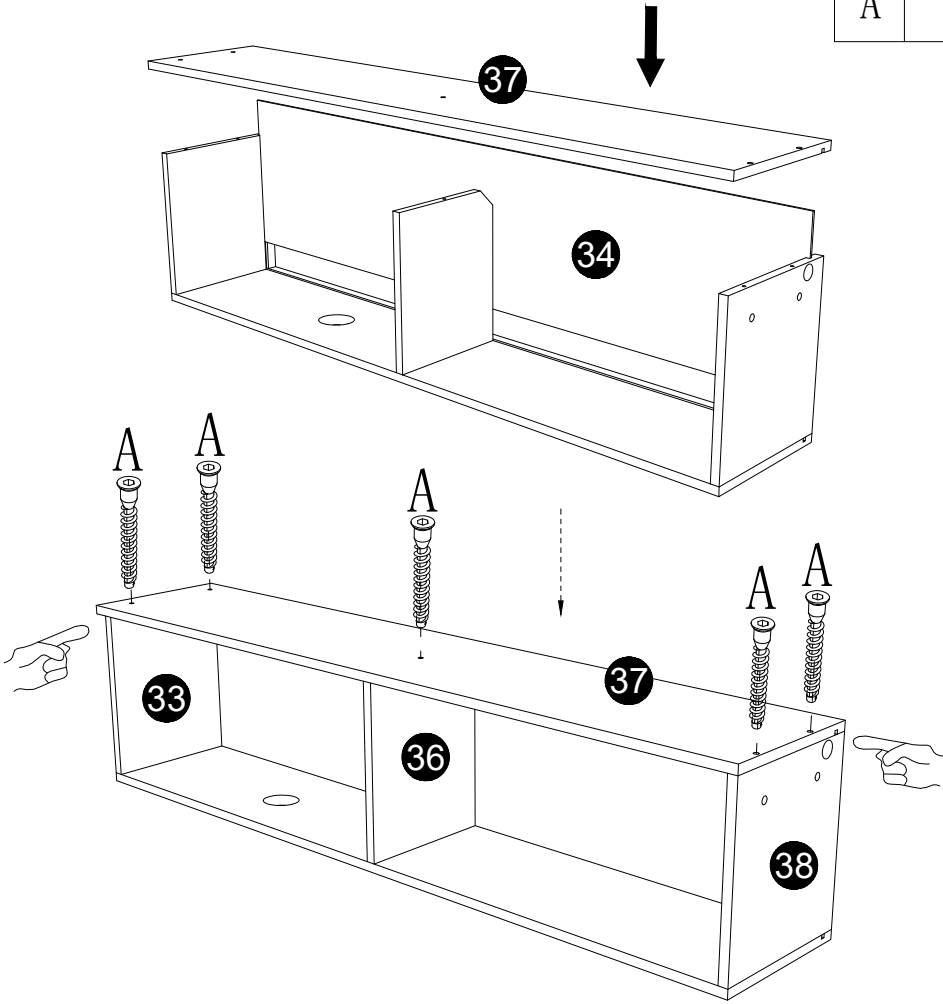

A		M5*40mm	5pcs
---	---	---------	------

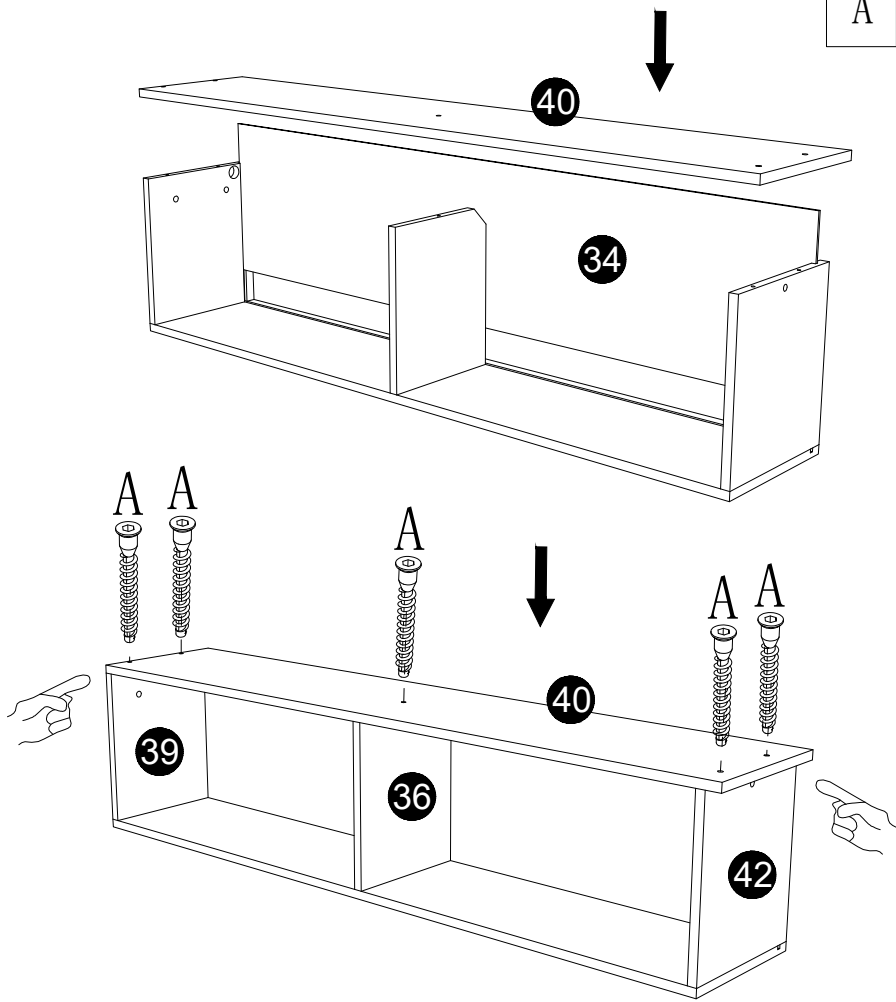


E		M6*60mm	2pcs
F		M6	2pcs
N		M6*40mm	4pcs

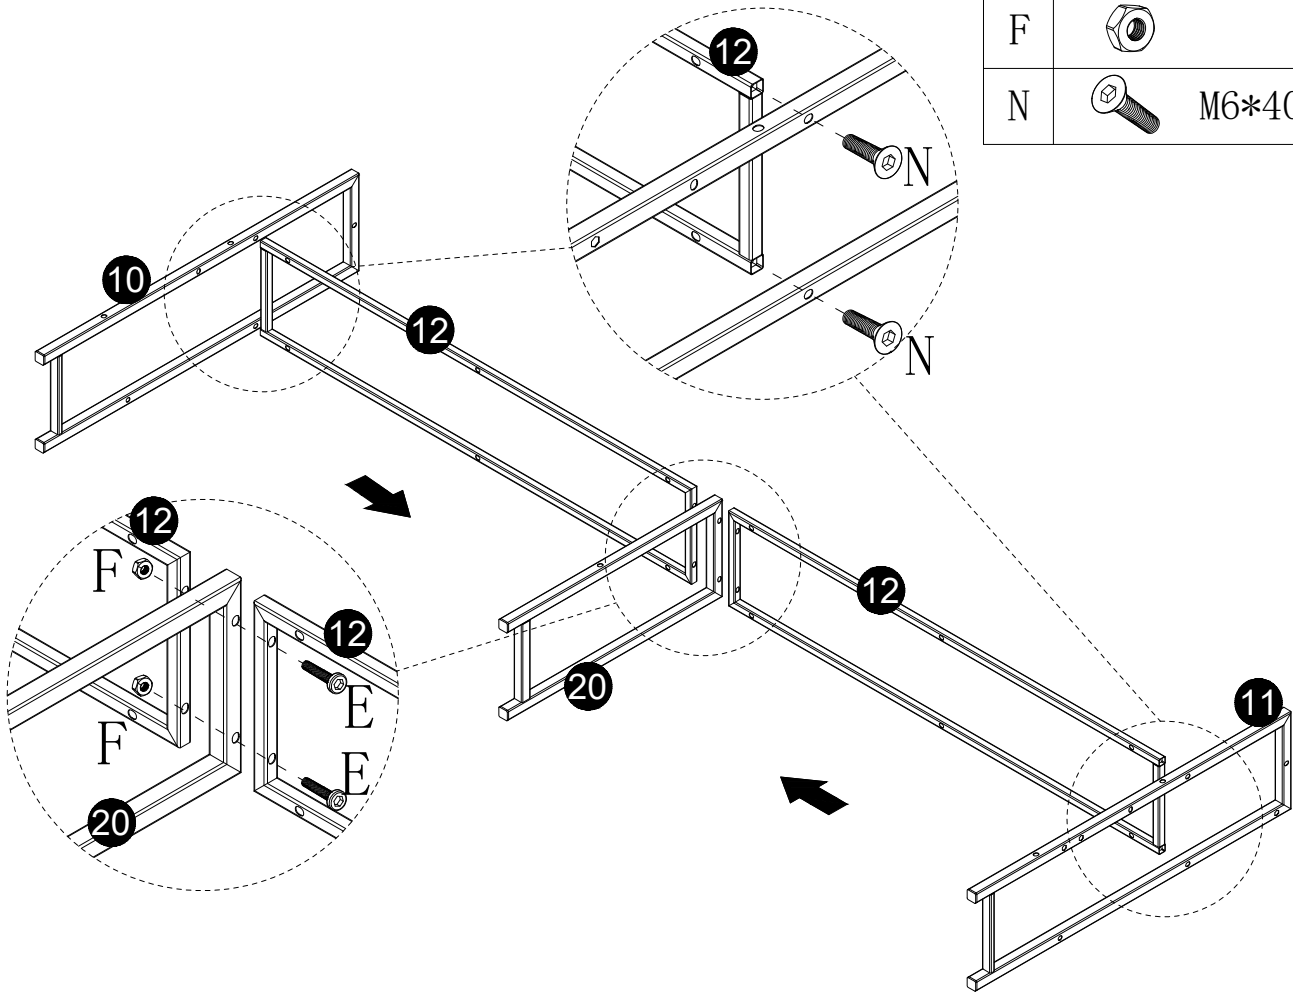


21

B		M6*15mm	2pcs
H		M6*15mm	2pcs

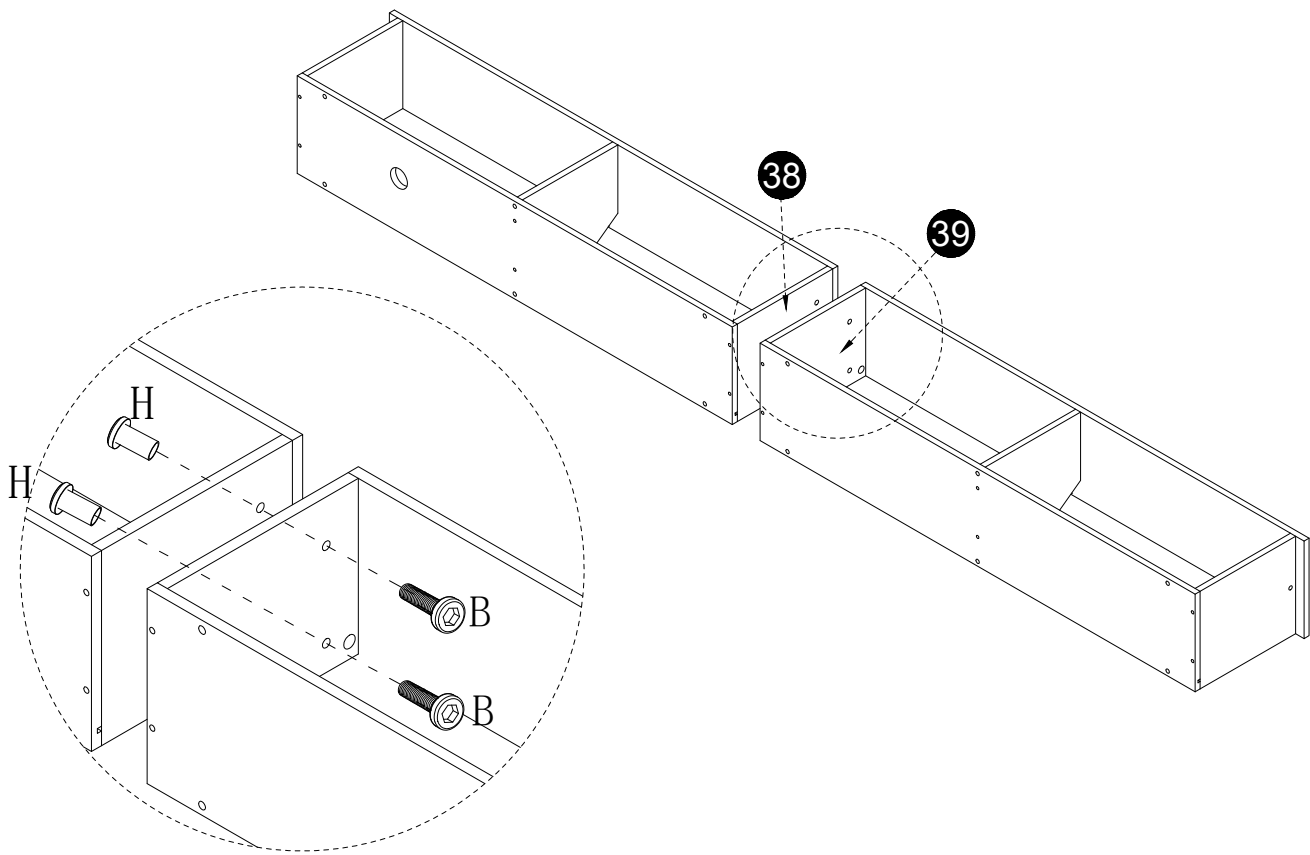


22


C		M6*25mm	12pcs
---	---	---------	-------

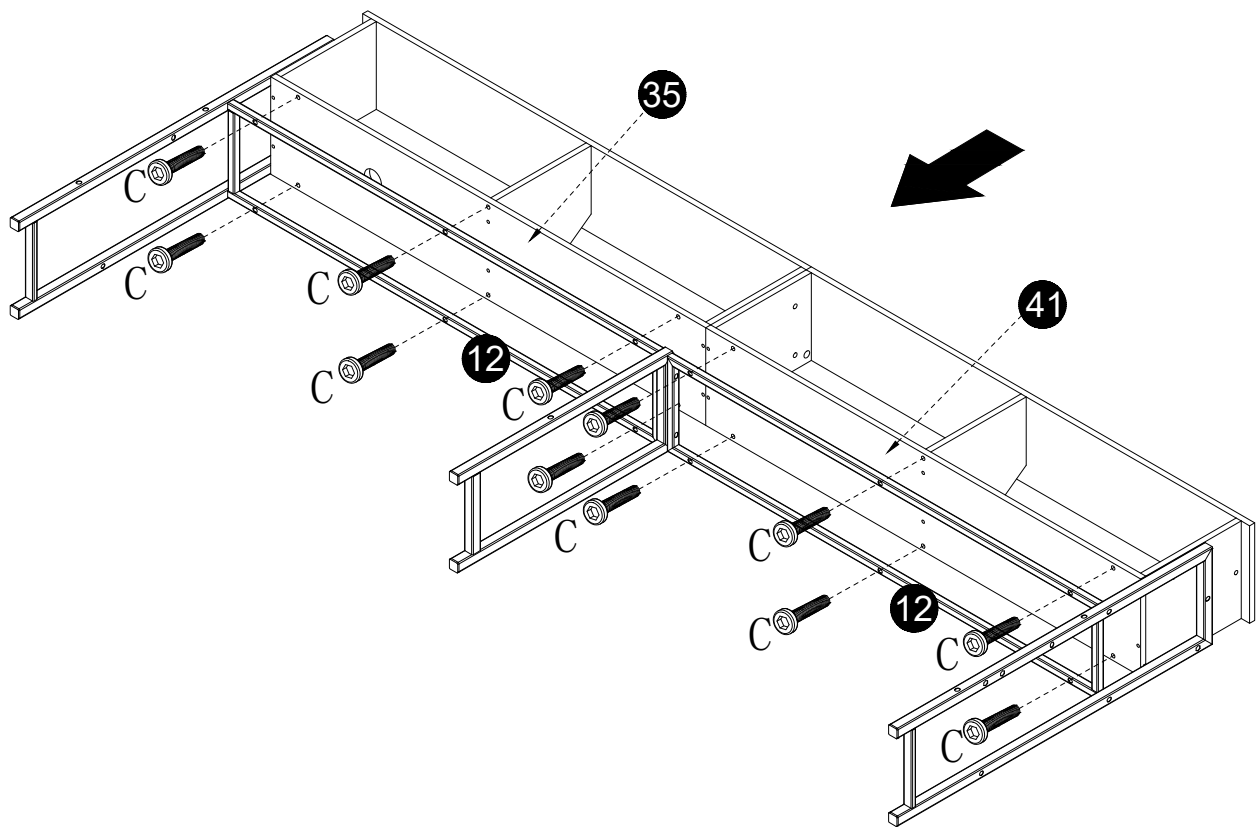

T		1pc
D		M6*28mm 2pcs

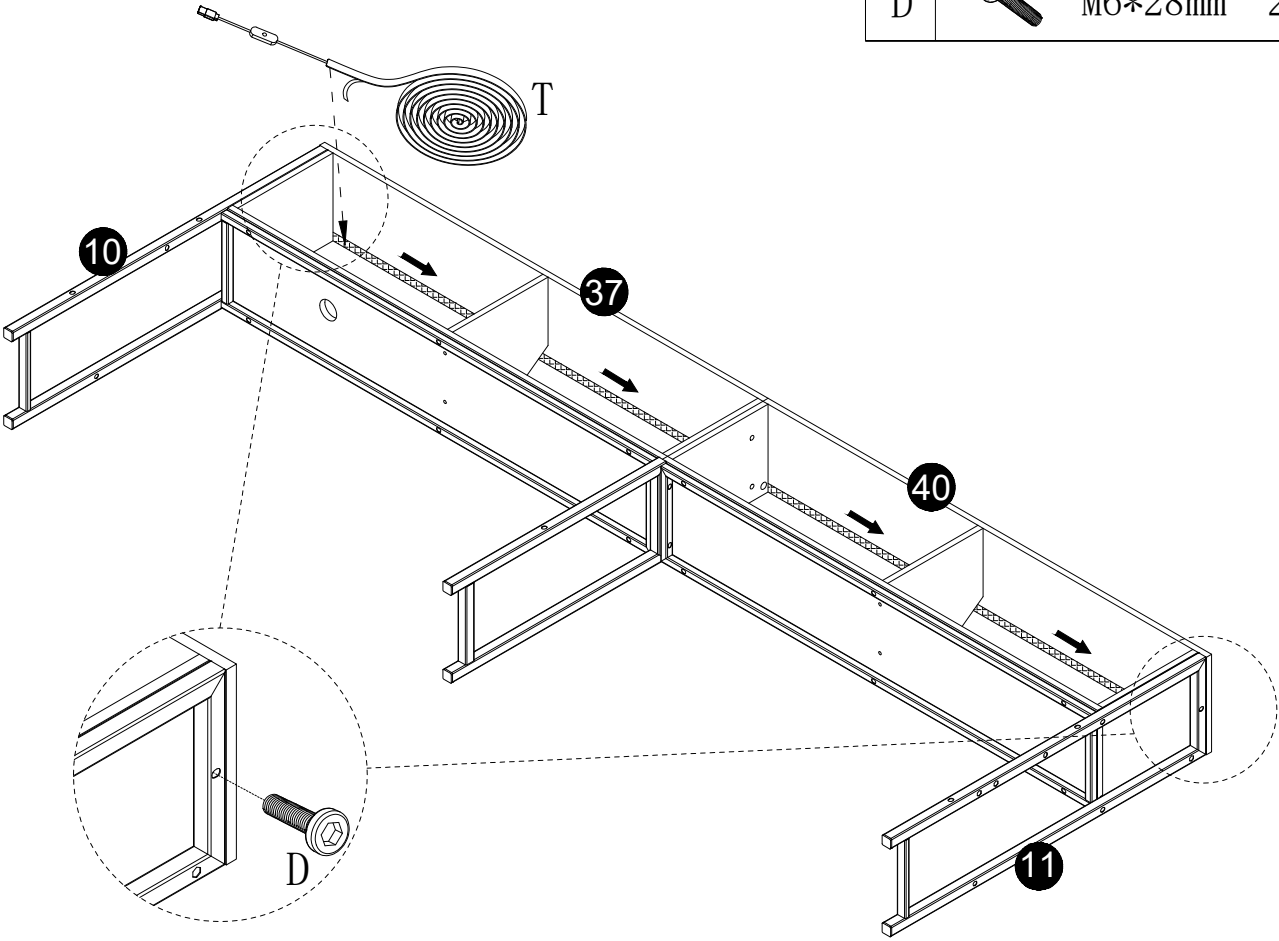


G		M6*40mm 4pcs
---	---	--------------

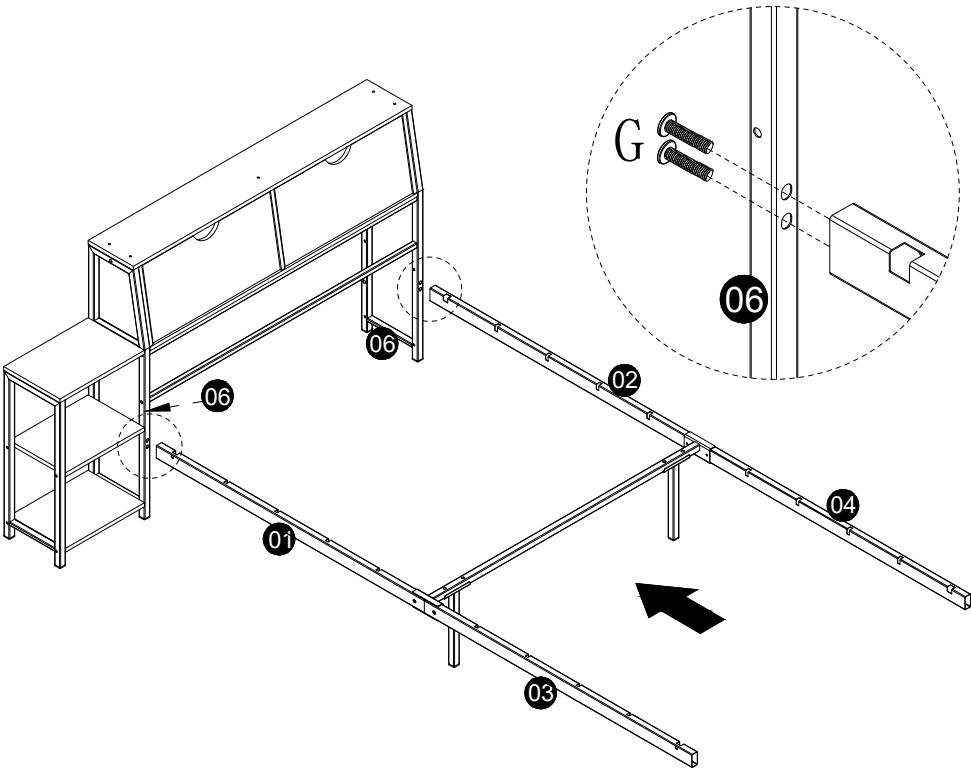


25

D		M6*28mm	1pc
I		M6*50mm	2pcs
F		M6	2pcs

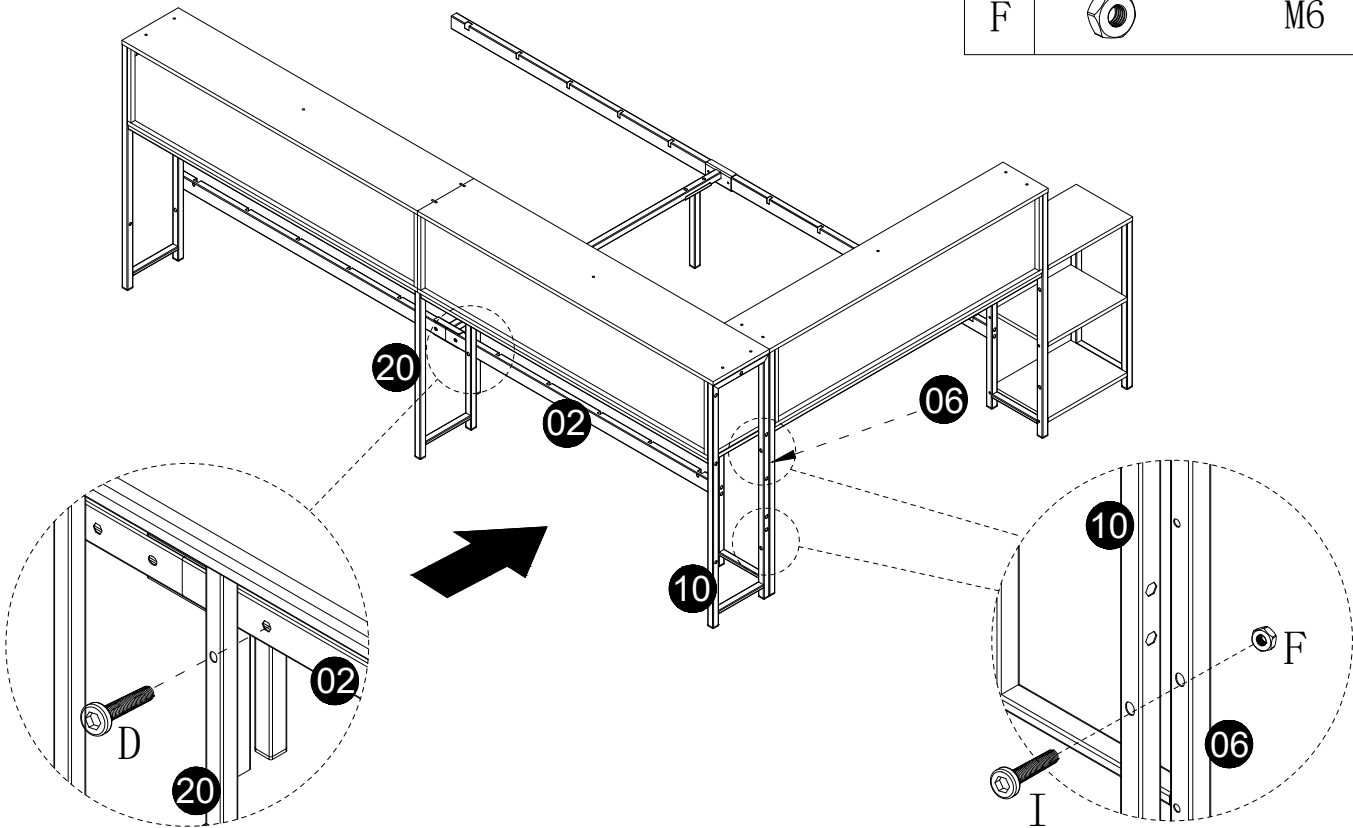


26

B		M6*15mm	2pcs
D		M6*28mm	2pcs
b			1pc

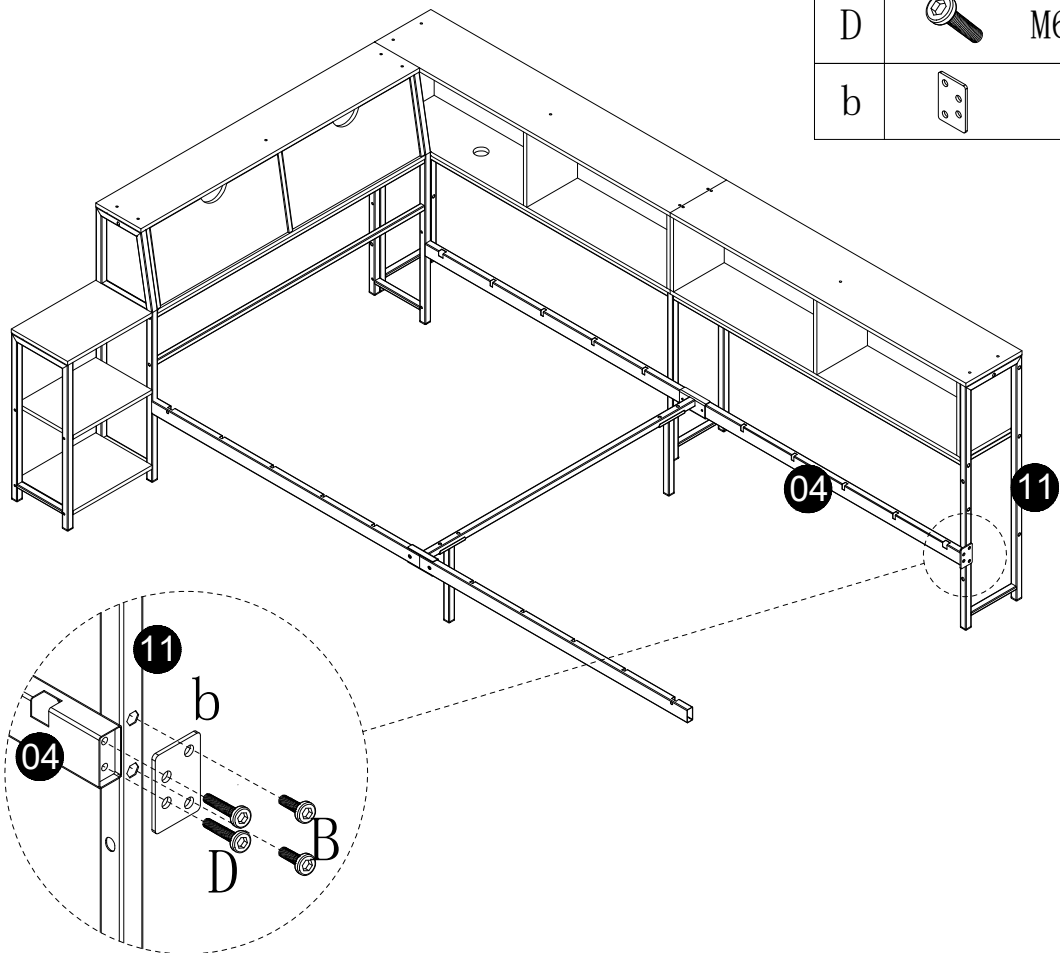


27


F		M6	1pc
D		M6*28mm	1pc
G		M6*40mm	2pcs
I		M6*50mm	1pc

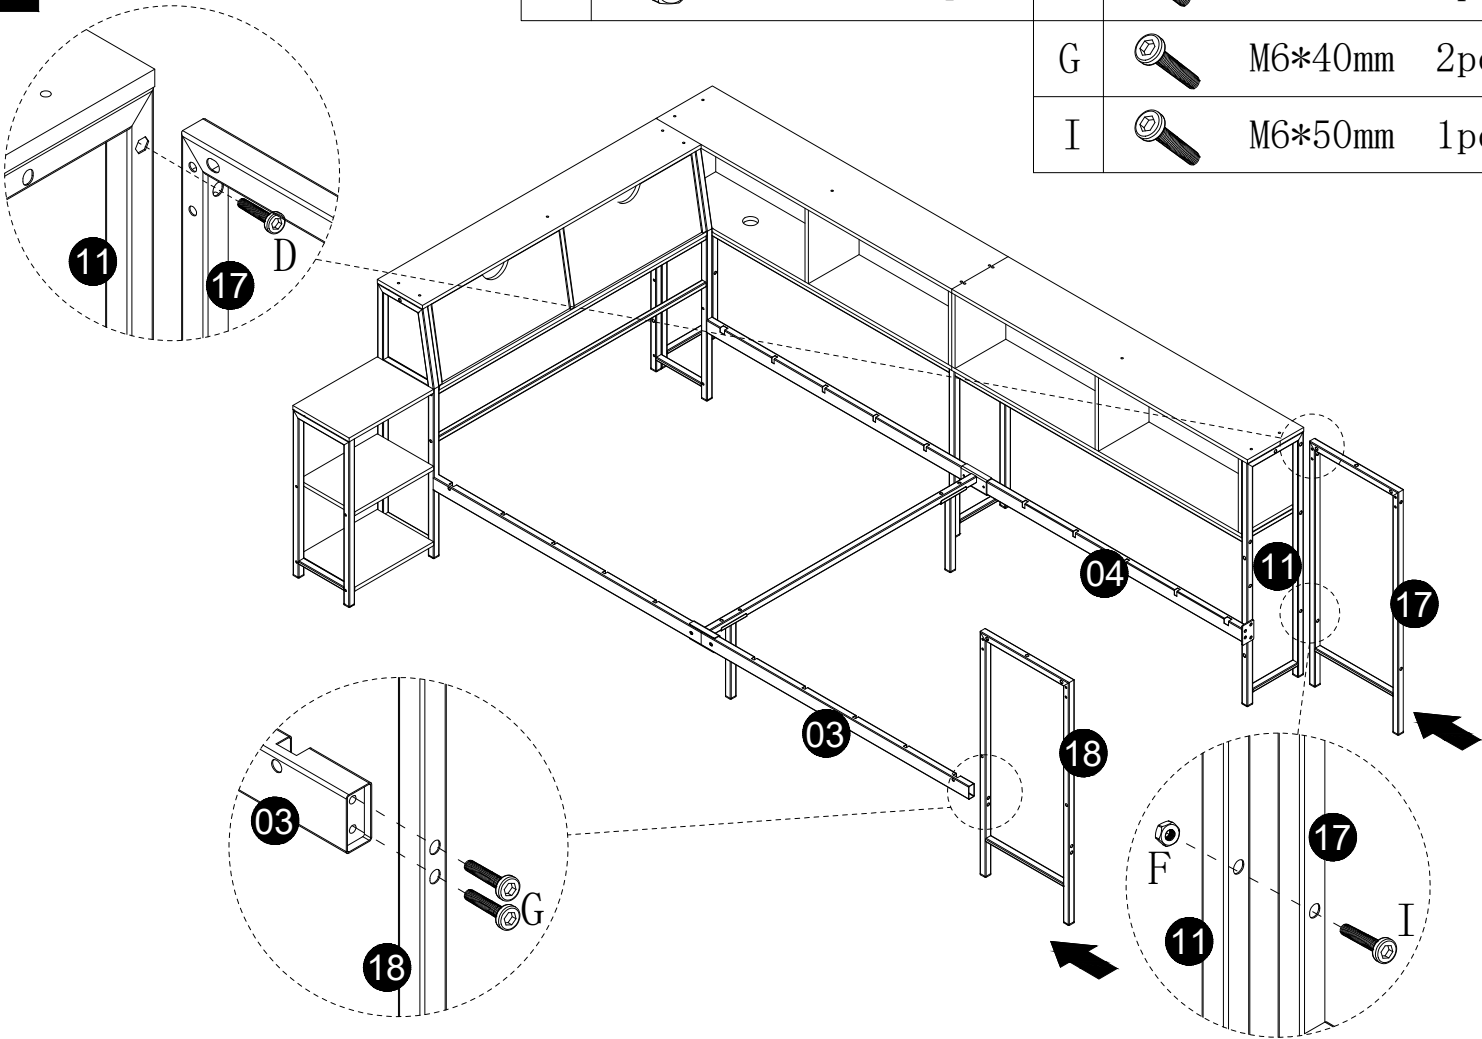


28

D		M6*28mm	1pc
G		M6*40mm	1pc

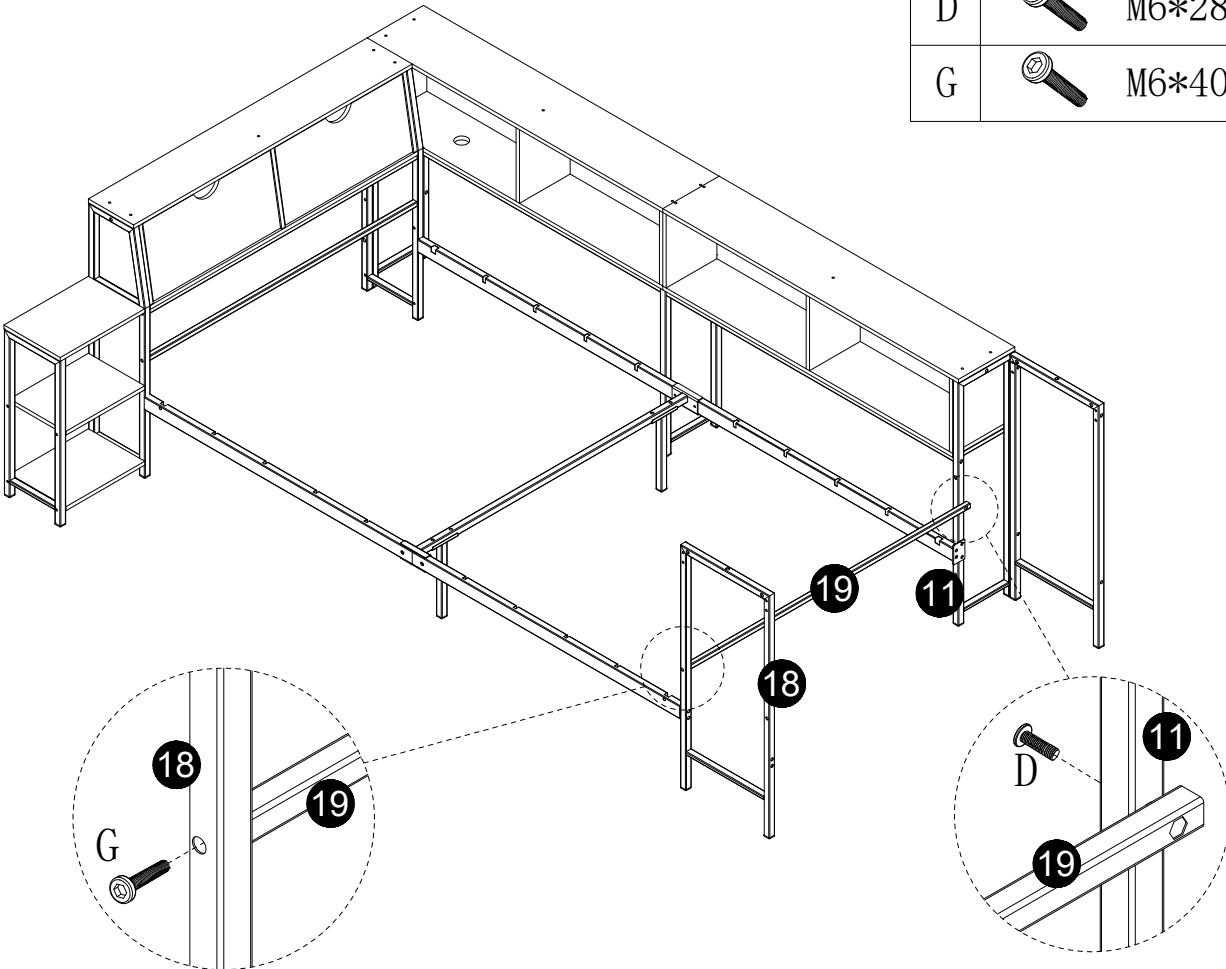


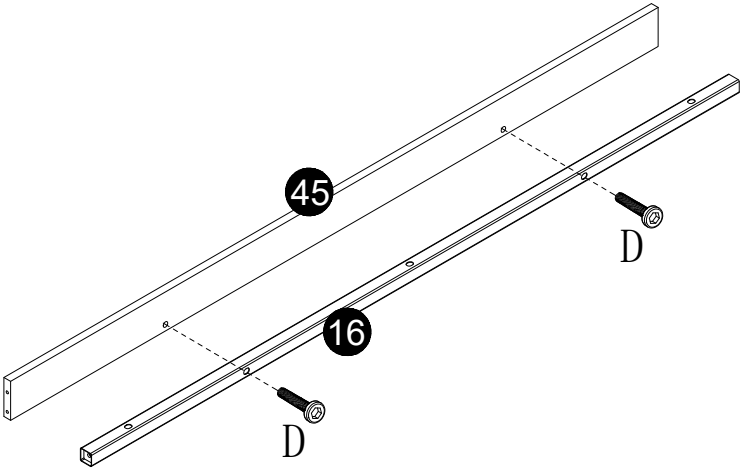


x2

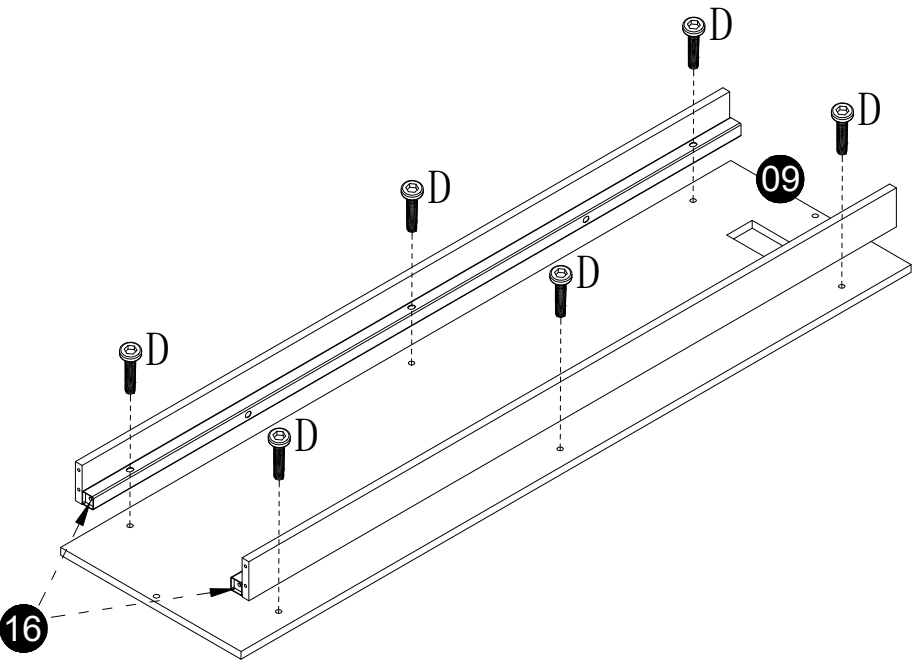

D		M6*28mm	2pcs
---	---	---------	------



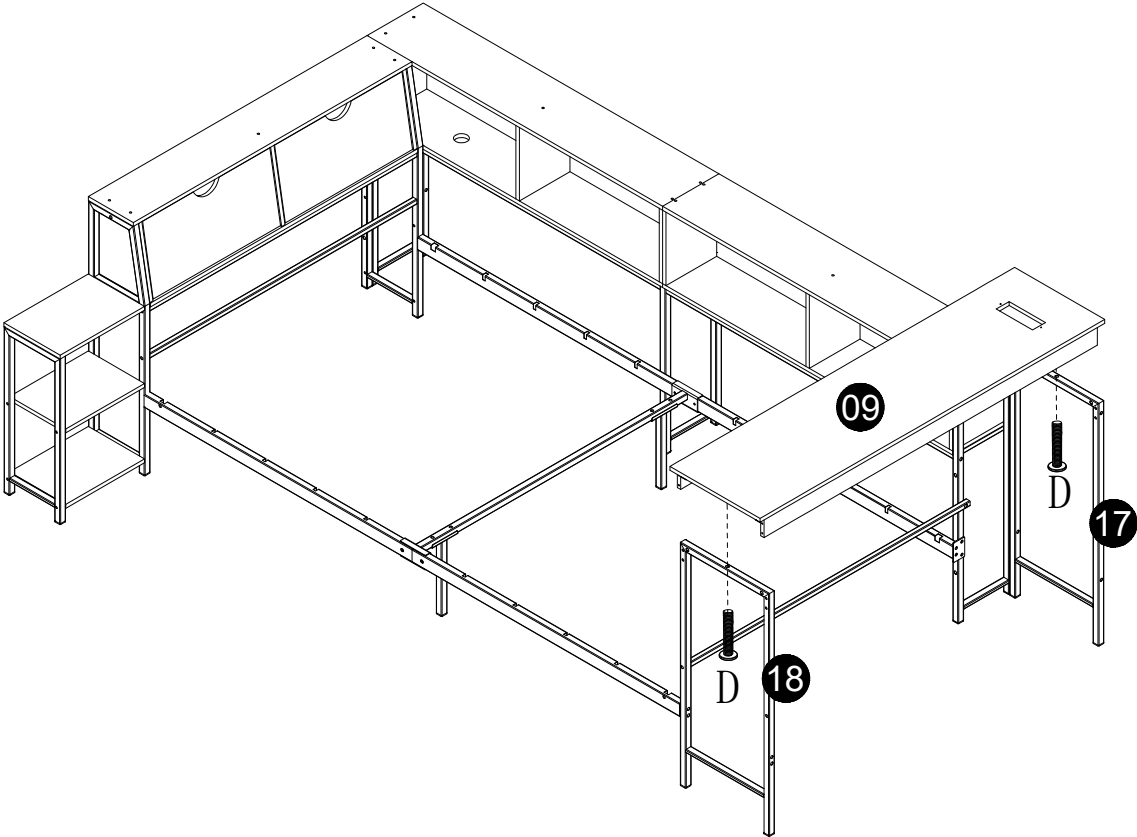


A		M5*40mm	8pcs
G		M6*40mm	4pcs

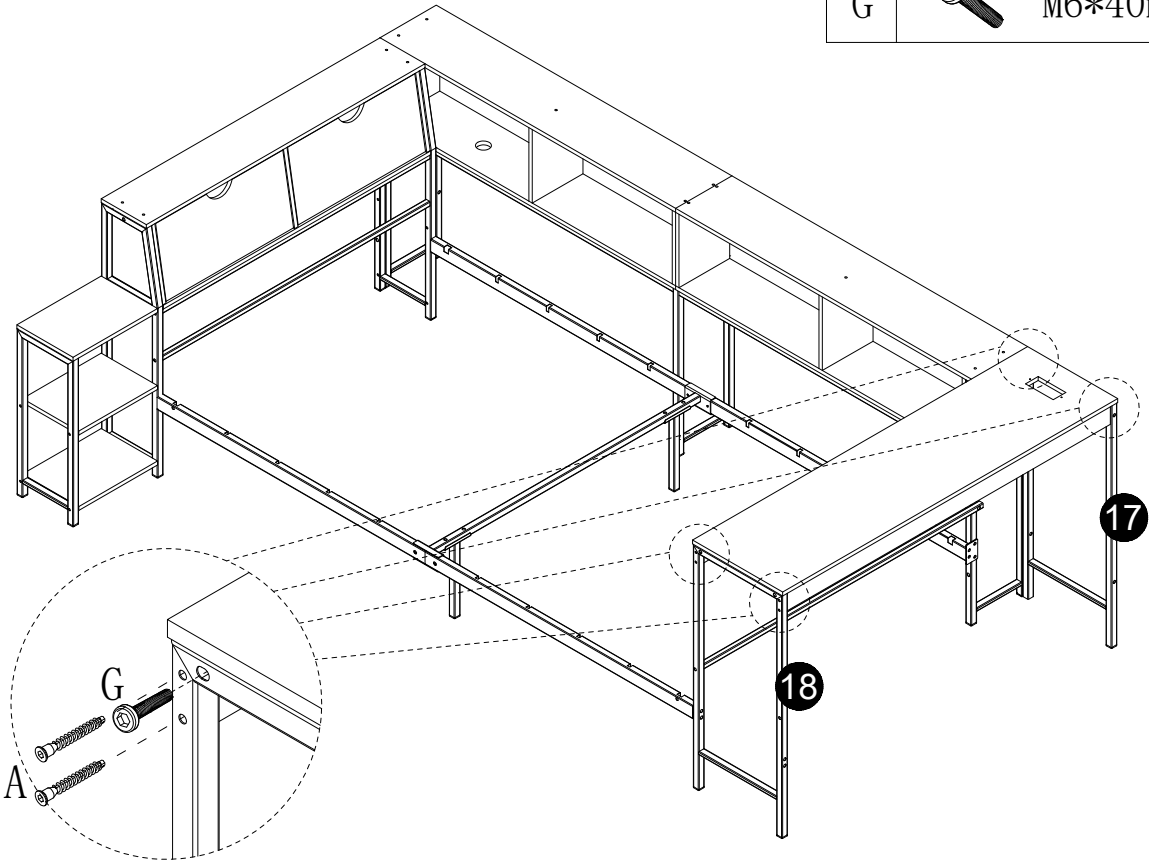



33



M		M4*10mm	3pcs
V			1pc

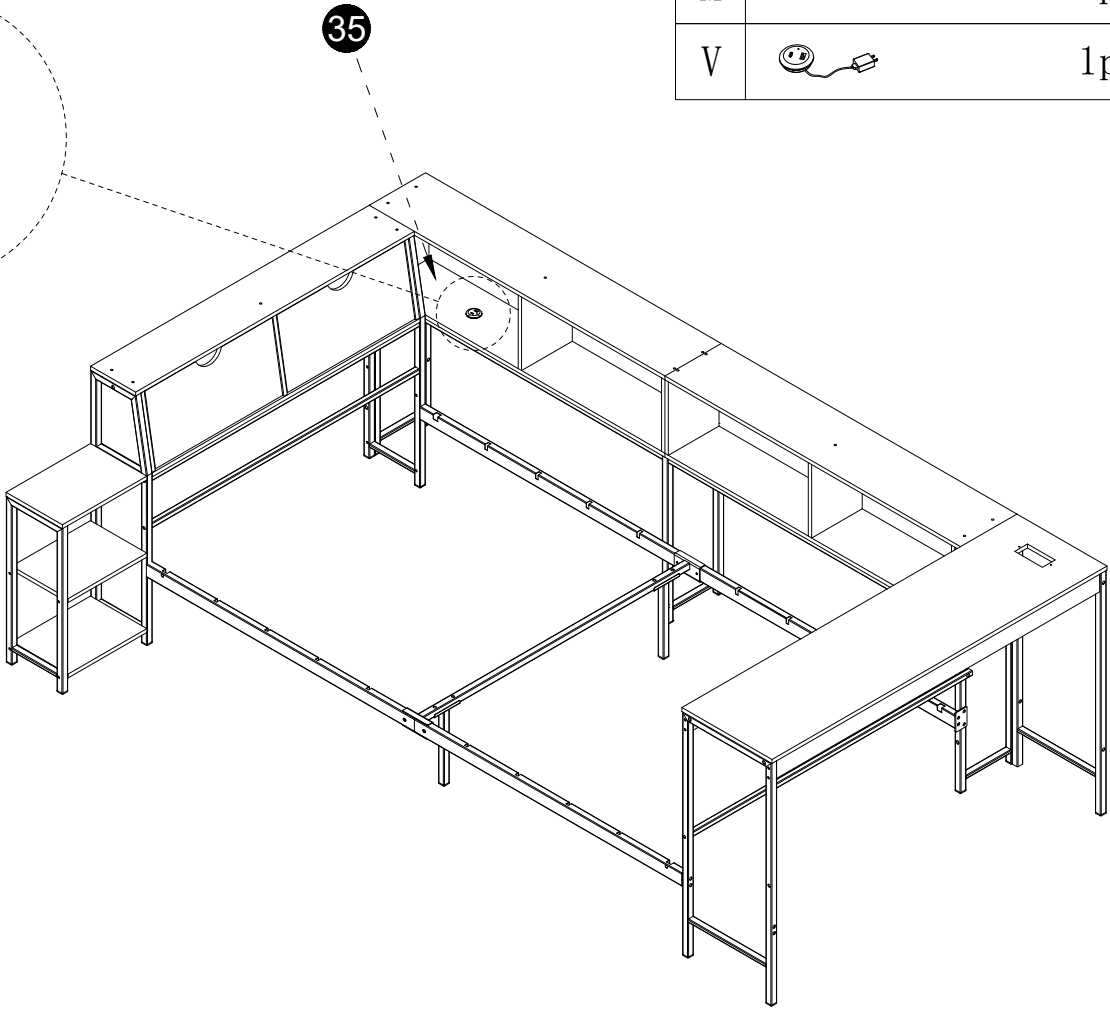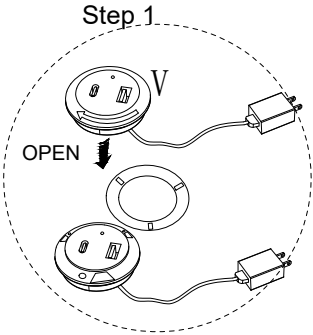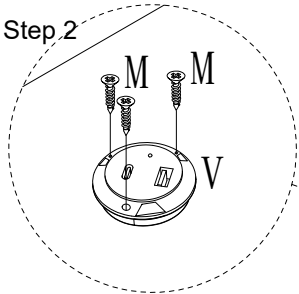

34


M		M4*10mm	2pcs
U			1pc

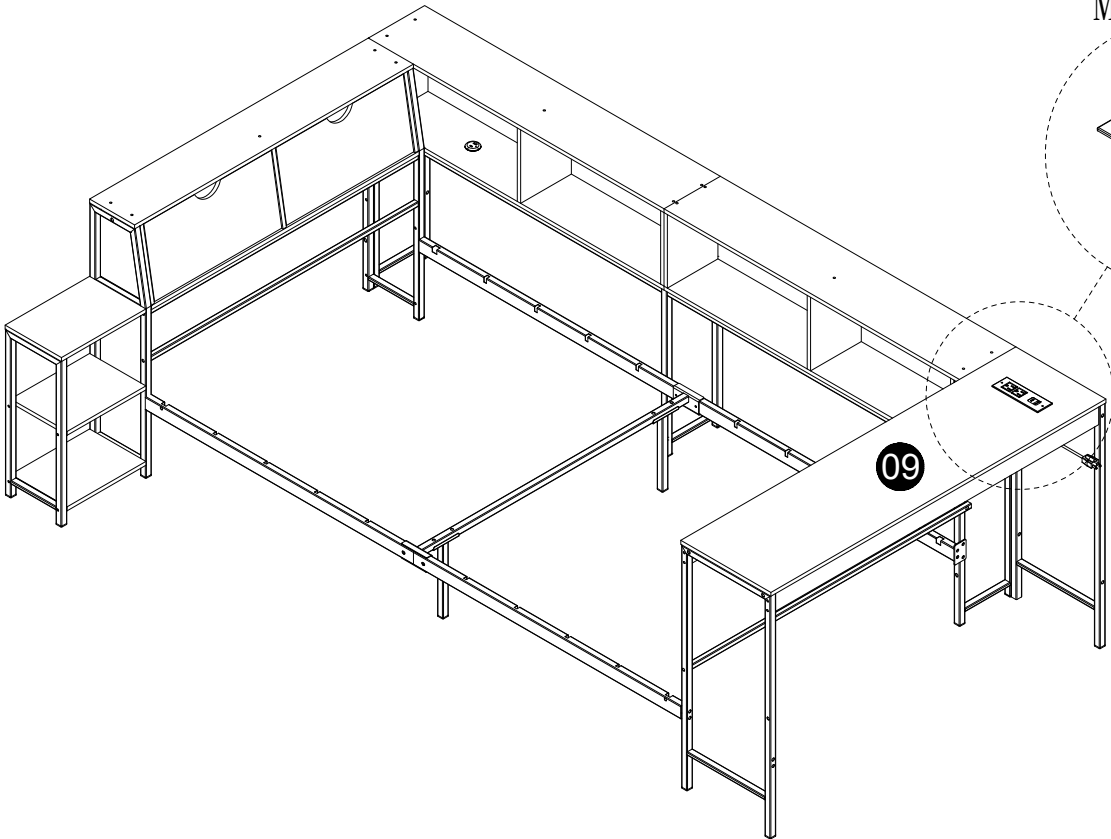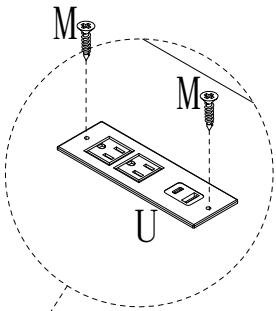

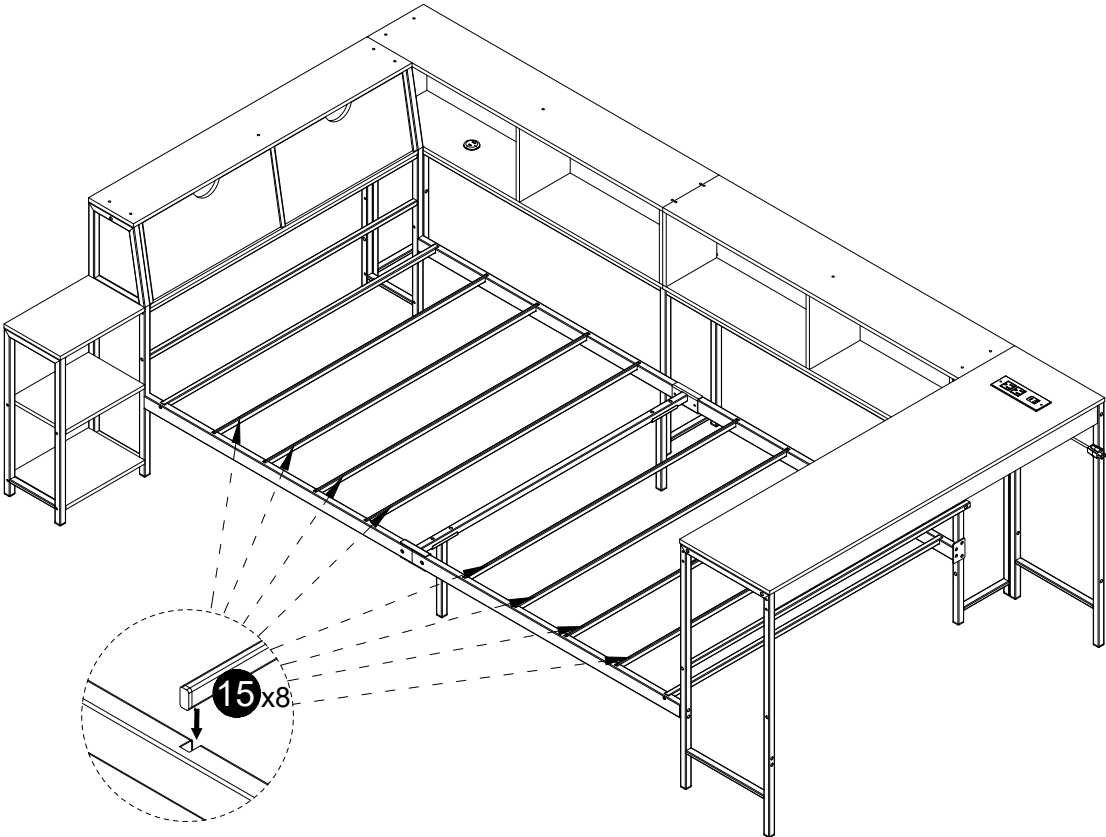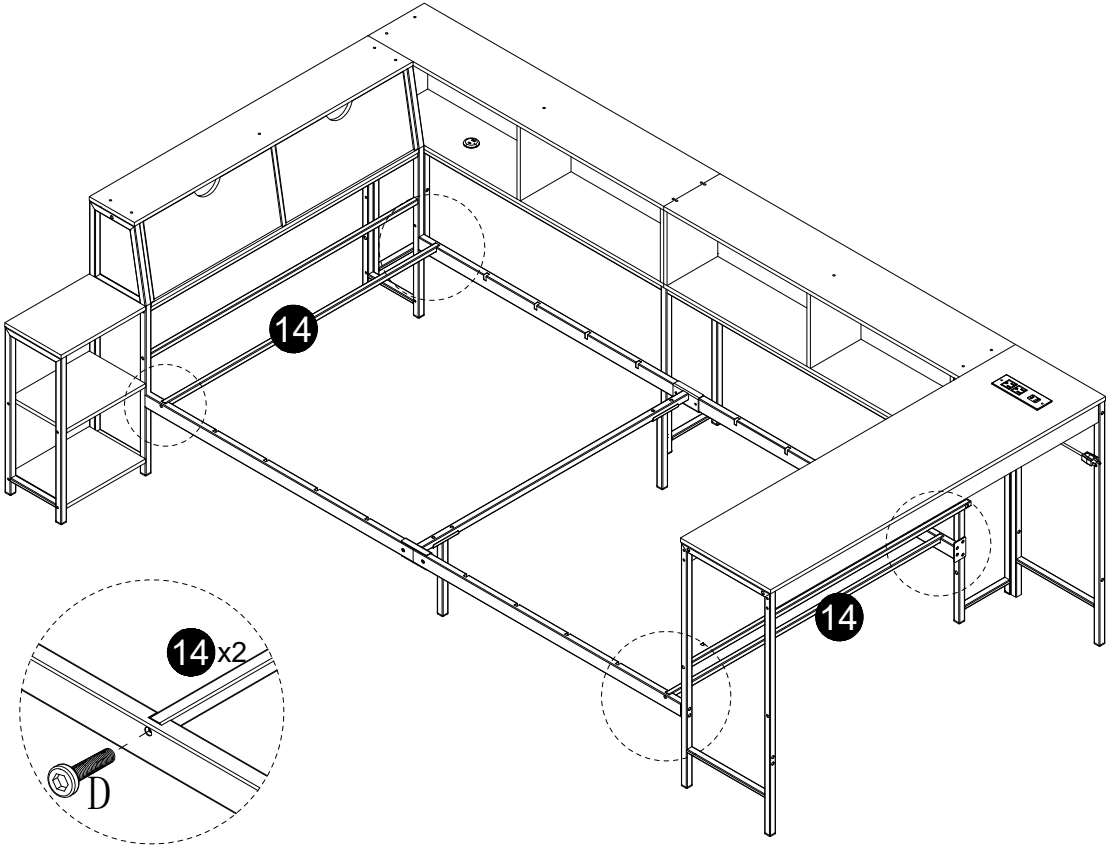


37


a		M4	16pcs
d		M4*28mm	16pcs

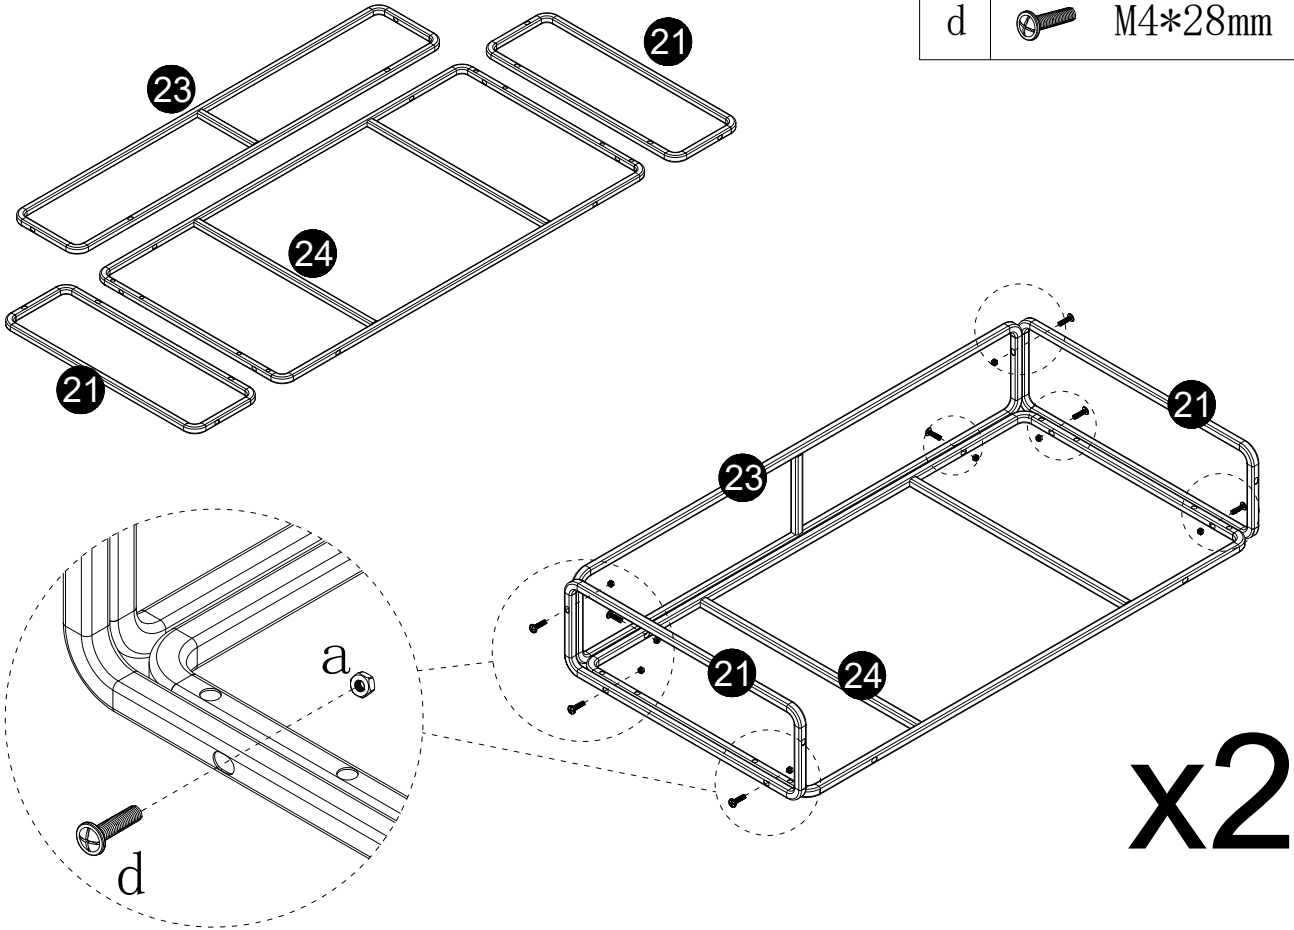


38

P		1.0	8pcs
a		M4	16pcs
d		M4*28mm	16pcs

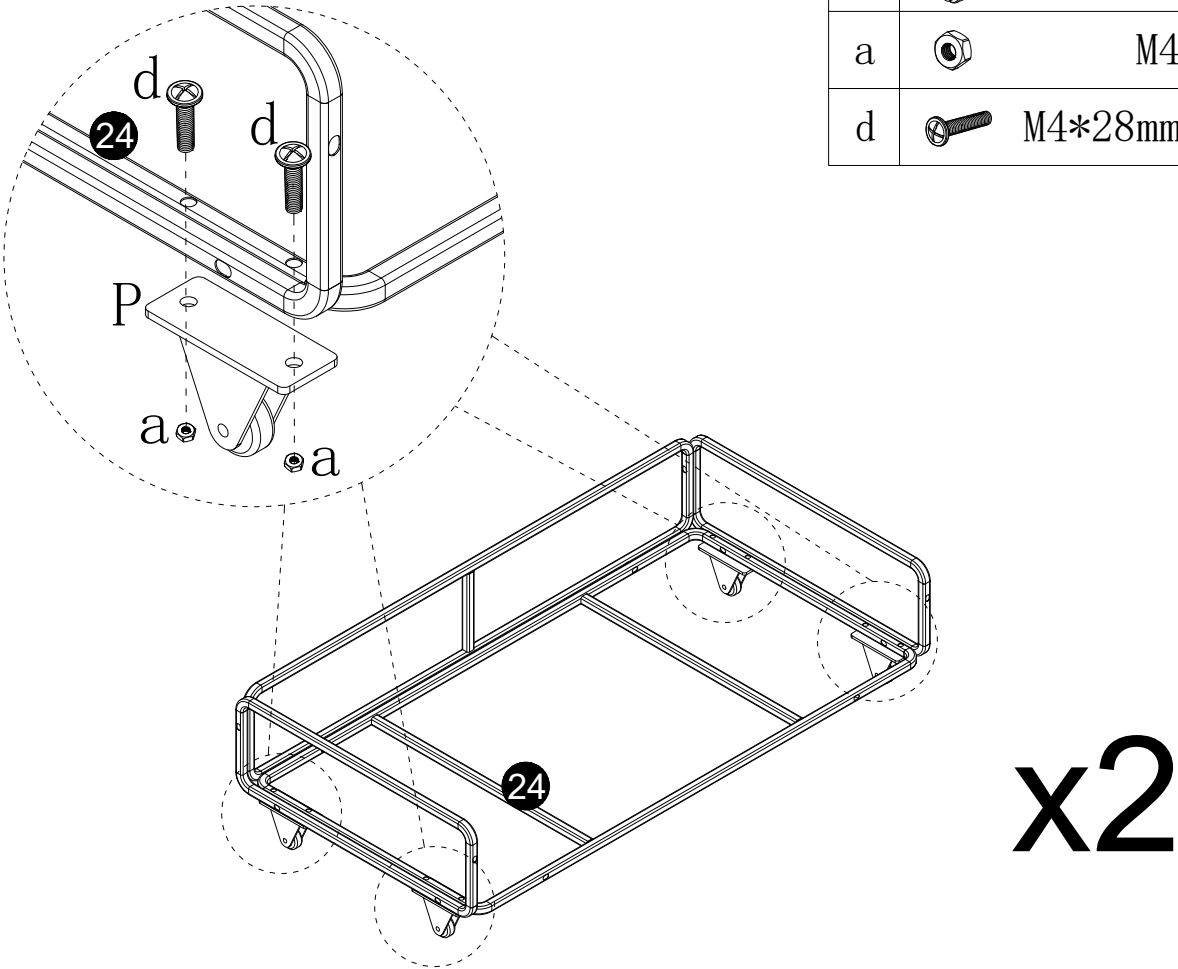

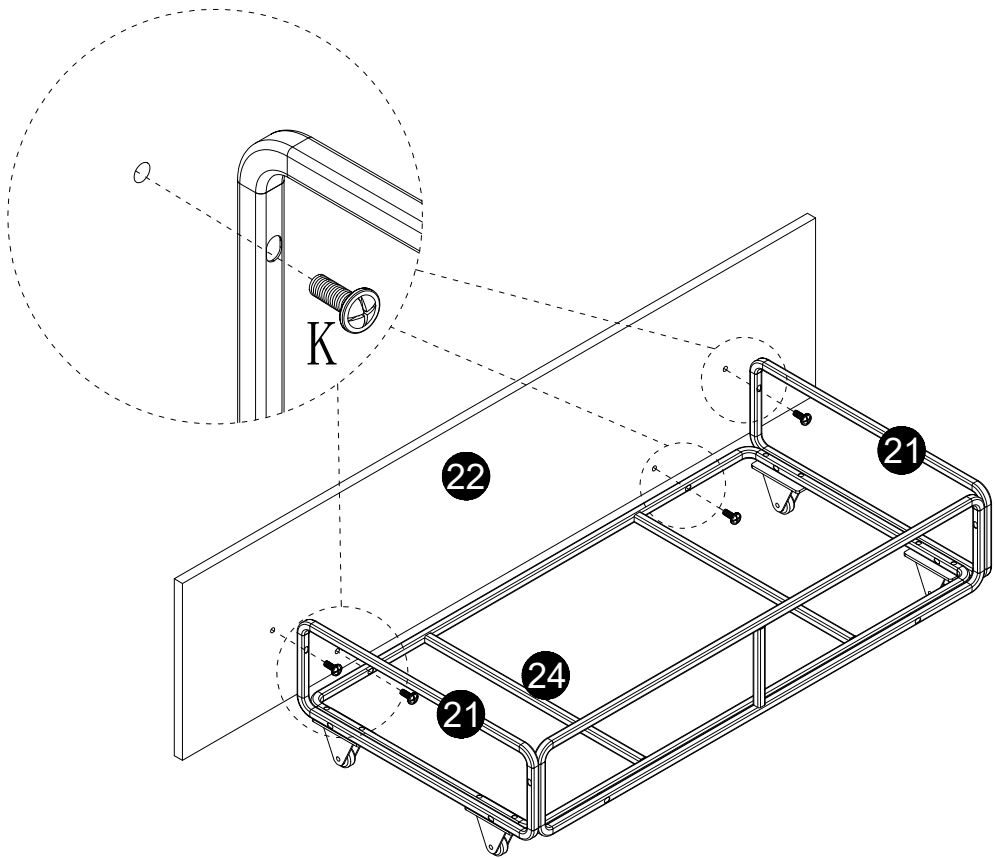

x2

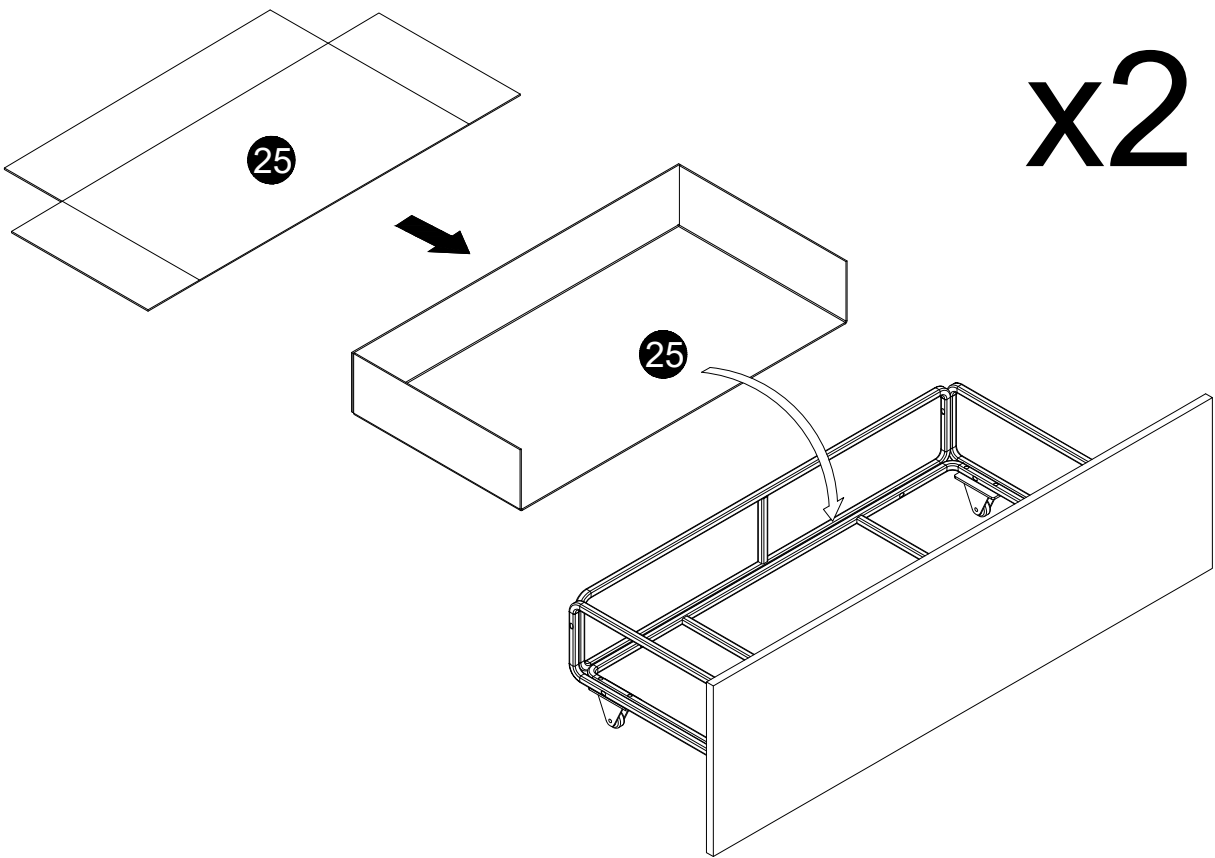

x2

