


Kitchen pantry

Assembly Instructions - Please keep for future reference

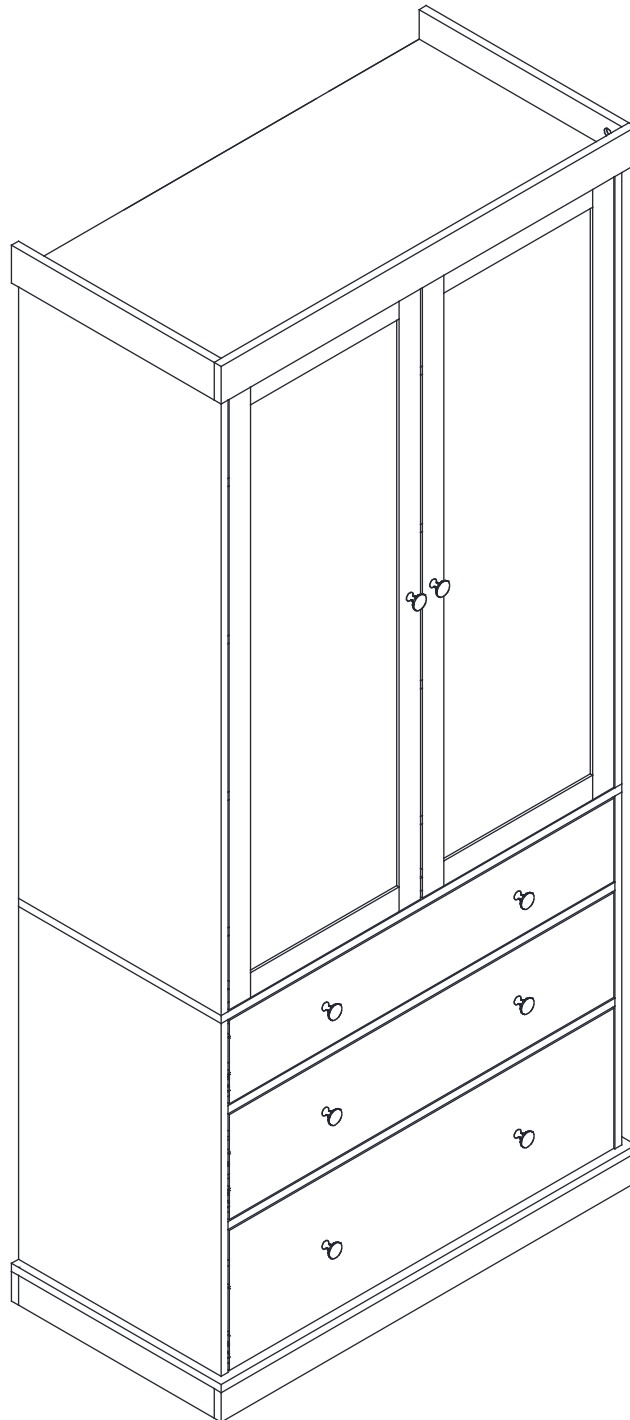

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING
In order to help prevent overturning –
please follow these instructions









To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Components - Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases, more fittings may be supplied than required.

 Cam Bolt x 119	 Dowel x 52	 Cam lock x 119	 7*40mm Screw x 4
 3*12mm Screw x 26	 3*16mm Base knob 1SET	 Anti tipping x 2SET	 Shelf support pin x 9
 4*18mm Round handle x 8SET	 4*25mm Screw x 13	 2.6*10mm Screw x 44	 3*12mm Three fold hinge x 6SET
 3*12mm Magnetic sheet x 2SET	 Iron pipe spring x 9	 4*35mm Screw x 2	 Allen key x 1
 350mm runner x 3	 350mm runner x 3	 350mm runner x 3	 350mm runner x 3

Tools required

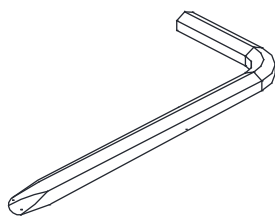

Phillips screwdriver
(medium & large)


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

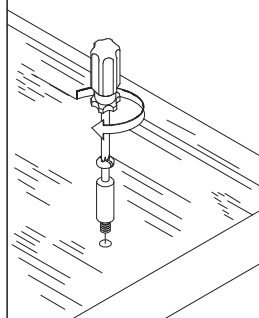

Step 2

Push the male camlock into the entry hole.

2

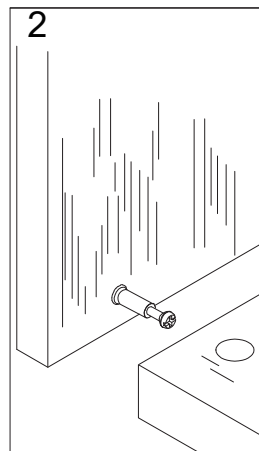


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

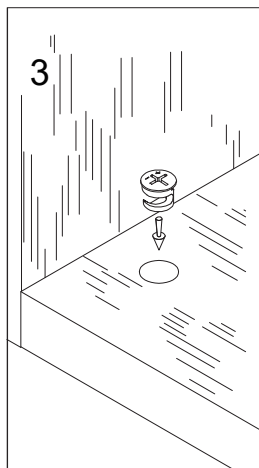


Step 4



Turn the female camlock clockwise with a screwdriver.





















You should feel a click when the camlock is locked in place.






The joint is now secure.

4




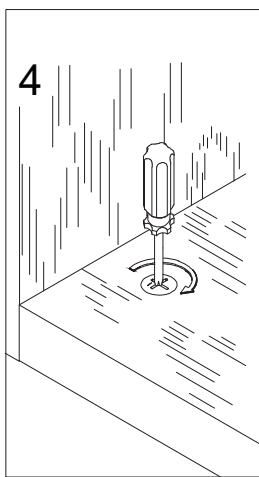


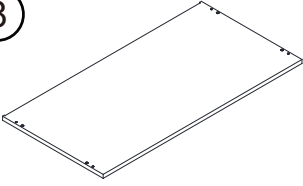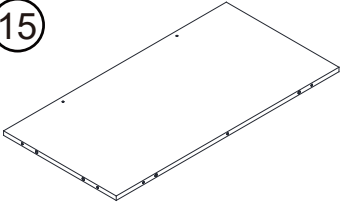⑧  1PC	⑨  1PC	⑩  1PC
⑮  1PC	⑳  2PC	㉔  4PC
㉓  1PC	㉔  1PC	㉕  2PC
㉖  2PC		

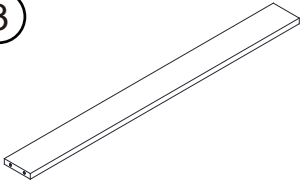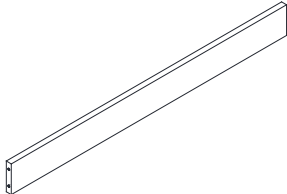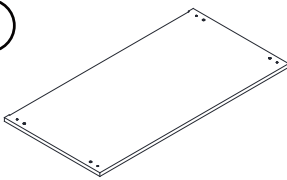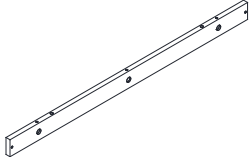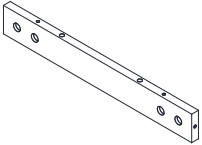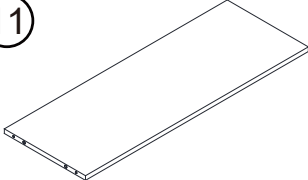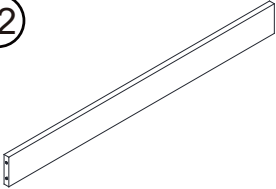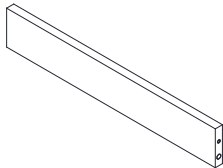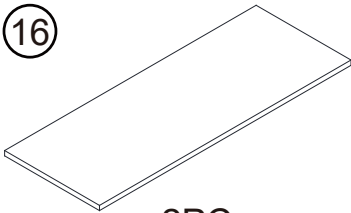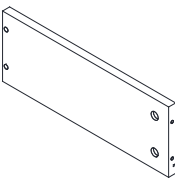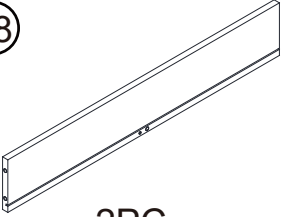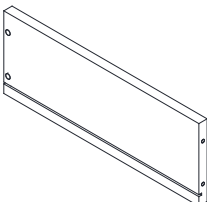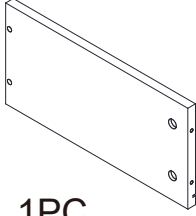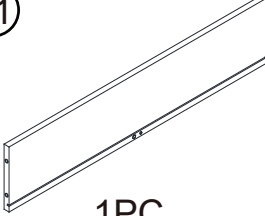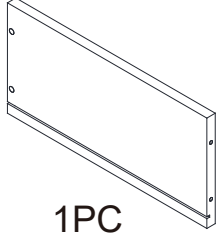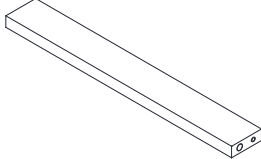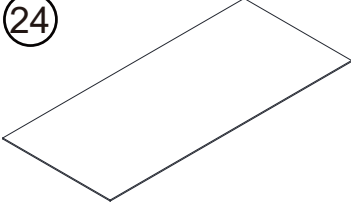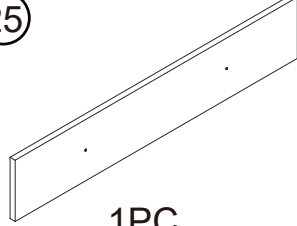①  1PC	②  1PC	③  2PC
④  1PC	⑤  1PC	⑥  2PC
⑦  2PC	⑪  1PC	⑫  1PC
⑬  1PC	⑭  1PC	⑯  2PC
⑰  2PC	⑱  2PC	⑲  2PC
⑳  1PC	㉑  1PC	㉒  1PC
㉓  3PC	㉔  3PC	㉕  1PC

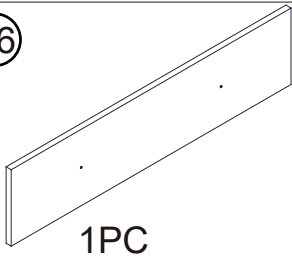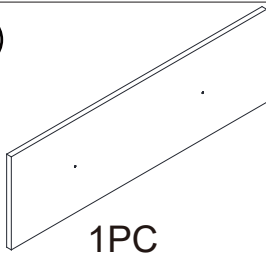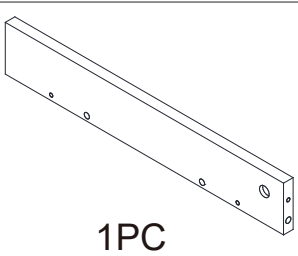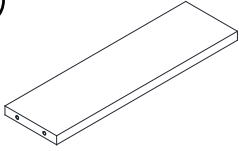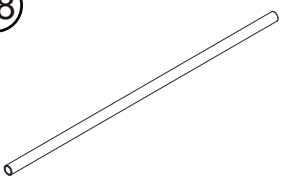
②⑥  1PC	②⑦  1PC	③⑩  1PC
③①  2PC	③②  1PC	③⑦  8PC
③⑧  8PC	 Hardware Kit 1PC	

Assembly Instructions

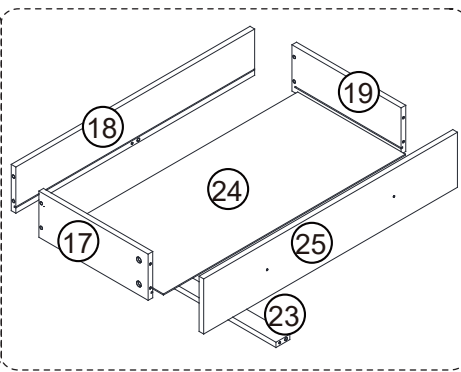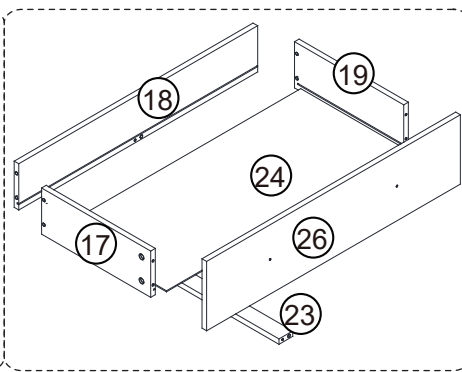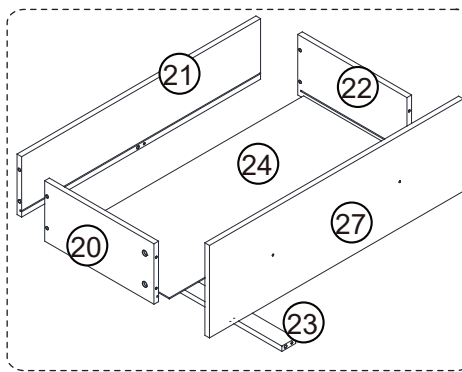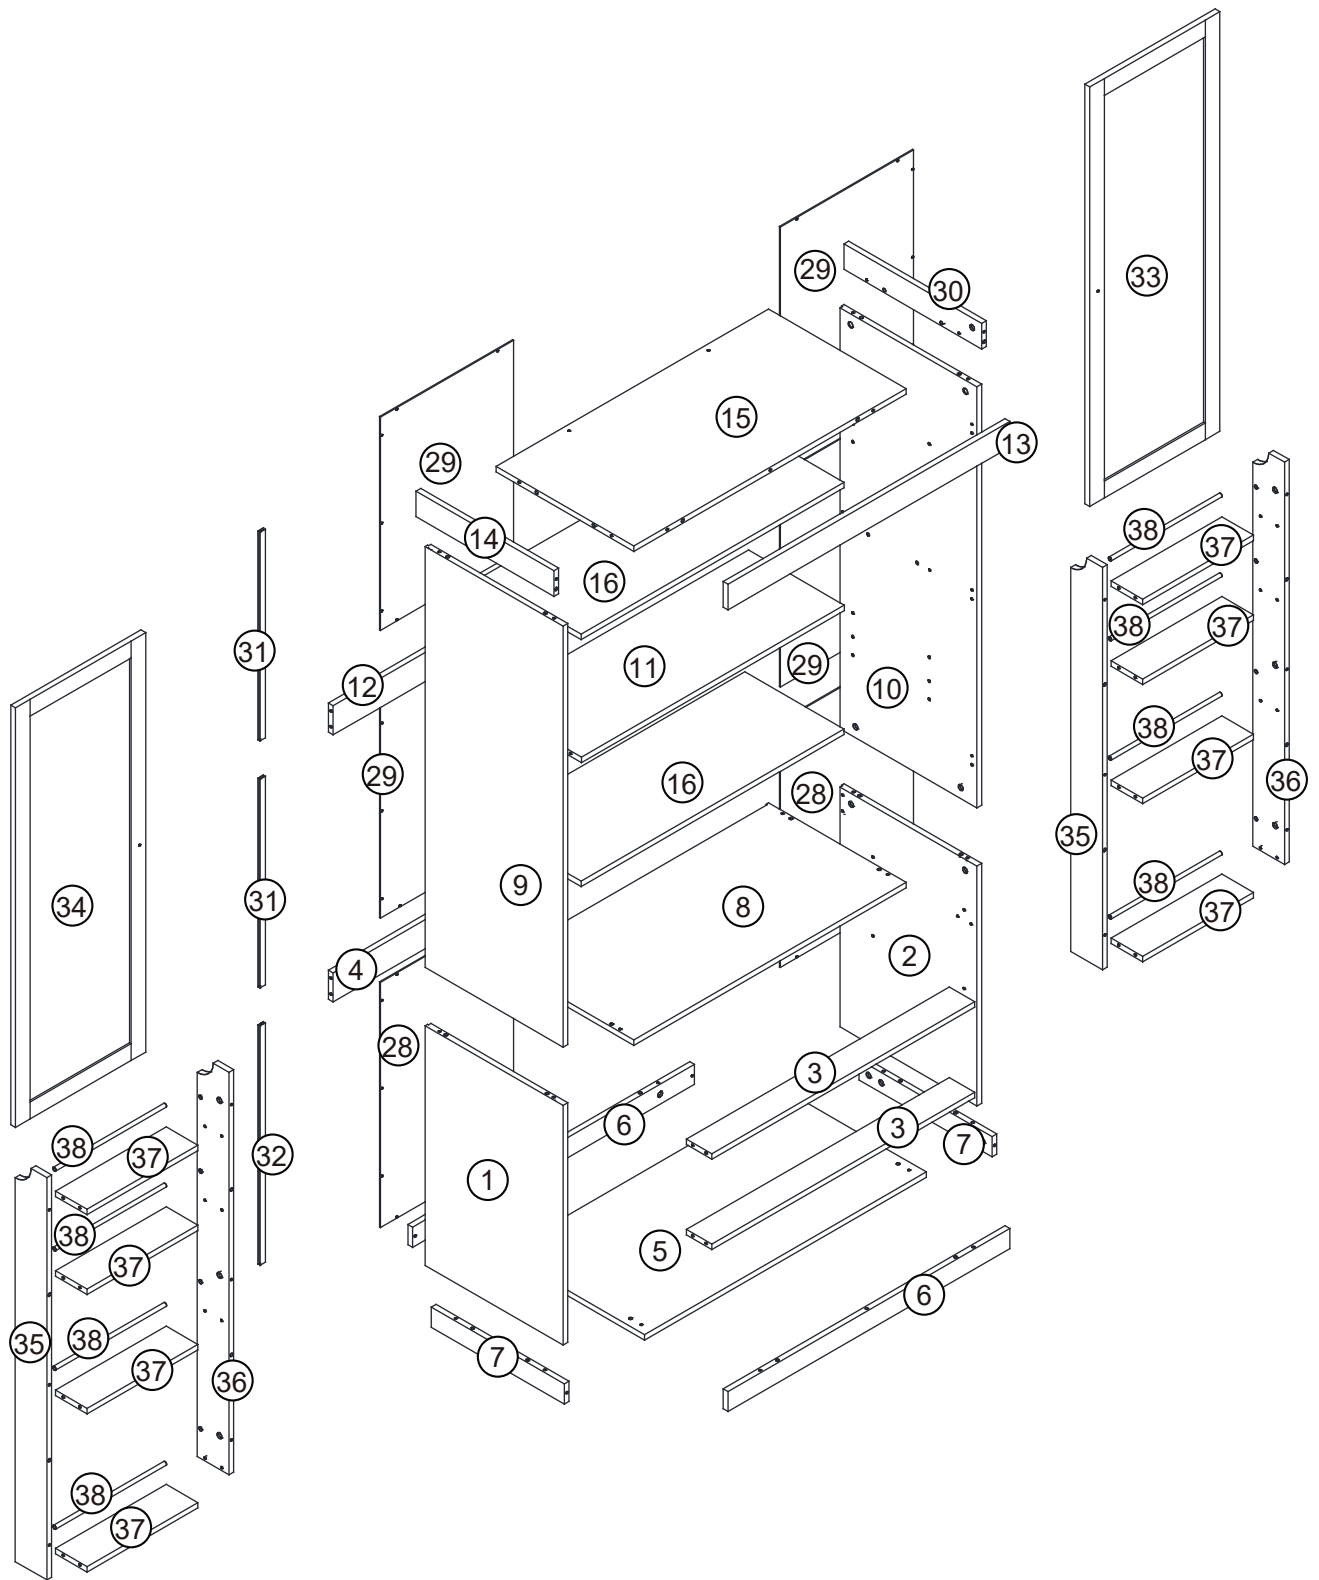

Assembly Instructions

Step 1

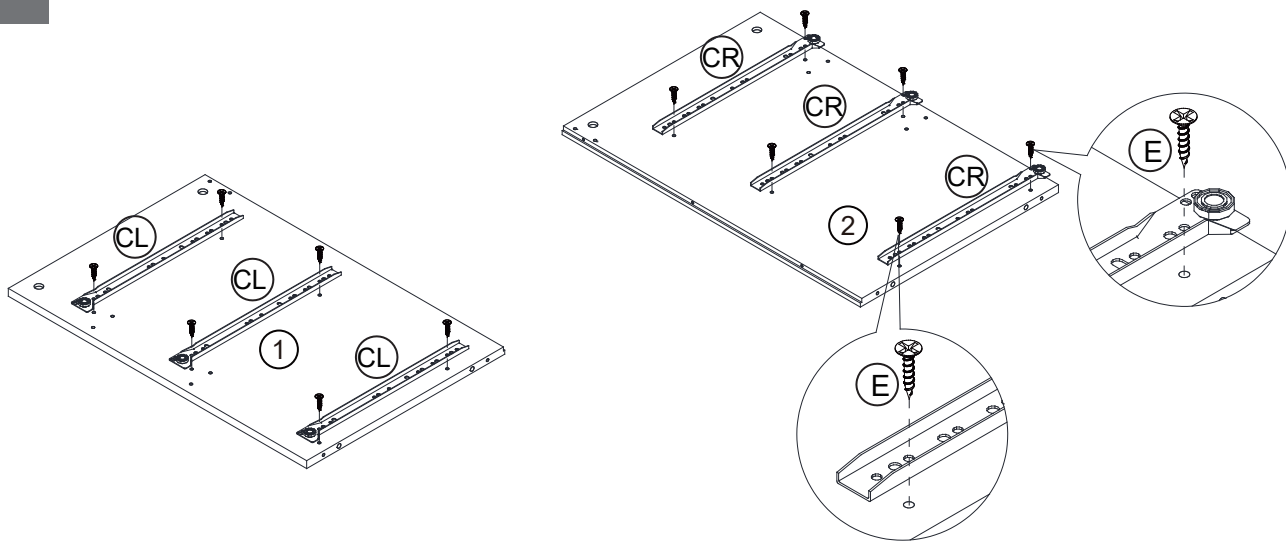

CL

350mm runner x3

CR


350mm runner x 3

E




3*12mm Screw x 12

Step 2

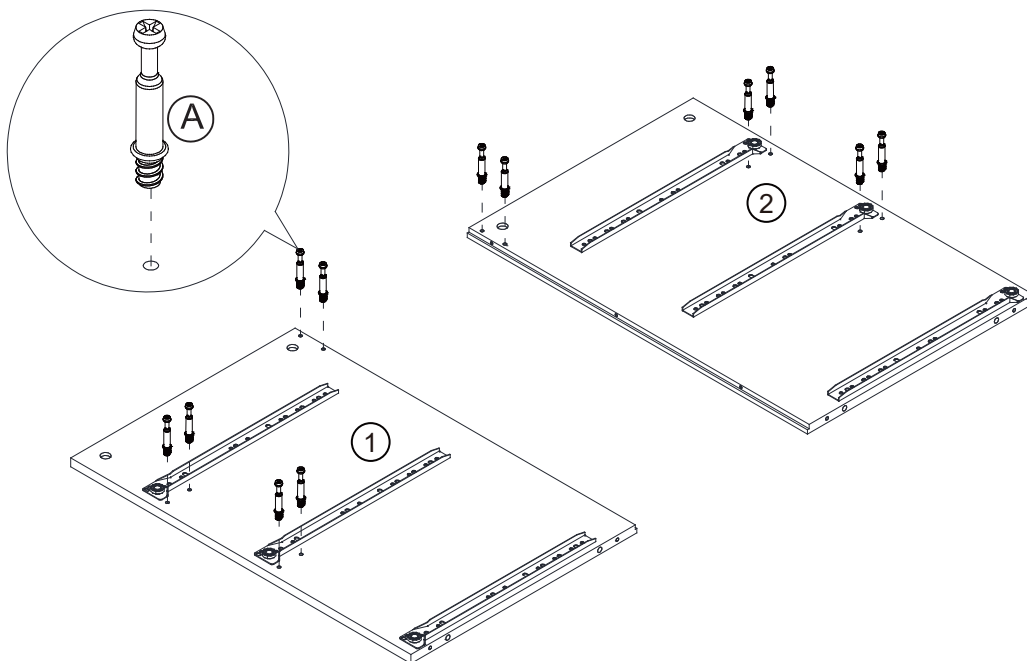


A



Cam Bolt x12

Assembly Instructions

Step 3

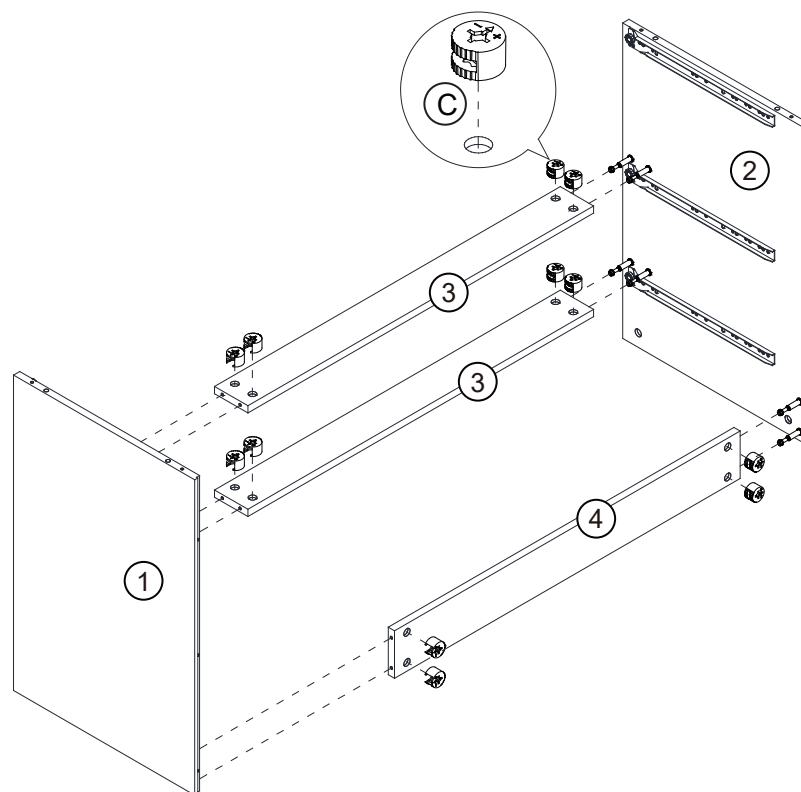


(C)



Cam lock x 12

Step 4

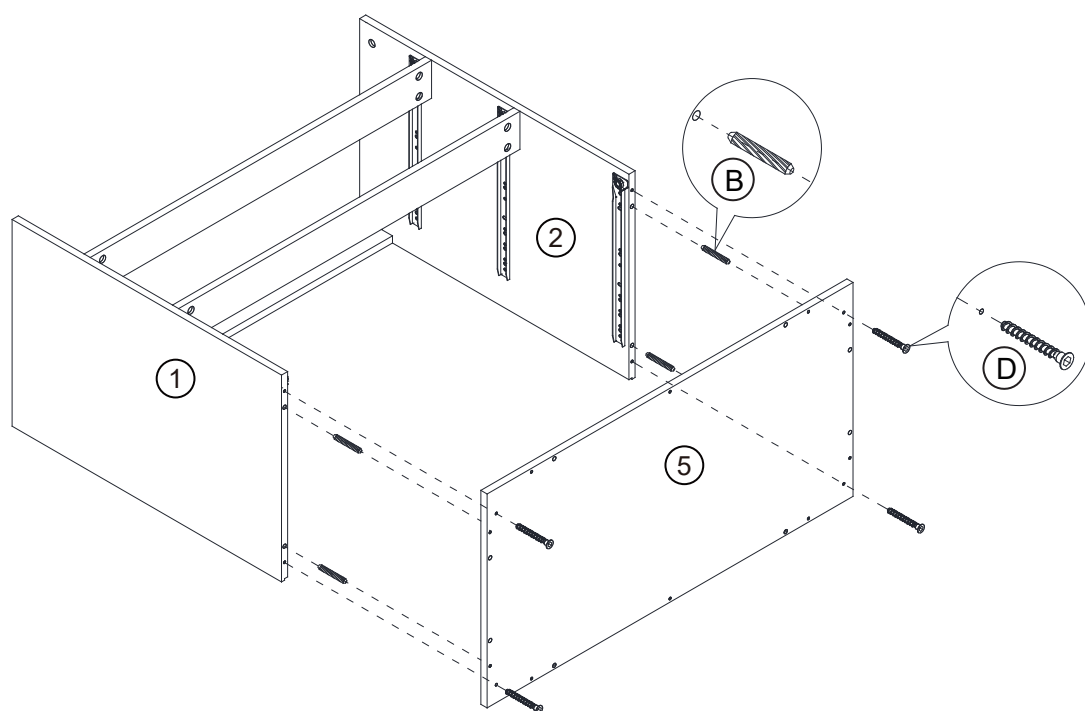

(B)



Dowel x 4



(D)





7*40mm Screw x 4

Assembly Instructions

Step 5

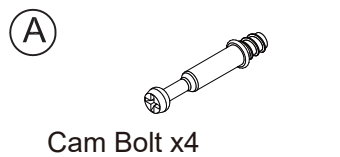
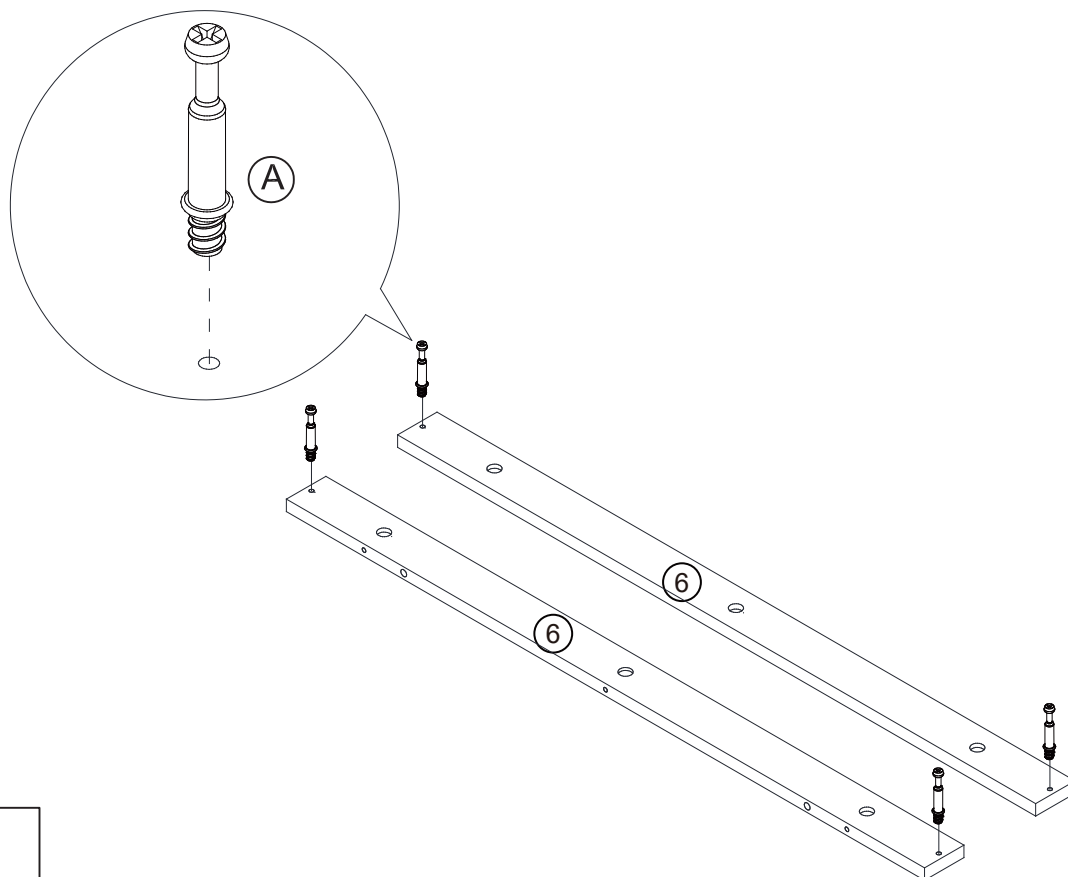


Step 6

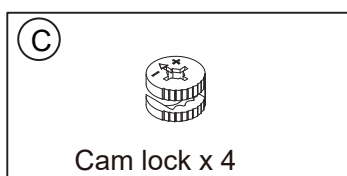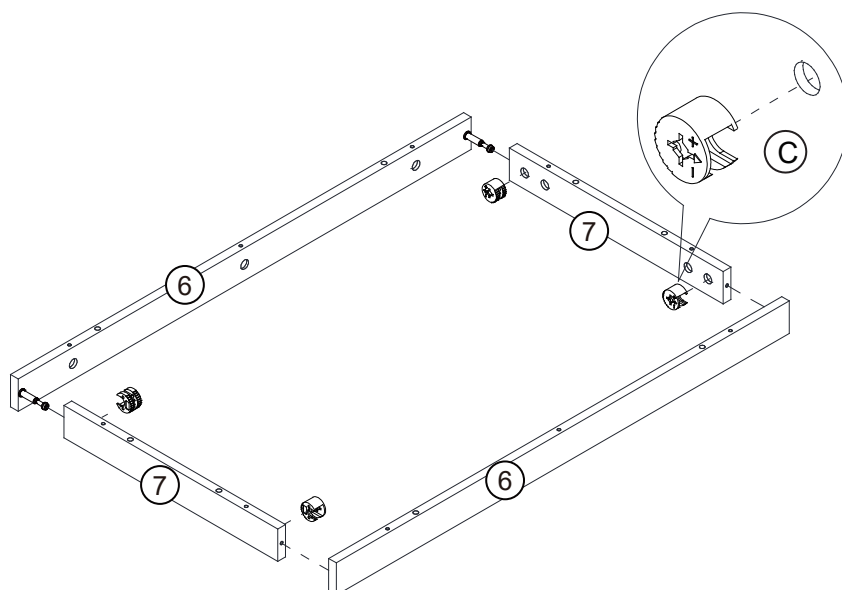


Assembly Instructions

Step 7

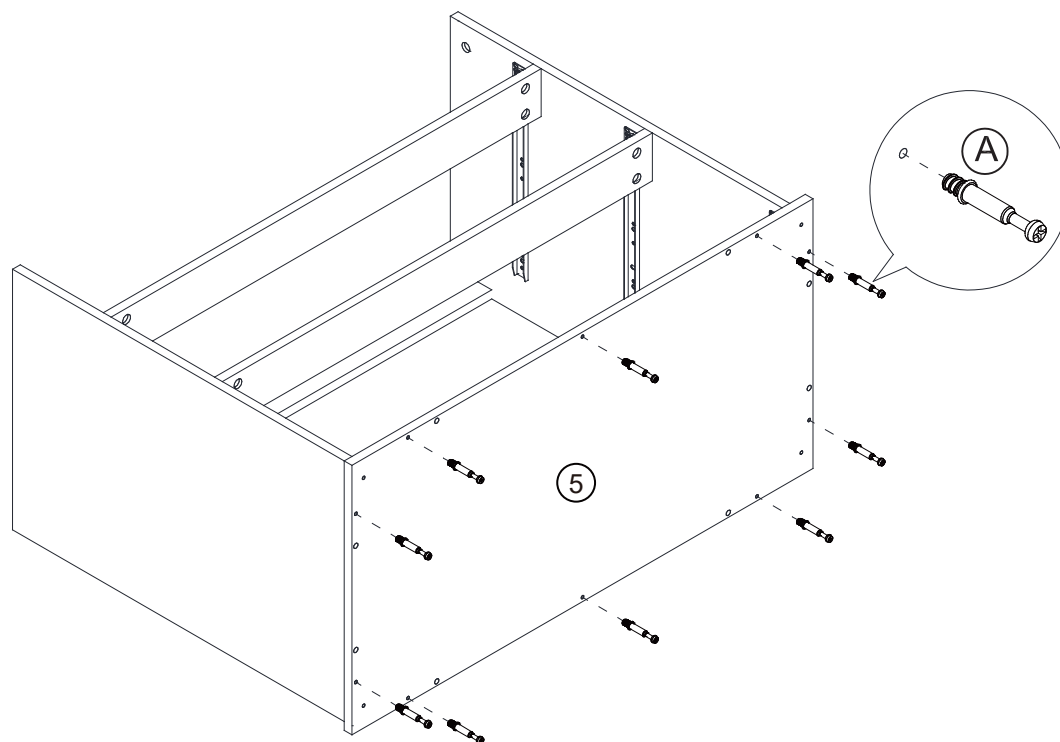

Cam Bolt x10

Step 8

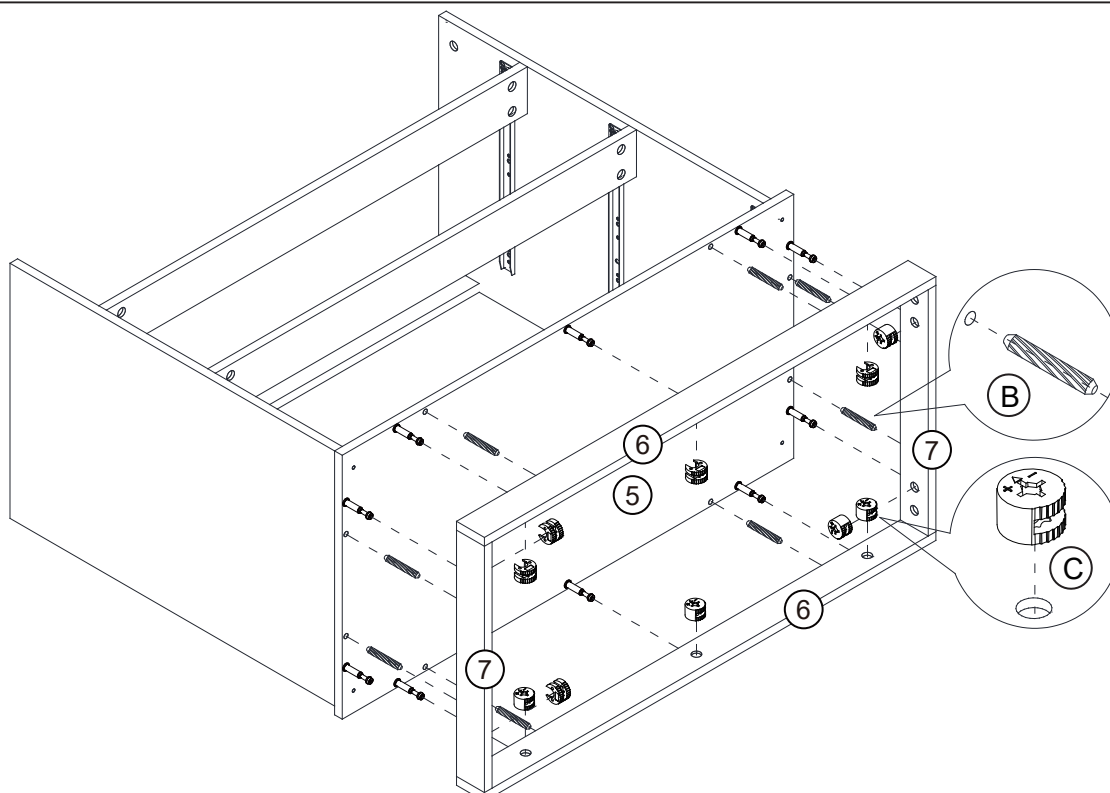

(B)



Dowel x 8



(C)





Cam lock x 10

Assembly Instructions

Step 9

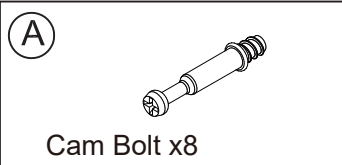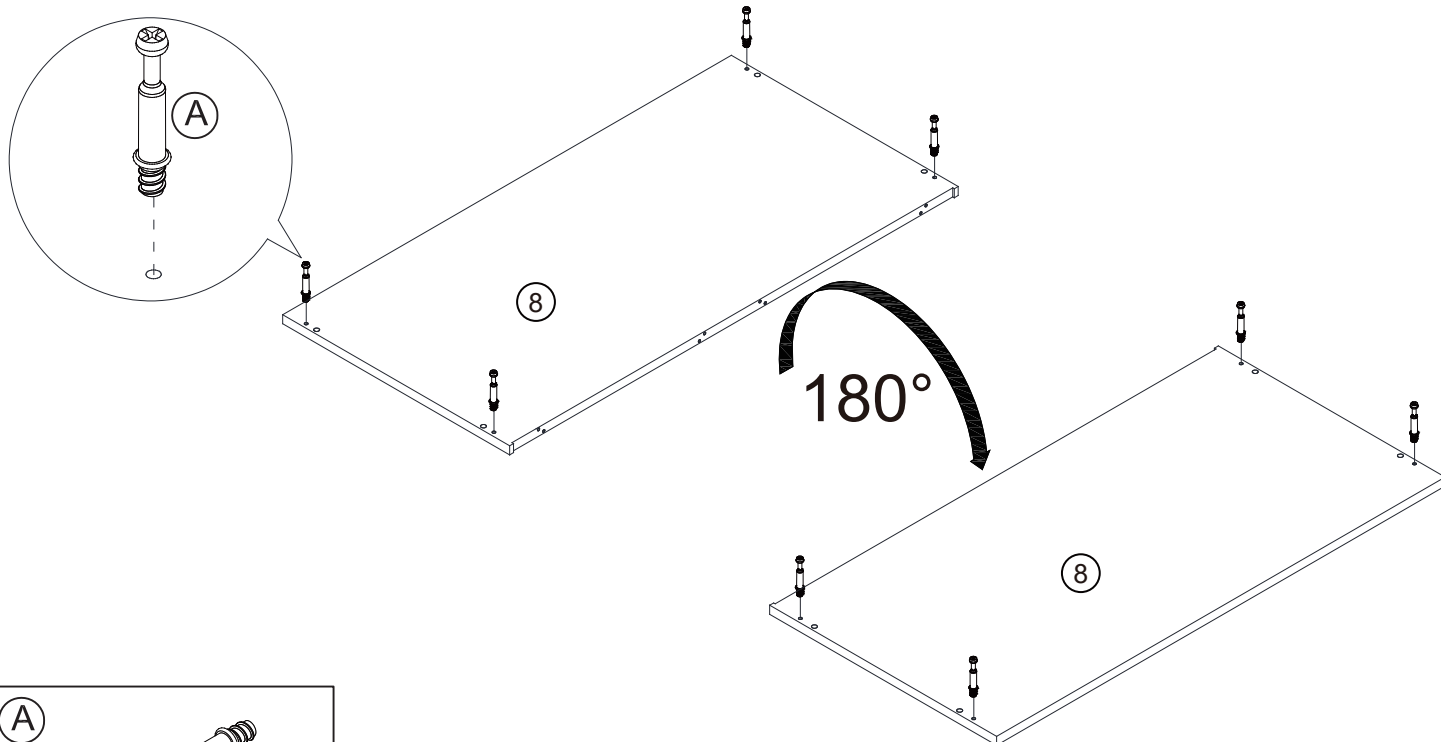


Step 10

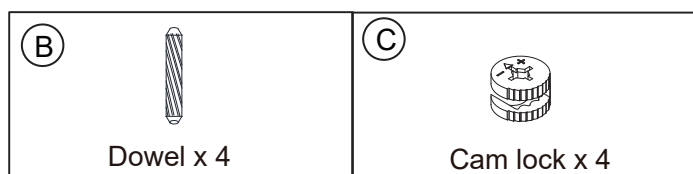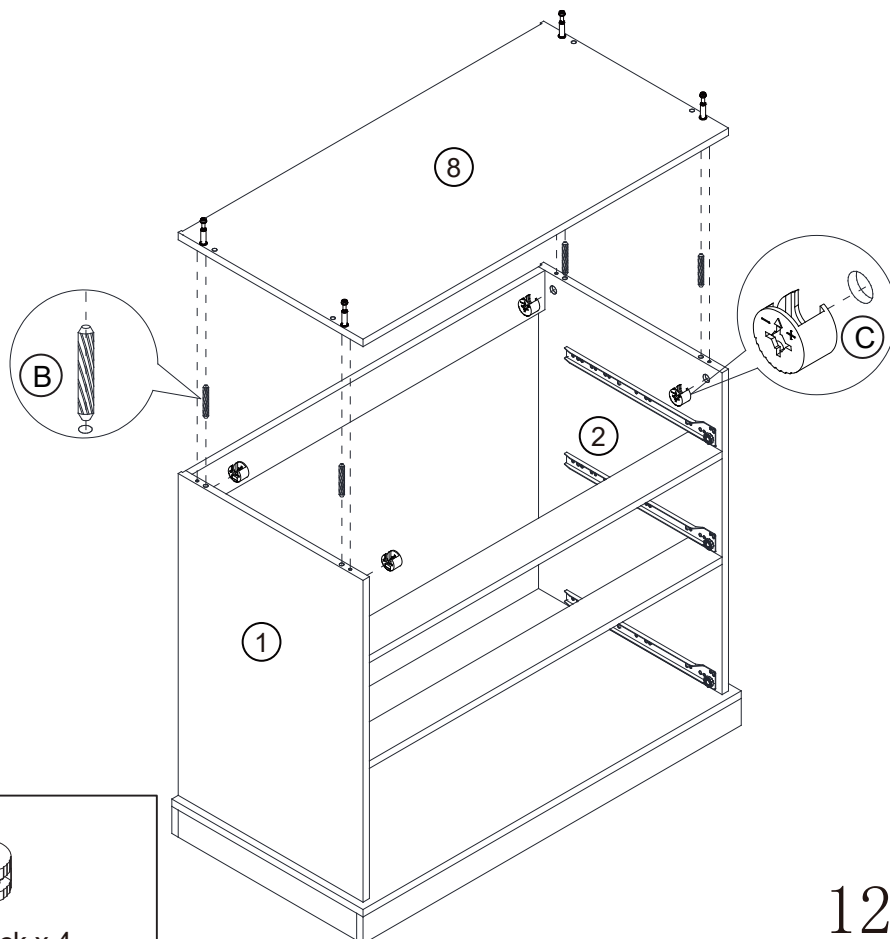


Assembly Instructions

Step 11

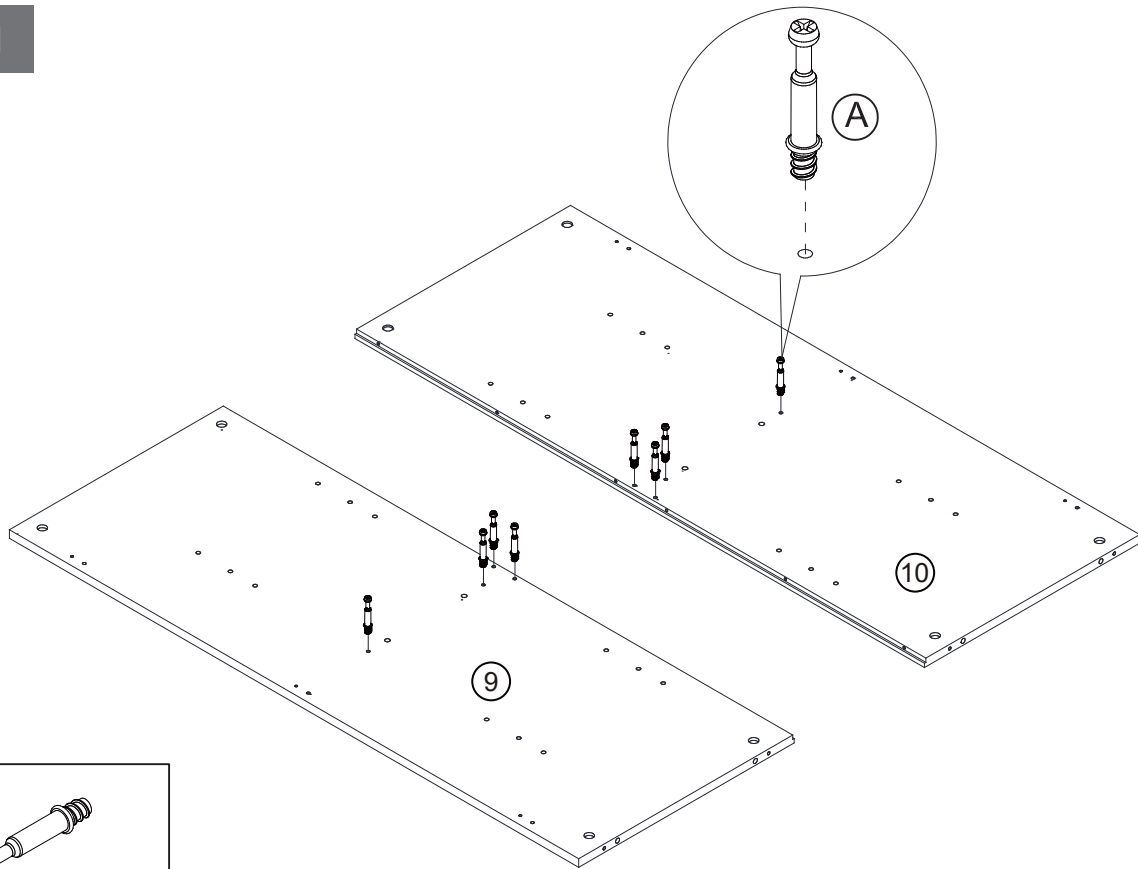


A



Cam Bolt x8

Step 12

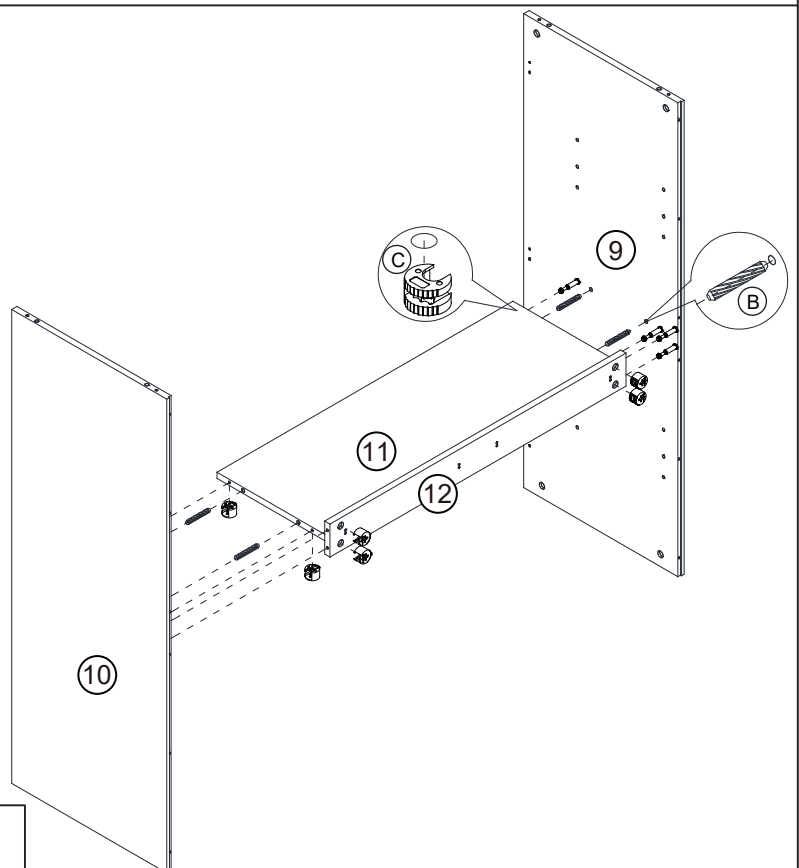

B



Dowel x 4


C




Cam lock x 8

Assembly Instructions

Step 13

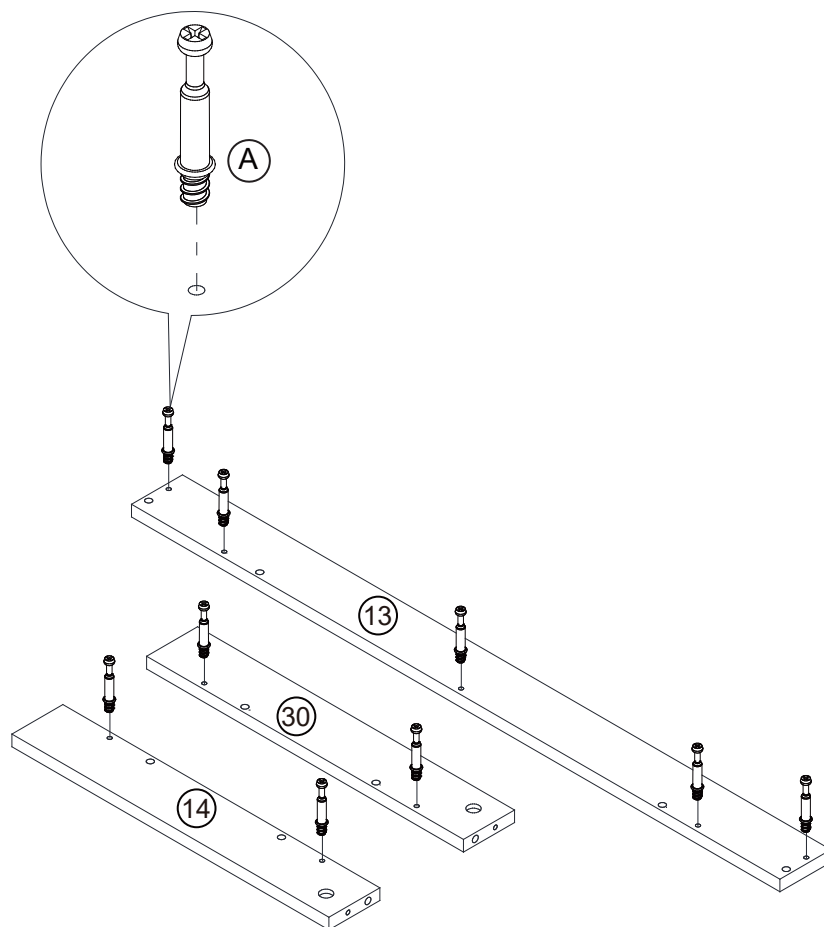


(A)



Cam Bolt x 9

Step 14

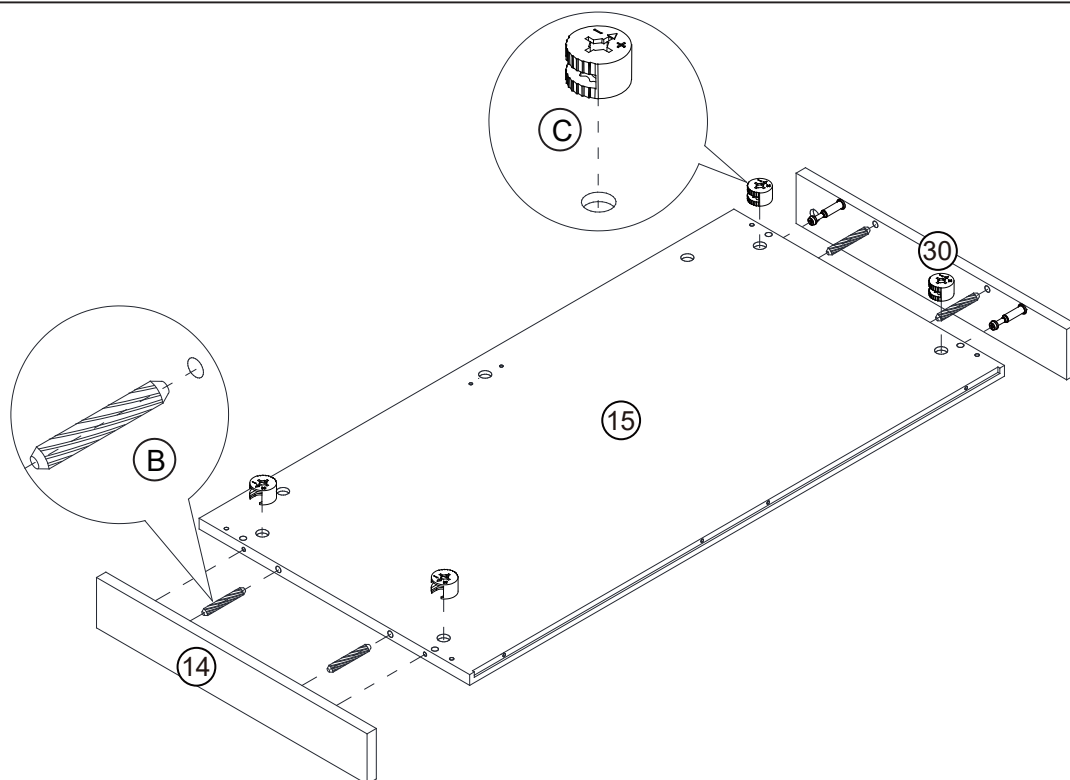

(B)



Dowel x 4


(C)



Cam lock x 4

Assembly Instructions

Step 15

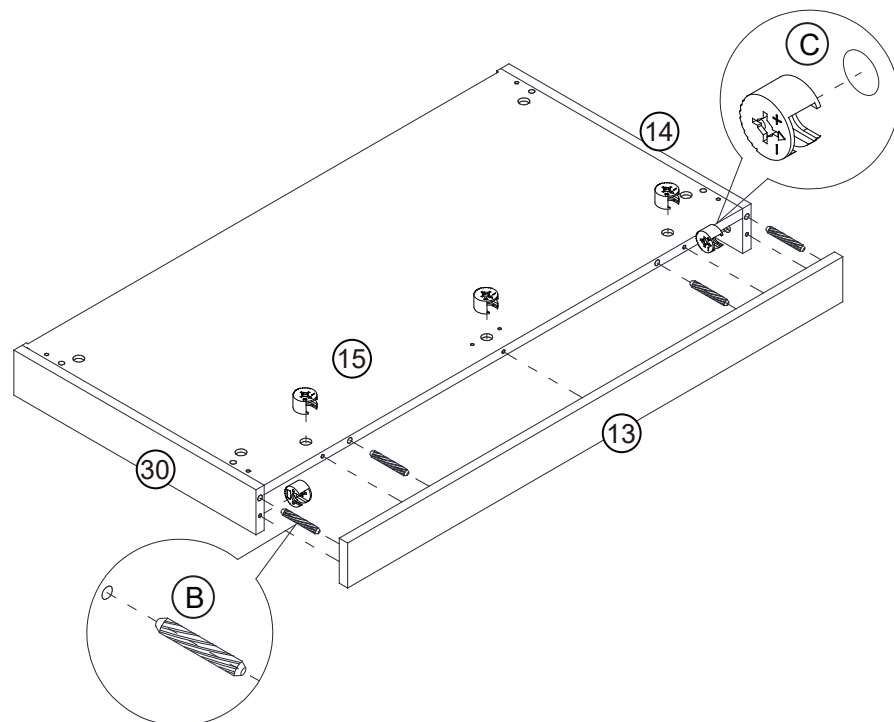

(B)




Dowel x 4

(C)




Cam lock x 5

Step 16

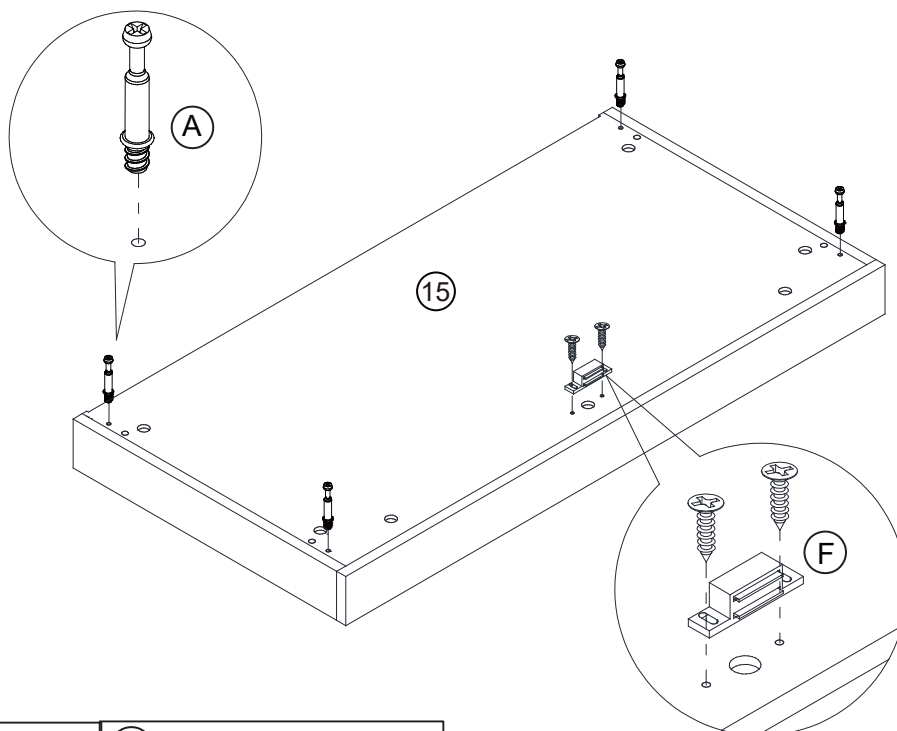


(A)



Cam Bolt x 4



(F)



3*16mm Base knob 1SET


Assembly Instructions

Step 17

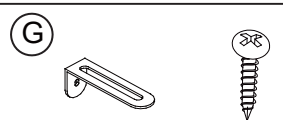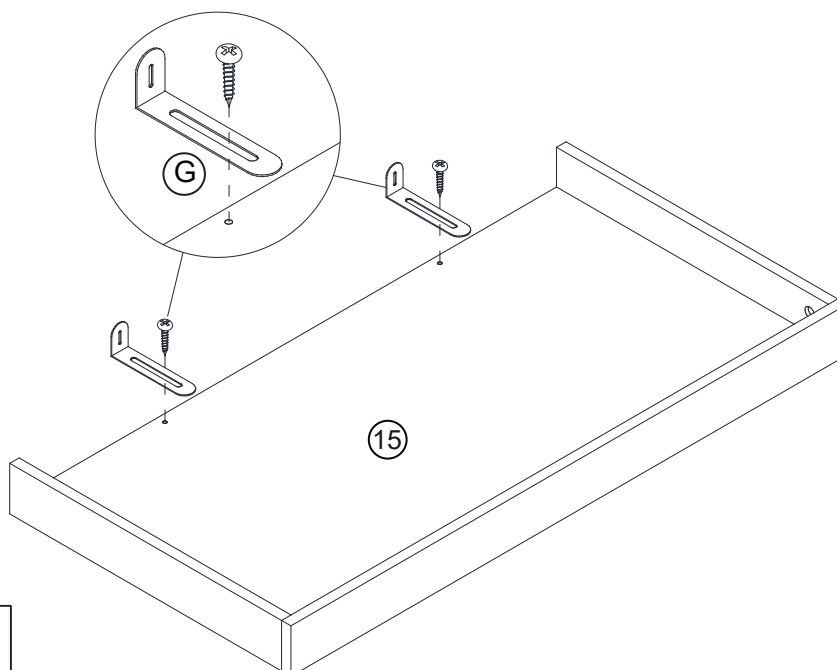

Anti tipping x 2SET

Step 18

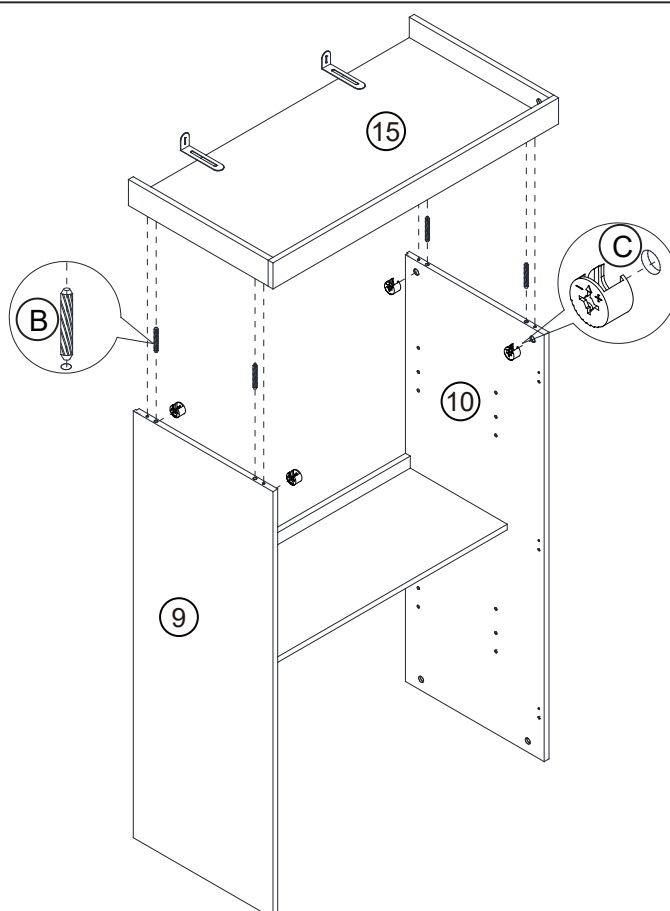

(B)



Dowel x 4


(C)



Cam lock x 4

Assembly Instructions

Step 19

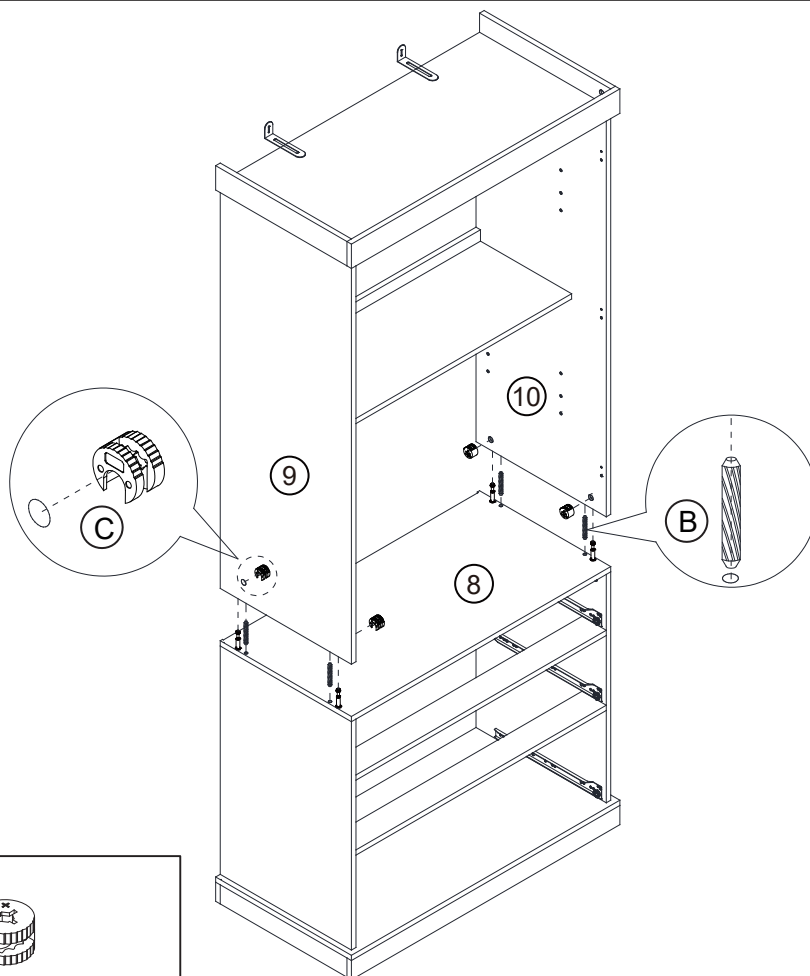

(B)




Dowel x 4

(C)




Cam lock x 4

Step 20

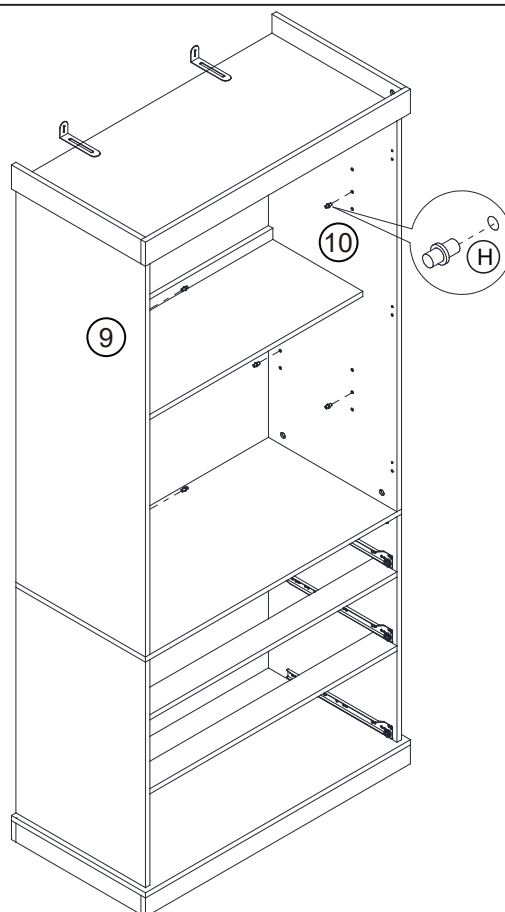


(H)





Shelf support pin x 8

Assembly Instructions

Step 21


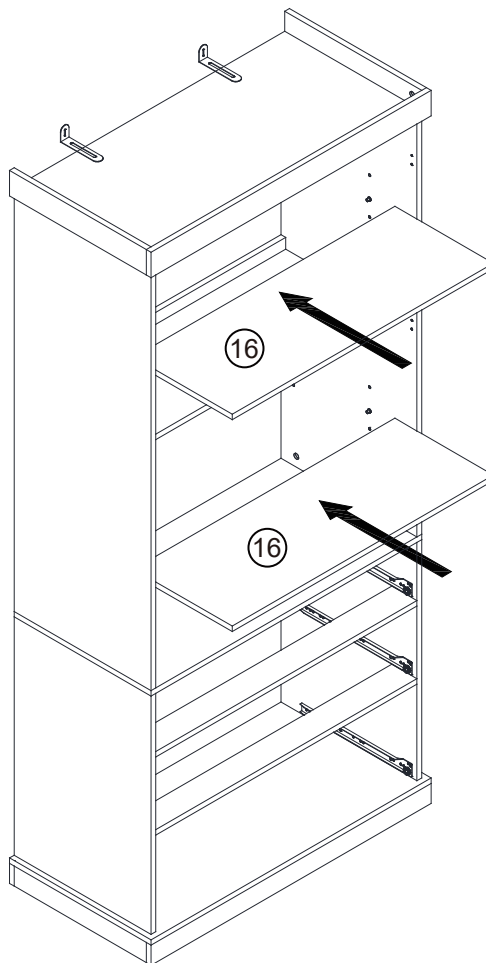


Step 22

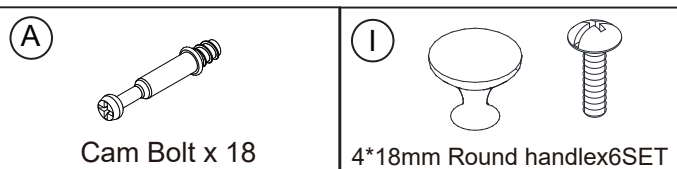
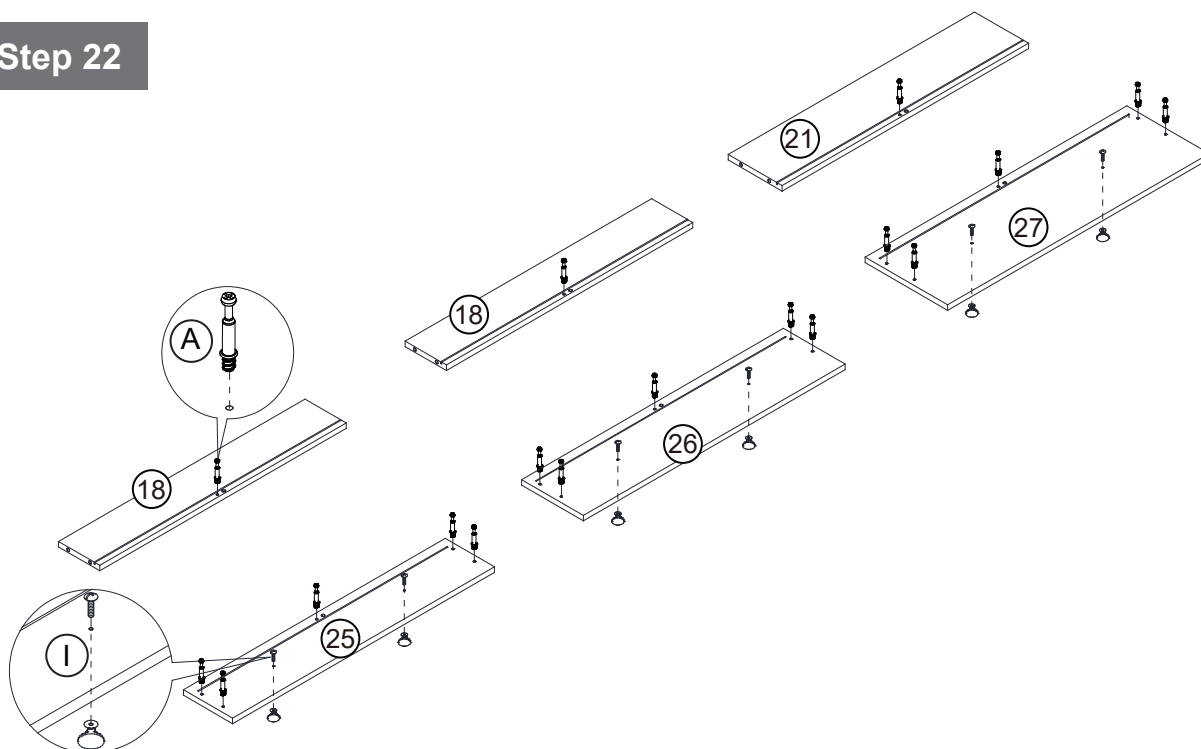


Assembly Instructions

Step 23

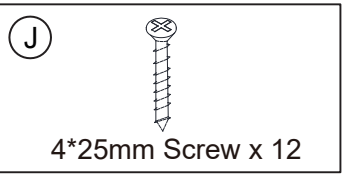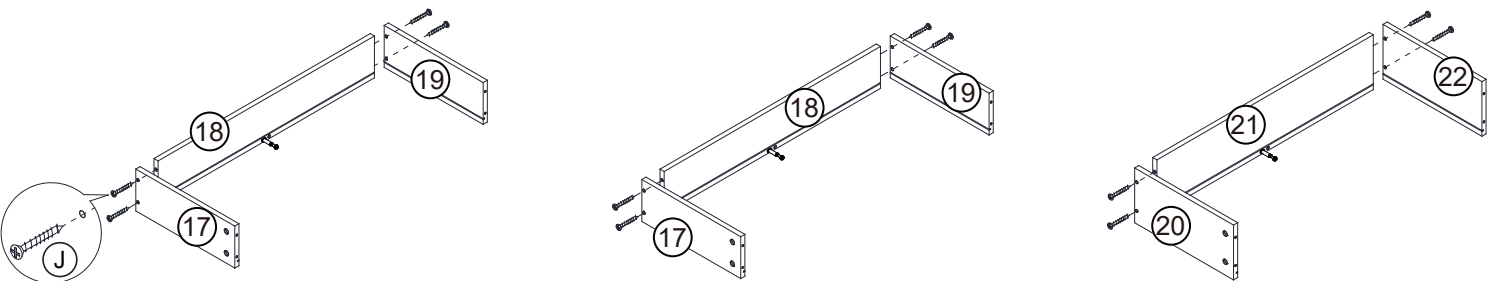


Step 24

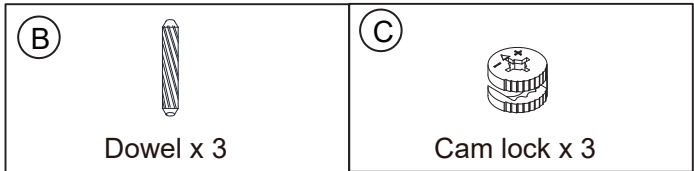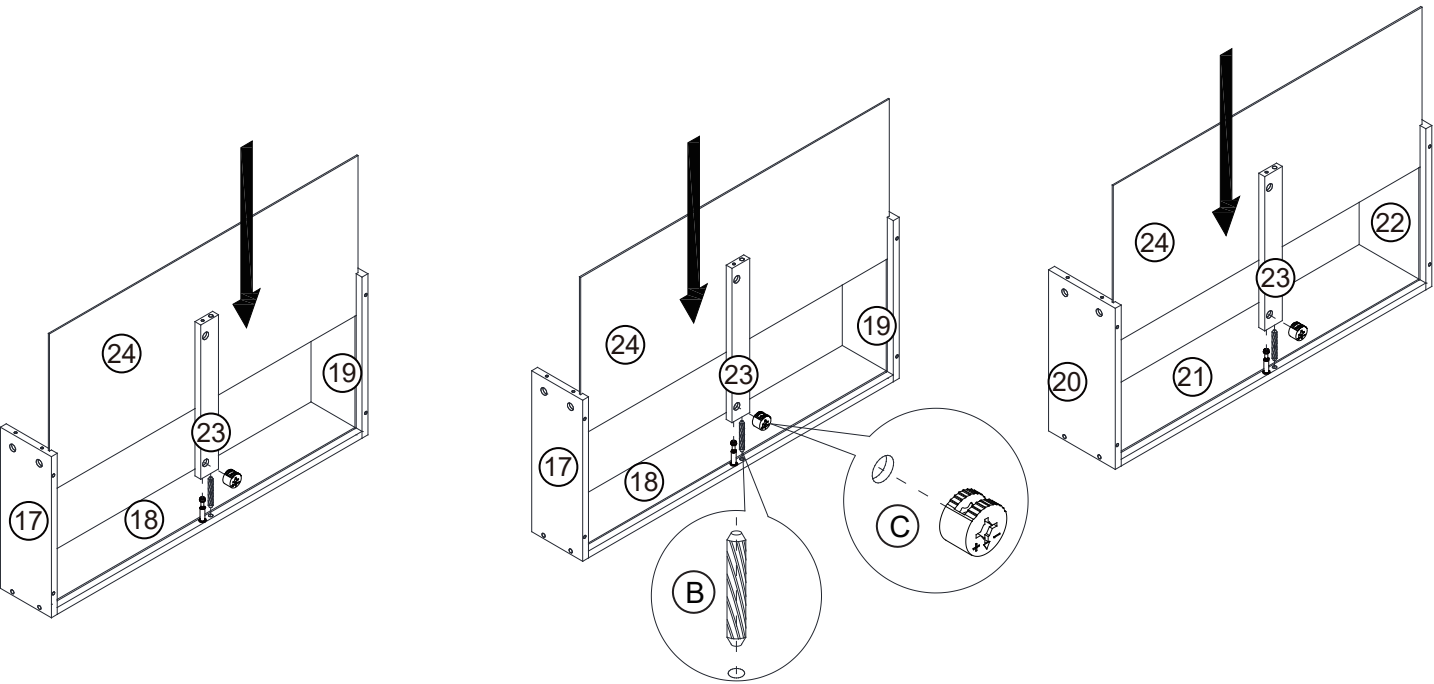


Assembly Instructions


Step 25

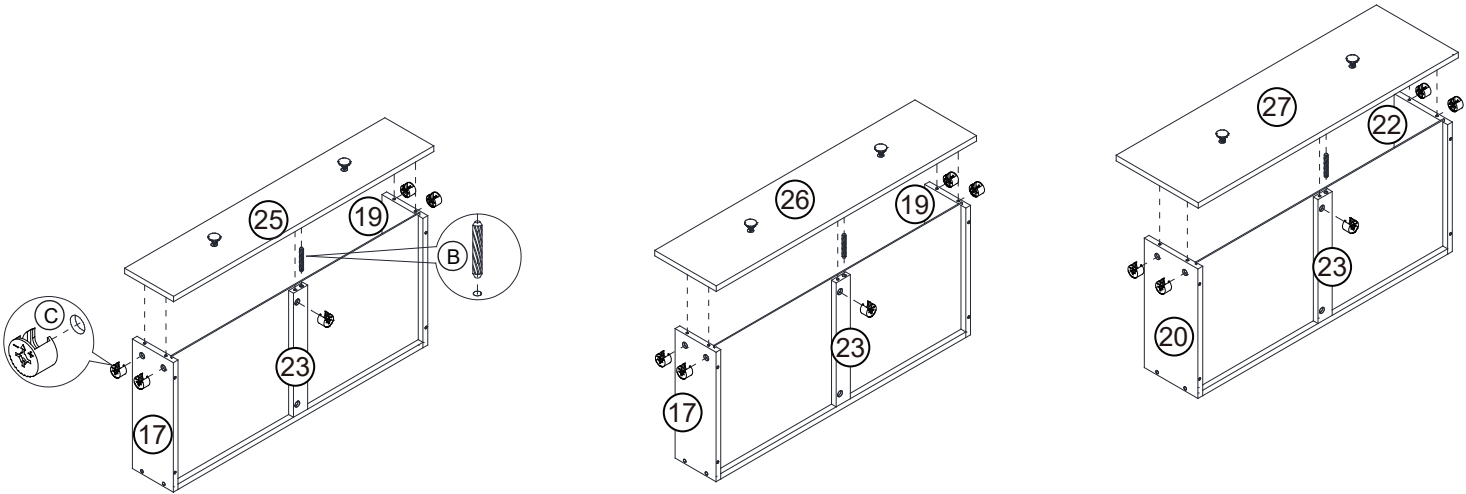

B 	C 
Dowel x 3	Cam lock x 15



Step 26

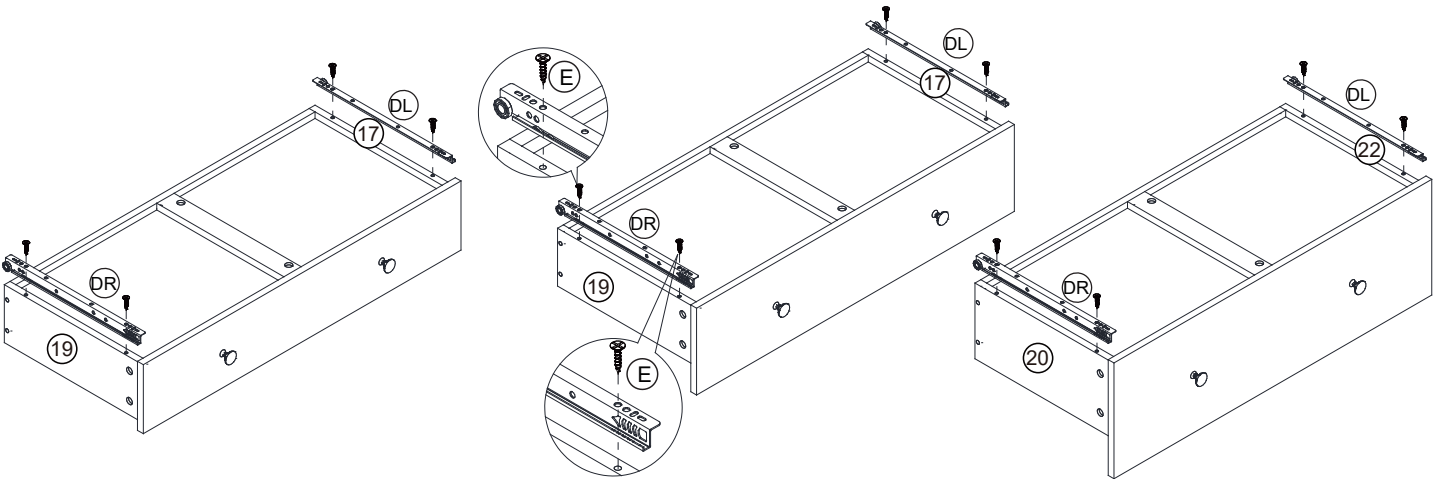

DL 	DR 	E 
350mm runner x 3	350mm runner x 3	3*12mm Screw x 12

Assembly Instructions

Step 27

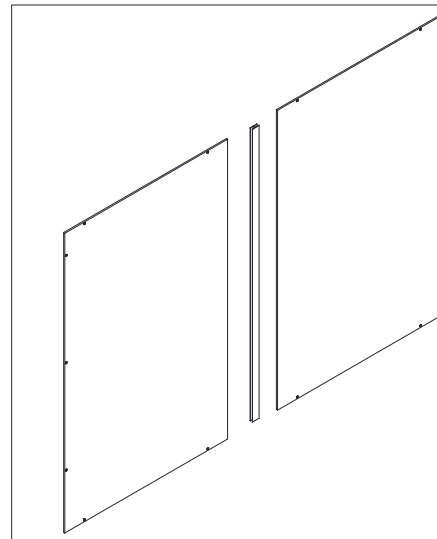
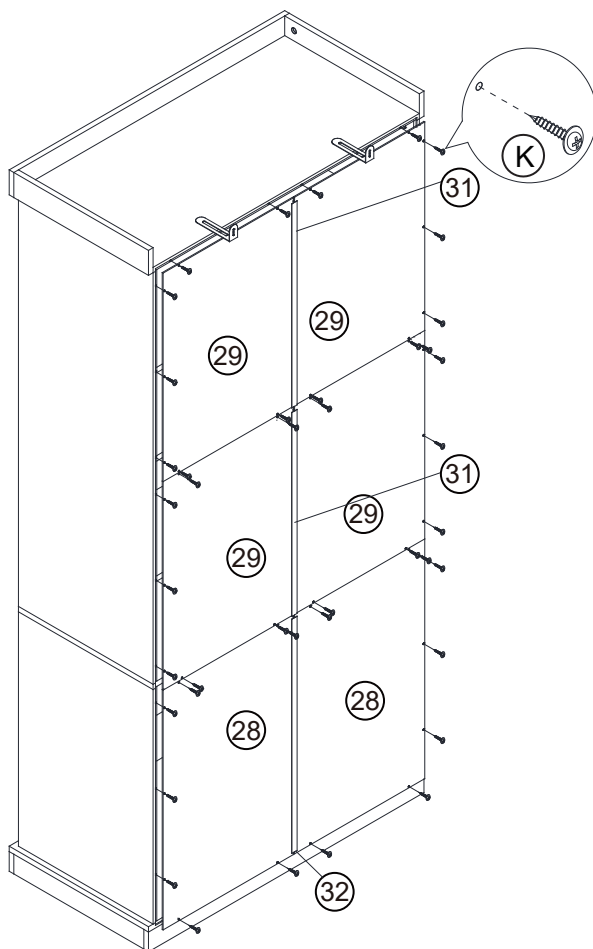


(K)




2.6*10mm Screw x 42

Step 28

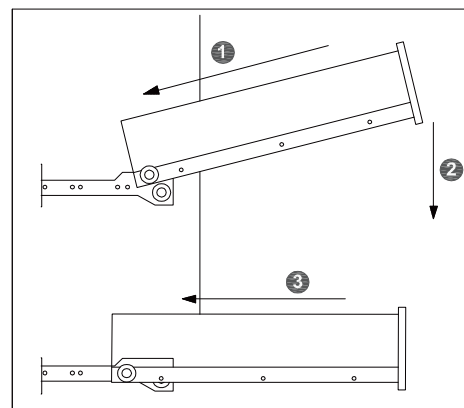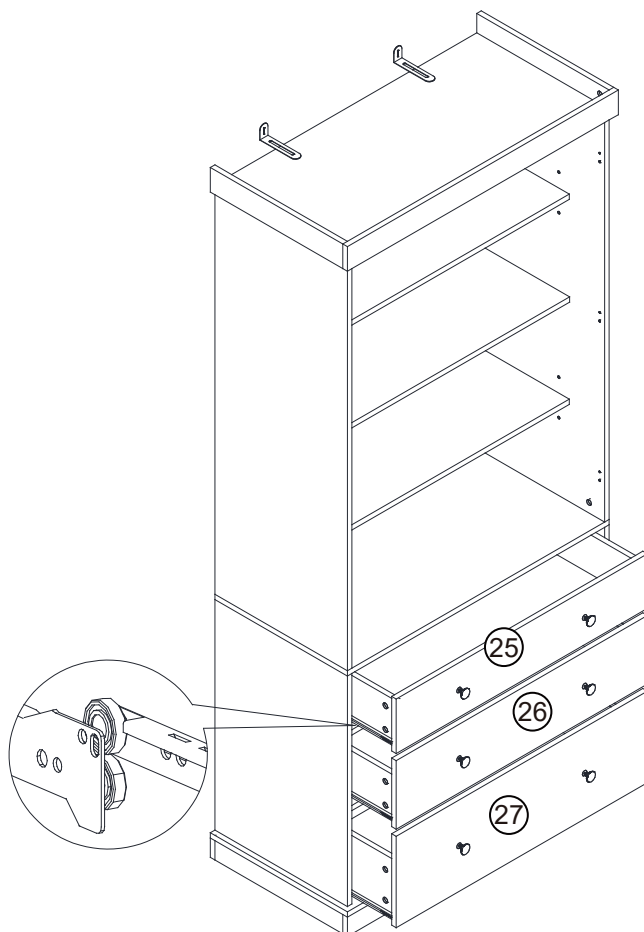


Assembly Instructions

Step 29

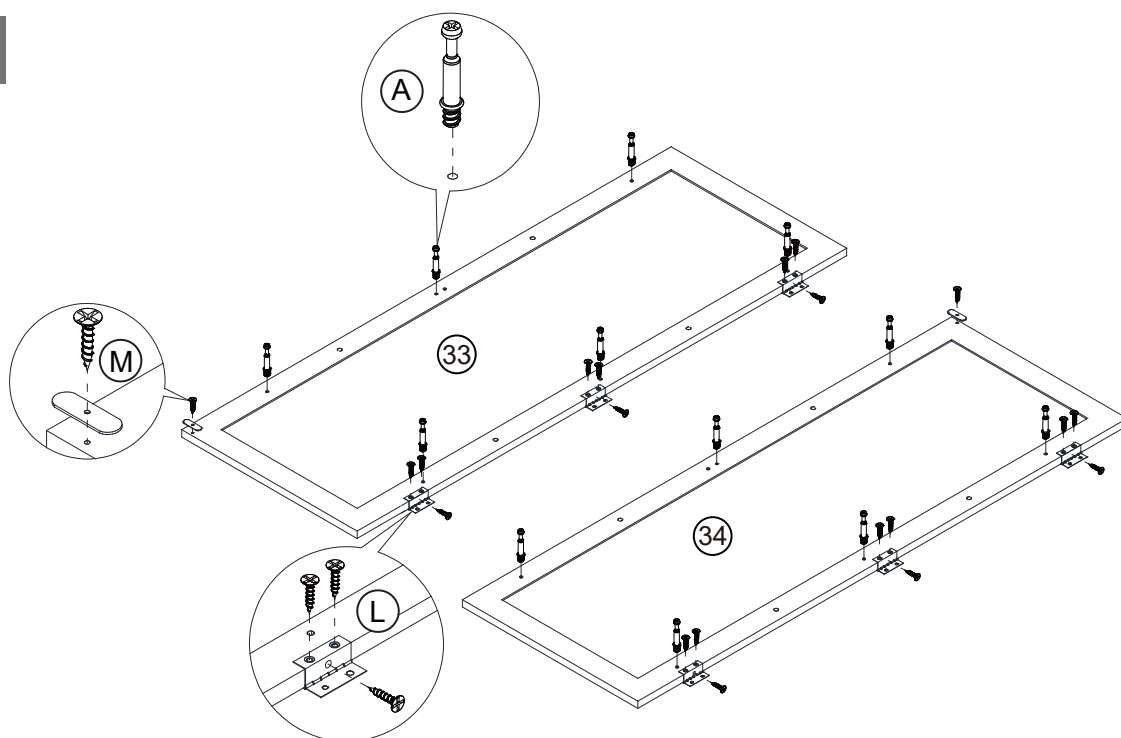


(A)




Cam Bolt x 12

(L)




3*12mm Three fold hinge x 6SET

(M)



3*12mm Magnetic sheet x 2SET

Step 30

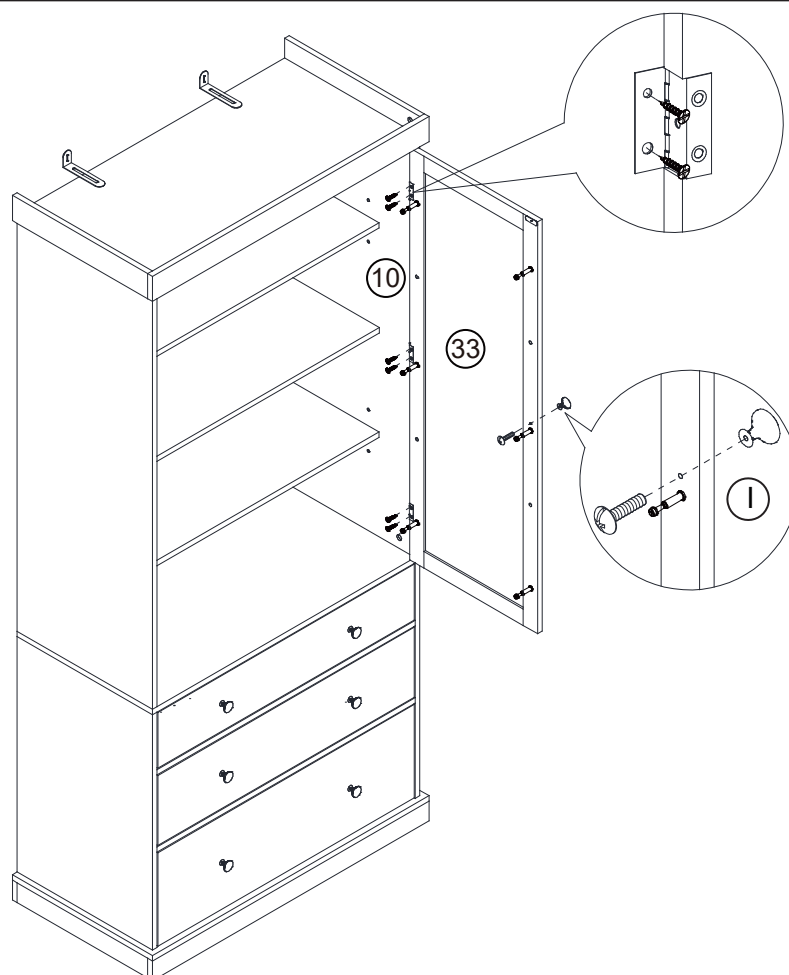


(I)





4*18mm Round handle x 1SET

Assembly Instructions

Step 31

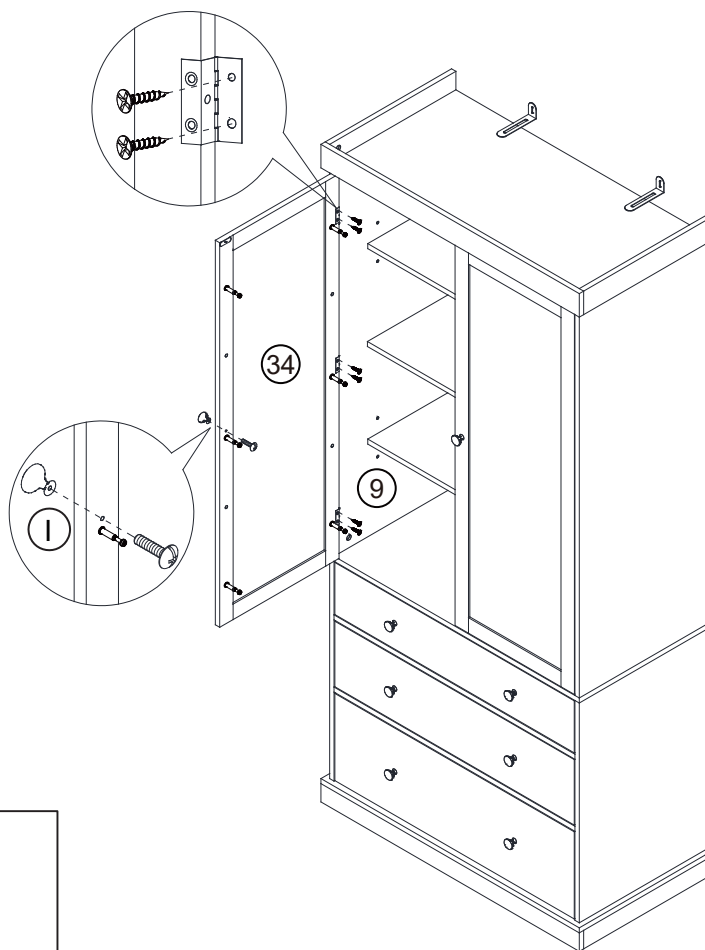


Step 32

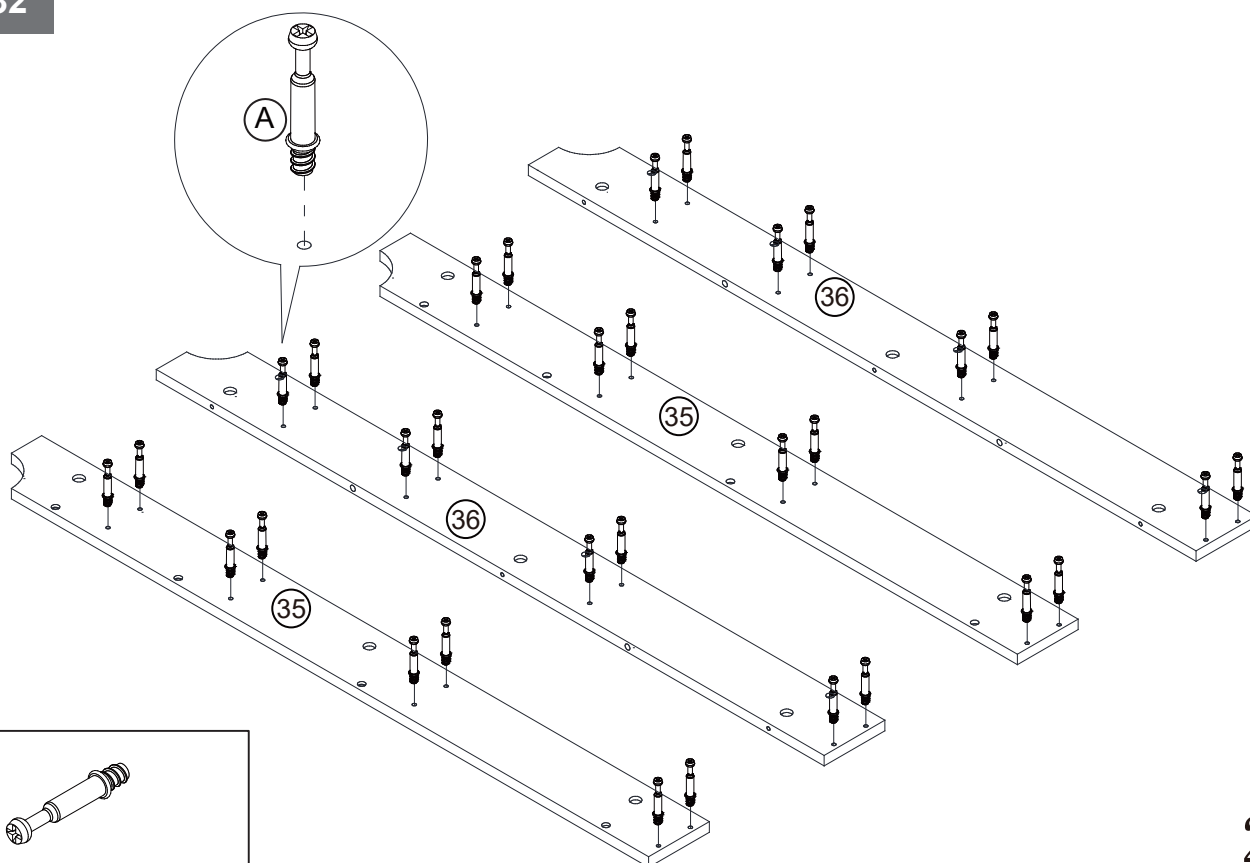

Assembly Instructions

Step 33


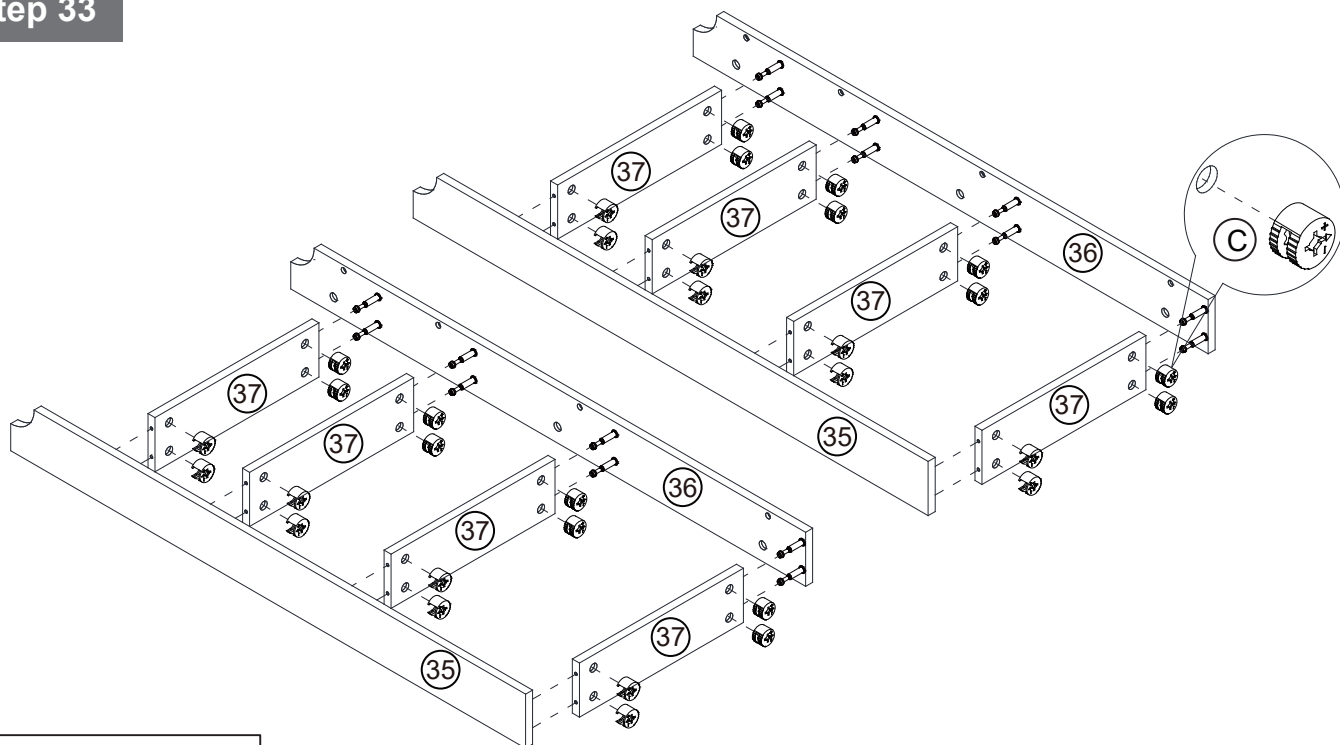


C




Cam lock x 32

Step 34

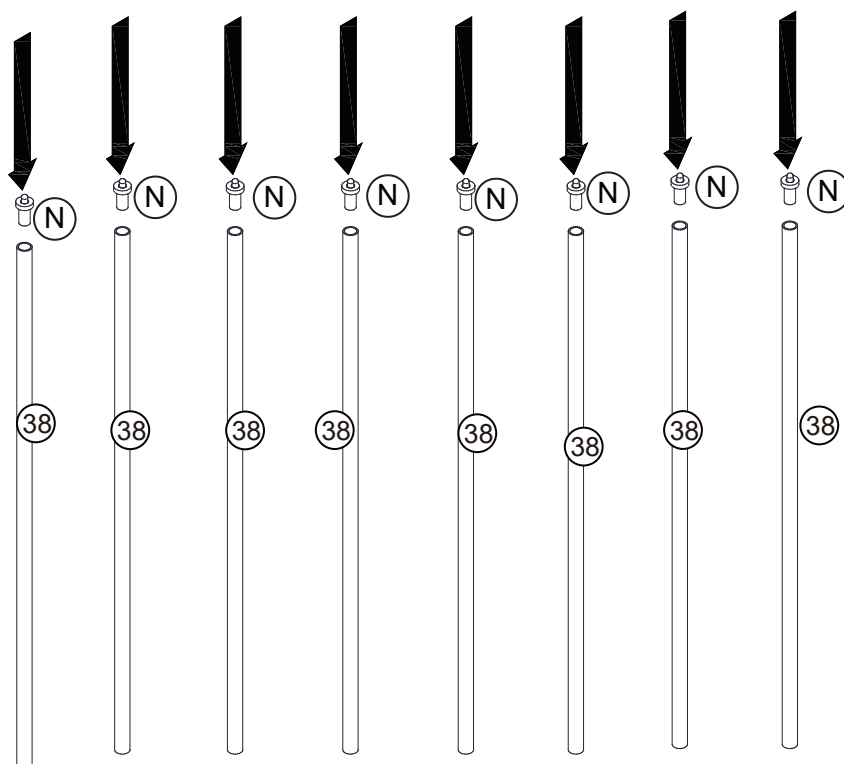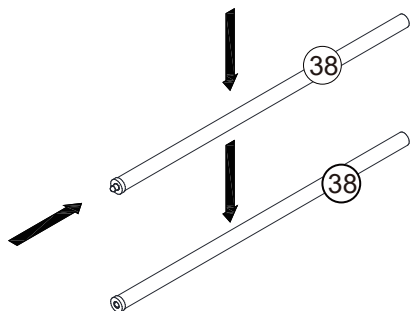


N




Iron pipe spring x 8

Assembly Instructions

Step 35

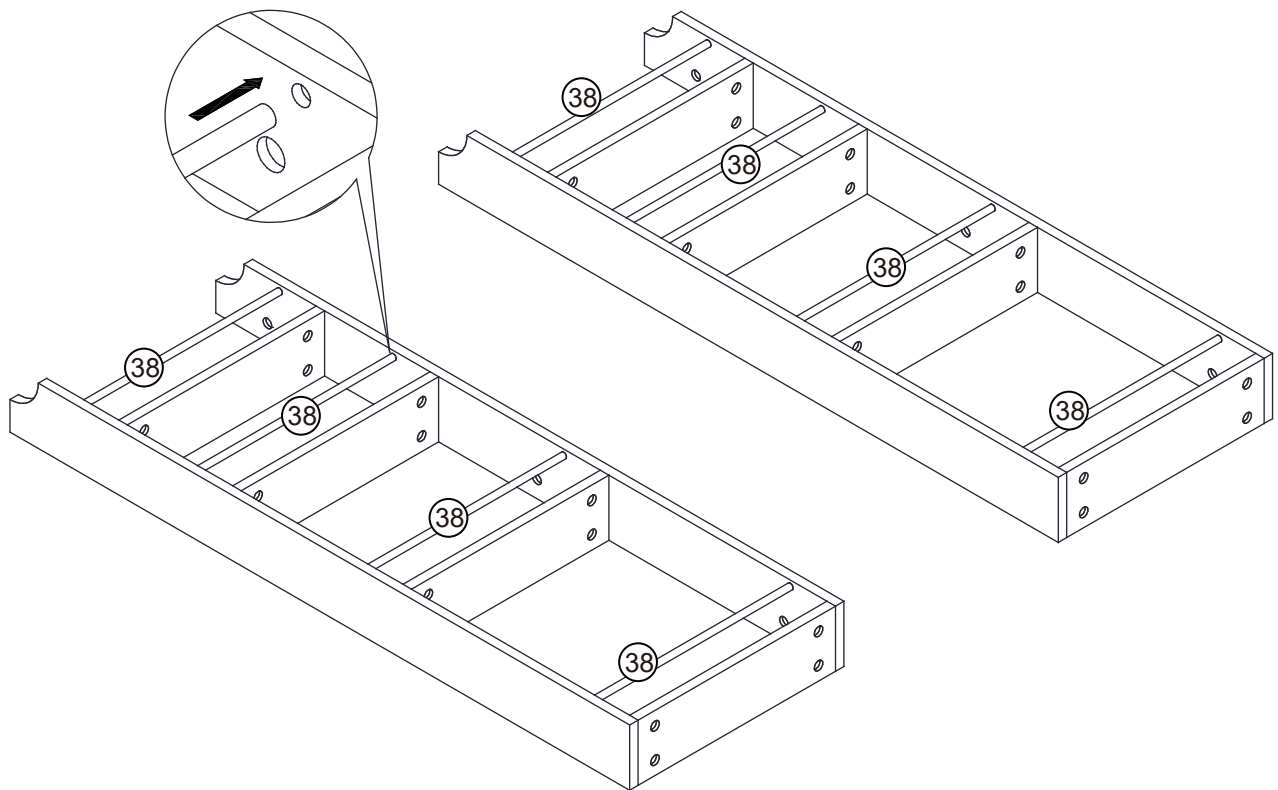

Step 36

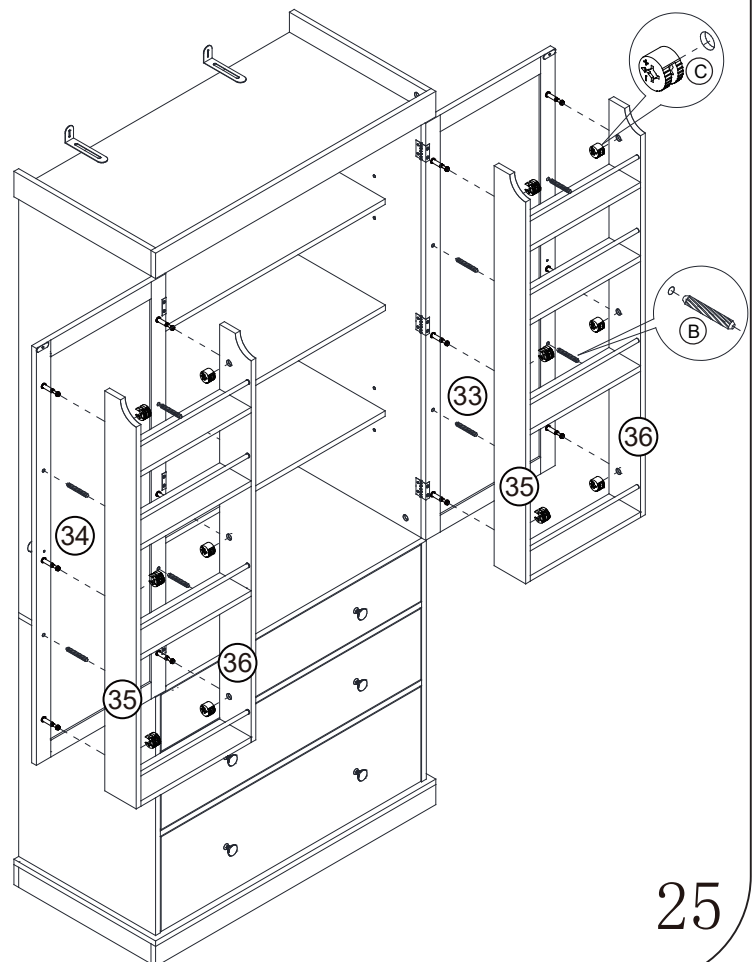

(B)



Dowel x 8


(C)



Cam lock x 12

Assembly Instructions

Step 37

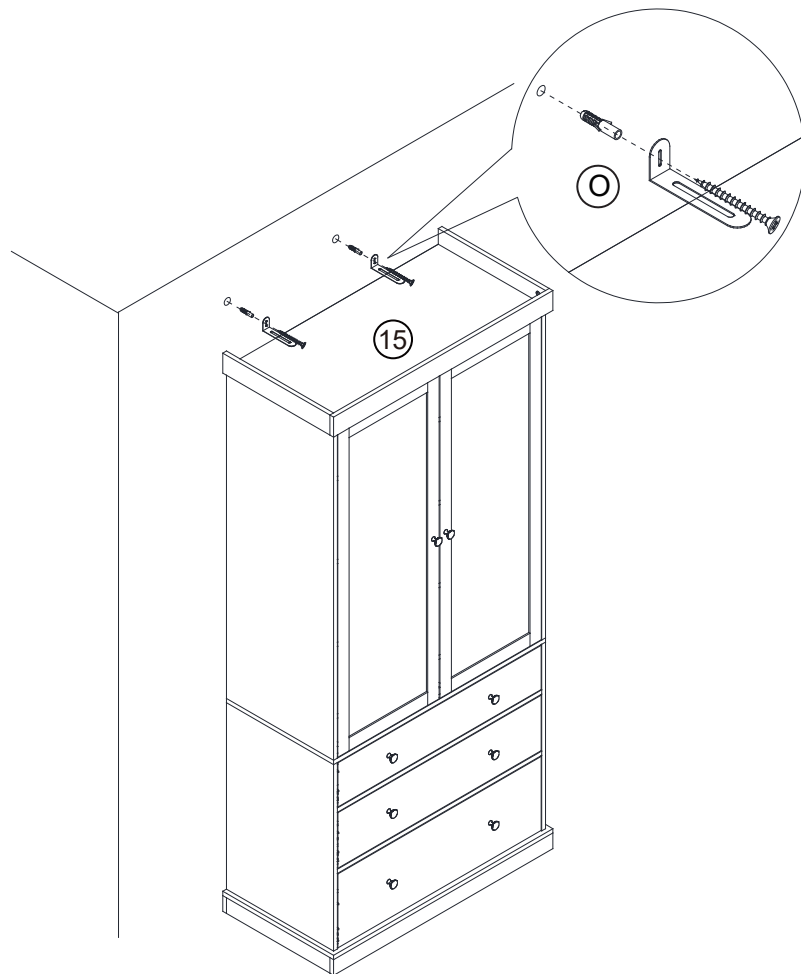

○



4*35mm Screw x 2

Step 38

