


wampat™

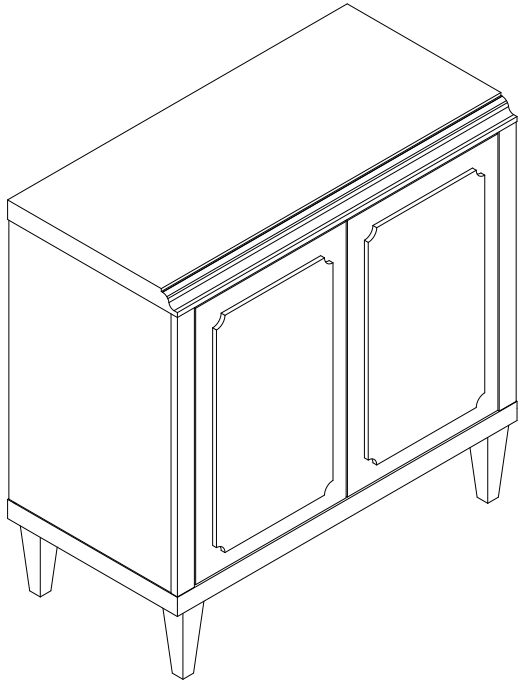


ASSEMBLY INSTRUCTIONS

**/ MODEL
W07HD085L W07HD086N**






IMPORTANT : please read this manual carefully before beginning
assembly of this product. keep this manual for future reference.

wampat


WHAT'S IN THE BOX

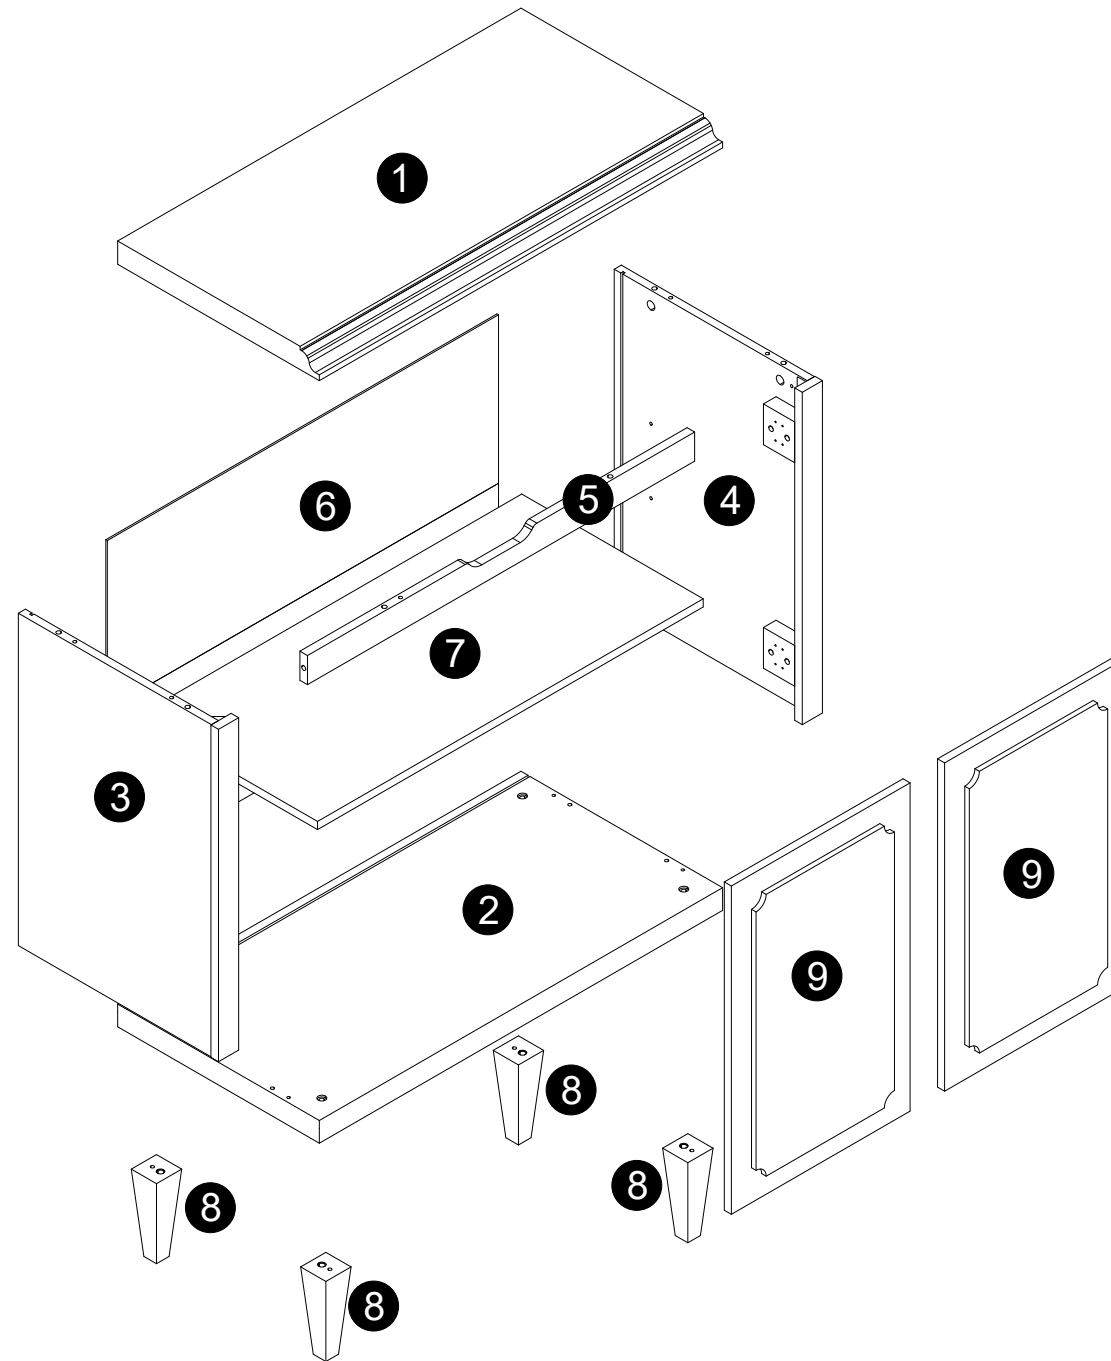



WHAT'S IN THE BOX

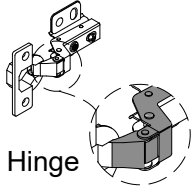 Wooden dowel Ø6x30mm A x 14	 Cam bolt Ø6x35mm B x 8	 Cam lock Ø15x9mm C x 8	 Plastic wedge D x 8
 Flat-head screw Ø3x16mm E x 8	 Door push F x 2	 Screw Ø3.5x14mm G x 28	 Glue tube H x 1
 Screw Ø4 x 50mm I x 4	 Bolt Ø1/4x55mm J x 4	 Hex key K x 1	 Footpads L x 4
 Hinge M x 4	 Shelf support N x 4	 Screw Ø4*12 O x 2	 Screw Ø4*25 P x 2
 Plastic strap Q x 2	 Nut R x 2		

• The provided glue(H) is to secure wood dowels(A) in place .
 When first inserting dowels, locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel .
 Wipe away excess glue immediately.

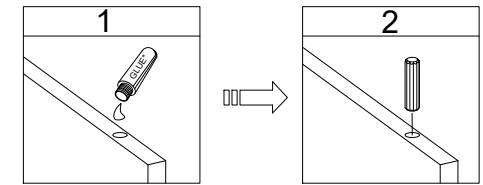

• In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together.
 Wipe away excess glue immediately.




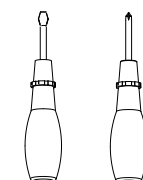
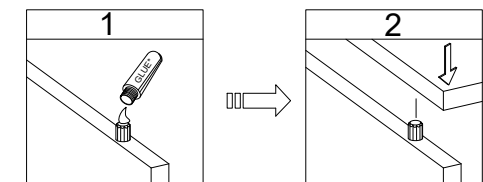


Tools Required
 (Not included)

INSTALLATION STEPS

1




- Unpack the unit and confirm that you have all the hardware and required parts.
Assemble the unit on a carpeted floor or the empty carton to avoid any scratches.

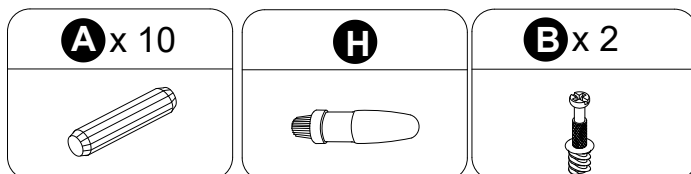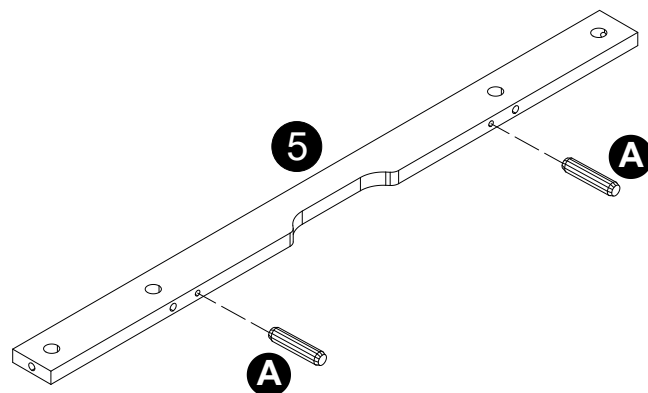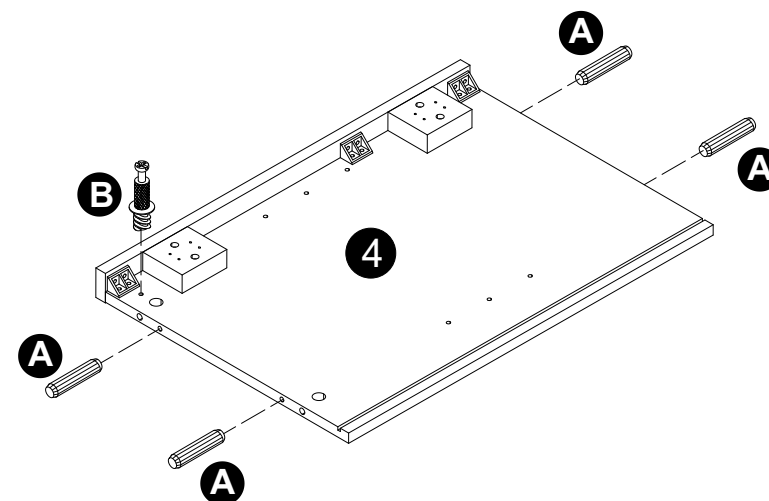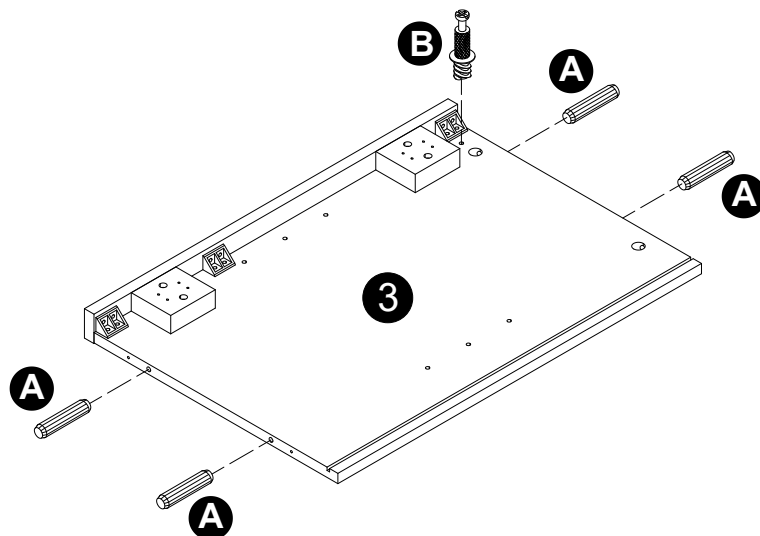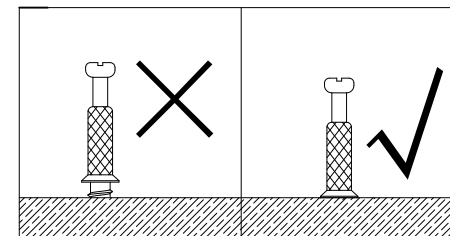

- Screw cam bolts (B) into panels (3,4).
- Insert dowels (A) into panels (3,4,5).

2


INSTALLATION STEPS

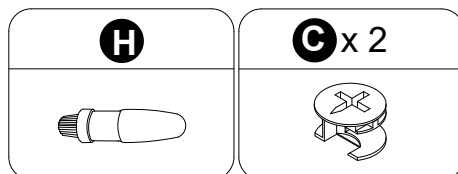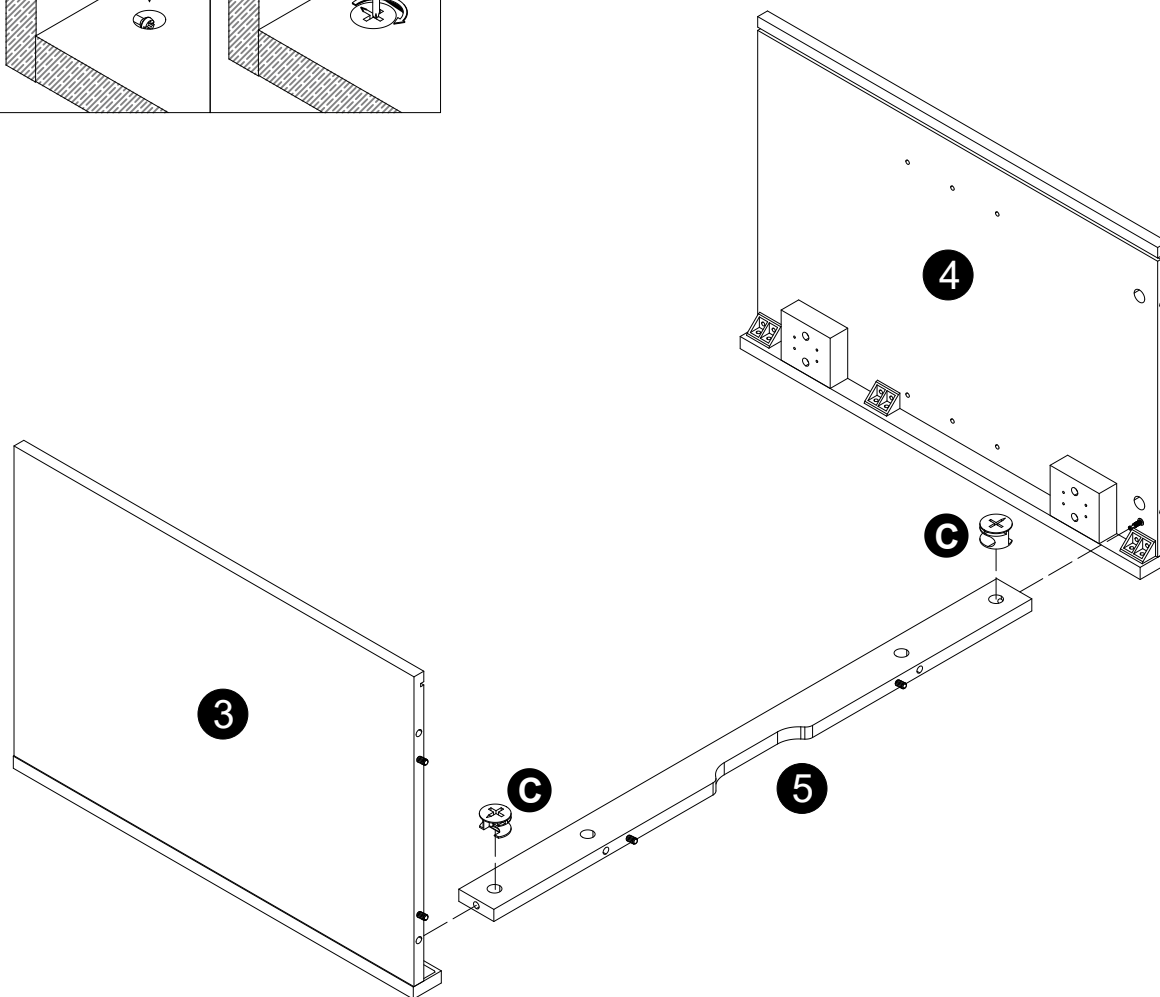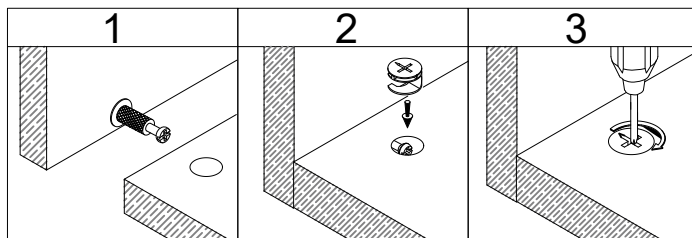


- Attach panels (3,4) to panel (5).
- Insert and secure cam locks(C) to panel (5) to lock it.

3


INSTALLATION STEPS

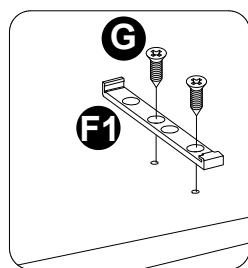


Step 1

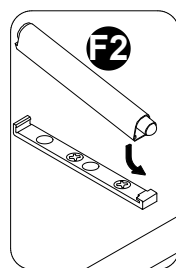



Step 2

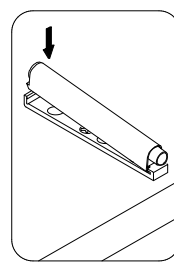


Step 3

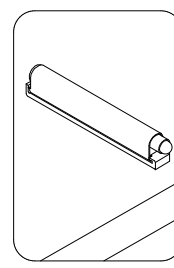

Final Assembly




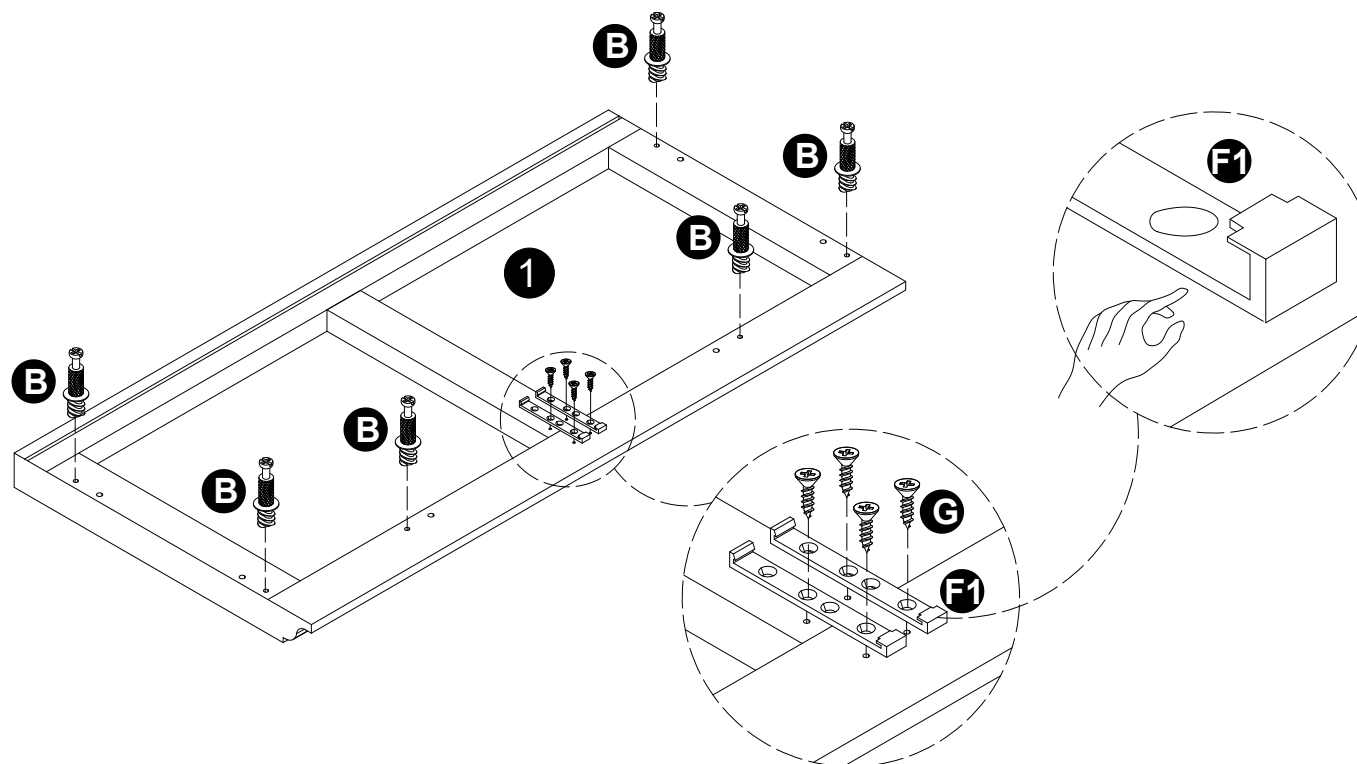
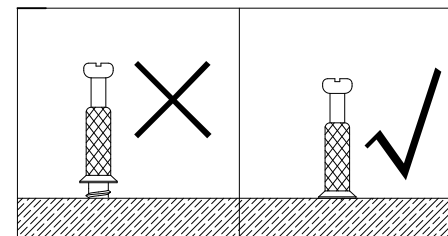


G x 4	F x 2	B x 6
		

- Screw cam bolts (B) into panel (1).
- Attach part (F) to panel (1) with screws (G).

4



INSTALLATION STEPS

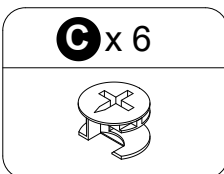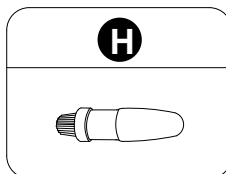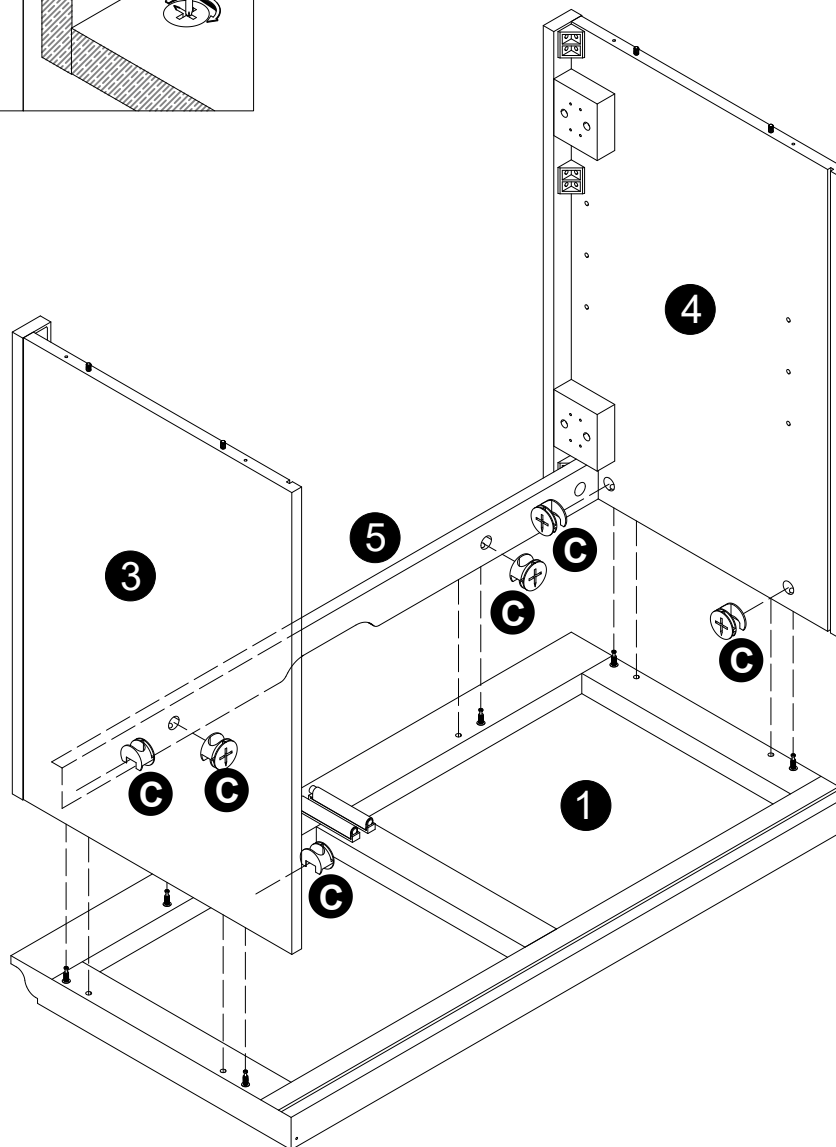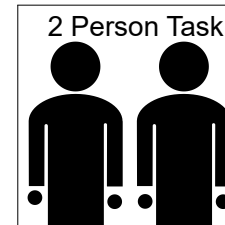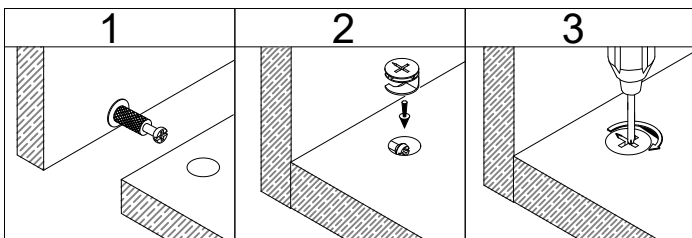

- Attach panels (3,4,5) to panel (1).
- Insert and secure cam locks(C) to panels (3,4,5) to lock it.

5




INSTALLATION STEPS

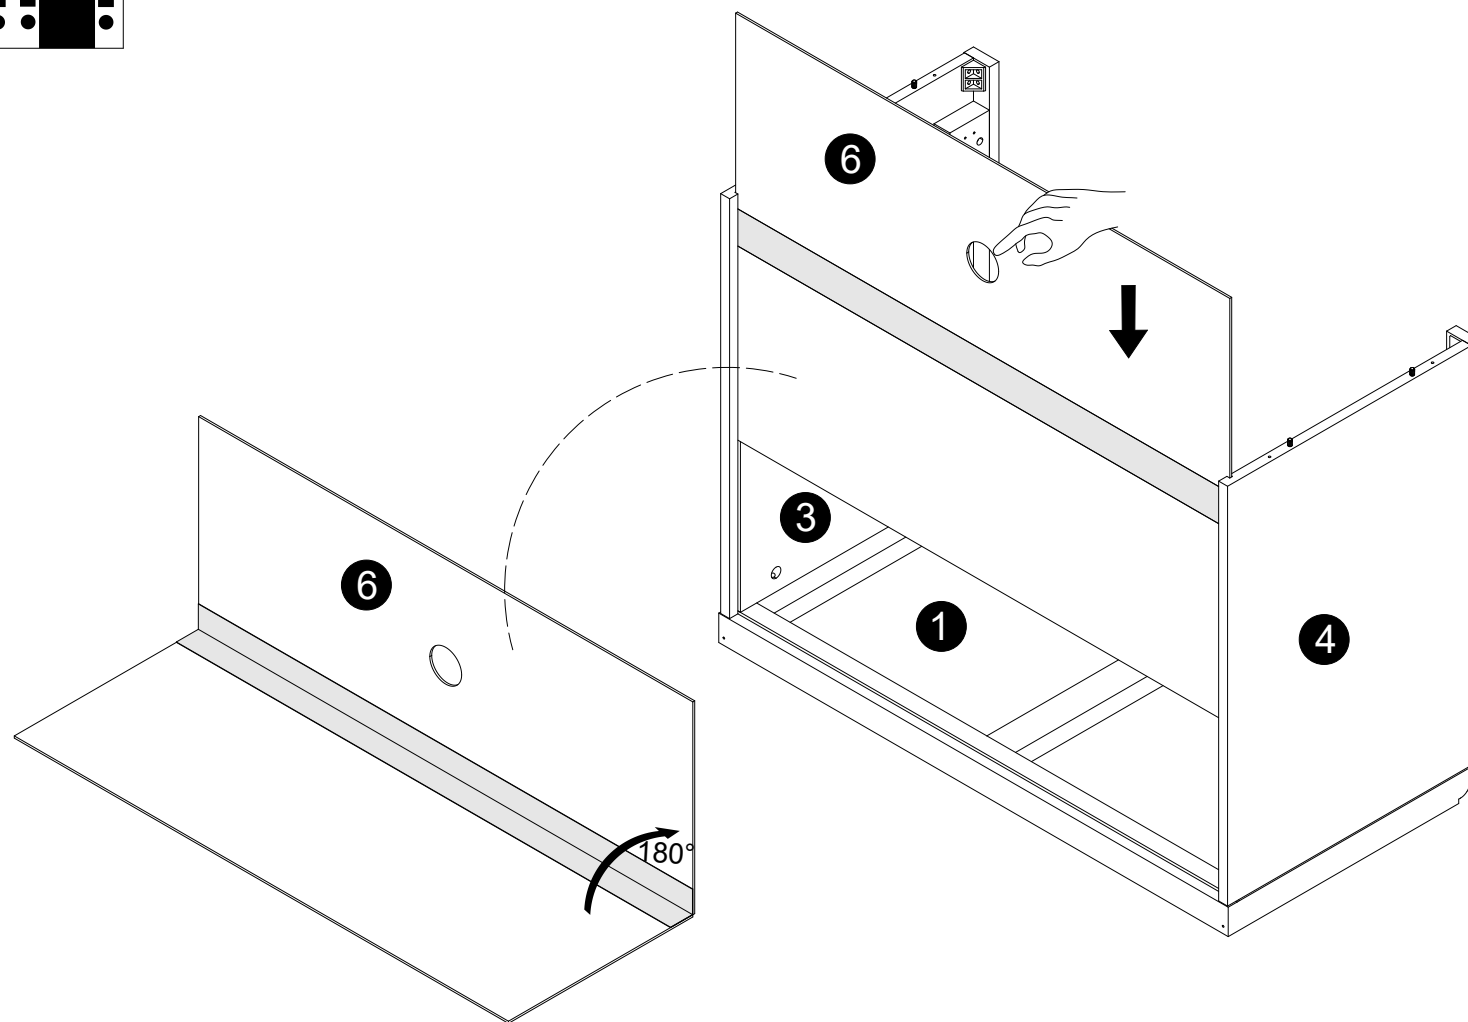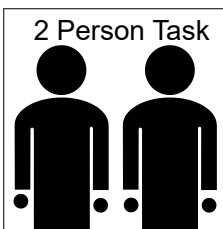

· Carefully slide part (6) into place along the back of the assembly.

6

INSTALLATION STEPS

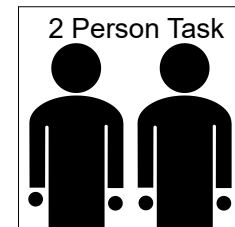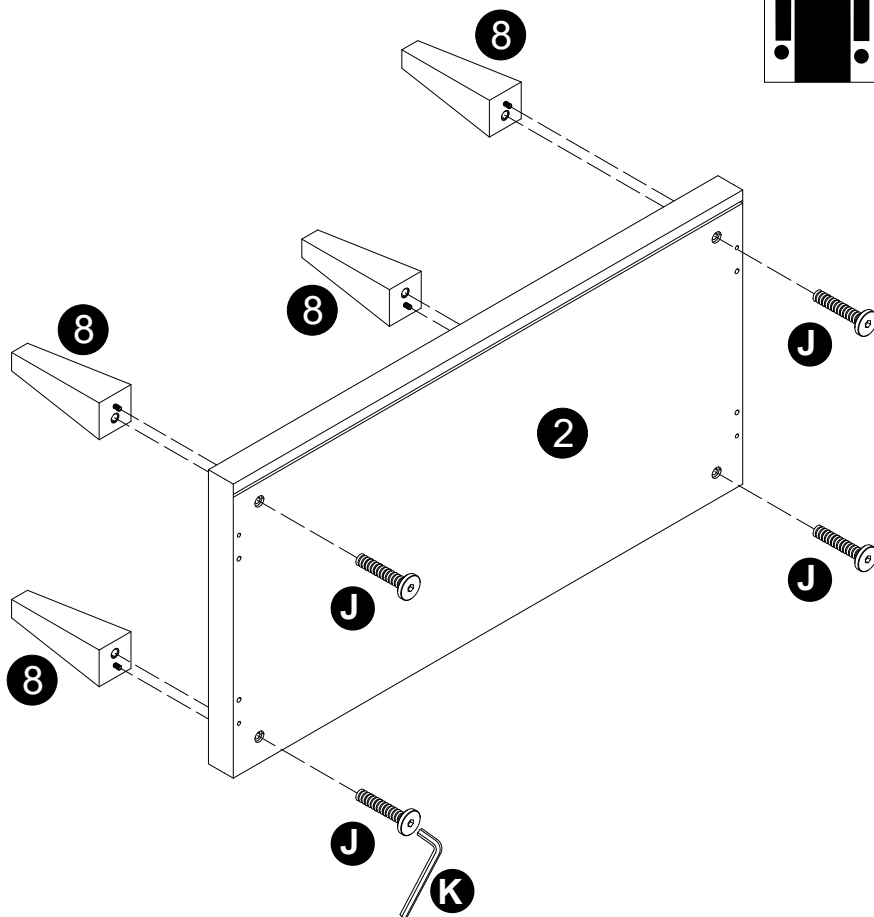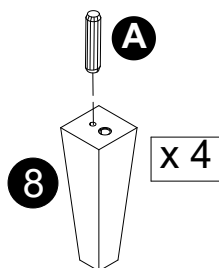


A x 4	H
J x 4	K



- Insert dowels (A) into legs (8).
- Attach legs (8) to panel (2) with parts (J,K).

7

INSTALLATION STEPS

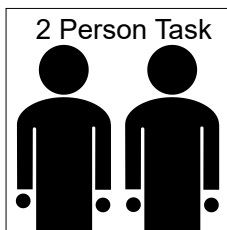

The slot is on the lower side.

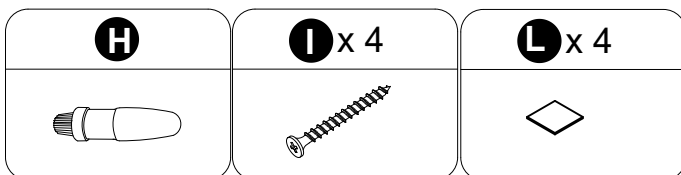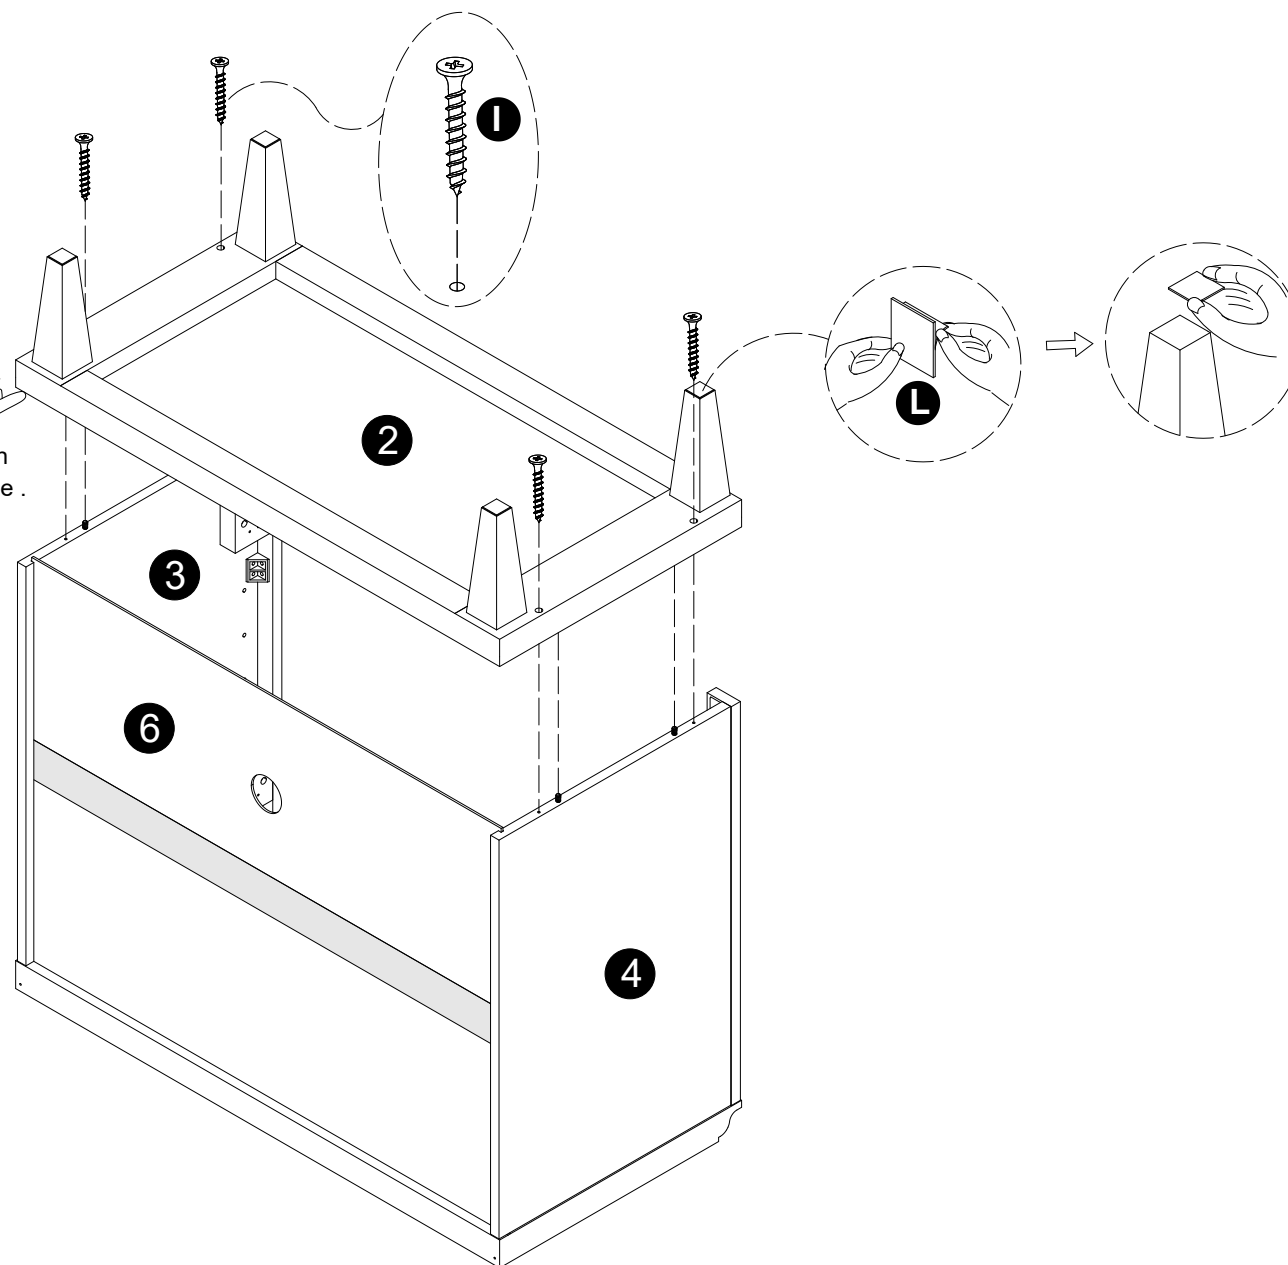


- Attach panel (2) to panels (3,4) with screws (I).
- Stick the skid pads (L) on the bottom of the legs (8).

8

INSTALLATION
STEPS



NOTE: Ensure the cabinet body is stable, please make sure to lock the plastic wedge.

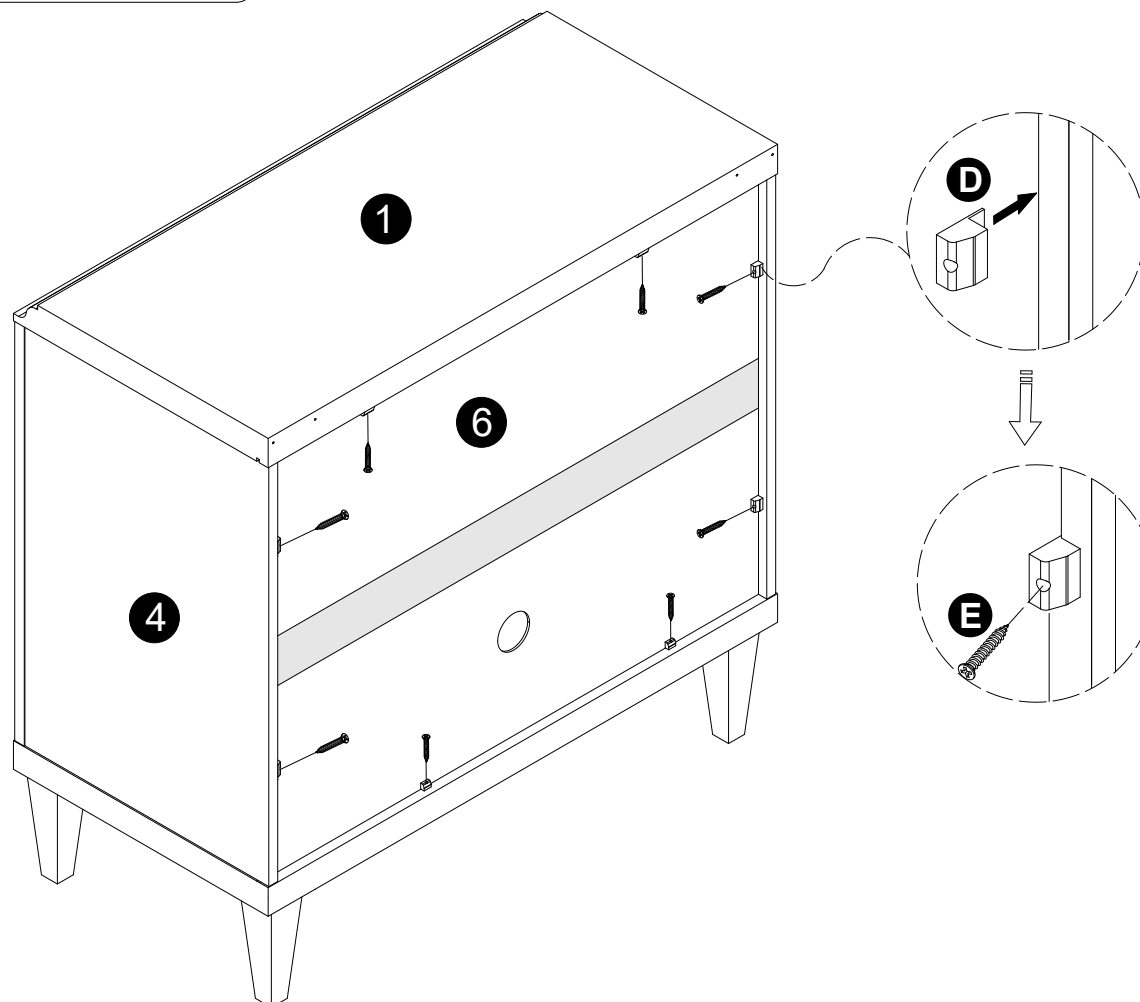**D** x 8**E** x 8

· Secure parts (D) with screws (E) as per diagram.

9



INSTALLATION STEPS

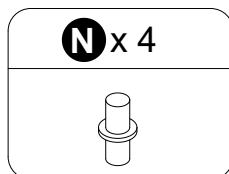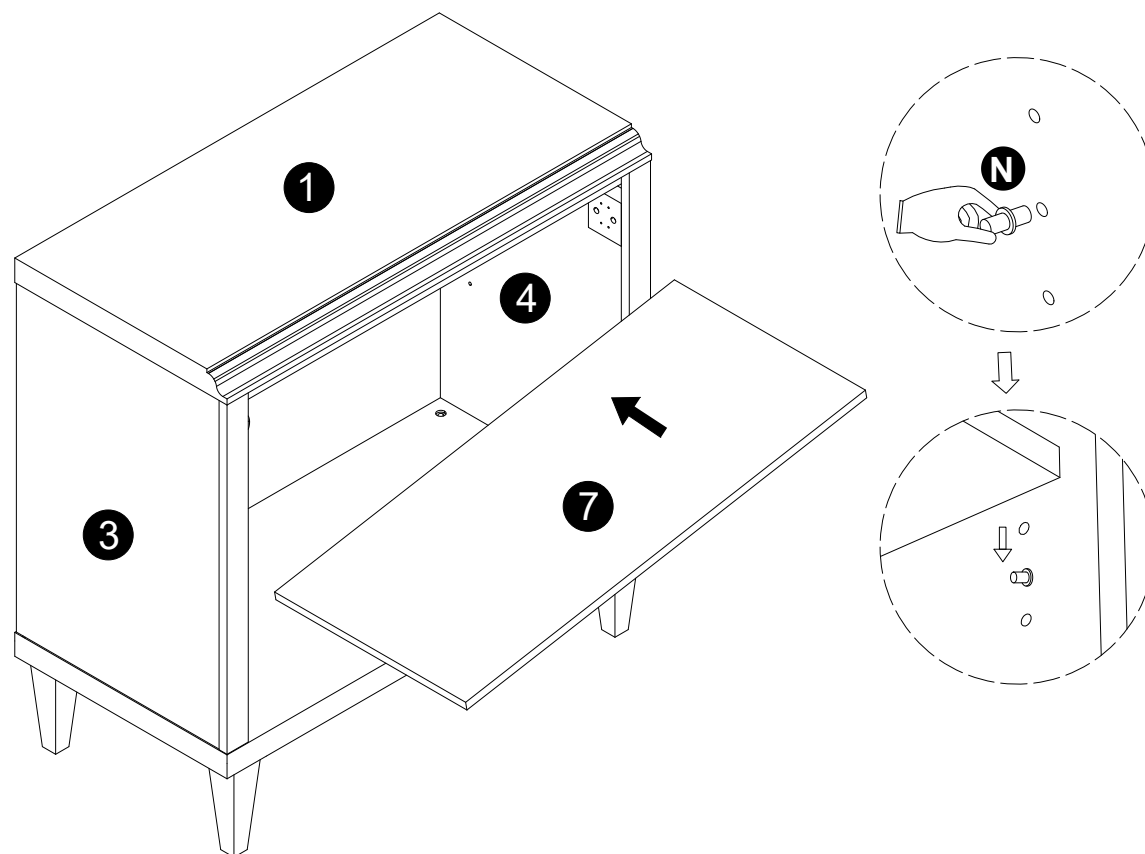





· Attach panel (7) to panels (3,4) using parts (N).

10

INSTALLATION STEPS

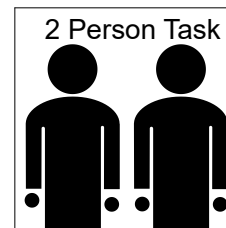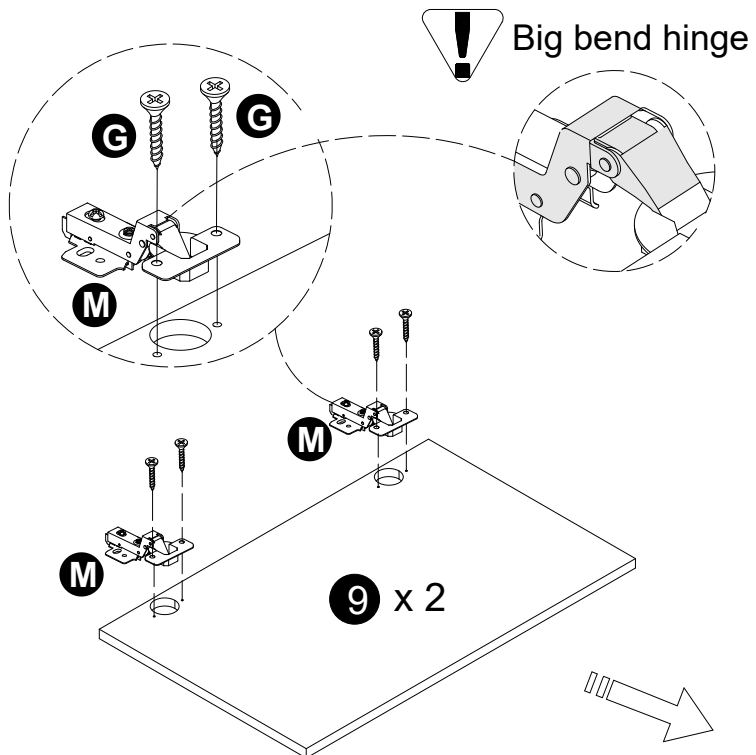





•Adjust part (F) to achieve the door panel is flat.

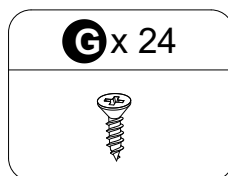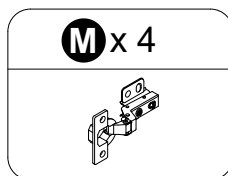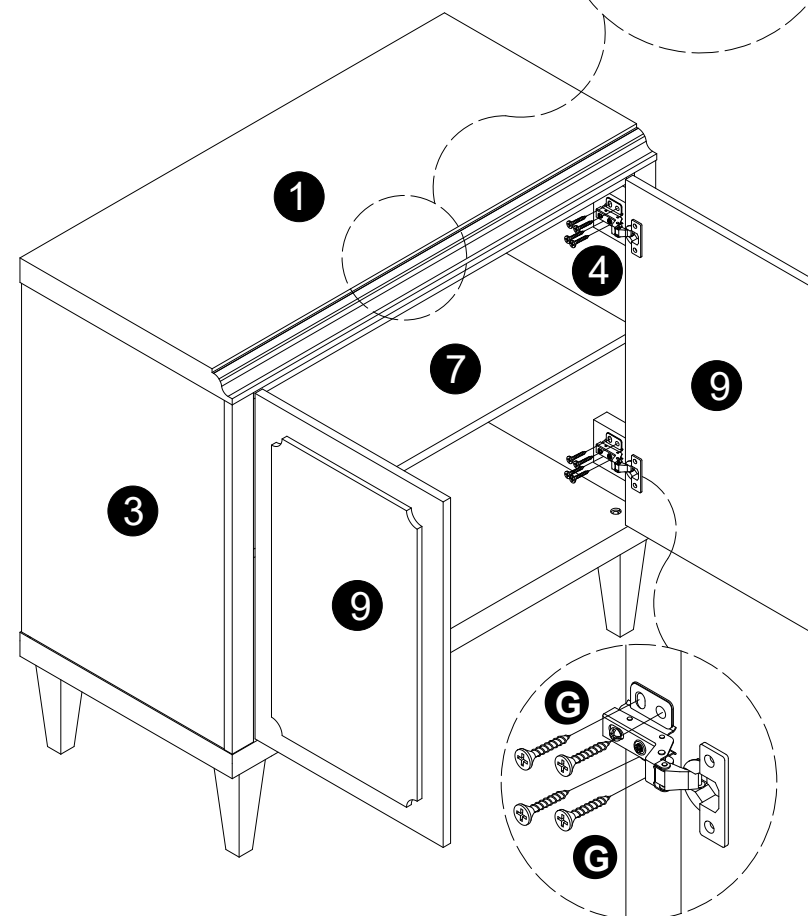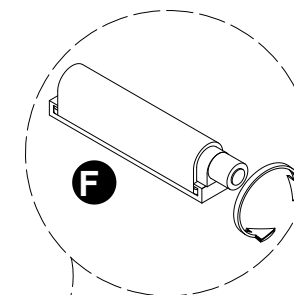

- Attach parts (M) to panels (9) with screws (G) correctly.
- Attach panels (9) to panels (3,4) with screws (G) correctly.

11


INSTALLATION STEPS

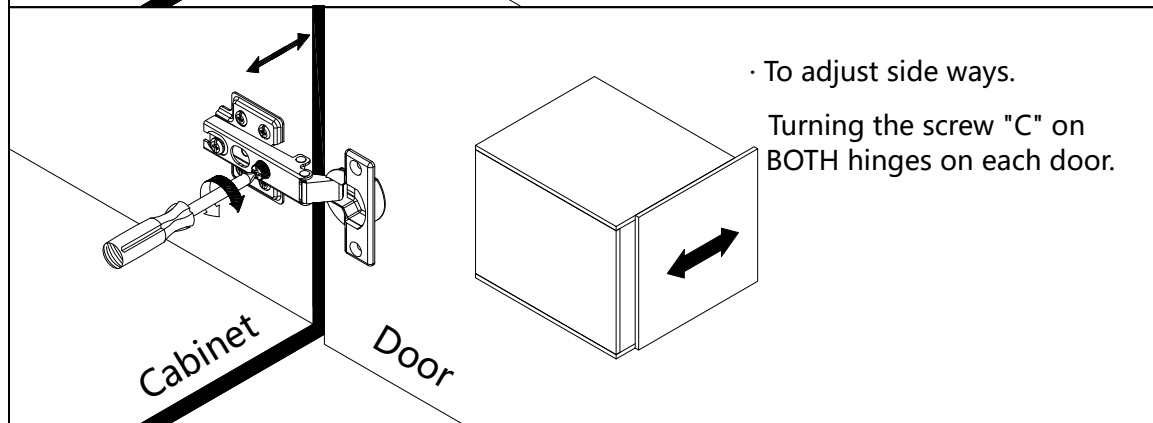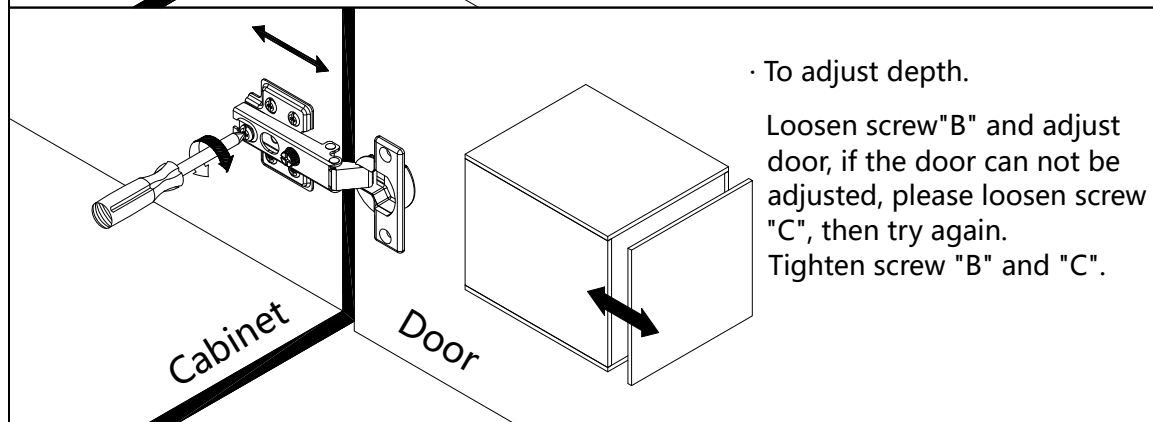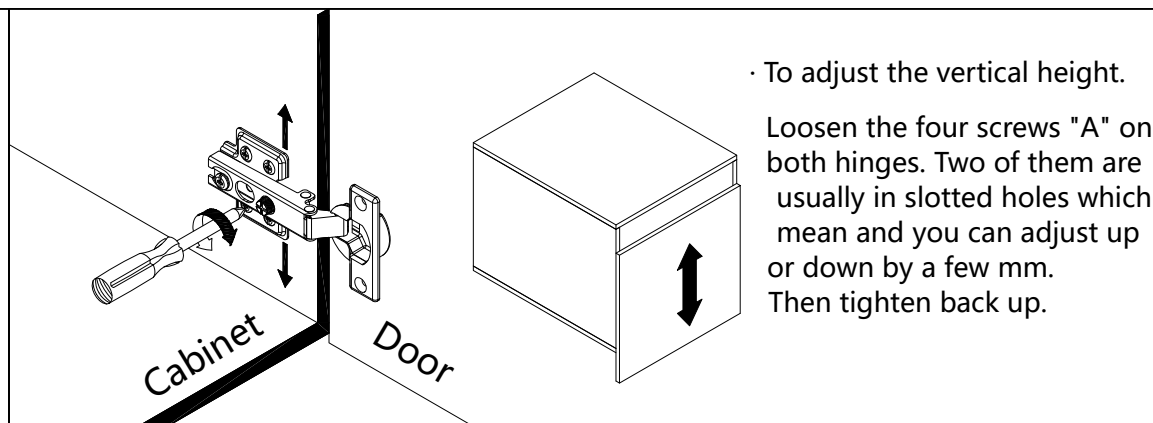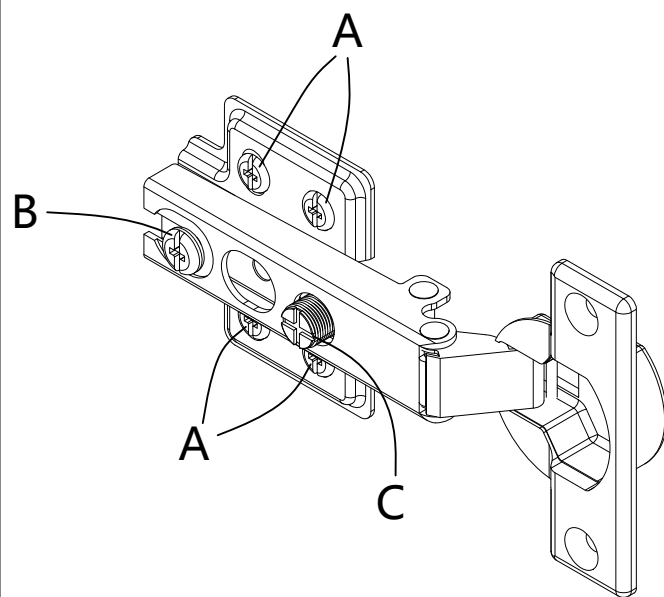


12

INSTALLATION STEPS


Step 1

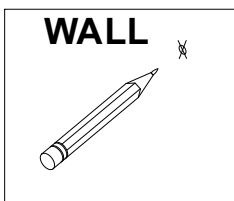


Step 2

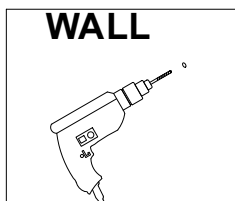


Step 3

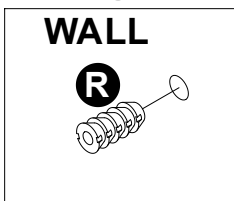


Step 4

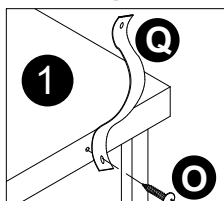

Step 5

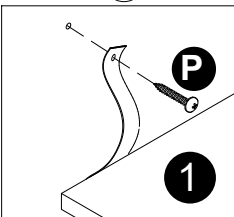

Tools required: Phillips screwdriver, Power Drill, 15/64" Drill Bit and Rubber Mallet.

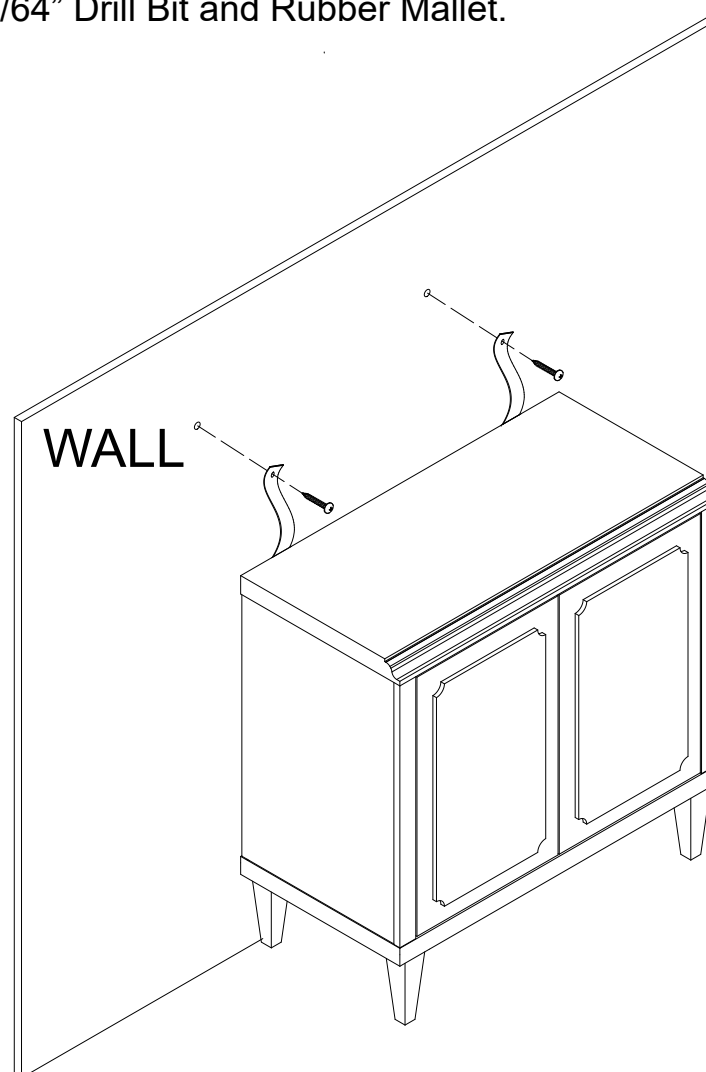

WARNING

Serious or fatal crushing injuries can occur from furniture tipover.

To prevent tipover:

- * Install tipover restraint provided
- * place heaviest items in the lowest drawers
- * Unless specifically designed to accommodate, do not set TV or other heavy objects on the top of this product
- * Never allow children to climb or hang on drawers, door, or shelves.

Use of tipover restraints may only reduce, but not eliminate the risk of tipover

O x 2



P x 2



Q x 2



R x 2



Dear customer:

Thanks for your purchase in our store.

Any questions, please contact us via Support @ s-wampat.com with below details:

- 1. Purchase platform & order number**
- 2. Model number & Instruction version#**
- 3. The detailed photo (faulty part, damage part, if some parts are missing,
please circle it/them on the manual instruction) and send to us.**

wampatTM



We'll reply as soon as we receive your message (usually within 24 hours).