



















**Please don't tighten the screws completely
and go back later for a final tightening of all the
screws after pieces are aligned with each other.**

1  x 2	2  x 1	3  x 1	4  x 1	5  x 1	6  x 1
7  x 1	8  x 2	9  x 4	10  x 1	11  x 2	12  x 1
13  x 2	14  x 8	15  x 1	16  x 1	17  x 1	18  x 1

A



M6 x 12 mm x8

B



M6 x 15 mm x8

C



M6 x 25 mm x8

D



M6 x 35 mm x16

E



M6 x 50 mm x6

F



M8 x 35 mm x4

G




Ø3x10mm x2

H



4 # x1

I

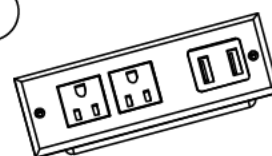


x 1



J

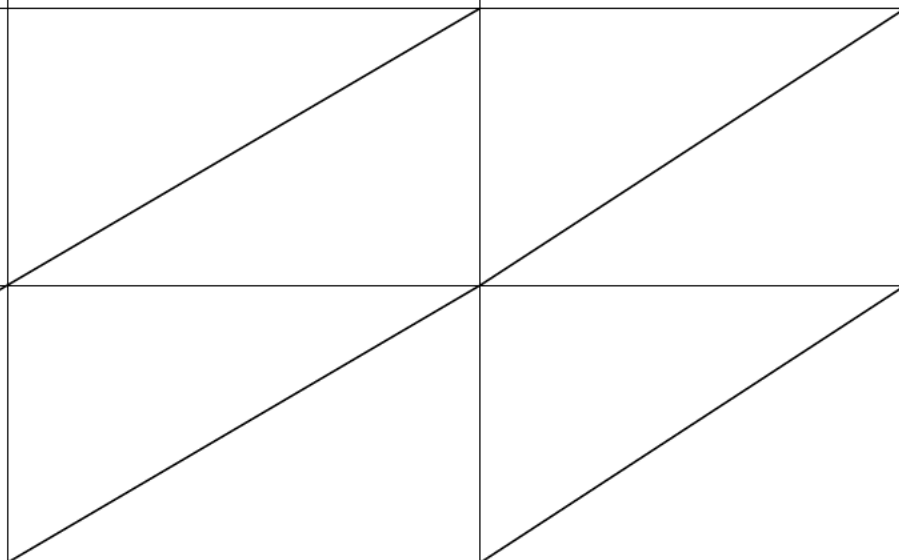


4 # x1







Step 1

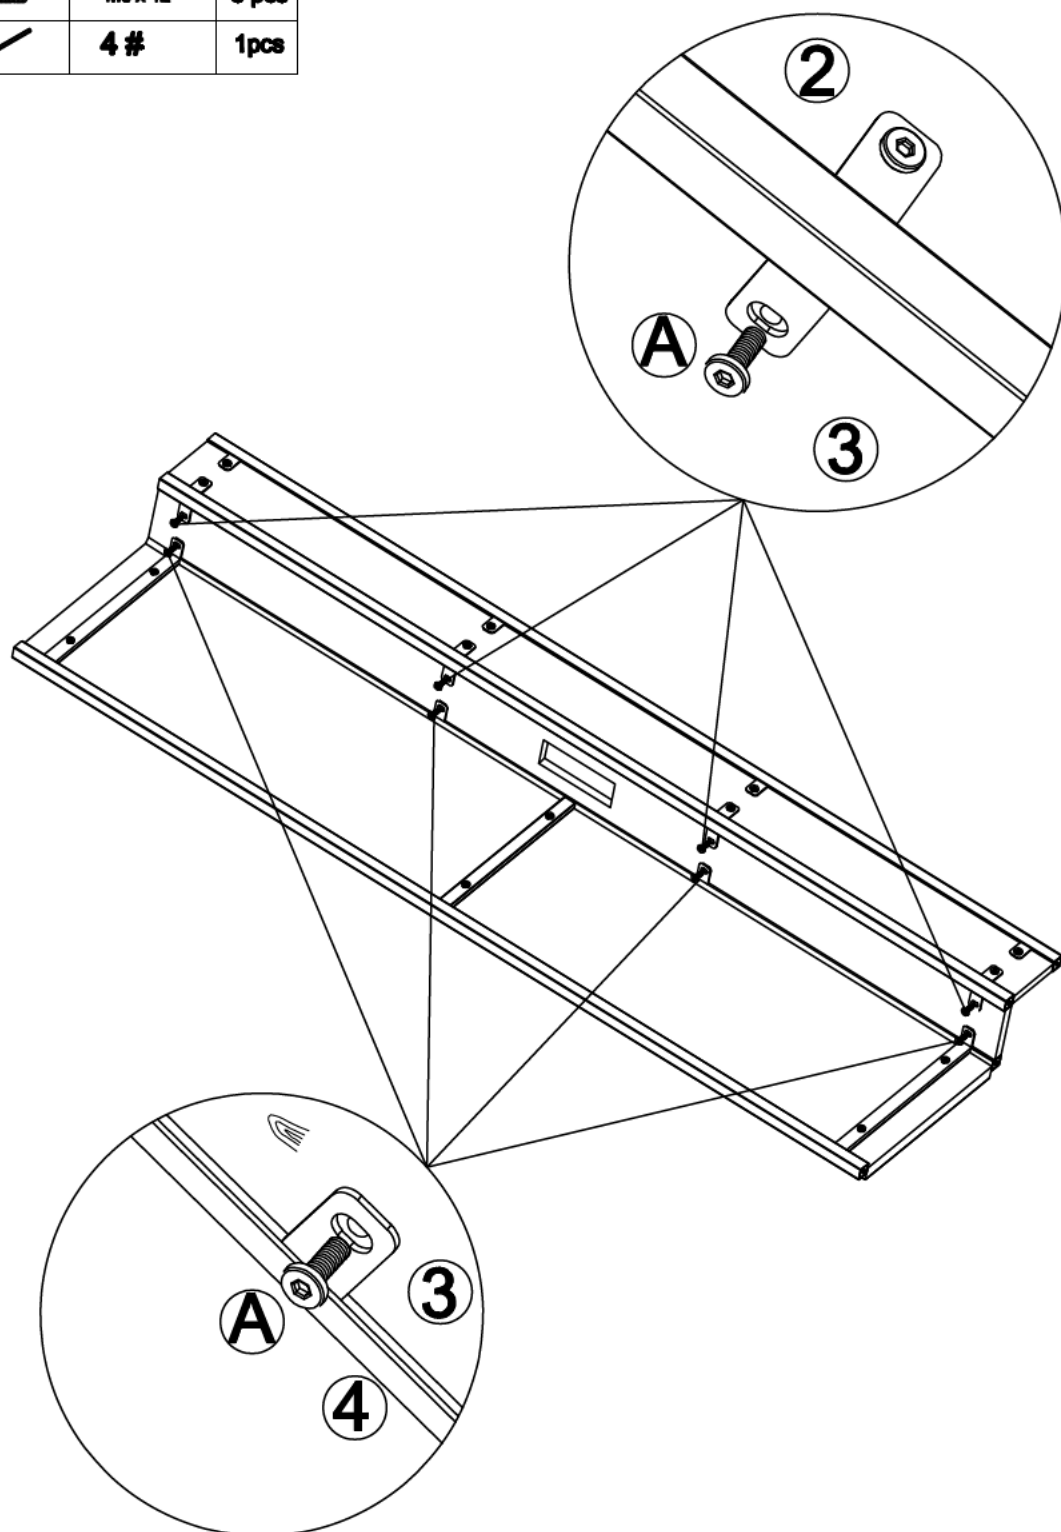A		M6 x 12	8 pcs
H		4 #	1pcs







Step 2

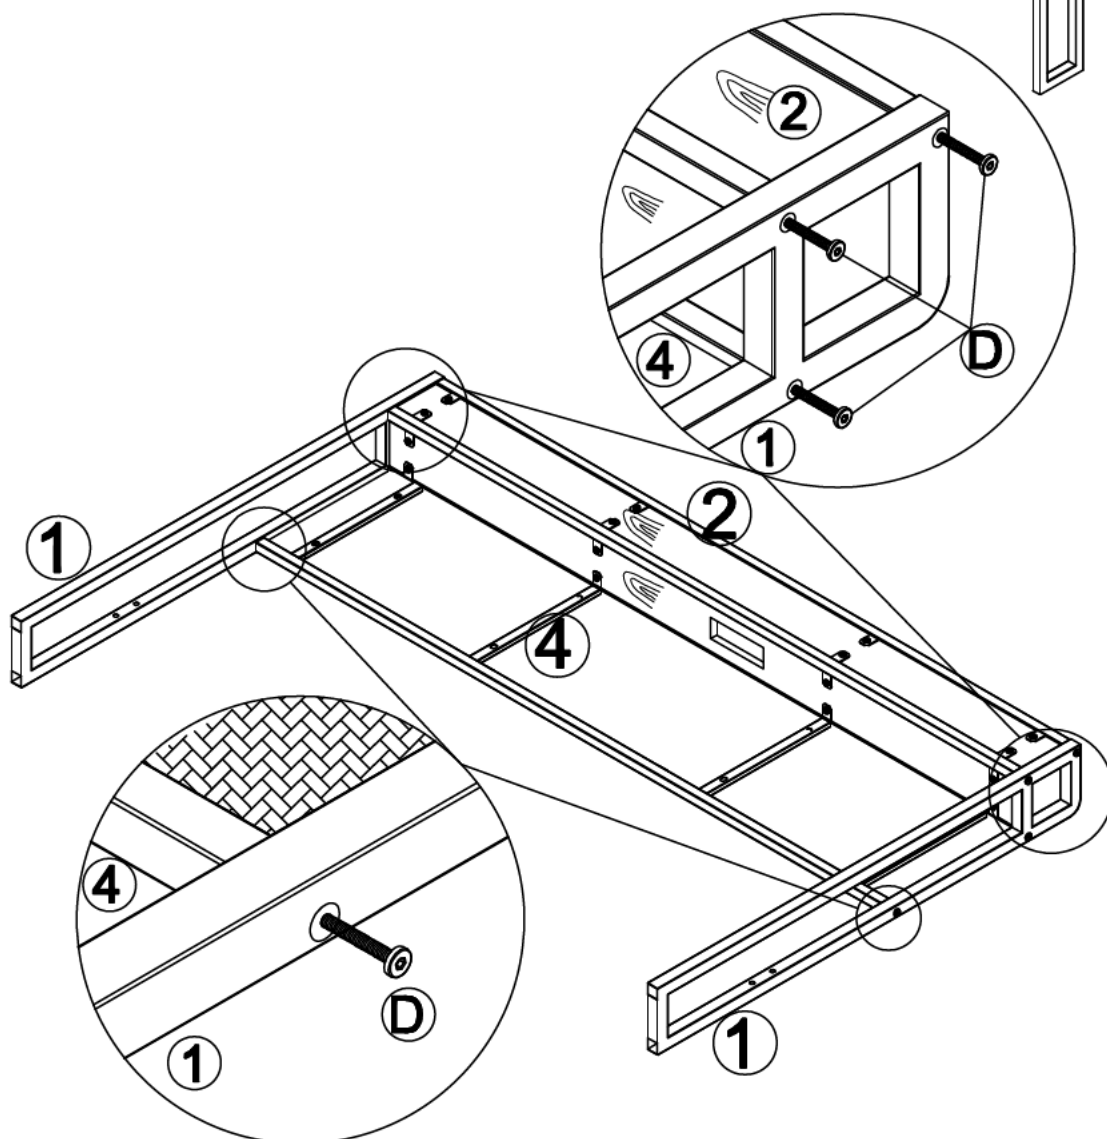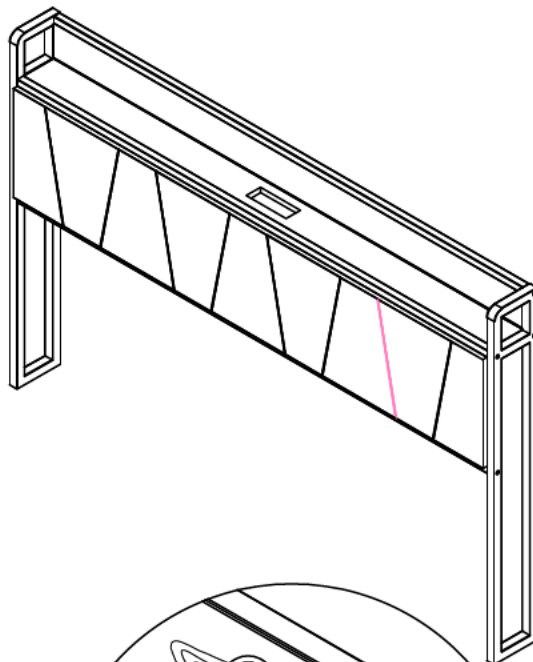D		M6 x 35	8pcs
H		4 #	1pcs






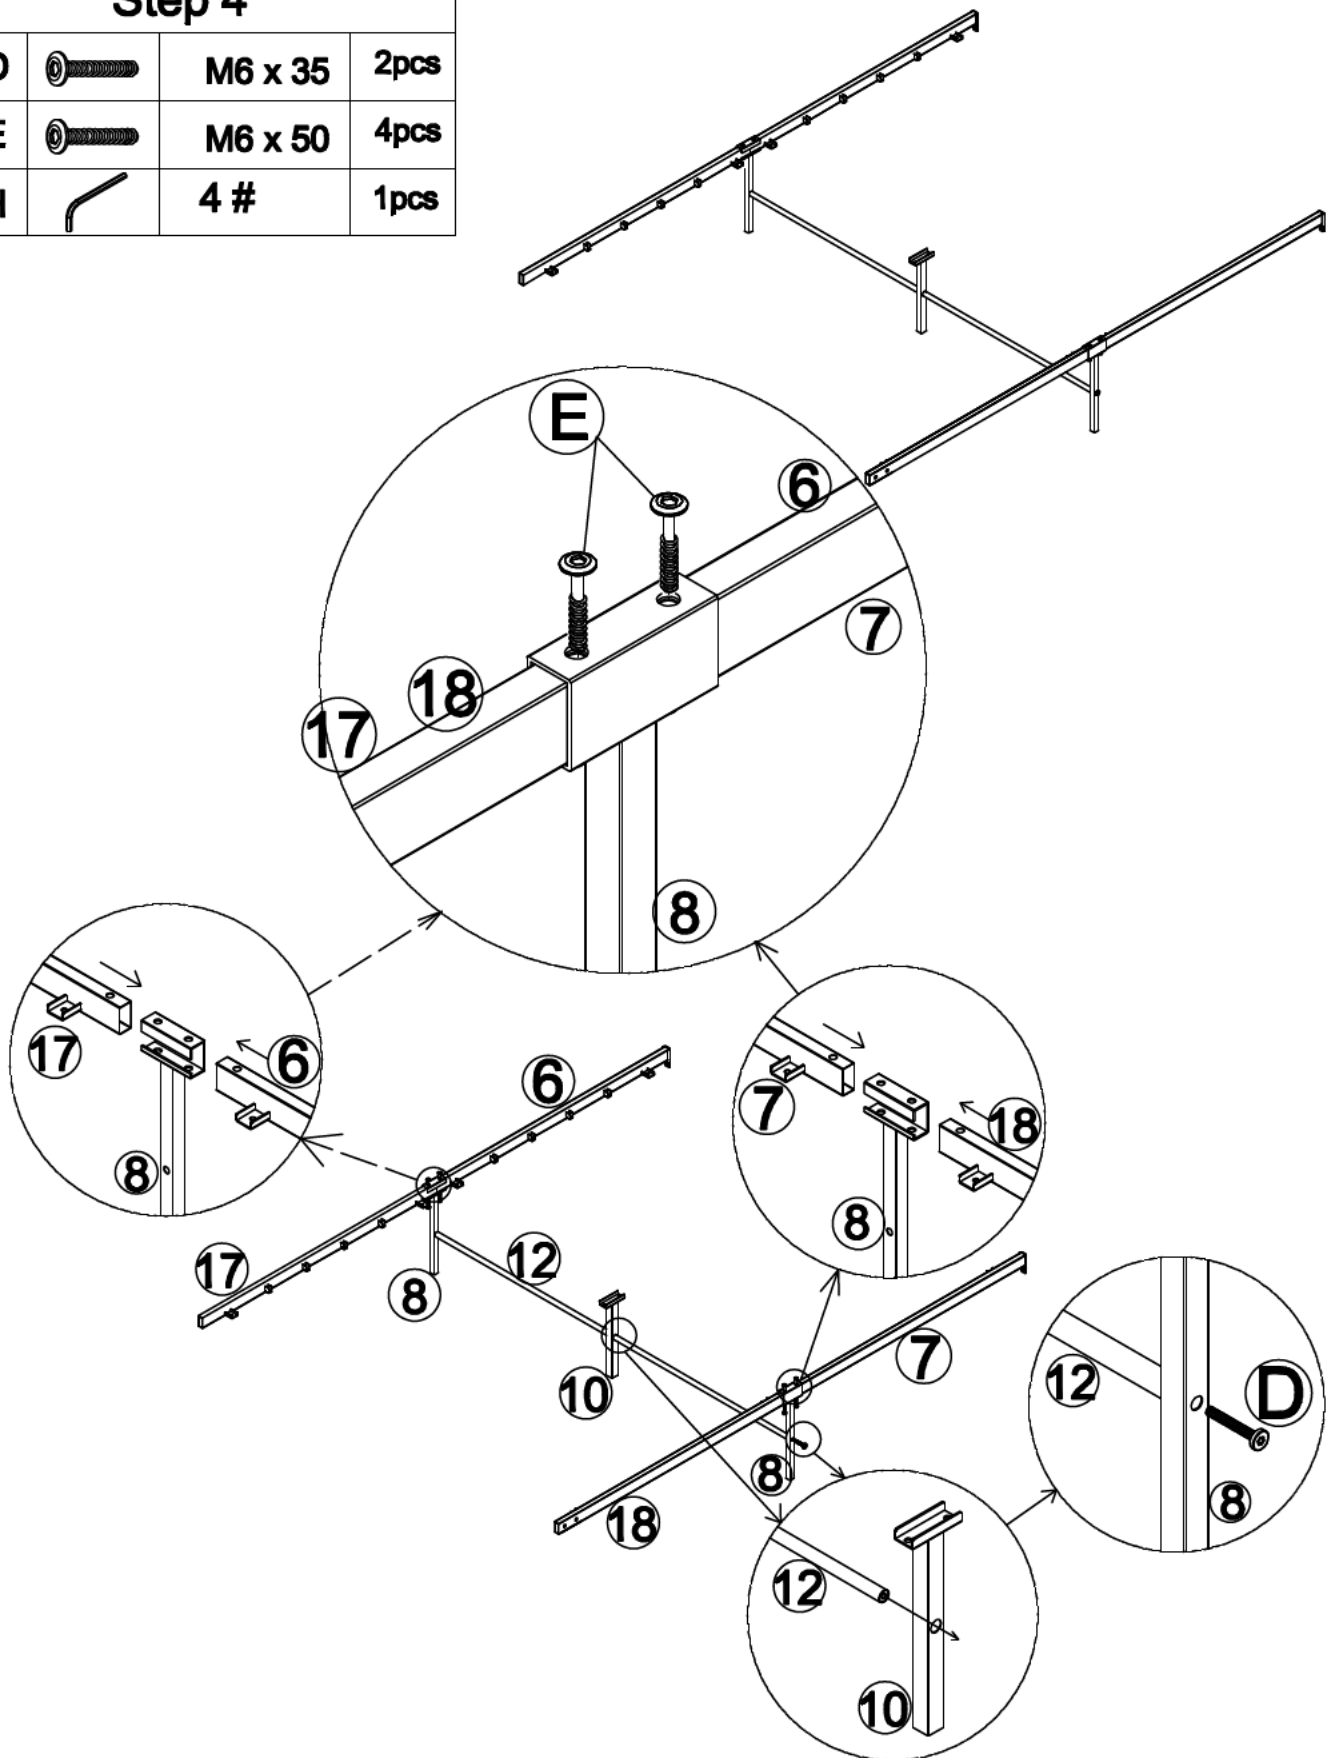
Step 3

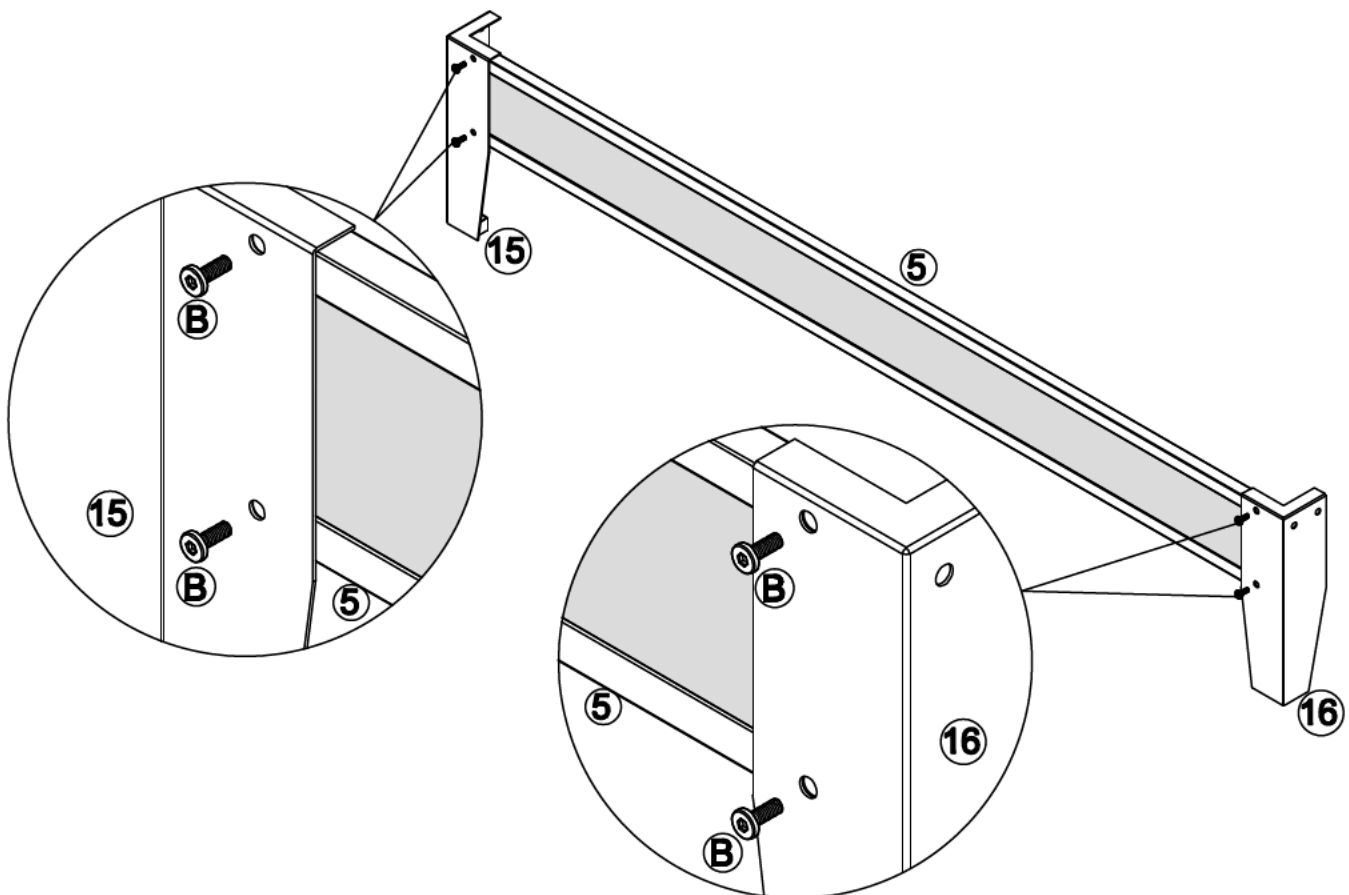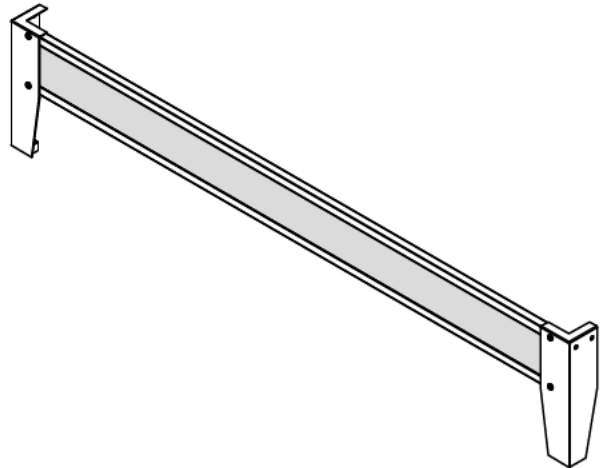B		M6 x 15	4pcs
H		4 #	1pcs






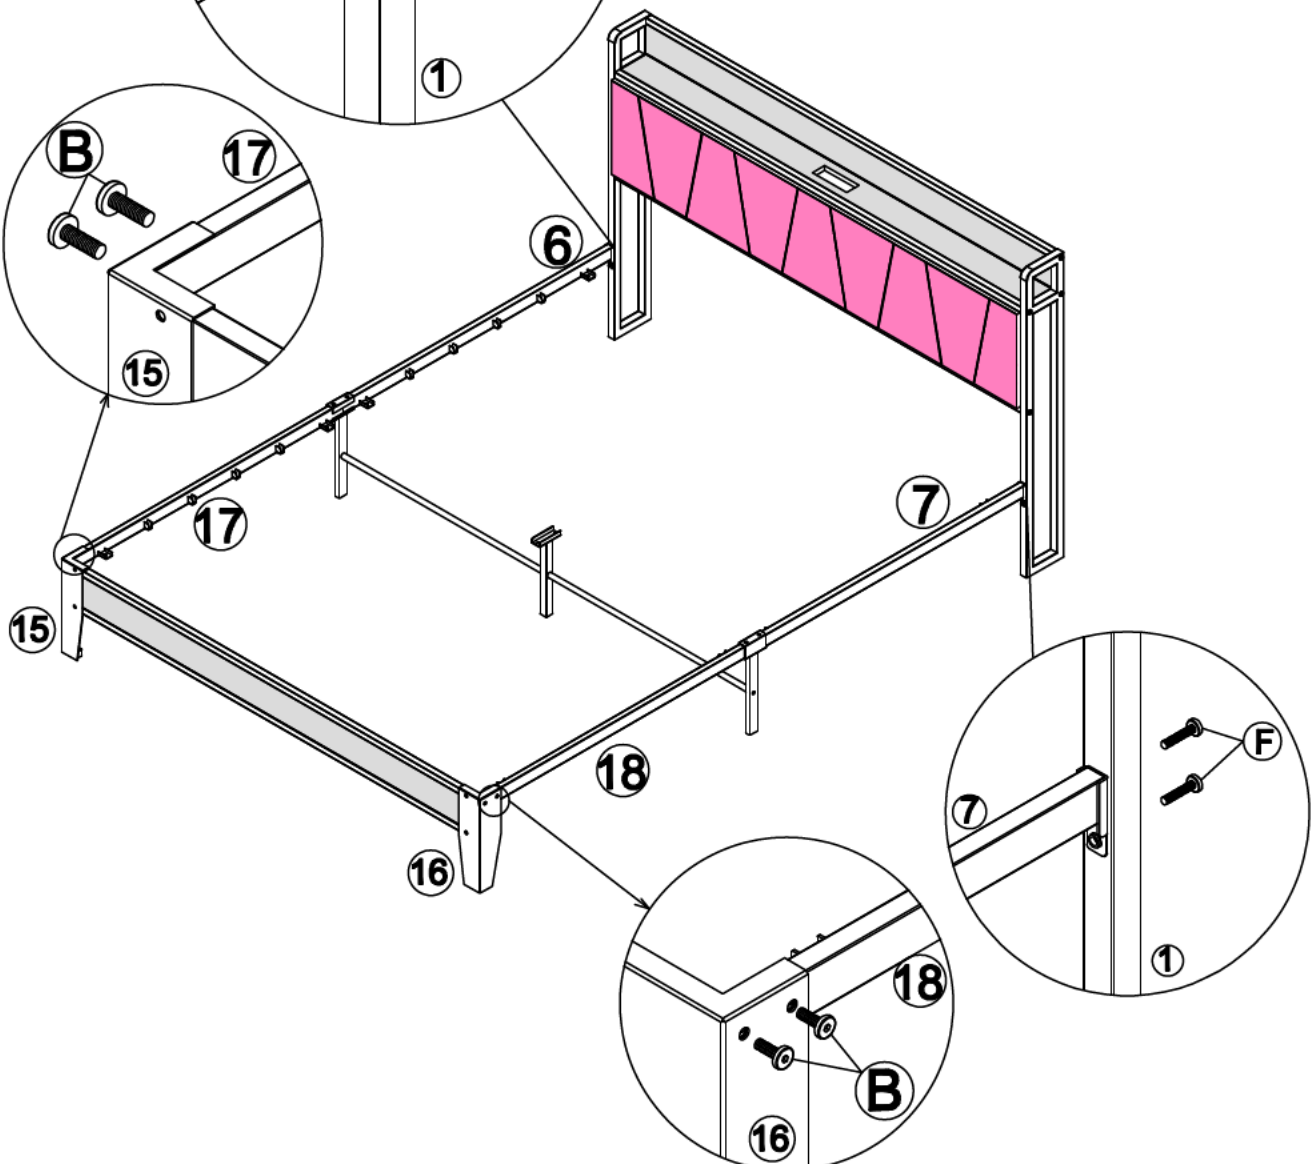
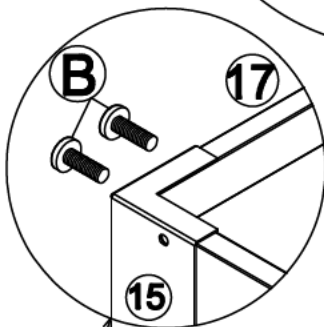
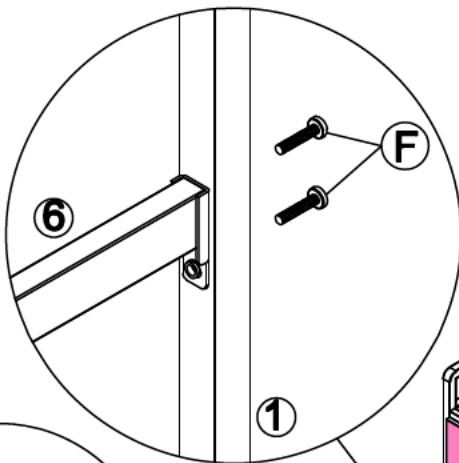
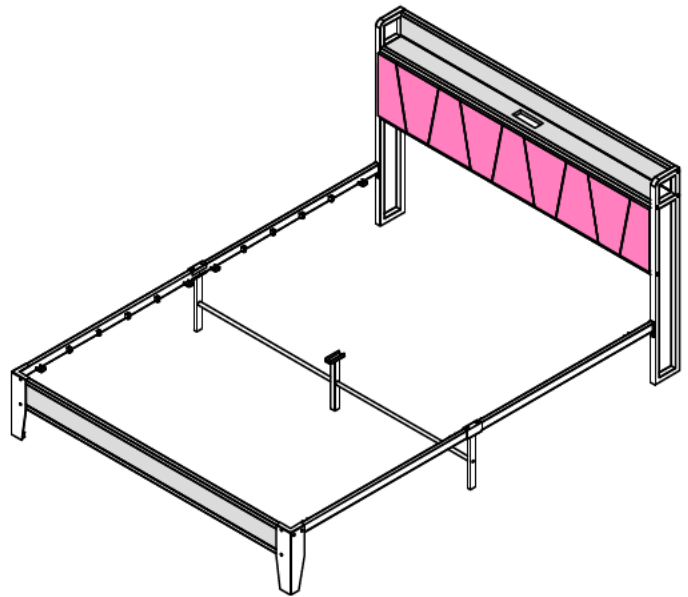
Step 4

D		M6 x 35	2pcs
E		M6 x 50	4pcs
H		4 #	1pcs







Step 5

B		M6 x 15	4pcs
F		M8 x 35	4pcs
H		4 #	1pcs




Step 6

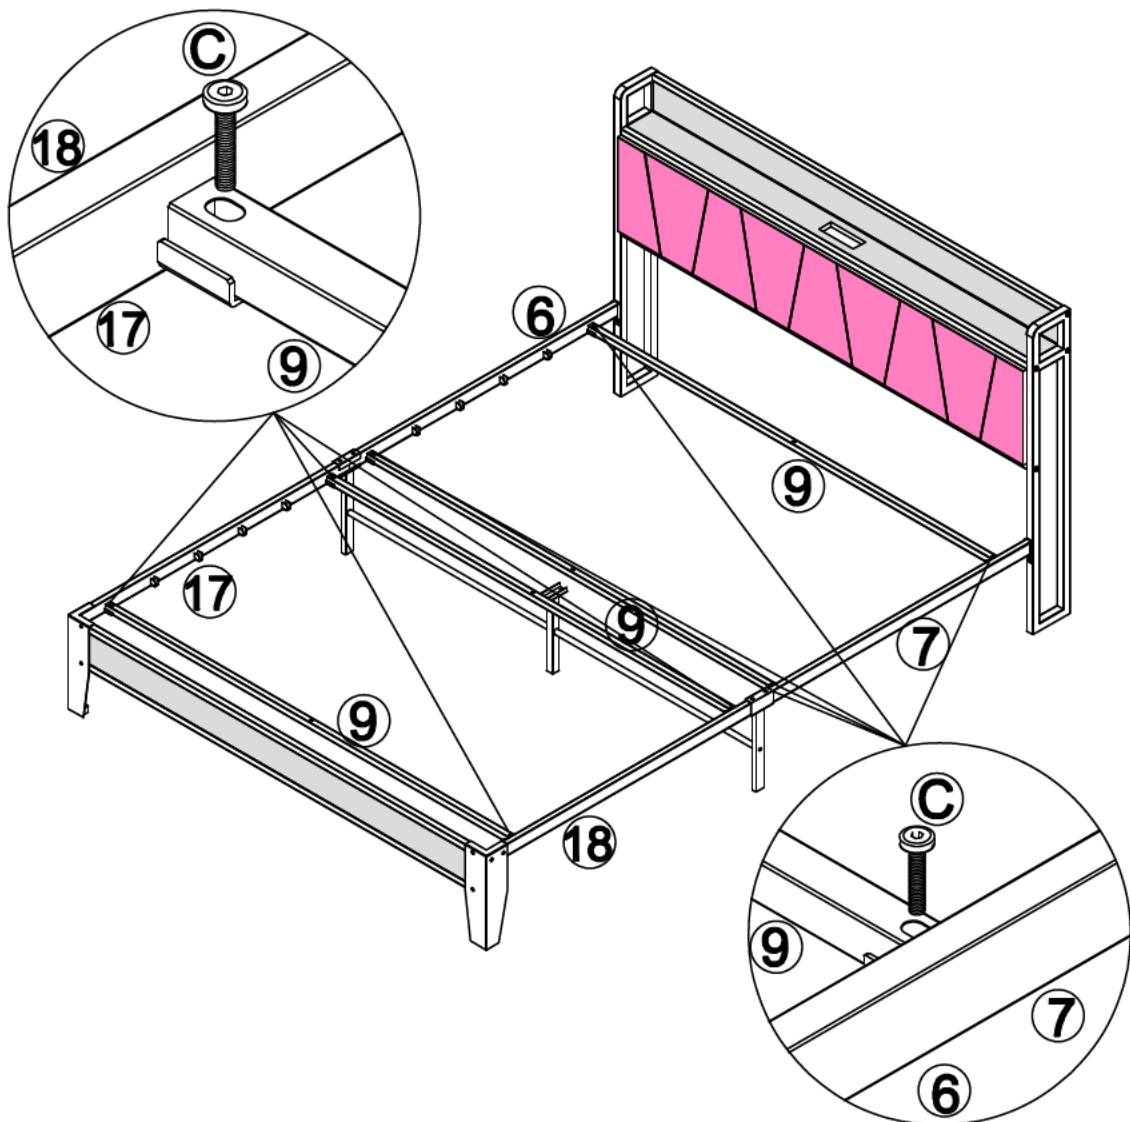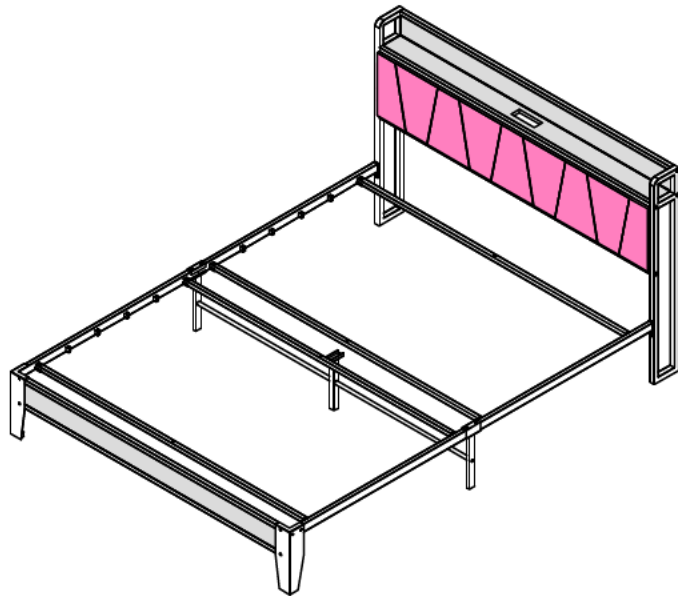


C		M6 x 25	8pcs
H		4 #	1pcs




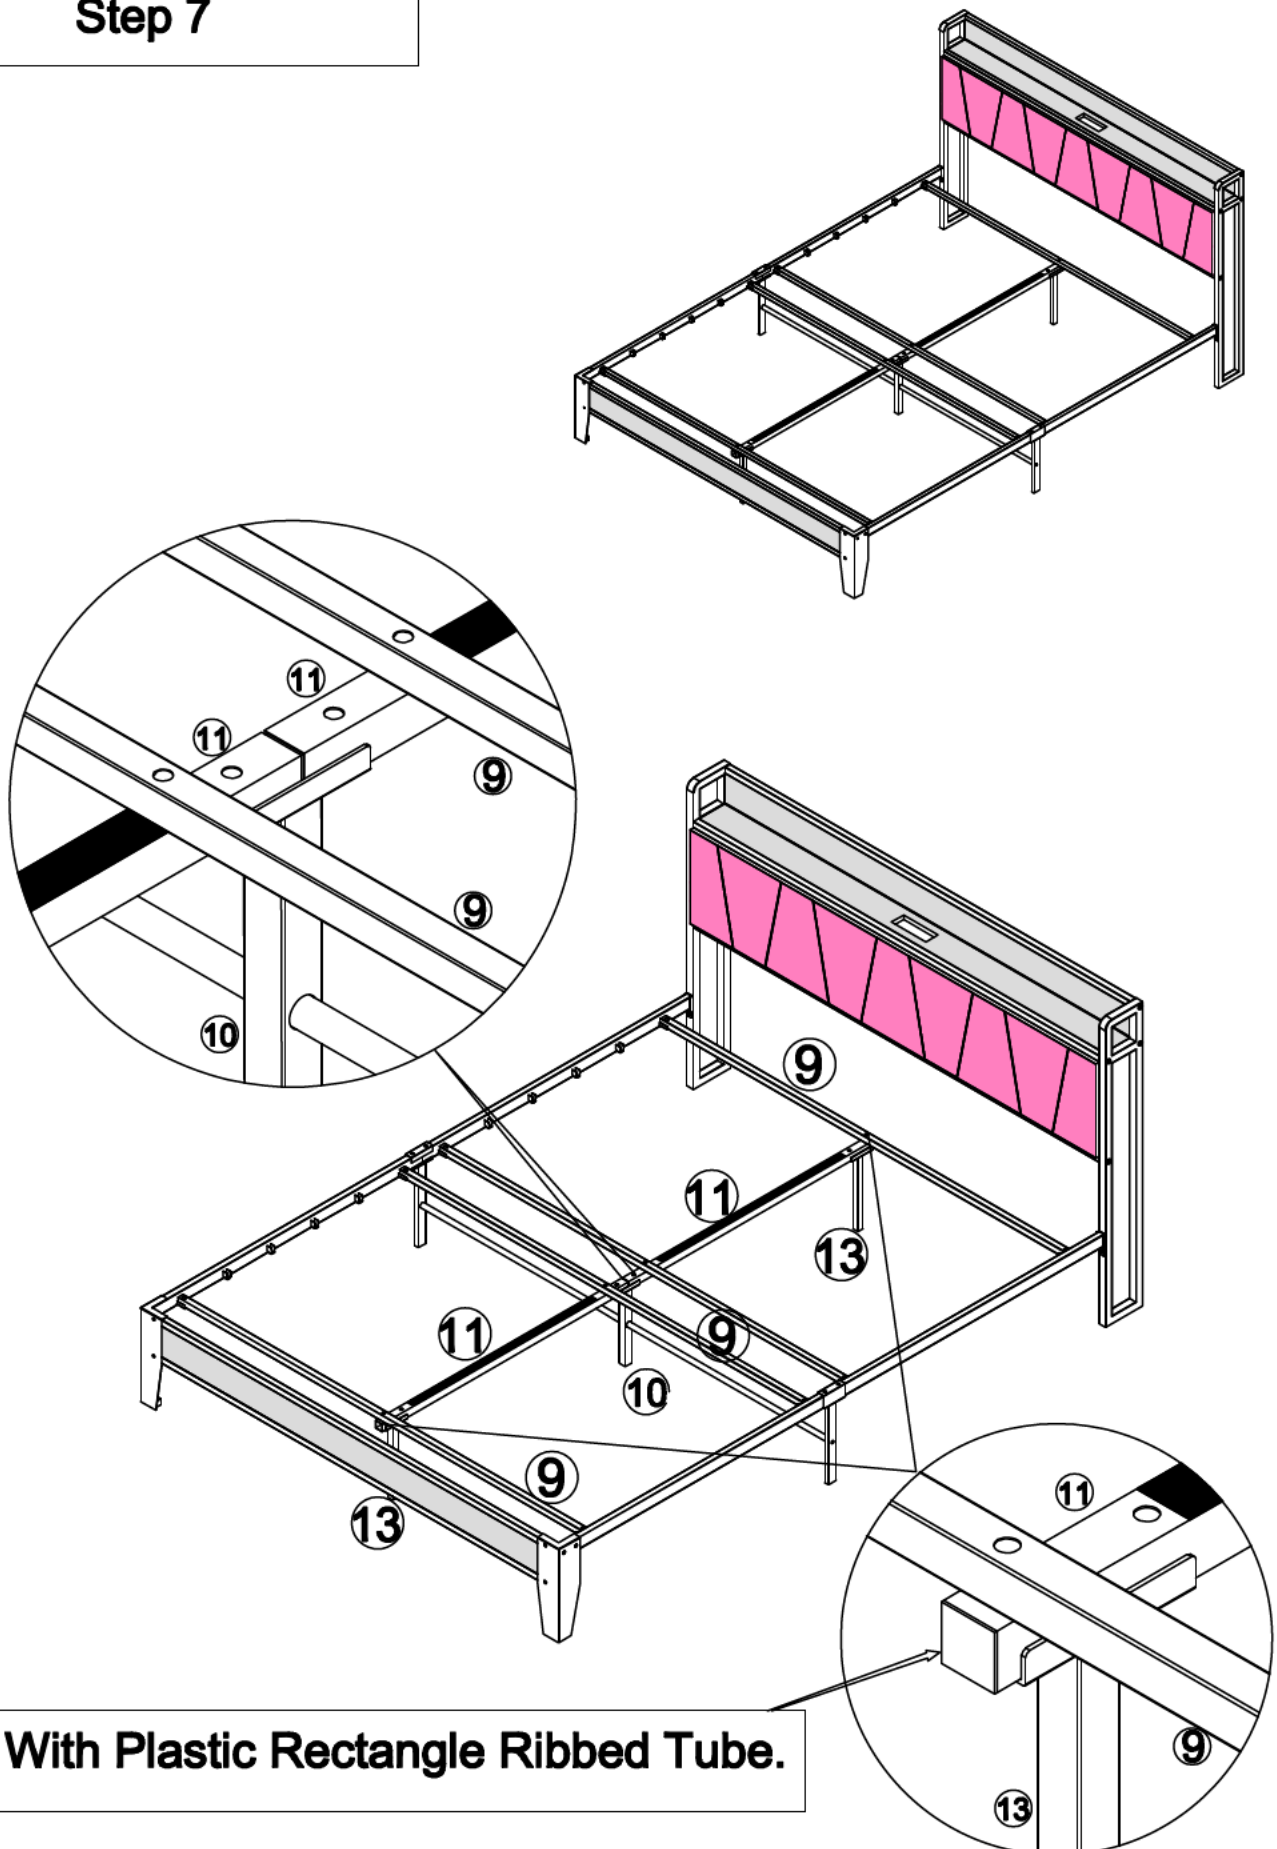


Step 7







Step 8

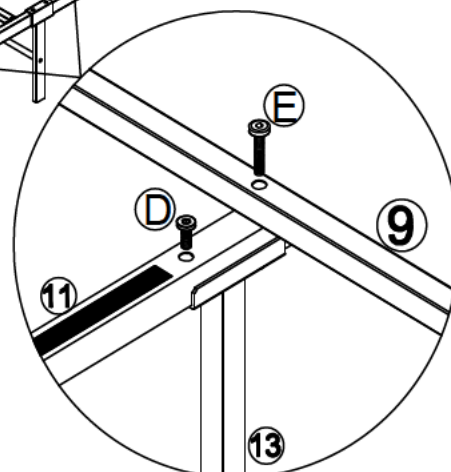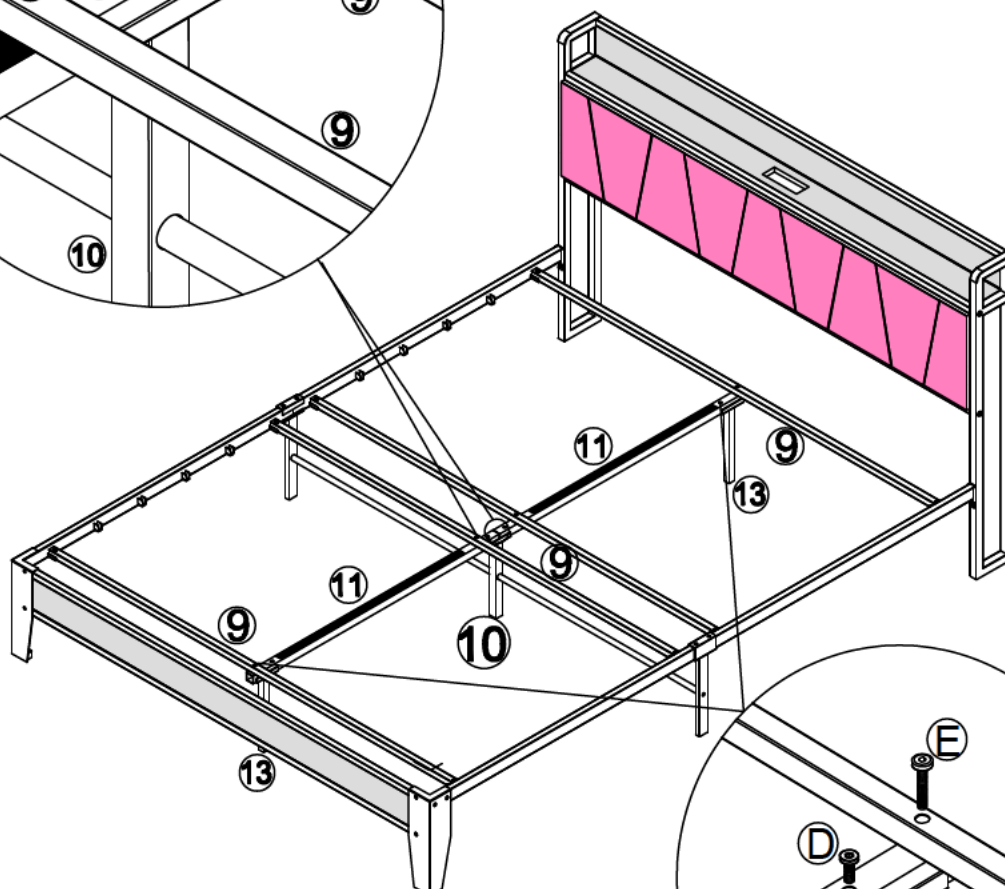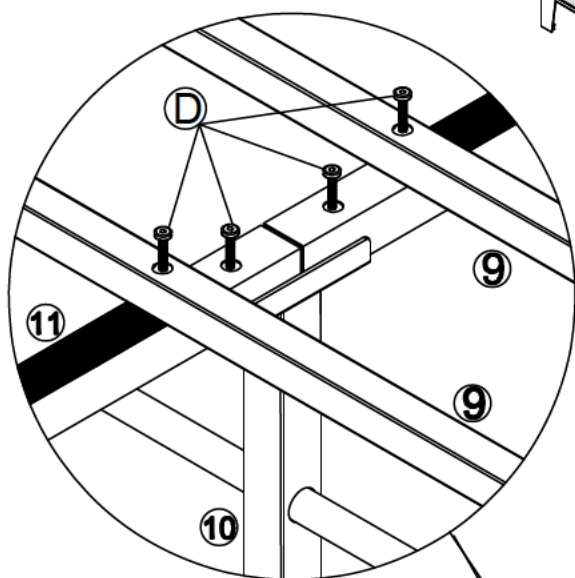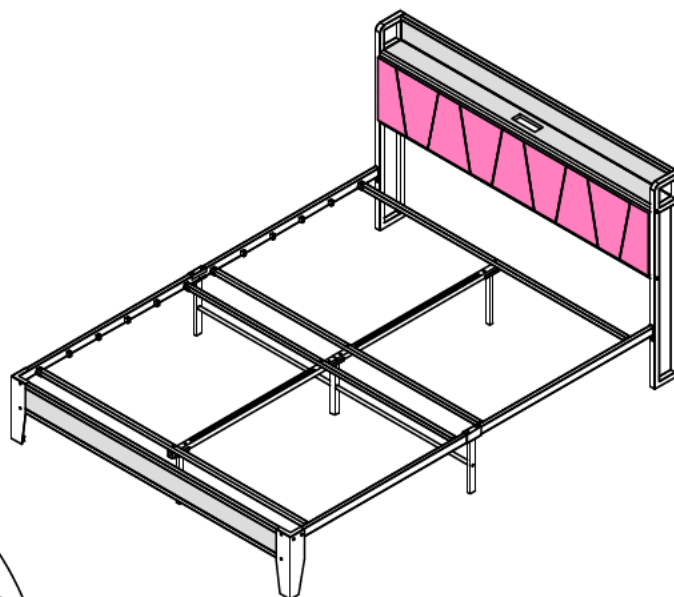


D		M6 x 35	6pcs
E		M6 x 50	2pcs
H		4 #	1pcs

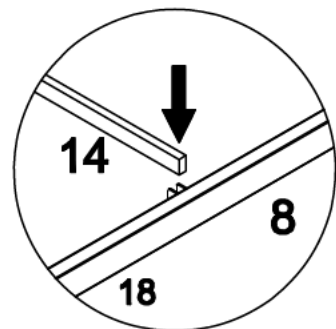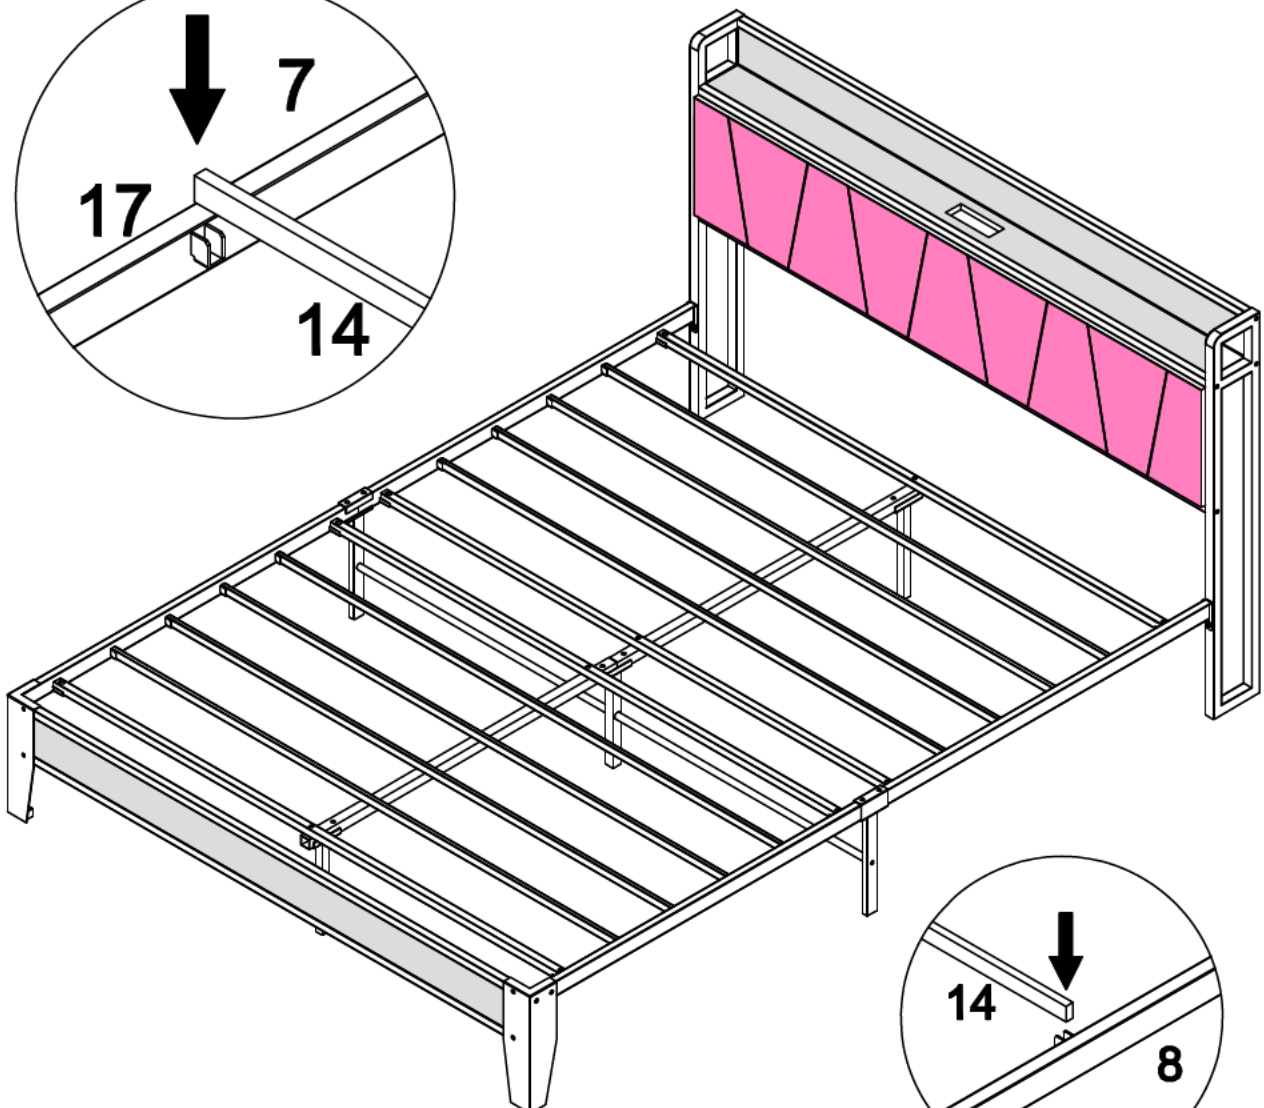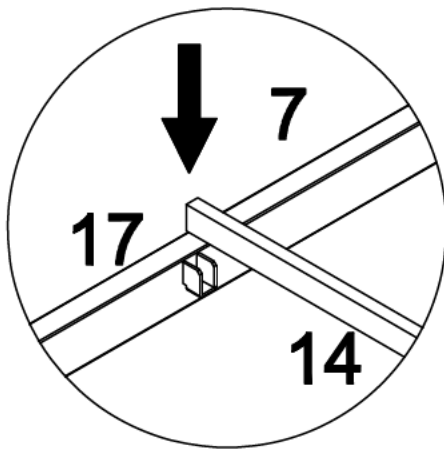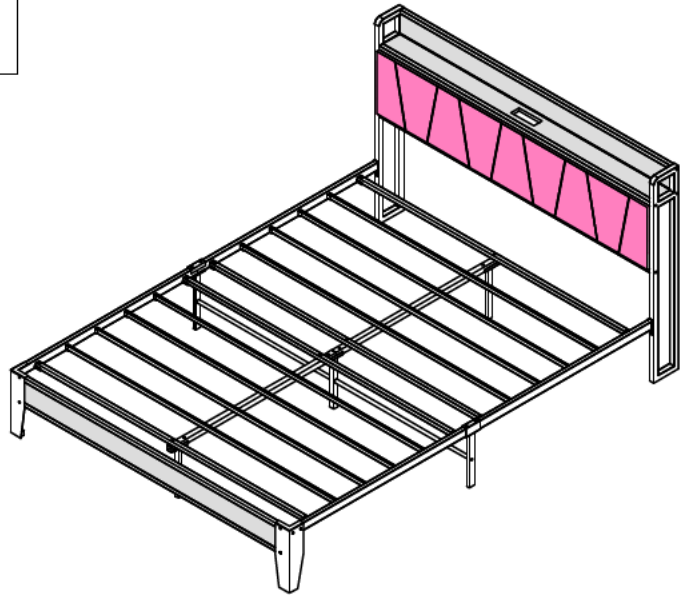

Step 9



Step 10

G		Ø3 x 10	2pcs
I			1pcs
J		4 #	1pcs

