



Bar Stool with Back

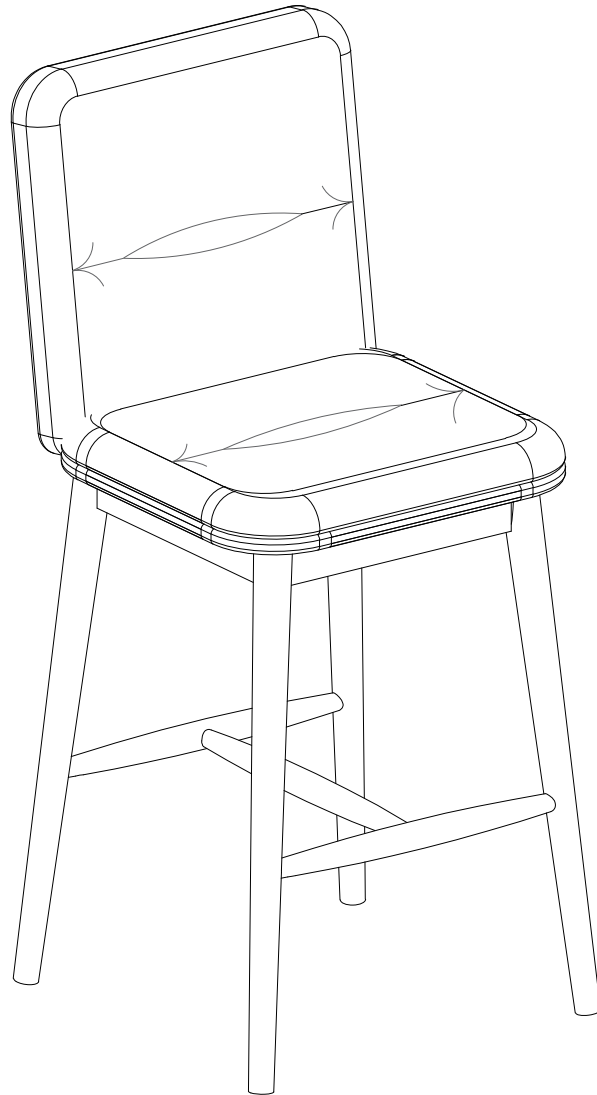


Installation Diagram

Product Name: Bar Stool with Back

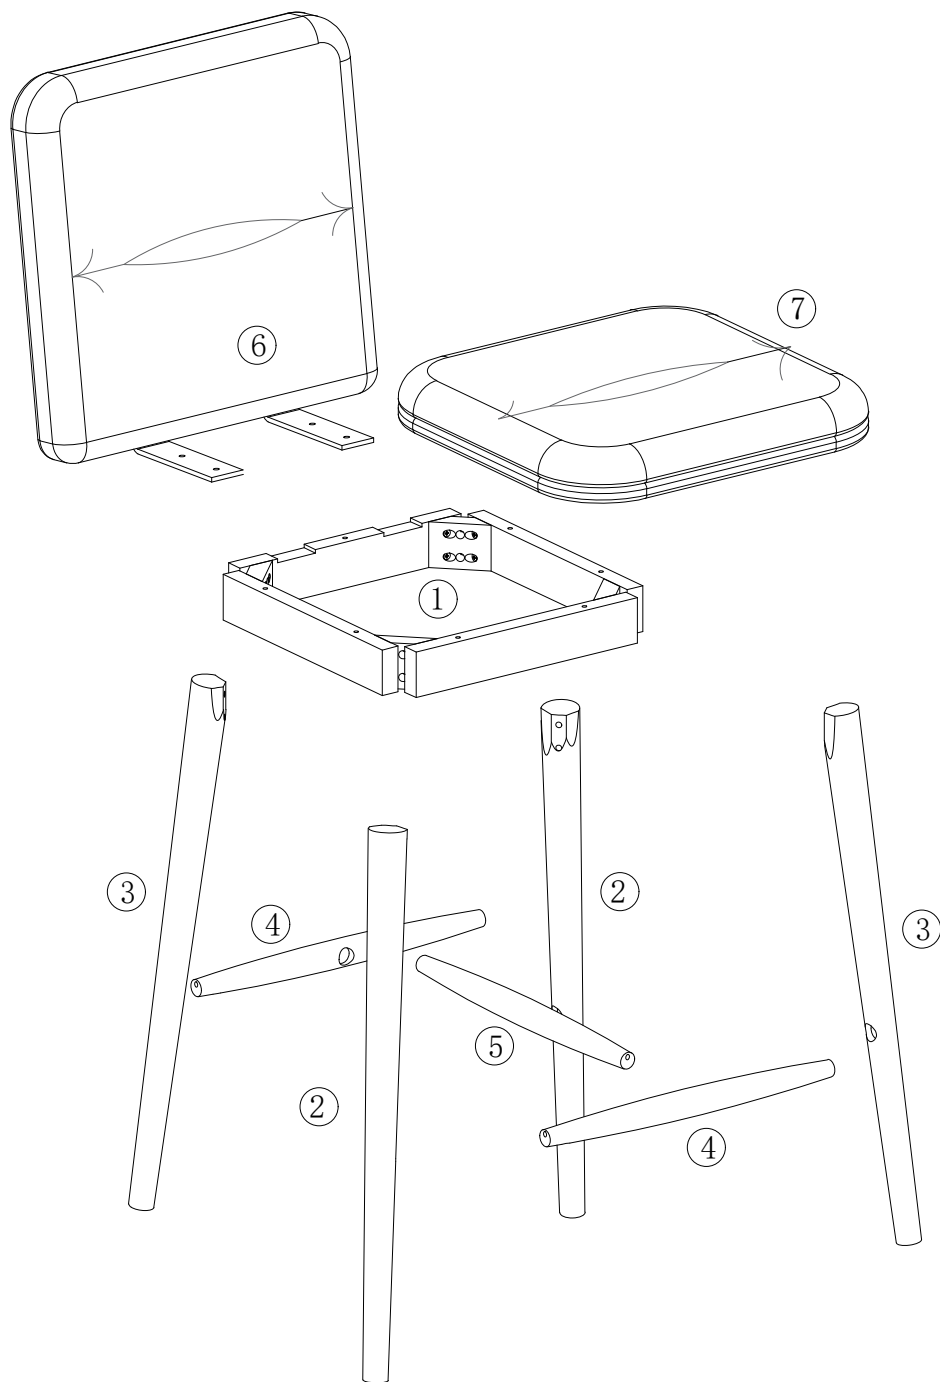


Parts List

①

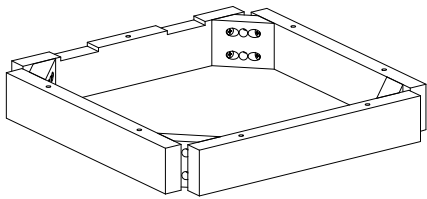


Seat Frame 1 - 1 PC

②

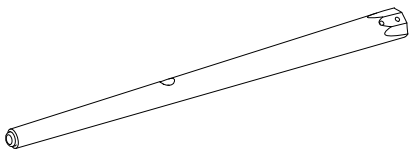


Leg Frame 1- 2 PCS

③

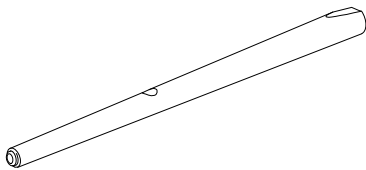


Leg Frame 2- 2 PCS

④

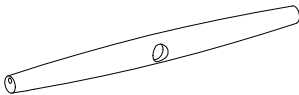

Front & Rear Stretchers - 2 PCS

⑤

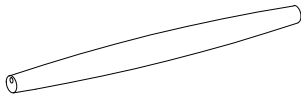


Center Stretcher - 1 PC

⑥



Backrest – 1 PC


⑦

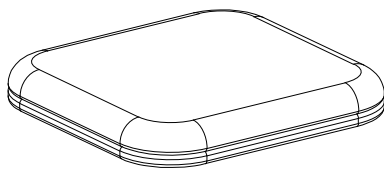

Seat Frame 2 - 1 PC

Hardware List

A

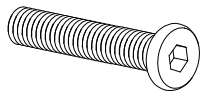


Hex Socket Cap Screws (M6*50M) - 8+1PCS

B




Flat Washer (M6*16MM) - 8+1PCS

C

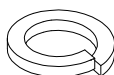


Lock Wahsers (M6)– 8 + 1PCS

D

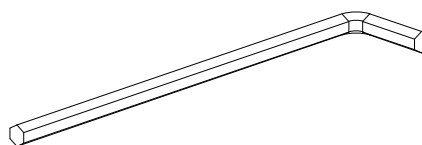


Hex Wrench (M4*100MM)- 1PC

E

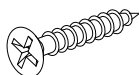


Flat Head Self-Tapping Screw(#8*30MM) - 13+2PCS

F

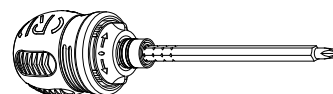


Multi-Function Ratcheting Screwdriver(M6*136MM) - 1PC

G

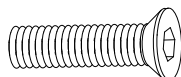

Hex Socket Cap Screws (M6*20MM) - 4+1PCS



H

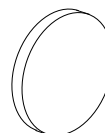

Felt Pads(20*3MM) - 4PCS





- Use the correct screws for each step
- Incorrect screw sizes may cause the wood to crack

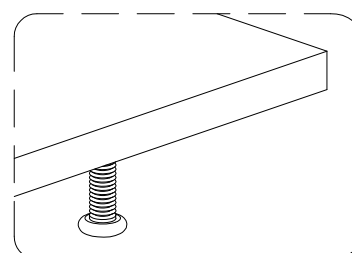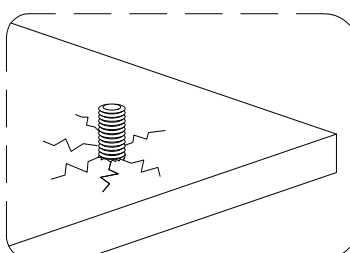

Bar Stool with Back



Step 1

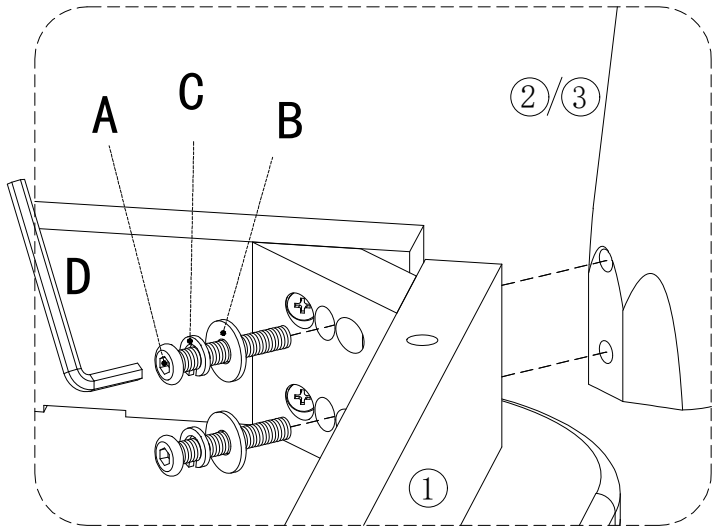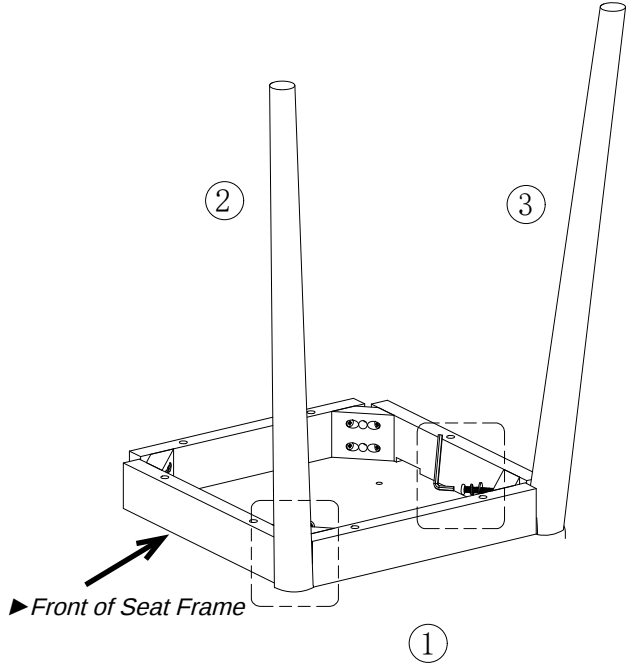

- Connect parts 2 to parts 3
- Secure them using screws (Hardware A,B,C,D)
- Do not fully tighten the screws at this stage

A		X4
B		X4
C		X4
D		X1

Step 2

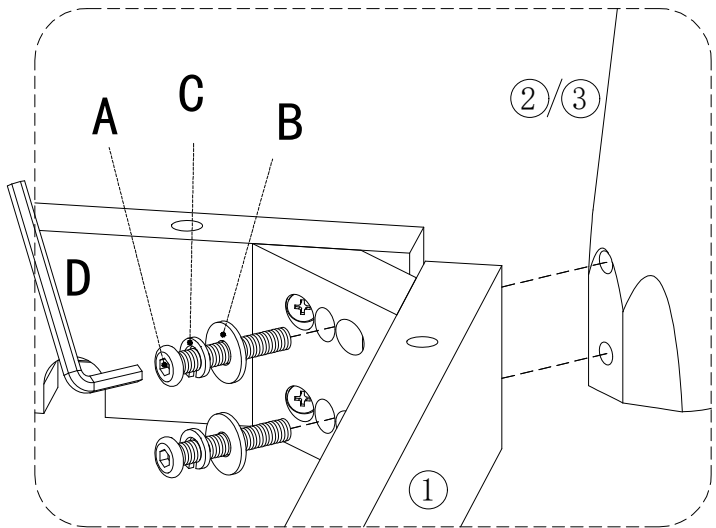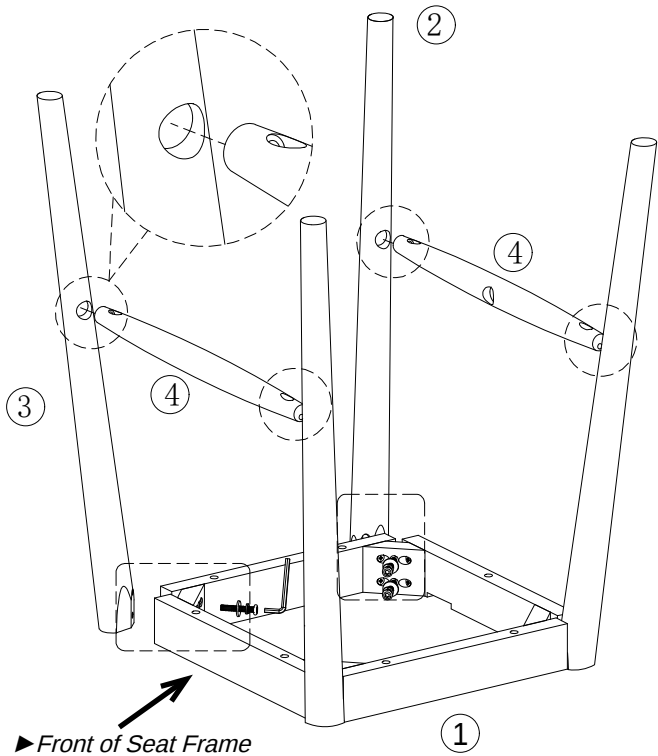


- Connect parts 2 to parts 3
- Secure them using screws (Hardware A,B,C,D)
- Do not fully tighten the screws at this stage

A		X4
B		X4
C		X4
D		X1


Bar Stool with Back

Step 3

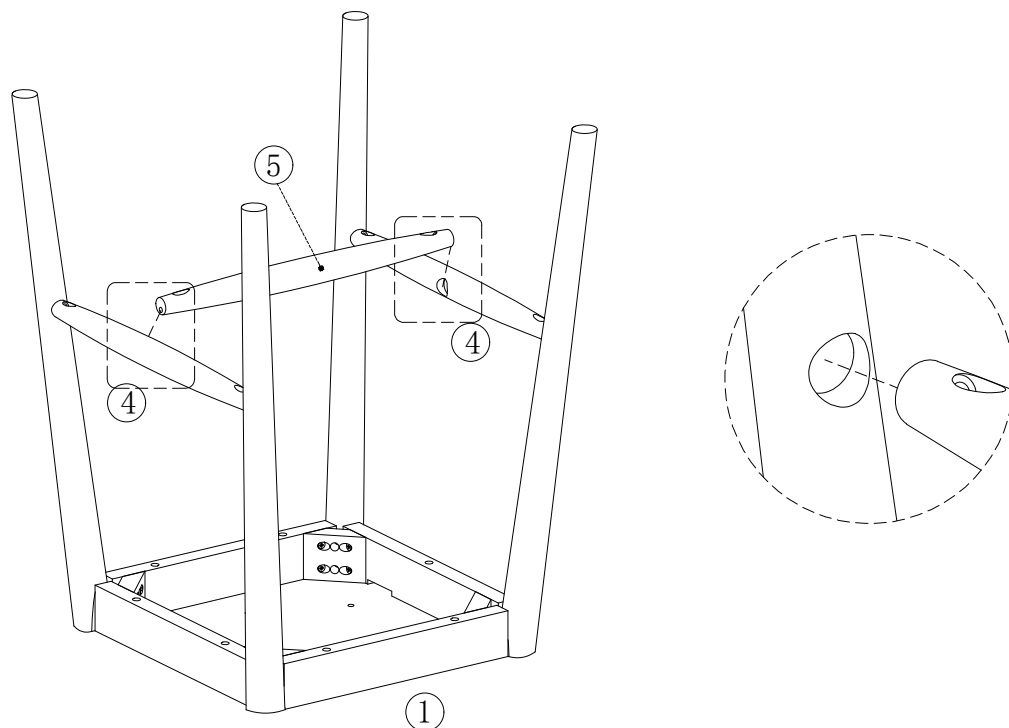

- Insert parts into the assembly from **Step 2**

Step 4

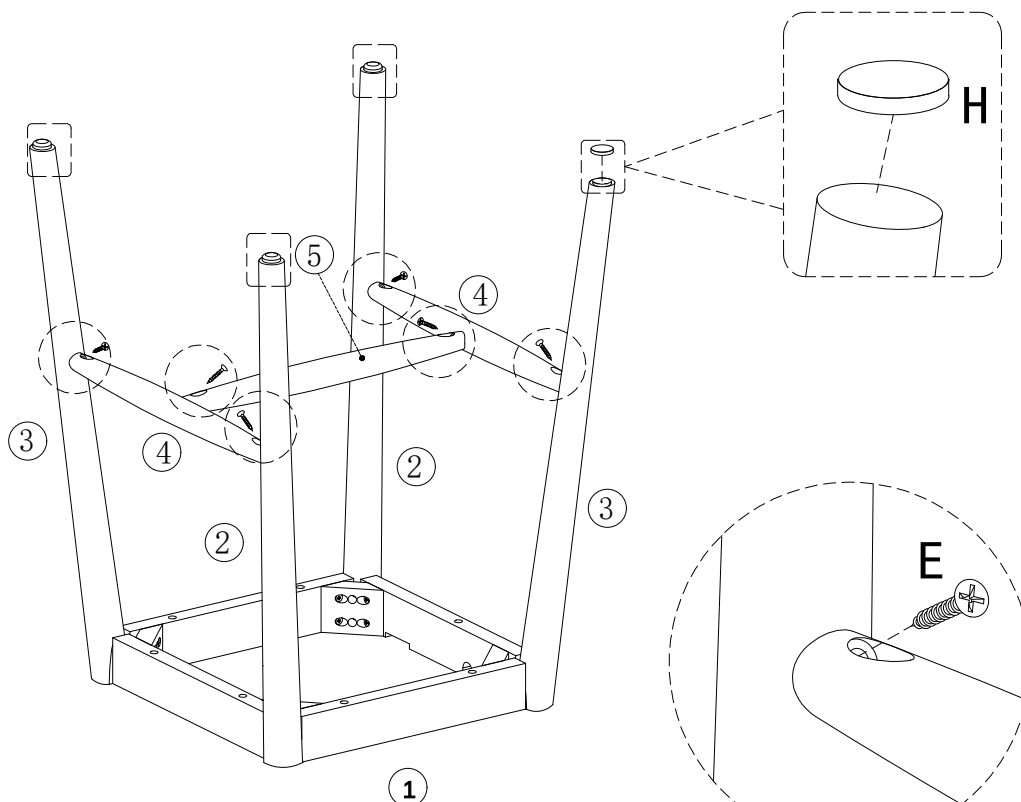


- Attach the screws to the assembly from **Step 3** (Hardware E,F)
- Tighten all screws installed in the previous steps
- Attach Felt Pads (Hardware H) to the bottom of leg

H		X4
E		X6
F		X1

Bar Stool with Back


Step 5

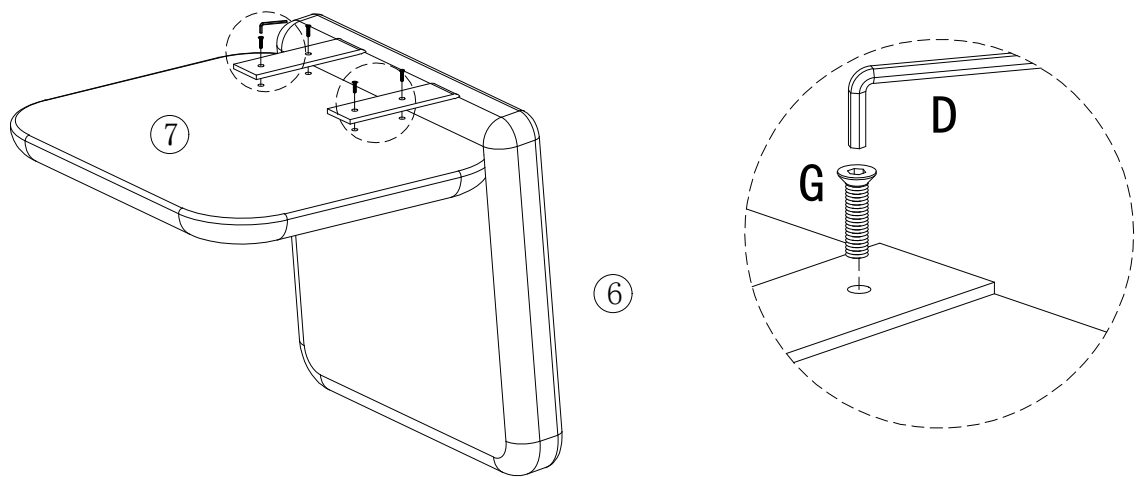

- Connect parts ⑥ to parts ⑦
- Secure them using screws (Hardware G,D)

G		X4
D		X1

Step 6

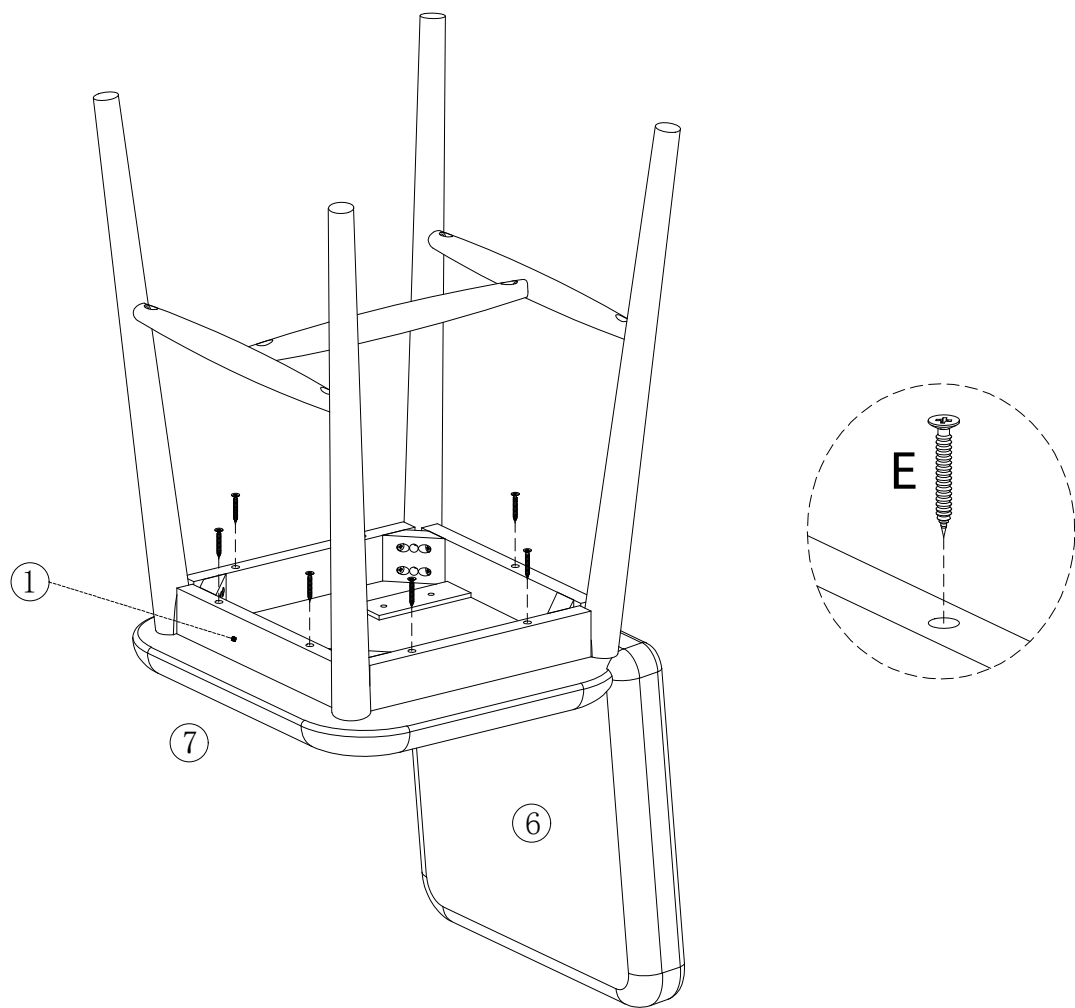


- Connect the assembly from **Step 4** to the assembly from **Step 5**
- Secure them using screws (Hardware E,F)

E		X7
F		X1

Bar Stool with Back

Step 7

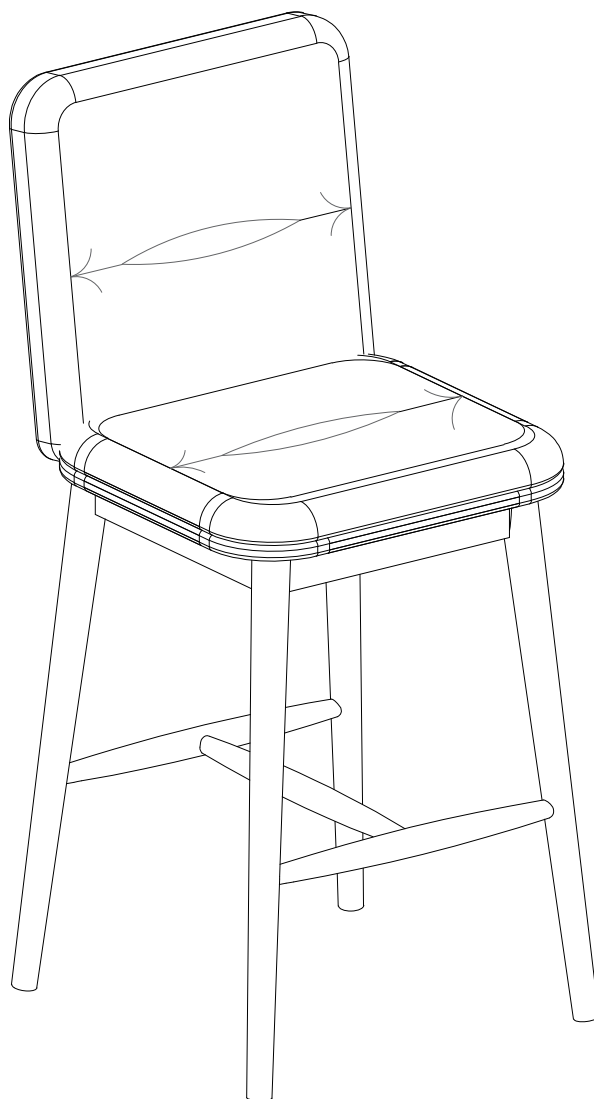

- Assembly Complete
- Once assembly is complete, fully tighten all screws