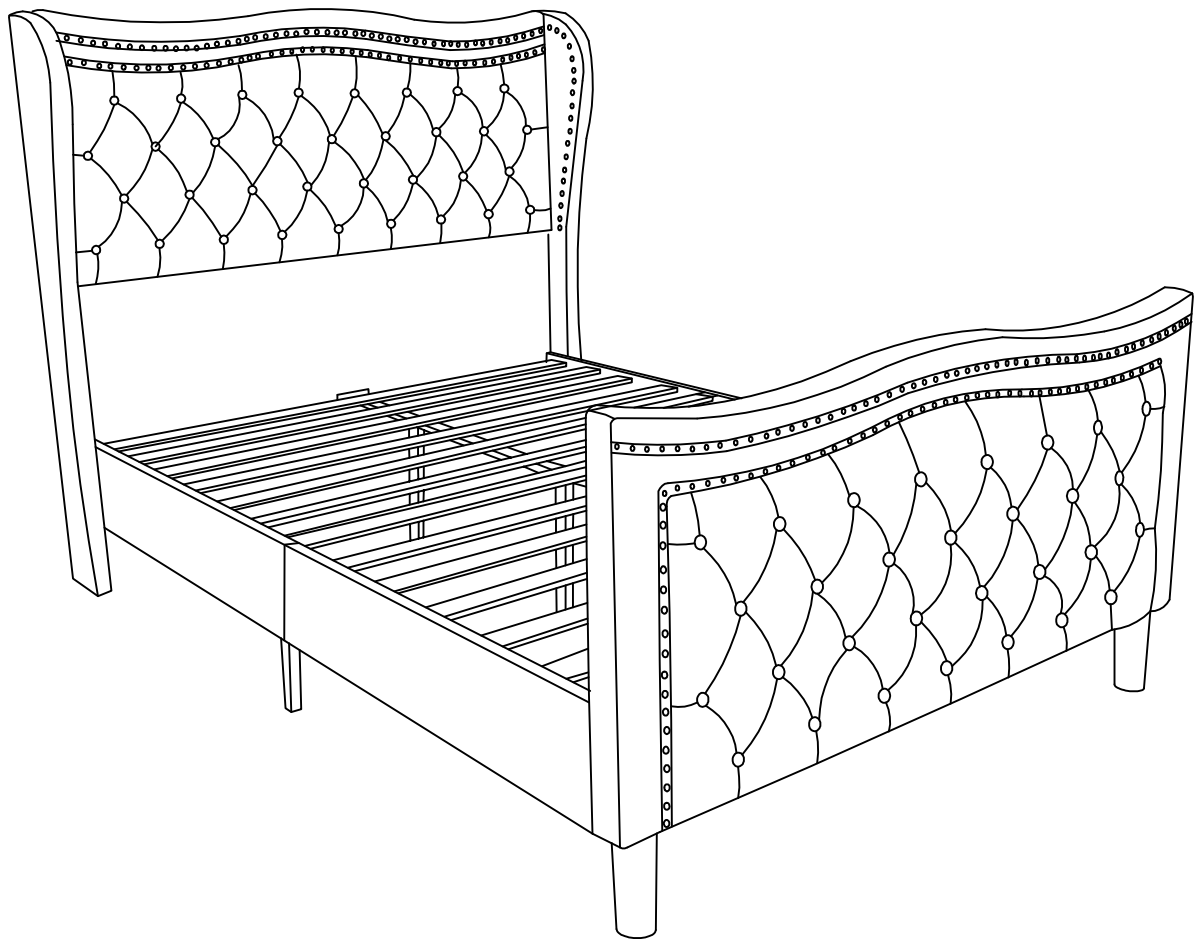


ASSEMBLY INSTRUCTIONS

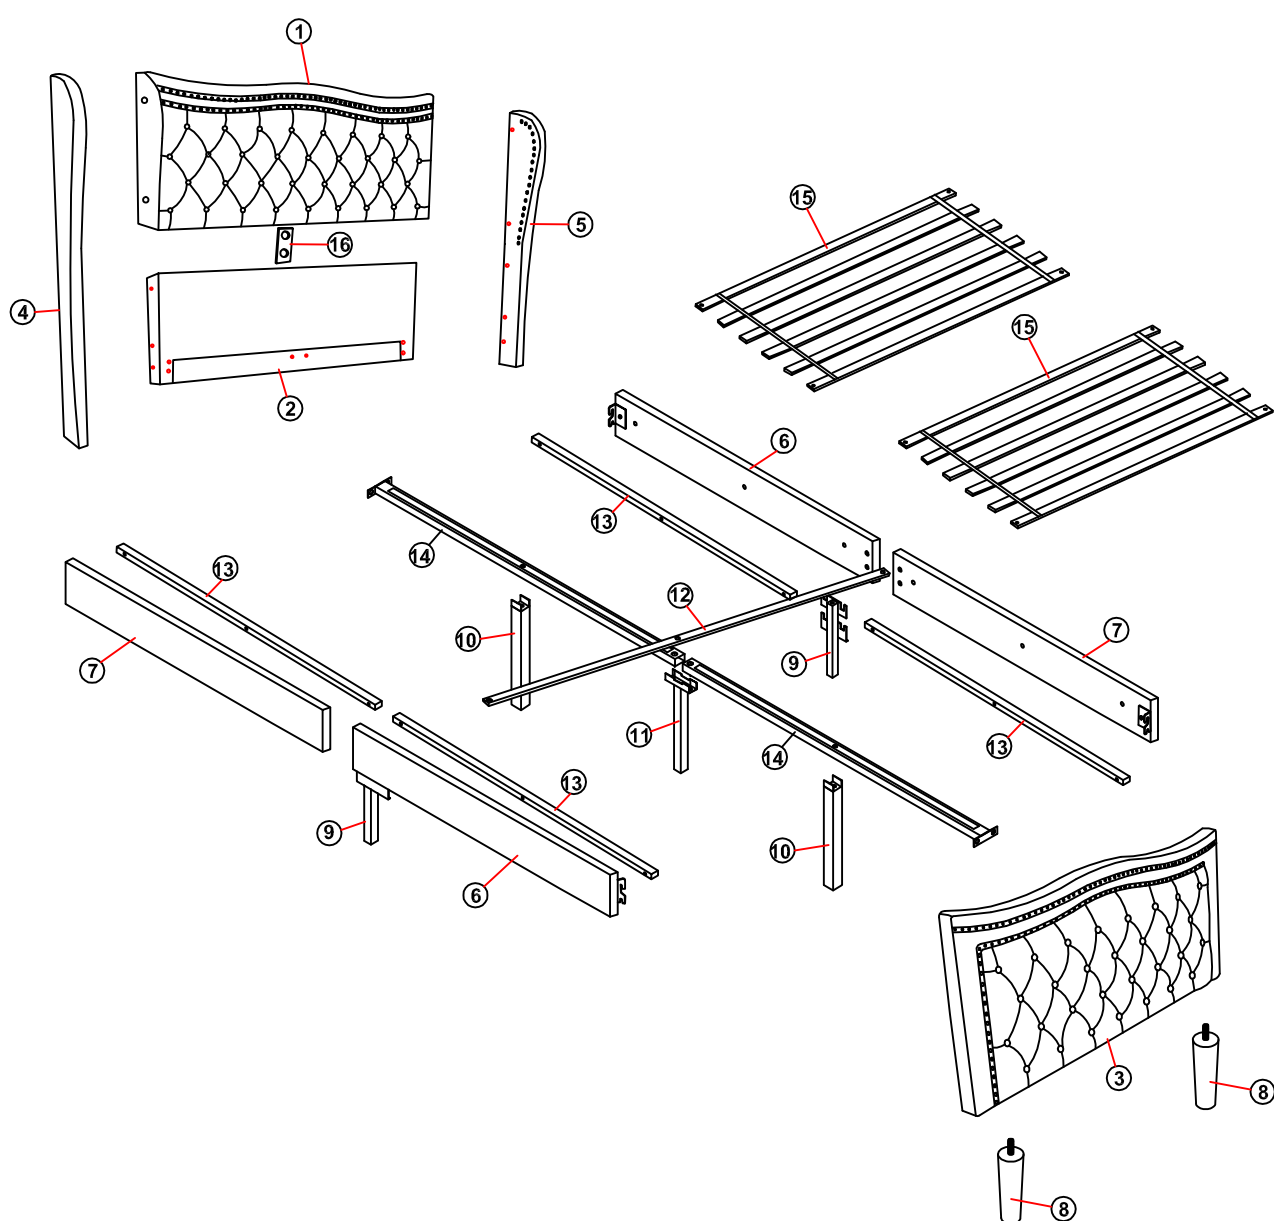
ITEM NO. **FB1021YY-Q/F**
















IMPORTANT NOTE:

- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE CHAIR IS FULLY SET-UP.


Explosive view







Parts List

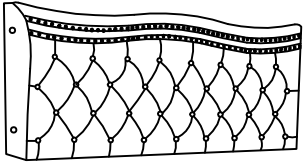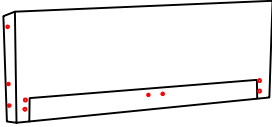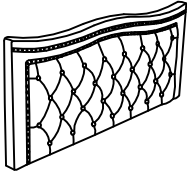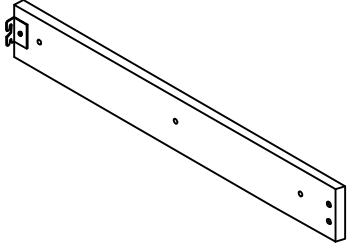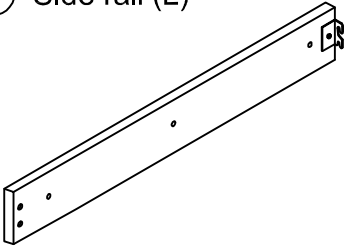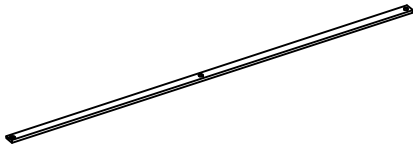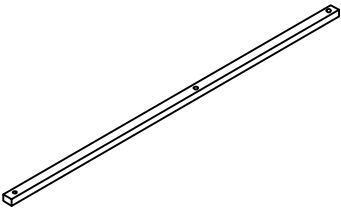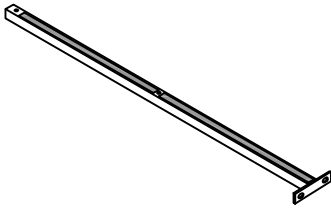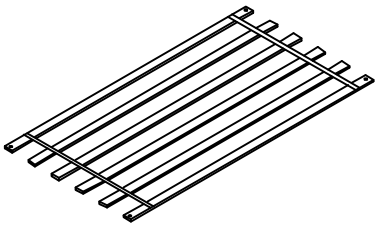① Headboard Panel (TOP)  1PC	② Headboard Panel (Dwon)  1PC	③ Footboard  1PC
④ Headboard Ear (L)  1PC	⑤ Headboard Ear (R)  1PC	⑥ Side rail (R)  2PCS
⑦ Side rail (L)  2PCS	⑧ Footboard feet  2PCS	⑨ Side rail feet  2PCS
⑩ Support let  2PCS	⑪ Center support let  1PC	⑫ Center crossband  1PC
⑬ Side rail support  4PCS	⑭ Center support rail  2PCS	⑮ Slats  2PCS


Parts List

①6 Connecting iron 	1PC
---	-----

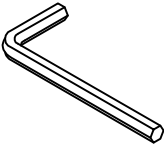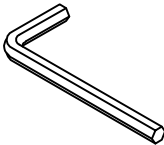
Hardware List

A  Ø5/16"×25mm 14+1PCS	B  Ø5/16"×40mm 17+1PCS	C  Ø1/4"×15mm 8+1PCS
D  Ø1/4"×38mm 12+1PCS	E  Ø5/16"×13 31+1PCS	F  Ø5/16"×19 31+1PCS
G  Ø1/4"×16 20+1PCS	H  M4×25 8+1PCS	I  Ø5/16" 1PC
J  Ø1/4" 1PC		

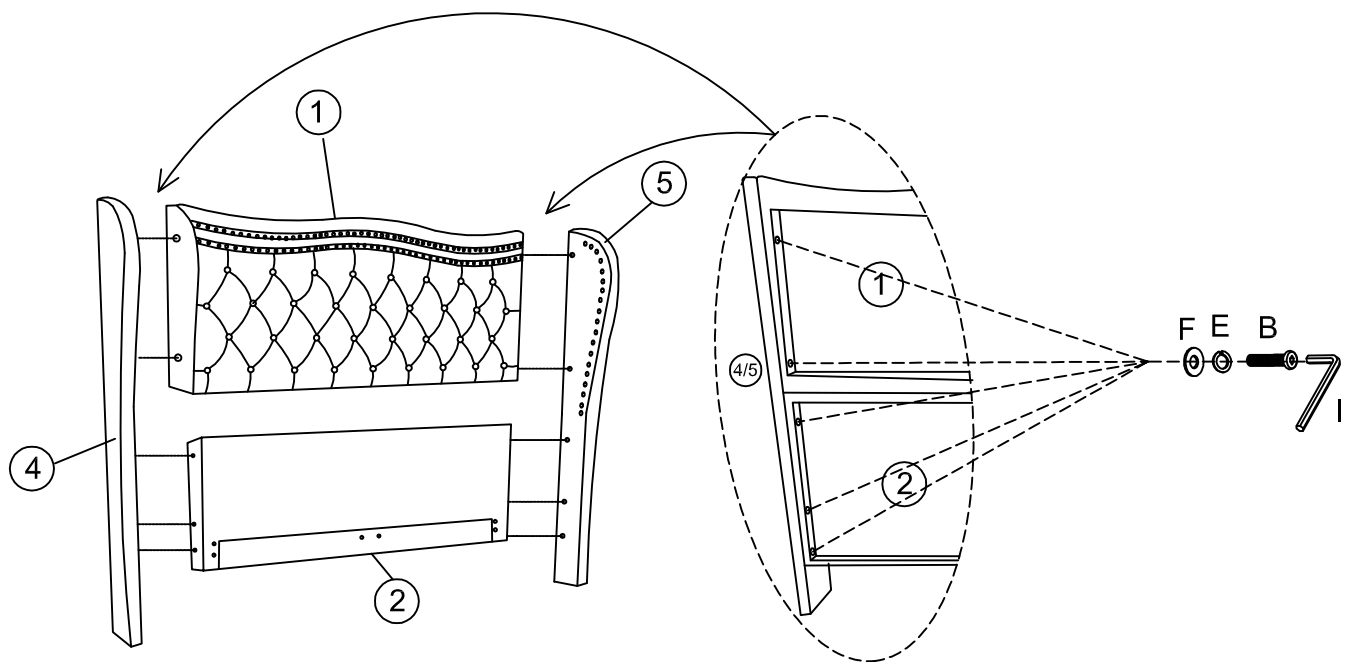
STEP 1



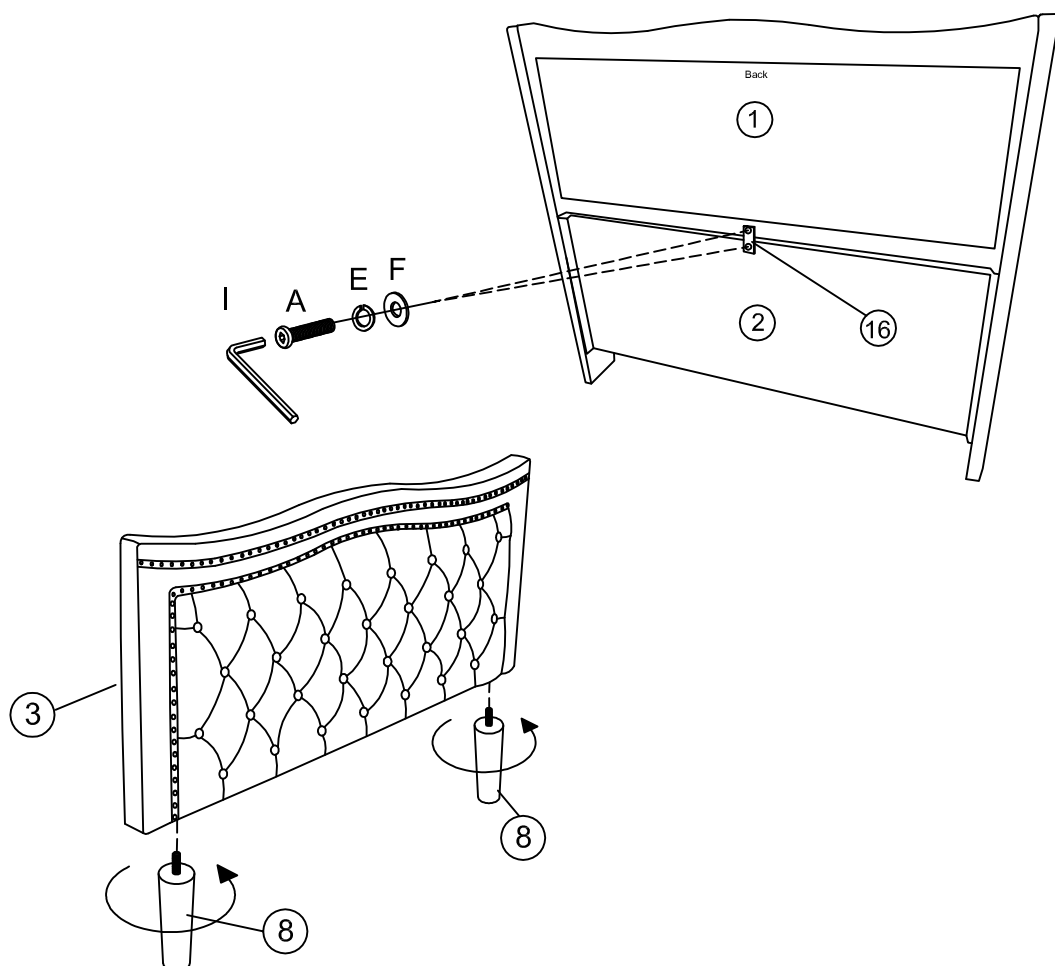
STEP 2



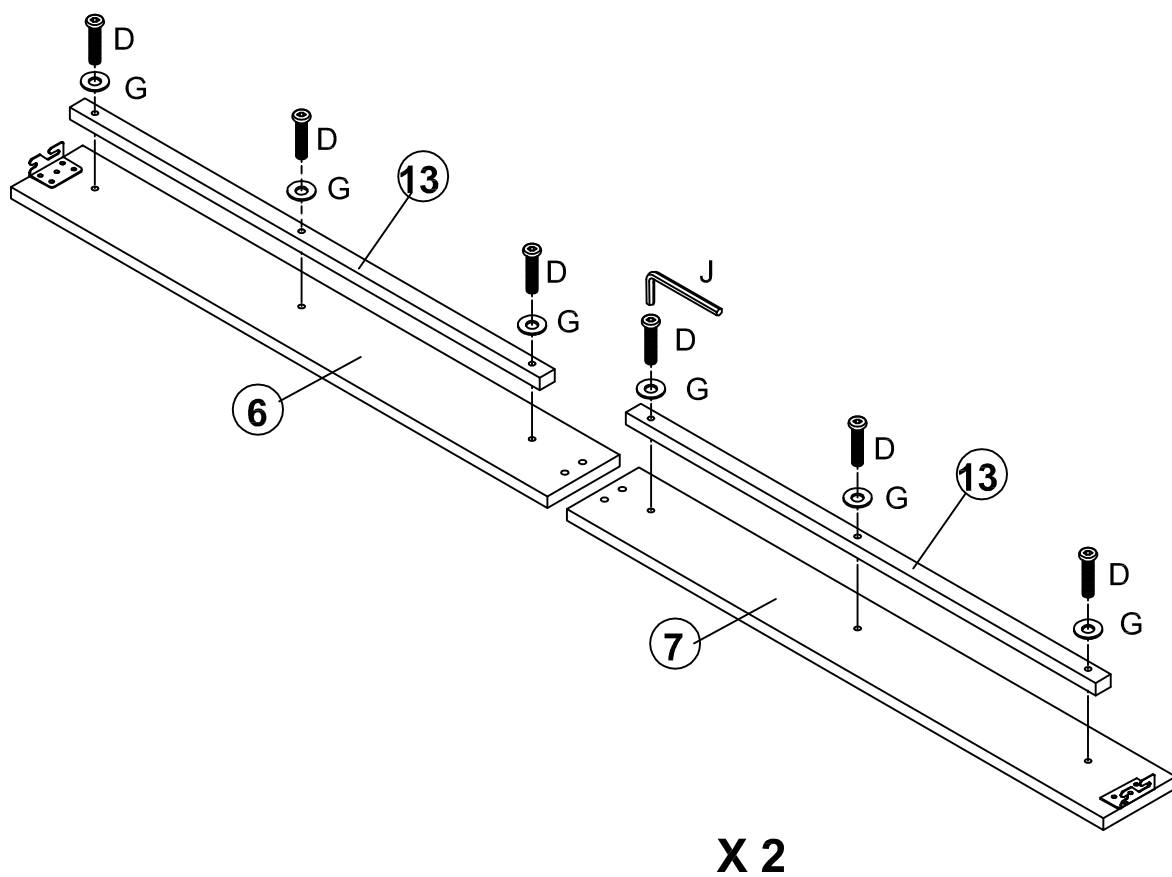
STEP 3



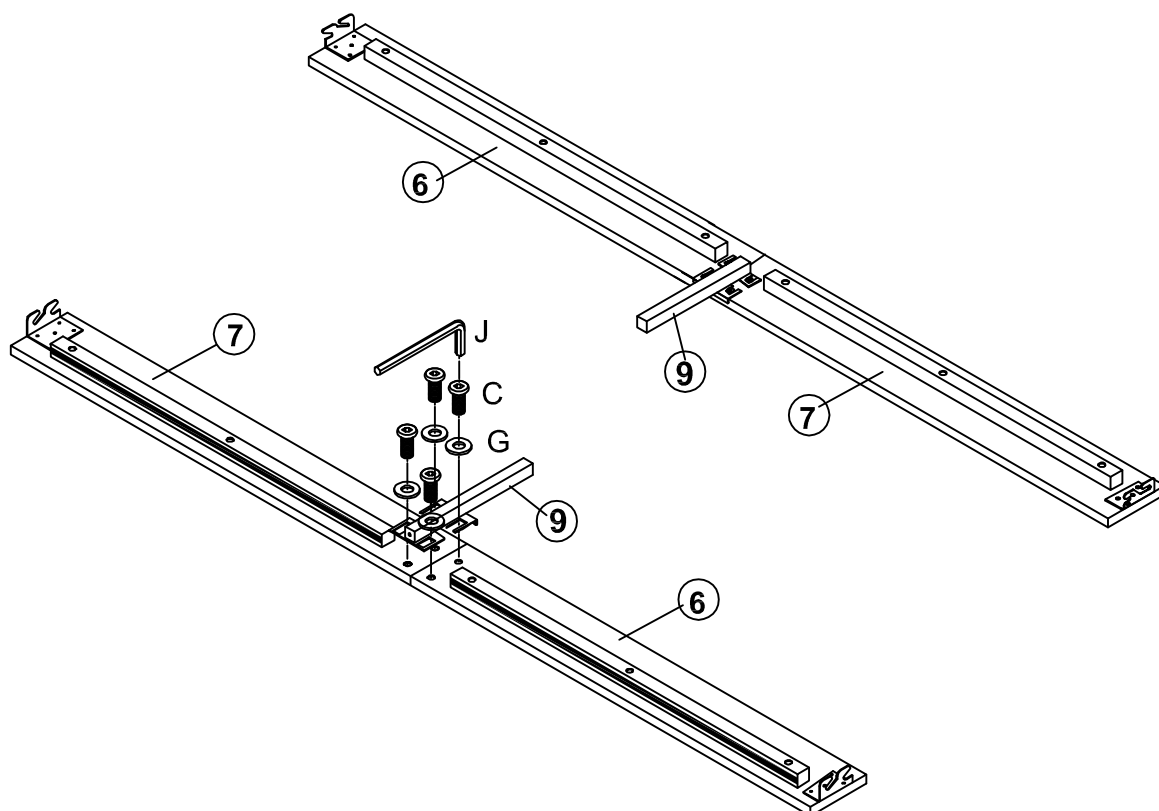
STEP 4



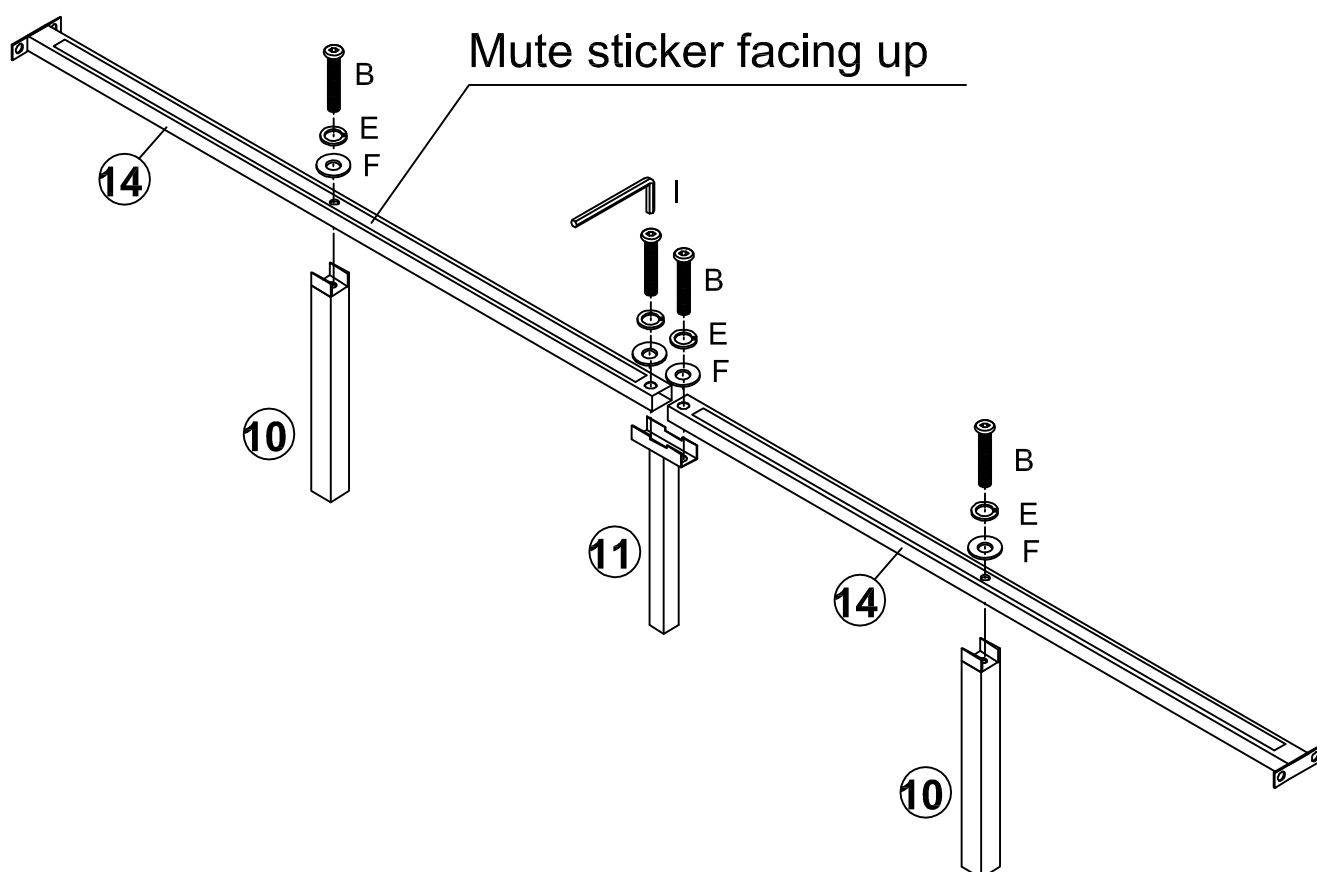
STEP 5



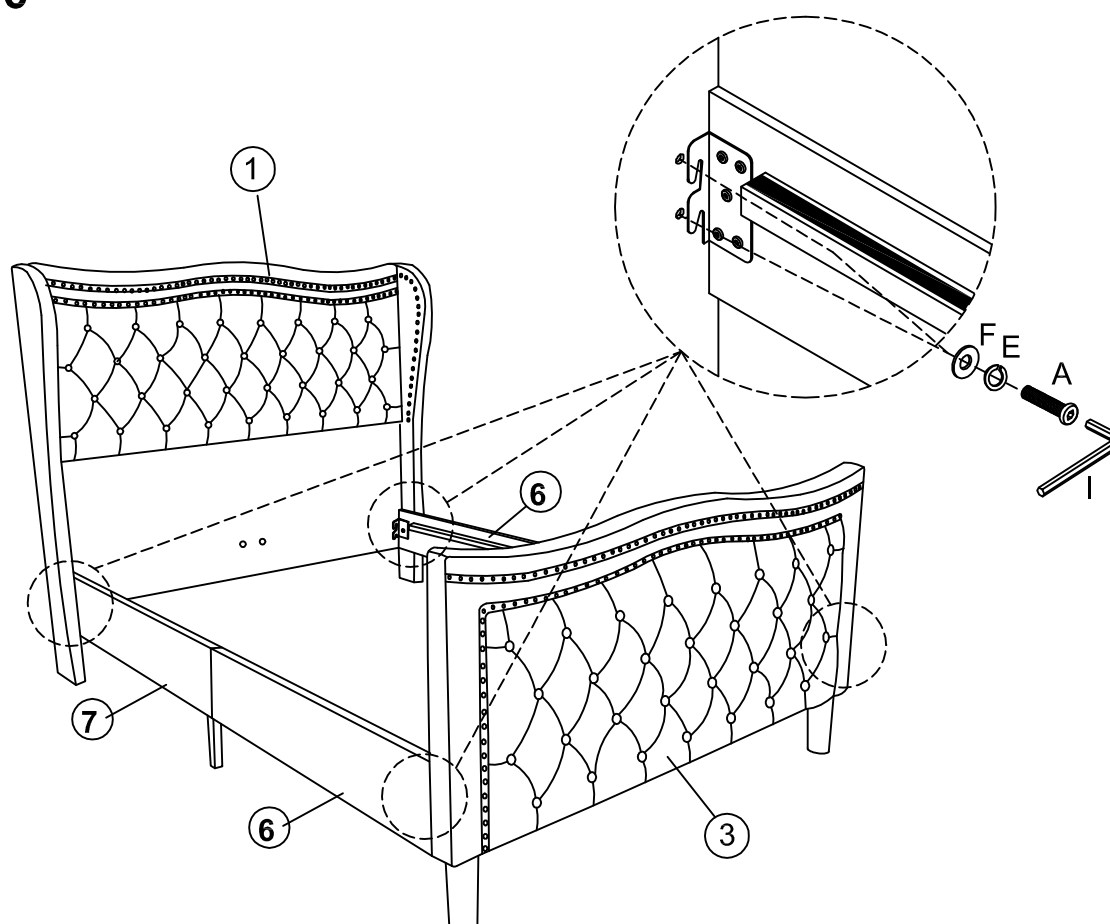
STEP 6



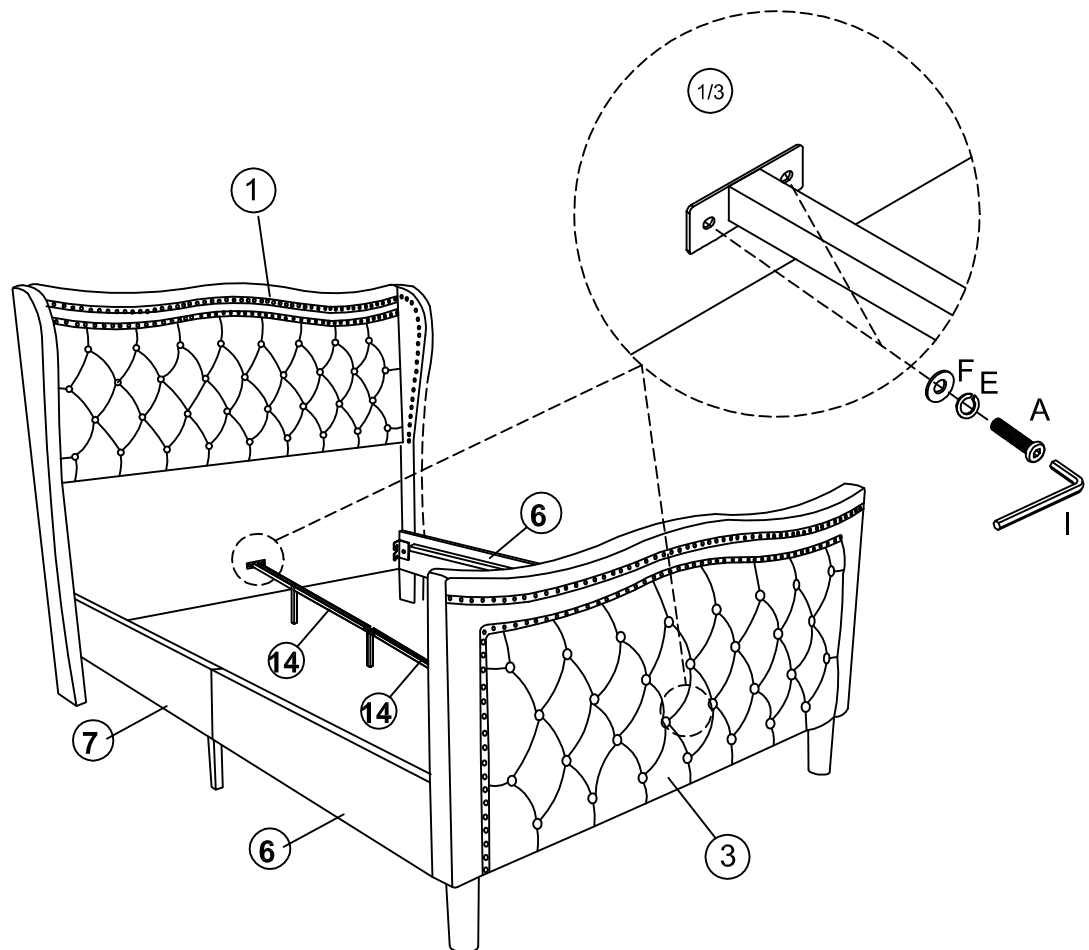
STEP 7



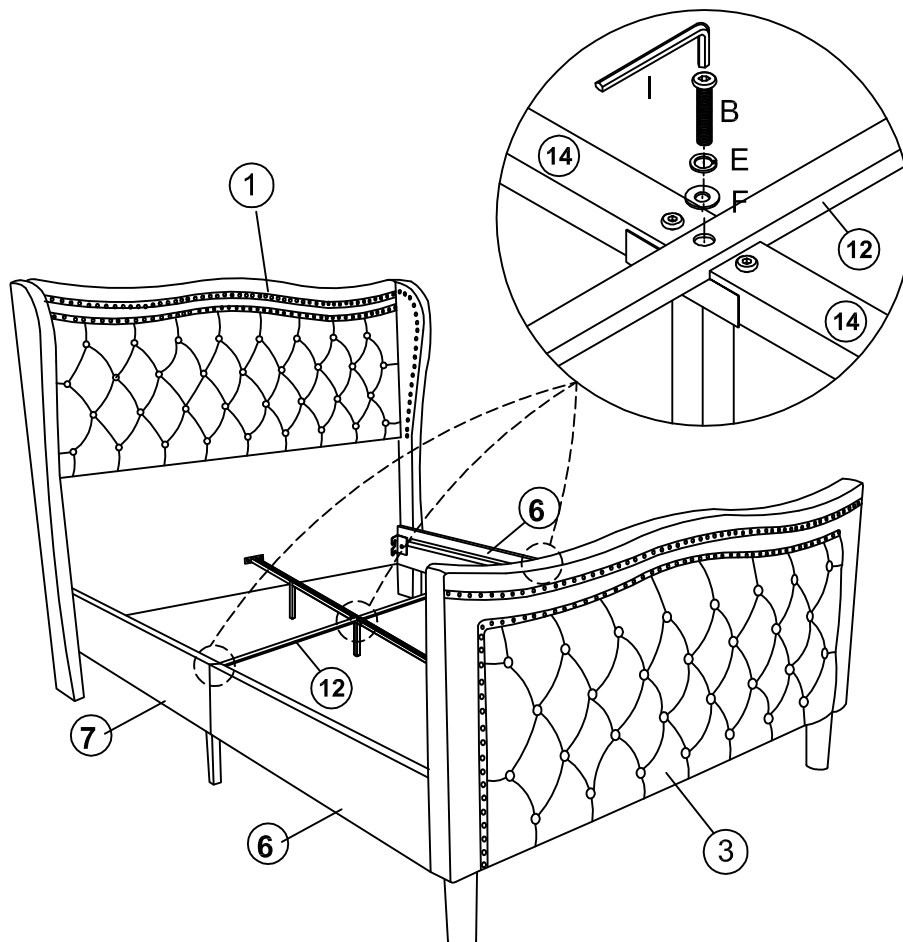STEP 8



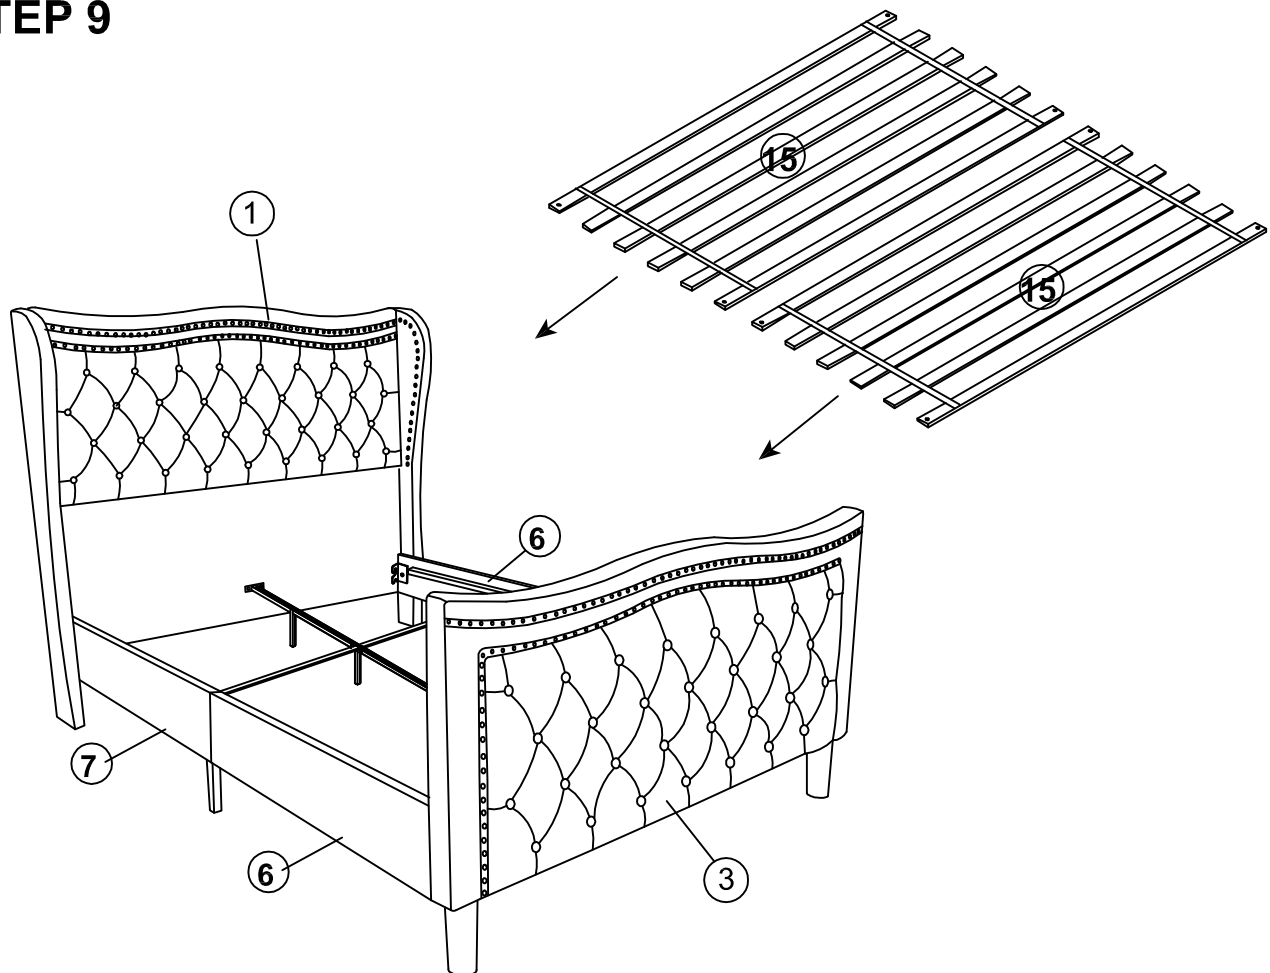STEP 9



STEP 10

