

ASSEMBLY INSTRUCTIONS

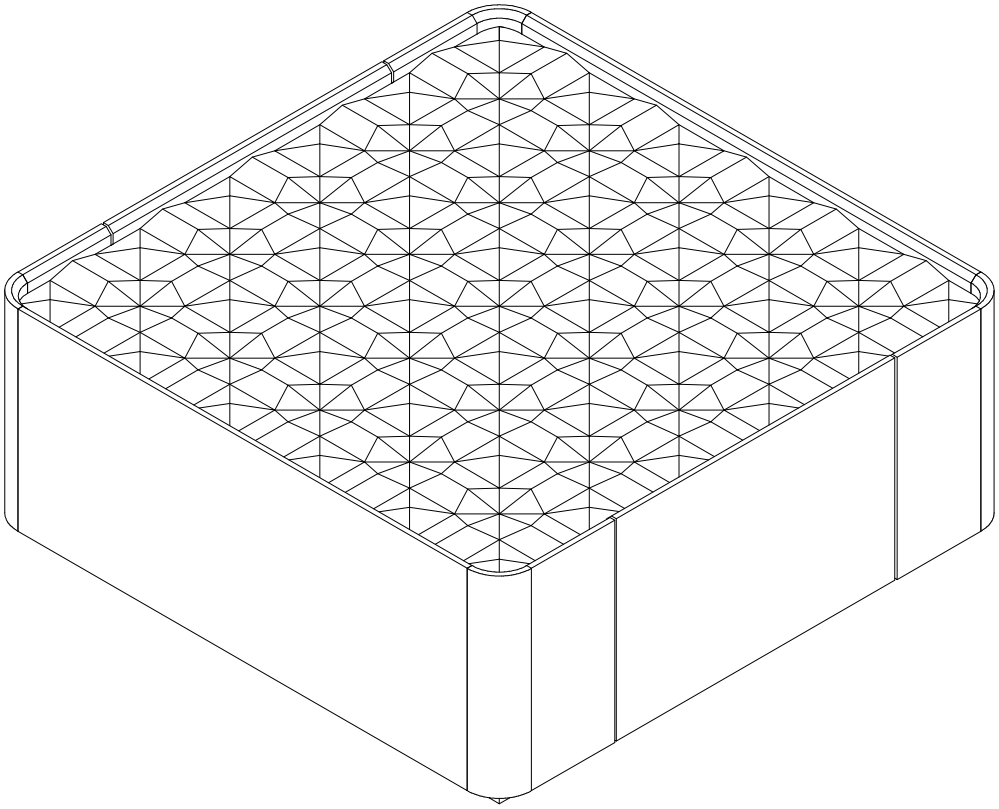

Before You Start

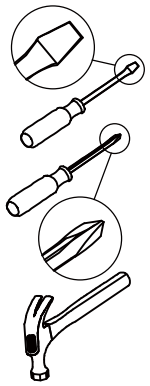


- Read through each step carefully and follow the proper order
- Separate and count all your parts and hardware
- Give yourself enough room for the assembly process
- Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. （Assembly speed can be increased by using electric screwdriver）

Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: **1-2**

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.



- Identify, sort and count the parts before attempting assembly.



- Compression dowels are lightly tapped in with a hammer.



- Slides are labeled with an **R** (right) and **L** (left) for proper placement.



- Make sure to always face the point on the top of the Cam Lock towards the outer edge.



- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.




-Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.

- Do NOT use harsh chemicals or abrasive cleaners on this item.


- Never push, pull, or drag your furniture.

Board Identification


Not actual size

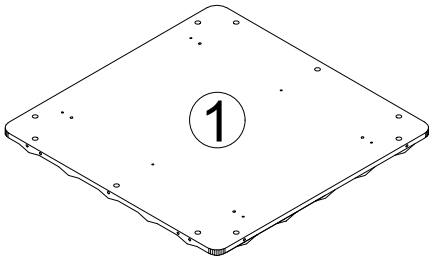


Qty:1

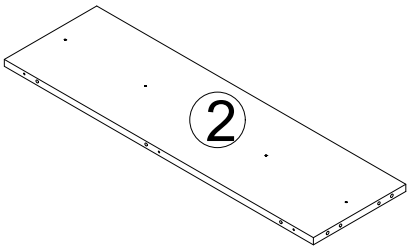


Qty:2

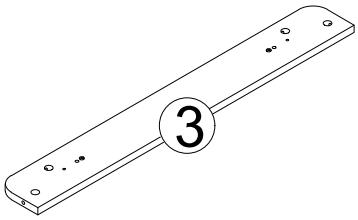


Qty:2

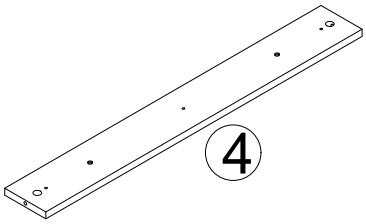


Qty:1

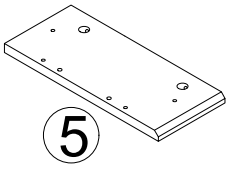


Qty:2

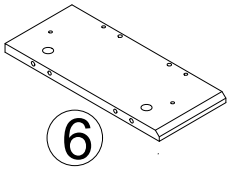


Qty:2

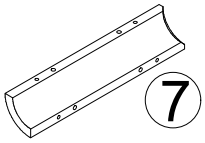


Qty:4

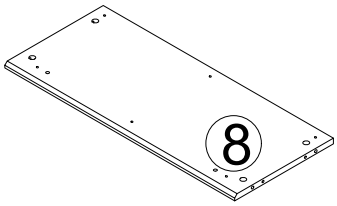


Qty:2

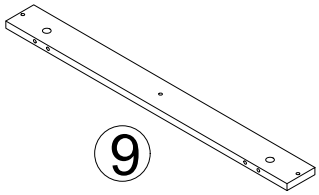


Qty:2

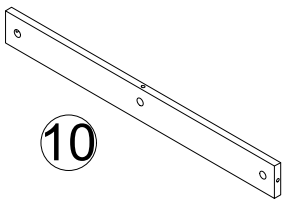

Qty:3

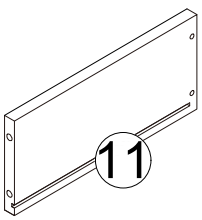


Qty:2

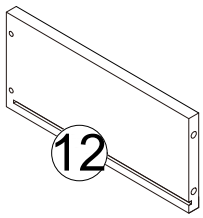


Qty:2

Board Identification


Not actual size

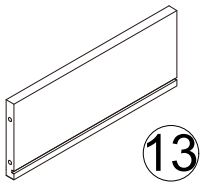


Qty:2

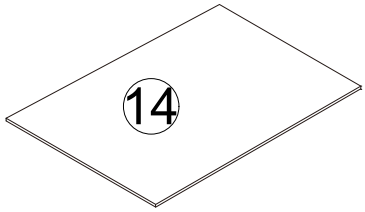

Qty:2

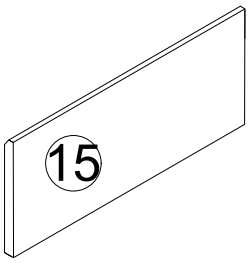


Qty:2

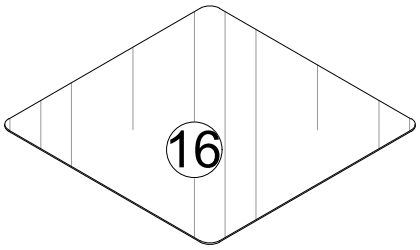

Qty:1

Part List




Ø6.5X35mm

A	X 71



Ø15X9.5mm

B	X 71




Ø8X25mm

C	X42




Ø3.5X12mm

D	X16



Ø4X30mm


E	X 14



F	X 4


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

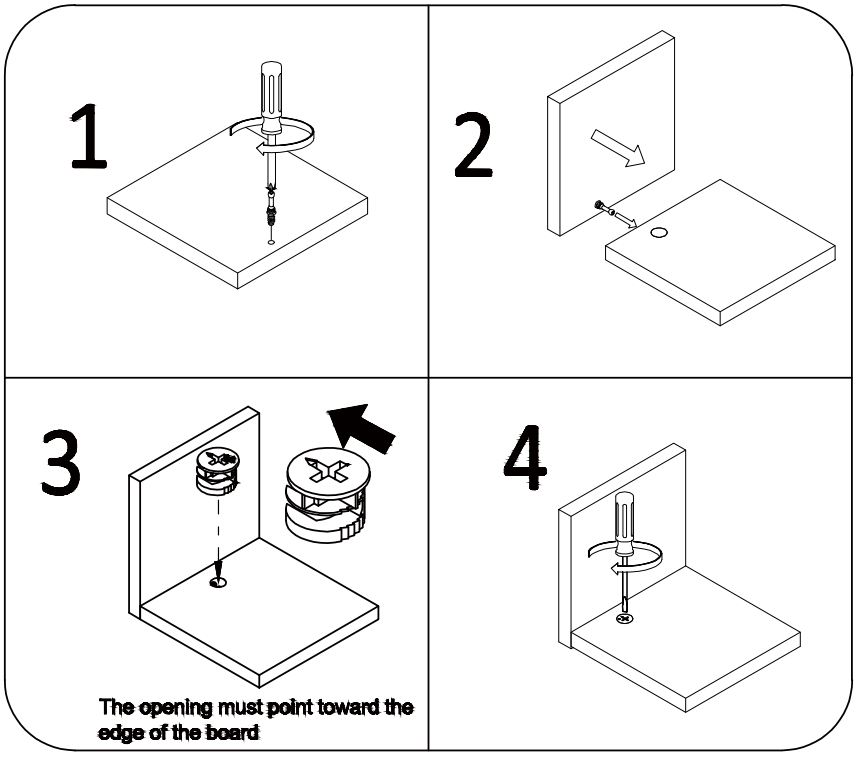



Board Identification

Not actual size

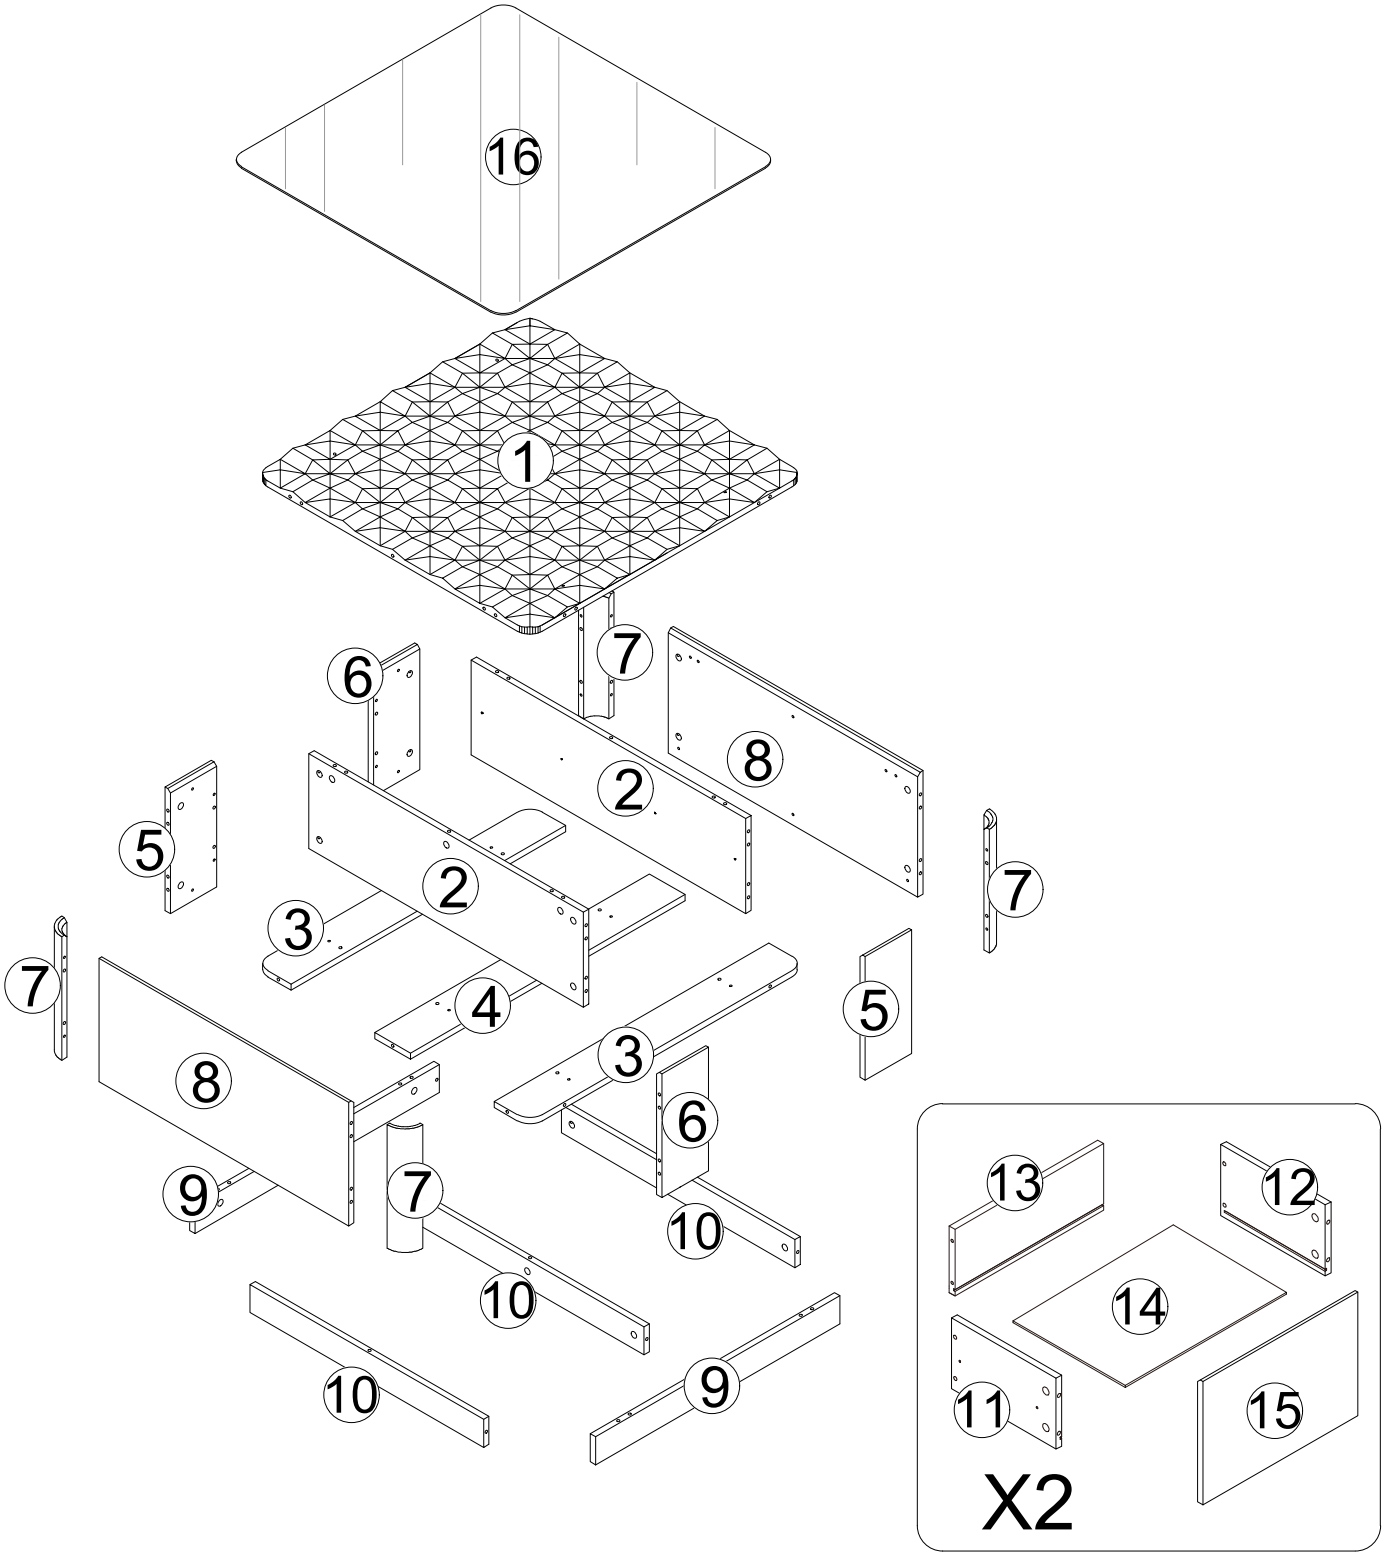


STEP 1

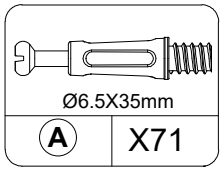

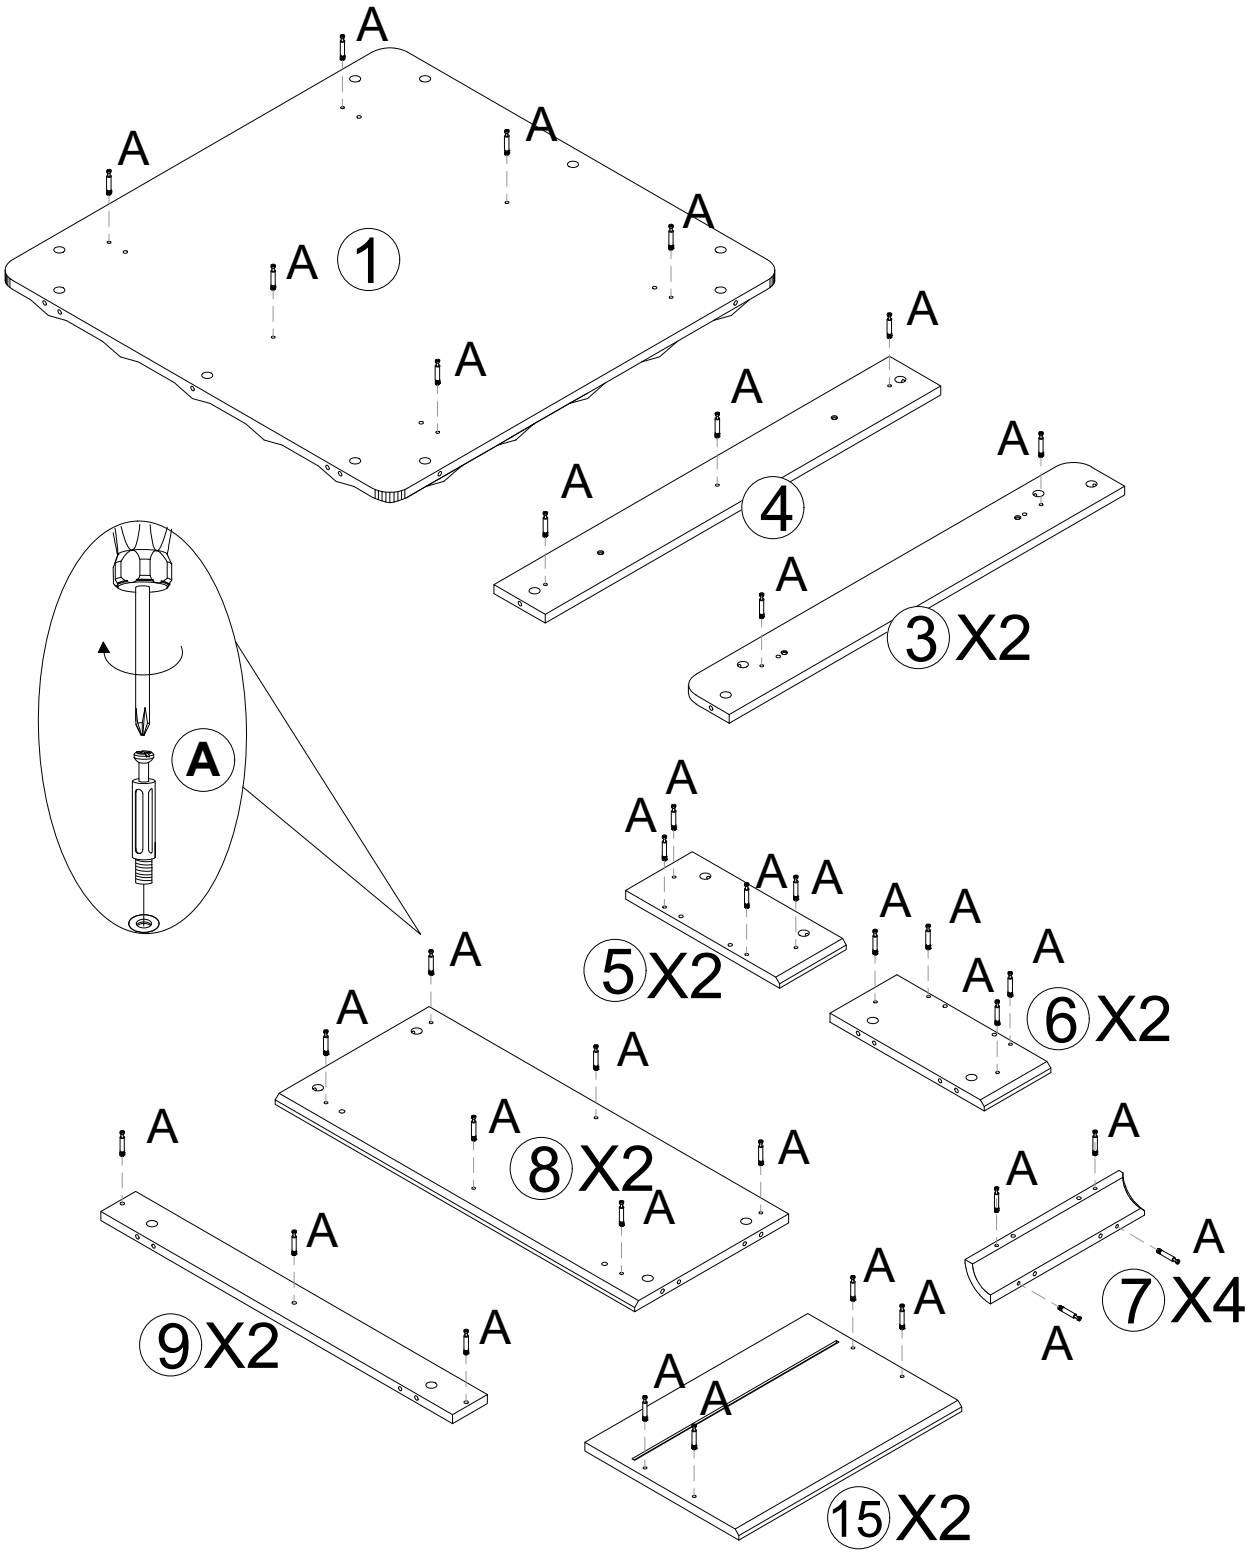


STEP 2


Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.

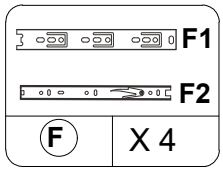


Pay attention when connecting !
The sliding module must be at the front end.

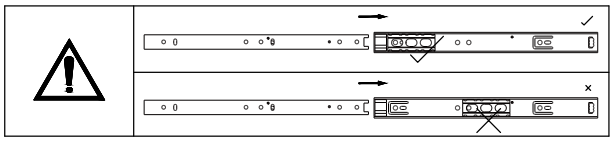


STEP 1 : Extend Slide

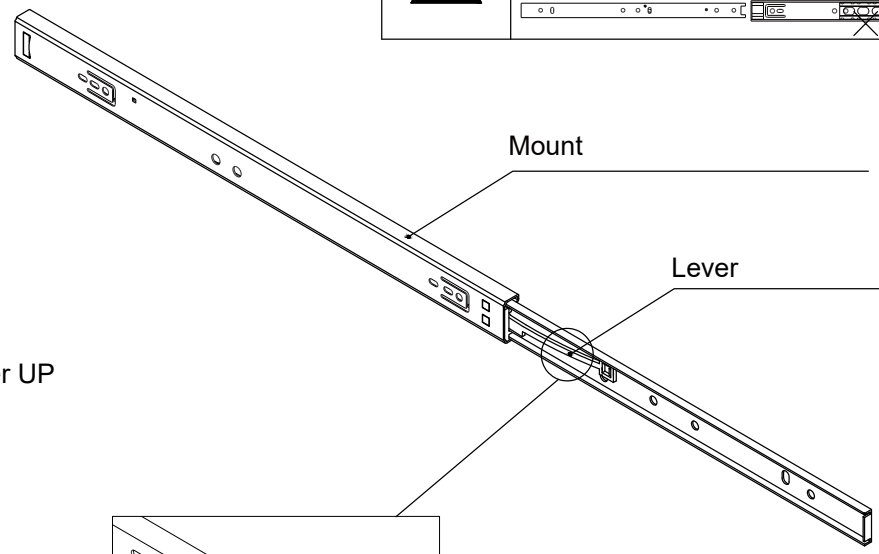

STEP 2: Push Lever UP

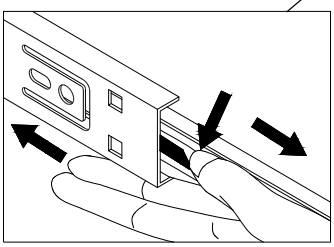



Push lever for the left of drawer ,
press the lever for the right of drawer .

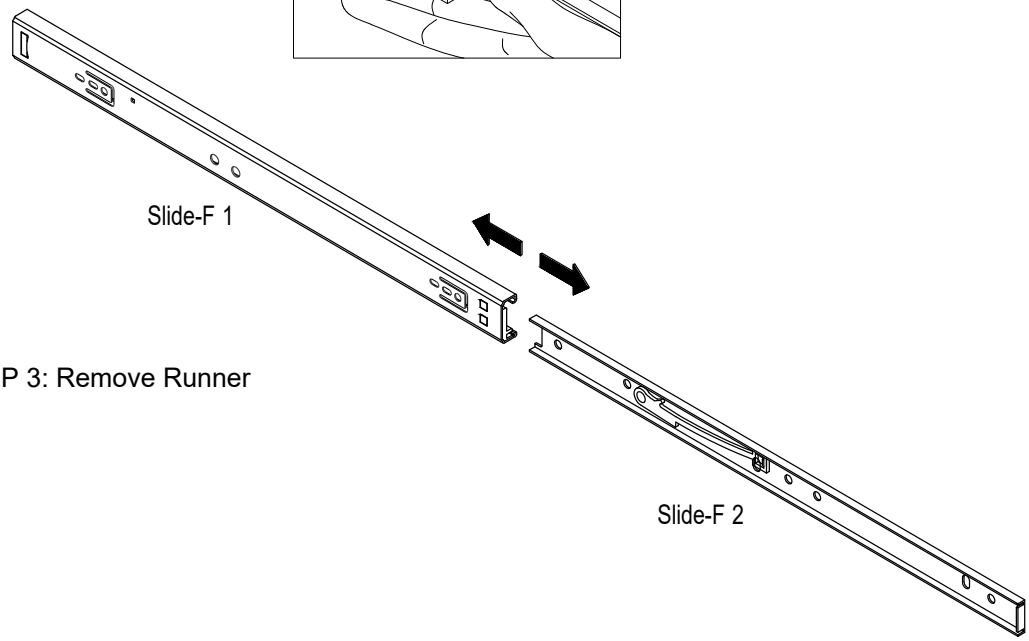



STEP 3: Remove Runner


STEP 3

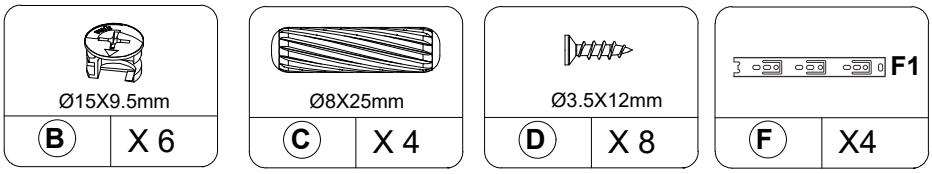

Ø15X9.5mm
B
X 6
Ø8X25mm
C
X 4
Ø3.5X12mm
D
X 8
F1
F
X4

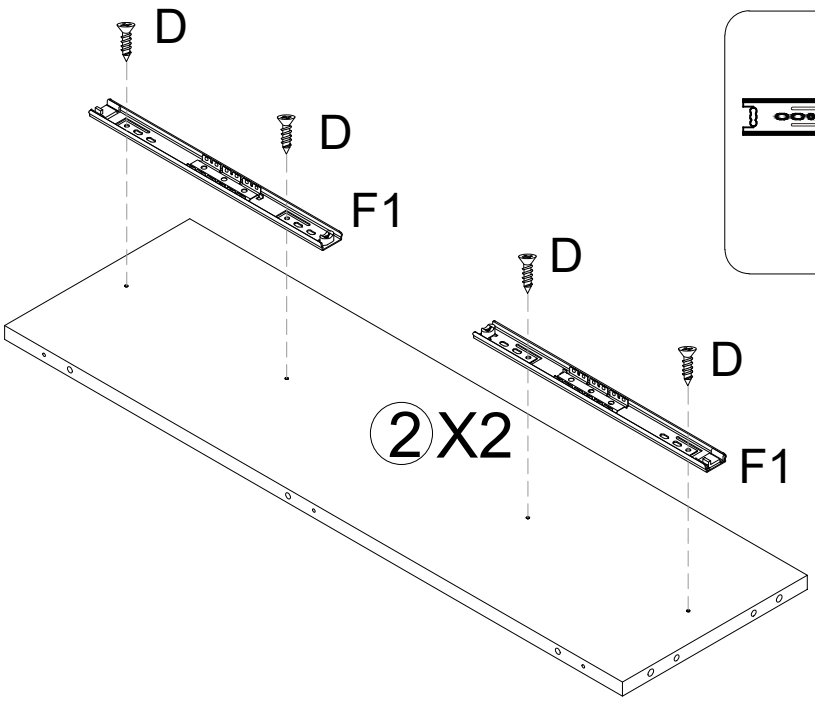

D
D
F1
D
D
F1
2X2

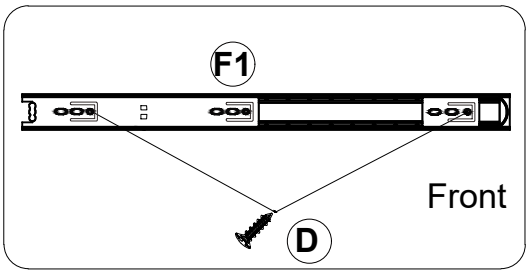
F1
Front
D

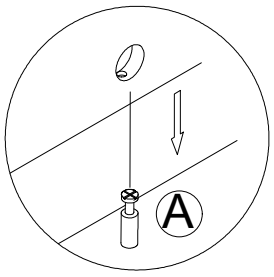

A

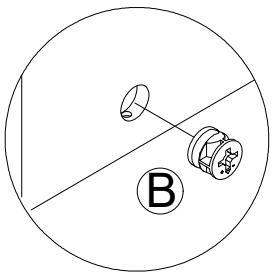

B

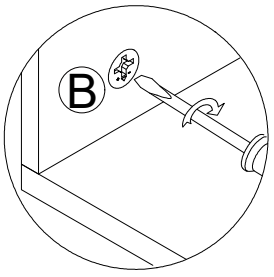

B

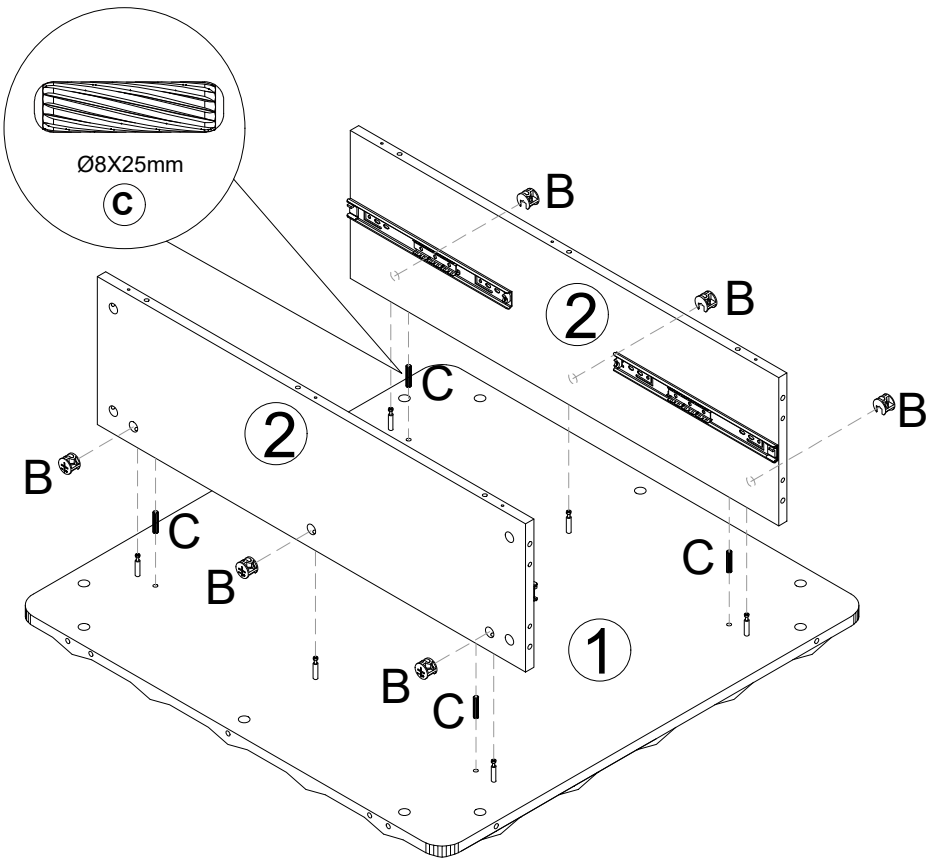

Ø8X25mm
C
B
B
2
C
B
2
B
C
B
C
B
C
1
B
C


STEP 4

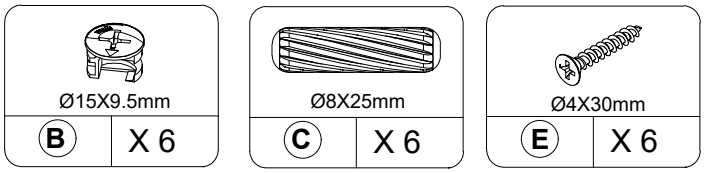

Ø15X9.5mm
B
X 6
Ø8X25mm
C
X 6
Ø4X30mm
E
X 6

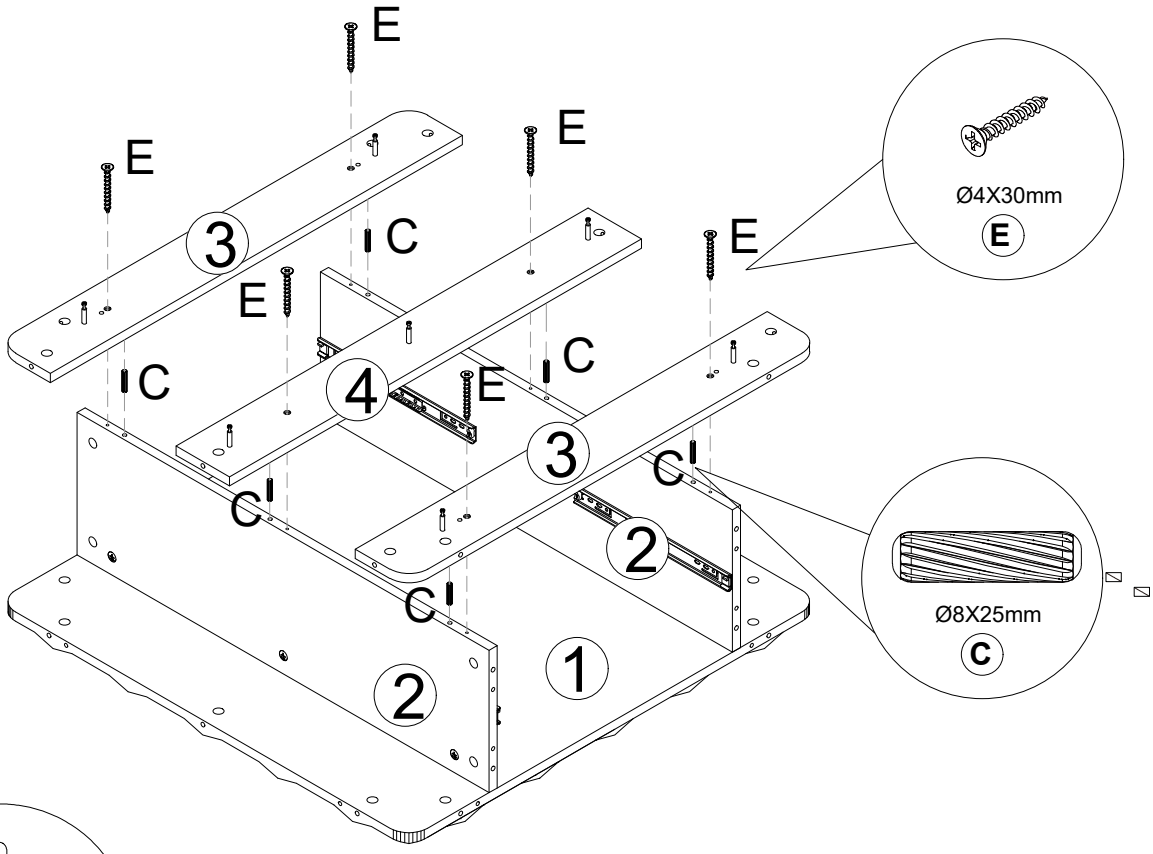
E
E
E
E
3
C
E
C
4
E
C
C
3
C
2
C
2
1
Ø4X30mm
E
Ø8X25mm
C

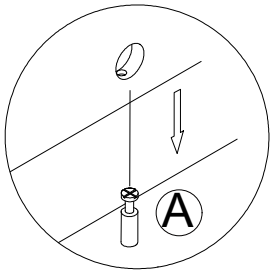

A

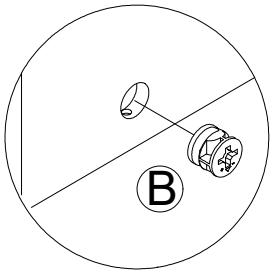

B

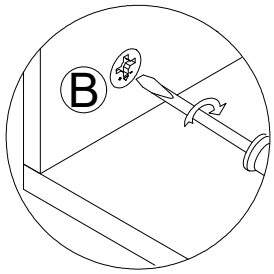

B

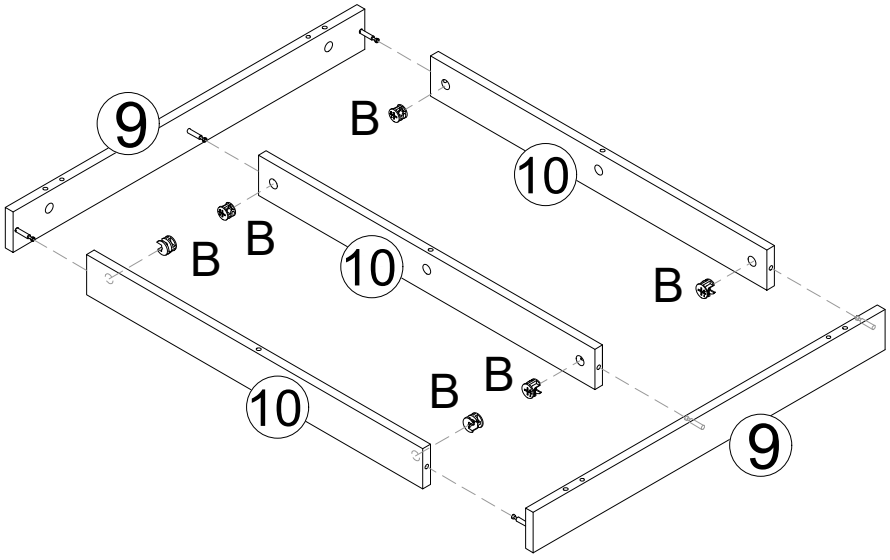
9
B
10
B
B
10
B
10
B
B
9


STEP 5

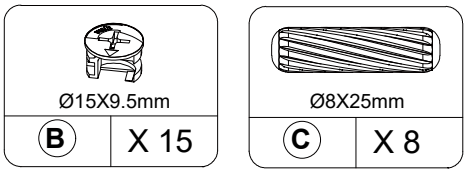

Ø15X9.5mm
B
X 15
Ø8X25mm
C
X 8

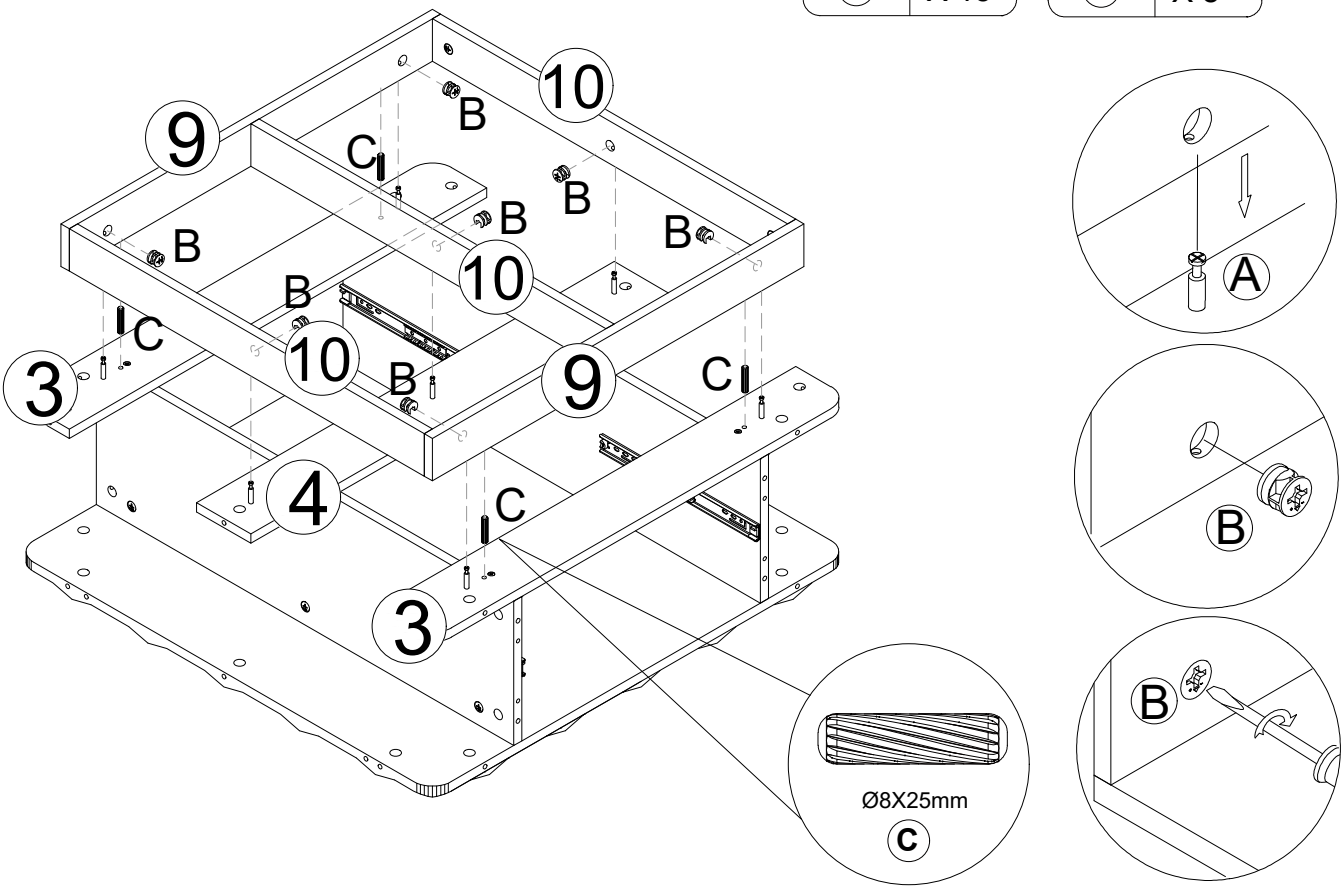

9
10
B
C
B
B
B
B
10
B
C
10
B
9
C
3
4
C
3
A
B
B
Ø8X25mm
C

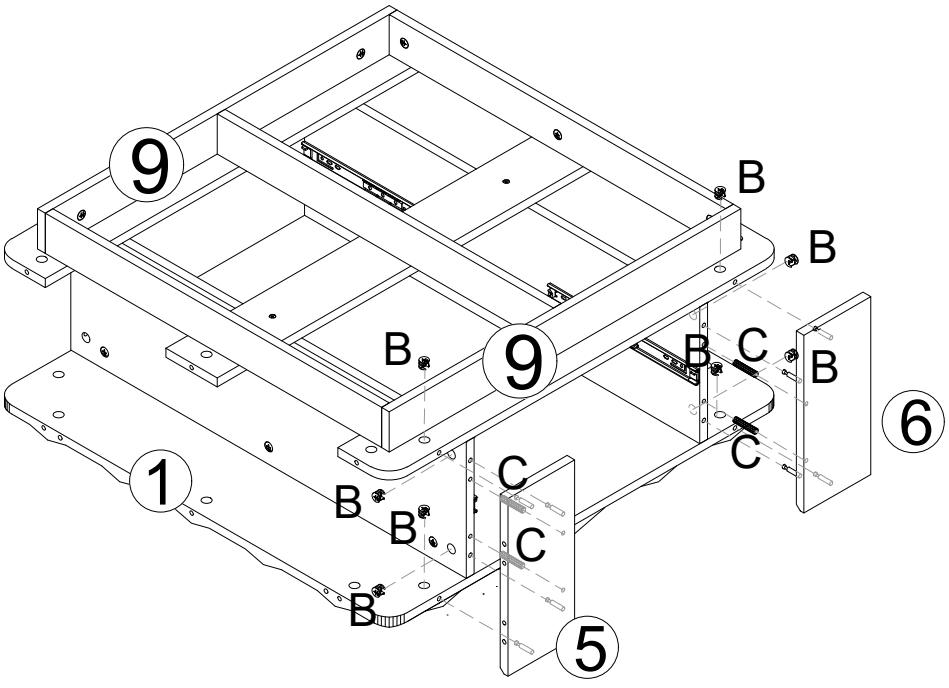
9
B
B
B
9
B
C
B
6
C
1
B
C
B
B
C
B
5


STEP 6

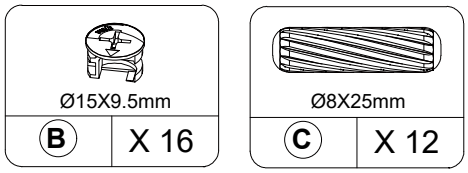

Ø15X9.5mm
B
X 16
Ø8X25mm
C
X 12

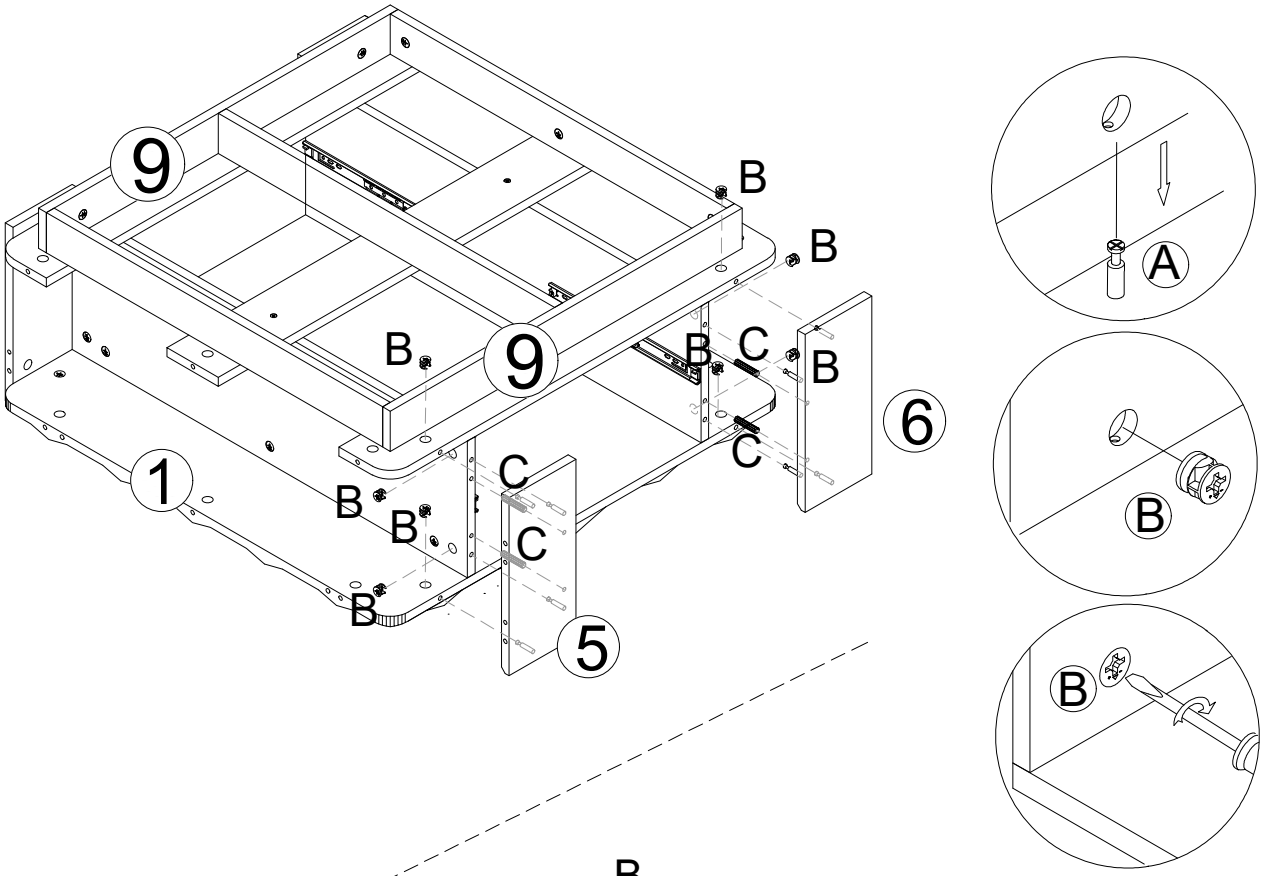
9
B
B
B
9
B
C
B
6
C
1
B
B
C
B
C
5
A
B
B

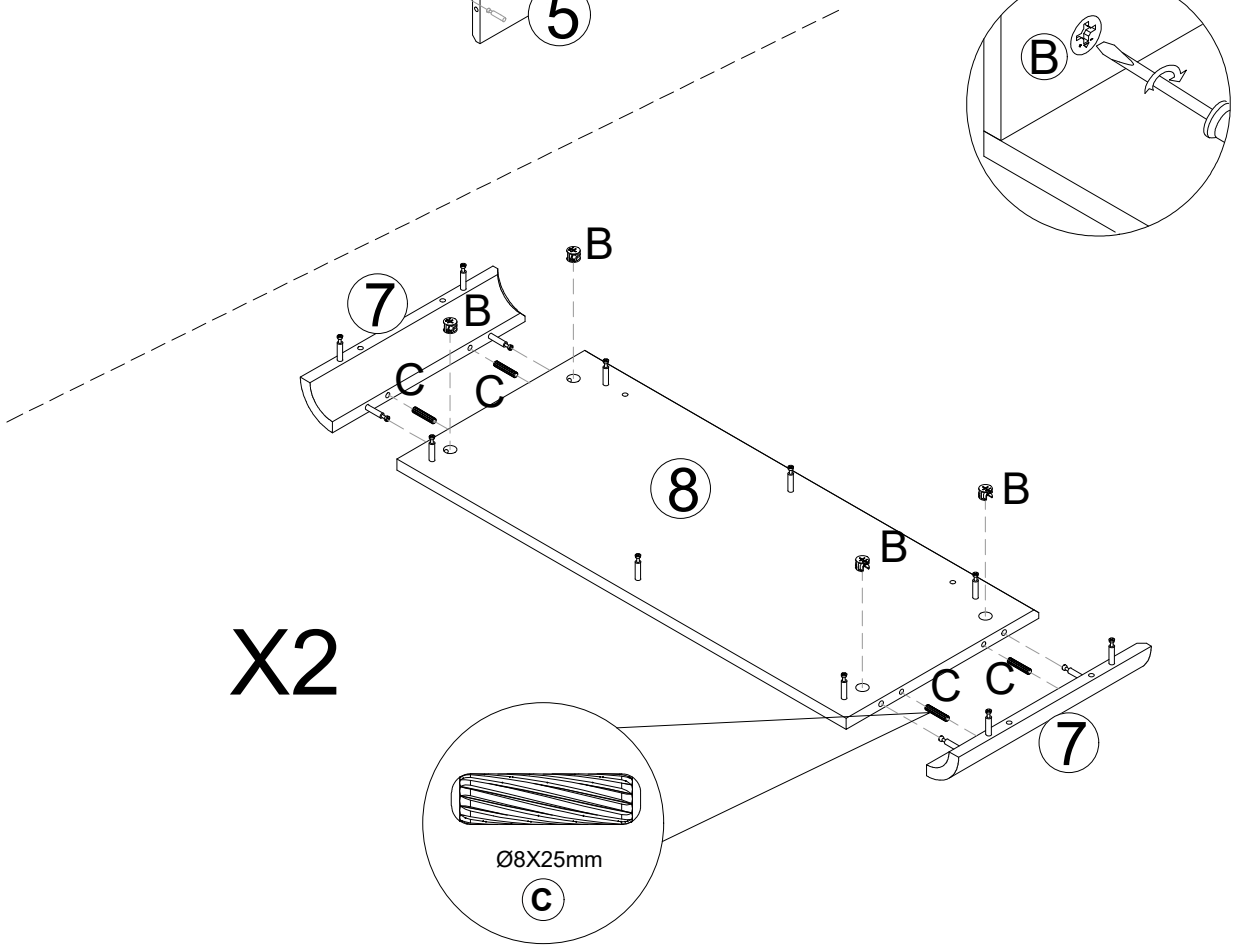

B
7
B
C
C
8
B
B
C
C
7
X2
Ø8X25mm
C


STEP 7

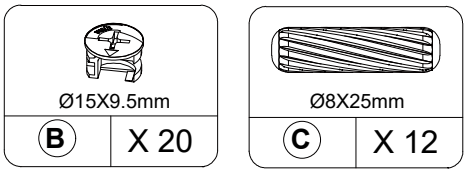


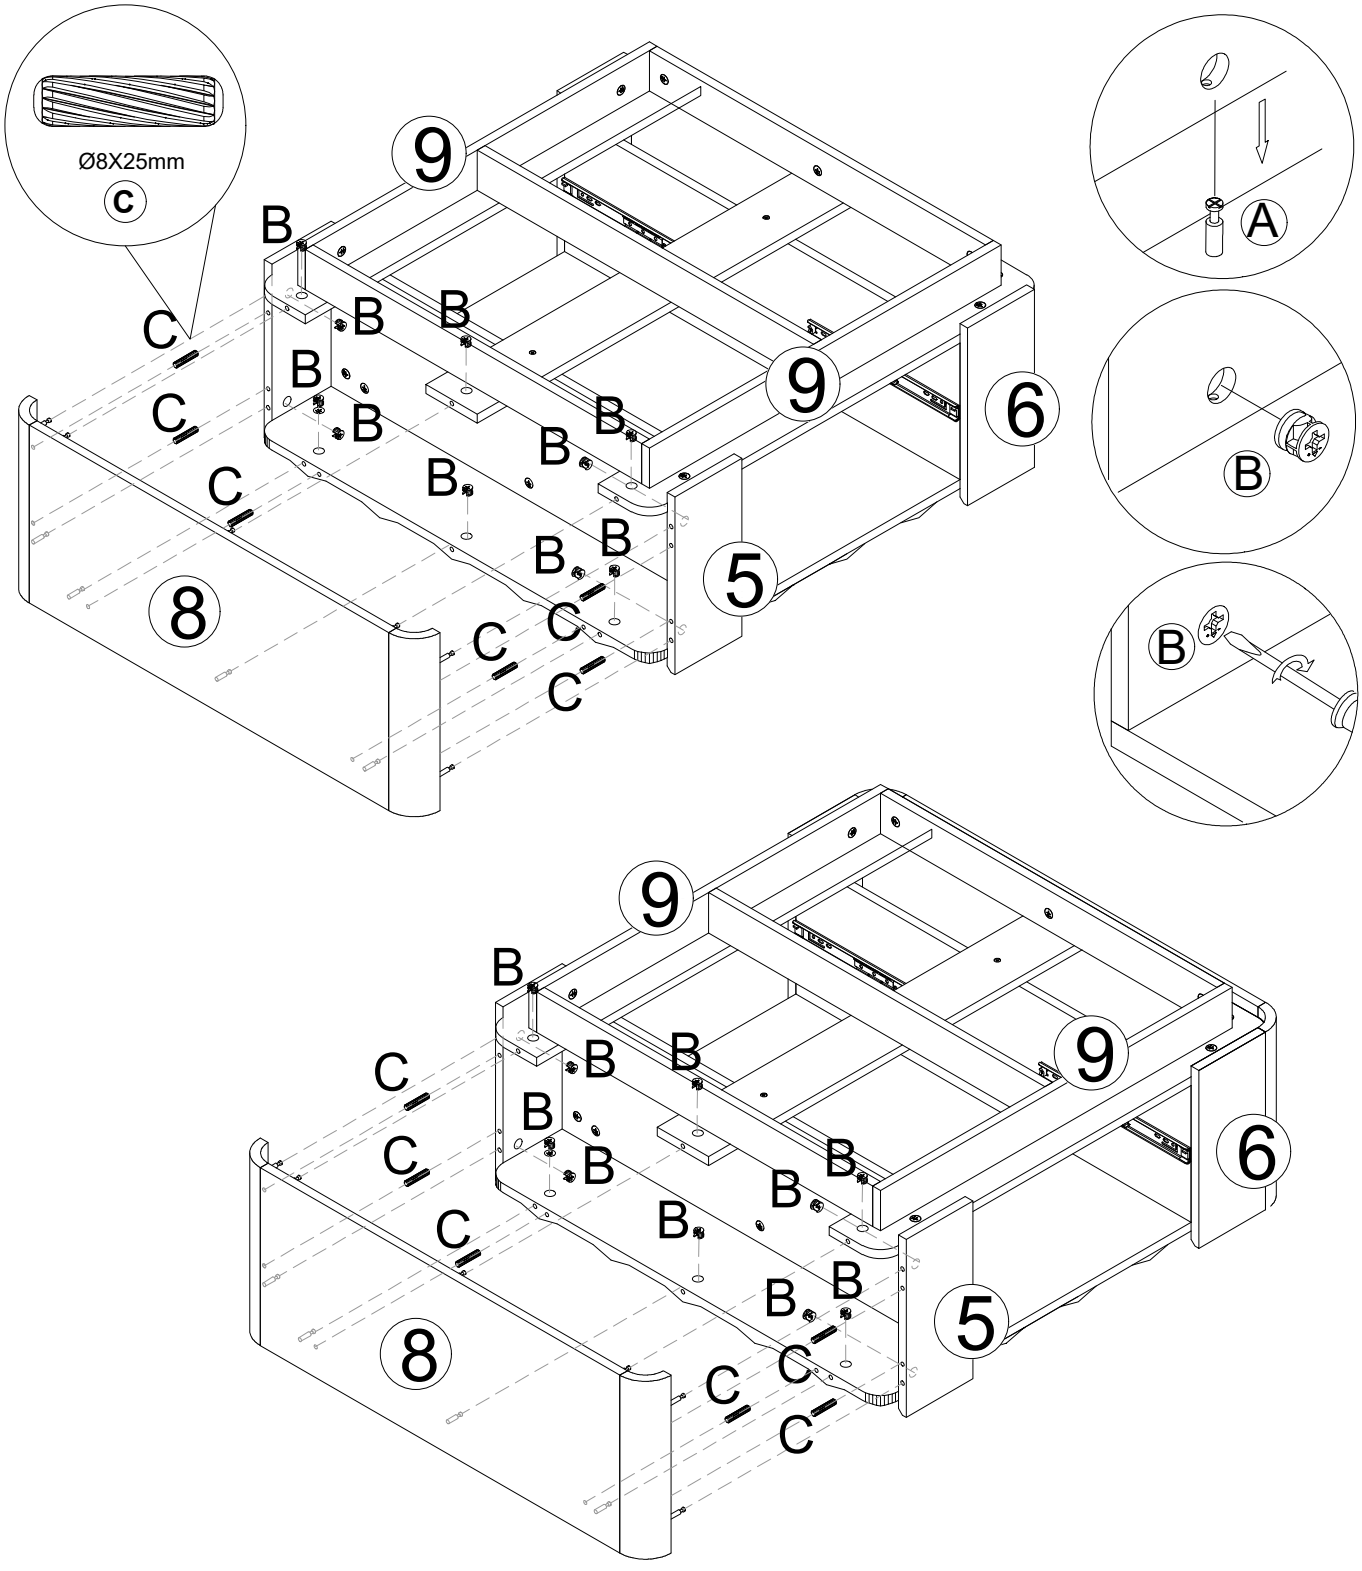



STEP 8

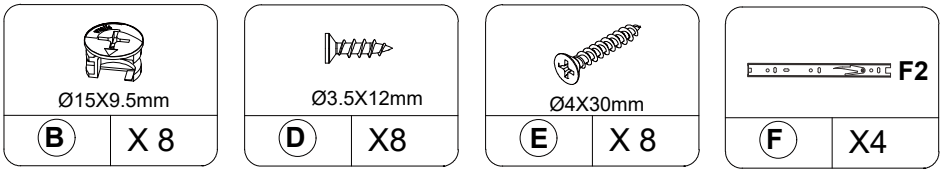

Ø15X9.5mm
B
X 8
Ø3.5X12mm
D
X8
Ø4X30mm
E
X 8
F2
F
X4

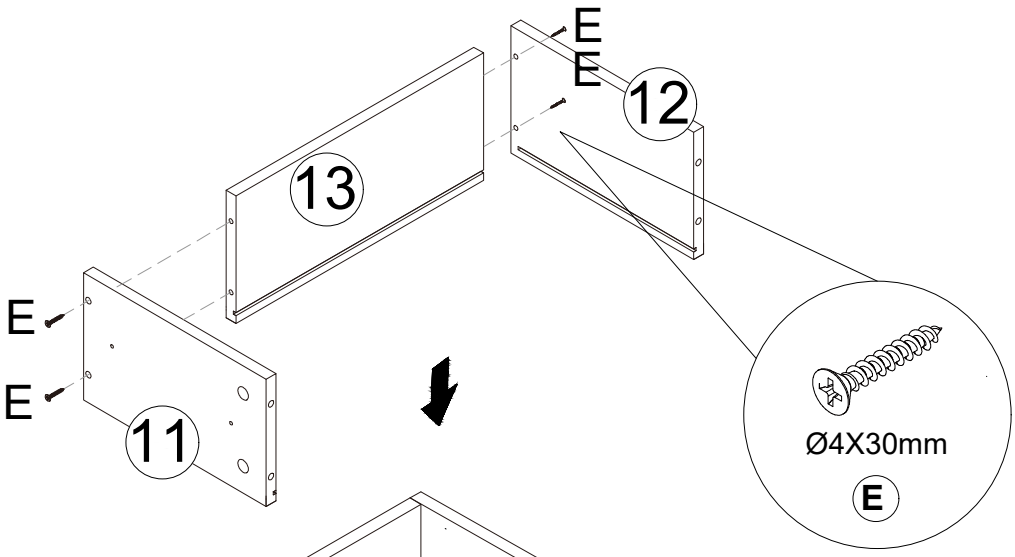

E
E
12
13
E
E
11
Ø4X30mm
E

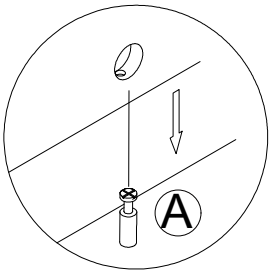

A

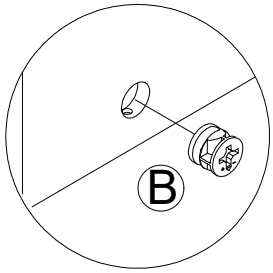

B

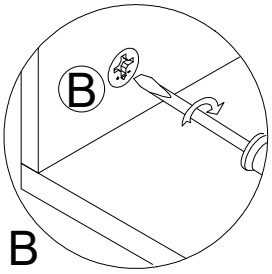
B
B

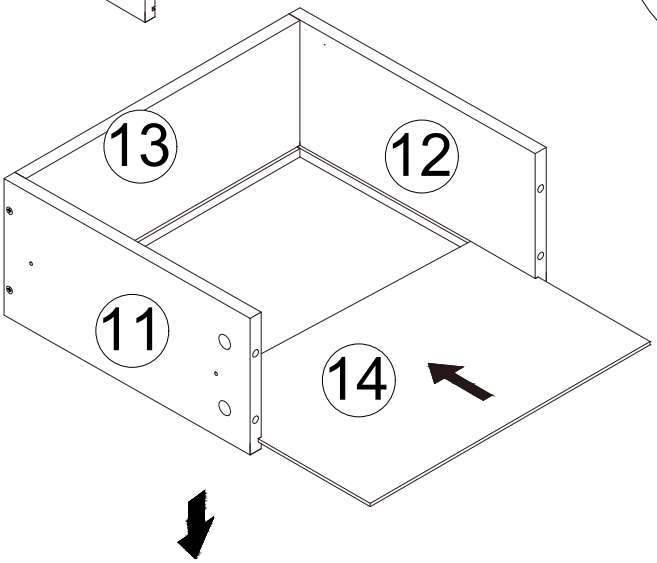
13
12
11
14

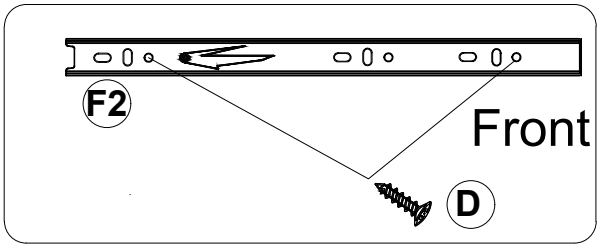
F2
Front
D

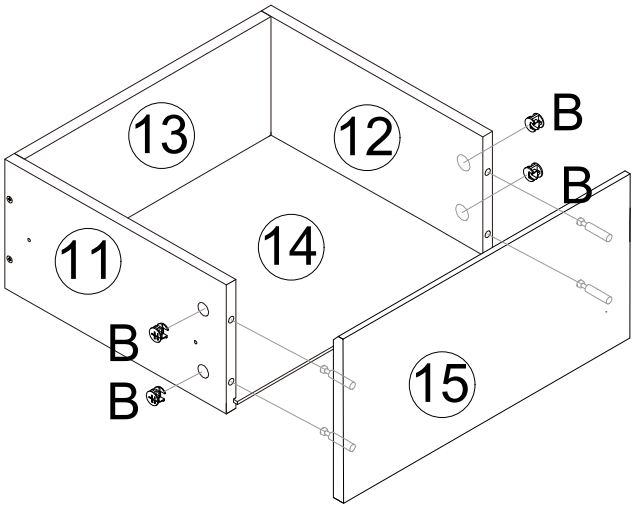
13
12
B
B
11
14
B
B
15

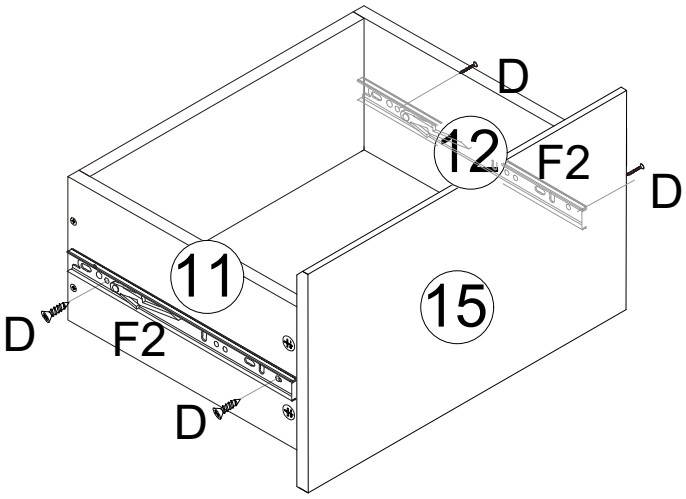
D
12
F2
D
11
15
D
F2
D

STEP 9

