READY to ASSEMBLE

SLAT KIT M&T

ATLANTIC FURNITURE


ASSEMBLY INSTRUCTION

(FULL 65603)

Before assembling your Bed slat kit, please read through these instructions carefully, familiarising yourself with the different parts.
Please note that you will require a Phillips head screwdriver and an Allen wrench.

PARTS LIST

01	SLAT KIT	3 SET
02	SLAT SUPPORT	3 PCS
03	LEG	3 PCS

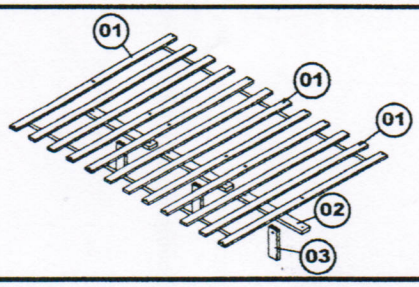

HARDWARE



A 2 1/4" Allen bolts - 3 pcs
For slat support to leg




B 1 ½" Allen bolts - 6 pcs
For slat to center support



C Barrel Nuts - 3 pcs
For slat support to leg




D 1 1/4" Wood Screw - 12 pcs
For Slat to Ledger Strip



E Allen wrench - 1 pc


STEP 1 Assemble bed frame according to bed assembly instructions.

STEP 2

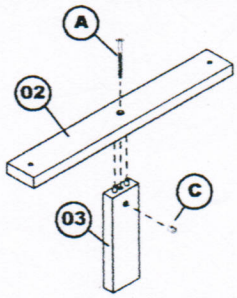

Attach slat support (02) to the leg (03).
Using allen bolt (A) and barrel nut (C) tighten with Allen wrench (E). Repeat the other.

STEP 3

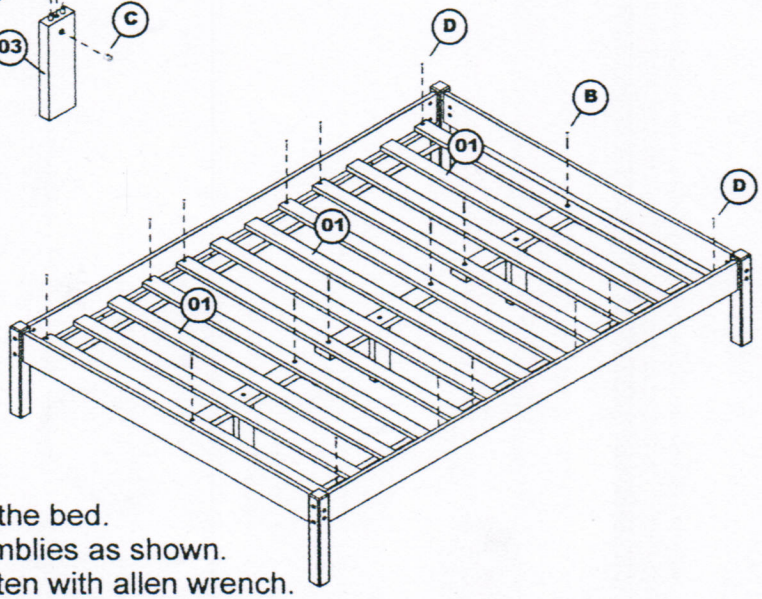

Lay the slat kit (01) onto the bed.
Attach slat support assemblies as shown.
Using Allen bolts (B) tighten with allen wrench.
Install wood screw (D) tighten with Phillips head screwdriver. Be sure the space between slat is even.





