

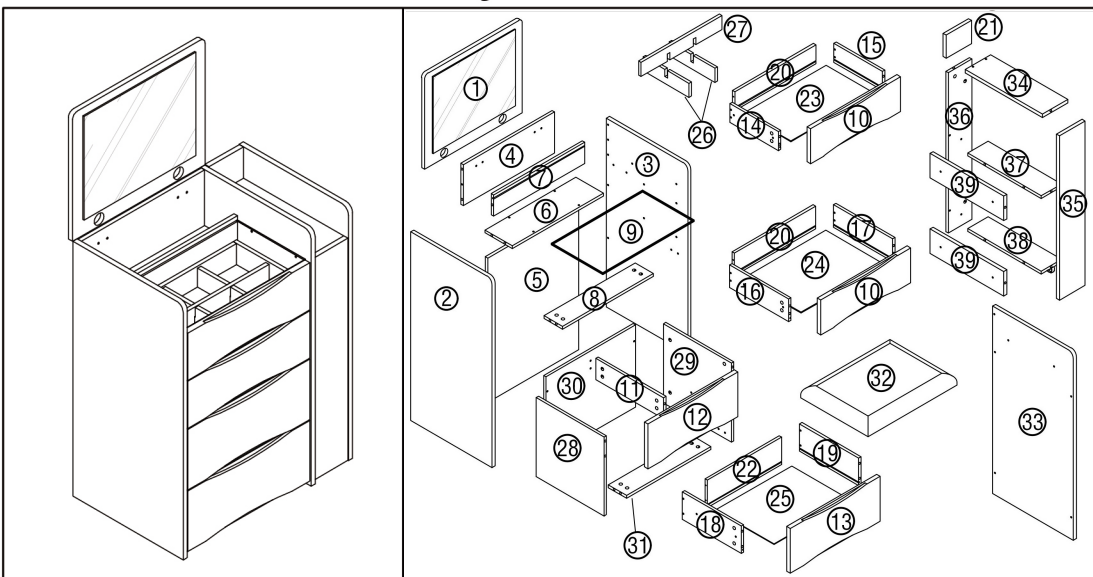
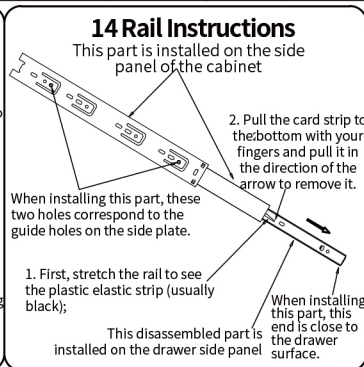


Vanity installation manual

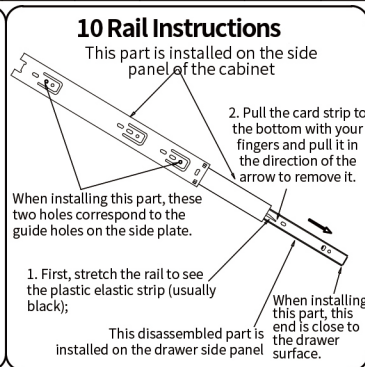


① 1 piece	② 1 piece	③ 1 piece	④ 1 piece	⑤ 1 piece	⑥ 1 piece
⑦ 1 piece	⑧ 1 piece	⑨ 1 piece	⑩ 2 piece(narrow)	⑪ Unnumbered	⑫ 1 piece(Wide)
⑬ 1 piece(Wide)	⑭ 1 piece	⑮ 1 piece	⑯ 1 piece	⑰ 1 piece	⑱ 1 piece
⑲ 1 piece	⑳ 2 piece	㉑ 1 piece	㉒ 1 piece	㉓ 1 piece	㉔ 1 piece
㉕ 1 piece	㉖ 2 piece	㉗ 1 piece	㉘ 1 piece	㉙ 1 piece	㉚ 1 piece
㉛ 1 piece	㉜ 1 piece	㉝ 1 piece	㉞ 1 piece	㉟ 1 piece	㊱ 1 piece
㊲ 1 piece	㊳ 1 piece	㊴ 2 piece			

	(A)	(B)	(C)	(D)	(E)	(F)	(G)	(H)	(I)	(J)	(K)
Name	3-in-1	Wood tip	Door hinge	Silent rail	Shelf support	Self-tapping screws			Small angle code	Foot spikes	Small pulley
Graphic											
Specifications	Φ12/L=40	Φ6*40	直弯	10" 14"	Φ8*18	Φ3.5*12	Φ3.5*14	Φ3.5*35			
Quantity	75 sets	4 piece	2 piece	3 sets 1 sets	5 piece	52 piece	14 piece	13 piece	2 piece	10 piece	2 piece

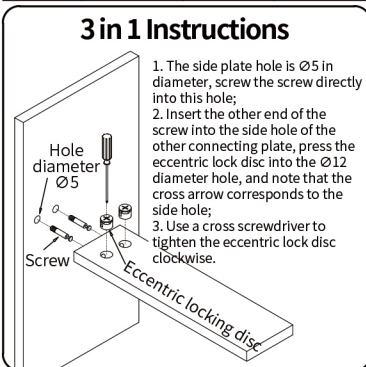


Installation steps

Step 1: Use 3-in-1 to connect the partition board and the upper back board to the layer board.

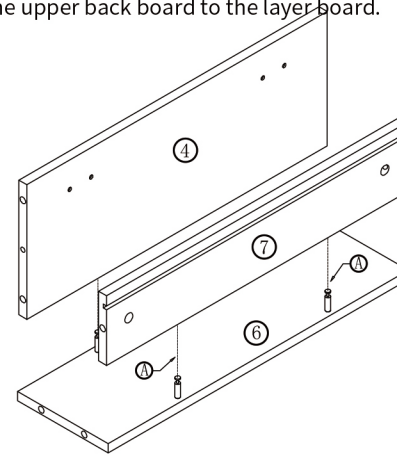


Step 2: Install the brace, lower back panel and left and right side panels.

Note: The side panels are pre-installed with Ø3.5*12 screws to install the 10" rails.

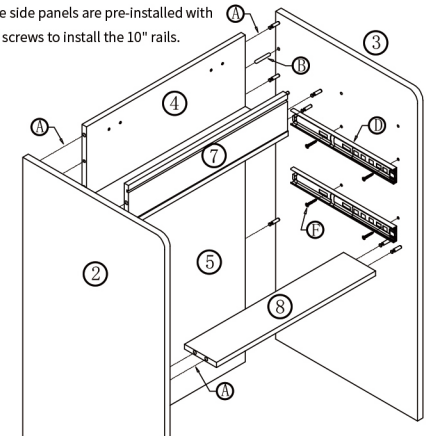


Step 3: Nail the feet first, then install the panel.

Note: Install the door hinge on the panel first, and then use Ø3.5*14 screws to lock the door hinge on the upper back panel.

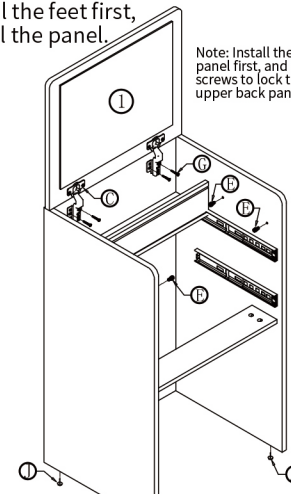


Step 4: Use the 3-in-1 kit to assemble the dressing stool side panels and pull strips according to the diagram.


Note: First nail the foot nails on the side panel of the stool, and use Φ3.5*12 screws to install the rails according to the guide holes. The rails should be flush with the front edge.

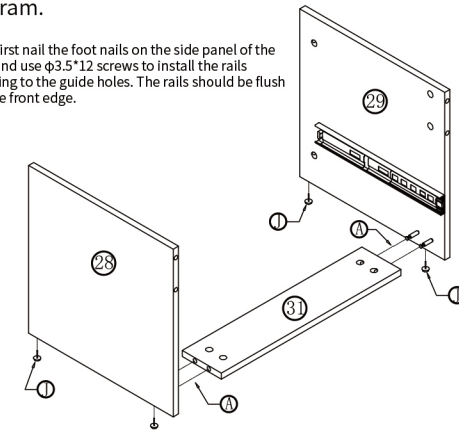

Step 5: Install the dressing stool back panel and false drawer surface.

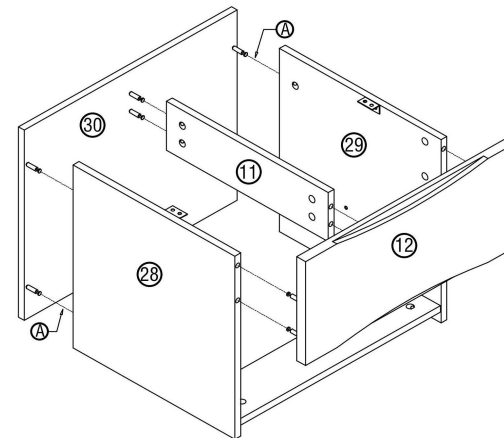

Step 6: Install the seat cushion.

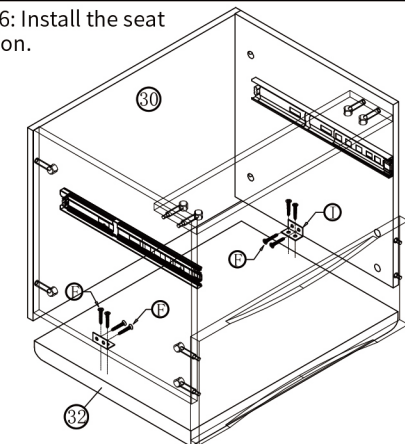

Note: Place the seat cushion in the appropriate position, turn the dressing stool upside down, and fix it to the side panel with screws and small angle brackets.