

Installation & Assembly

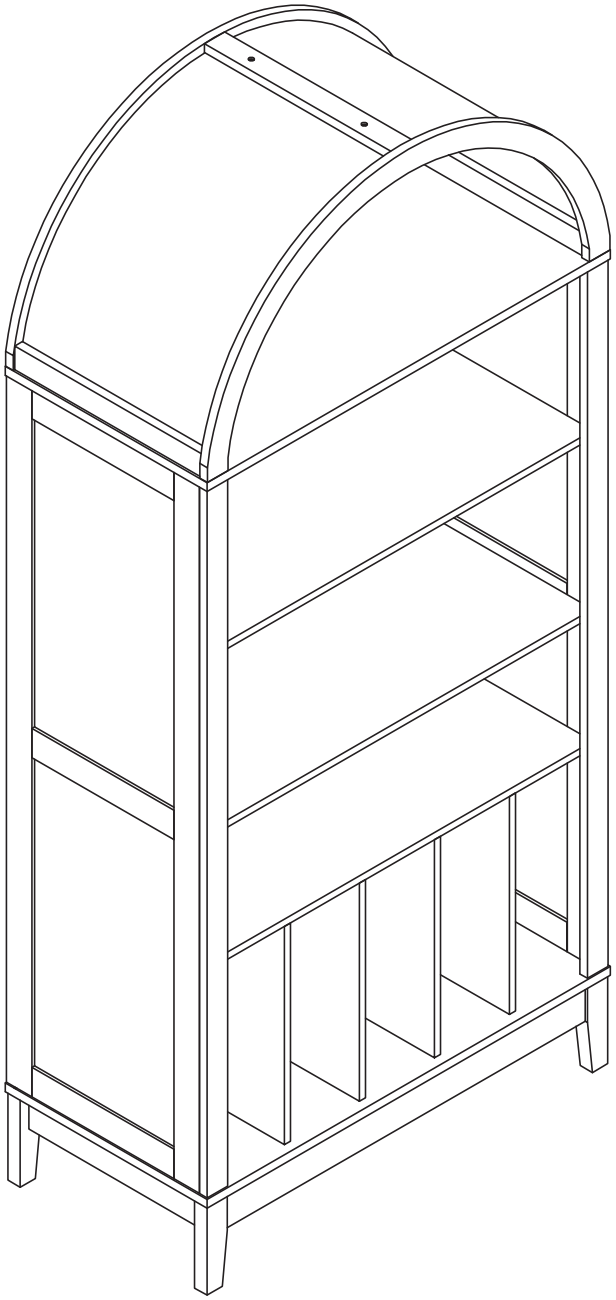






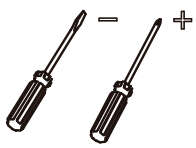

Before You Start

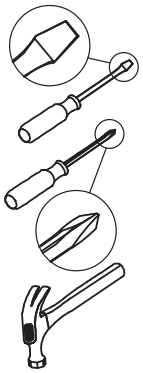

- Read through each step carefully and follow the proper order
- Separate and count all your parts and hardware
- Give yourself enough room for the assembly process
- Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. （Assembly speed can be increased by using electric screwdriver）

Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: **1-2**



- Open your item in the area you plan to keep it to avoid excessive heavy lifting.

- Identify, sort and count the parts before attempting assembly.



- Compression dowels are lightly tapped in with a hammer.



- Slides are labeled with an **R** (right) and **L** (left) for proper placement.

- Make sure to always face the point on the top of the Cam Lock towards the outer edge.



- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.



-Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.




- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or re-chargeable batteries.


















⚠WARNING
CHOKING HAZARD-
Small parts.Not for children under 3 yrs.

⚠ WARNING:
Assembly by an adult










EXPLODED DRAWING:

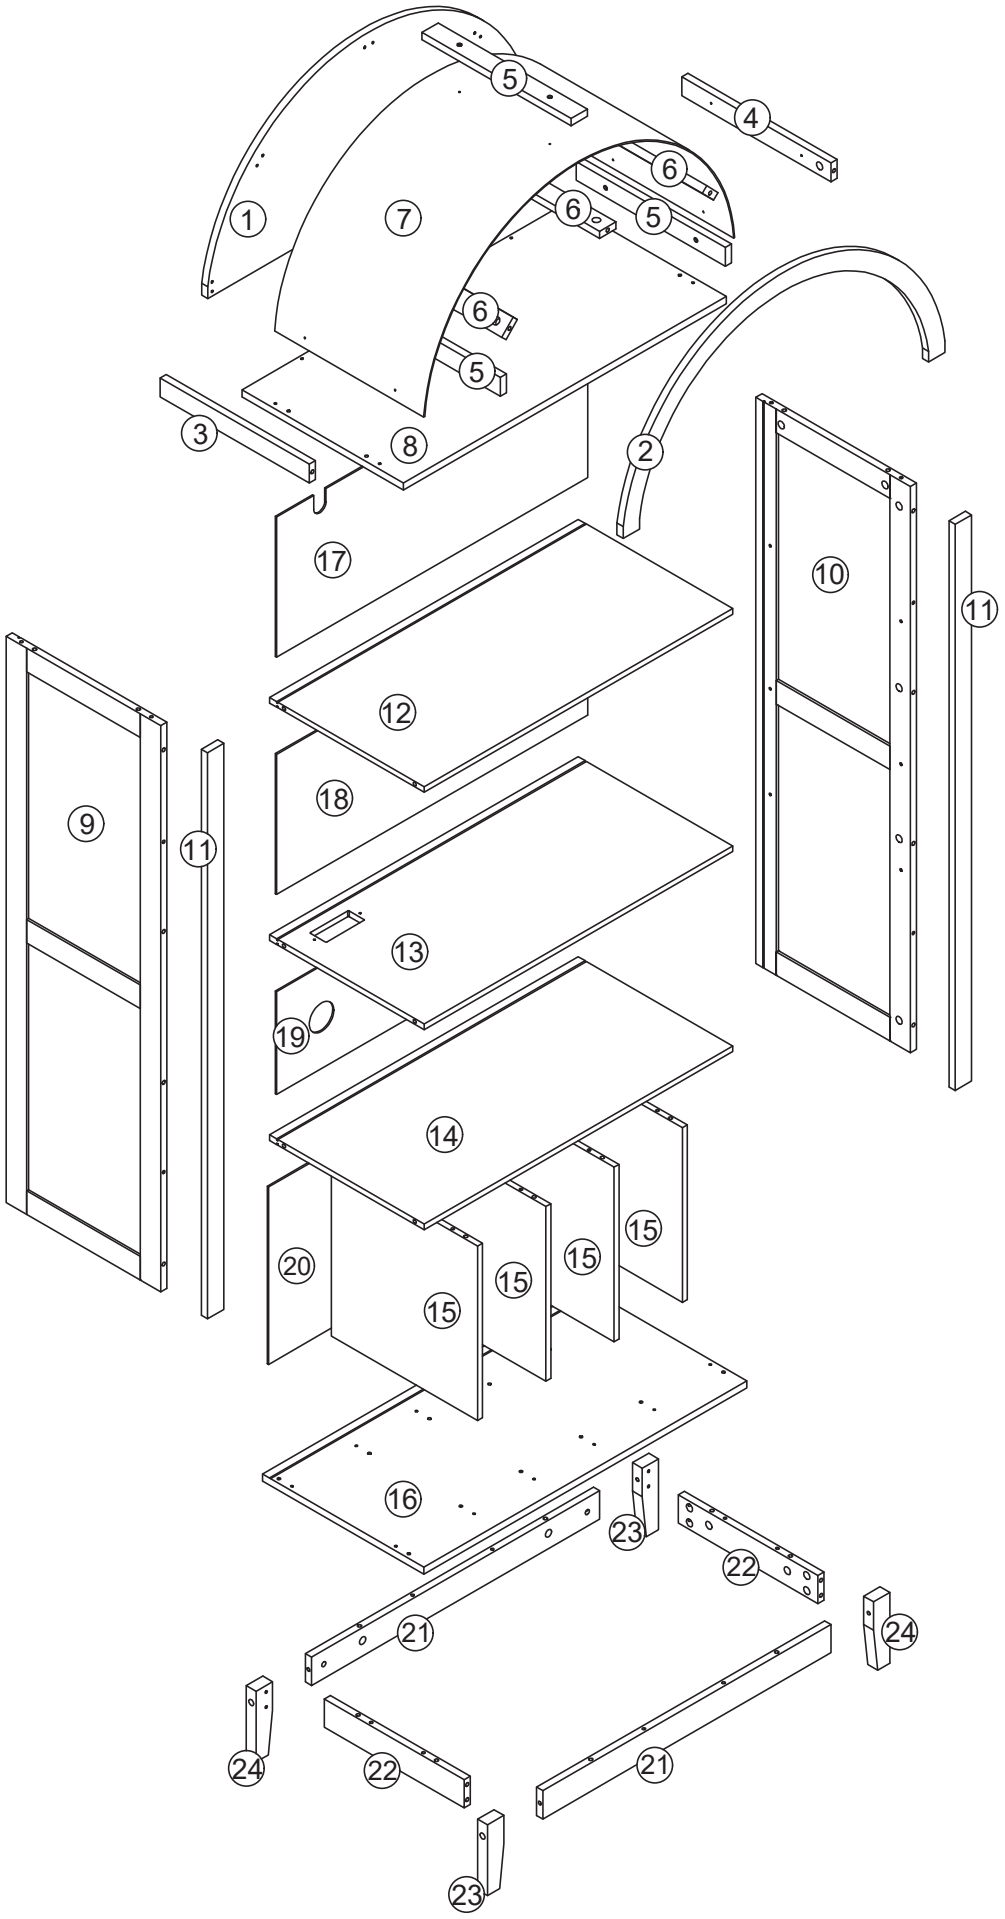







PART LIST:

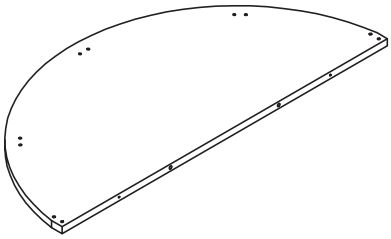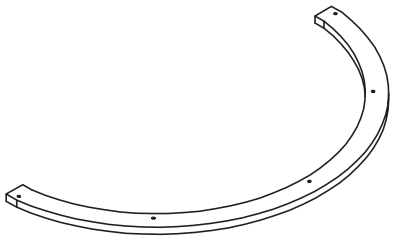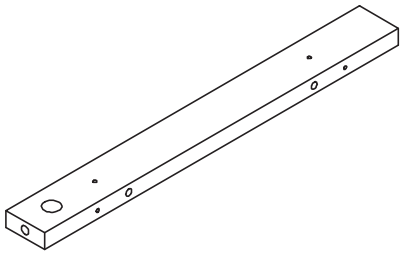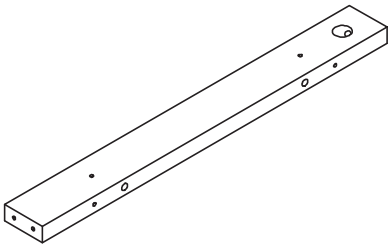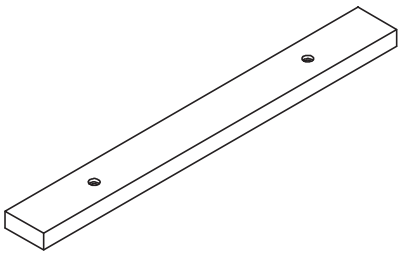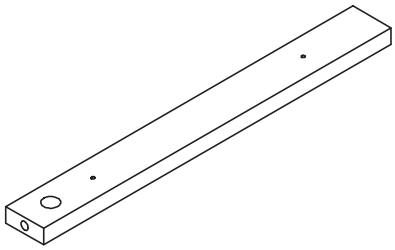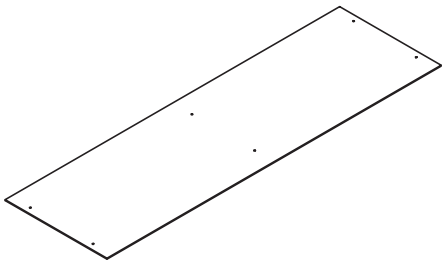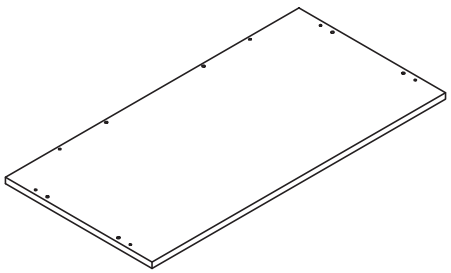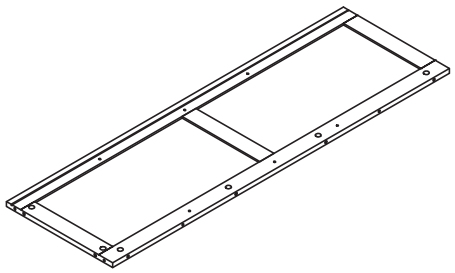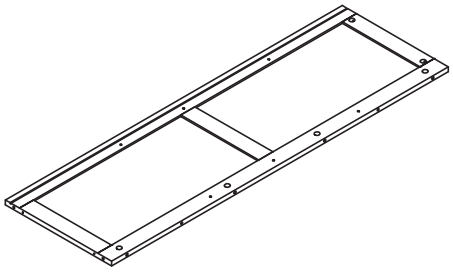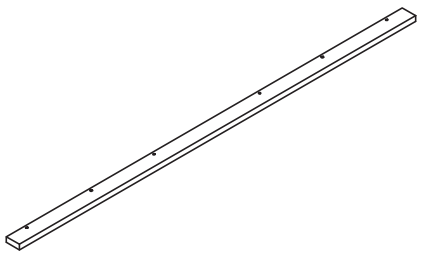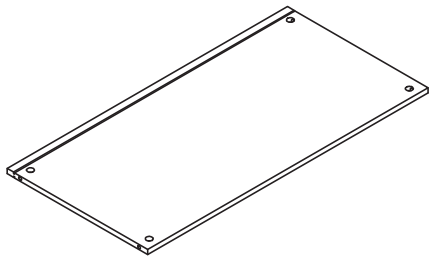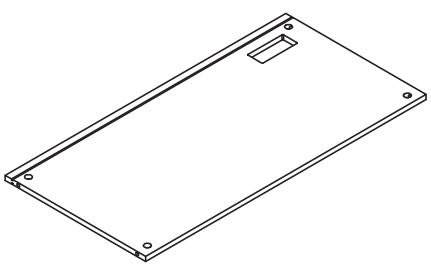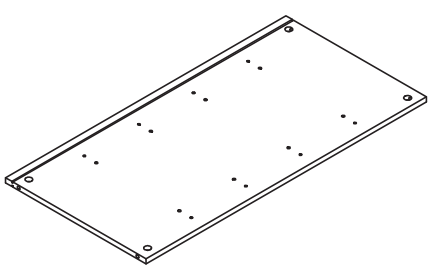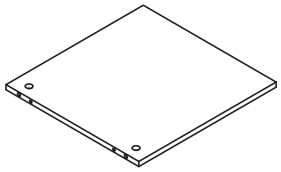① x1 	② x1 	③ x1 
④ x1 	⑤ x3 	⑥ x3 
⑦ x1 	⑧ x1 	⑨ x1 
⑩ x1 	⑪ x2 	⑫ x1 
⑬ x1 	⑭ x1 	⑮ x4 

PART LIST:

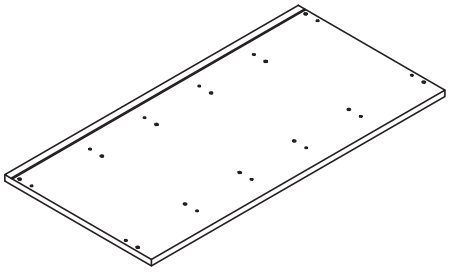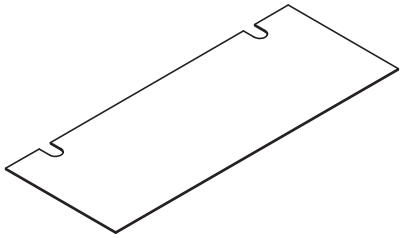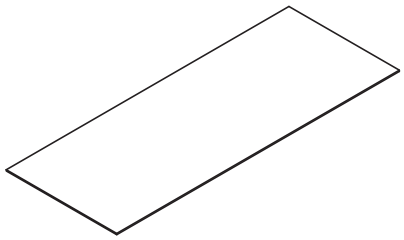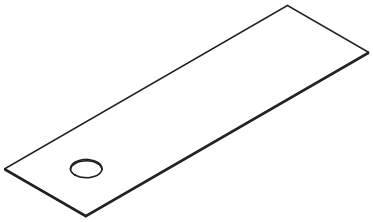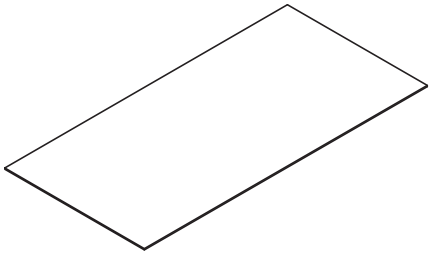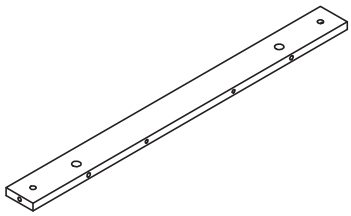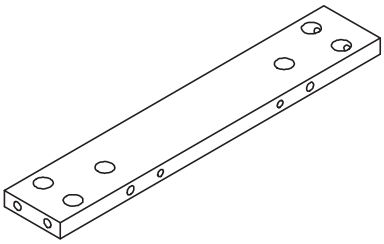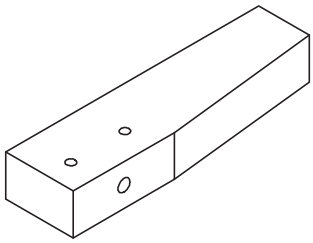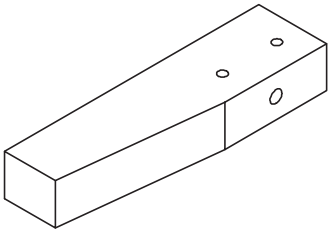⑯ x1 	⑰ x1 	⑱ x1 
⑲ x1 	⑳ x1 	㉑ x2 
㉒ x2 	㉓ x2 	㉔ x2 


ACCESSORY LIST

Ax53(+3)  Ø6x35mm	Bx53(+3)  Ø15x10mm	Cx42(+3)  Ø6x30mm	Dx30(+3)  Ø4x35mm	Ex2  Ø3.5x12mm
Fx1 	Gx4 	Hx4  Ø6x60mm	Ix6  Ø4x25mm	Jx2 
Kx4  Ø4x14mm	Lx2  Ø6x30mm	Mx20(+4) 	Nx16(+1)  Ø3x16mm	Ox4 
Px1 				

SPECIAL TIPS FOR FITTING CAM-LOCKS AND QUICKFIT


CAM-LOCK



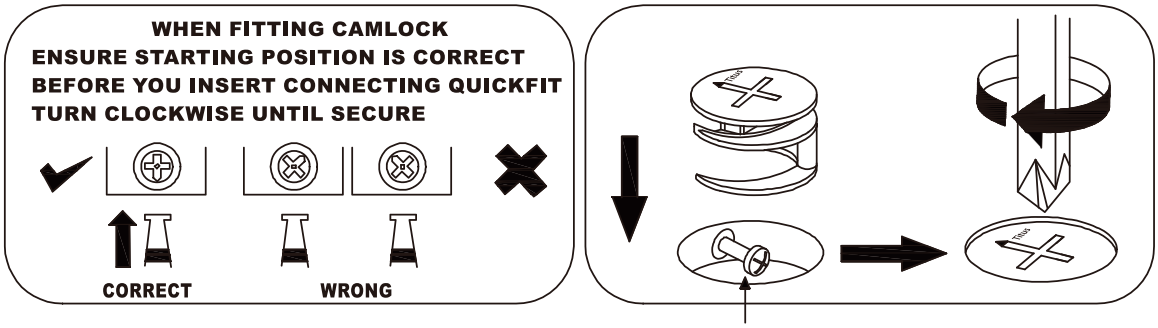


Tighten until shoulder is flush with panel.DO NOT overtighten or undertighten (see example below).

QUICKFIT

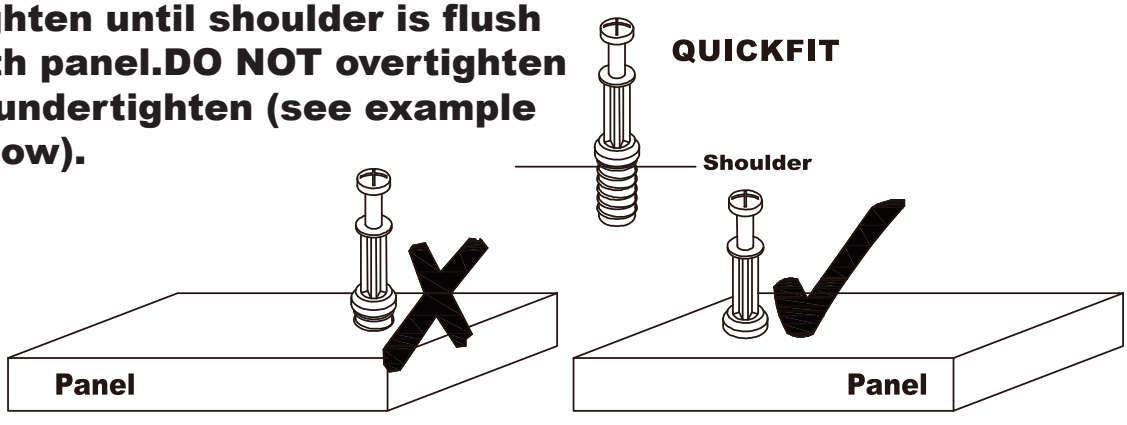

1

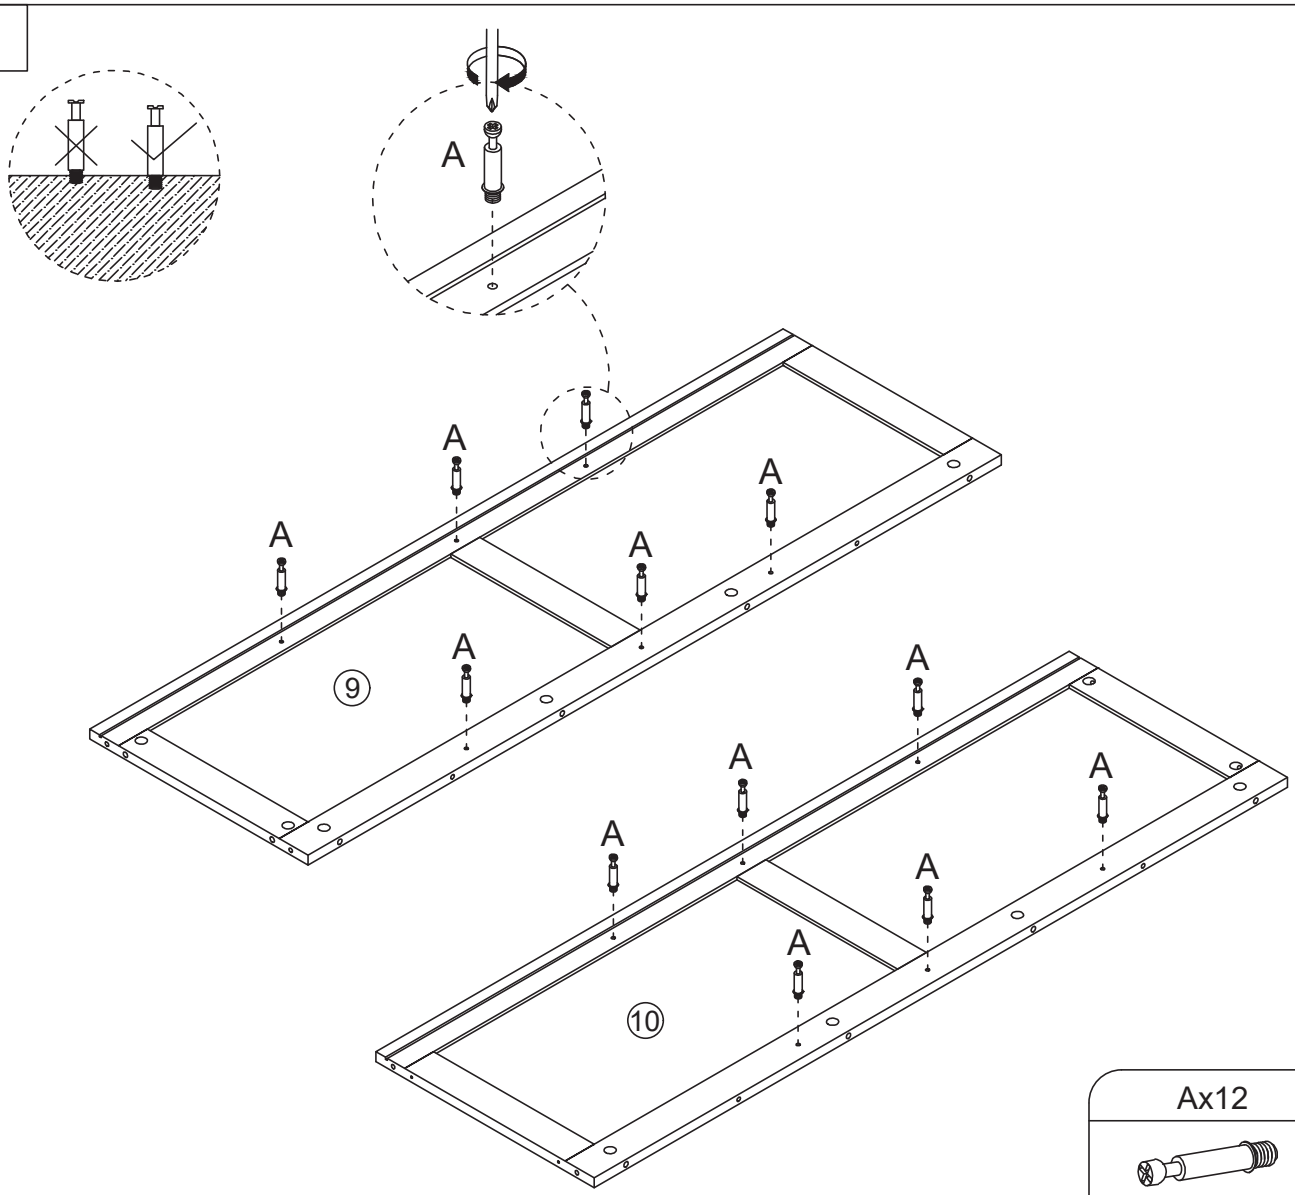


Ax12


Ø6x35mm

2

x2

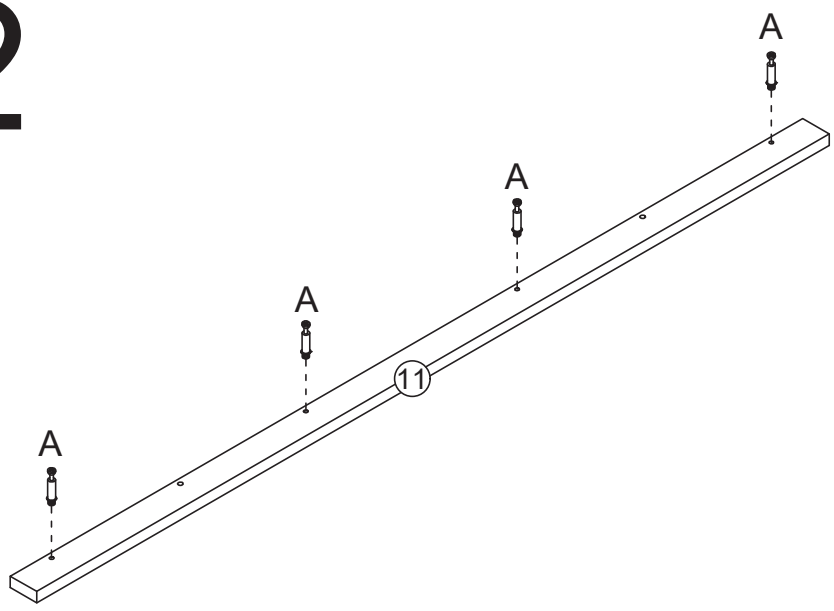


Ax8




Ø6x35mm


3

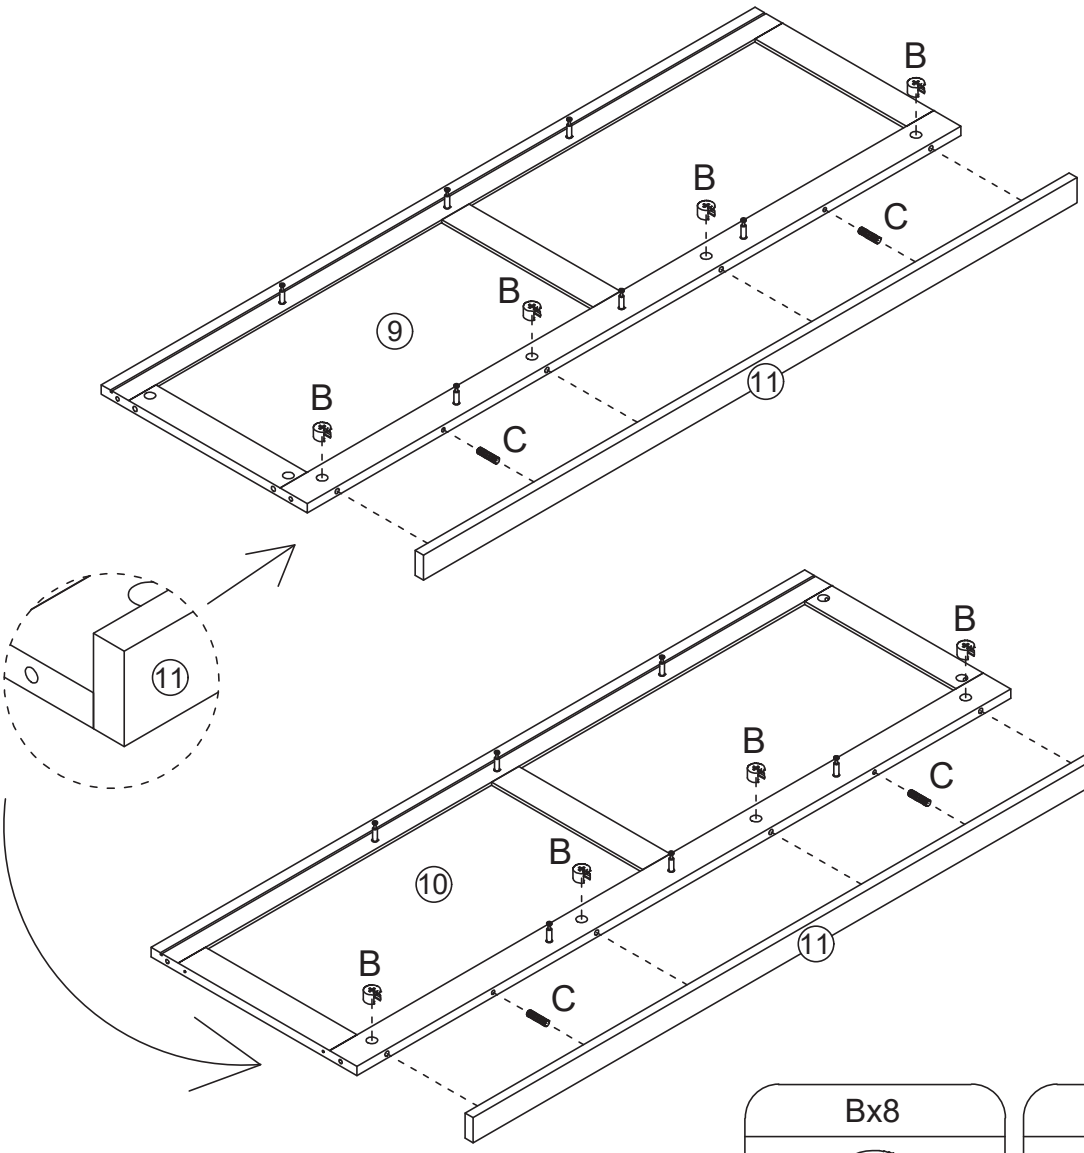


Bx8	Cx4
 Ø15x10mm	 Ø6x30mm


4

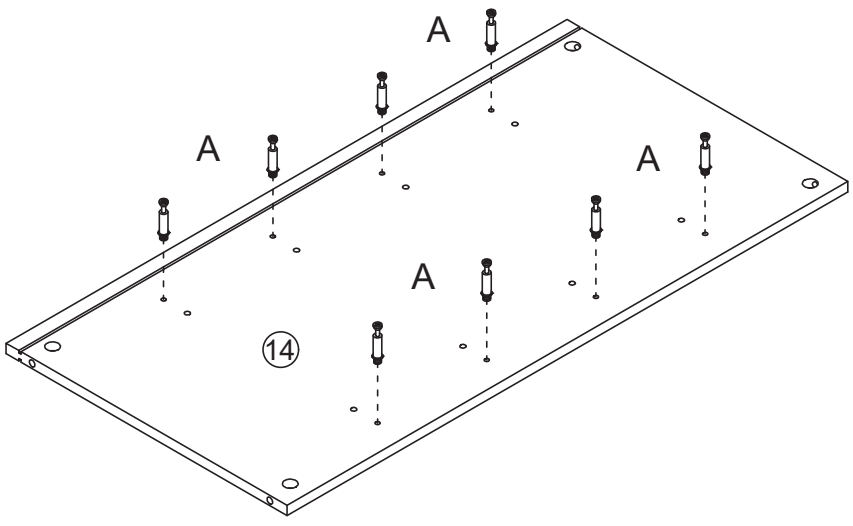


Ax8
 Ø6x35mm

5

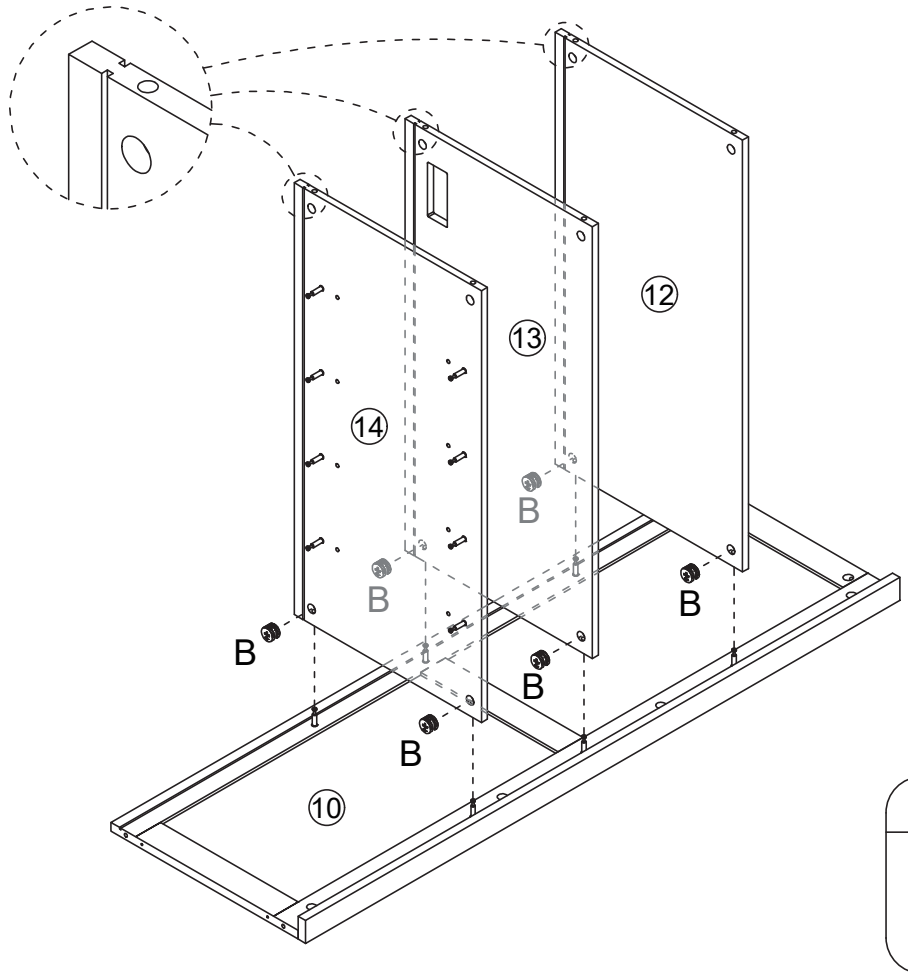


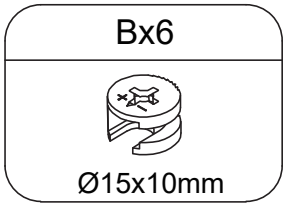

6

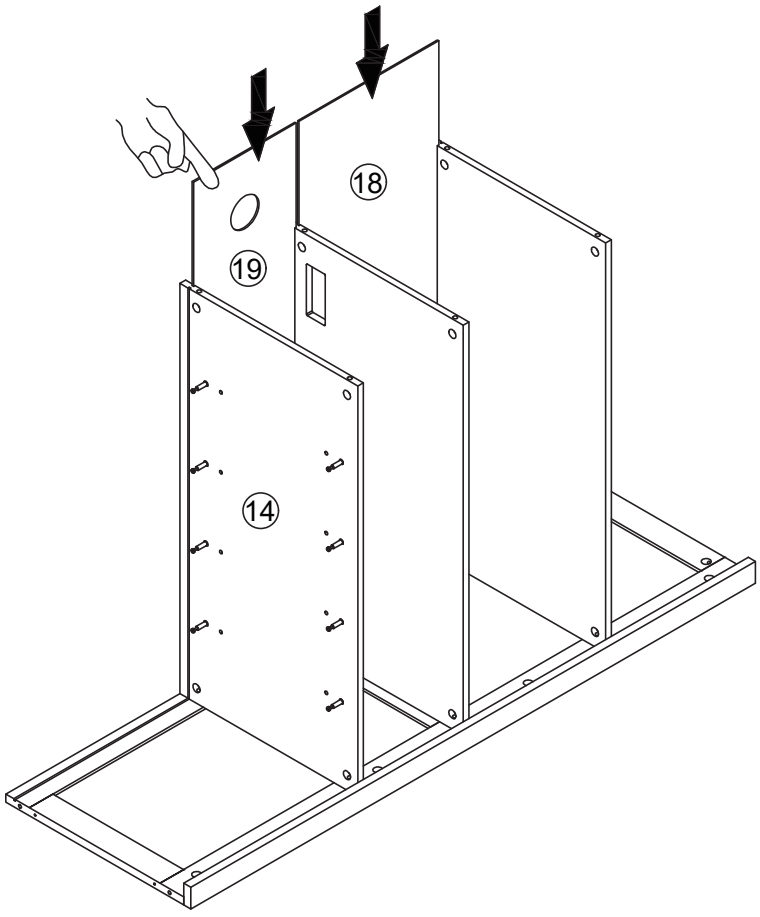

7

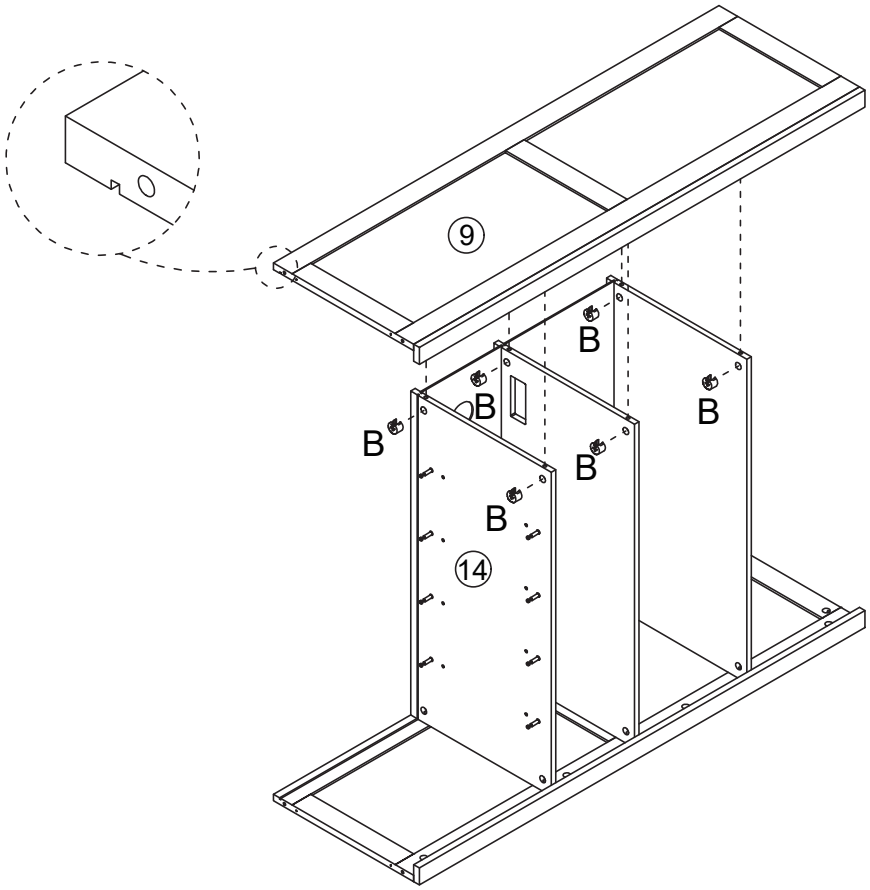


Bx6



Ø15x10mm

8

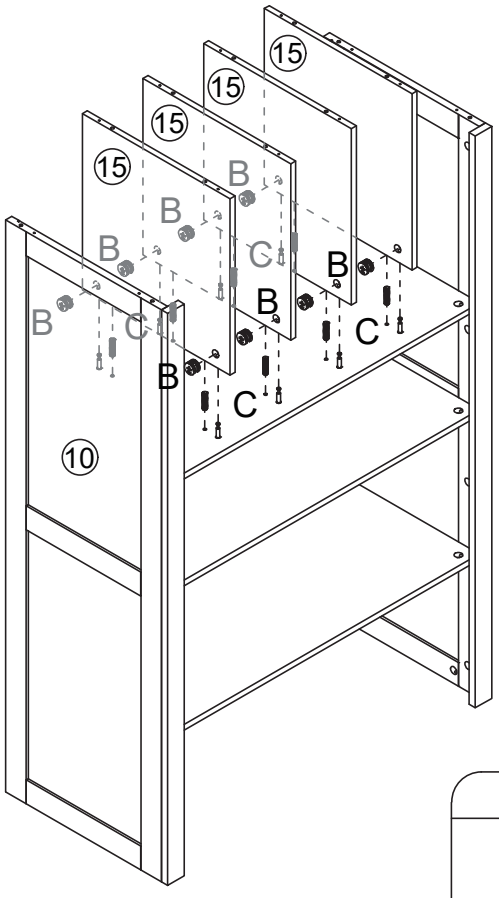

Bx8




Ø15x10mm

Cx8



Ø6x30mm

9

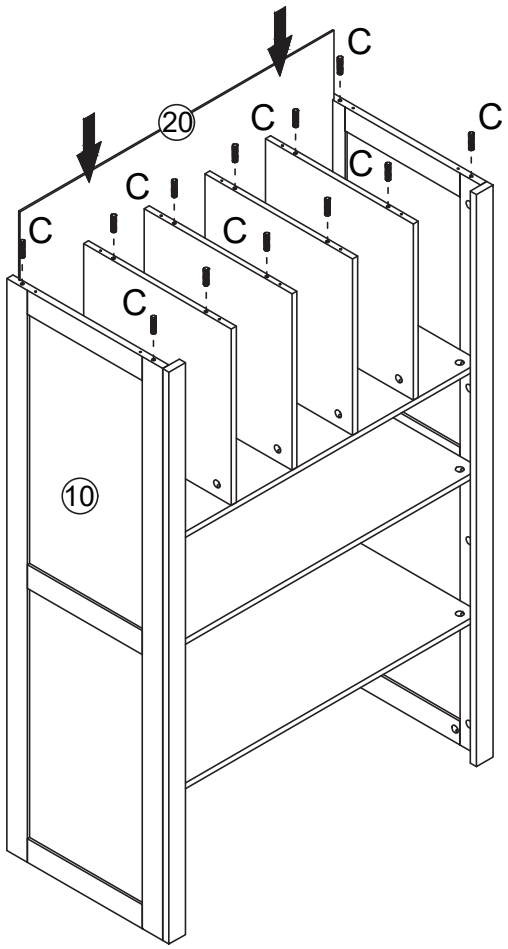


Cx12




Ø6x30mm

10

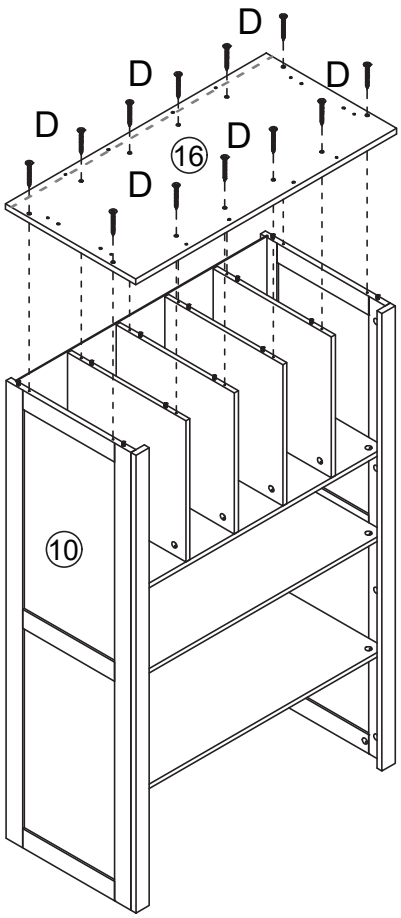


Dx12




Ø4x35mm

11

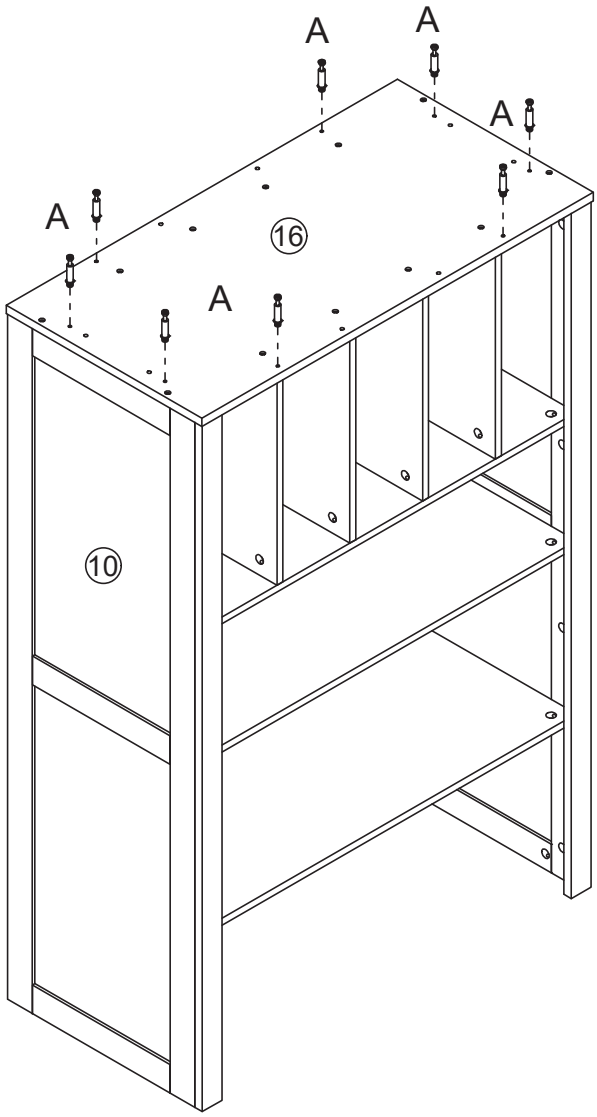


Ax8




Ø6x35mm


12

x2

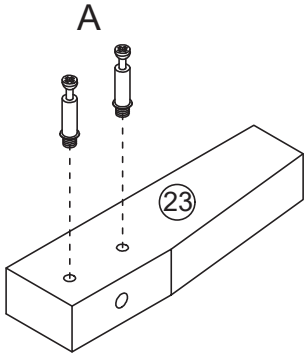

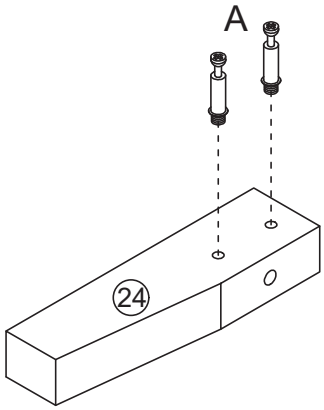


Ax8



Ø6x35mm

13

x2

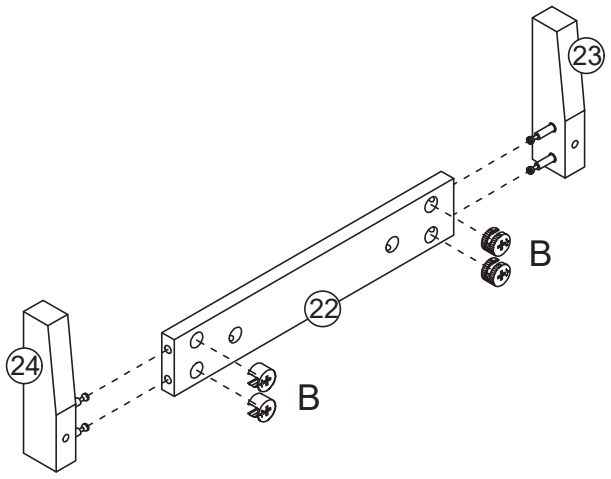


Bx8



Ø15x10mm

14

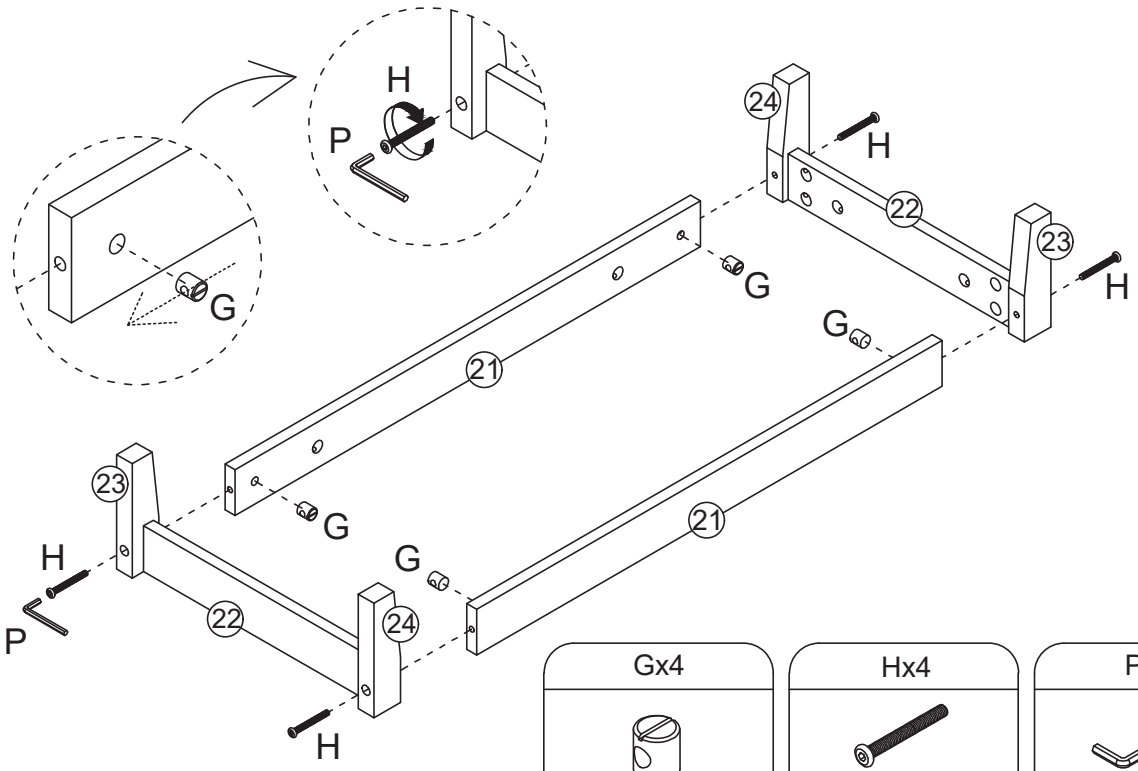

Gx4


Hx4

Ø6x60mm


Px1




15

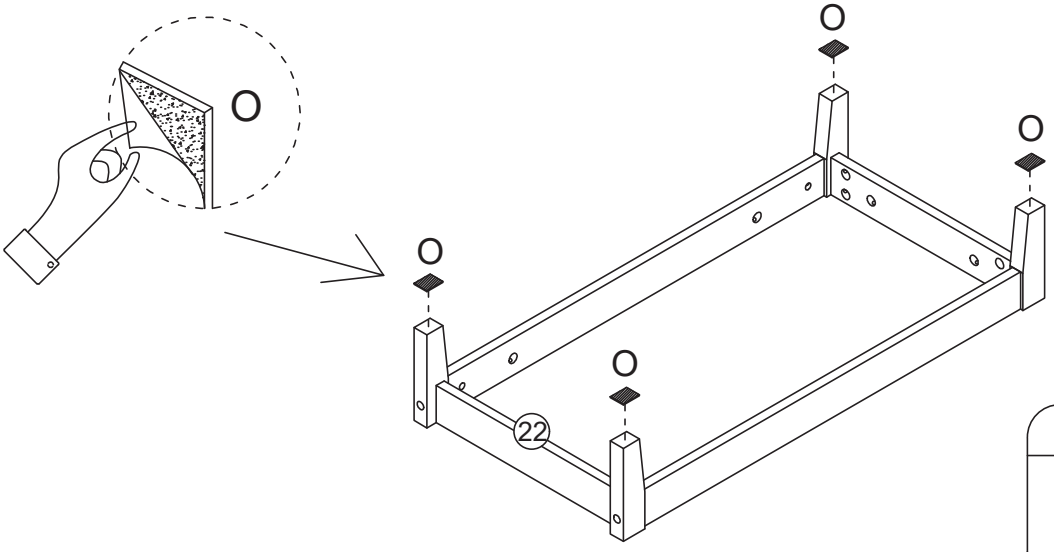

Ox4





16

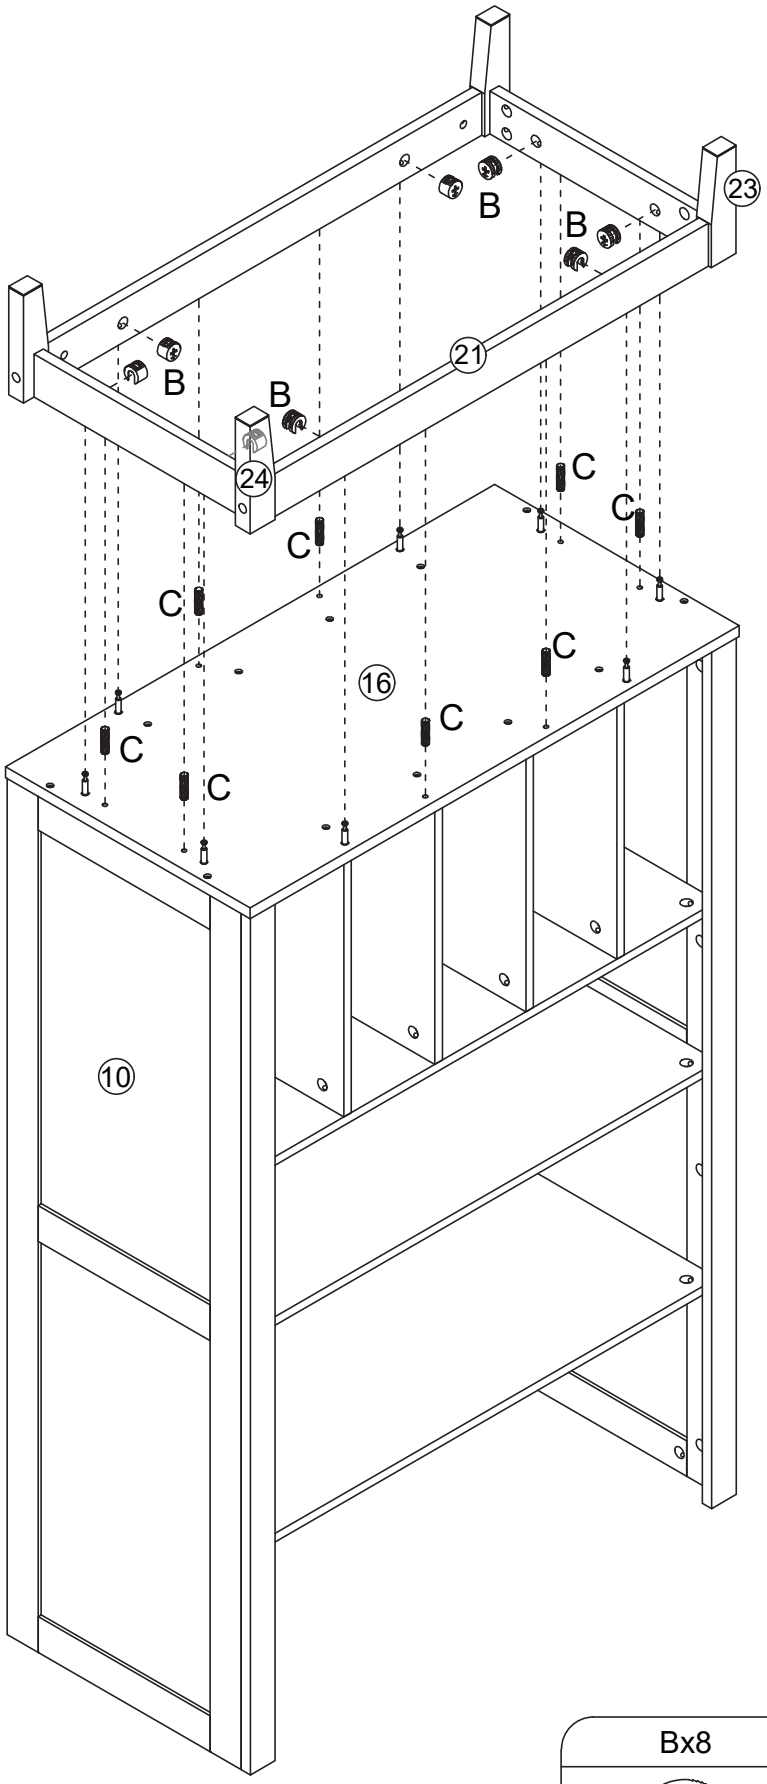


Bx8	Cx8
	
Ø15x10mm	Ø6x30mm


17

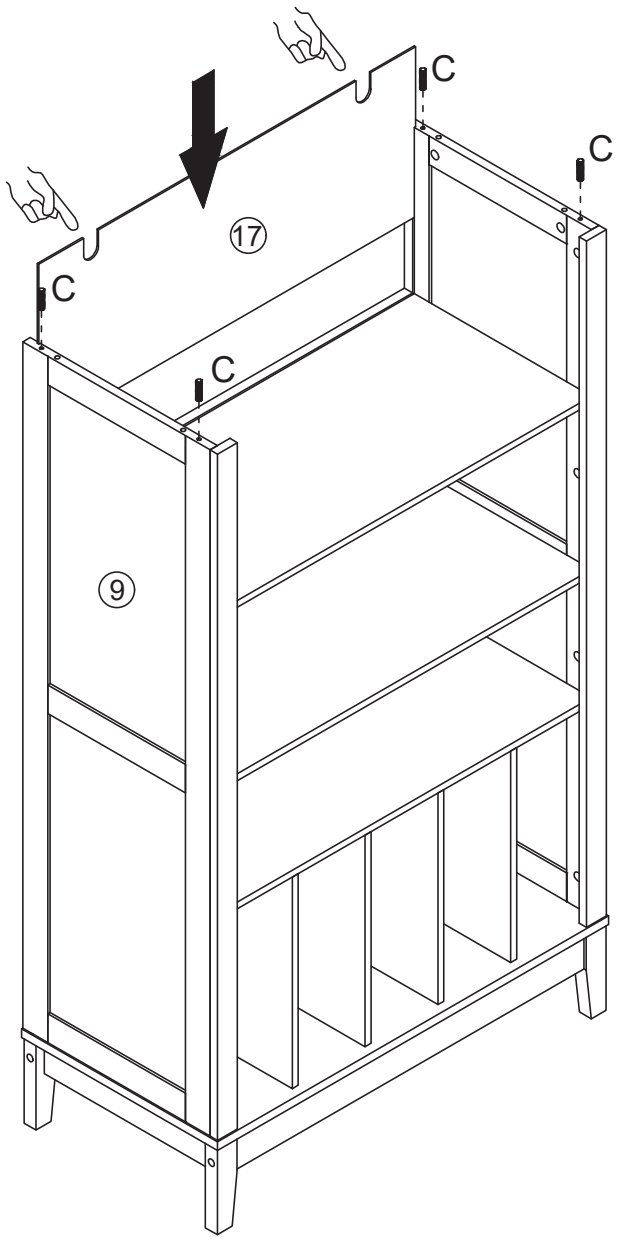

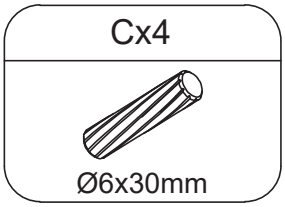


18

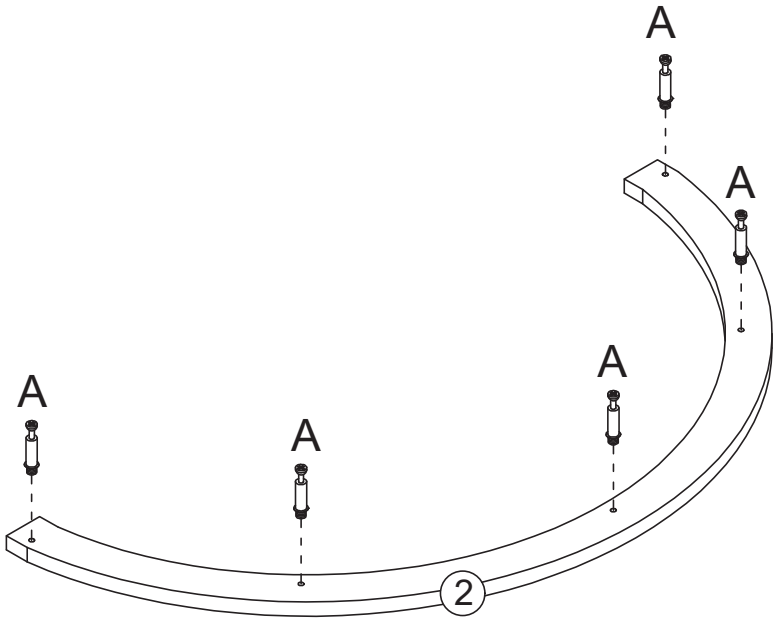

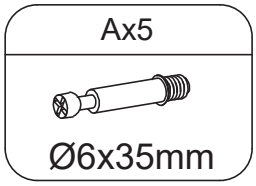

19


Caution : The hole position of plate 6 is upward.

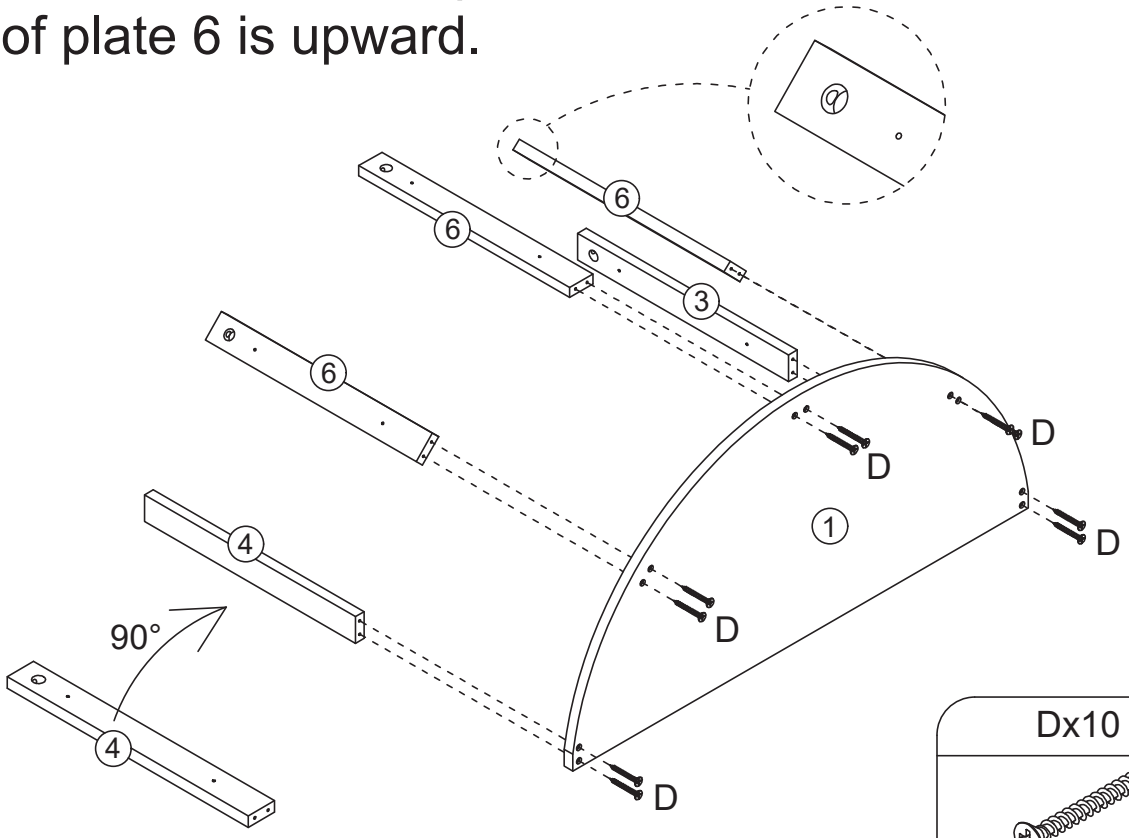

Dx10

Ø4x35mm

20

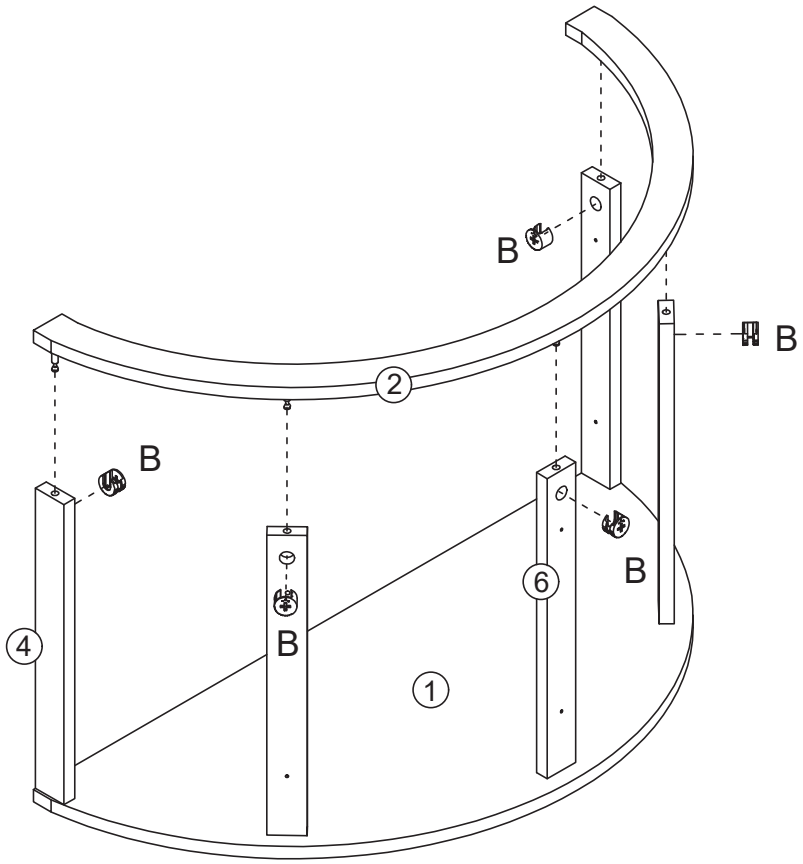


Bx5





Ø15x10mm

21

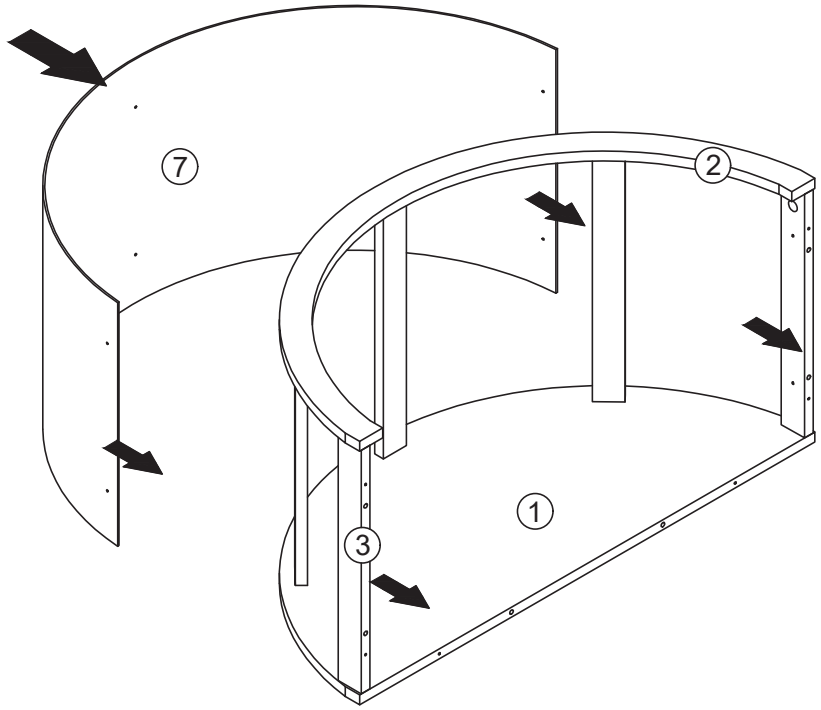


Caution : Before assembly, the back plate #7 can be bent in advance to reduce the difficulty of subsequent installation. Then, through the reserved holes, it can be fixed on plates #3, #4, and #6 using plate #5.

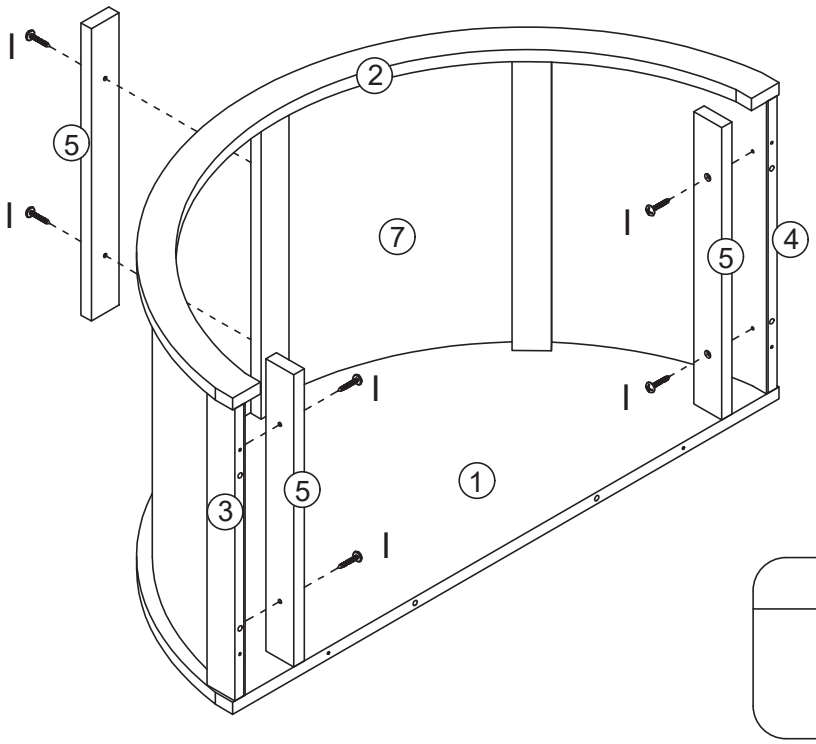


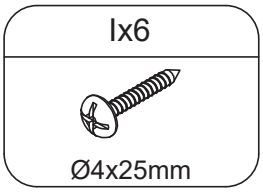

22

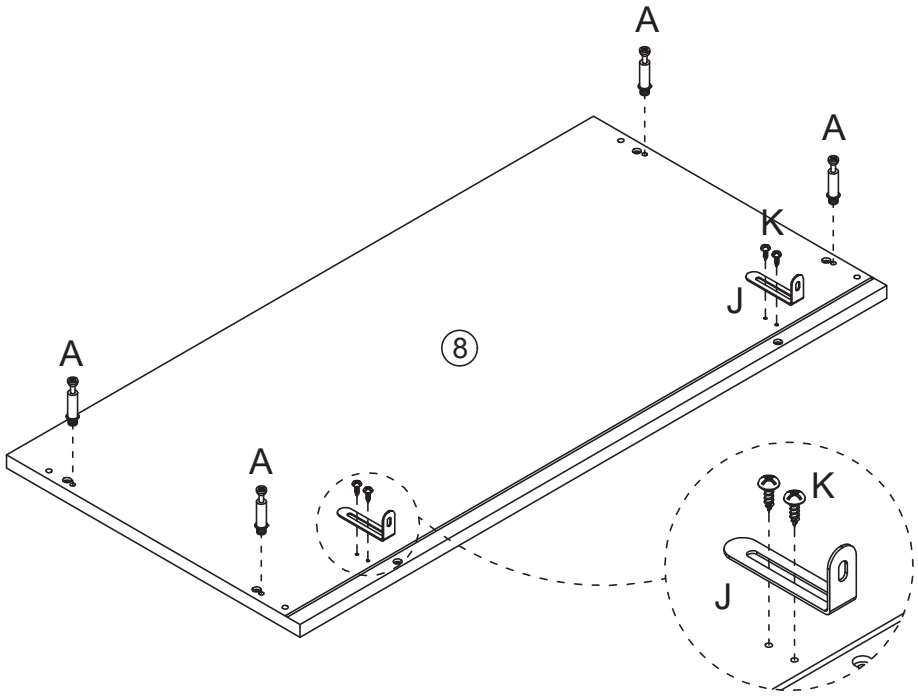

Ax4



Ø6x35mm

Jx2




Kx4




Ø4x14mm

23

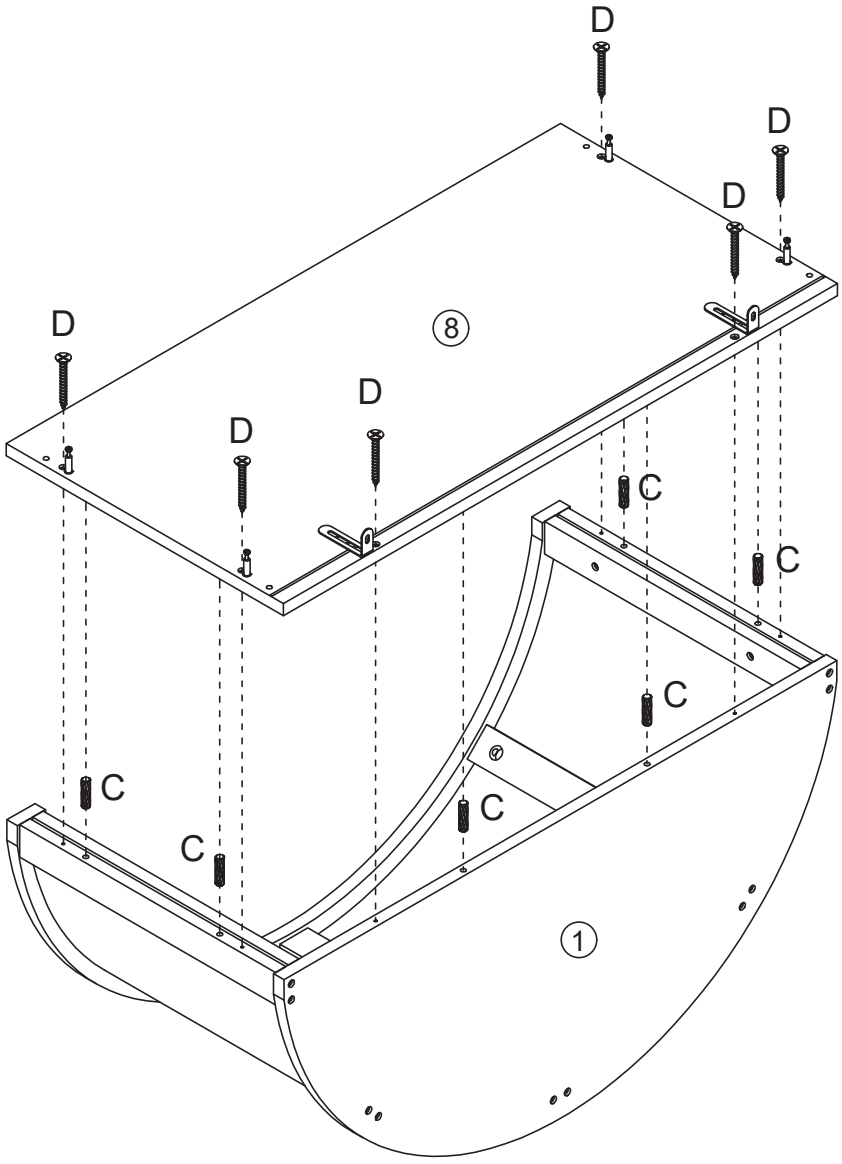


Cx6




Ø6x30mm

Dx6



Ø4x35mm

24

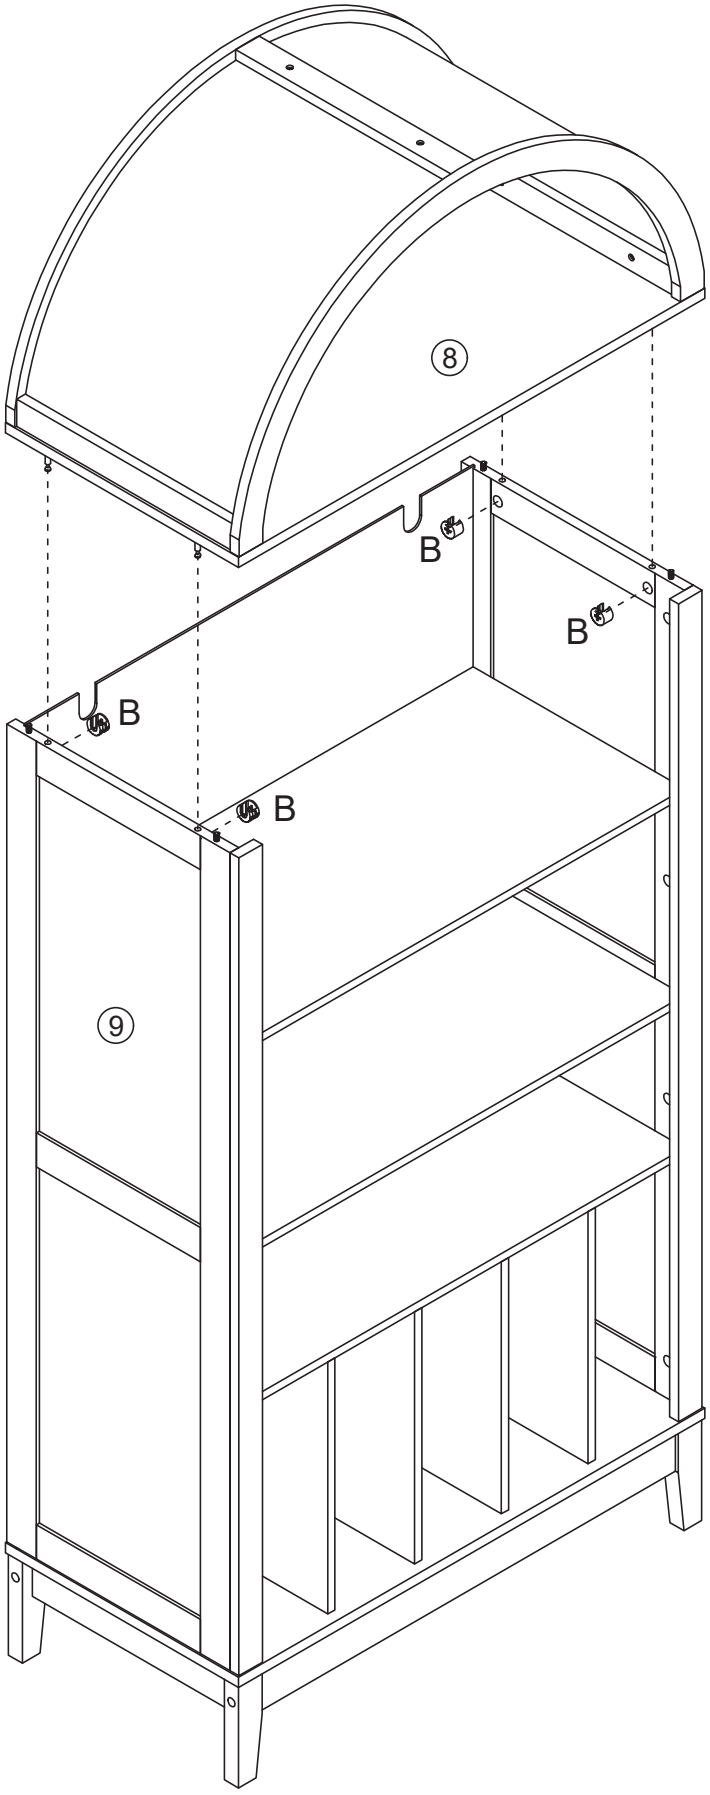


Bx4




Ø15x10mm


25

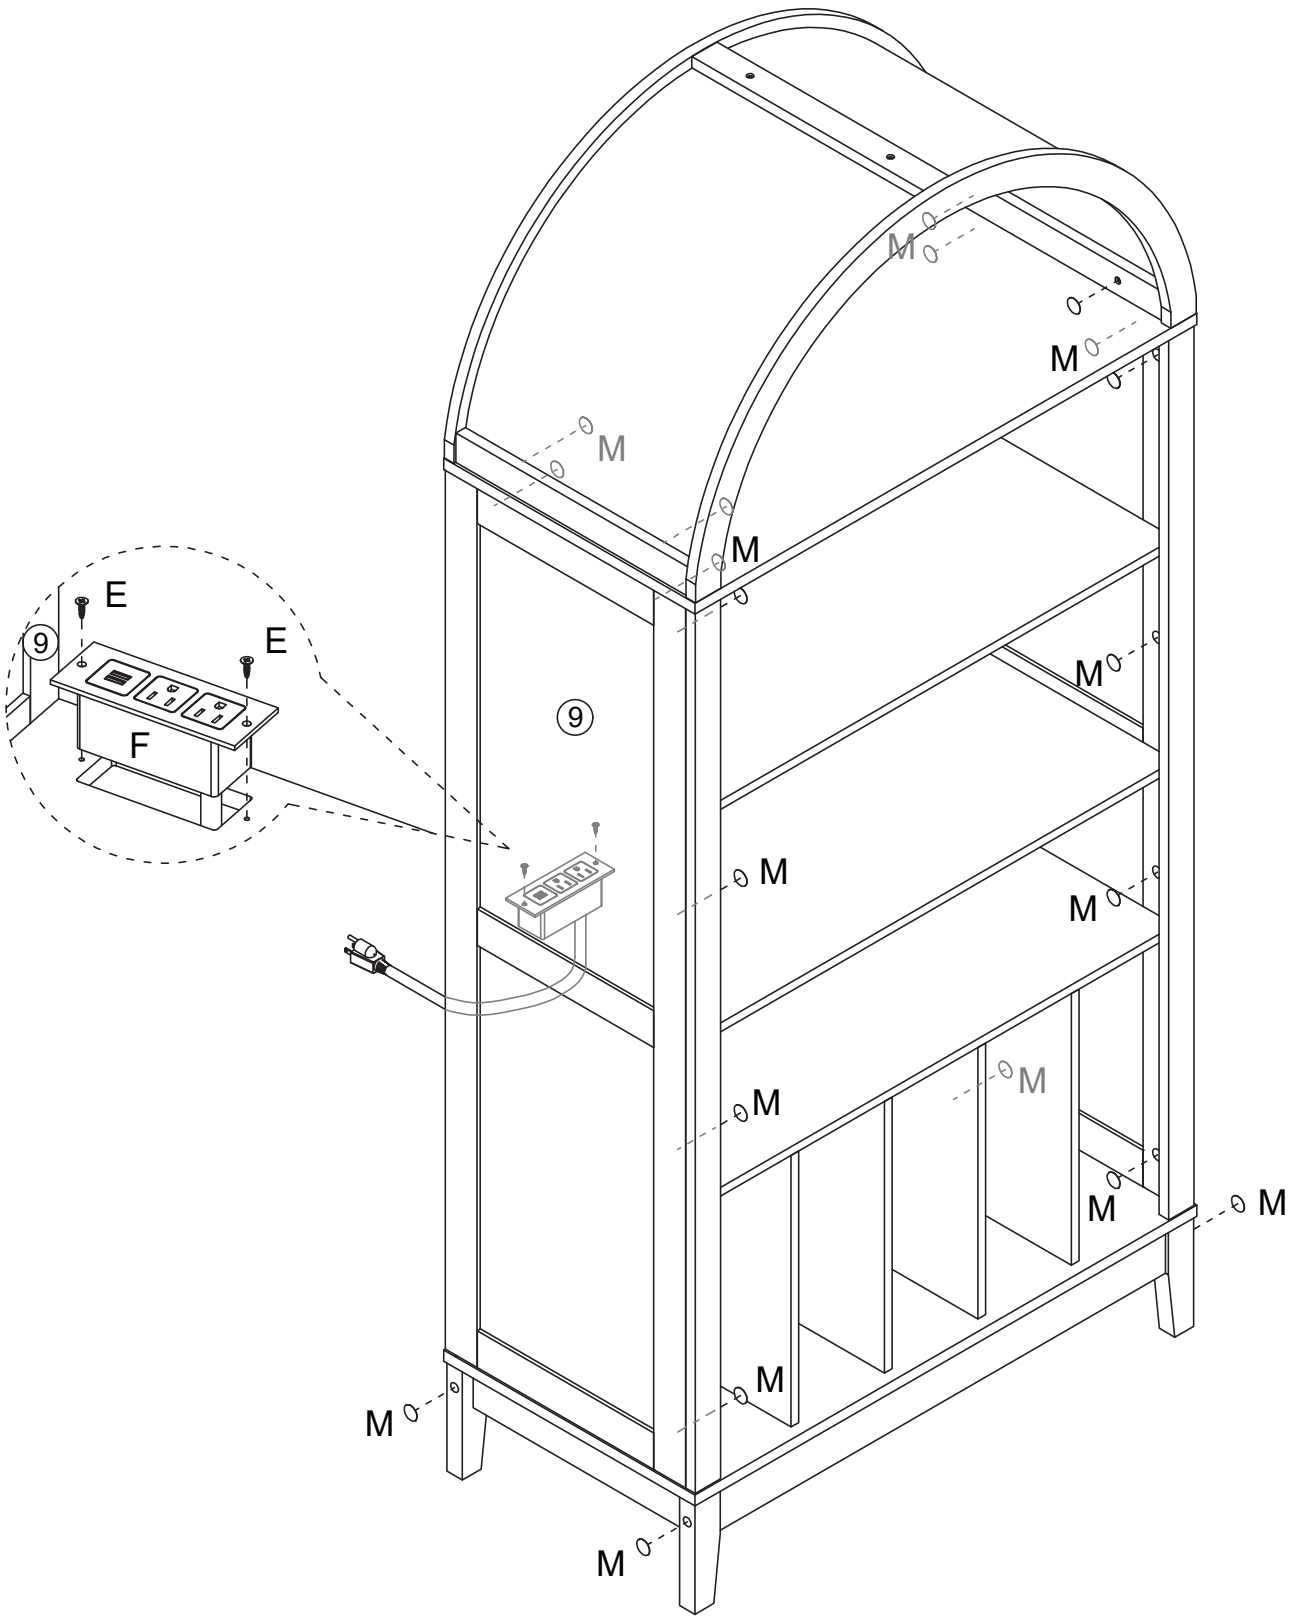



Ex2	Fx1	Mx20
Ø3.5x12mm		

26

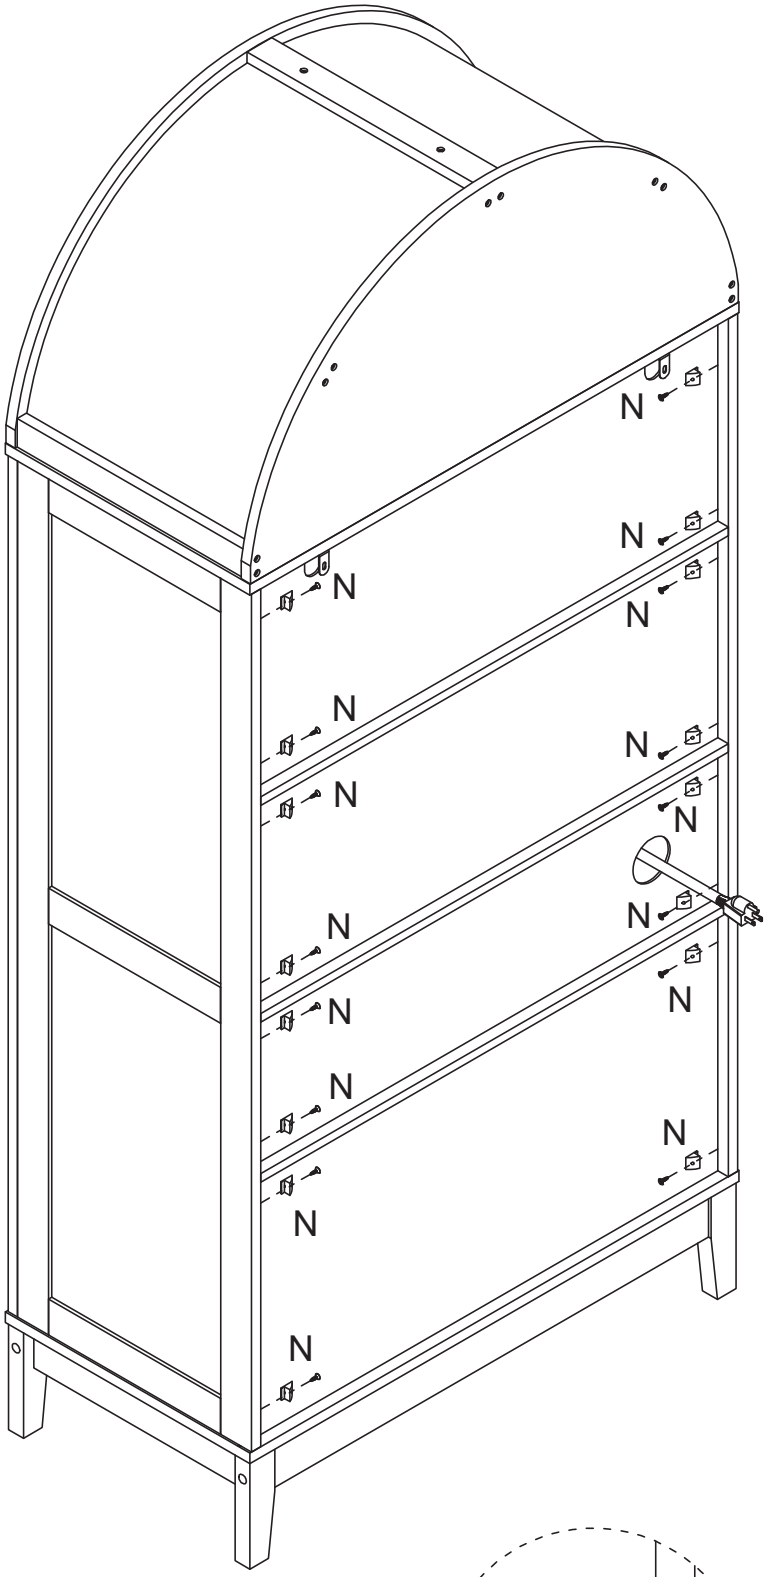


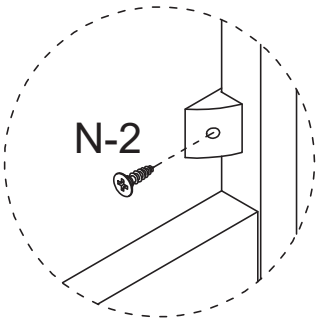


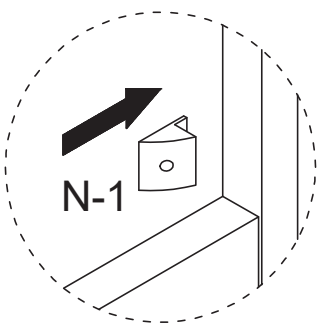


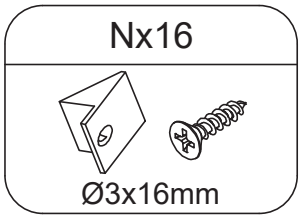



27

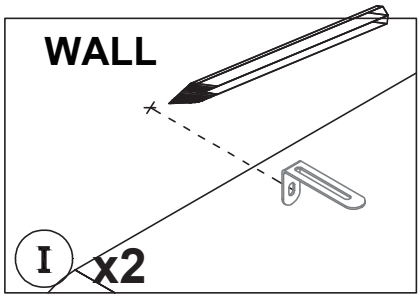

WALL
I x2

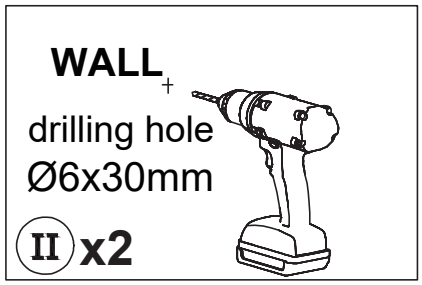
WALL
drilling hole
Ø6x30mm
II x2

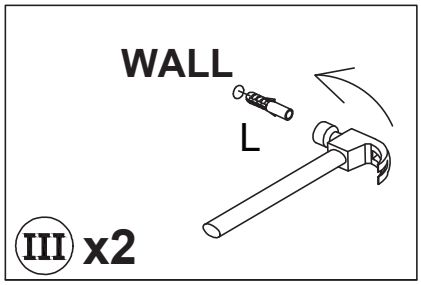
WALL
L
III x2

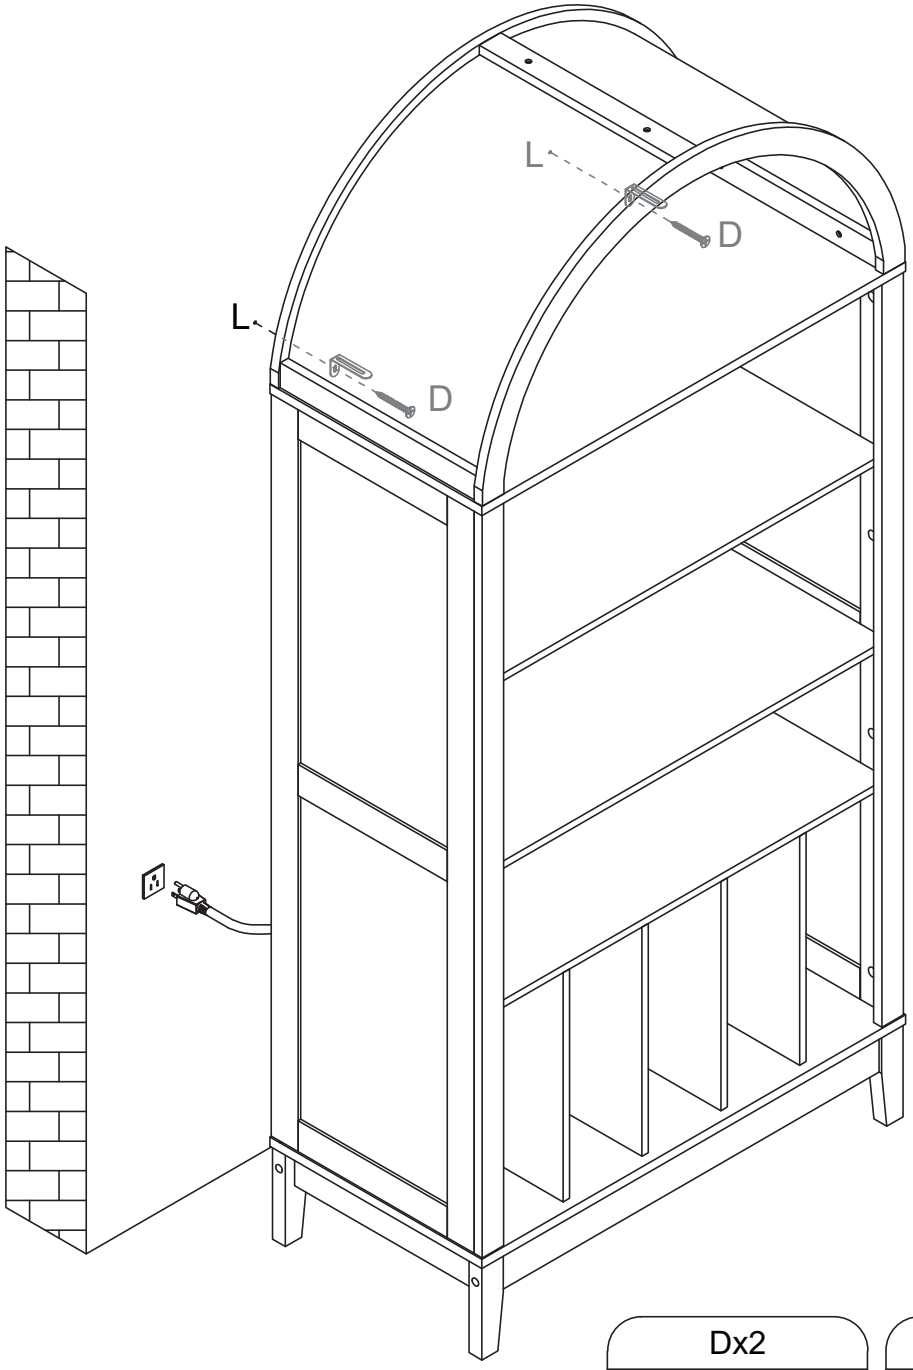
L
D
L
D

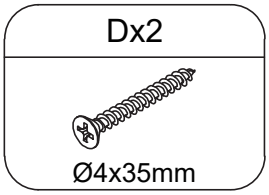
Dx2
Ø4x35mm

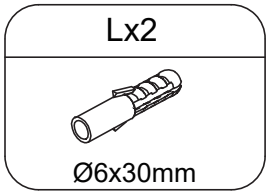
Lx2
Ø6x30mm

AFTER-SALE SERVICE

If you have any suggestions for our products or find that the products have quality problems, please contact us first, our after-sales team will reply you within 24 hours, and we will do our best to give you solutions until you are satisfied.

Guaranteed Customer Service

Your shopping experience is very important to us!
Feel unsatisfied? **Contact us!**
Have any questions? **Contact us!**

Wanna share your experience with our products?
Share your pictures with us.

Any suggestions? **Contact us!**
We gotcha back!