

PRODUC DESCRIPTION

Wood Vanity with White Marble Countertop

- Elegantly Refined Wood Base
- White Marble Countertop
- Storage Cabinet
- Single Hole Faucet Drilling

NOTE: ASSEMBLY SHOWN IS WITH STONE VESSEL, PUSH BUTTON CLOSING UMBRELLA DRAIN AND FAUCET. ALL SOLD SEPARATE.

PRODUCT MEASUREMENTS

- Width: 24 inches (60.96 cm)
- Depth: 22 inches (55.88 cm)
- Height: 29 inches (73.66 cm)



RECOMMENDED ACCESSORIES


- Any Stone Vessels
- Bottle Trap
- Umbrella Drain

THANK YOU

BEFORE YOU BEGIN

1. Prior to installation, unpack your new product and inspect it. Keep the product in its original package until you are ready to install it.
2. The wall must be square, plumb and level.
3. Shut the water supply off when replacing an existing fixture. Preparation of the floors and walls, including all additional wall supports, may be required.
4. Observe all local plumbing and building codes.
5. It is recommended that this installation be done with a minimum of two people. Do not install this fixture alone.


RECOMMENDED TOOLS

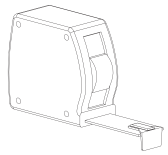

Tape Measure




Adjustable Wrench



Pipe Clamp



Channel Locks

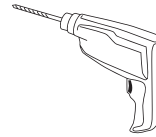


Drill





Hack saw





Level

Phillips
Screwdriver

Pipe Wrench

Plumber's Putty or
Caulking

Putty Knife

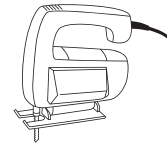Flathead
Screwdriver


Scroll Saw



Pipe Cutter



Pencil




Square




Ruler

ROUGHING-IN DIMENSIONS

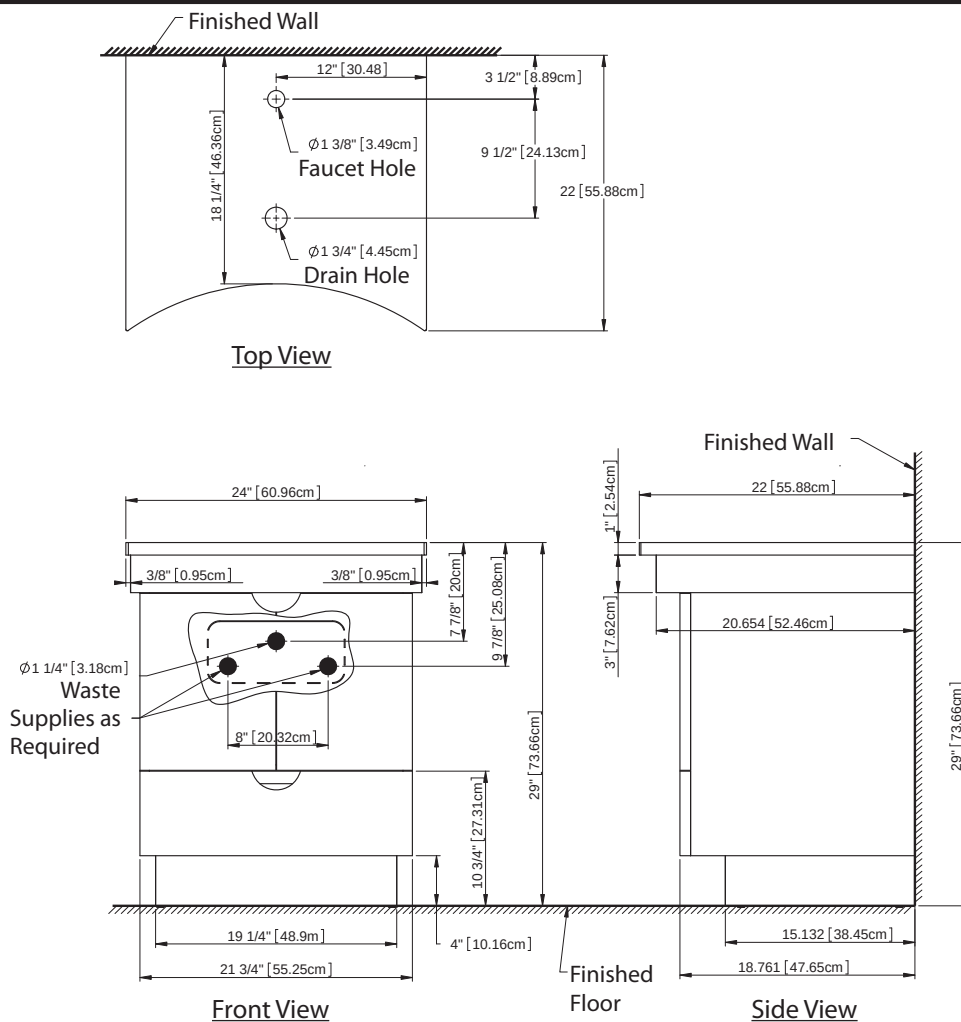


PARTS

Item	Description	Qty
A	Marble Top	1
B	Vanity	1

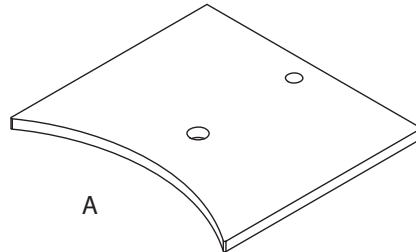

A

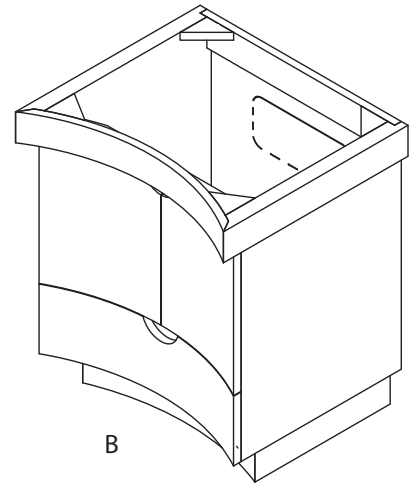

B

INSTALLATION INSTRUCTIONS

• STEP #1

- o With assistance, place Vanity (B) in desired location.
- o It is recommended to locate at least one stud within area where Vanity (B) is to be installed. Pre-drill holes through Vanity Back Side and Wall Stud. Using Wood Screws fasten Vanity (B) to Wall Stud through Vanity Back Side.
- o **NOTE: WOOD SCREWS NOT PROVIDED!**
- o Refer to Figure #1.

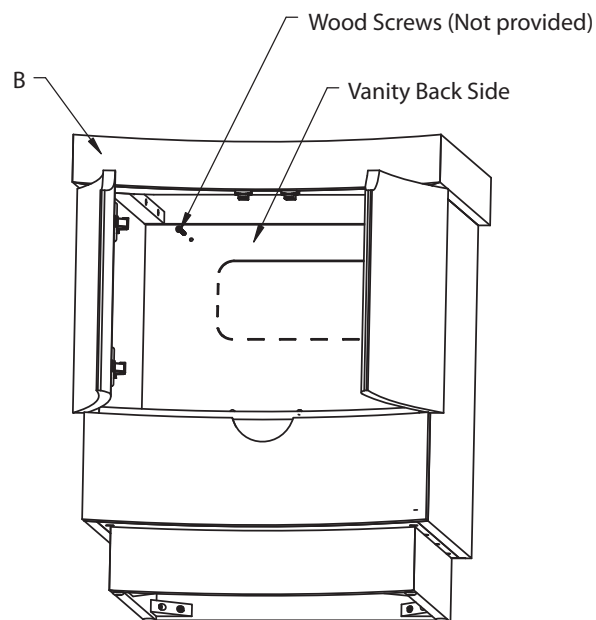


Figure #1

INSTALLATION INSTRUCTIONS

• STEP #2

- o Apply a thin bead of silicone to the vanity top.
- o Set the Marble Top (A) and align it to vanity (B).
- o Clean off excess silicone before it sets.
- o Refer to Figure #2.

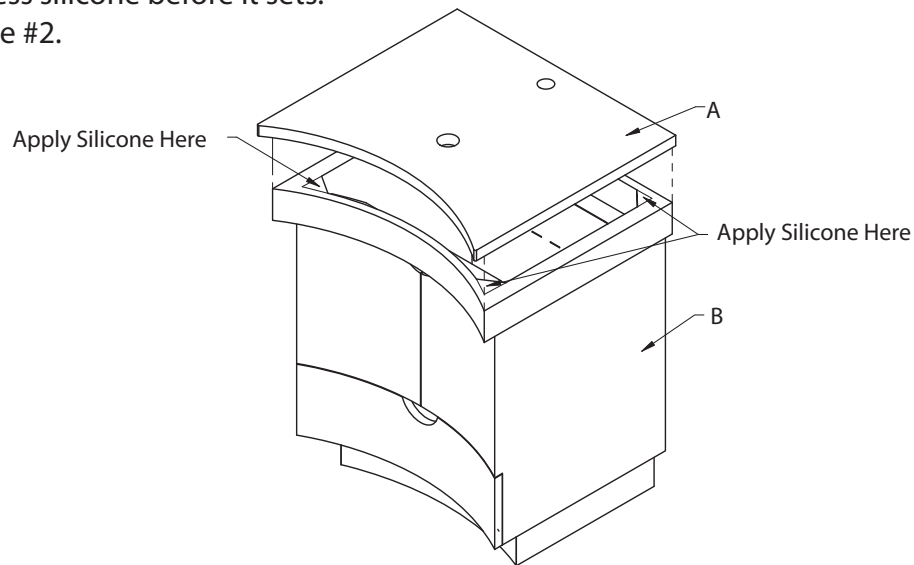


Figure #2

• STEP #3

- o Install Vessel and Drain Assembly according to manufacturer's installation instructions.
- o Refer to Figure #3.
- o NOTE: ASSEMBLY SHOWN IS WITH STONE VESSEL, AND PUSH BUTTON CLOSING UMBRELLA DRAIN. ALL SOLD SEPARATE.

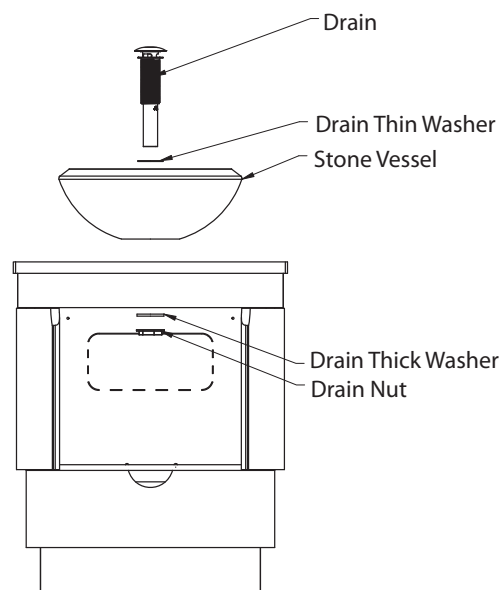


Figure #3

INSTALLATION INSTRUCTIONS

• STEP #4

- o Install Waste System according to the manufacturer's installation instructions.
- o Refer to Figure #4.
- o **NOTE:** TRAP SYSTEM SHOWN, BOTTLE TRAP, IS A RECOMMENDED ACCESSORY AND NOT INCLUDED.

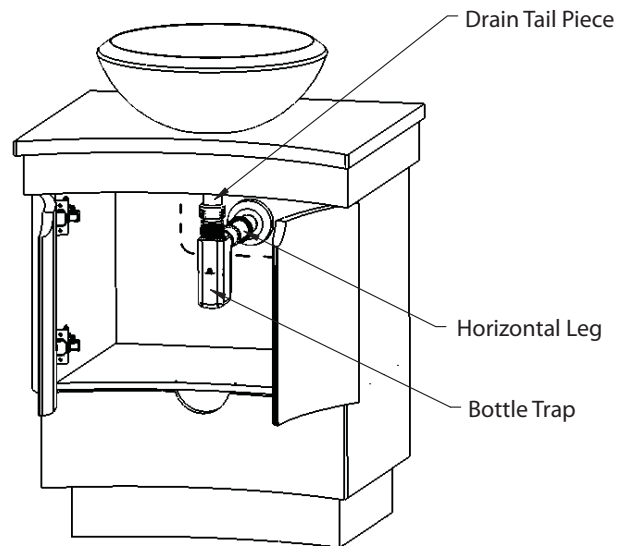


Figure #4

• STEP #5

- o Install faucet and water supply according to manufacturer's installation instructions.
- o **NOTE:** FAUCET AND WATER SUPPLIES NOT INCLUDED!
- o Check for leakage.
- o Refer to Figure #5 for finished Vanity.

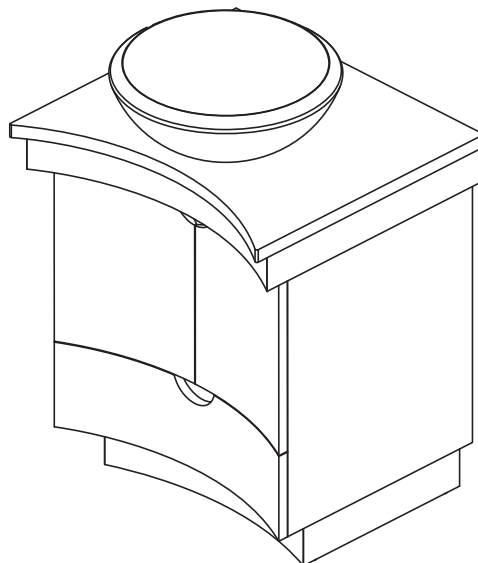


Figure #5

CARE AND CLEANING

- DO NOT OVERTIGHTEN DRAIN. Overtightening of the drain can damage your product.
- DO NOT clean the product with Detergents, Acid, Abrasives, Harsh Cleaners or a cloth with a coarse surface (S.O.S.® Pads, Scotch Brite® Pads).
This is good advice for any plumbing fixture regardless of material.
- DO NOT leave any cleaning agents other than water on your product.
- DO NOT allow your product to unnecessarily encounter other solid objects.
- DO clean your product. Wipe with a damp cloth and dry with a soft cloth. If necessary, a general mild soap and water solution can be used.
Use a mild furniture polish to clean wood frame.
- DO clean underside of your product with mild soap and water ONLY. •
DO wipe your product with a clean, dry, soft cloth after each use, as it will limit water spots, especially in hard water areas.
- DO clean your mirror. Wipe with a glass cleaner and a clean soft cloth. Use a mild furniture polish to clean wood frame.
- Recommends proper sealing of ALL natural stone products PRIOR TO INSTALLATION.

WARRANTY
