









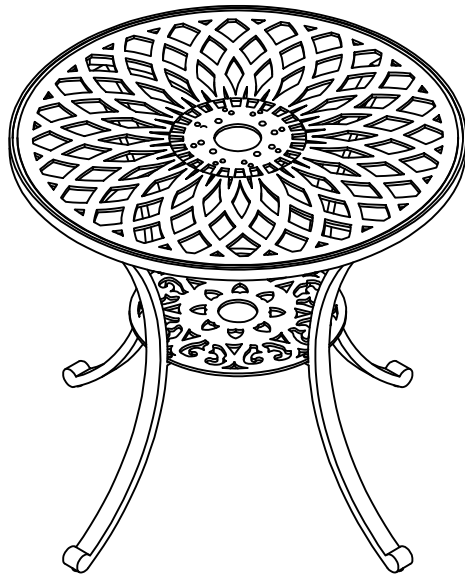


IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY


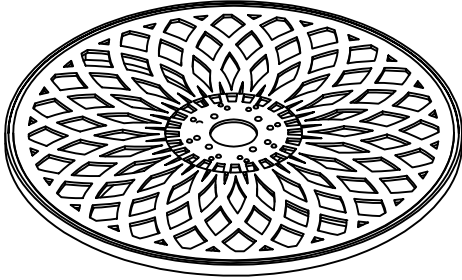


A		1PC	AA	 M8*35 Bolt	8PCS
			BB	 M8*30 Bolt	4PCS
			CC		12PCS
B		4PCS	DD		12PCS
			EE		12PCS
			FF		12PCS
C		1PC			

1

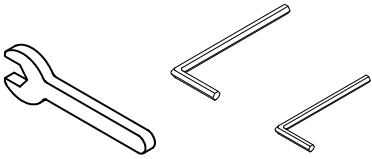
- AA *8PCS
- EE *8PCS
- FF *8PCS
- CC *8PCS
- DD *8PCS

Step 1 needs to be repeated four times

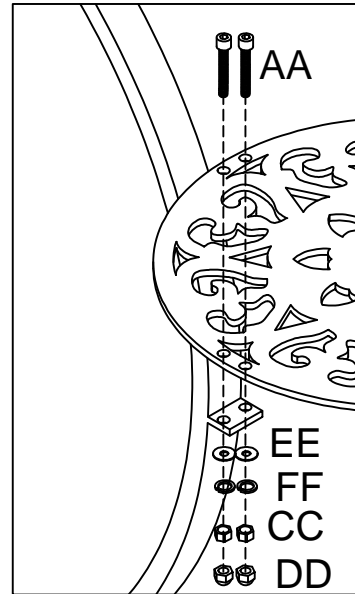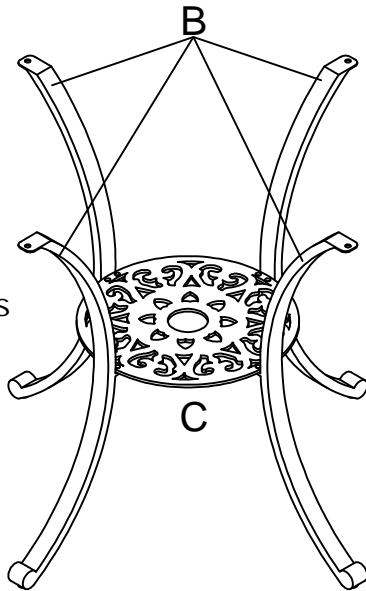

2



- BB *4PCS

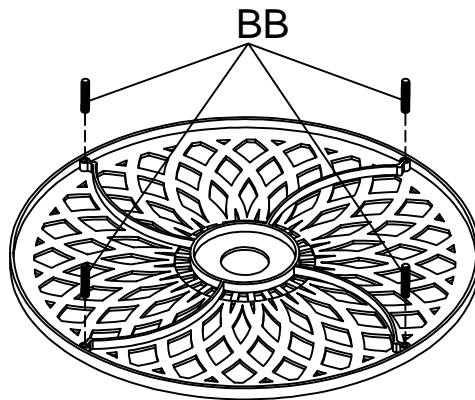

3

- EE *4PCS
- FF *4PCS
- CC *4PCS
- DD *4PCS

Step 3 needs to be repeated four times

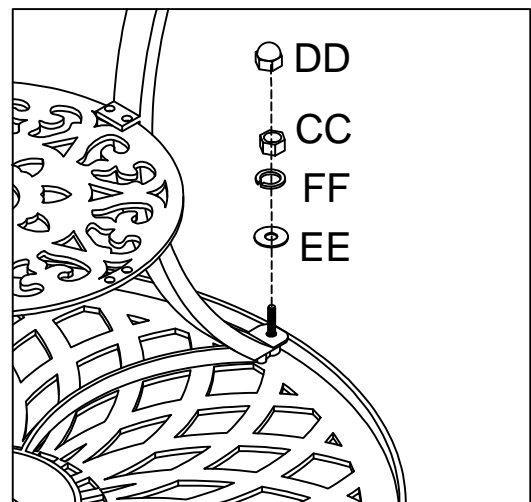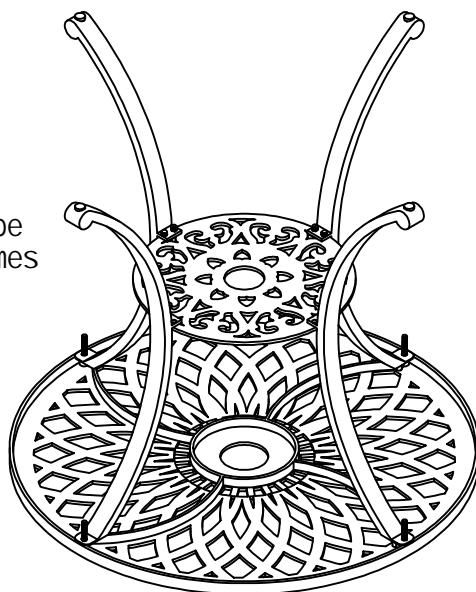

Installation Completed