







ASSEMBLY INSTRUCTIONS






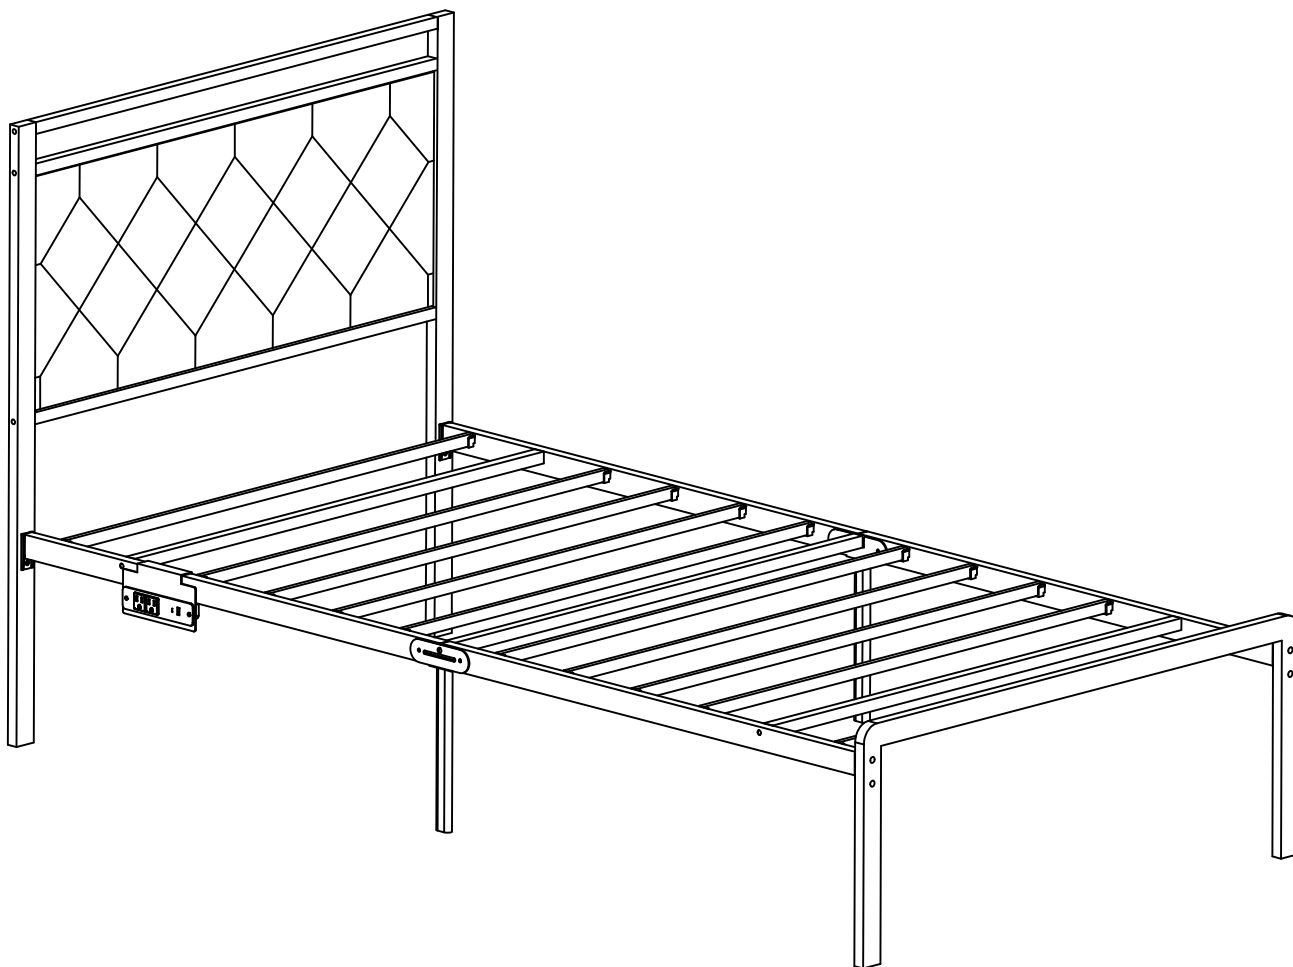


Model Number: WF-5818-TB

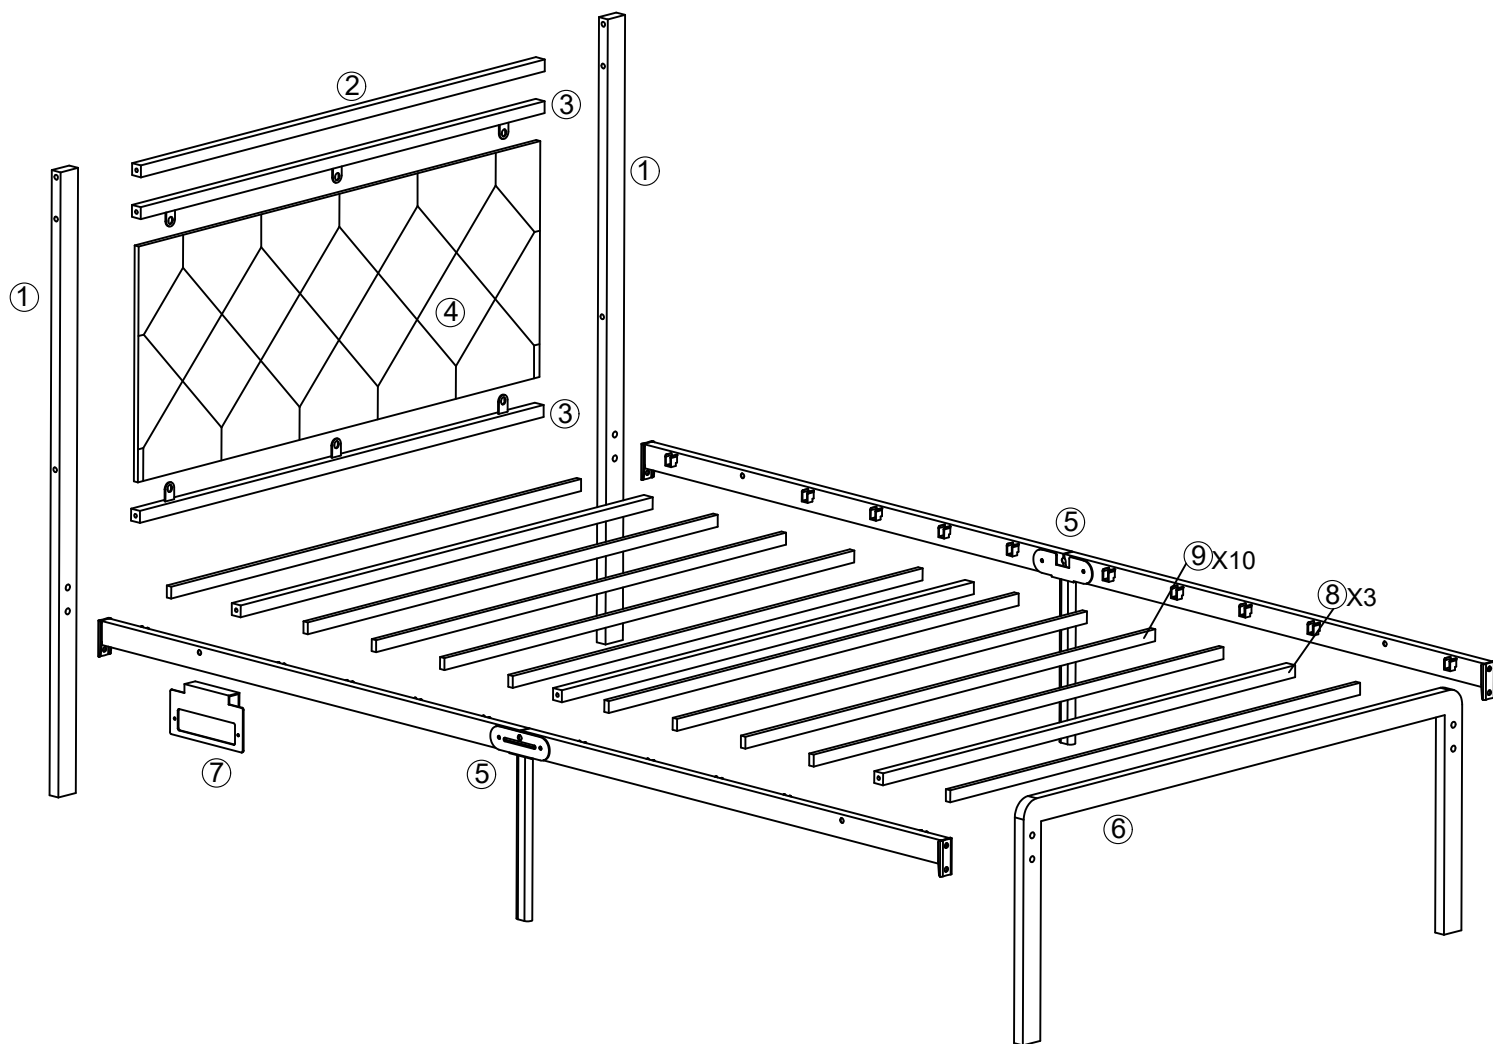


Hardware

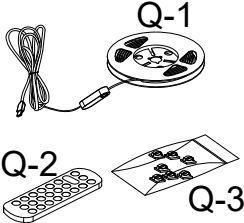 M8×40mm A ×8pcs+1pc	 M6×60mm B ×6pcs+1pc	 M6×40mm C ×6pcs+1pc	 M6×12mm D ×6pcs+1pc	 M4×12mm E ×2pcs+1pc
 M4 F ×1pc	 G x1pc	 Q×1pc		

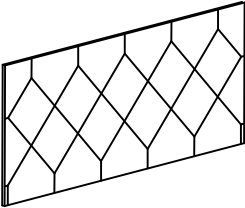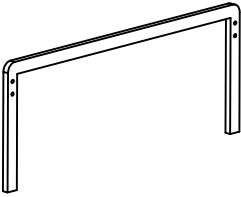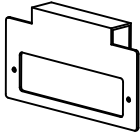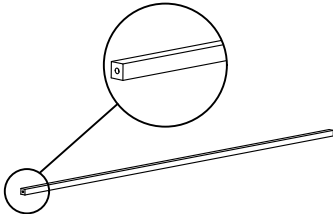
 ① ×2pcs	 ② ×1pc	 ③ ×2pcs	 ④ ×1pc
 ⑤ ×2pcs	 ⑥ ×1pc	 ⑦ ×1pc	 ⑧ ×3pcs
 ⑨ ×10pcs			

1

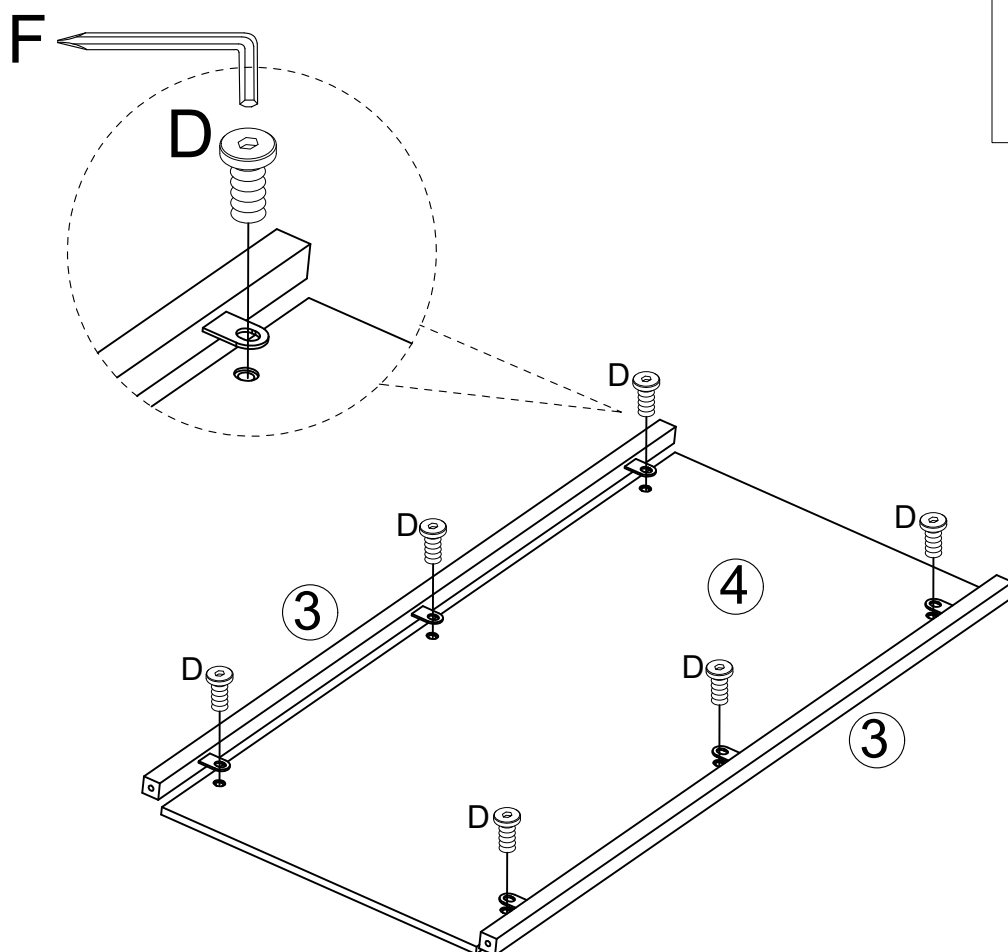

M6×12mm
 D × 6pcs

2

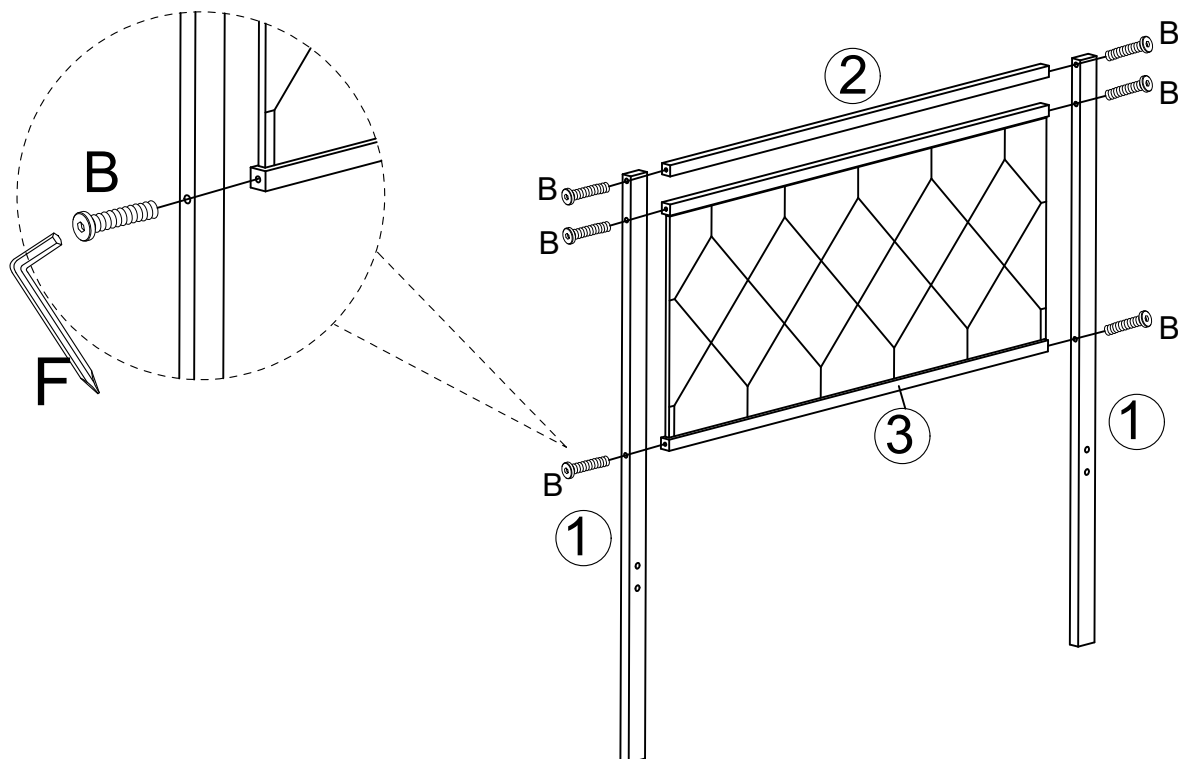


M6×60mm
 B × 6pcs

3




M8×40mm

A × 8pcs

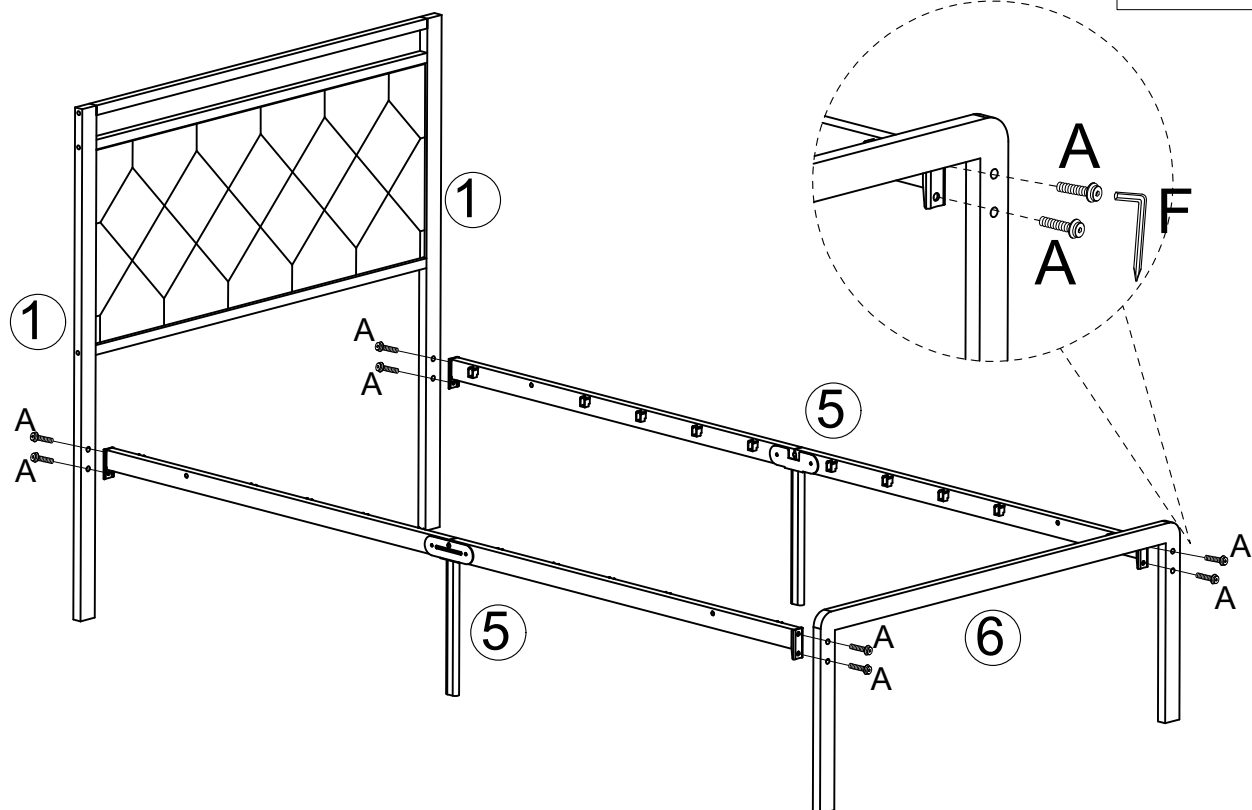


4

Screw C is locked at 70% first! After all the components are assembled, it is locked tightly at 100%.




M6×40mm


C × 6pcs

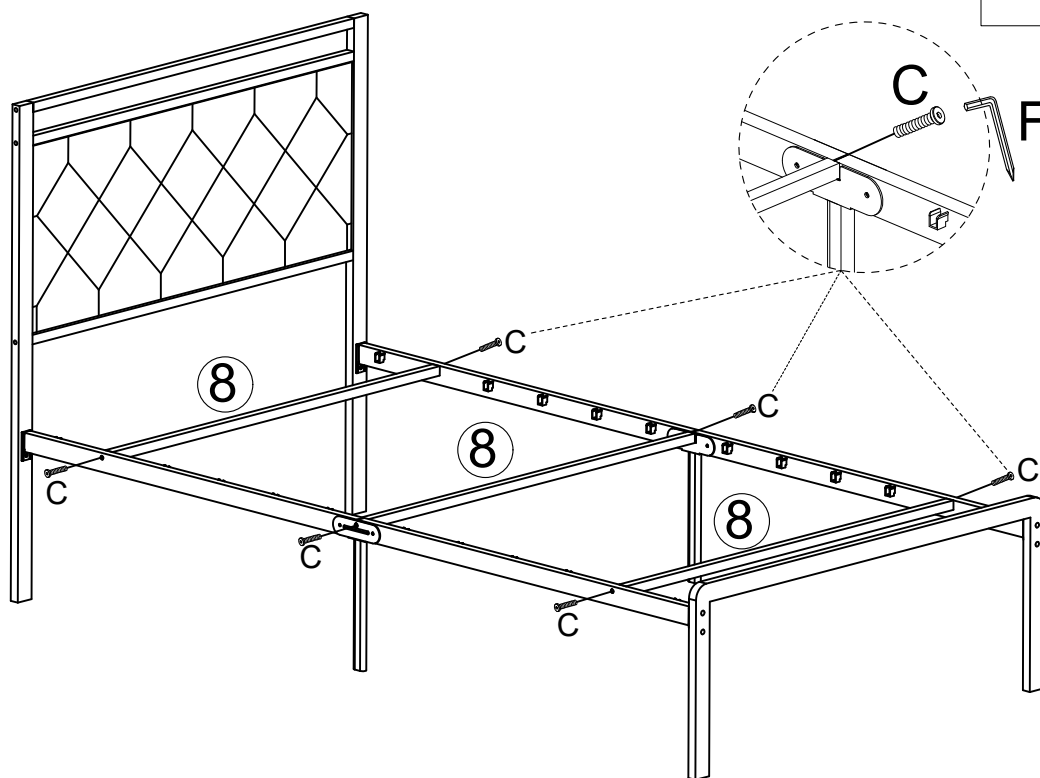

5

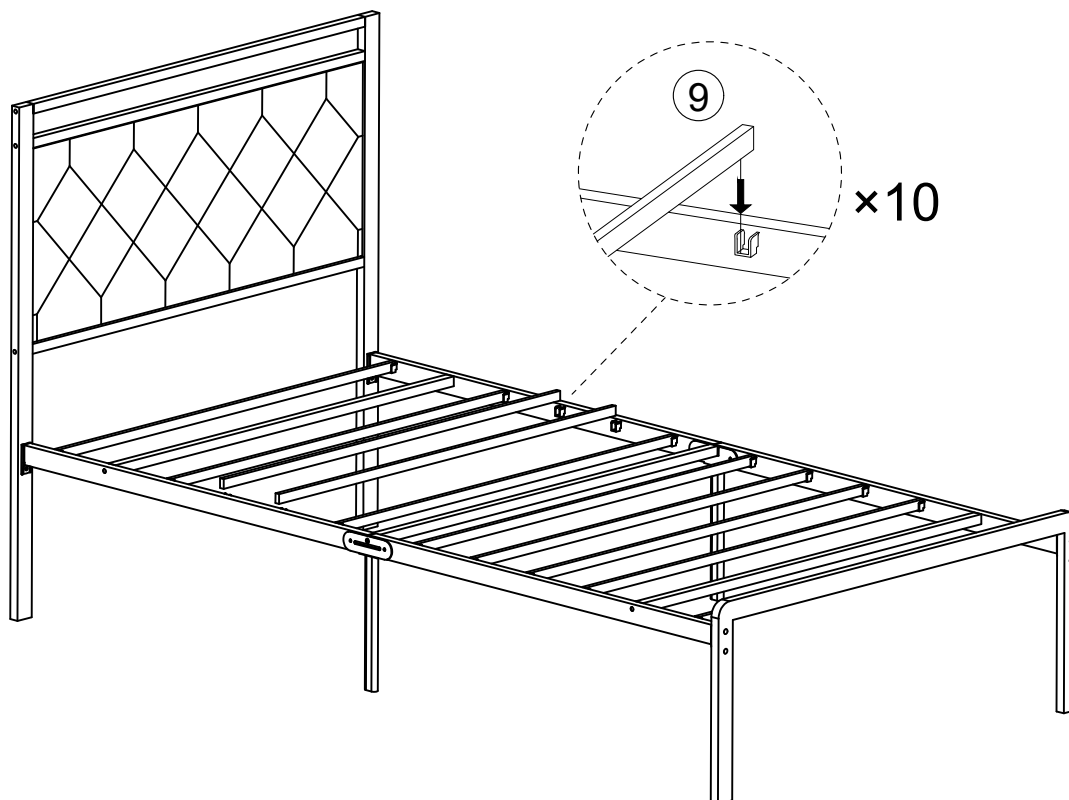



6

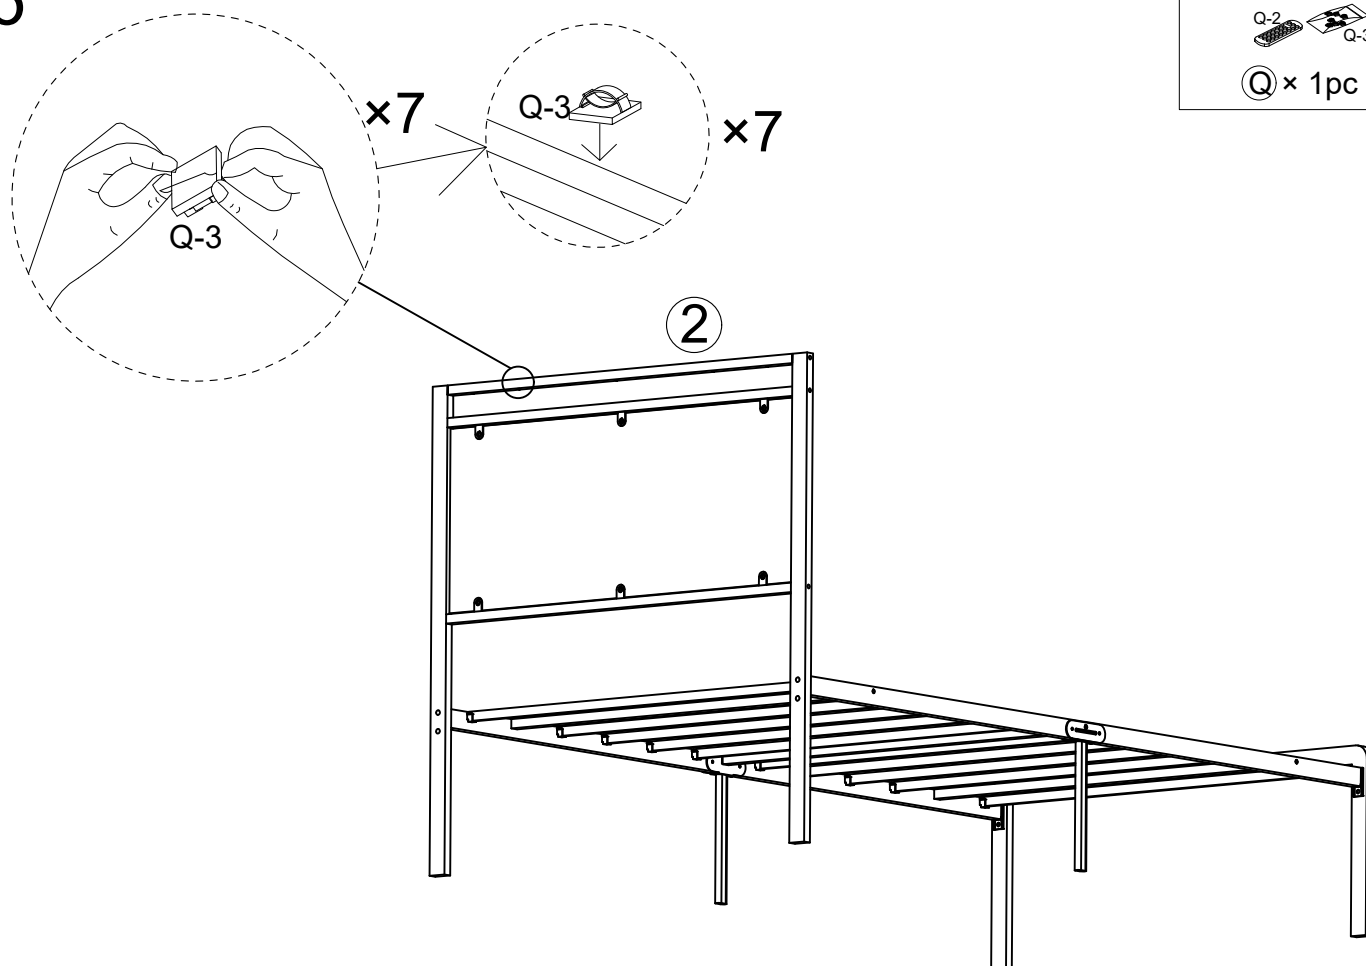

Suggestion: stick the Q accessories under the iron frame

7

Clip the light strip into the plastic clip

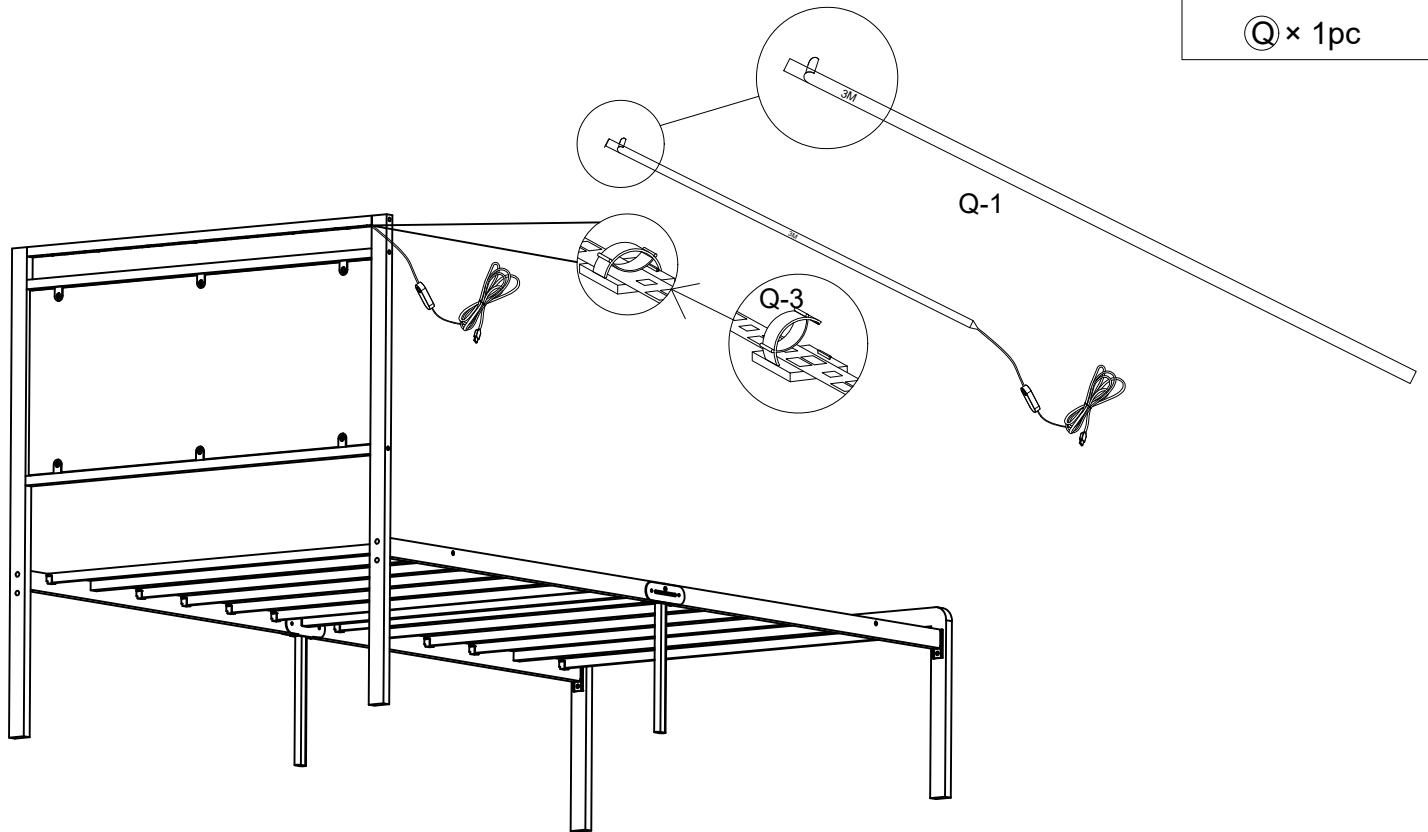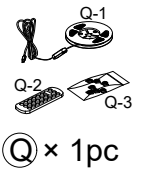


8




M4×12mm


E × 2pcs



G × 1pc

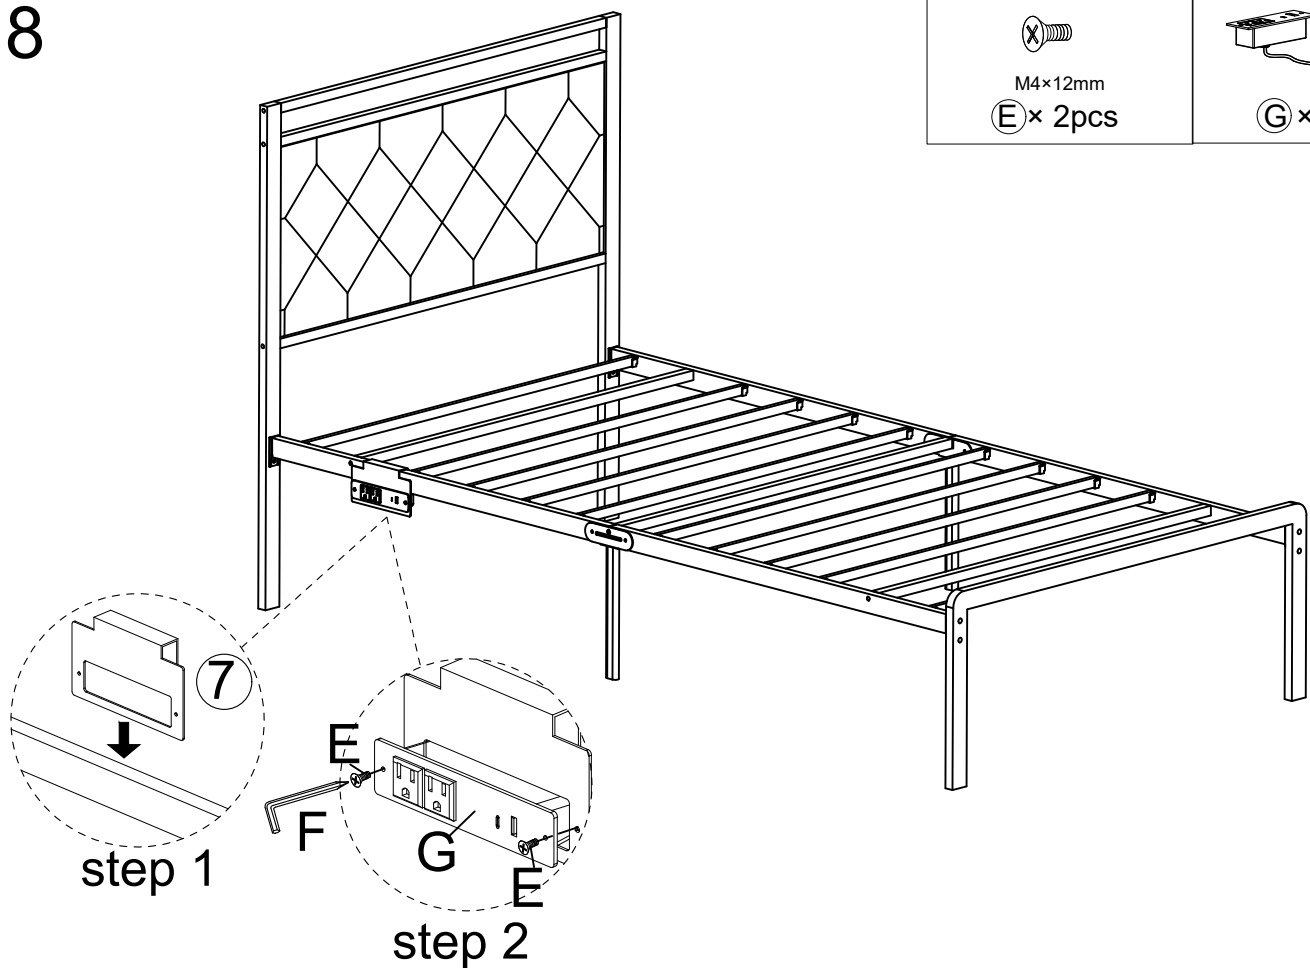

9

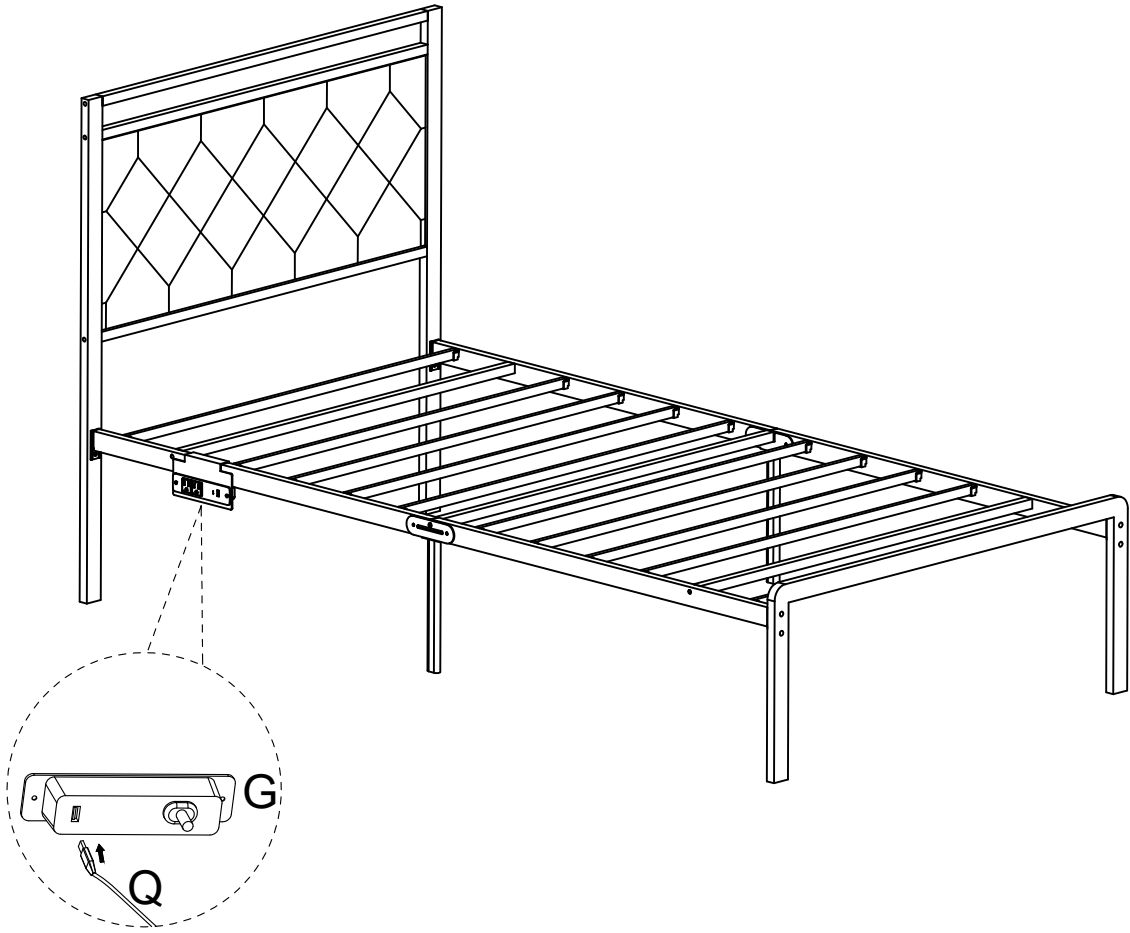

10

