


Cabinet

Assembly Instructions - Please keep for future reference

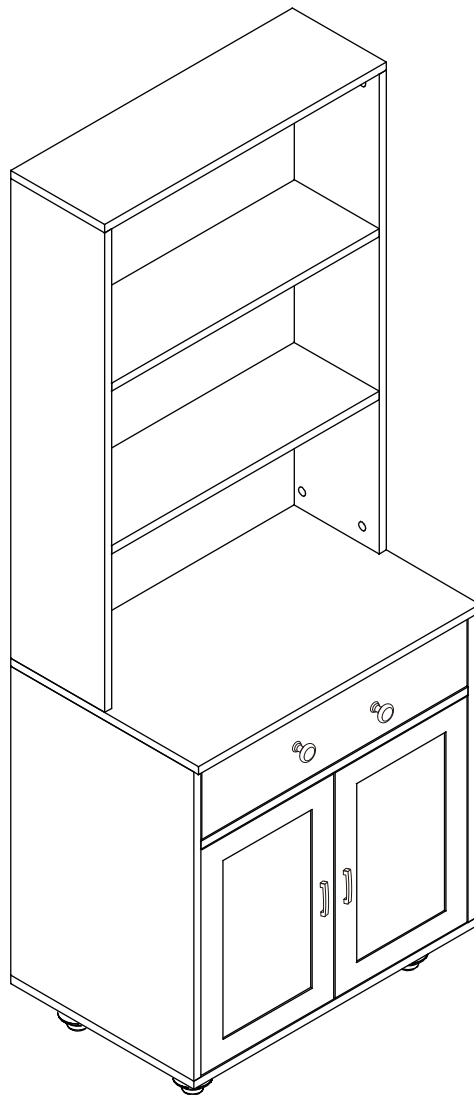

Dimensions

Width-23.6inch

Depth-15.7inch

Height-59.0inch

Important – Please read these instructions fully before starting assembly




Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.

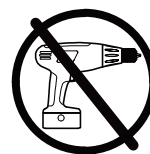

- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING

In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

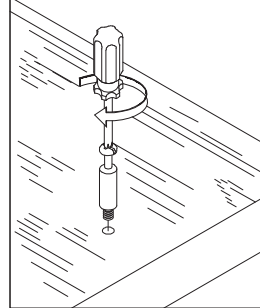

Step 2

Push the male camlock into the entry hole.

2

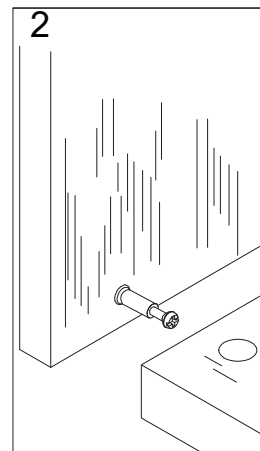


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

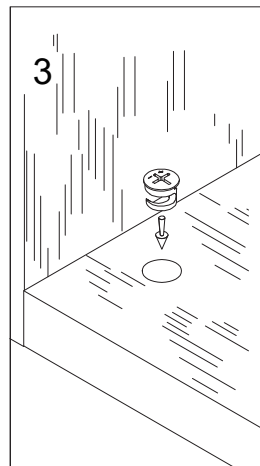


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.












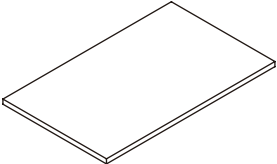




4

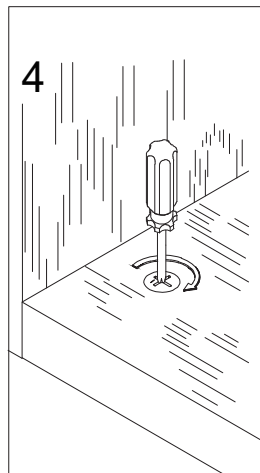





Assembly Instructions

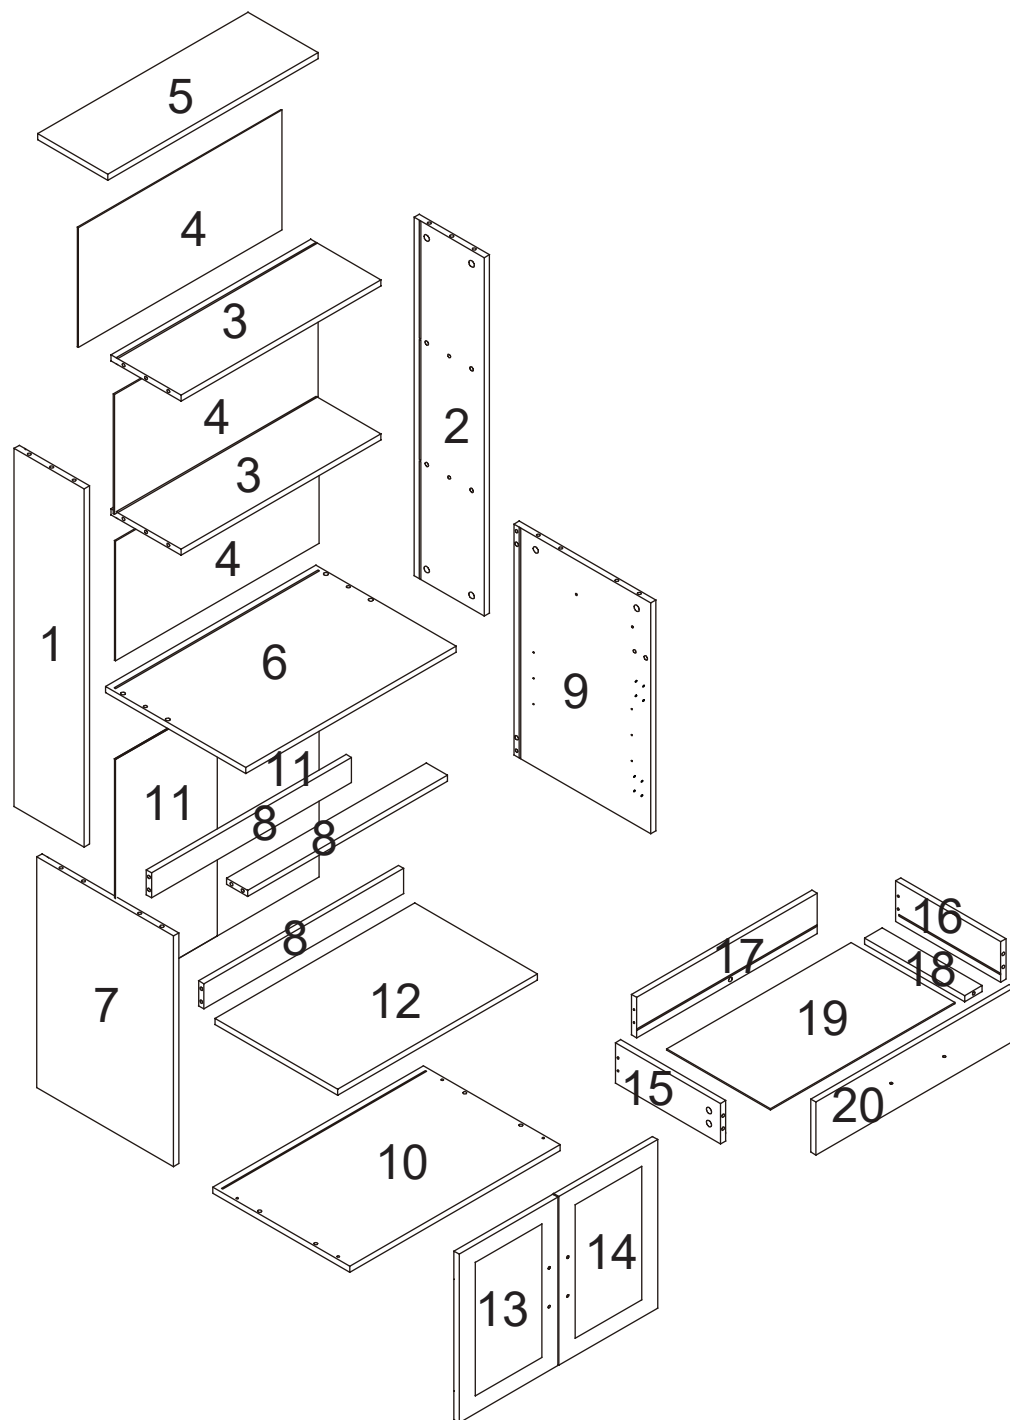

Assembly Instructions

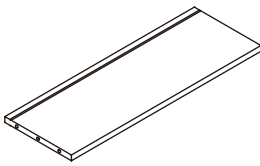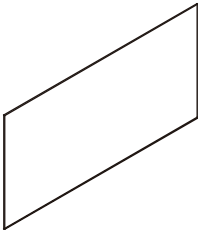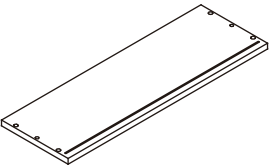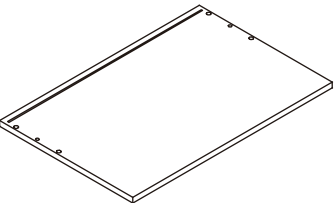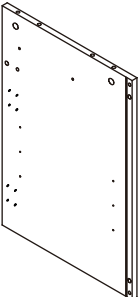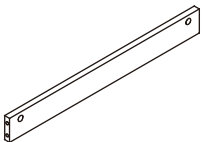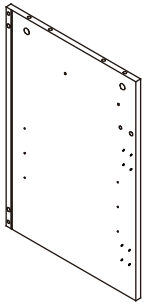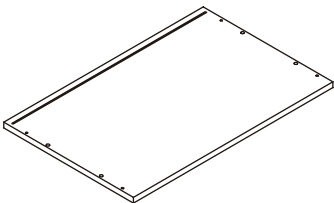 <p>885x200x15mm</p> <p>① x 1</p>	 <p>885x200x15mm</p> <p>② x 1</p>	 <p>570x200x15mm</p> <p>③ x 2</p>	 <p>581x296x3mm</p> <p>④ x 3</p>
 <p>600x200x15mm</p> <p>⑤ x 1</p>	 <p>600x400x15mm</p> <p>⑥ x 1</p>	 <p>570x390x15mm</p> <p>⑦ x 1</p>	 <p>570x60x15mm</p> <p>⑧ x 3</p>
 <p>570x390x15mm</p> <p>⑨ x 1</p>	 <p>600x390x15mm</p> <p>⑩ x 1</p>	 <p>581x290.5x3mm</p> <p>⑪ x 2</p>	 <p>570x350x12mm</p> <p>⑫ x 1</p>
 <p>416x283x15mm</p> <p>⑬ x 1</p>	 <p>416x283x15mm</p> <p>⑭ x 1</p>	 <p>300x100x15mm</p> <p>⑮ x 1</p>	 <p>300x100x15mm</p> <p>⑯ x 1</p>





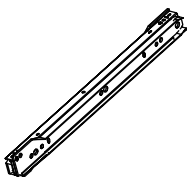



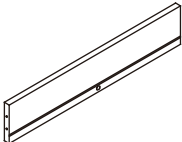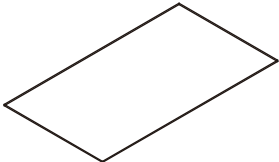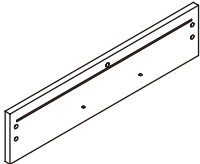




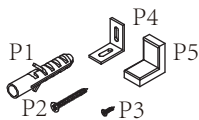

Assembly Instructions


			
515x100x15mm	285x50x15mm	526x296x3mm	566x131x15mm
17 x 1	18 x 1	19 x 1	20 x 1






Components-Fittings

Please check you have all the panels listed below

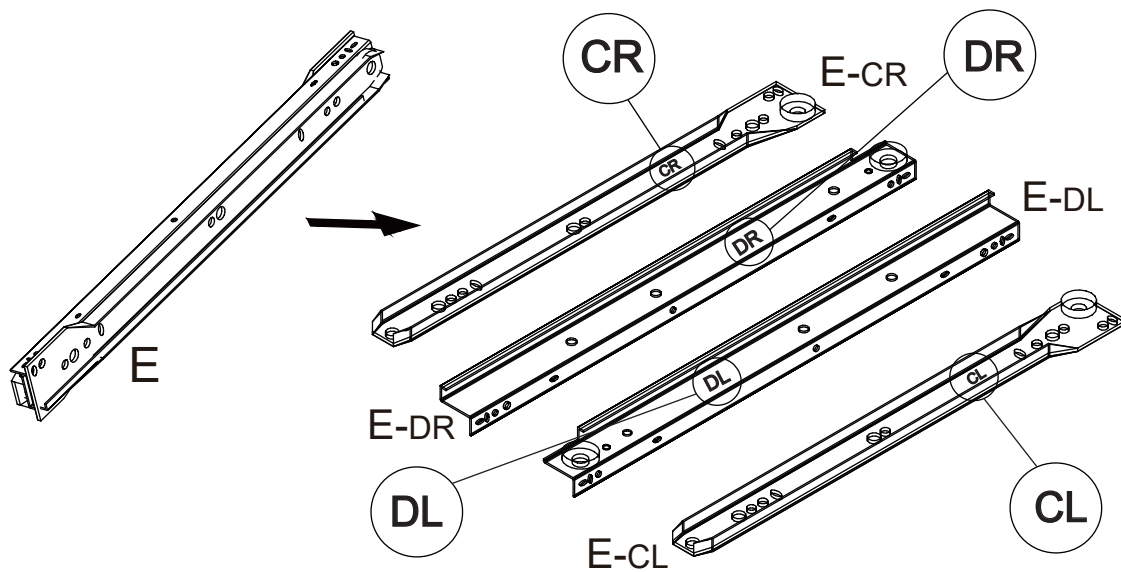
Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

(A)  Cam Bolt x 32+2	(B)  Cam Lock x 32+2	(C)  8*30mm Dowel x 22+2	(D)  3.5*14mm Screw x 68+3
(E)  300mm Drawer slide x 1	(F)  Hole Pitch Handle x 2 set	(G)  5*40mm Screw x 8+1	(H)  Backboard buckle x 20+2
(J)  Hinge x 4	(K)  Bulkhead Pins x 4+1	(L)  Anchor x 4 set	(M)  Perfect Fit x 8+1
(N)  Screwdriver x 1	(P)  Anti dumping x 2 set	(Q)  Hole Pitch Handle x 2 set	




E*1  300mm	E-CL*1  300mm	E-DL*1  300mm	E-CR*1  300mm	E-DR*1  300mm
--	---	---	---	--

1.

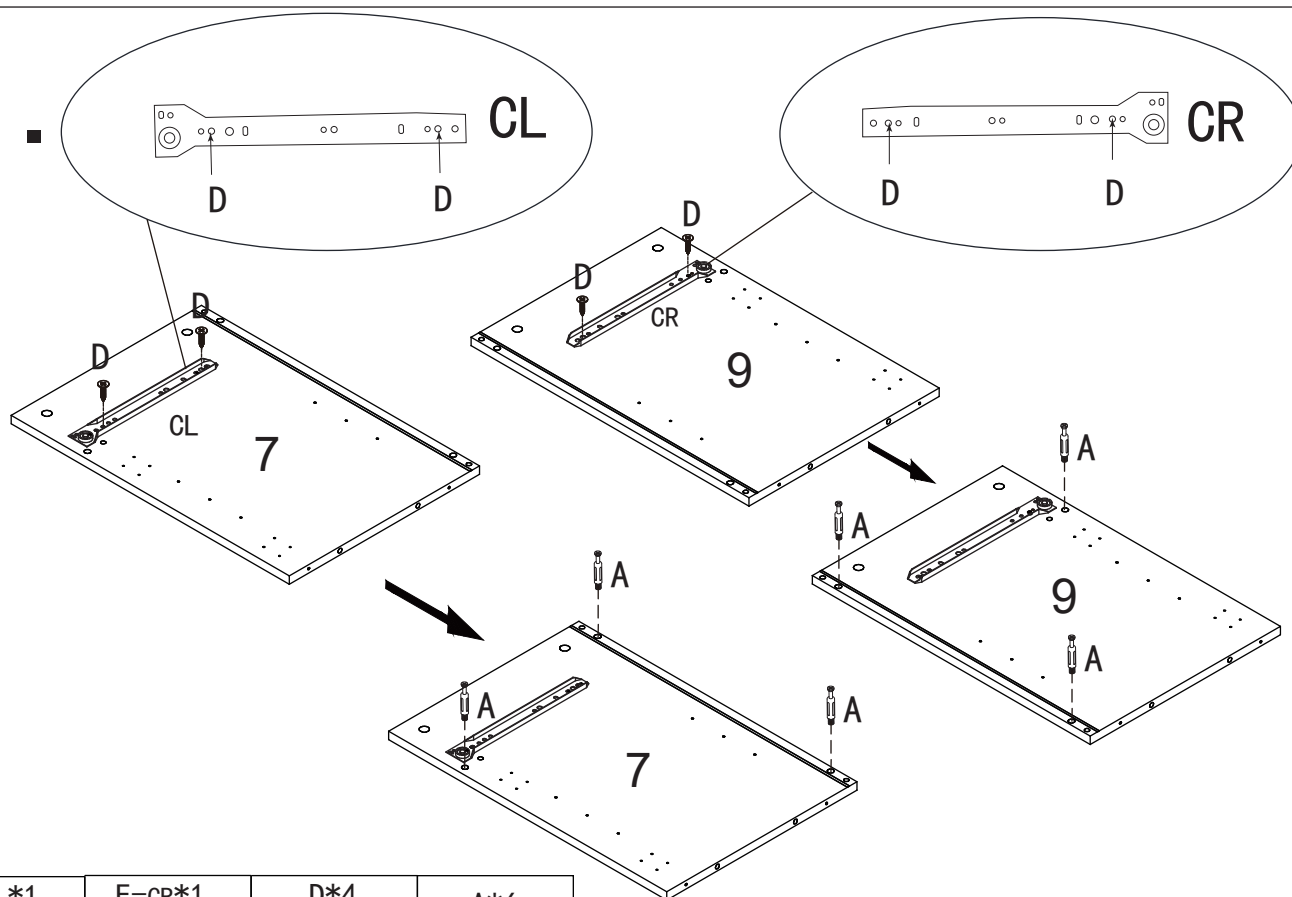


E-CL*1 300mm	E-CR*1 300mm	D*4 Ø 3.5 x 14 mm	A*6
-----------------	-----------------	----------------------	-----

2.

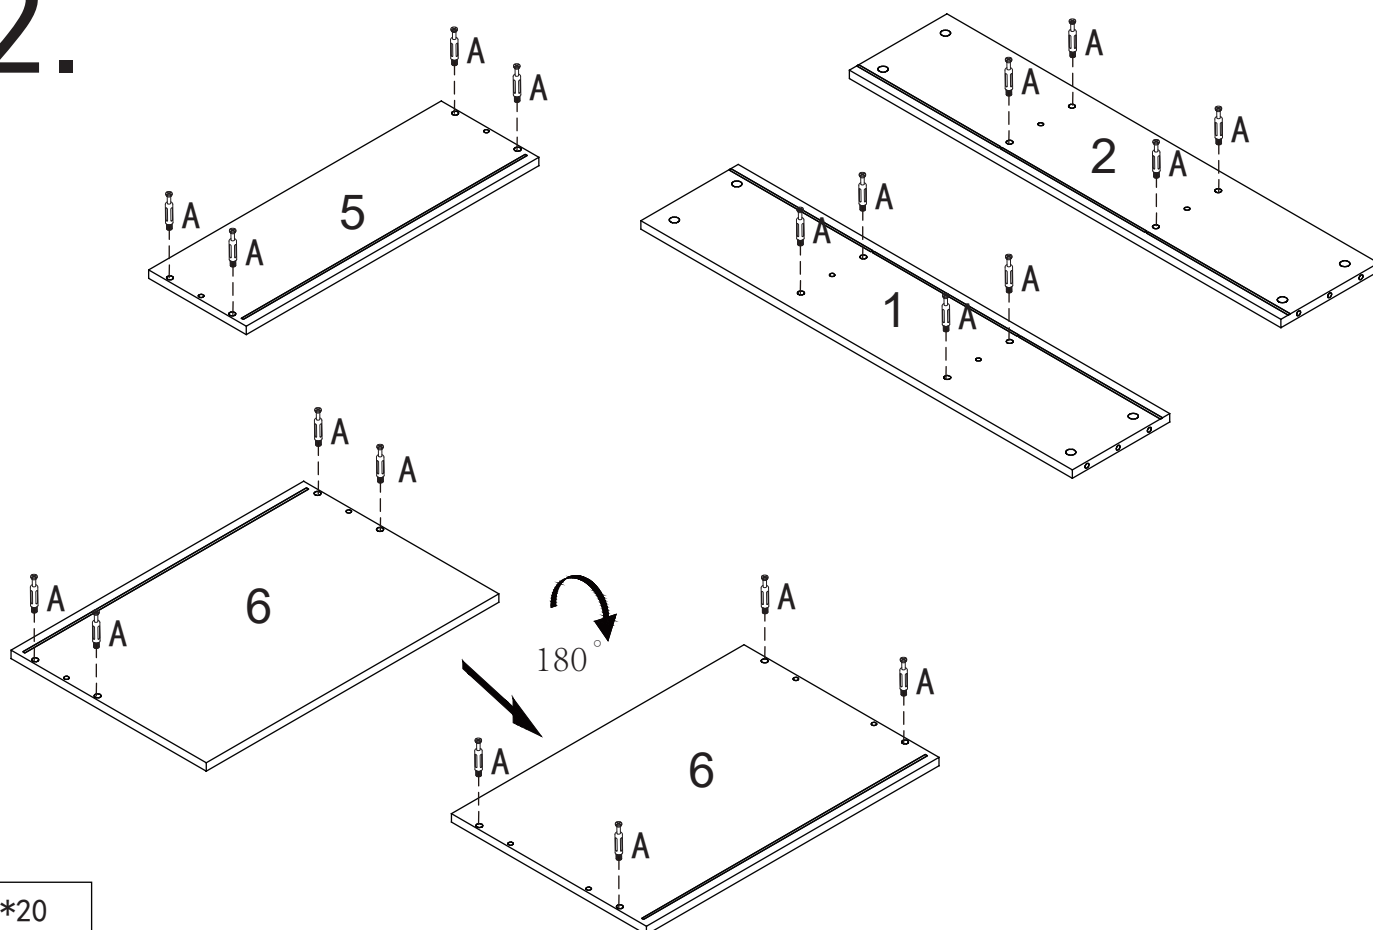

A*20

3.

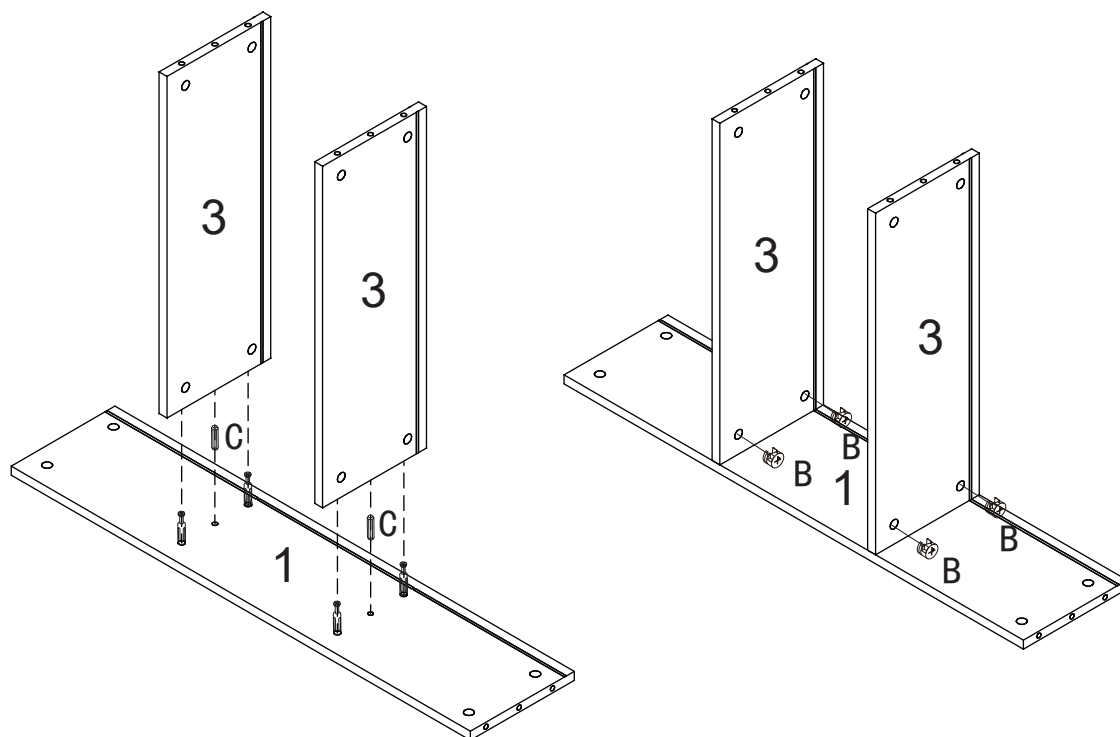

B*4




C*2




Ø8 x 30 mm

4.

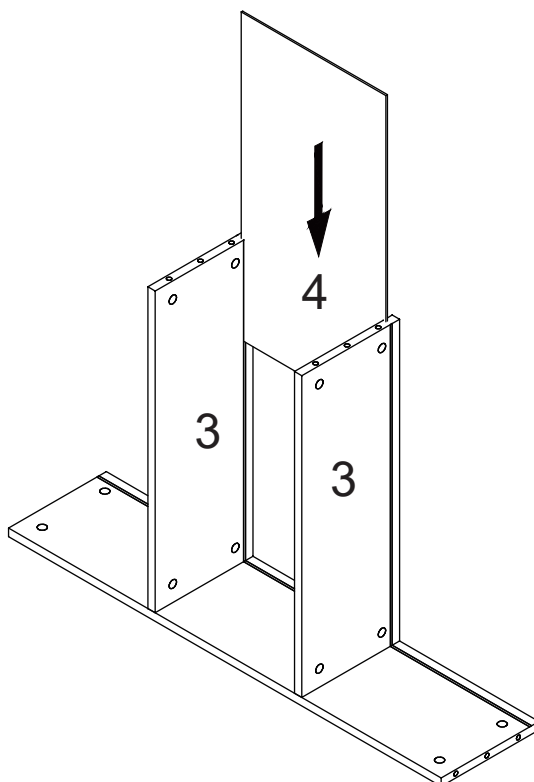

5.

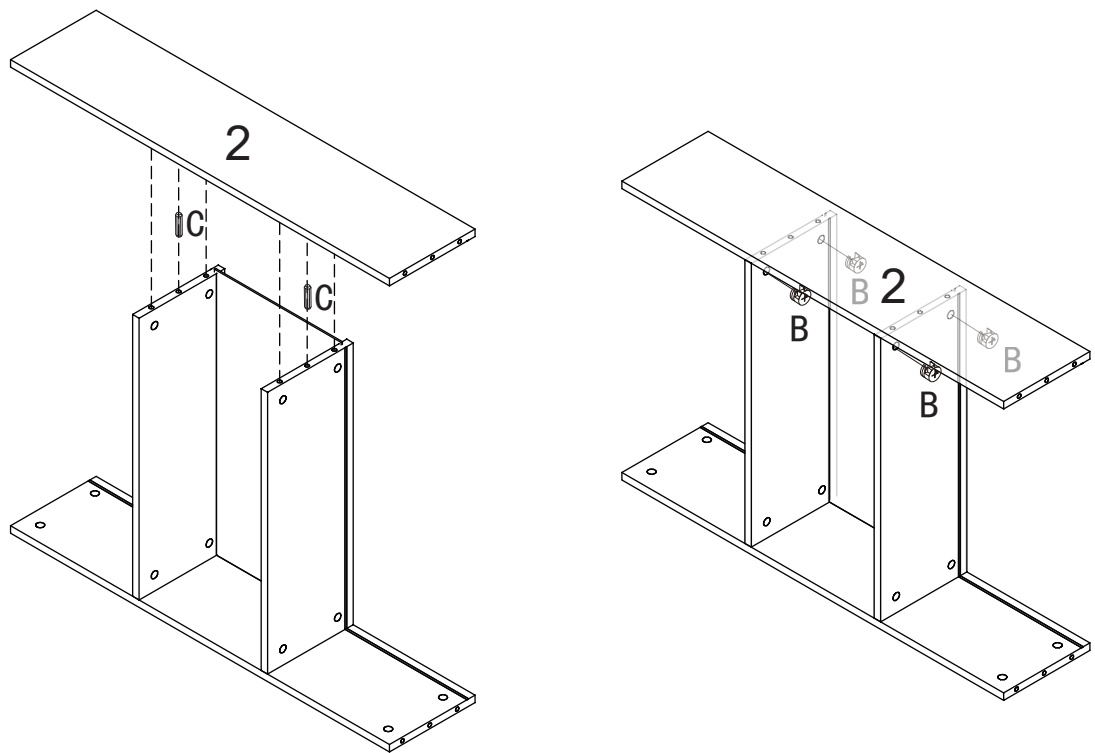

B*4




C*2



Ø 8 x 30 mm

6.

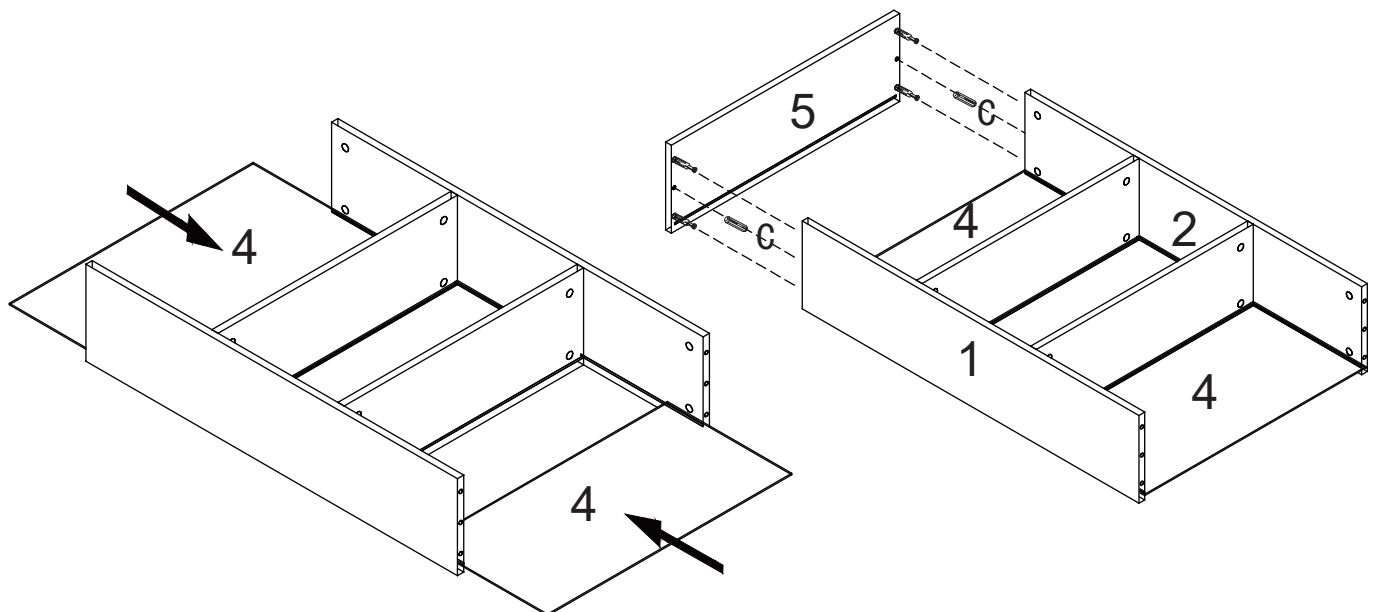


C*2



Ø 8 x 30 mm

7.

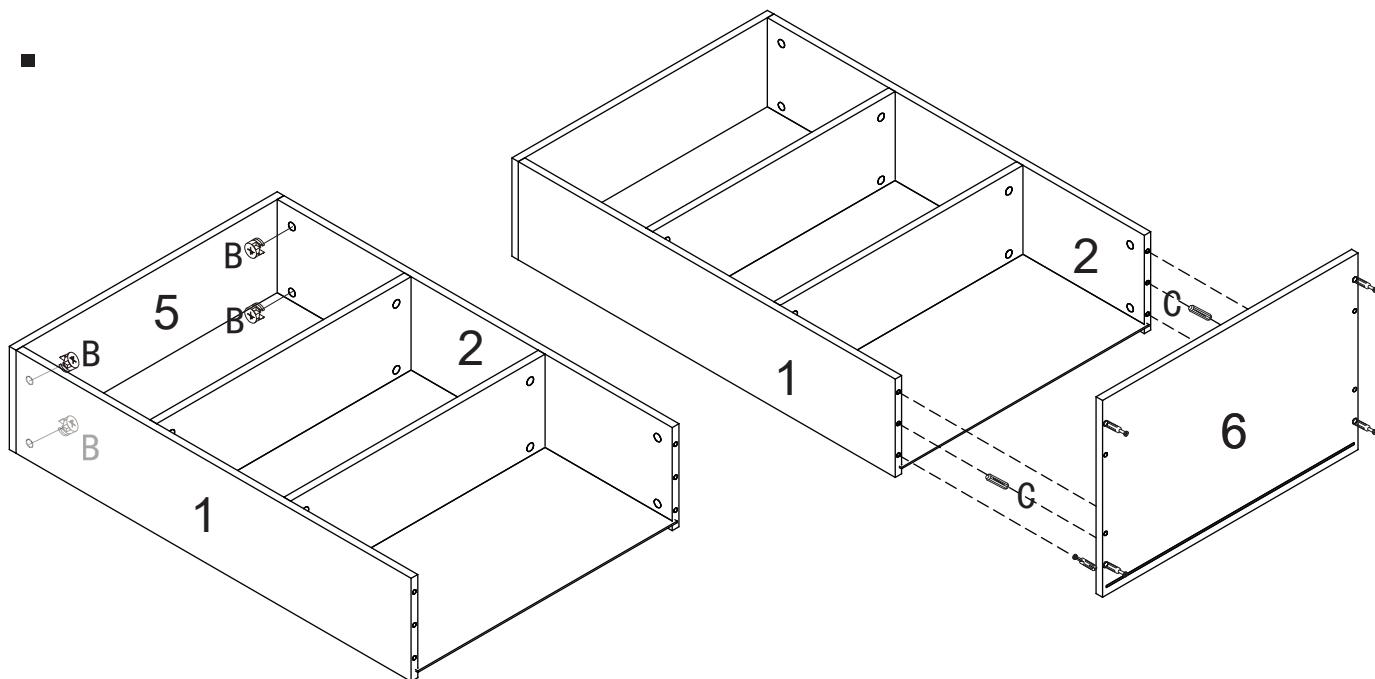

B*4




C*2



Ø8 x 30 mm



8.

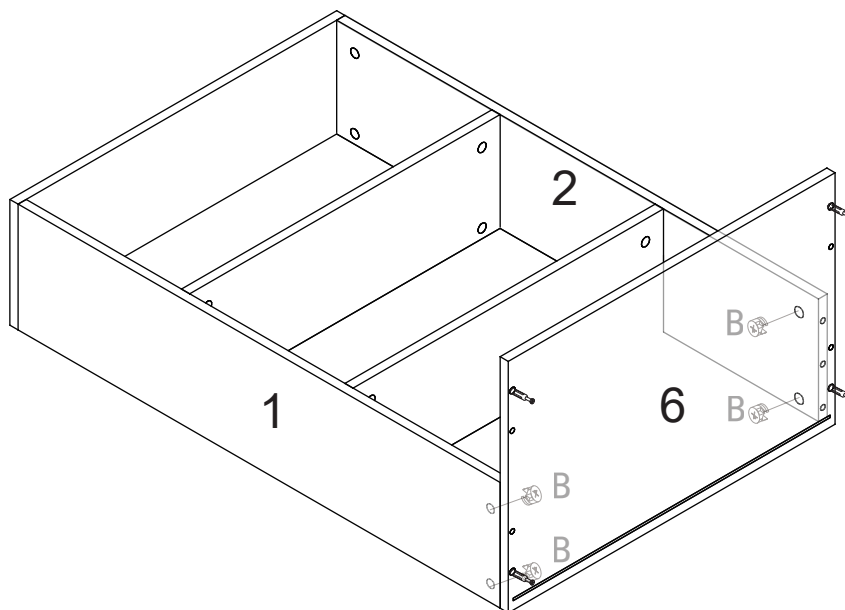

B*4



9.

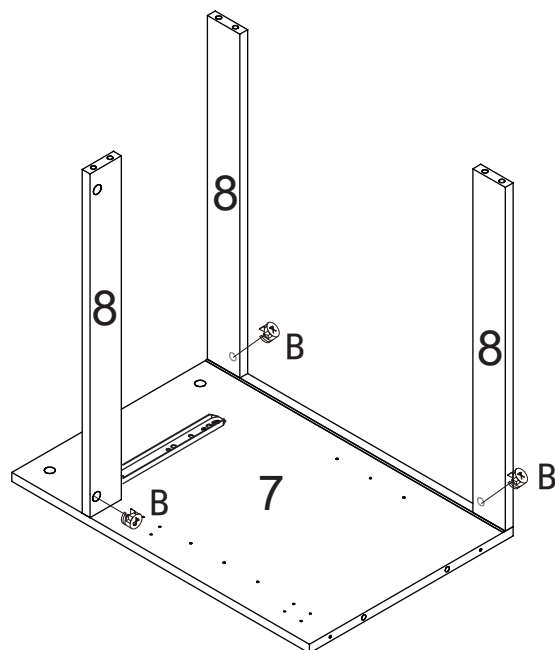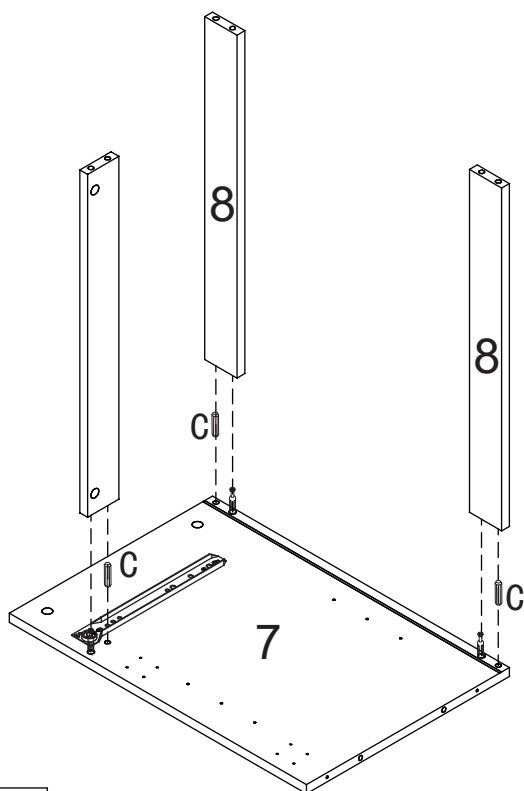

B*3





C*3



Ø 8 x 30 mm

10.

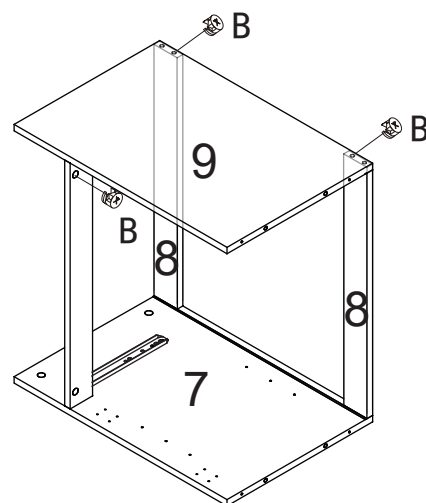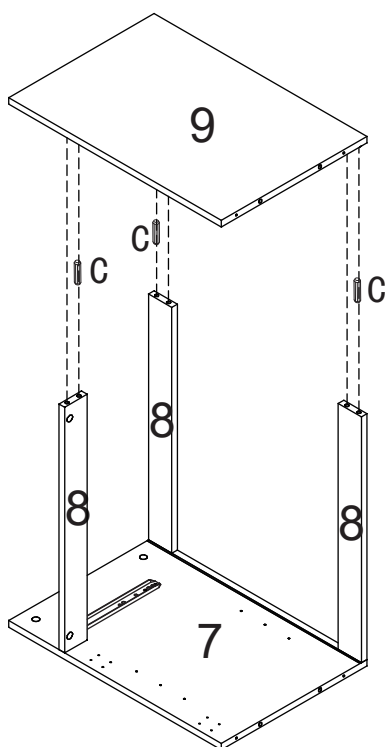

B*3





C*3




Ø 8 x 30 mm

11.

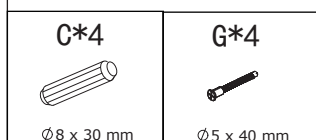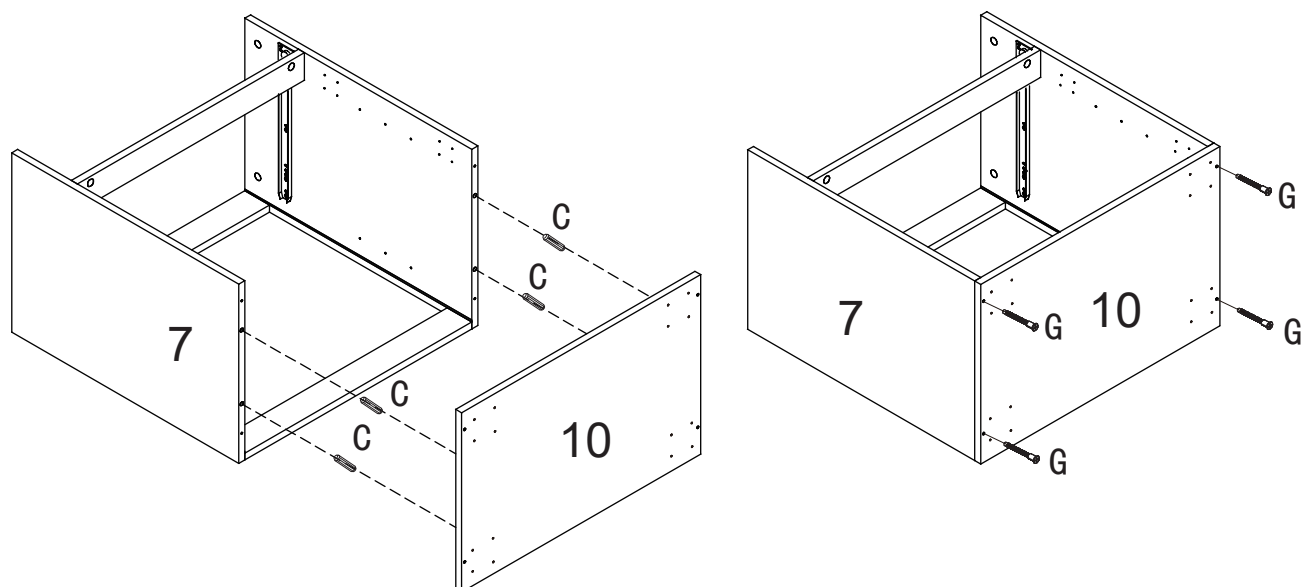


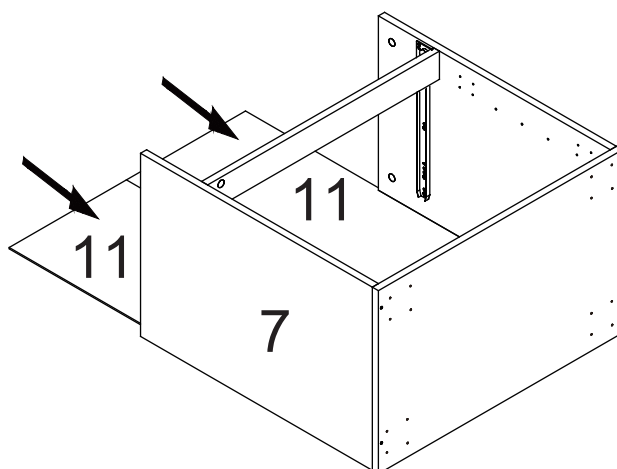


12.




13.

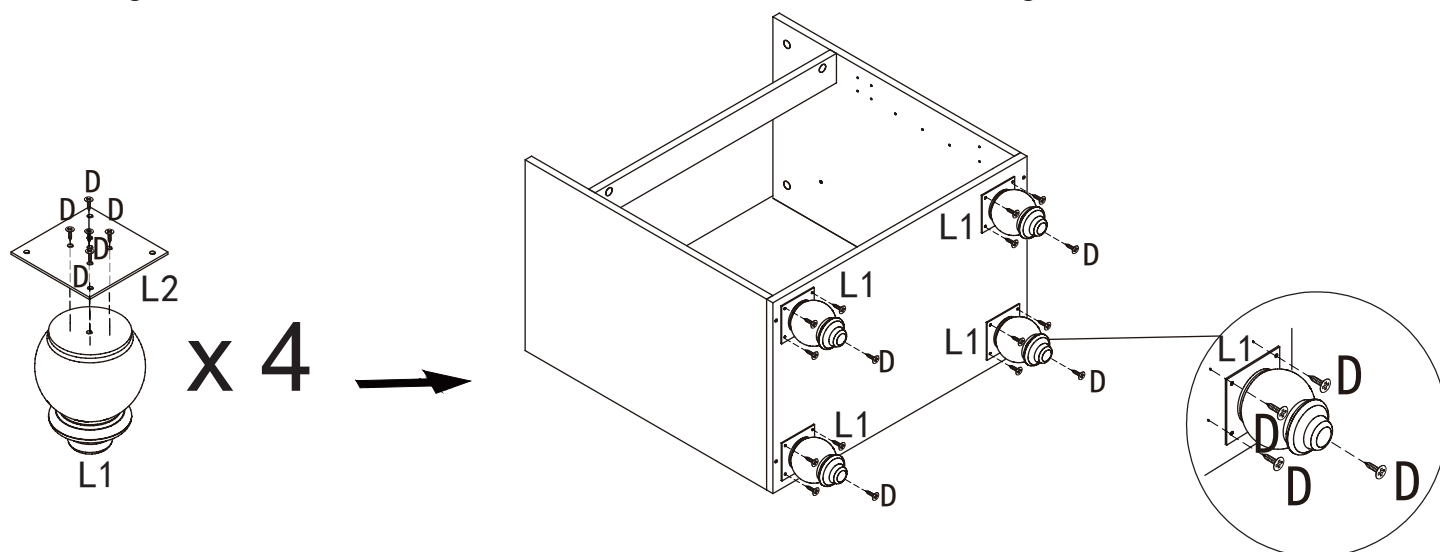

Align the L2 intermediate hole with the L1 intermediate hole and tighten the other four holes




L*4	D*36
 	
	Ø 3.5 x 14 mm

14.

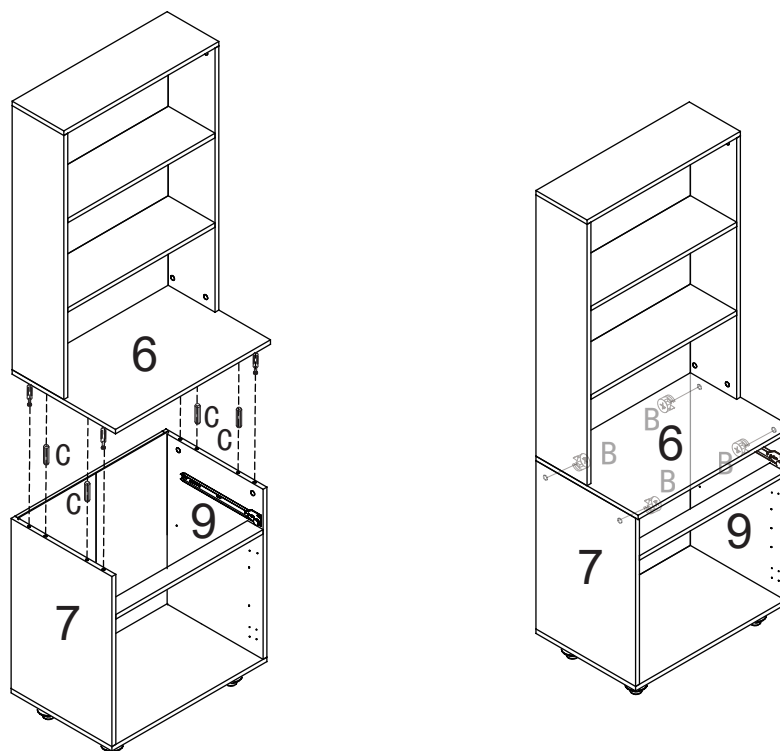

B*4	C*4
	
	Ø 8 x 30 mm

15.

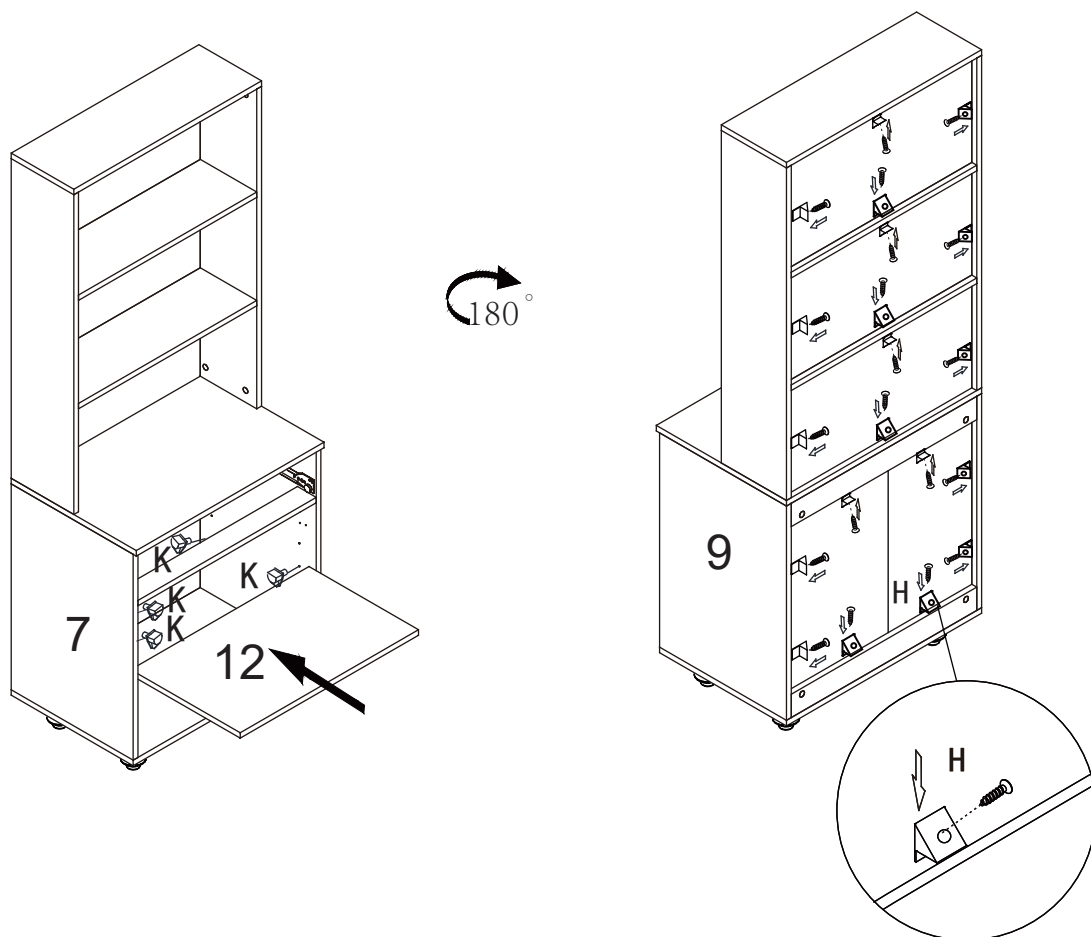


H*20



K*4



16.

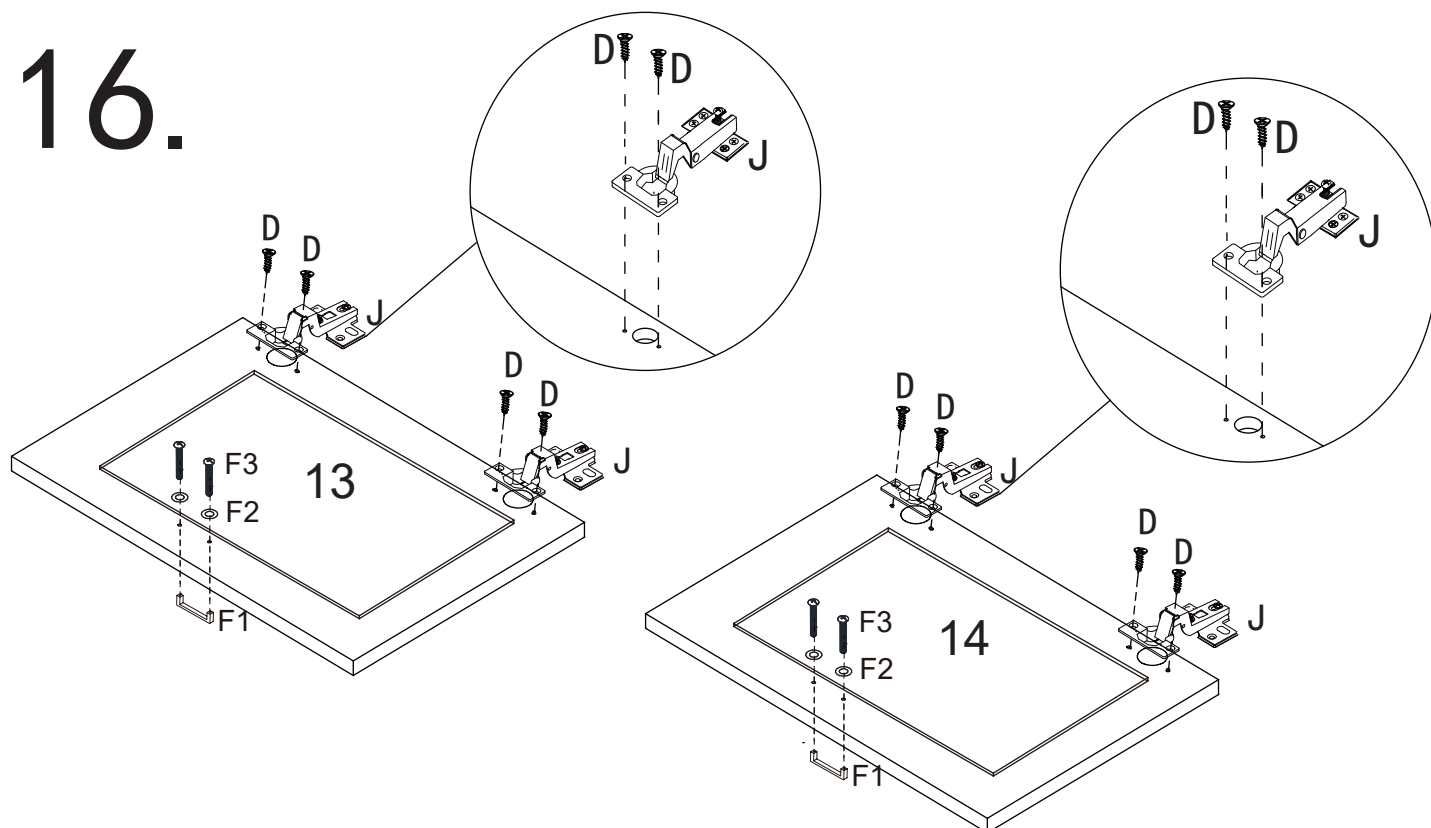


D*8



Ø 3.5 x 14 mm

F*2



F1*2



F2*2










F3*2



J*4



17.

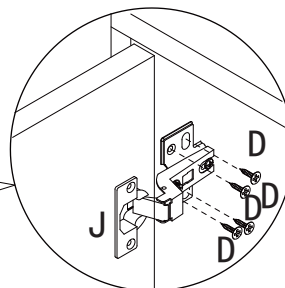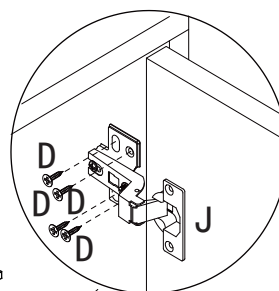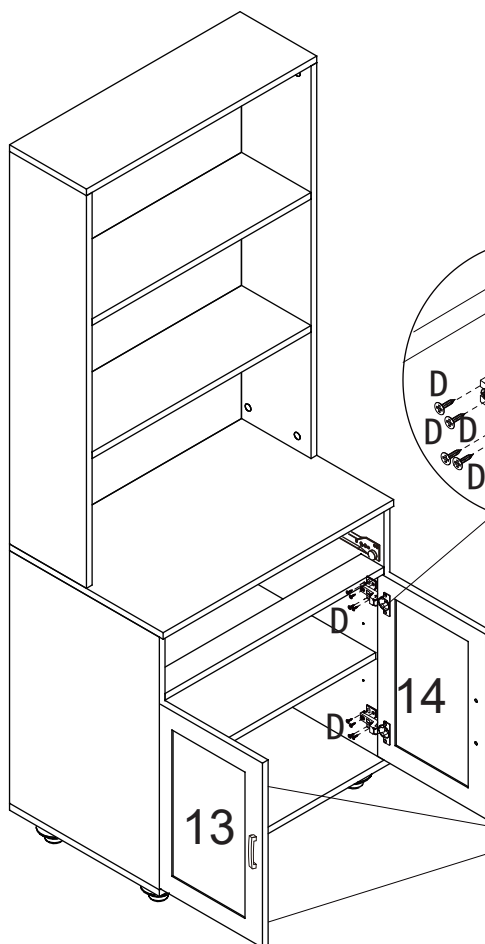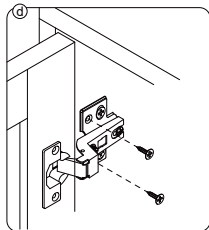
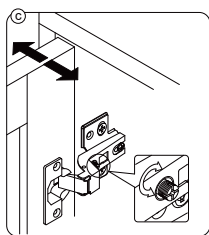
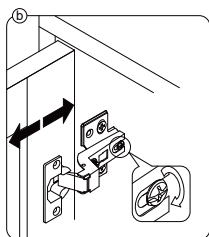
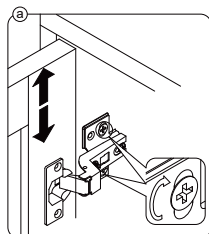


D*16



Ø 3.5 x 14 mm

18.

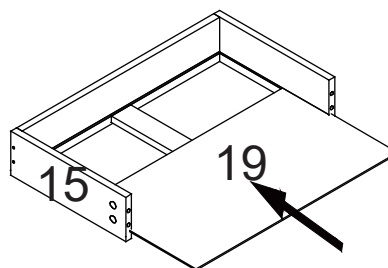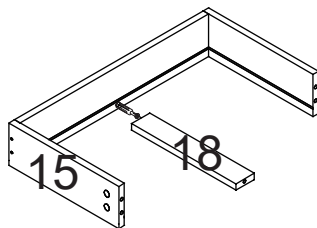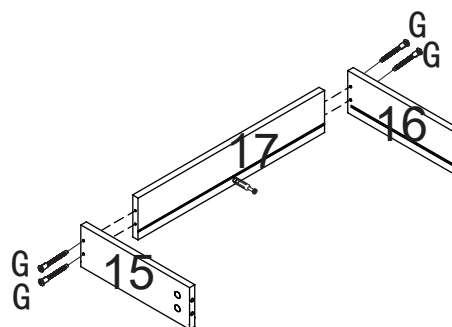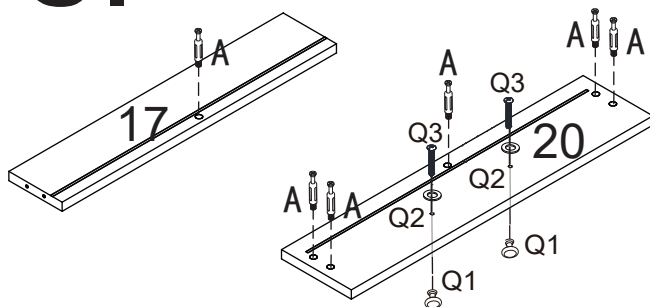

A*6




G*4



Ø 5 x 40 mm

Q*2



Q1*2




Q2*2




Q3*2



19.

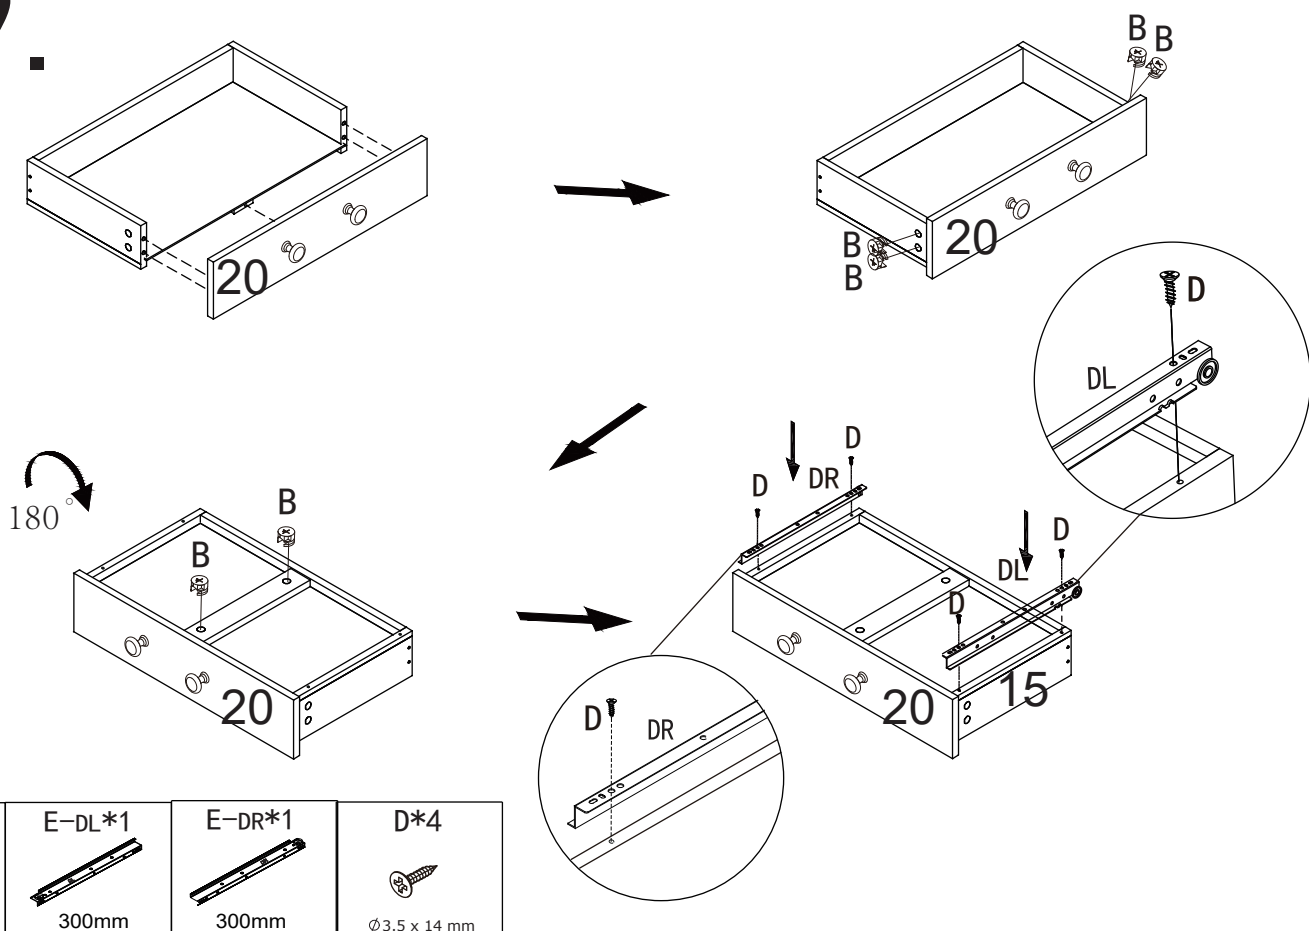


20.

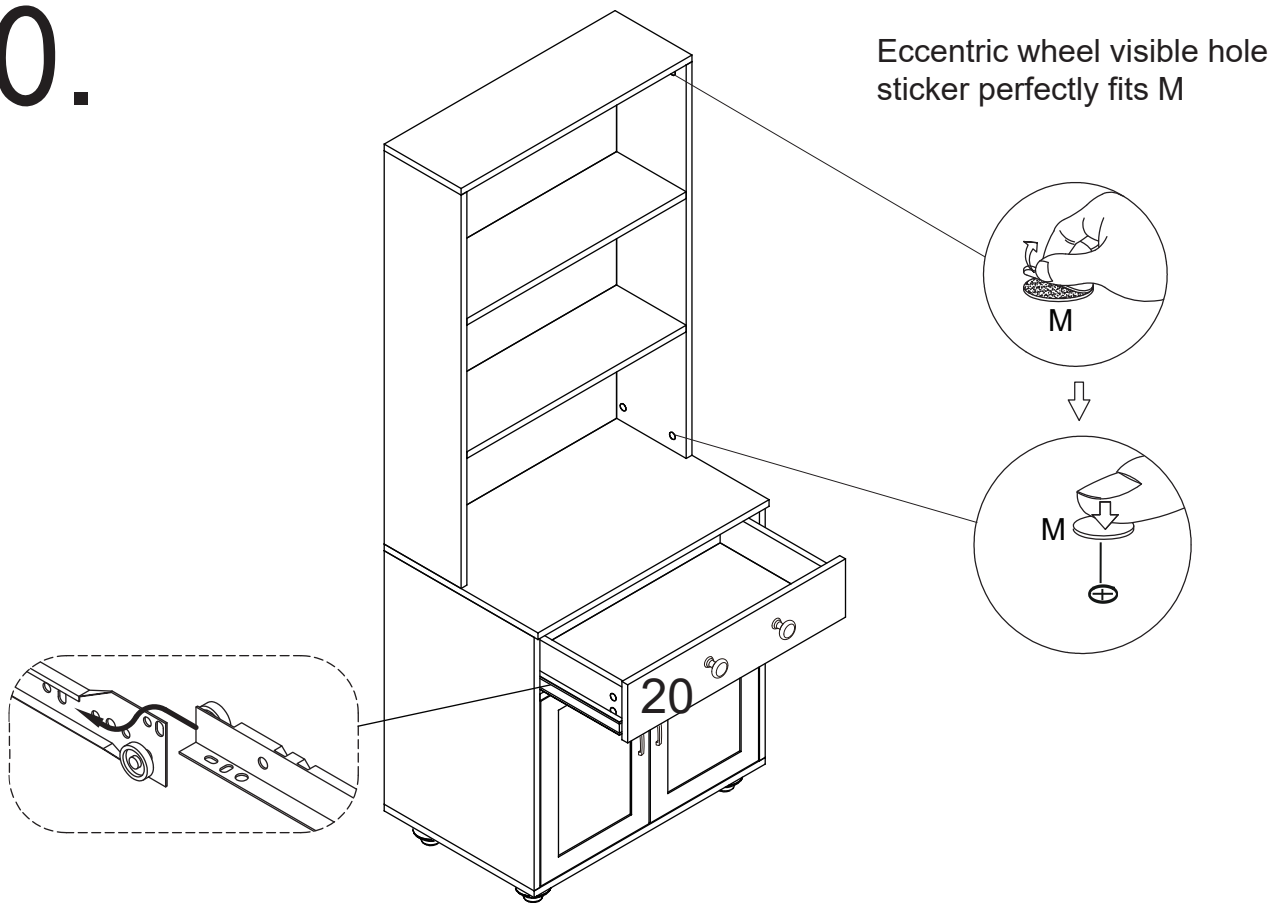


M*8




21.

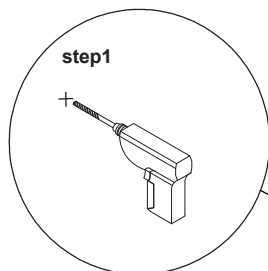


step1

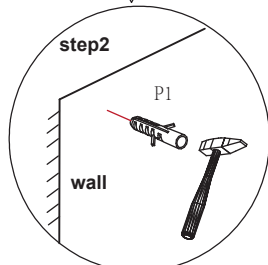

step2

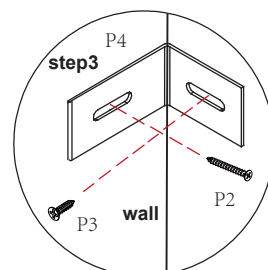


step3

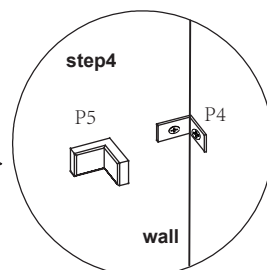

step4

This is anti-dumping iron sheet P, fixed to the wall of the product, can be required to change the installation location.

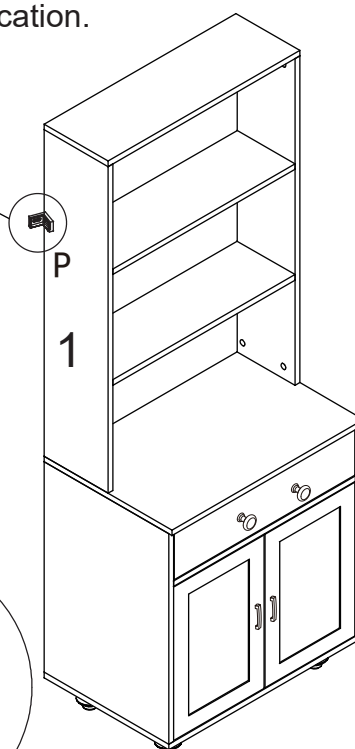

P*2



22.

