













"IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY"



Once installed, the product cannot be detached. Strictly follow each step in the installation manual.

1. Gather and organize all required parts prior to assembly.
2. Assemble on a flat, clean and soft surface.
3. Two or more people are needed for the assembly.
4. Align the holes before assembly and snap into place with a slight tap
5. Please prepare rubber mallet in advance for convenient installation. Do not strike too hard to avoid shattering. A wooden board should be placed at the striking area for cushioning.
6. The product's structure prevents it from being conveniently assembled in low temperatures, so do not intentionally install at low temperatures.
7. During installation, please refer to the accessories guides to ensure that they are installed in the correct directions.

Item no.	Reference Image	Qty.
A		X2
B		X1
C		X2
D		X5
E		X3

Item no.	Reference Image	Qty.
G		X1
I		X1
H		X2
J		X1
L		X55+2extra
T		X15
R		X1

①

① D1pc L8pcs T4pcs J1pc



2







ⓔ3pcs



ⓖ1pc



Ⓛ2pcs

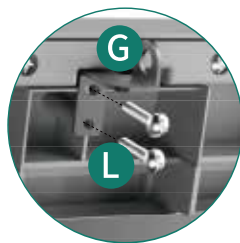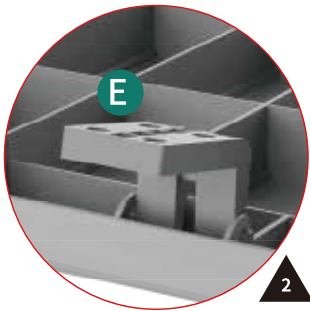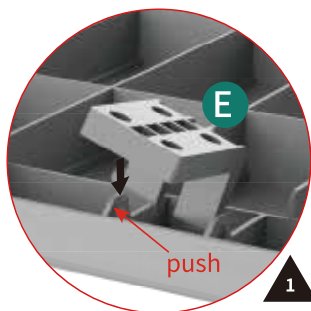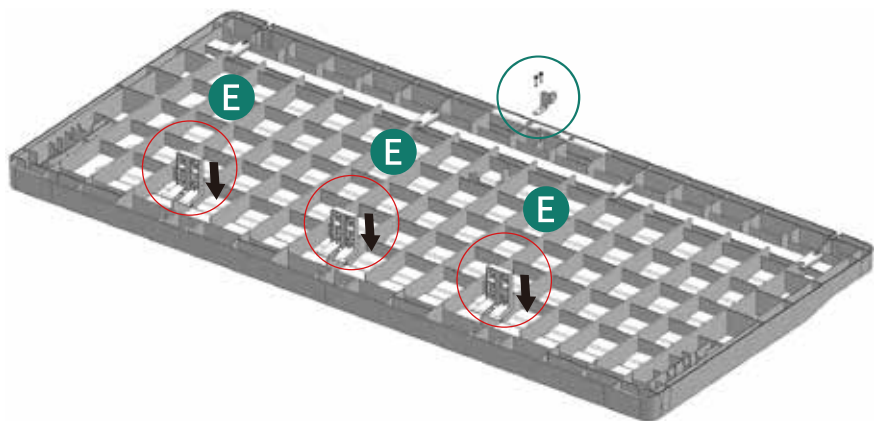

For easier installation, part E should tilt to the one side, then to the other.



3

Ⓓ2pcs


Ⓕ16pcs

Ⓙ8pcs

Ⓑ1pc

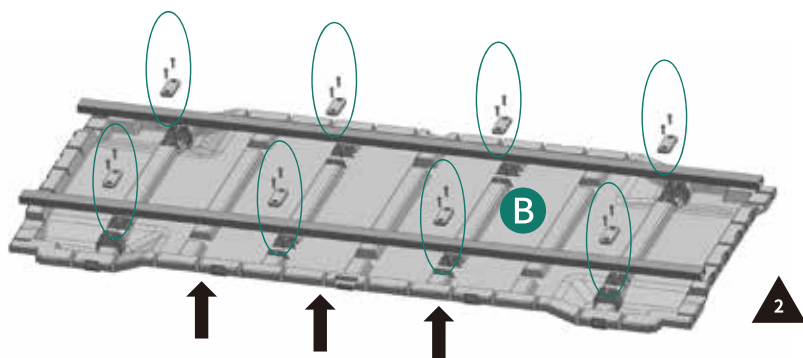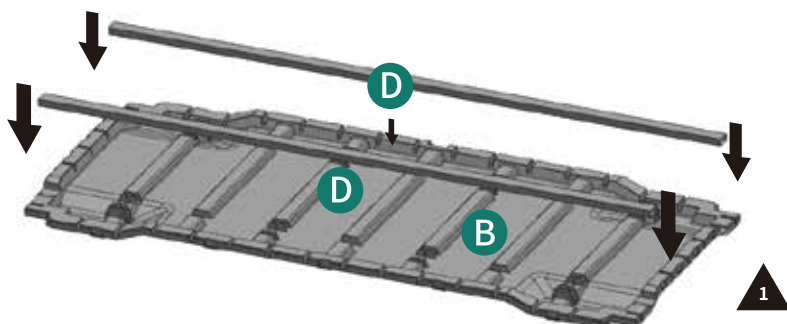

Slightly lift panel B to fully tighten the 4 middle screws



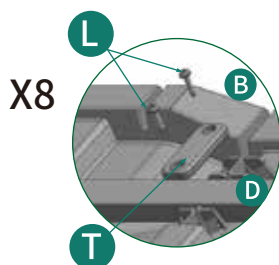


4



Ⓐ 2pcs

STEP 3

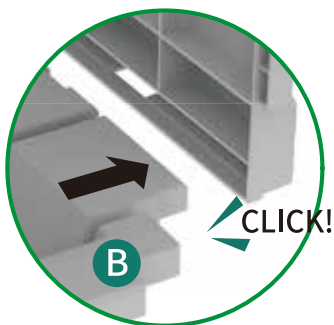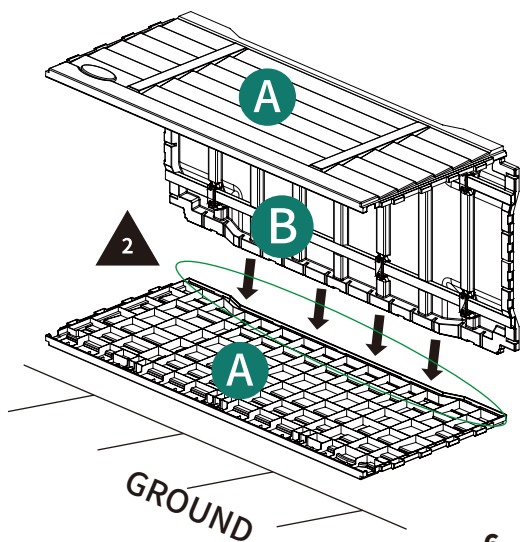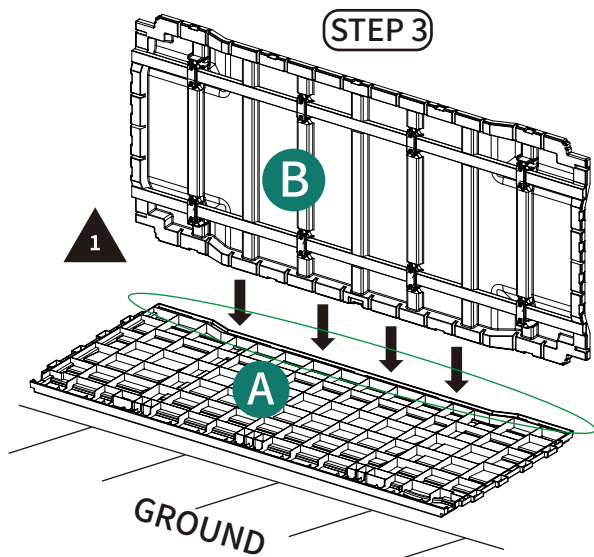

5




Ⓒ1pc



Ⓓ2pcs

Please using rubber mallet for convenient installation.



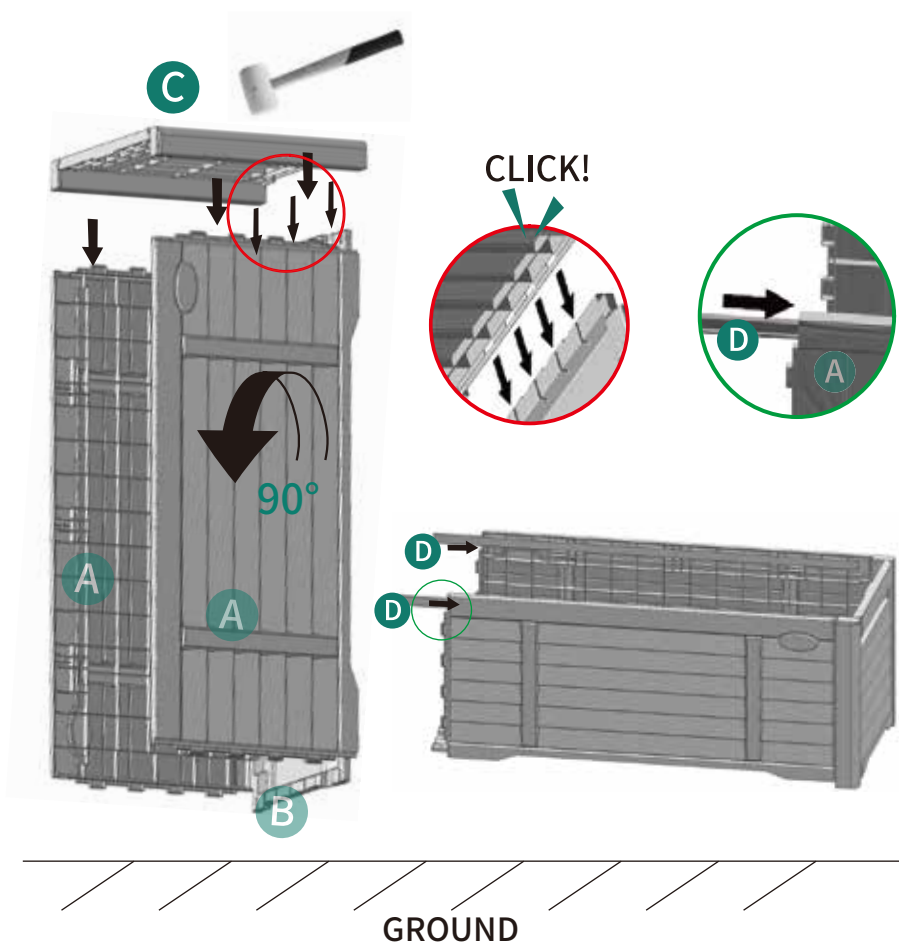


6



©1pc

 Assemble part D prior to part C.

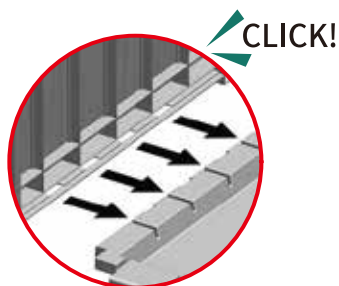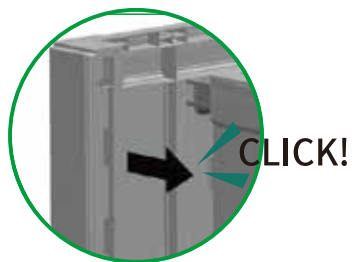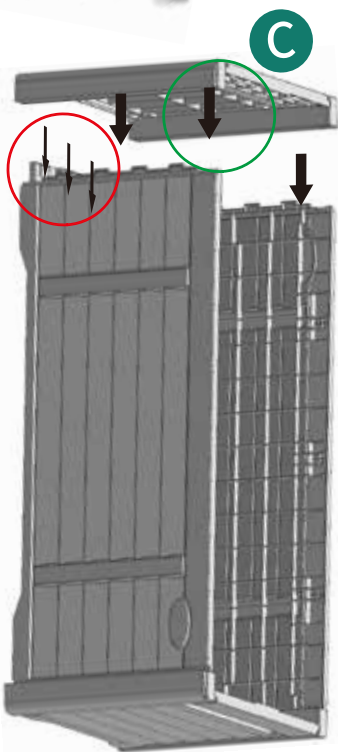

GROUND

7





Ⓡ1pc



Ⓛ7pcs




Ⓣ3pcs

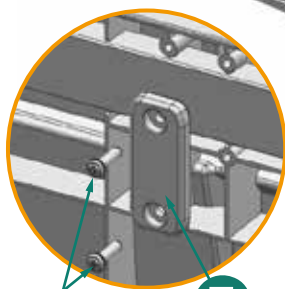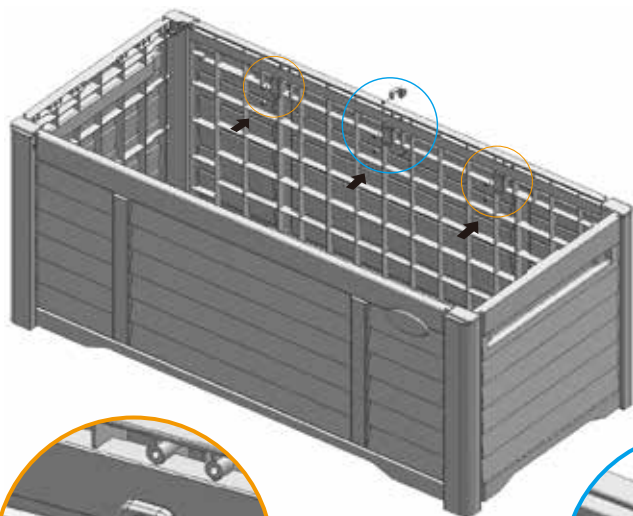

Ⓛ



Ⓣ

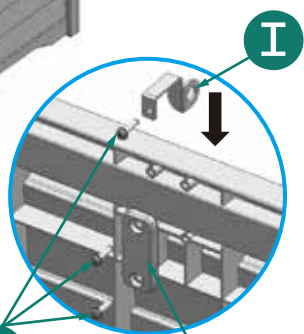

Ⓡ

Ⓛ

Ⓣ

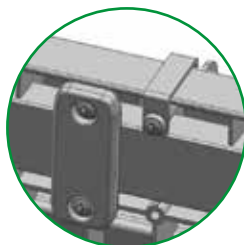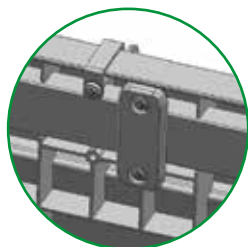



8




Ⓛ22pcs




Ⓜ2pcs

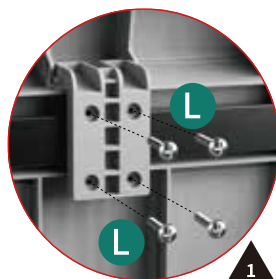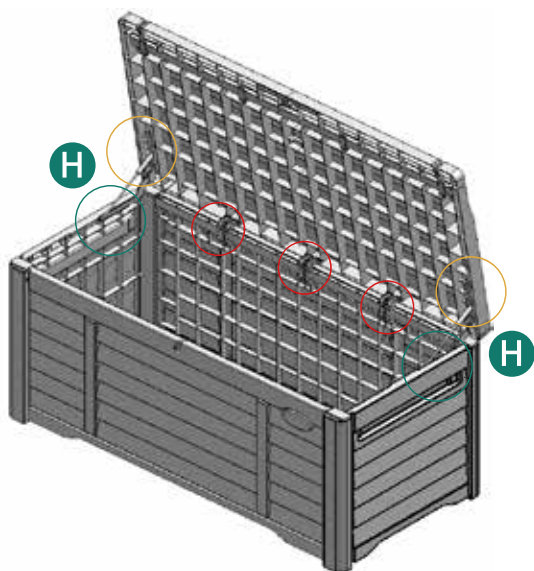

1

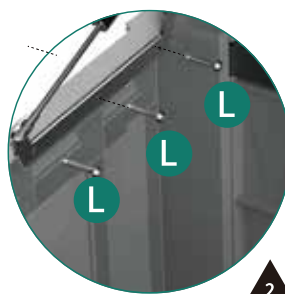


2

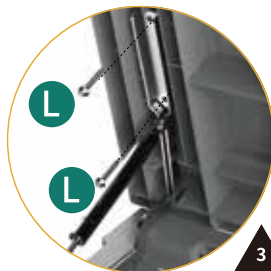

3

Assemble the rod to the body then to the lid.

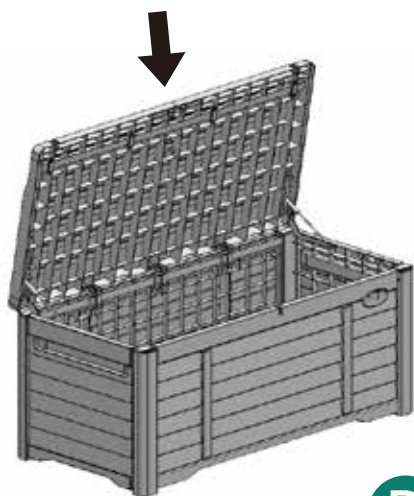


9



Ⓡ1pc

Ⓡ

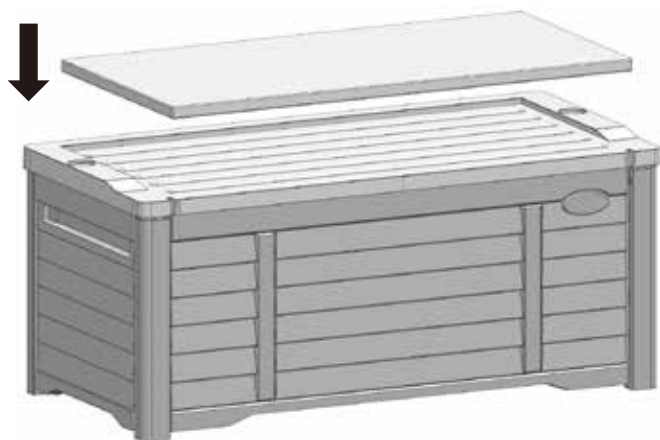

Installation Completed