









CHICKEN COOPS INSTRUCTIONS


SKU:ZYPC001801

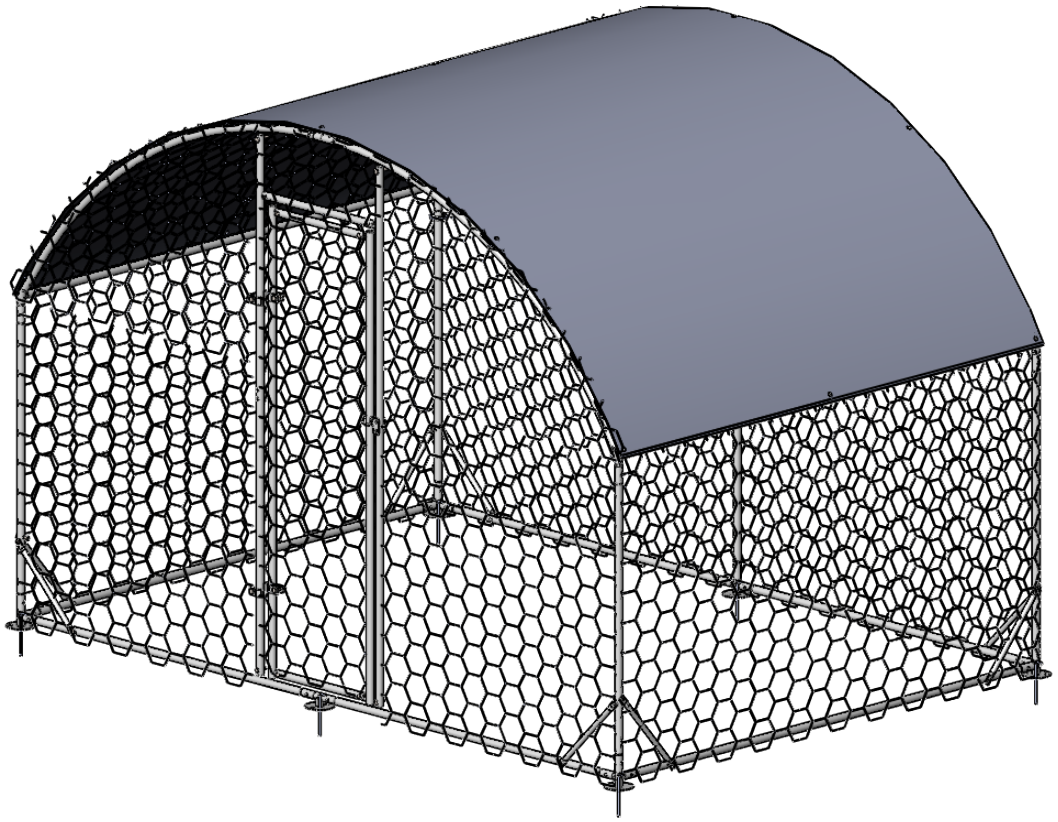

1.Recommend multiple people to assemble.
2.Do not over torque screws an bolts.
3.Do not install on flammable place in case of fire.
4.Use on a flat ground.
5.Gloves must be worn during assembly.


IMPORTANT.RETAIN FOR FUTURE REFERENCE

NO.	PIC	TYB	PCS
1		1364mm	4
2		1919mm	3
3		1919mm	2
4		1049mm	4
5Y		1654mm	4
6Y		1850mm	2
7		515mm	1
8		1881mm	1
9		1620mm	2
10		407mm	2
11		385mm	8




W1

1

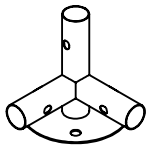


A1

2

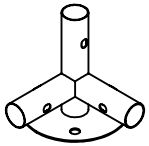


A2

2

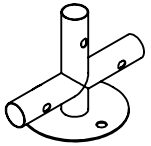


A3

1




A4

1



B6

4




B8

1




C

16




D

2



E1

2



E2

2



F1

1




F2

2



G


6

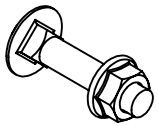

M8*40

L

6

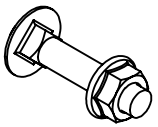

M6*40


K

26




R

12



B10

1

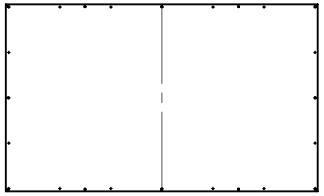

JP

1



U

1




S

1




Z


1

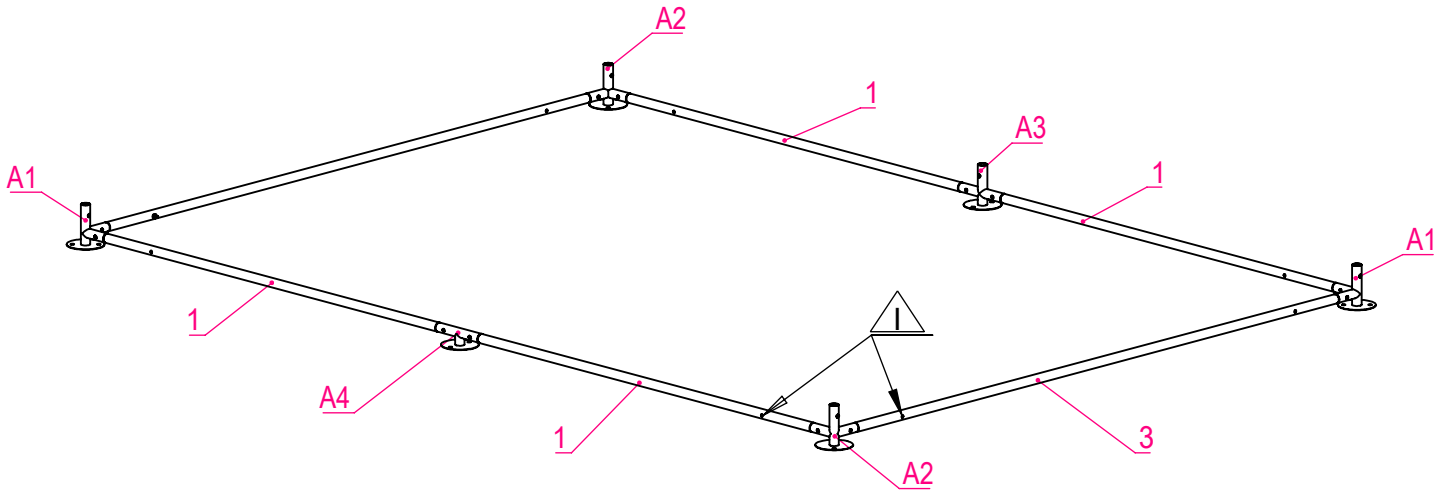


NO.	PCS
A1	2
A2	2
A3	1
A4	1
1	4
3A	2

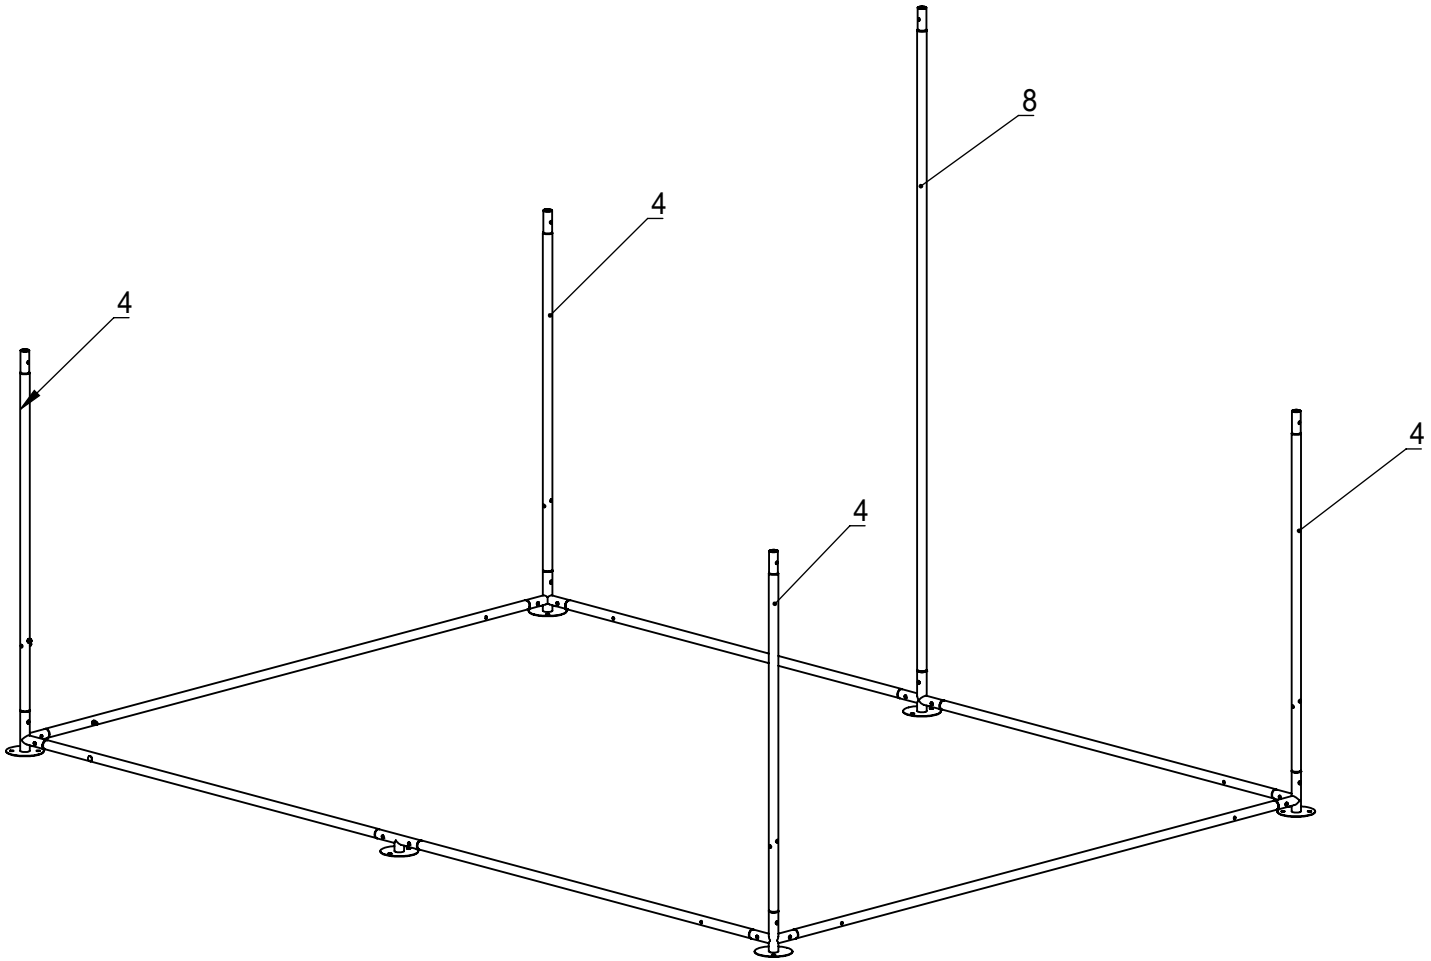


NO.	PCS
4	4
8	1

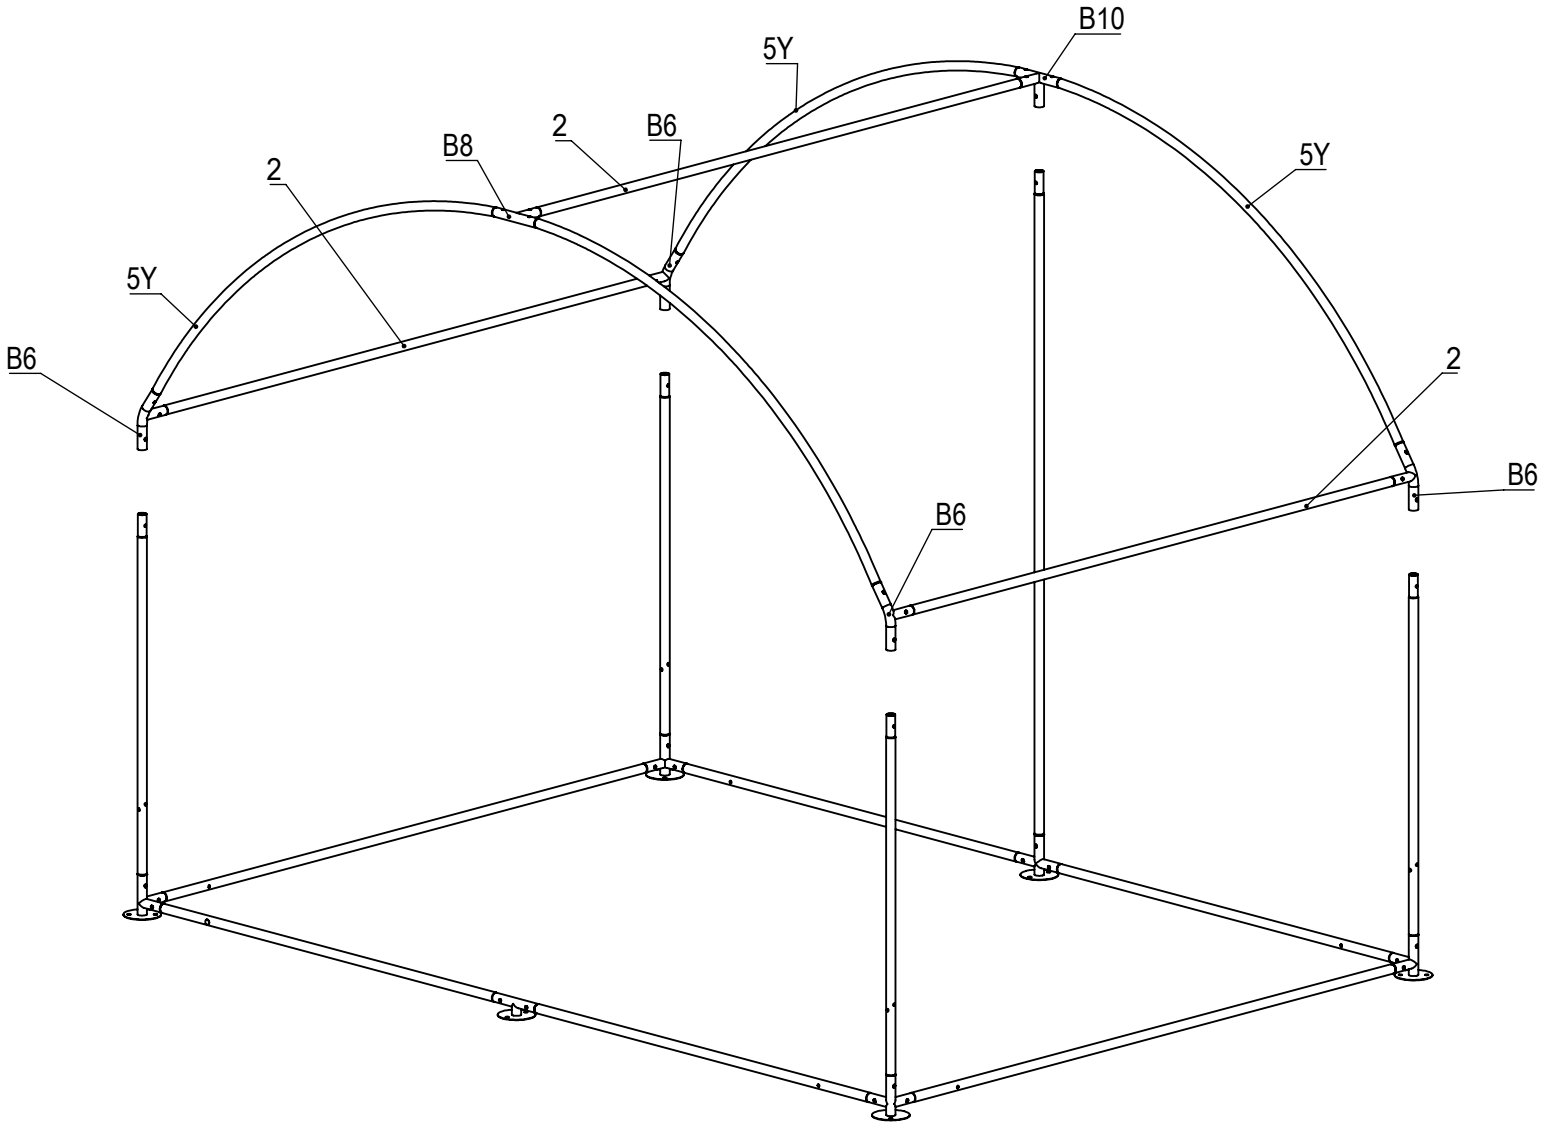


NO.	PCS
2	3
5	4
B1	5
B3	1

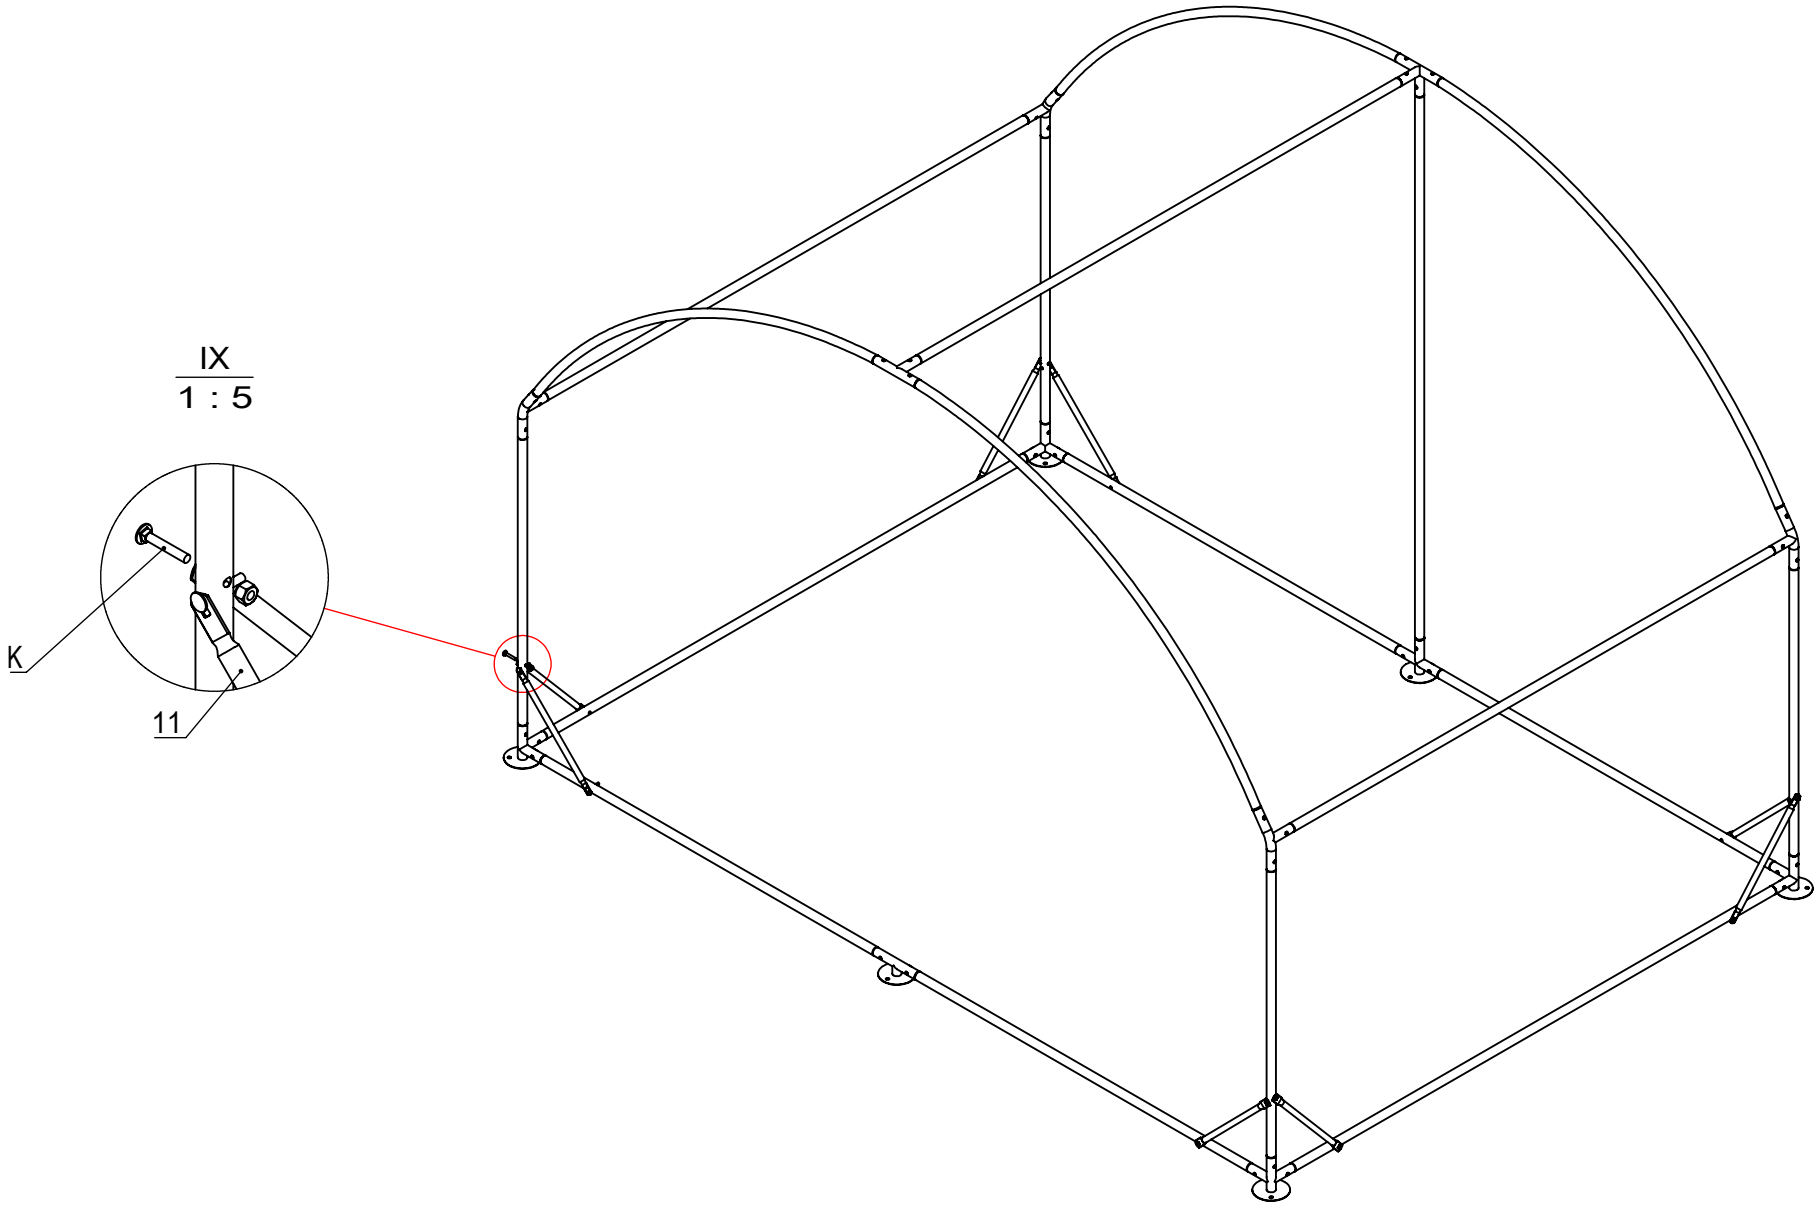


NO.	PCS
11	8
K(M6*40)	16






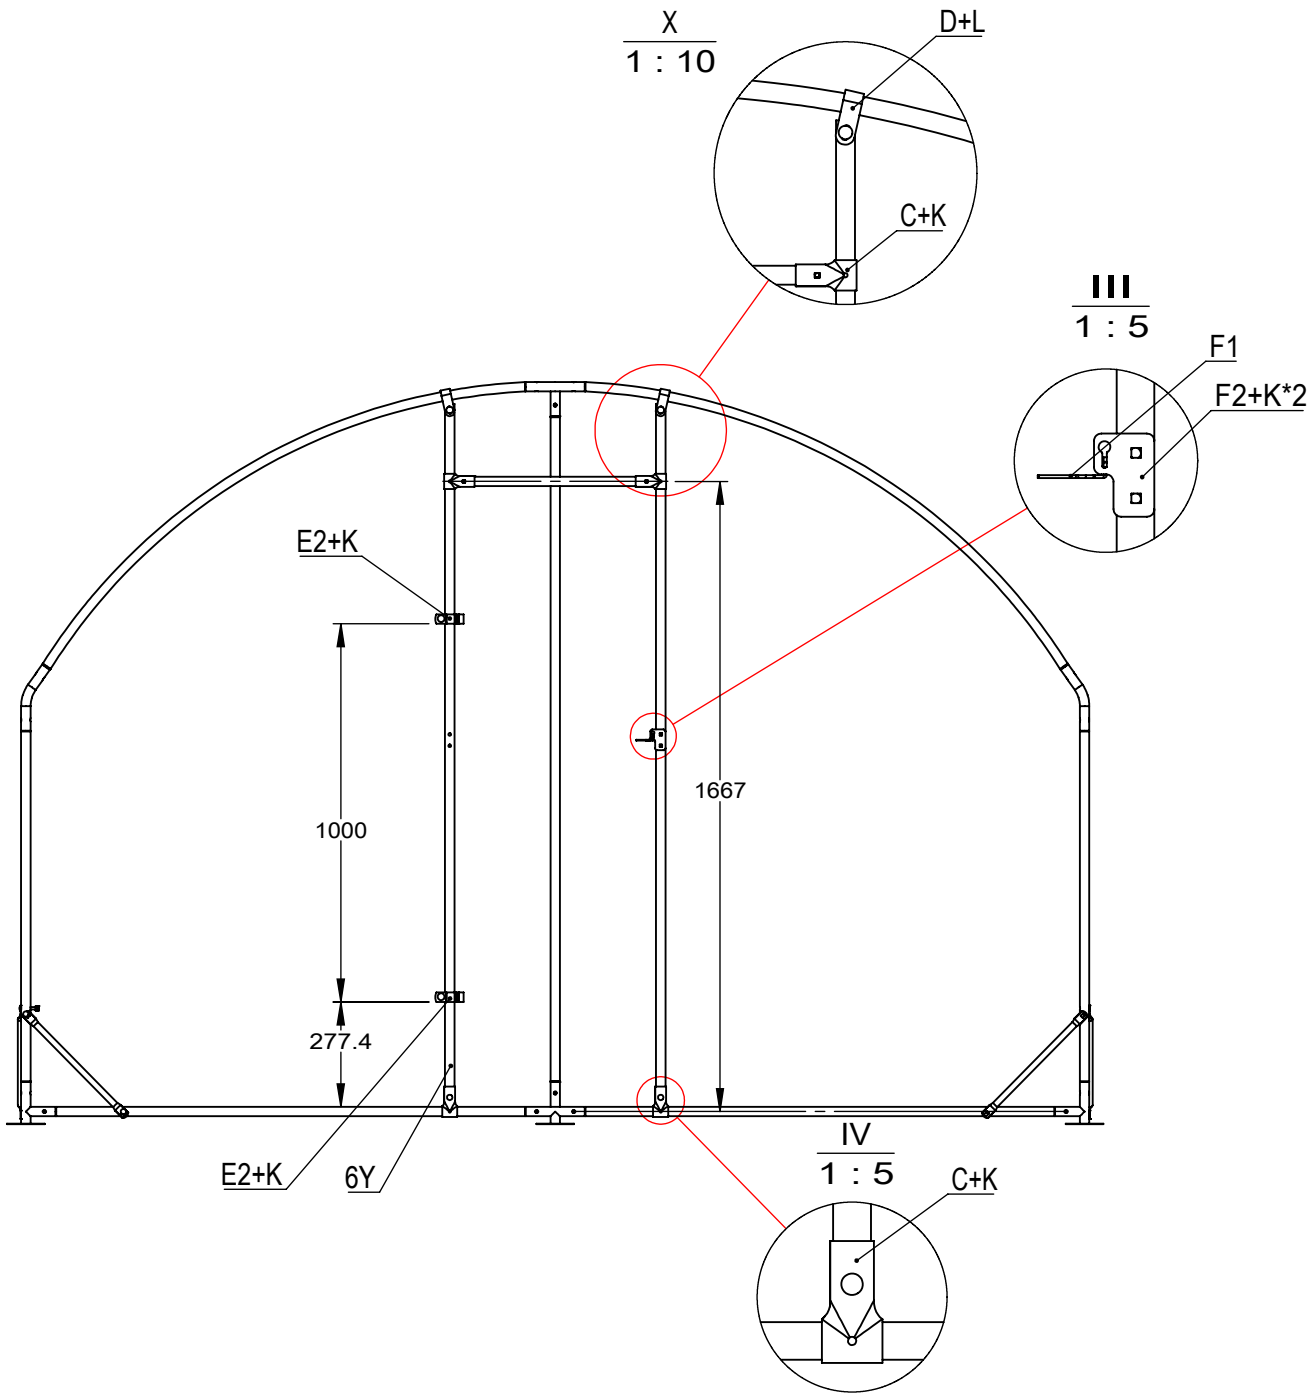



NO.	PCS
D	2
C	8
6	2
7	1
E2	2
F2	2
F1	1
L	4
K	6

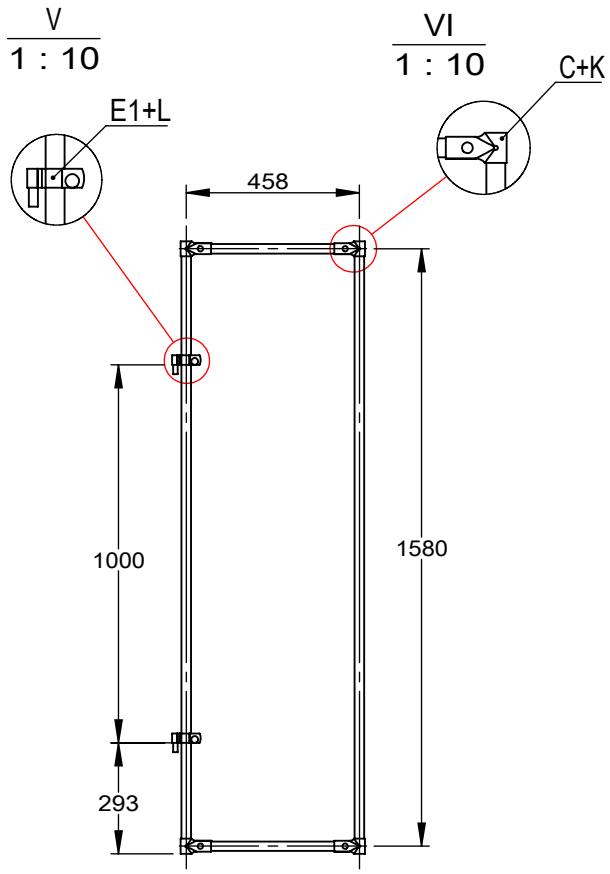


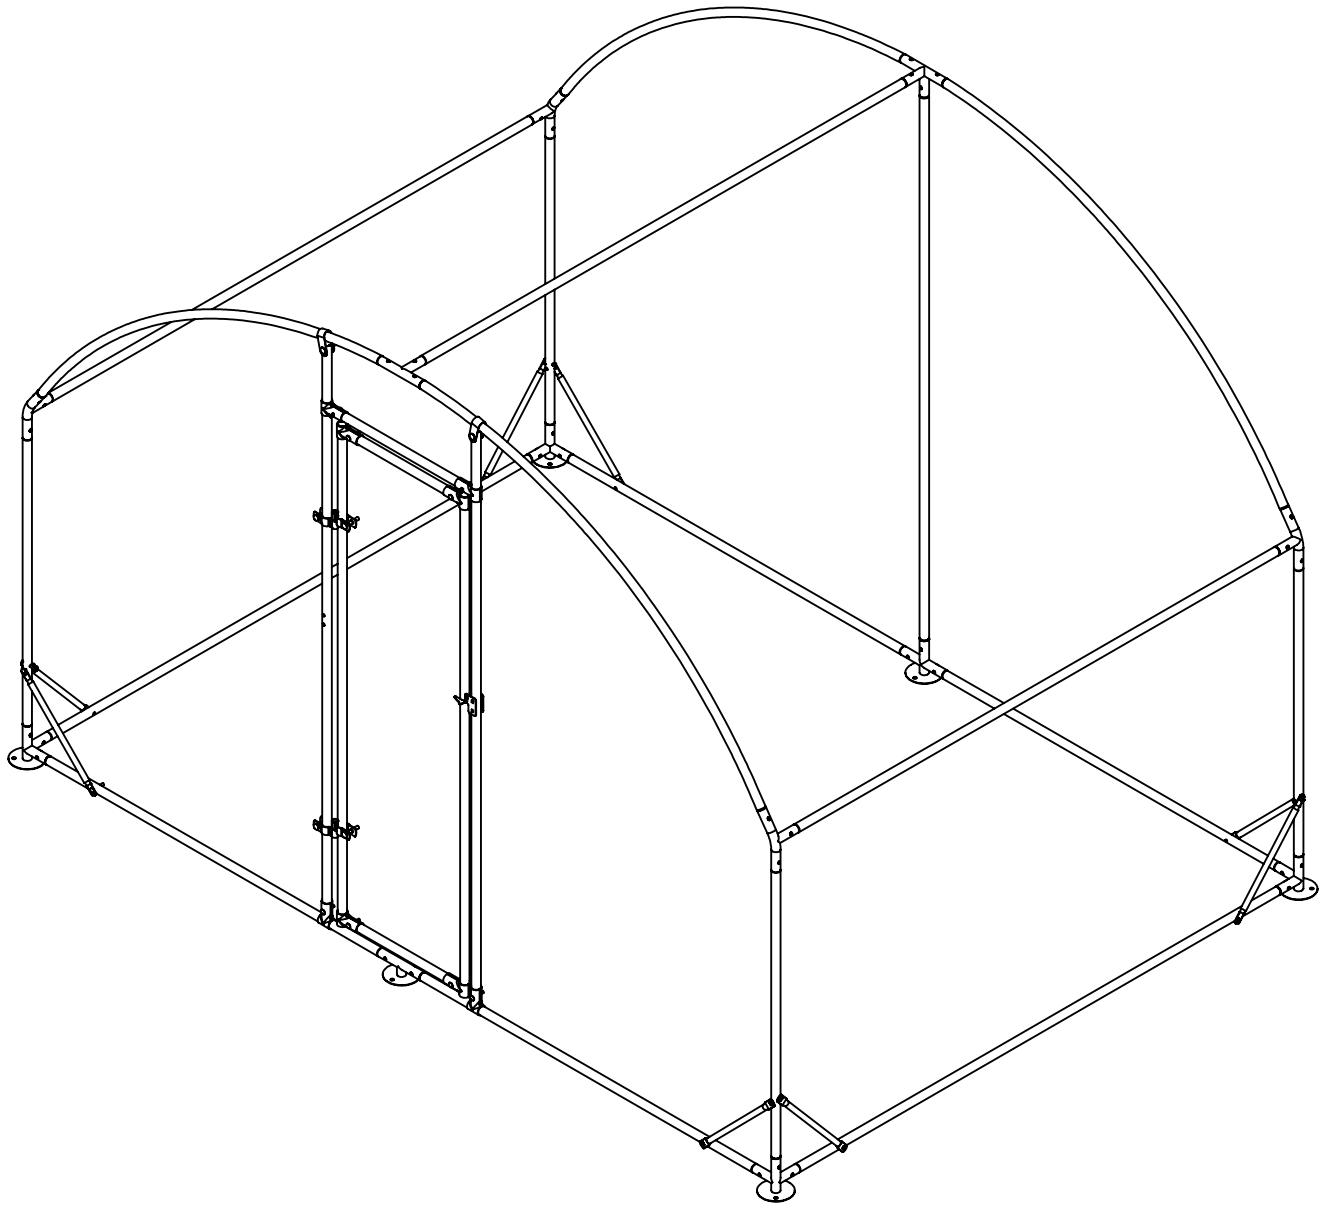



NO.	PCS
C	8
10	2
9	2
E1	2
L	2
K	4

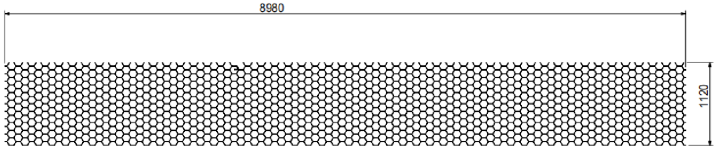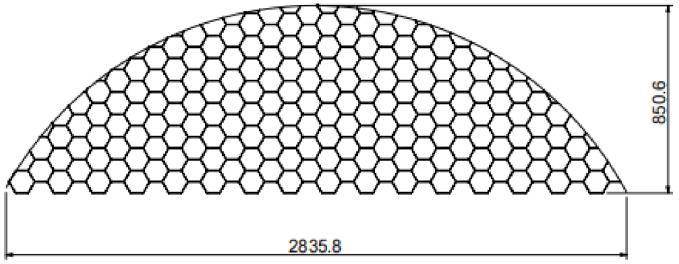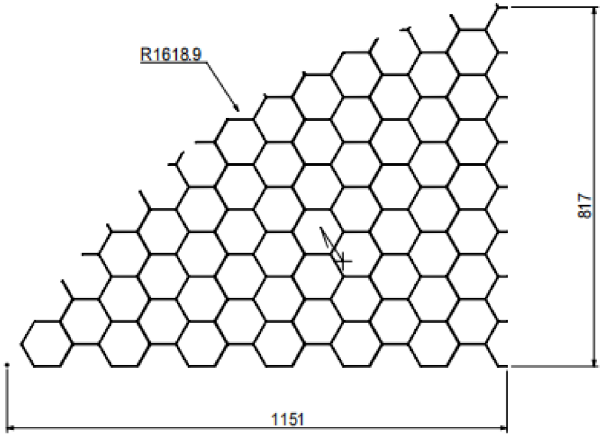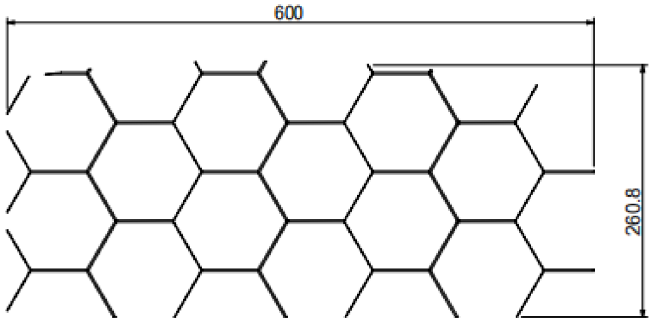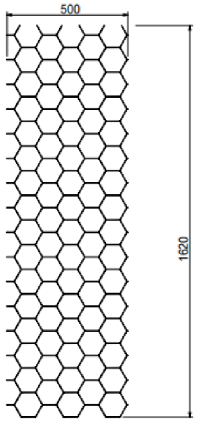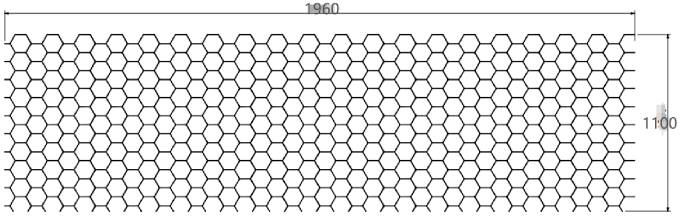
	W1		WY1
	1		1
	WY2		WY3
	2		1
	WY4		WY5
	1		3

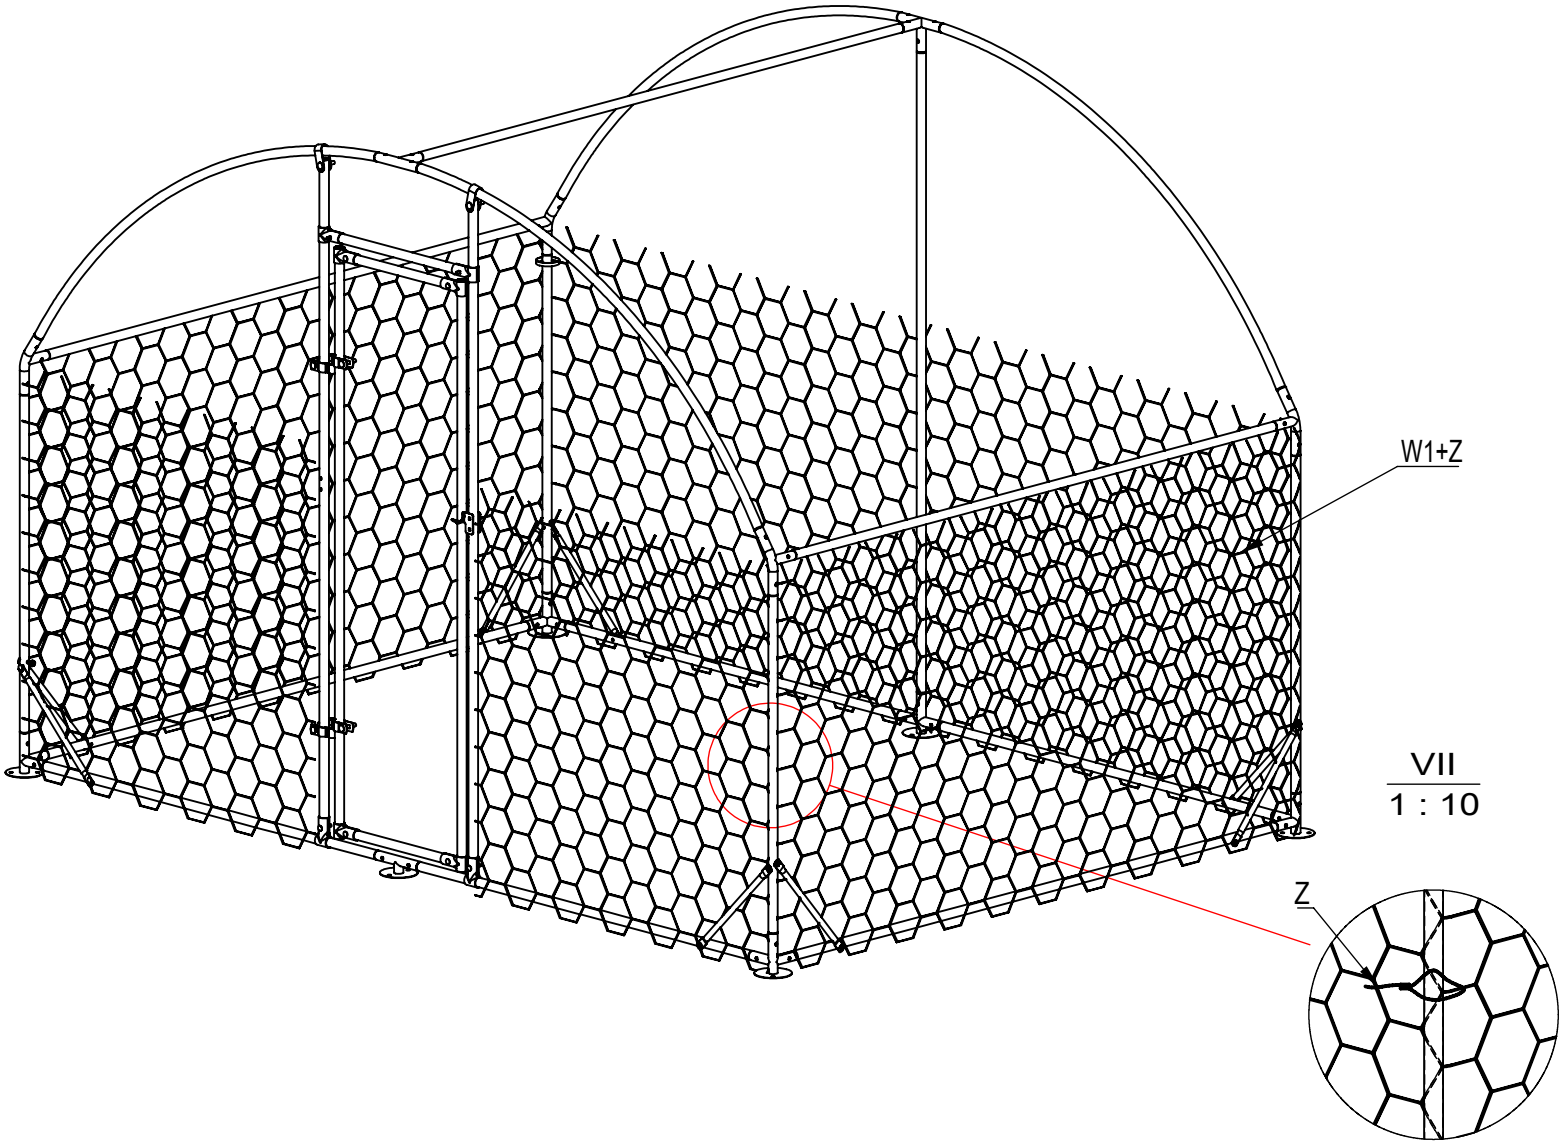

W1+Z
VII
1 : 10
Z

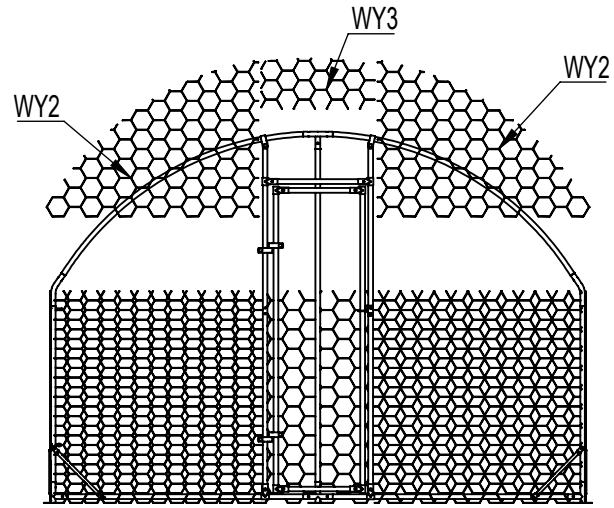
WY3
WY2
WY2

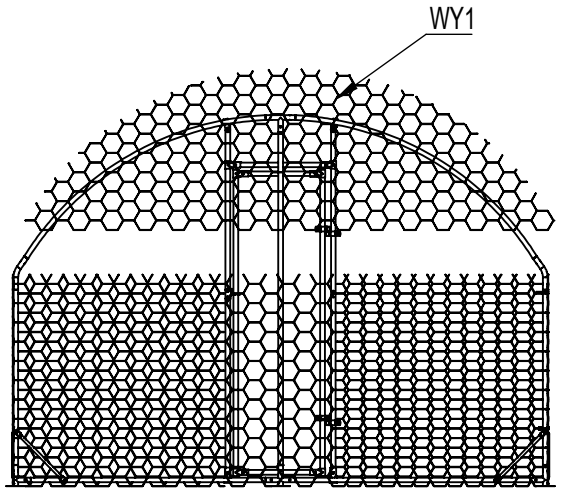
WY1

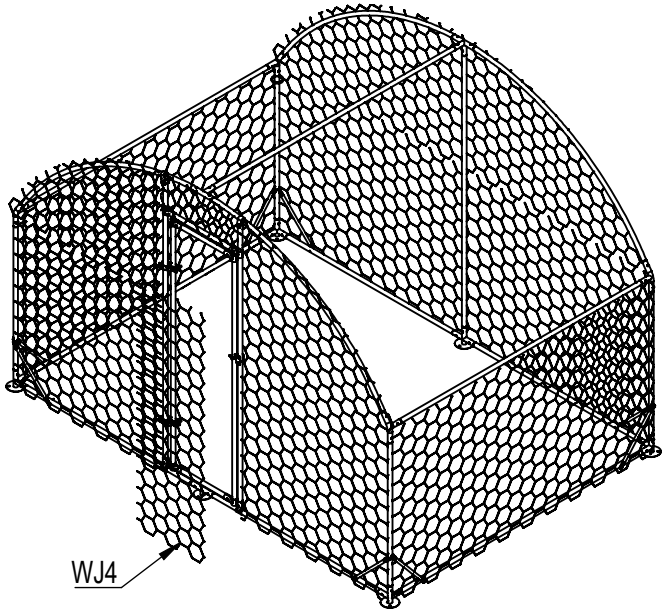
WJ4

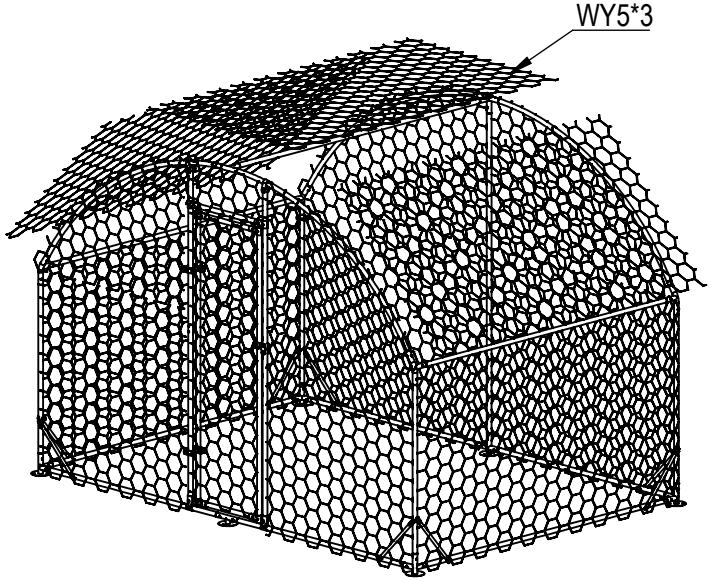
WY5*3

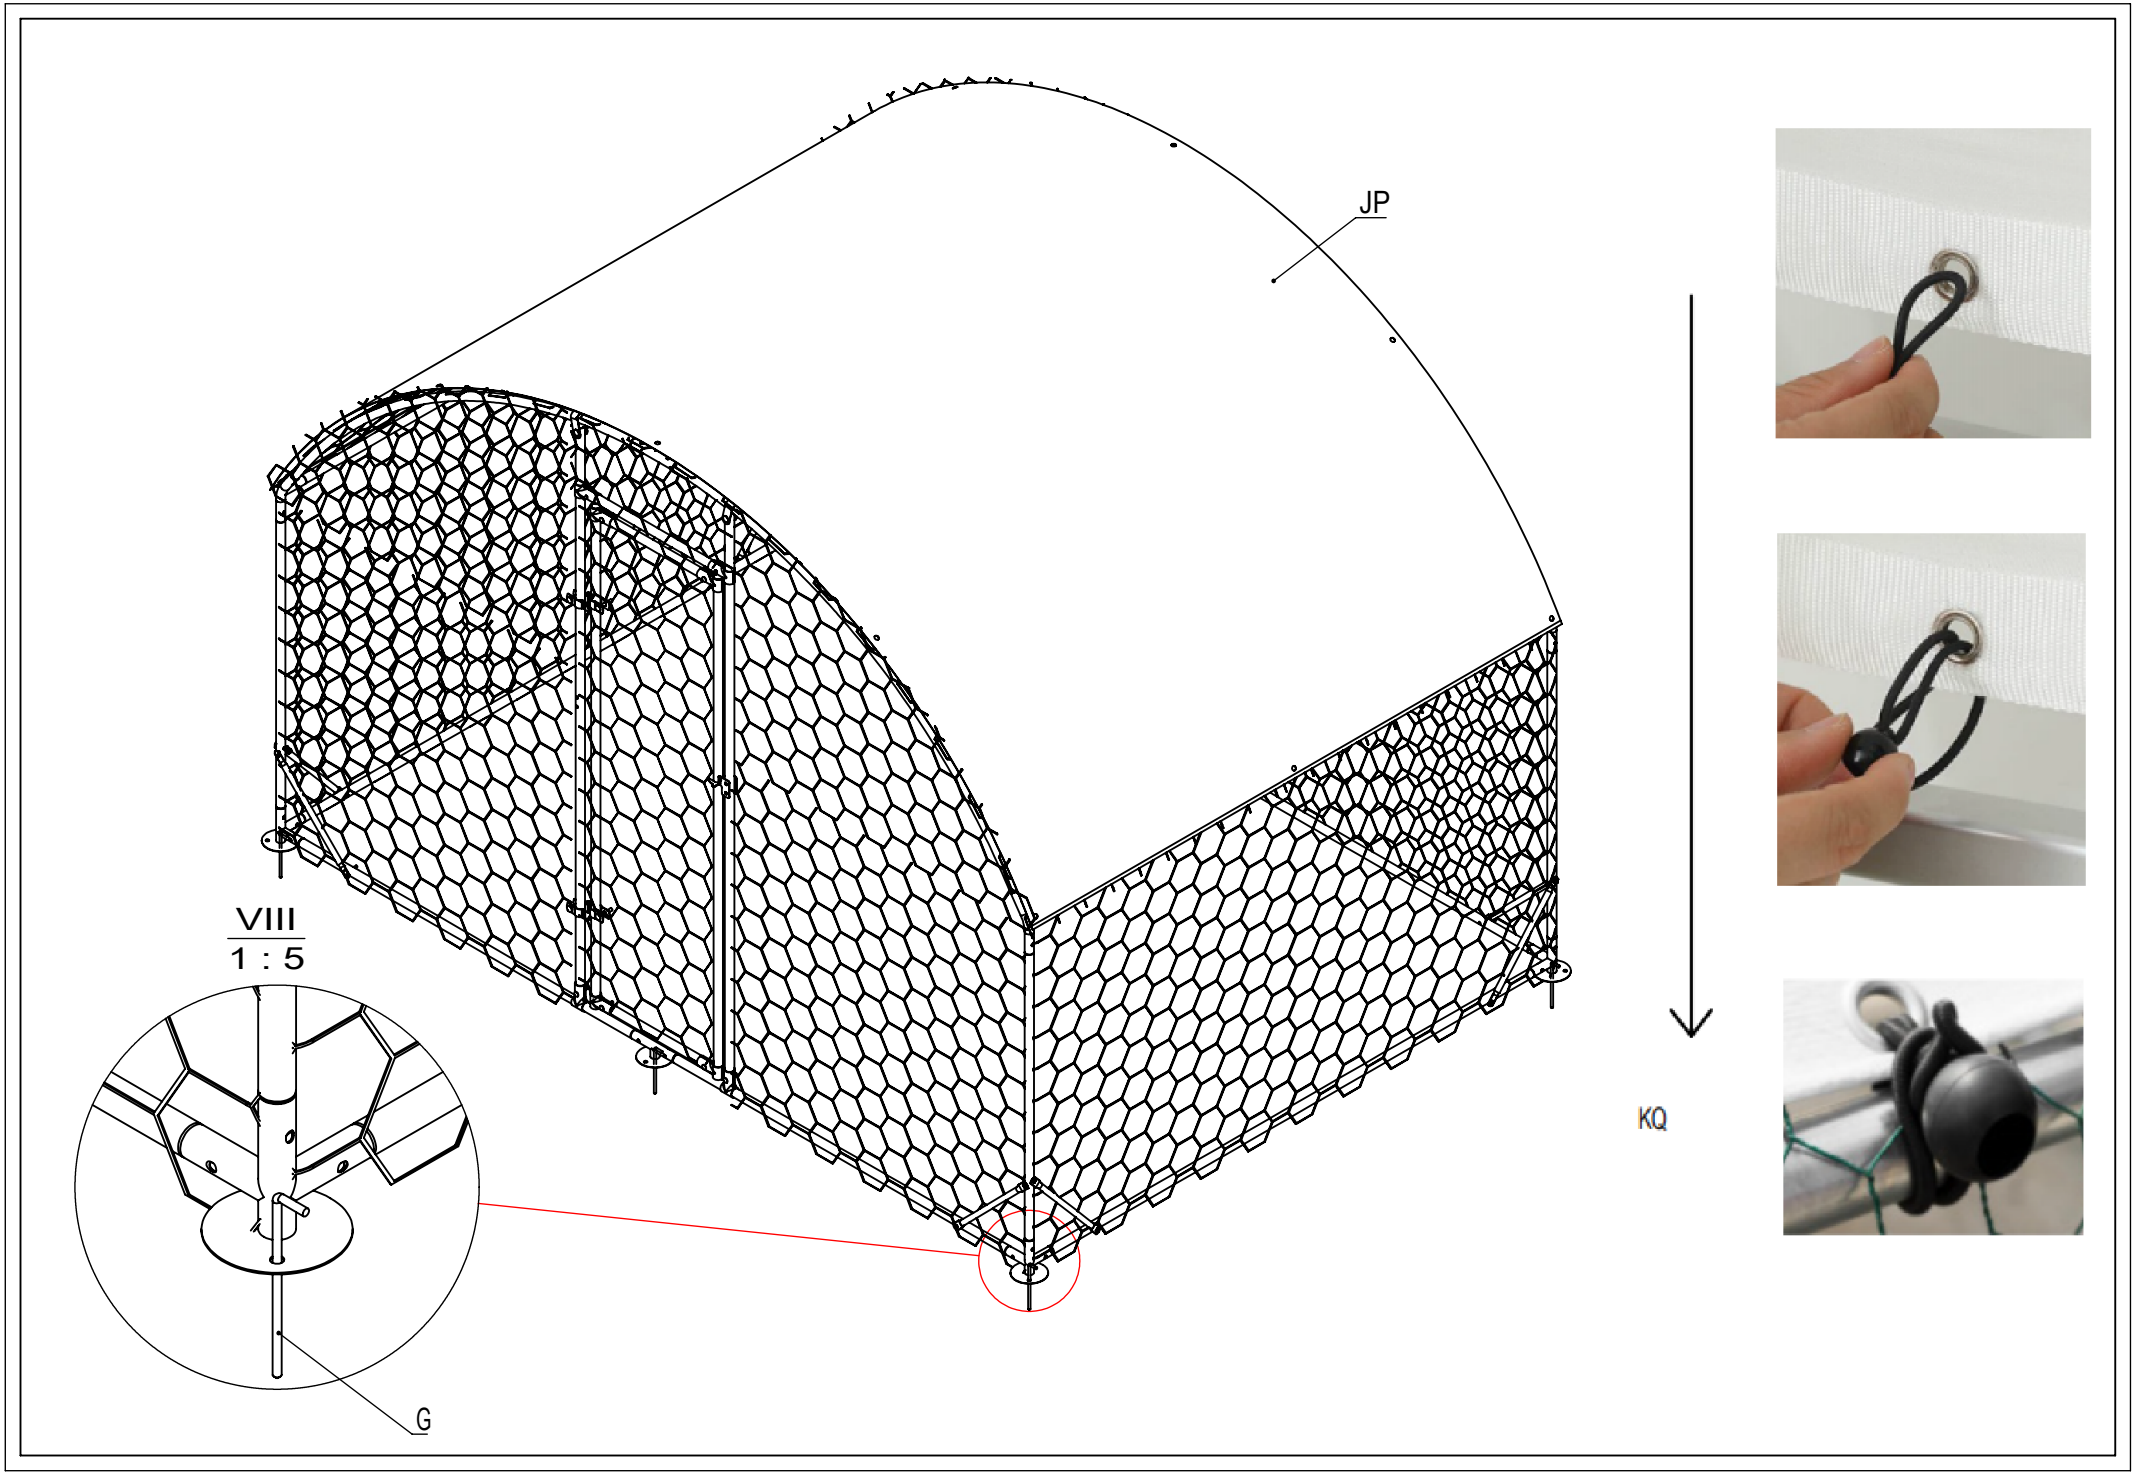
JP
VIII
1 : 5
G
KQ