
HW-AM557847
CUSTOMER MANUAL

-V 0.2

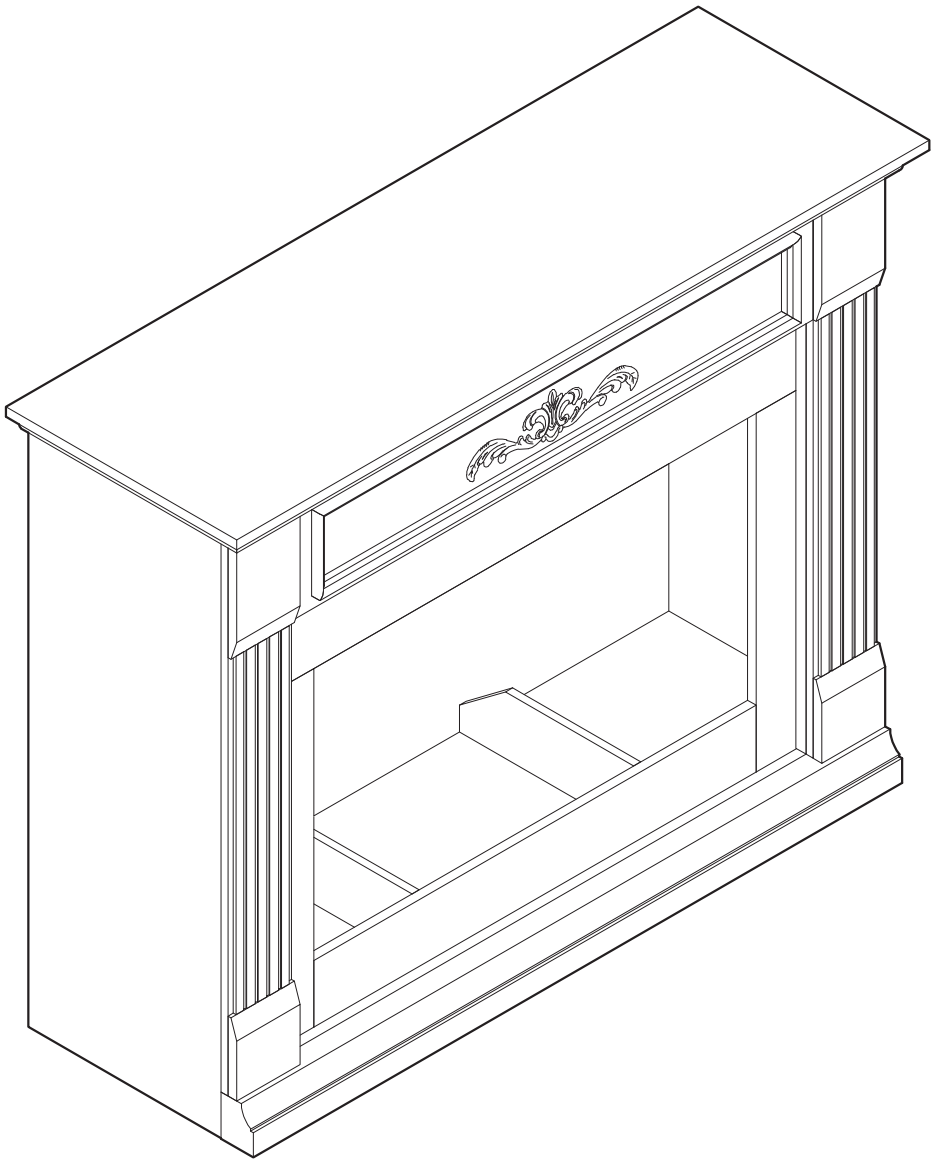

If you have any questions, please contact us.

⚠ WARNING






Children have died from furniture tipover.
To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers,doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.


This is a permanent label.
Do not remove!

ASSEMBLY STRUCTURE REFERENCE DIAGRAM

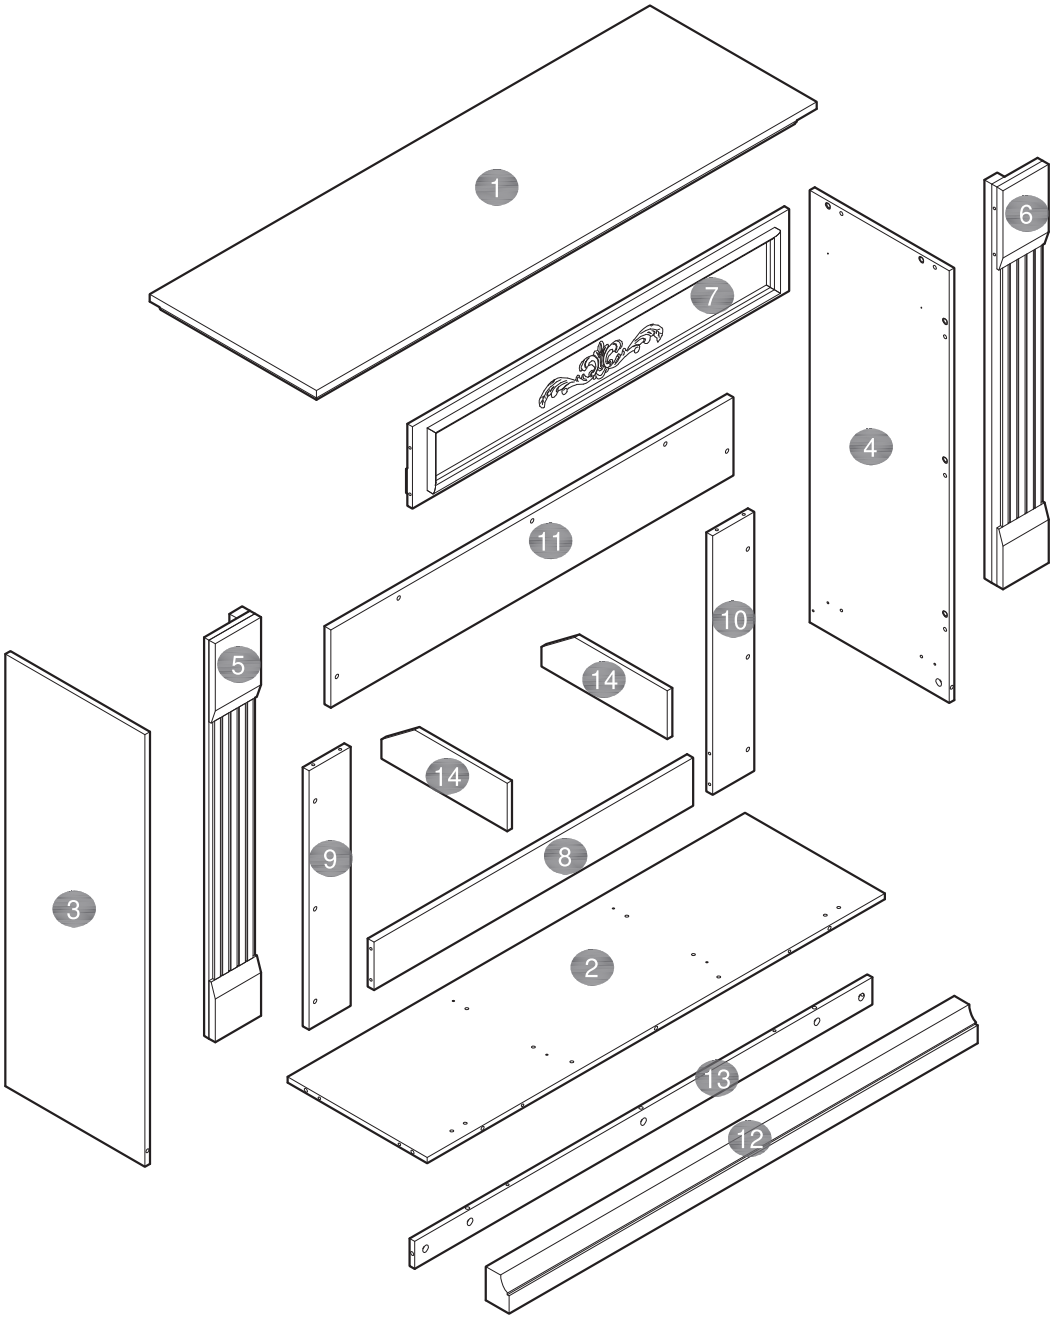

PARTS

A

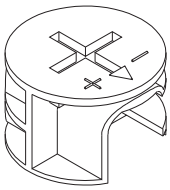

× **18+2**

B




× **18+2**

C



ø6*30mm
× **30+2**

D



ø3*12*6mm
× **16+1**

E




× **6**

F




ø3*14mm
× **2**

G



M6*12mm
× **24+2**

H

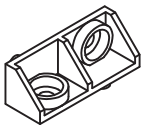

× **12**

I




M6*25mm
× **11+1**

M



× **2**

N




× **2**

O




ø4*35mm
× **2**

P

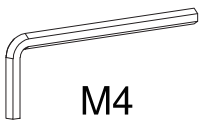

× **1**


Q

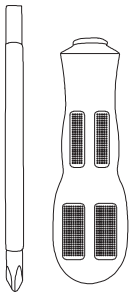


× **1**

PARTS

V

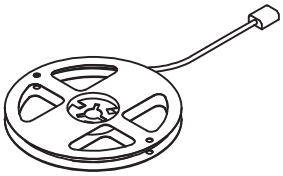


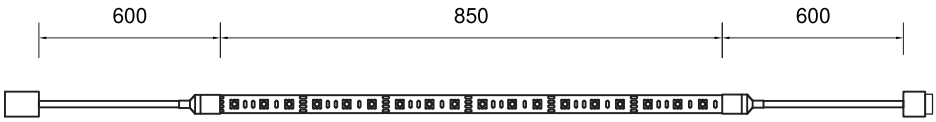


×1

V1

V3

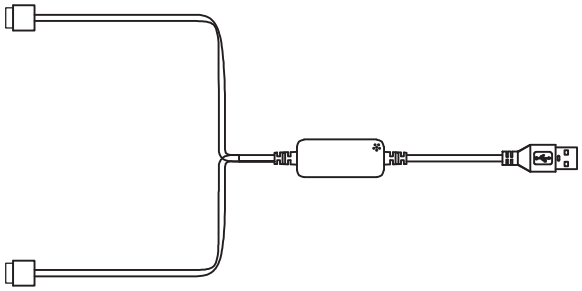


×1




V4


× **4**

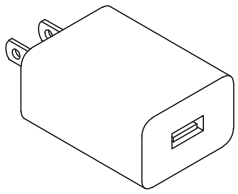



V5

× **1**

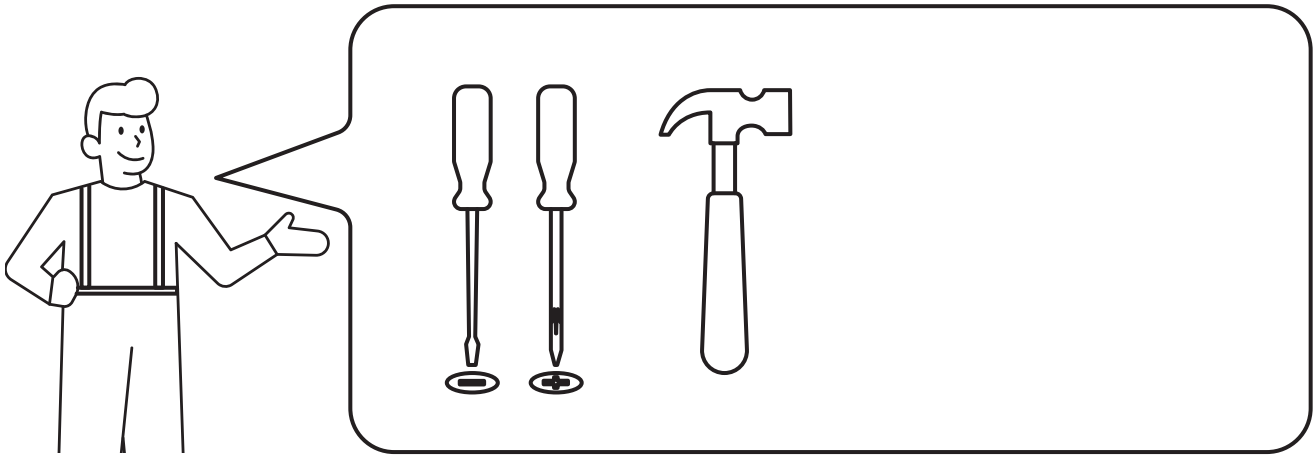


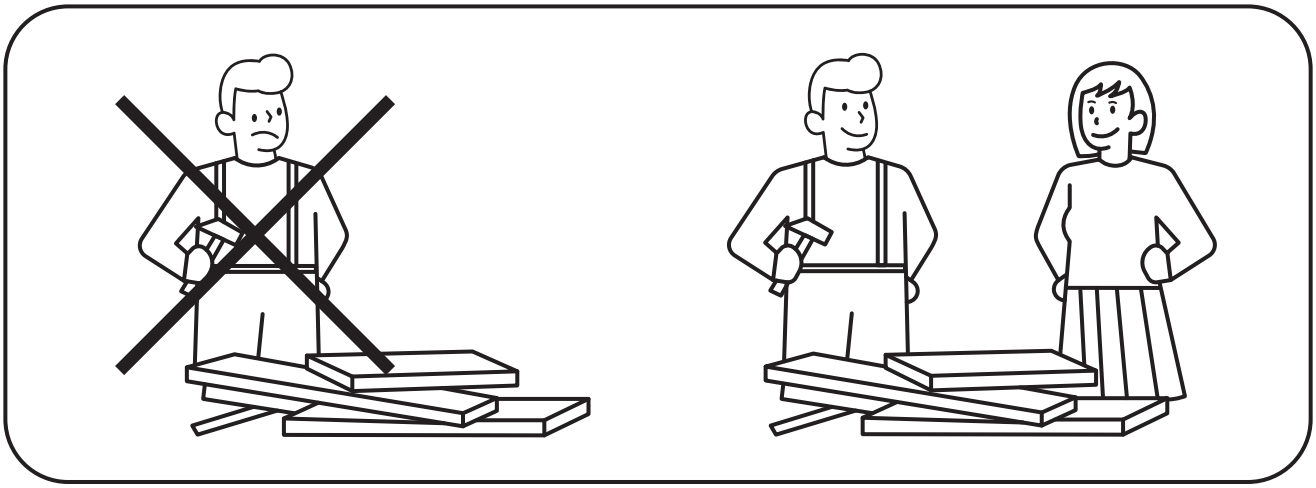

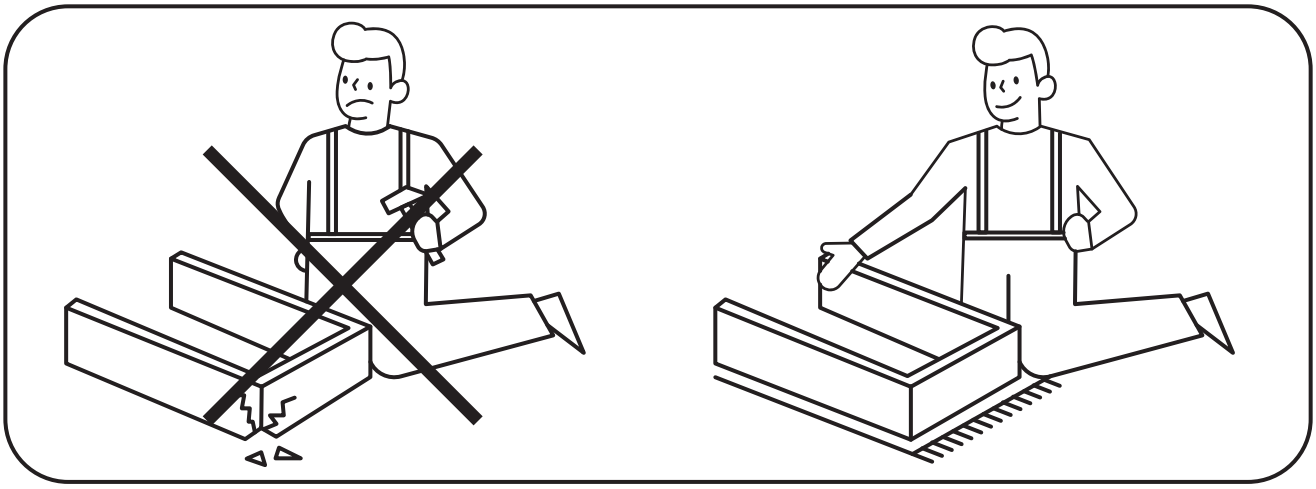

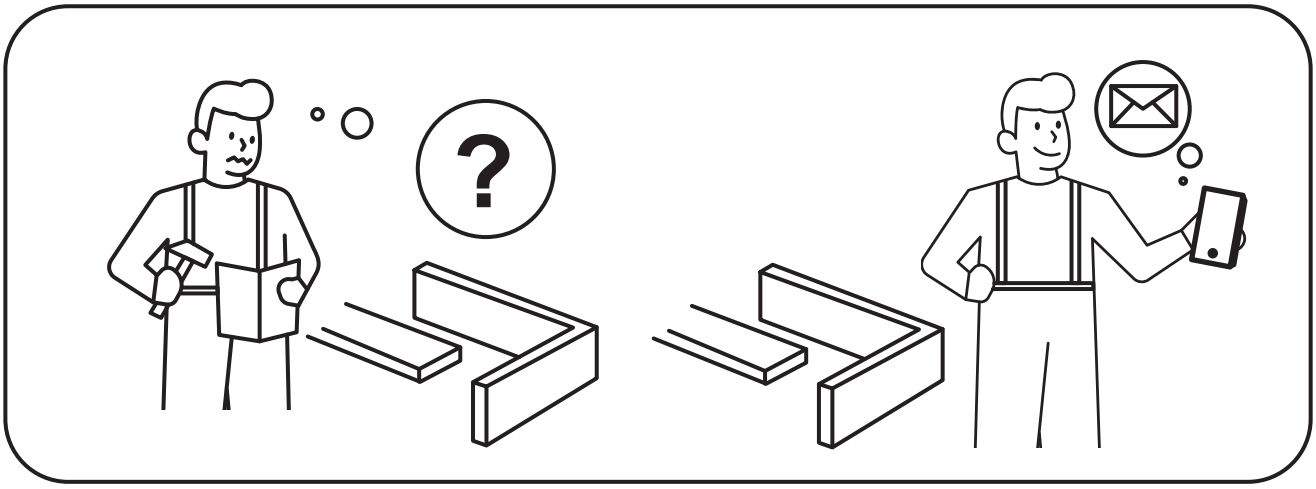


How to work the Knock Down (kd) assembly system

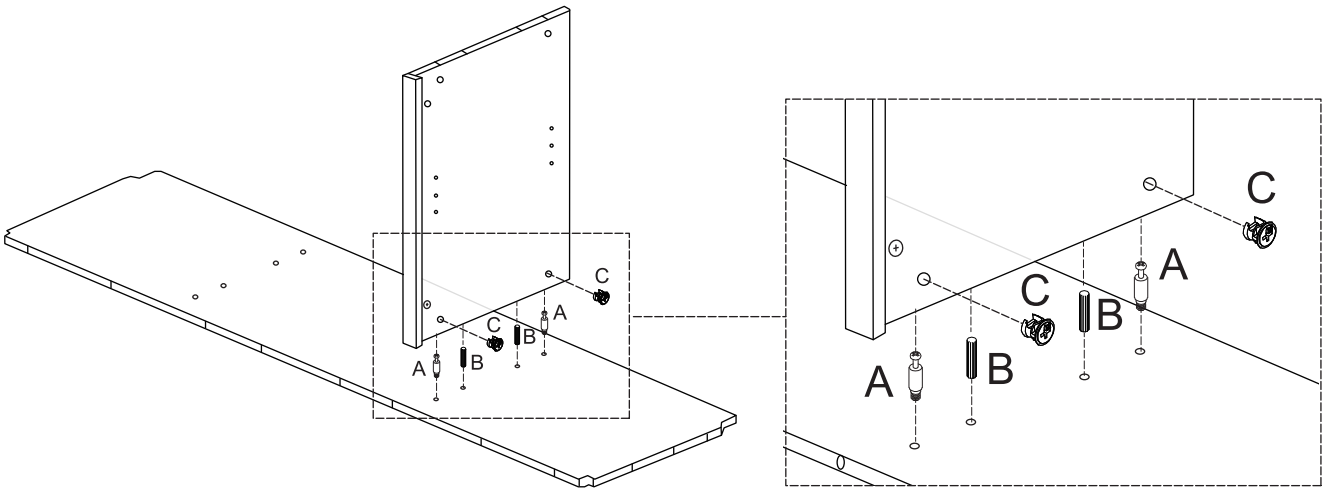


How to install Wood Dowel


Insert the wood dowel [B] at least half way by tapping lightly with a rubber mallet, IF NECESSARY.

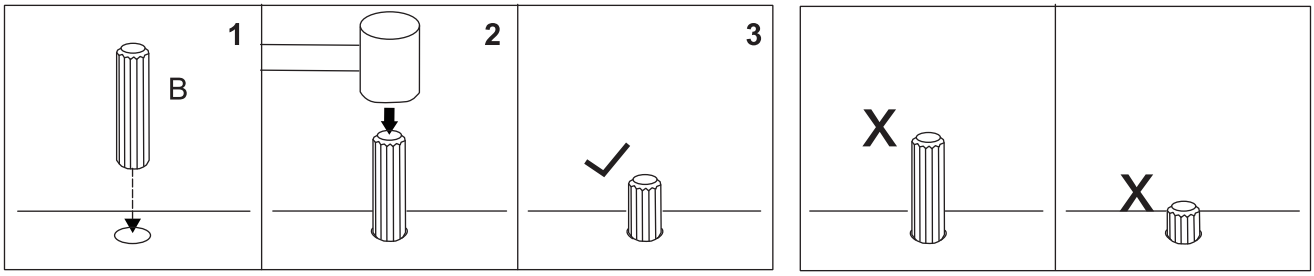

How to use the Cam Lock system

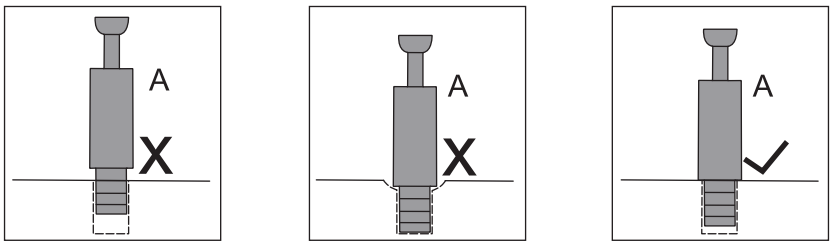


1. Screw the cam bolt [A] into the threaded insert on the panel.
2. Connect both panels together making sure cam bolt [A] goes into the pre-driled large hole on the end of panel for cam lock [C].
3. Insert the cam lock [C] into the pre-drilled large hole on the panel. **Make sure the cross slot of cam lock [C] faces out.**
4. Rotate the cam lock [C] **clockwise** with a self-supplied philips screwdriver to lock the cam bolt [A] in place.

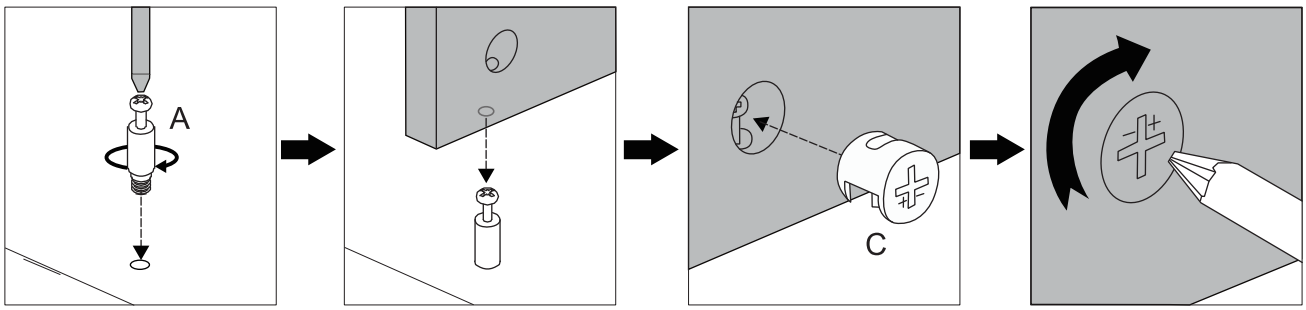


Step 1

Securing Cam Bolt (B) into Board (③&④).

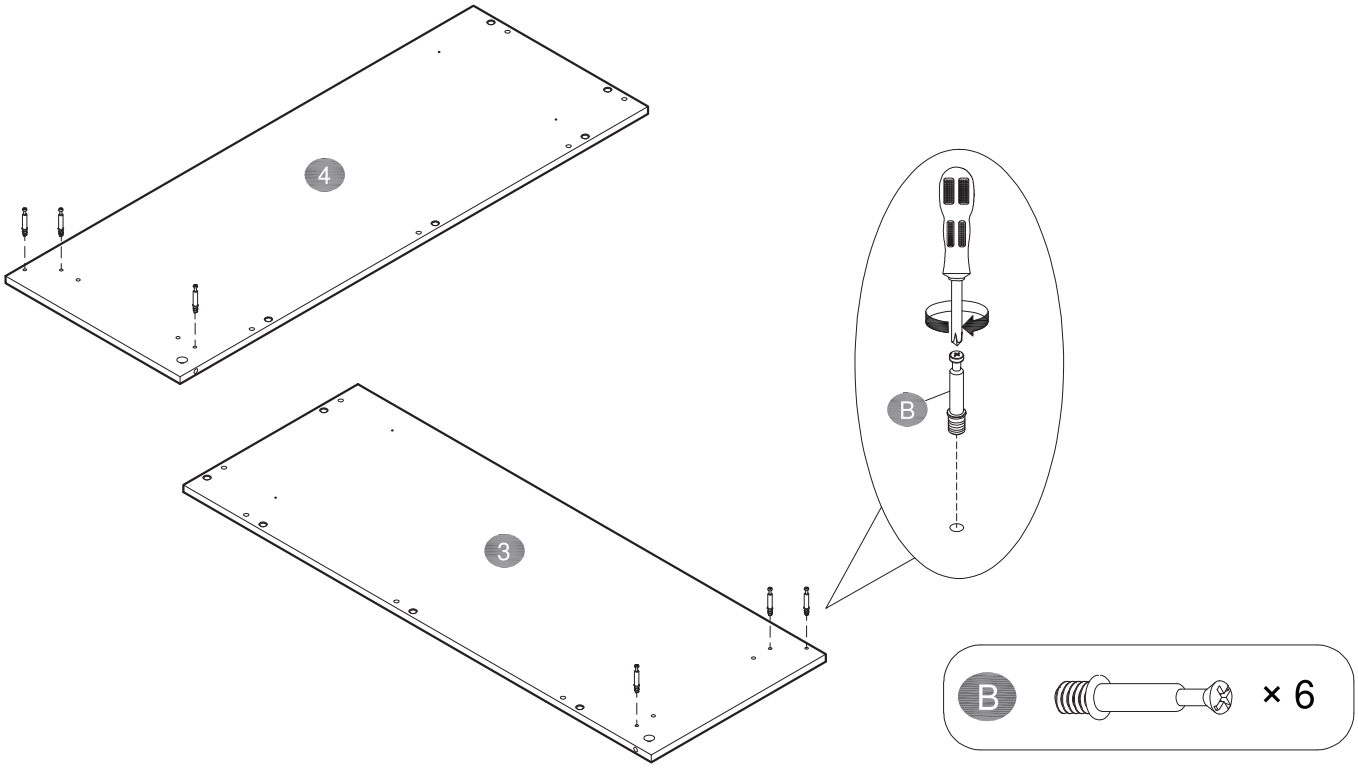


Step 2


Using Screws (G) and a 7-Shaped Wrench (P)
secure Connector (H) to Board (③&④).

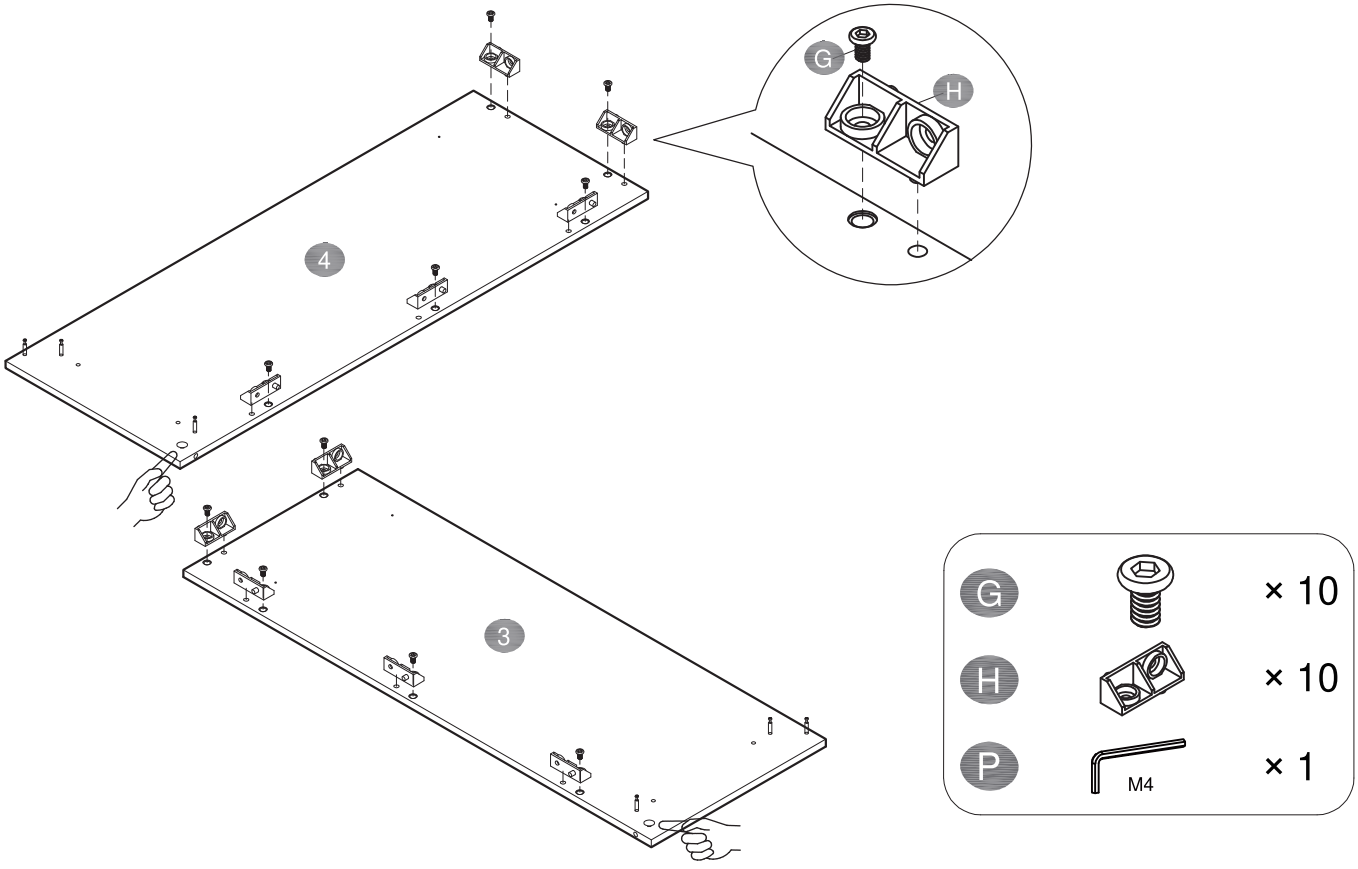

Step 3


Securing Cam Bolt (B) into Board (②).
Then flip 180 degrees, Securing Cam Bolt (B) into Board (②)

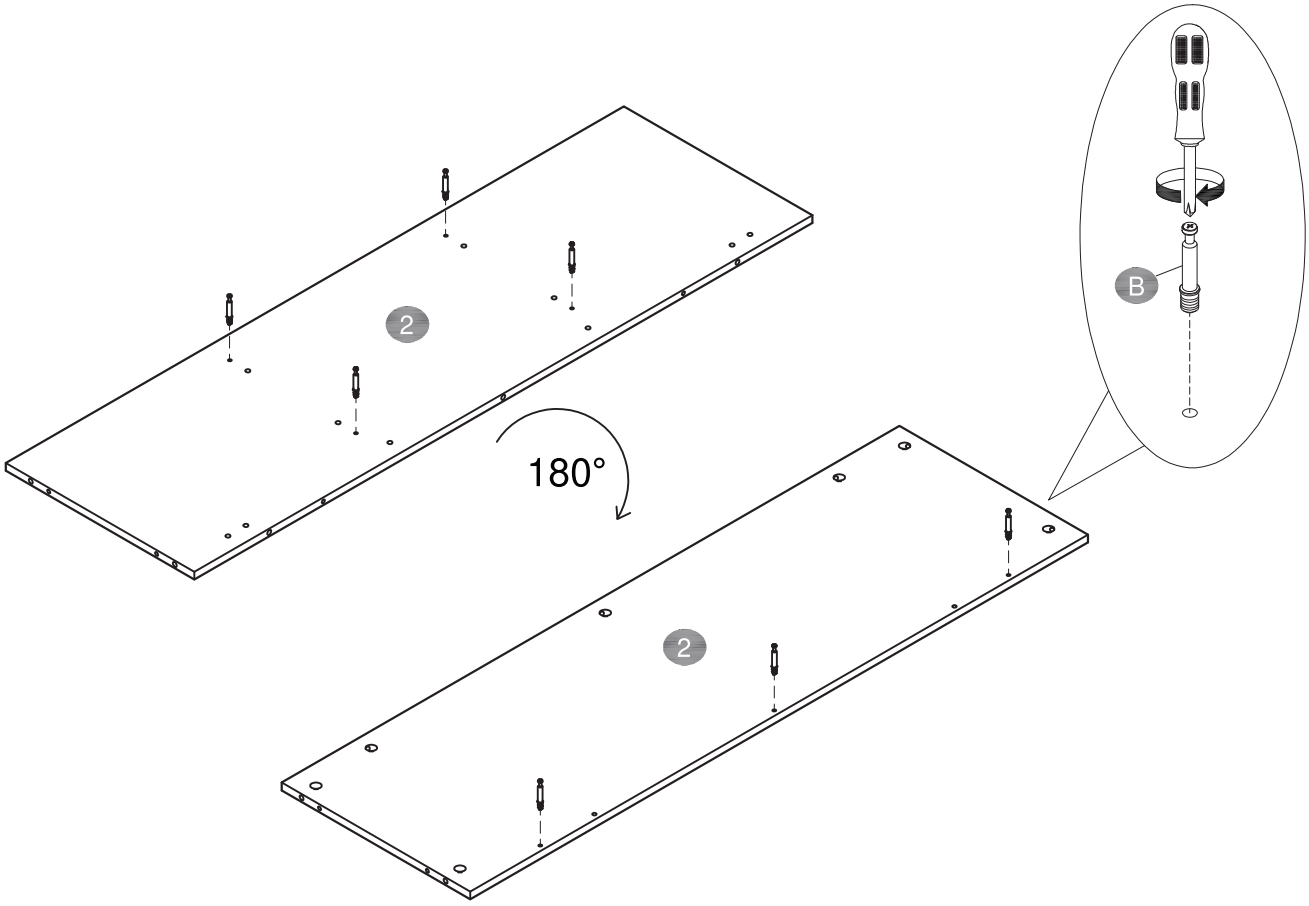




Step 4


Inserting Wooden Dowel (C) into Board (②), then attach Board (⑬) to Board (②).
Using Cam Lock (A) secure Board (⑬) to Board (②).

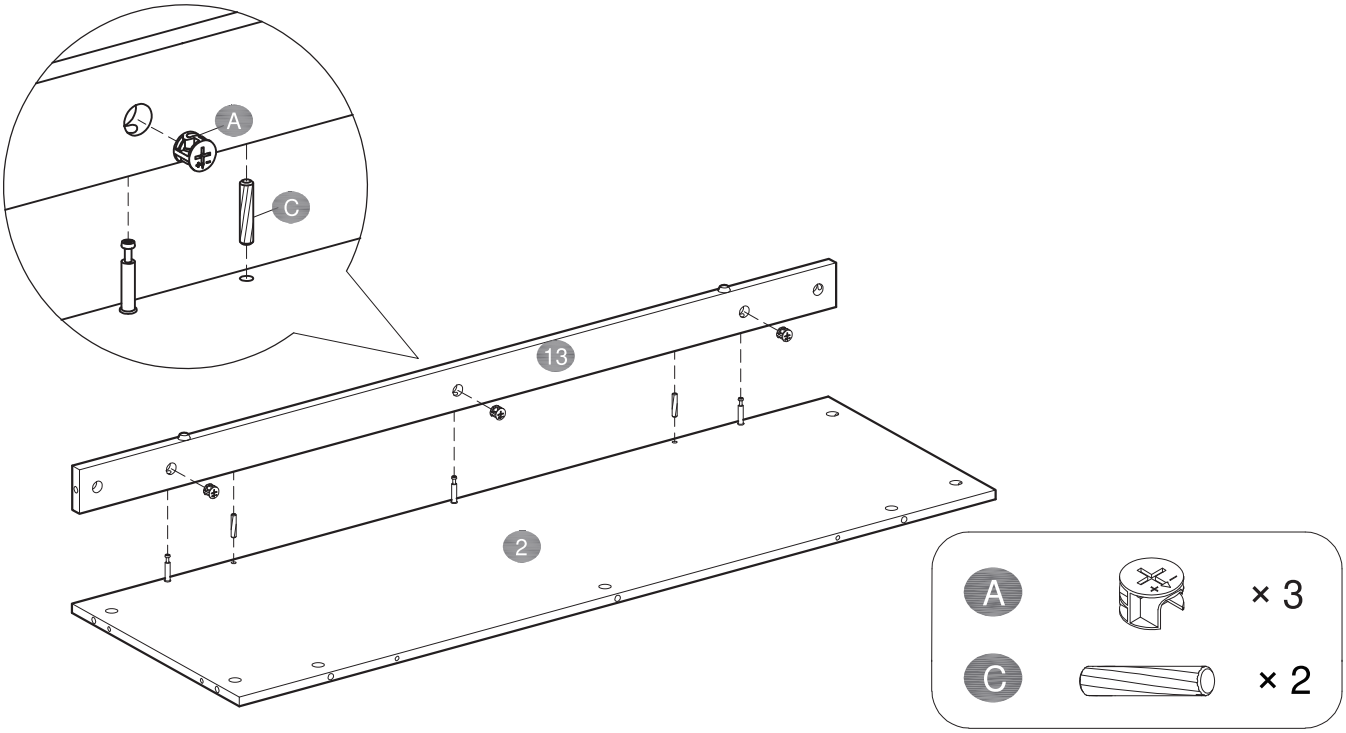

Step 5


Inserting Wooden Dowel (C) into Board (②), then attach Board (③&④) to Board (②&⑬).
Using Cam Lock (A) secure Board (③&④) to Board (②&⑬).

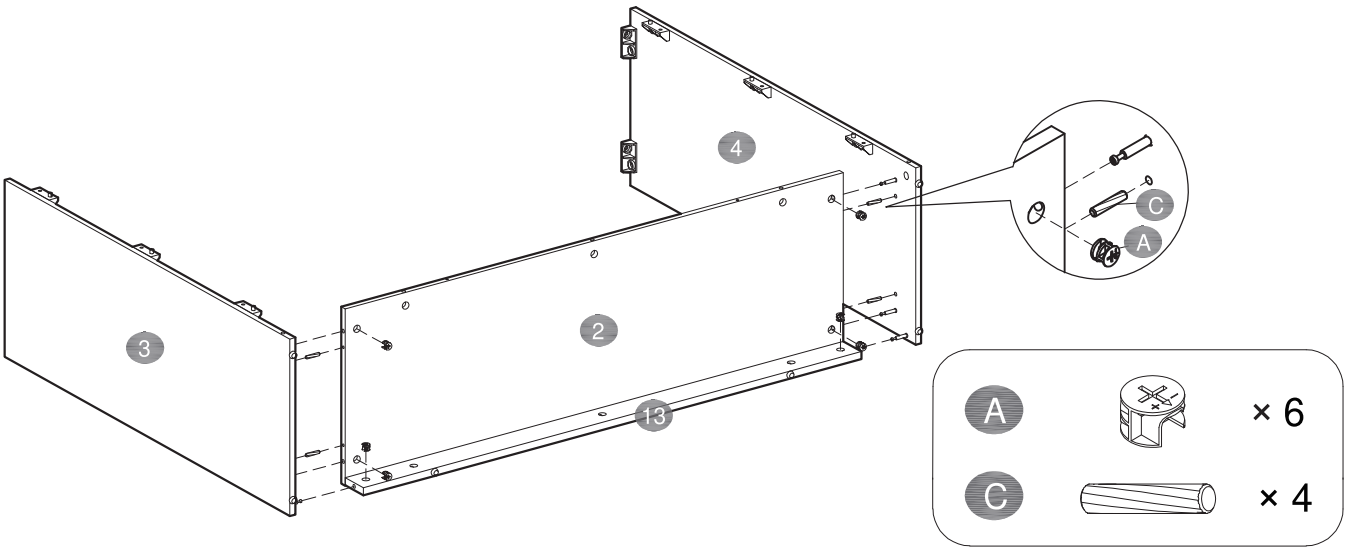

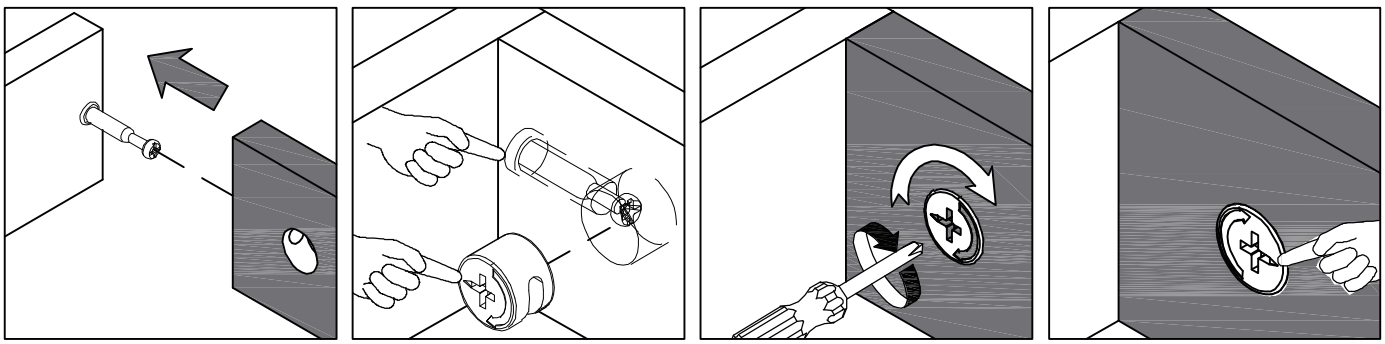


Step 6


Securing Cam Bolt (B) into Board (⑫).

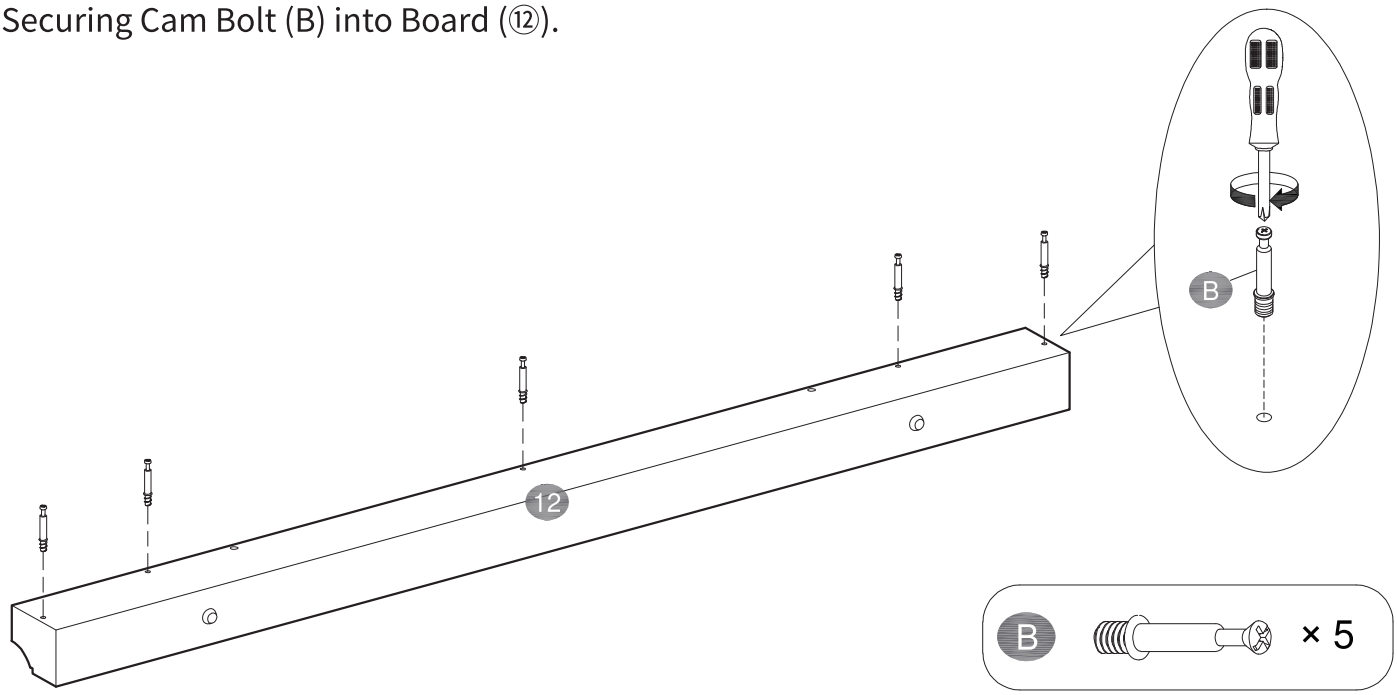

Step 7


Inserting Wooden Dowel (C) into Board (②), then Attach Board (⑫) to Board (②&③&④).
Using Cam Lock (A) Secure Board (⑫) to Board (②&③&④).

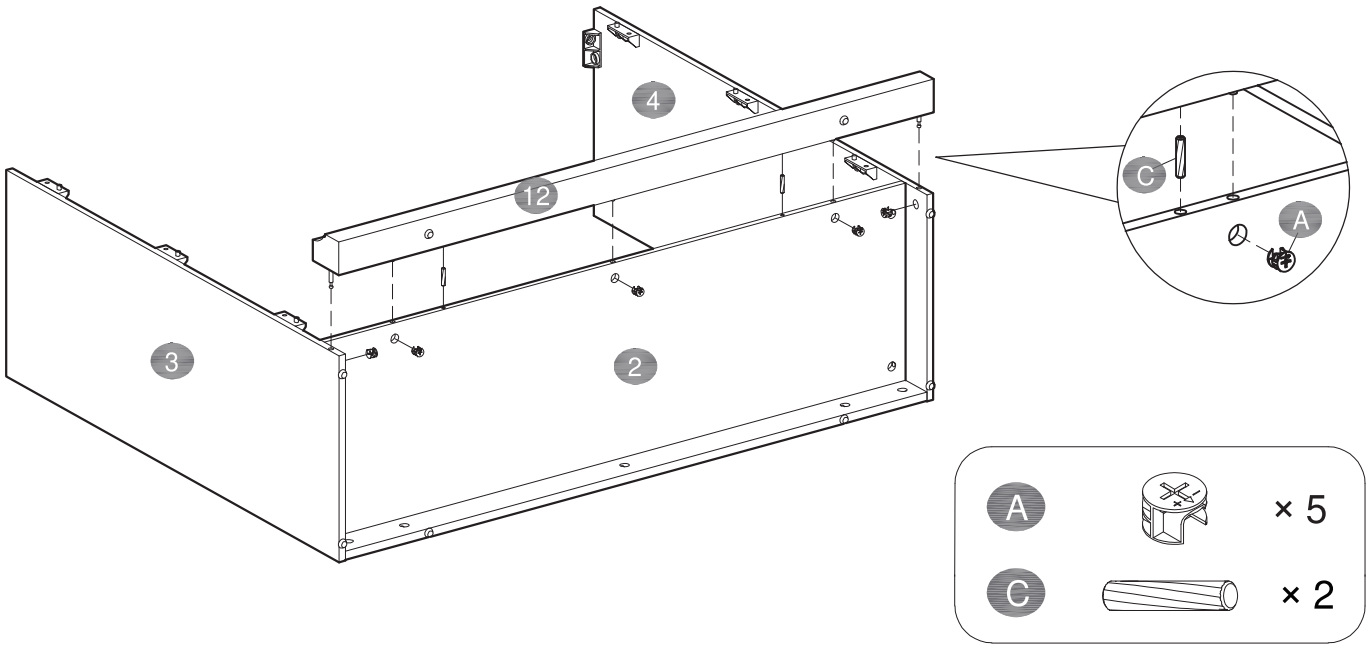

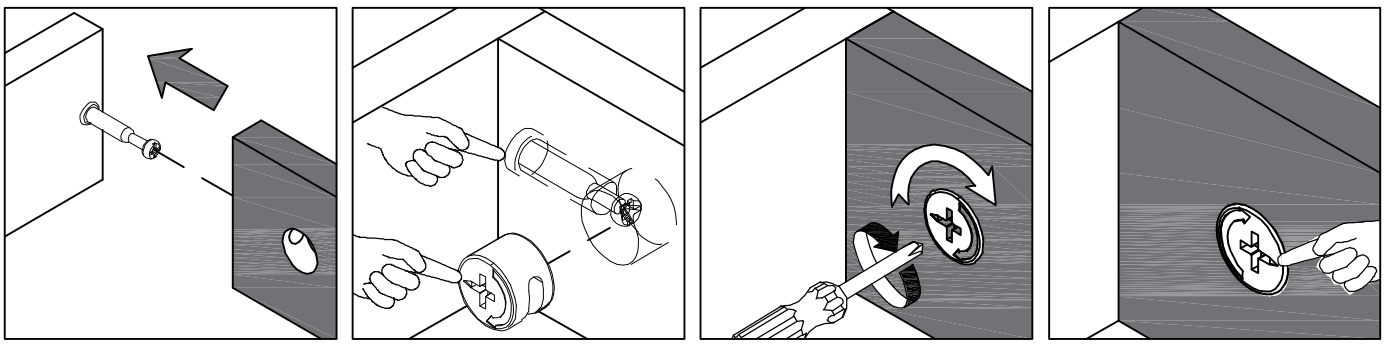


Step 8


Using Screws (G) and a 7-Shaped Wrench (P) Secure Connector (H) to Board (⑦).

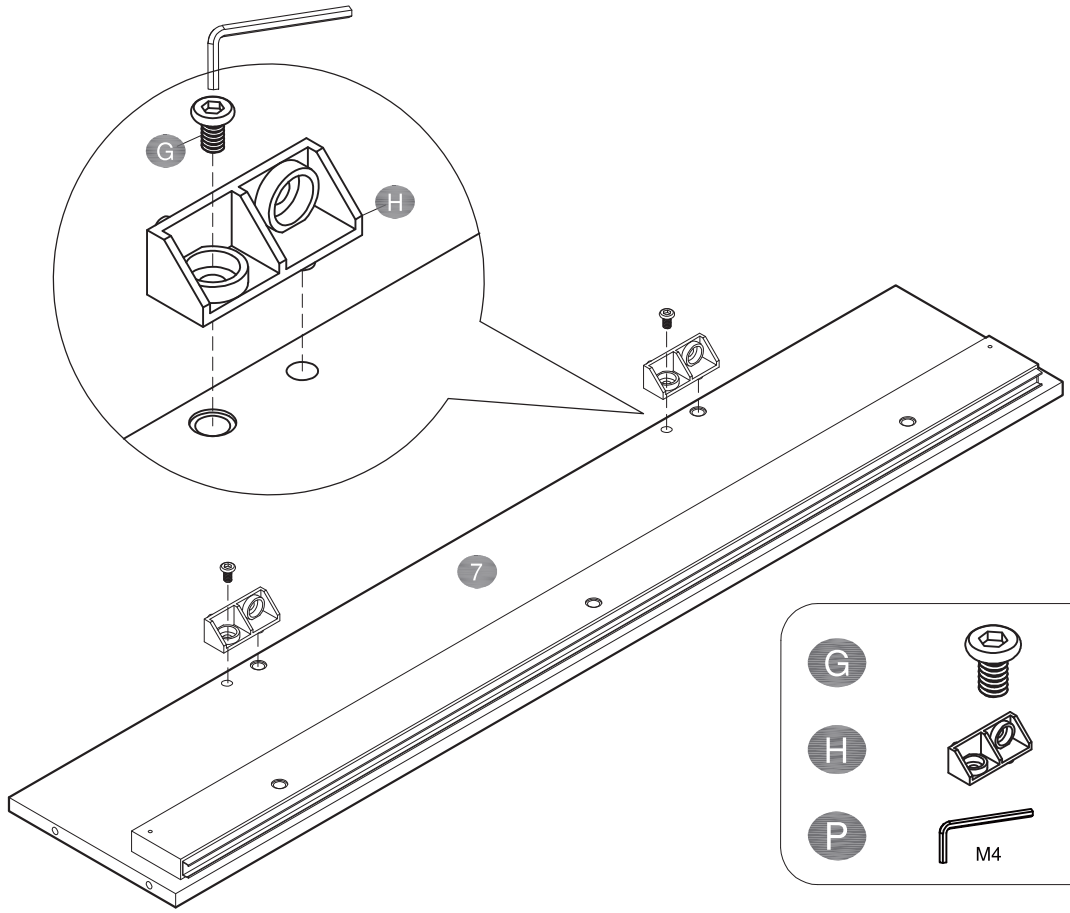

Step 9


Inserting Wooden Dowel (C) into Board (⑦), then attach Board (⑤&⑥) to Board (⑦).

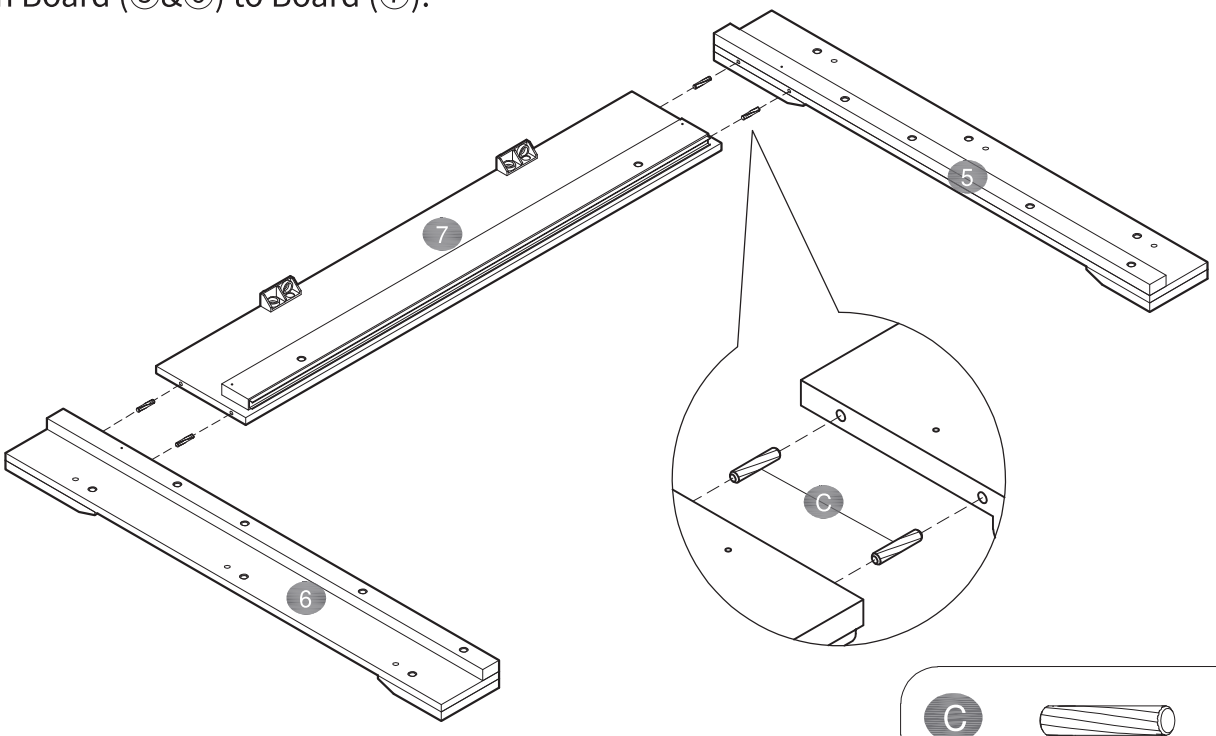




Step 10

Using Screws (D) secure Connector (E) to Board (⑤&⑦,⑥&⑦).

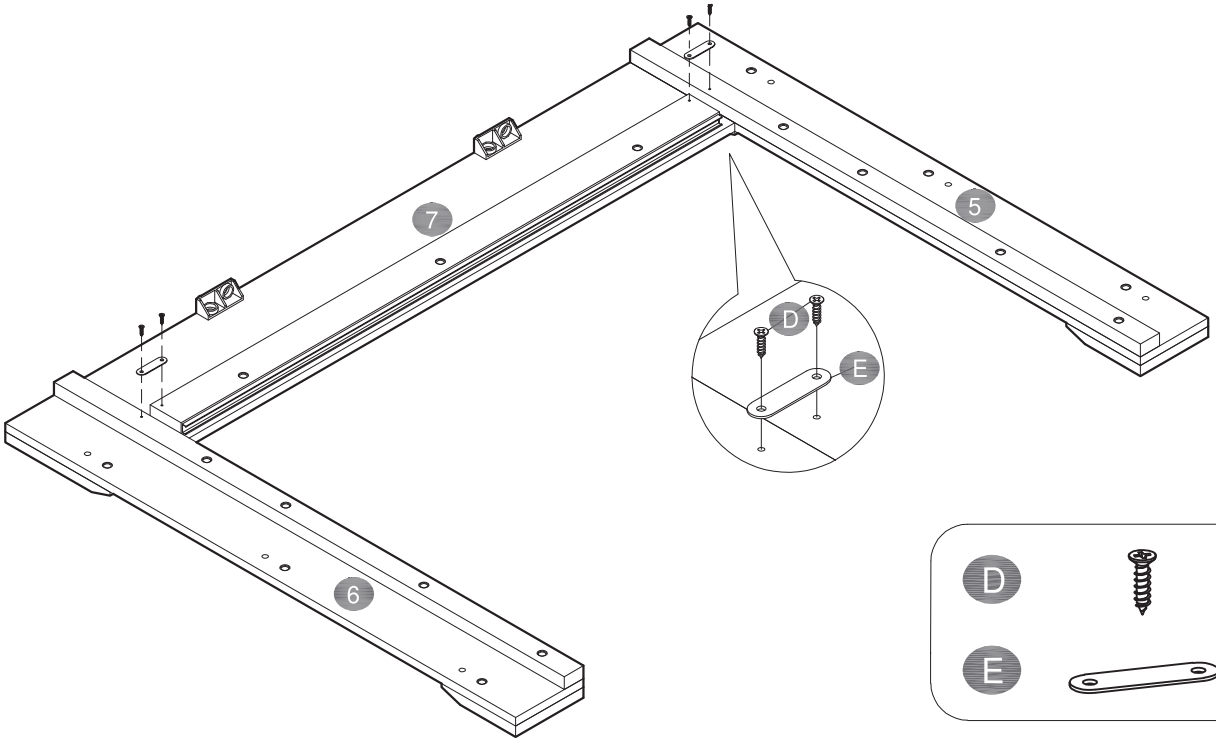


Step 11


Using Screws (G) and a 7-Shaped Wrench (P)
secure Board (⑤&⑥) to Board (③&④).

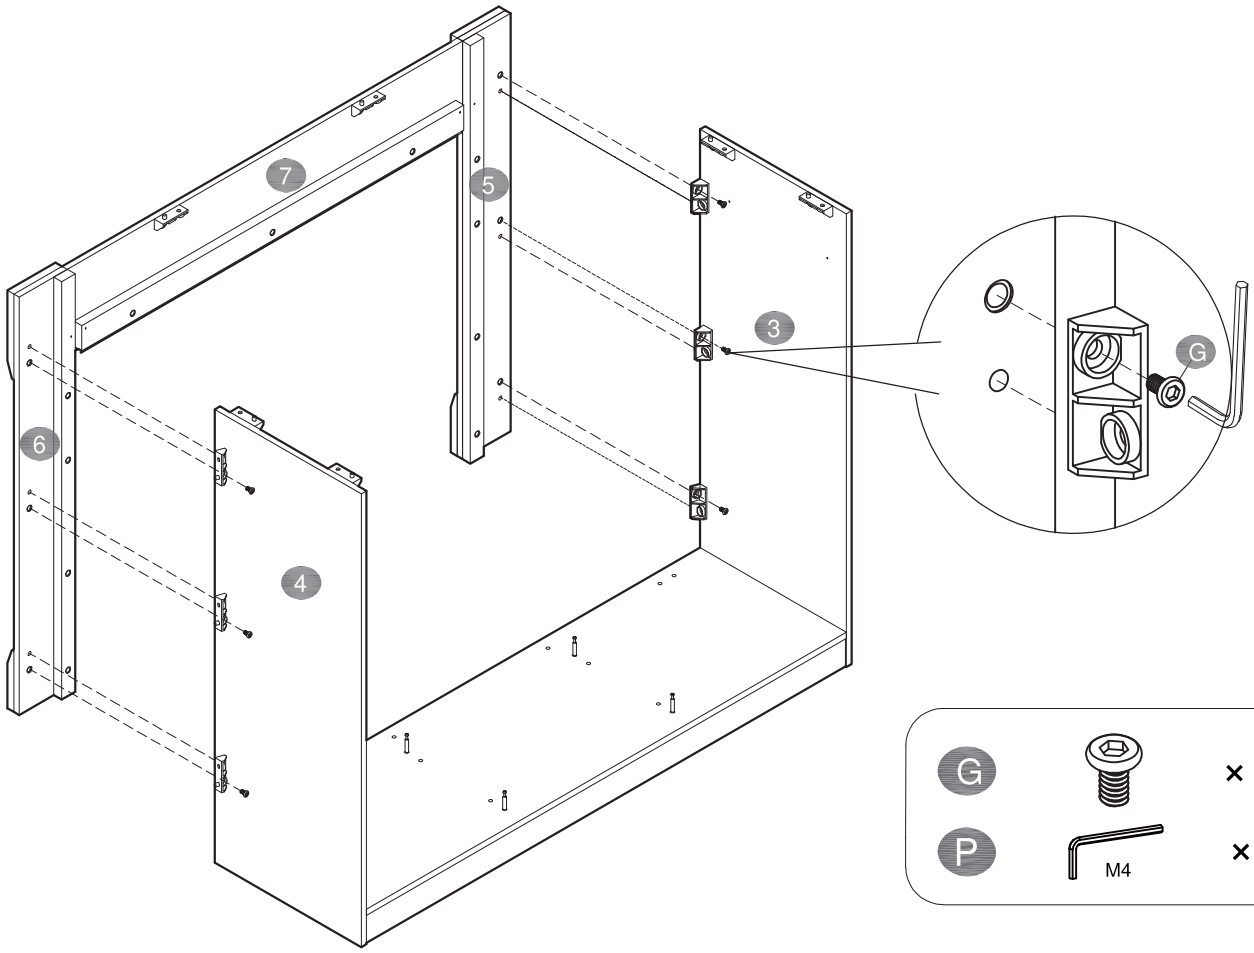

Step 12


Attach the LED Strip Light (V1) to Board (⑦).

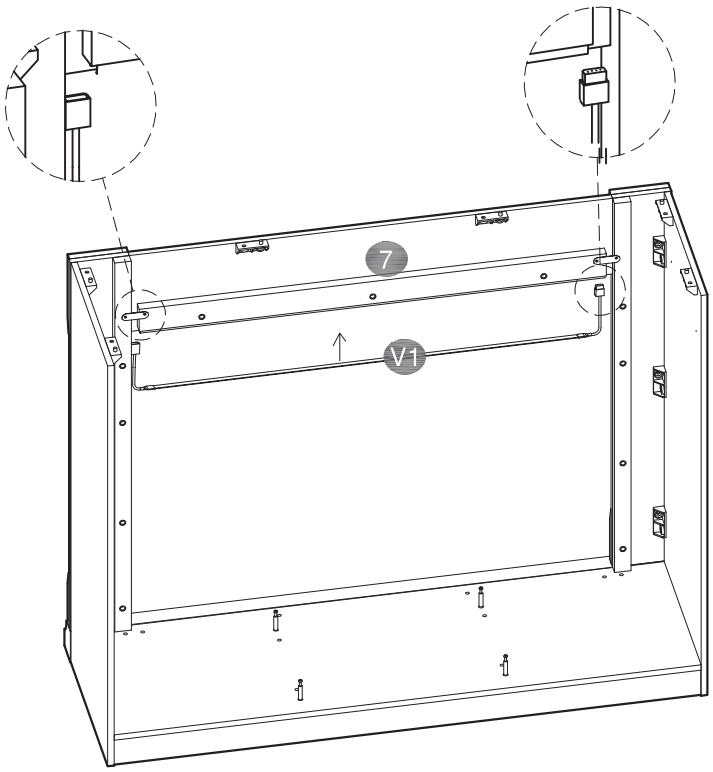


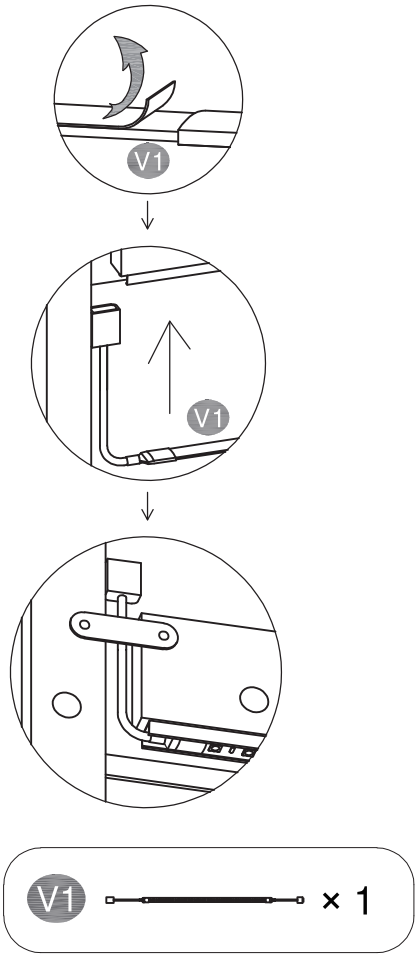

Step 13


Inserting Wooden Dowel (C) into Board (⑧), then attach Board (⑨&⑩) to Board (⑧).

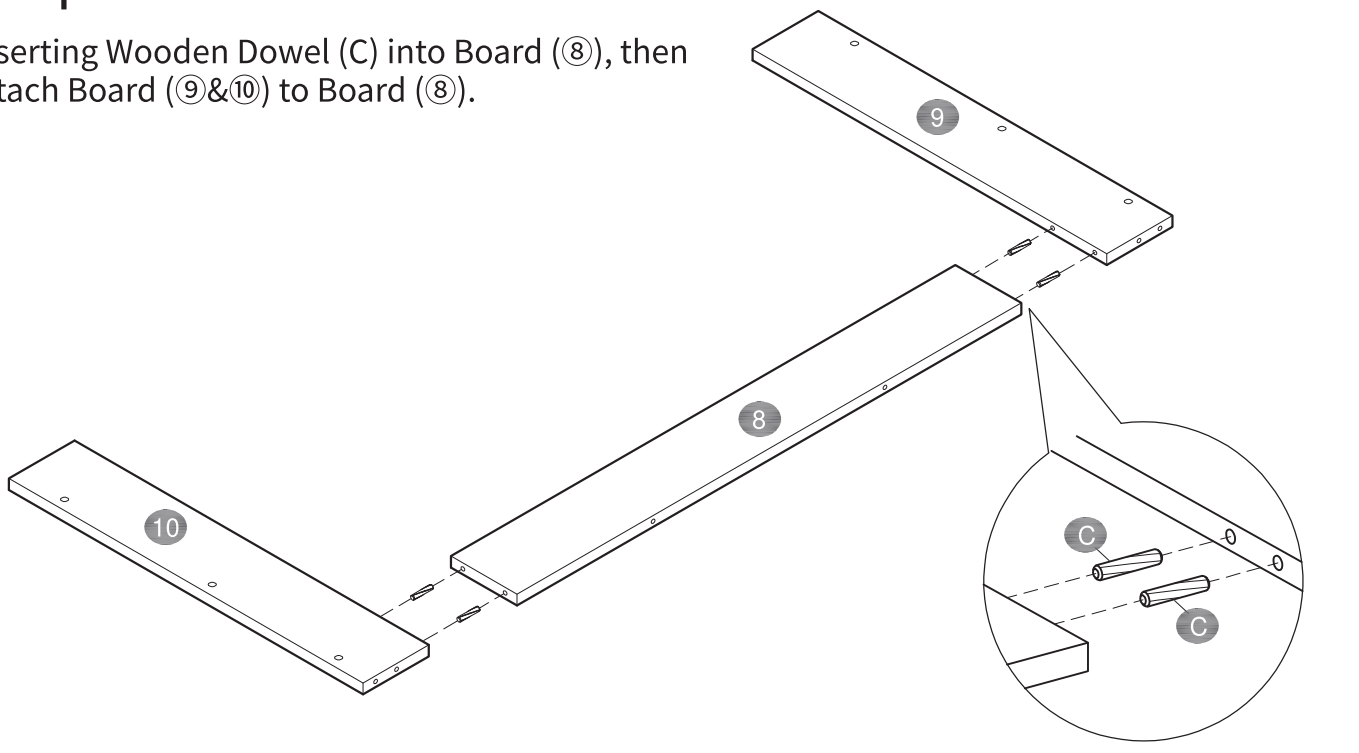




Step 14


Using Screws (D) secure Connector (E) to Board (⑧&⑨, ⑧&⑩).

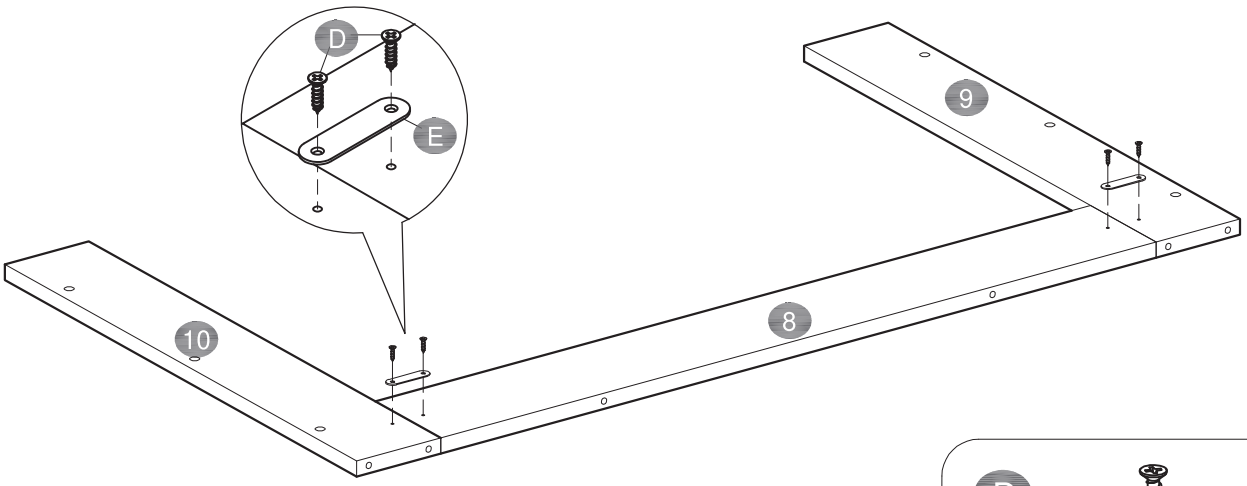


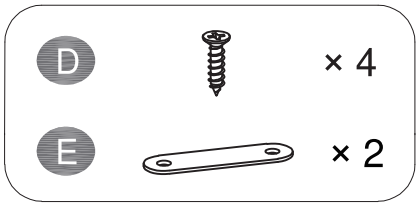

Step 15


Inserting Wooden Dowel (C) into Board (②), then attach Board (⑧&⑨&⑩) to Board (②).

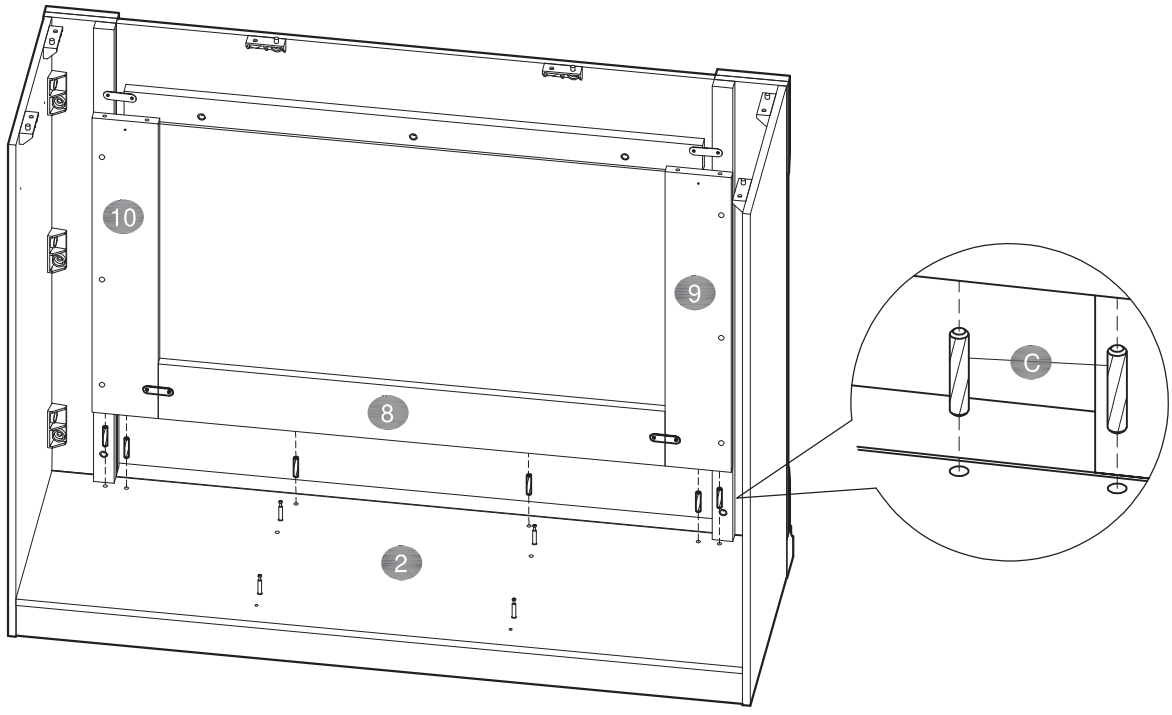





Step 16

Using a 7-Shaped Wrench (P) secure Screws (I) into Board (⑨&⑩).

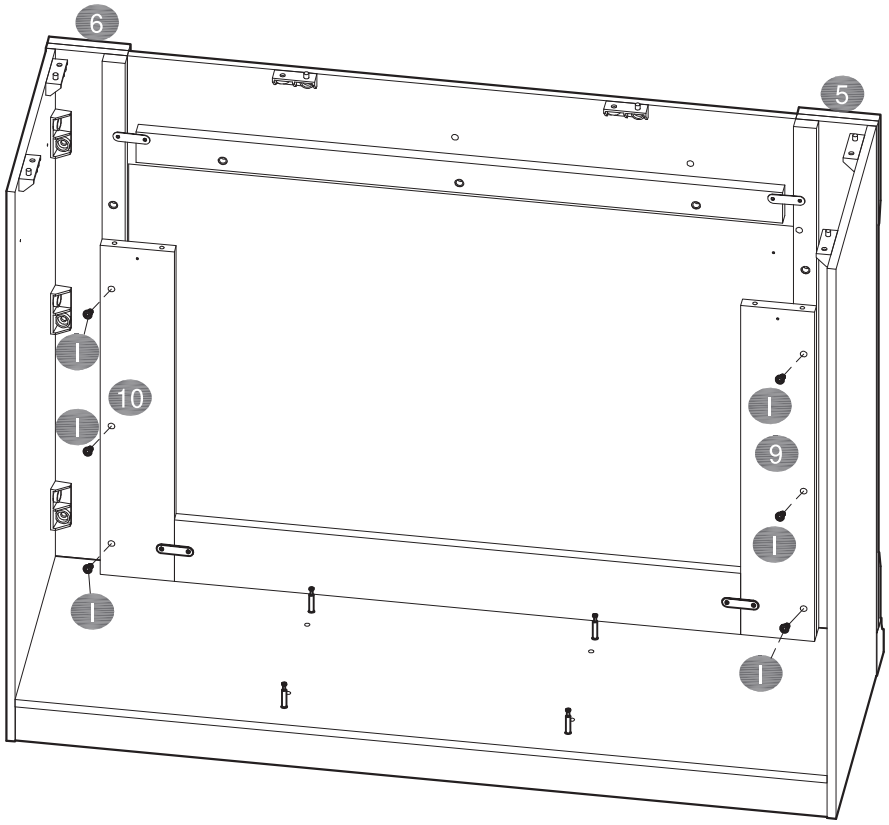


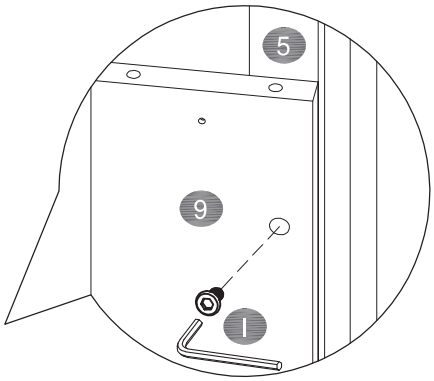


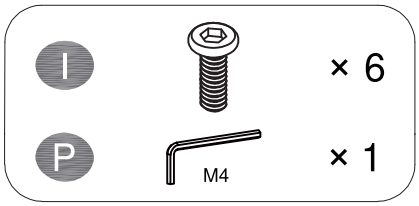


Step 17

Inserting Wooden Dowel (C) into Board (⑨&⑩), then attach Board (⑪) to Board (⑨&⑩).

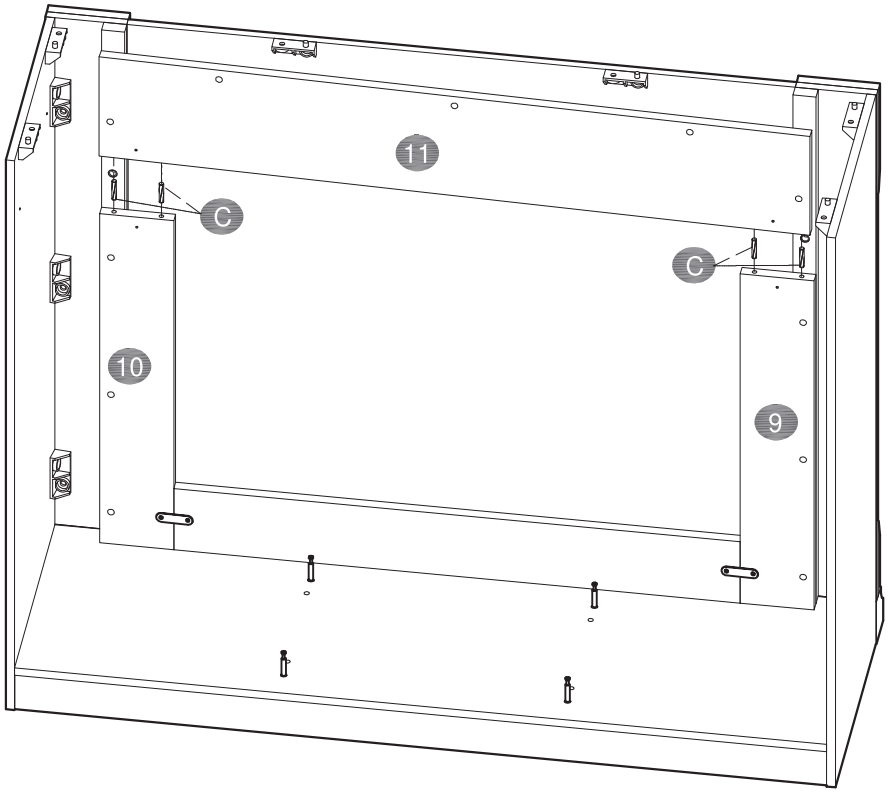


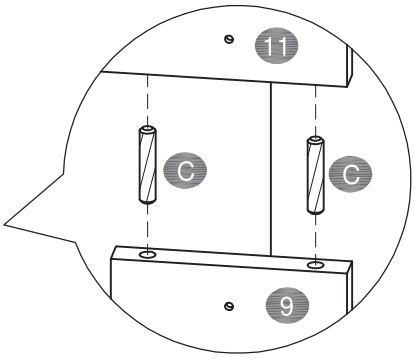





Step 18

Using a 7-Shaped Wrench (P) secure Screws (I) into Board (⑪).

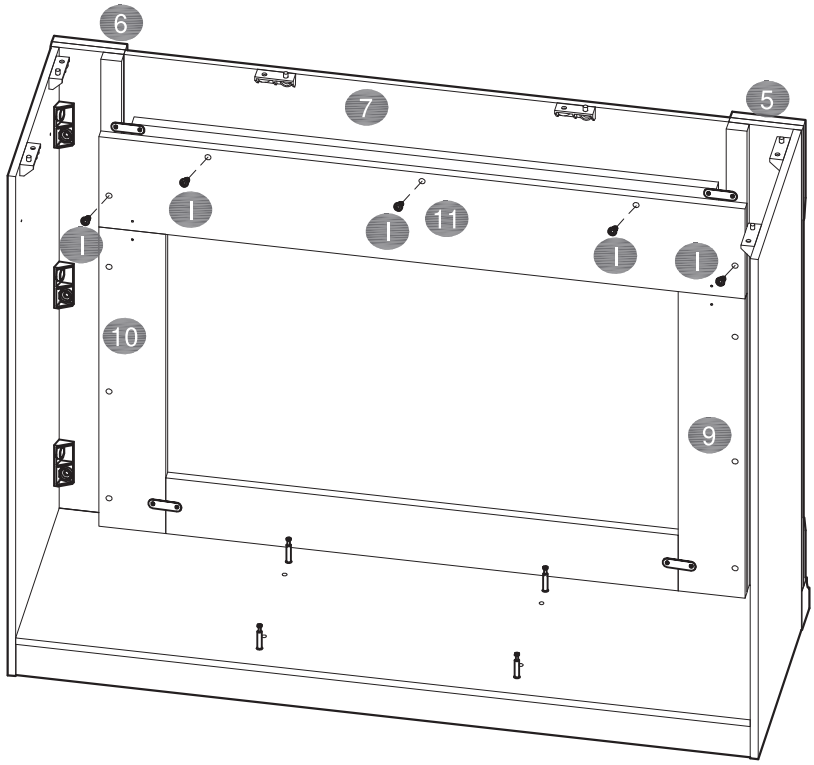


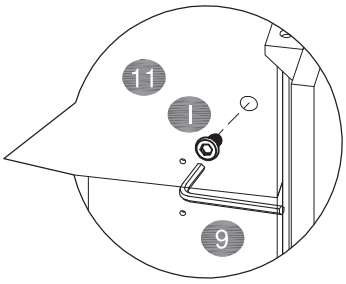


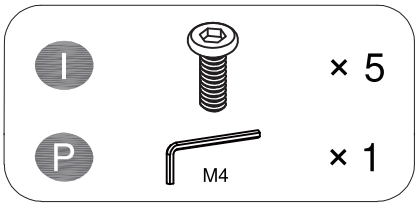


Step 19

Using Screws (D) secure Connector (E) to Board (⑨&⑪, ⑩&⑪).

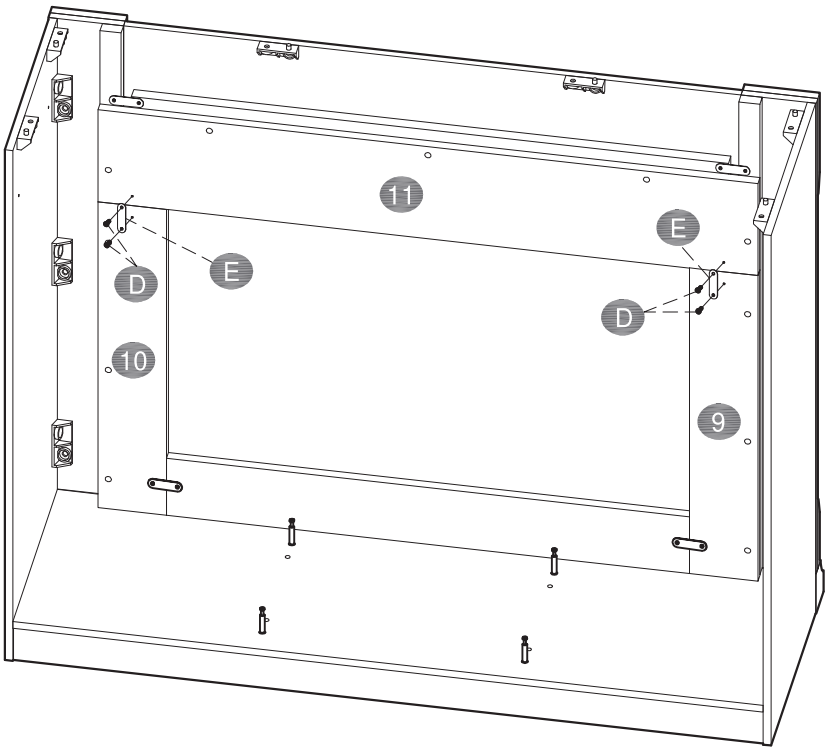


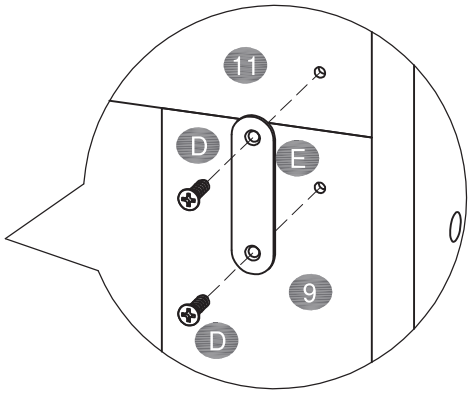


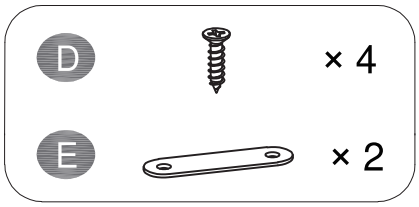


Step 20

Inserting Wooden Dowel (C) into Board (②), then attach Board (⑭) to Board (②).
Using Cam Lock (A) secure Board (⑭) to Board (②).

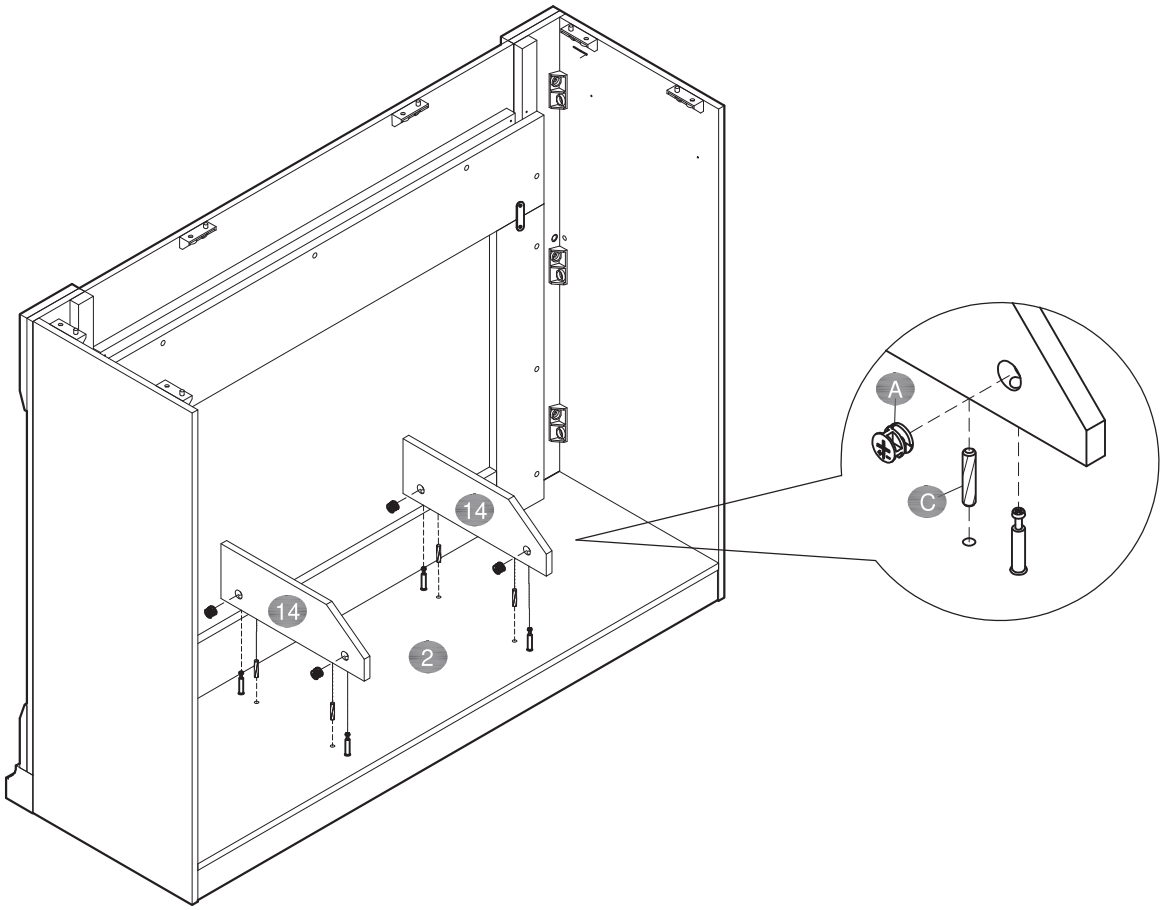


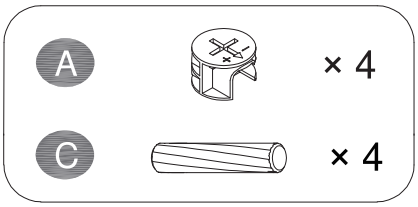

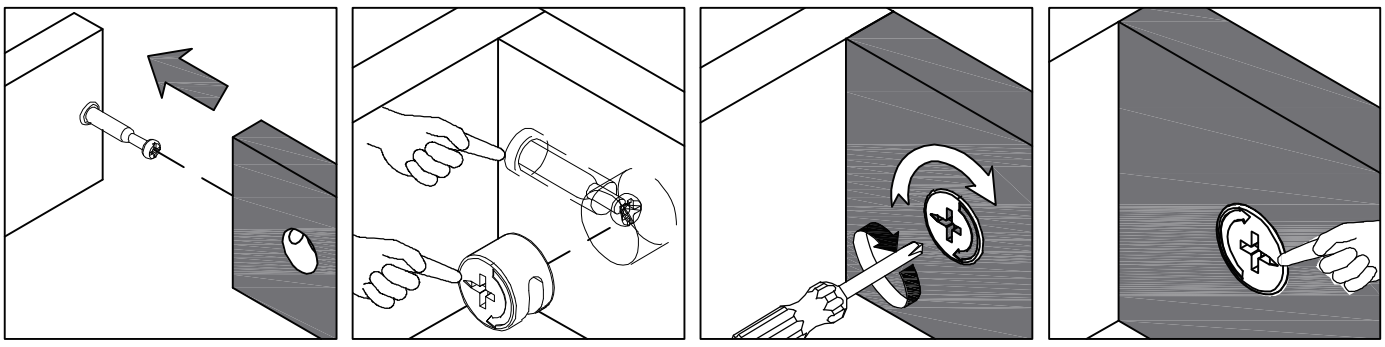


Step 21


Using a 7-Shaped Wrench (P) secure Screws (G) Through Connector (H) secure Board (①) to Board (③&④&⑦).

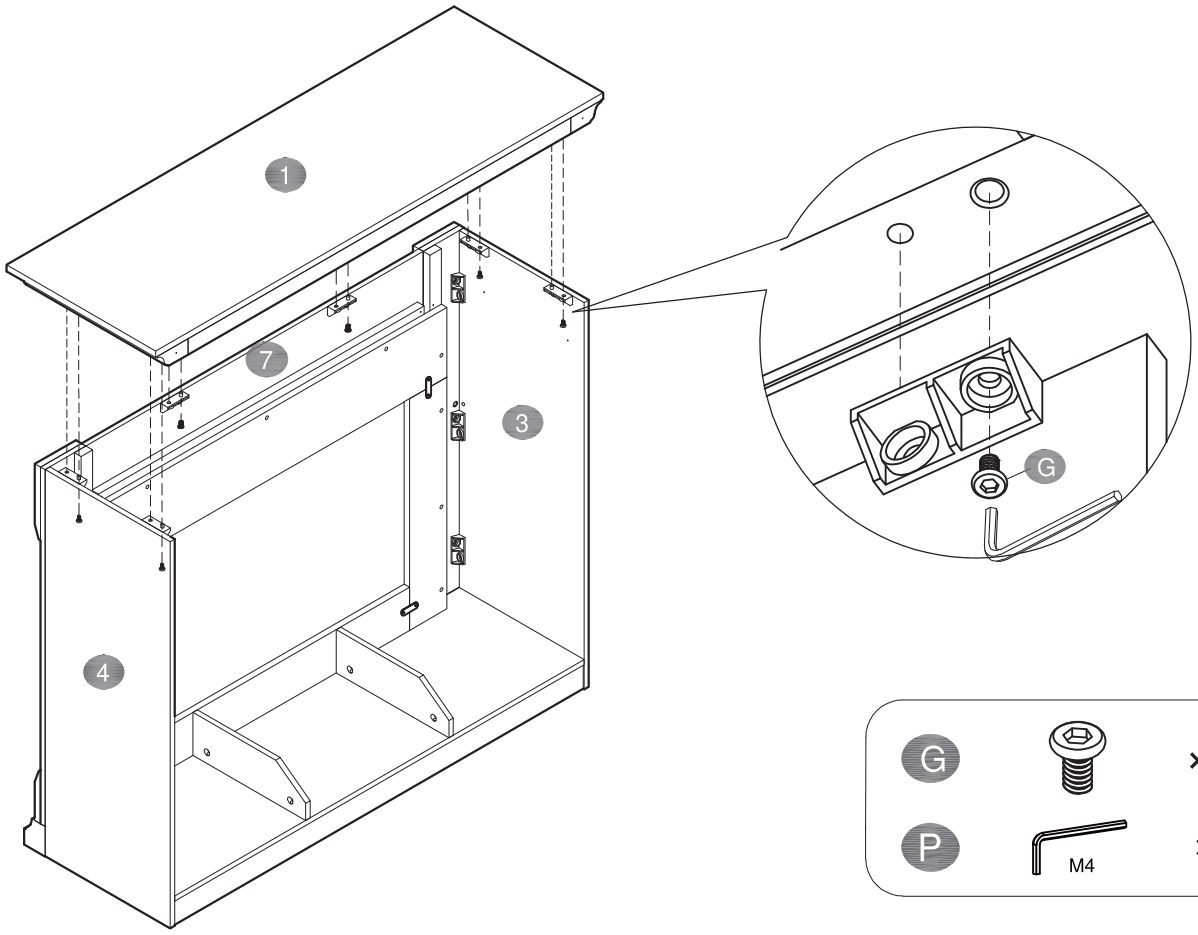

Step 22


Connect Accessories(V3&V5) to the Light Strip (V1).

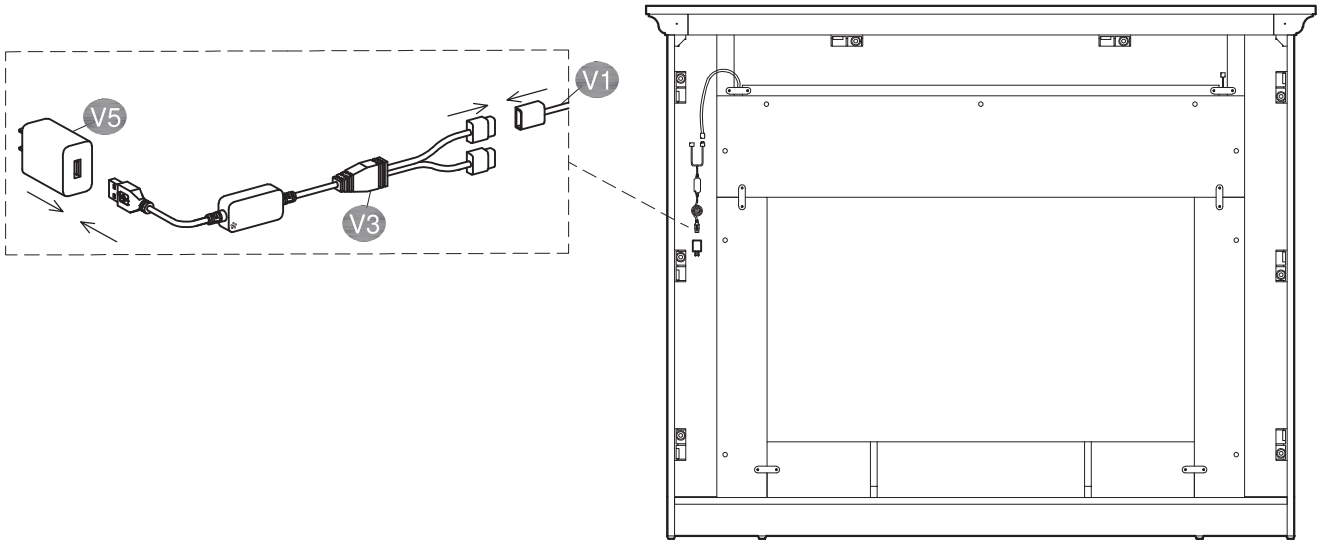

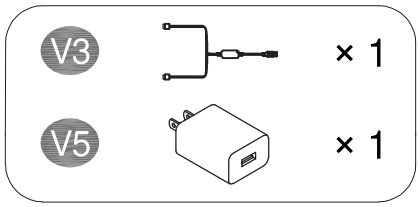


Step 23

Using Screws (D&V4) attach Light Strip to Board (④).

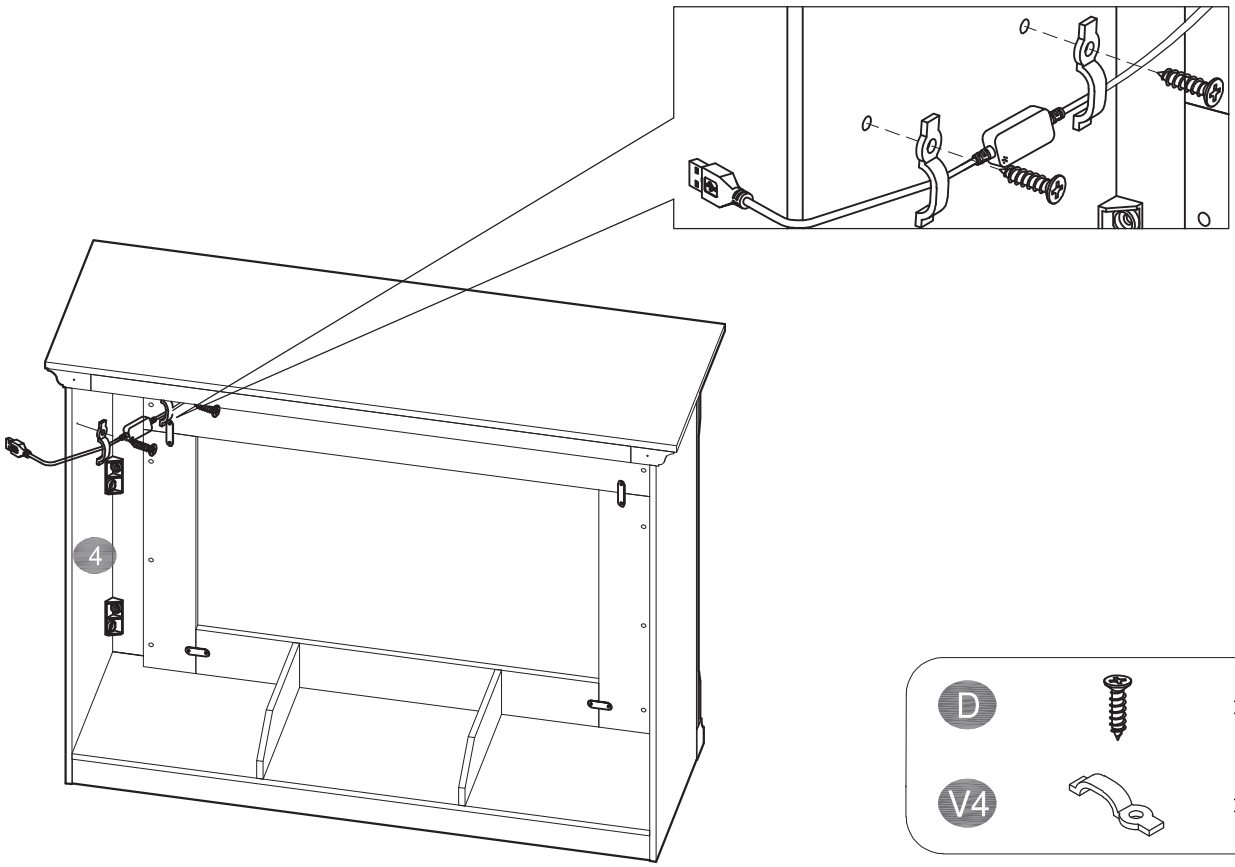


Step 24

Using Screws (F) secure Anti-tipping Belt (M) to Board (①).

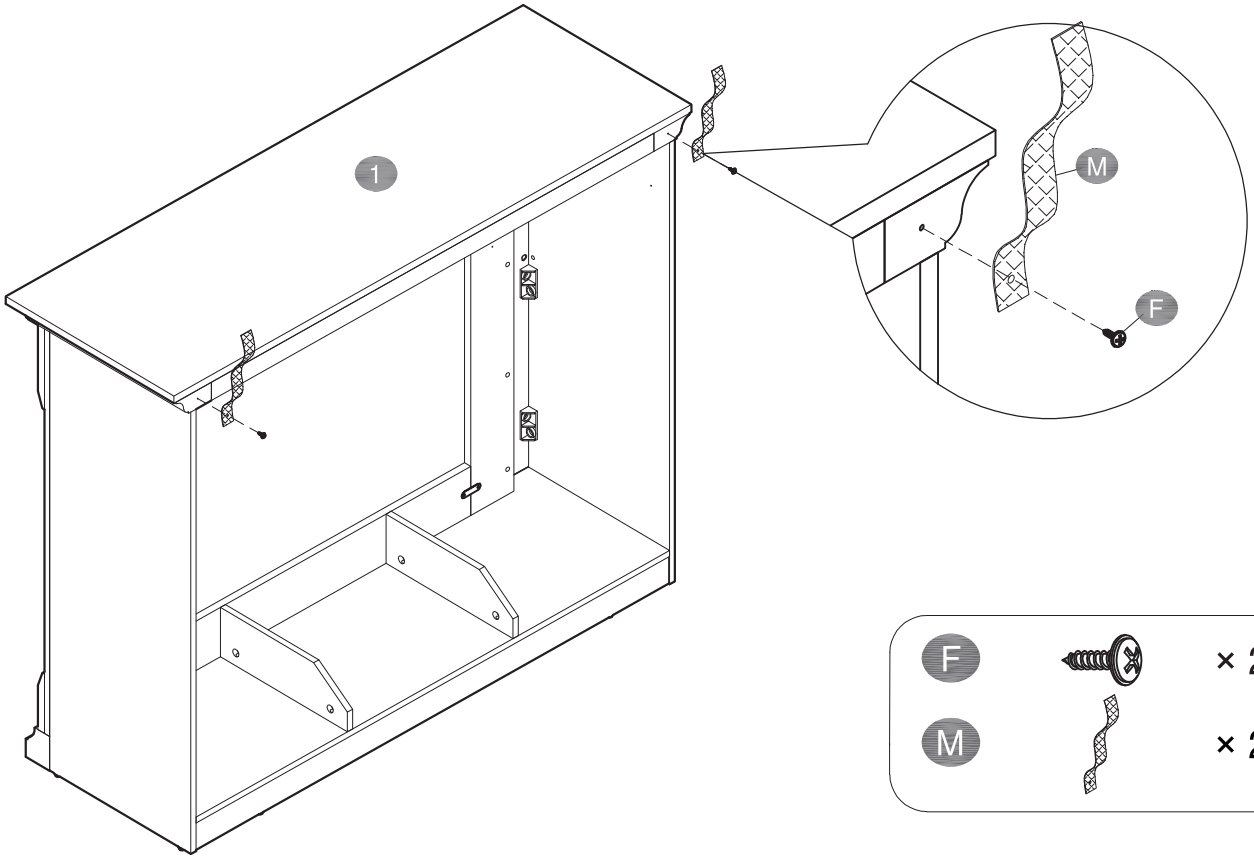

Step 25


Drill 2 holes in the wall and Hammer the (N) in.

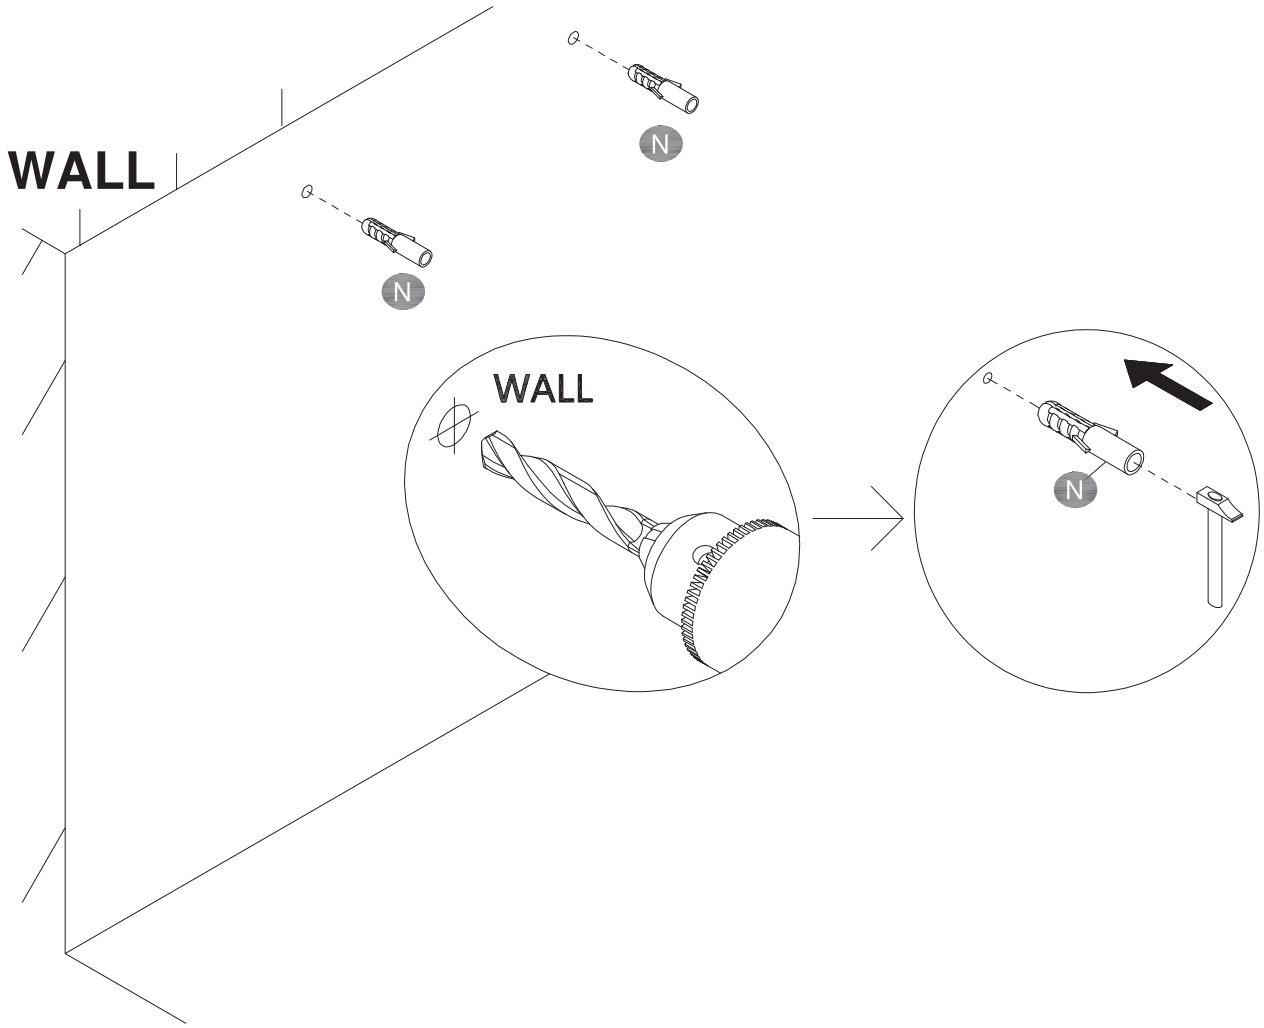

N  × 2

Step 26

Using Screw (O) attach Anti-tipping Belt (M) into Nut (N) to wall.

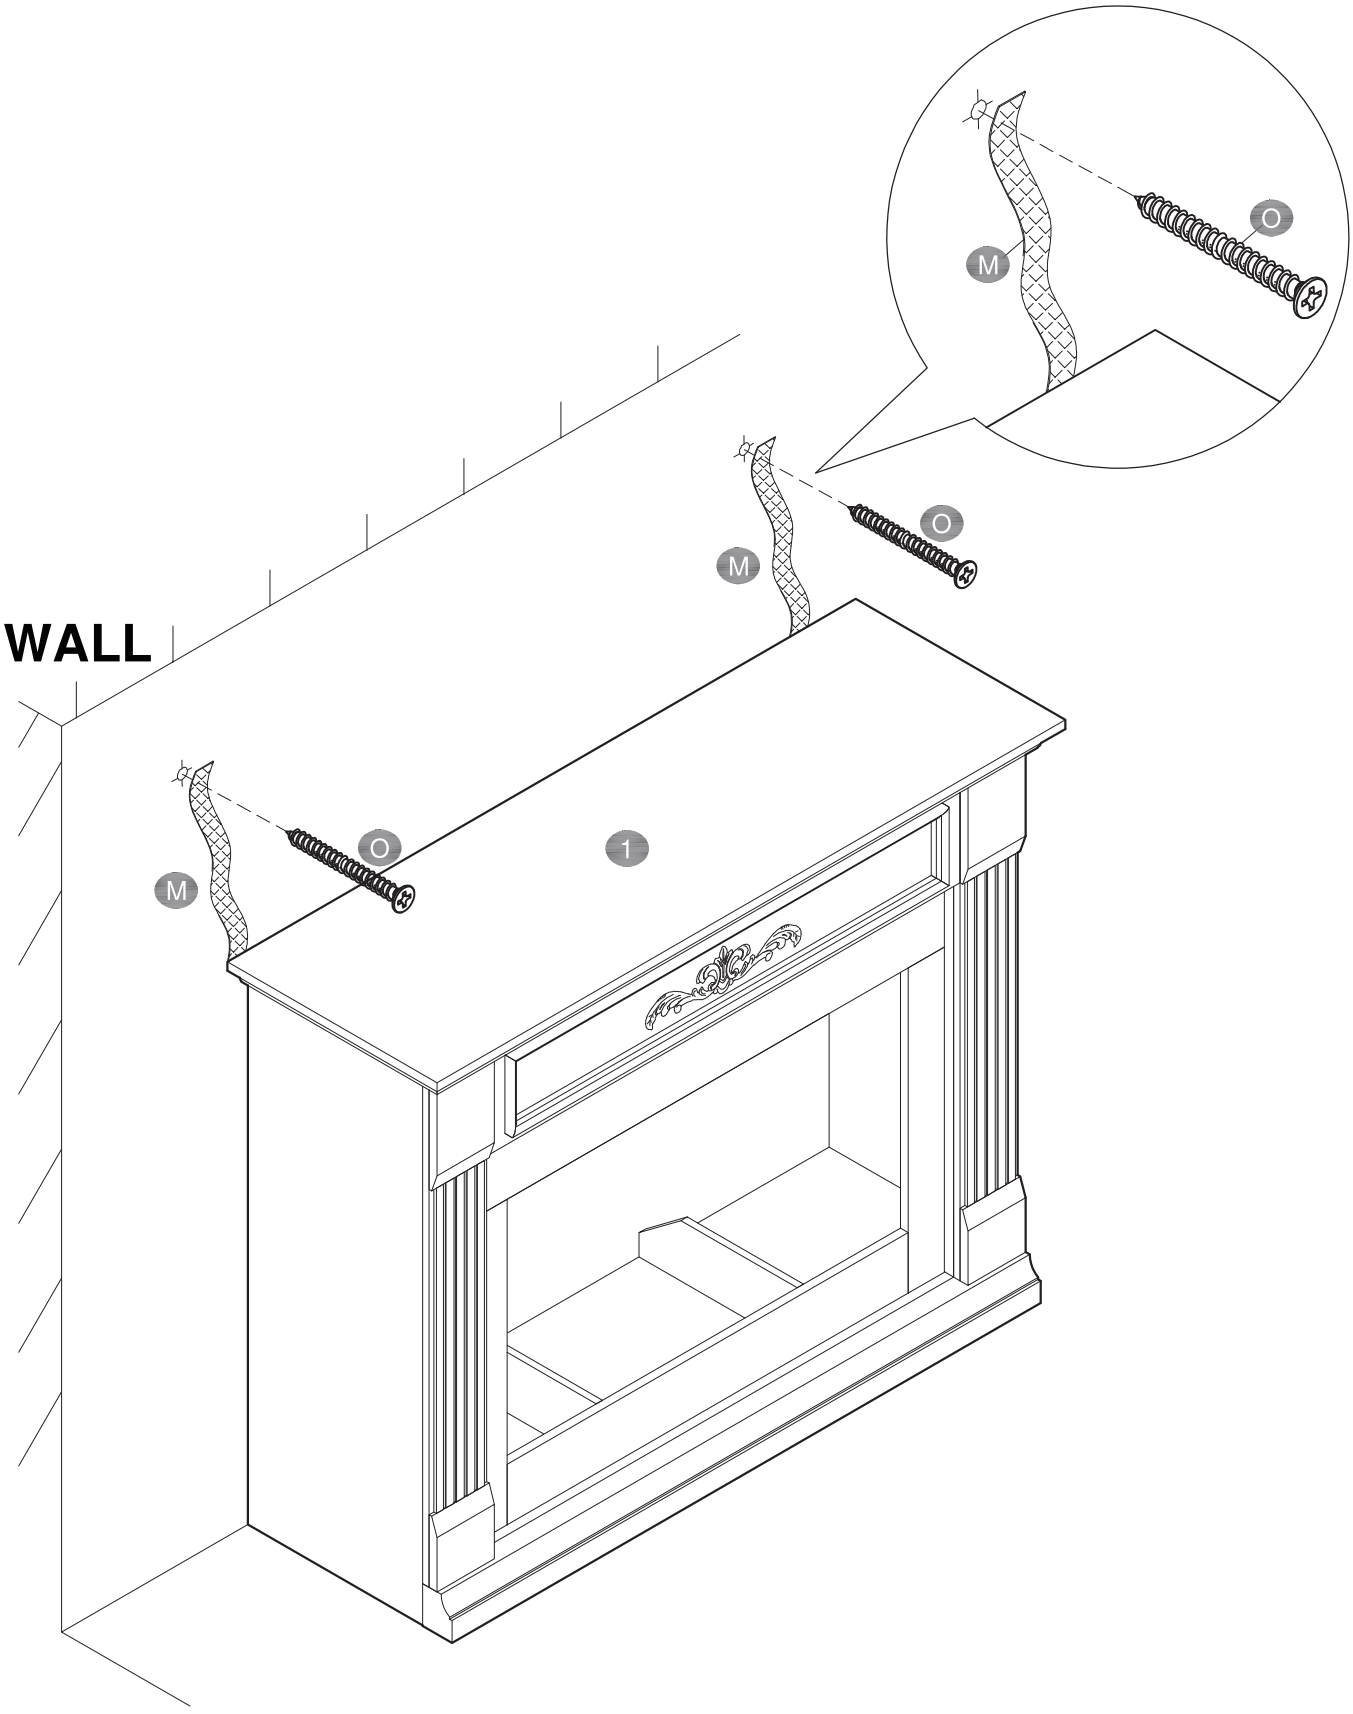

O × 2

This 47-inch fireplace HW-AM557847 can be combined with the storage cabinet HW-AM557848 sold separately in our store to create a 104-inch fireplace unit. Should you wish to create this configuration, we recommend purchasing both items together.
When assembling the combination: Using Screws (D&V4) attach Light Strip to Board (③), as shown.

HW-AM557847+HW-AM557848

