




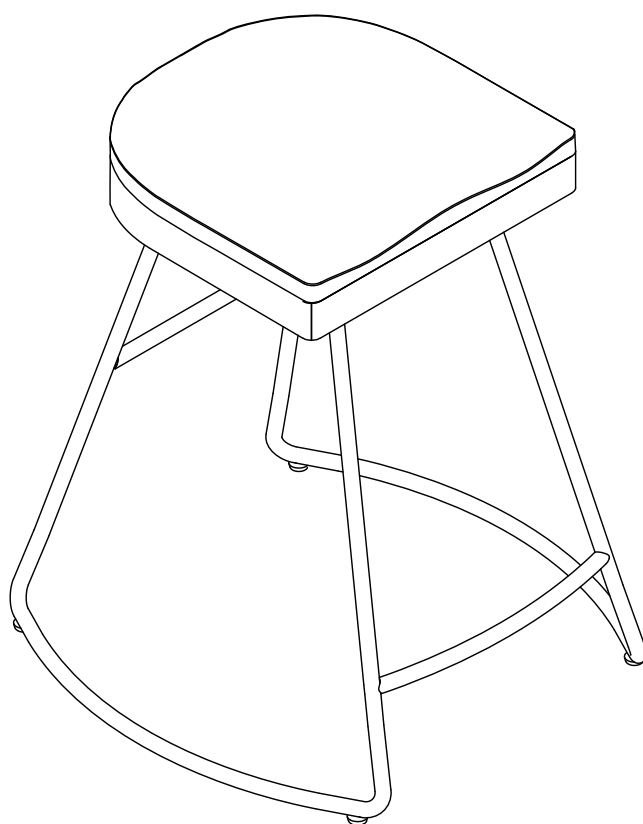


Assembly Instructions

Counterstool - Saddle Seat







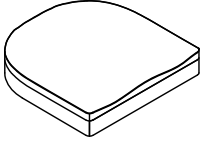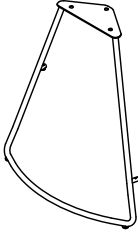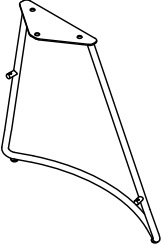
Parts List



Counterstool - Saddle Seat

Label	Picture	Description	Qty
A		Seat Frame	1
B1		Left Leg Frame	1
B2		Right Leg Frame	1
C1		C1: Front Stretcher	1
C2		C2: Back Stretcher	1

Hardware List


Label	Picture	Description	Size	Qty
H-1		Allen Bolt - Y Head	M6x10mm	4
H-2		Bolt	M8x18mm	6
H-3		Lock Washer	Ø8xØ13xT2mm	6
H-4		Flat Washer	Ø8xØ19xT2mm	6
H-5		Rubber Washer	Ø12xØ22xT2mm	4

Tool List

Label	Picture	Description	Size	Qty
T-1		Allen Key	4 x 110 x 30 mm	1
T-2		Wrench	13 mm	1

Assembly Preparation

Before Beginning :

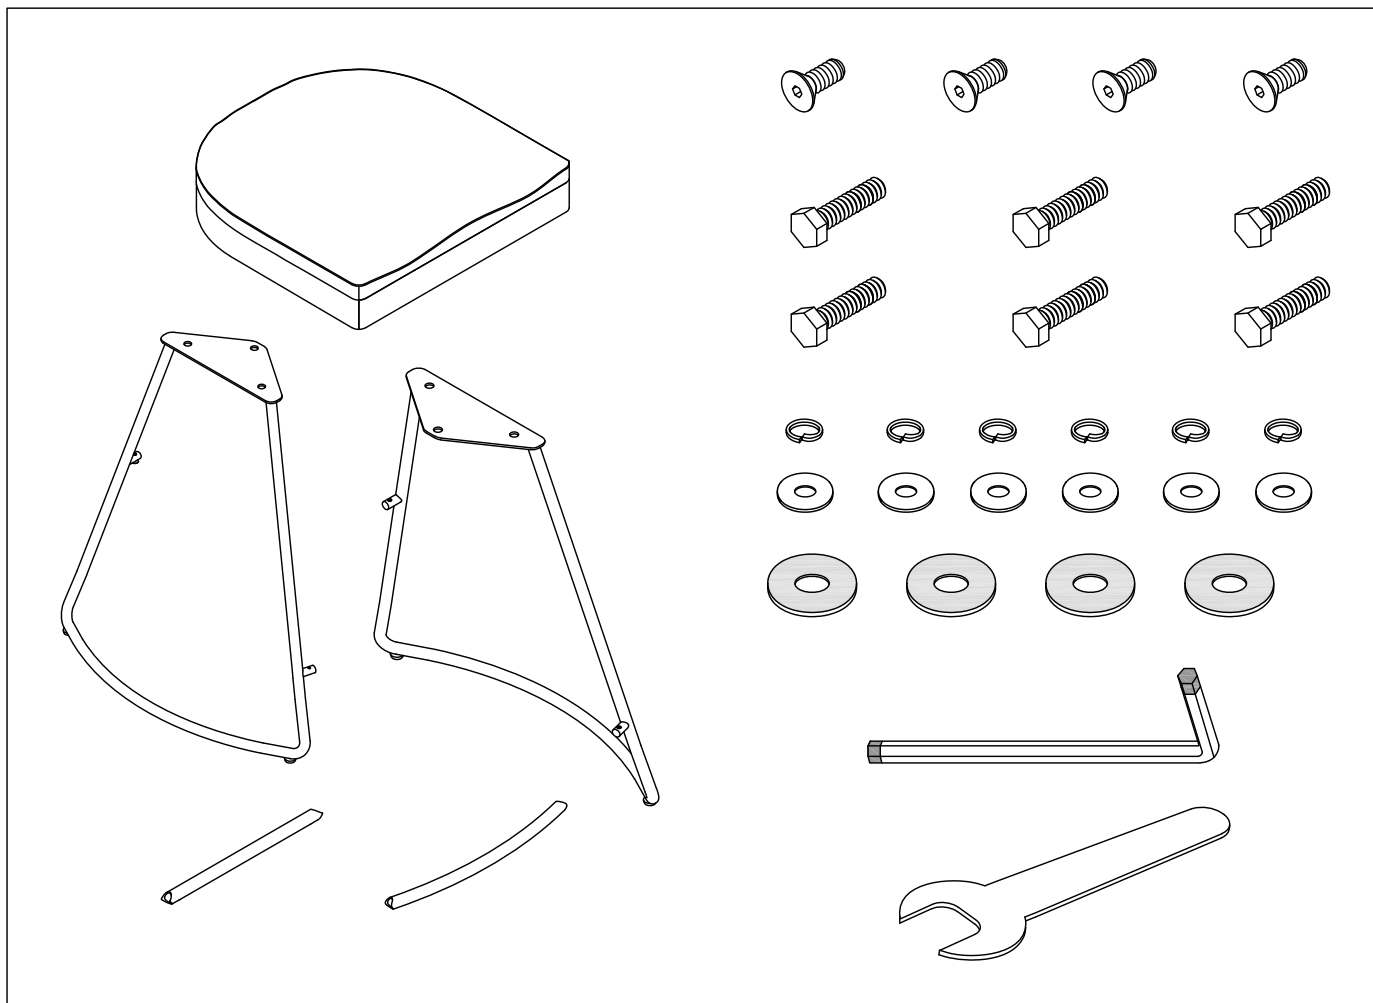

- Unpack all hardware bags and components to ensure you have all parts.



- Read instructions, cover to cover.



- Have 2 adults on hand for assembly.



- Do not assemble on flooring or carpet.




- Assemble on a clean non-marring surface (packing foam).



- Save all packaging until finished.


Assembly Steps

Step 1

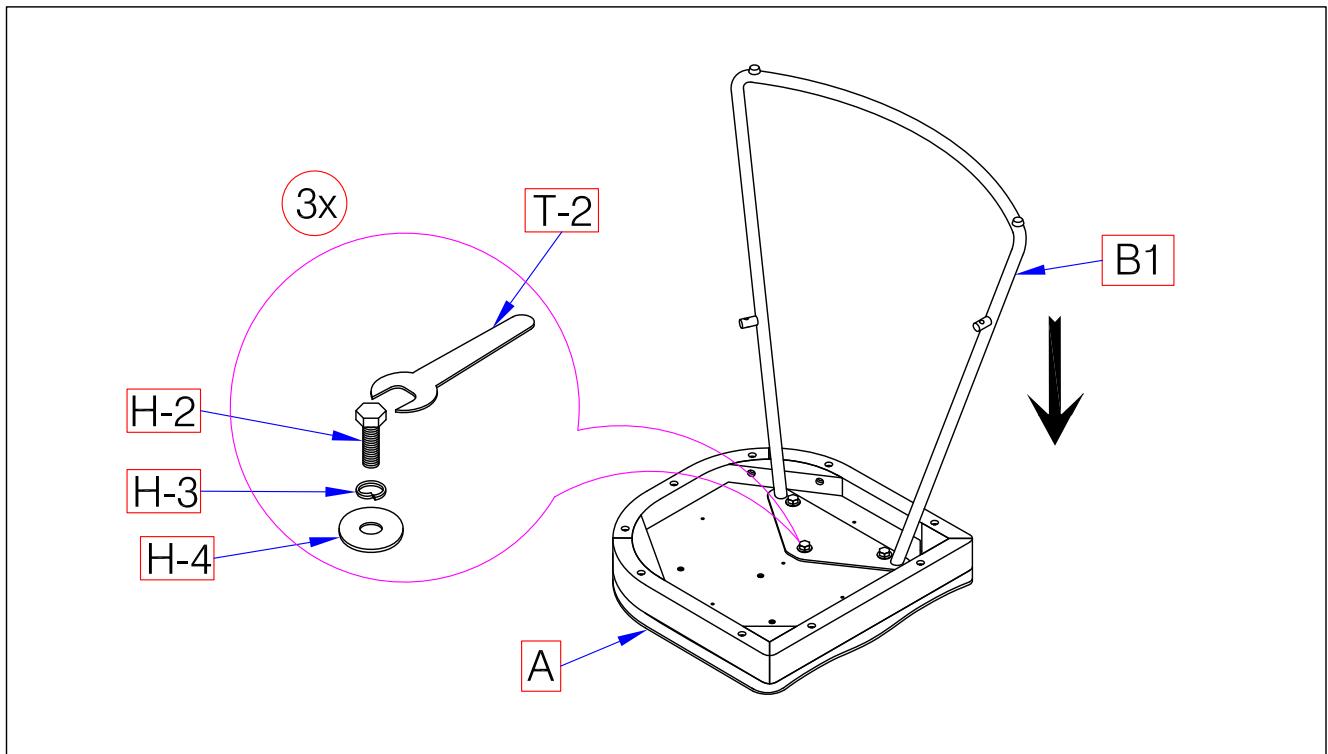


Place Seat Frame (A) on a non-marring surface. Position and secure Left Leg Frame (B1) to Seat Frame (A) with Flat Washers (H-4), Lock Washers (H-3) and Bolts (H-2) by using Wrench (T-2). Do not fully tighten Bolts.

Step 2

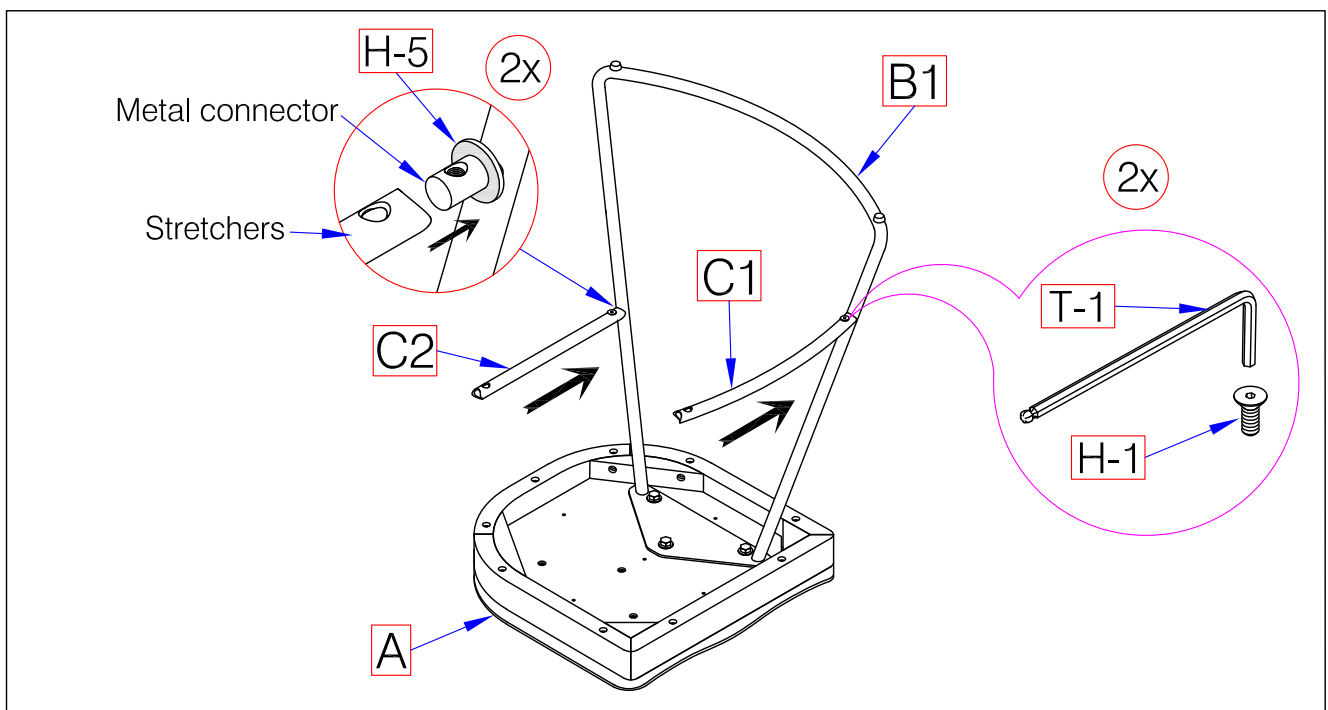

Attach Rubber Washers (H-5) to metal connectors on the Left Leg Frame (B1), then position and secure Front Stretcher (C1) and Back Stretcher (C2) to metal connectors on Left Leg Frame (B1) with Allen Bolts - Y Head (H-1) by using Allen Key (T-1). Do not fully tighten Allen Bolts - Y Head.

Step 3

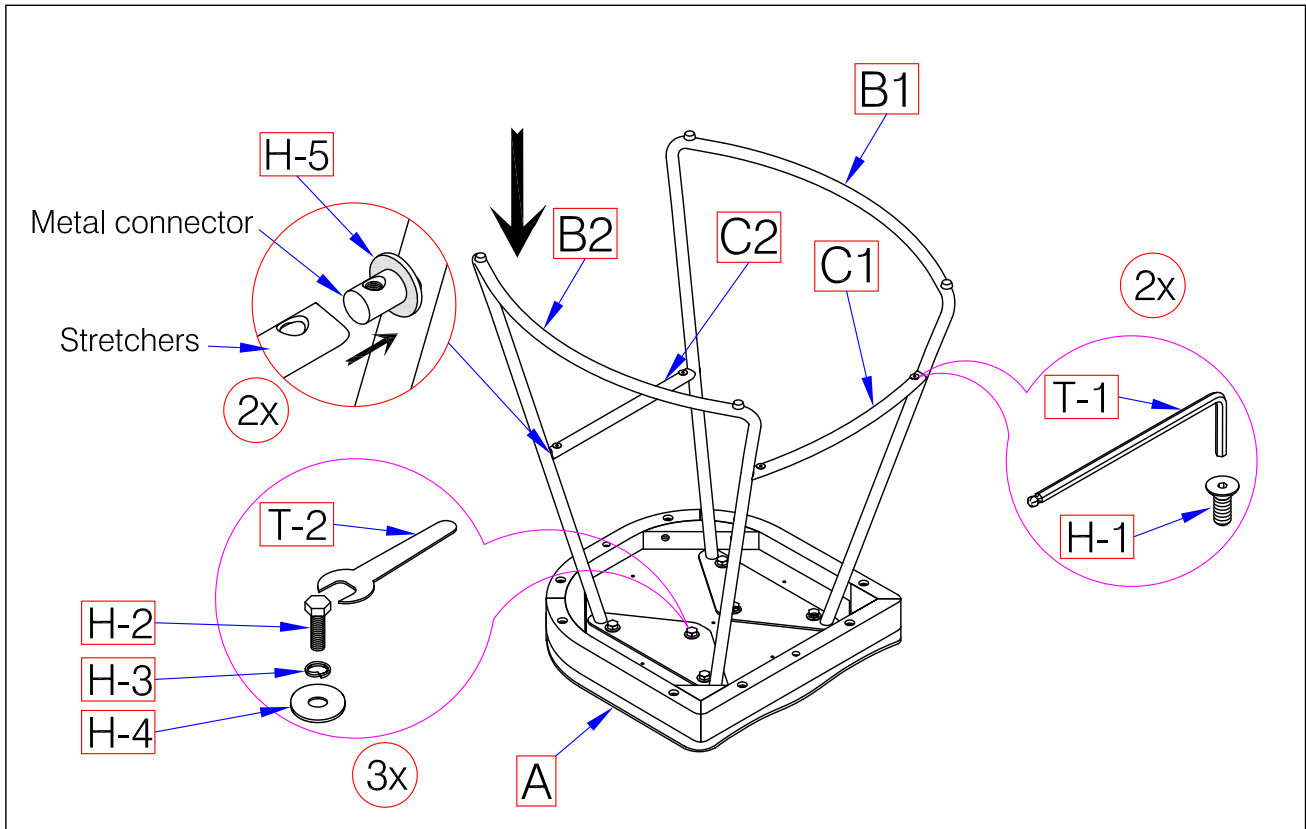

Attach Rubber Washers (H-5) to metal connectors on the Right Leg Frame (B2), then position and secure Right Leg Frame (B2) to assembled unit with Flat Washers (H-4), Lock Washers (H-3), Bolts (H-2) and Allen Bolts - Y Head (H-1) by using Wrench (T-2) and Allen Key (T-1). Fully tighten all Bolts and Allen Bolts - Y Head, as well as from all previous steps.

Step 4



Turn assembled unit upright. The Counterstool - Saddle Seat is assembled and ready for use.