
ASSEMBLY INSTRUCTION 77-152CP SLEIGH BED

IMPORTANT NOTES:

- . Place all wooden parts on a clean and smooth surface such as a rug or carpet to prevent the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- . Remove all wrapping materials, including staples and packing straps before you start to assemble.
- . Do not tighten all screws and bolts until completely assembled.
- Keep all hardware out of the reach of children.

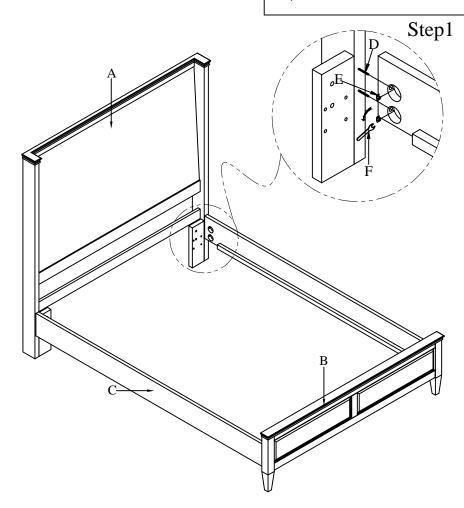

| NO. | PART DESCIPTION | | Q'TY |
|-----|-----------------|-------------------------------|------|
| D | | THREAD ROD (5/16*88mm) | 8 |
| Е | 6 | CURVED SLOTTED WASHER (5/16") | 8 |
| F | | WRENCH (12*75mm) | 1 |

MADE IN VIETNAM