


M6*16MM




1

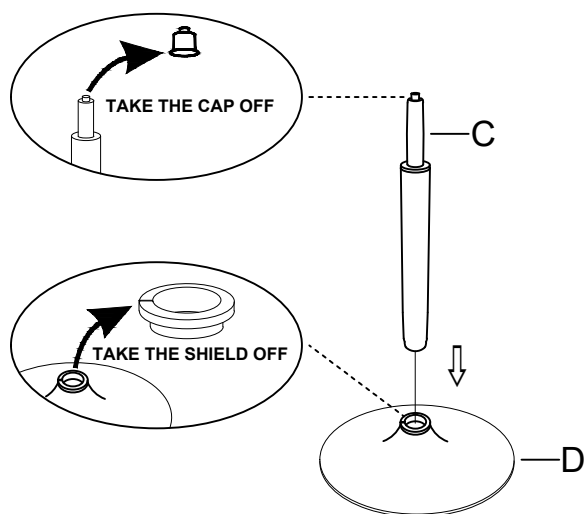


Step1:

2

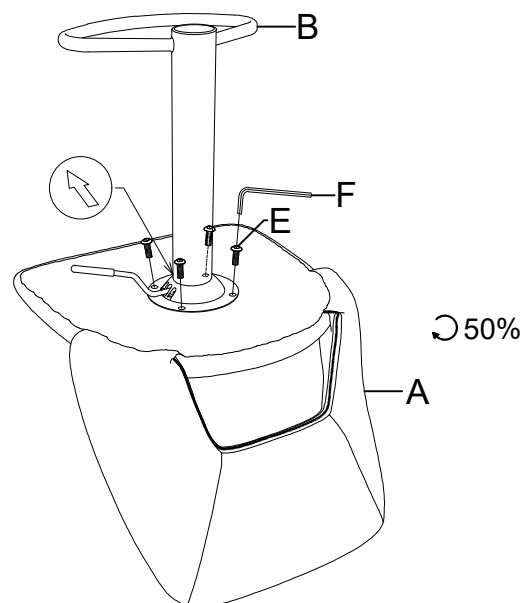

Step2: Lock the screw 50% at first.

3

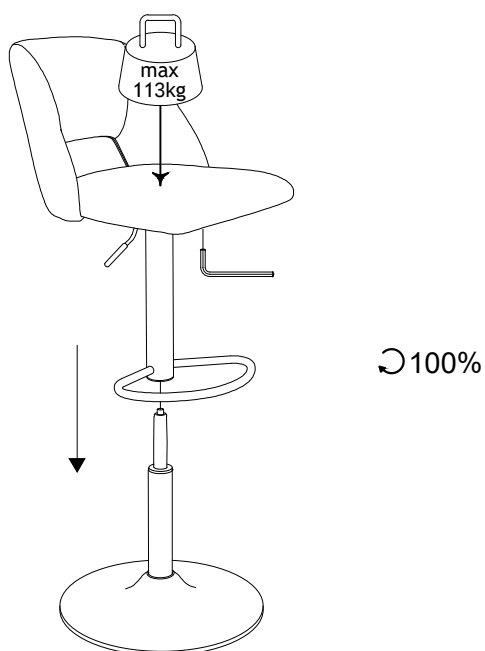

Step3: 113KG or adult seat in chair, make sure the chair is balance then tighten all the screws.

4

